

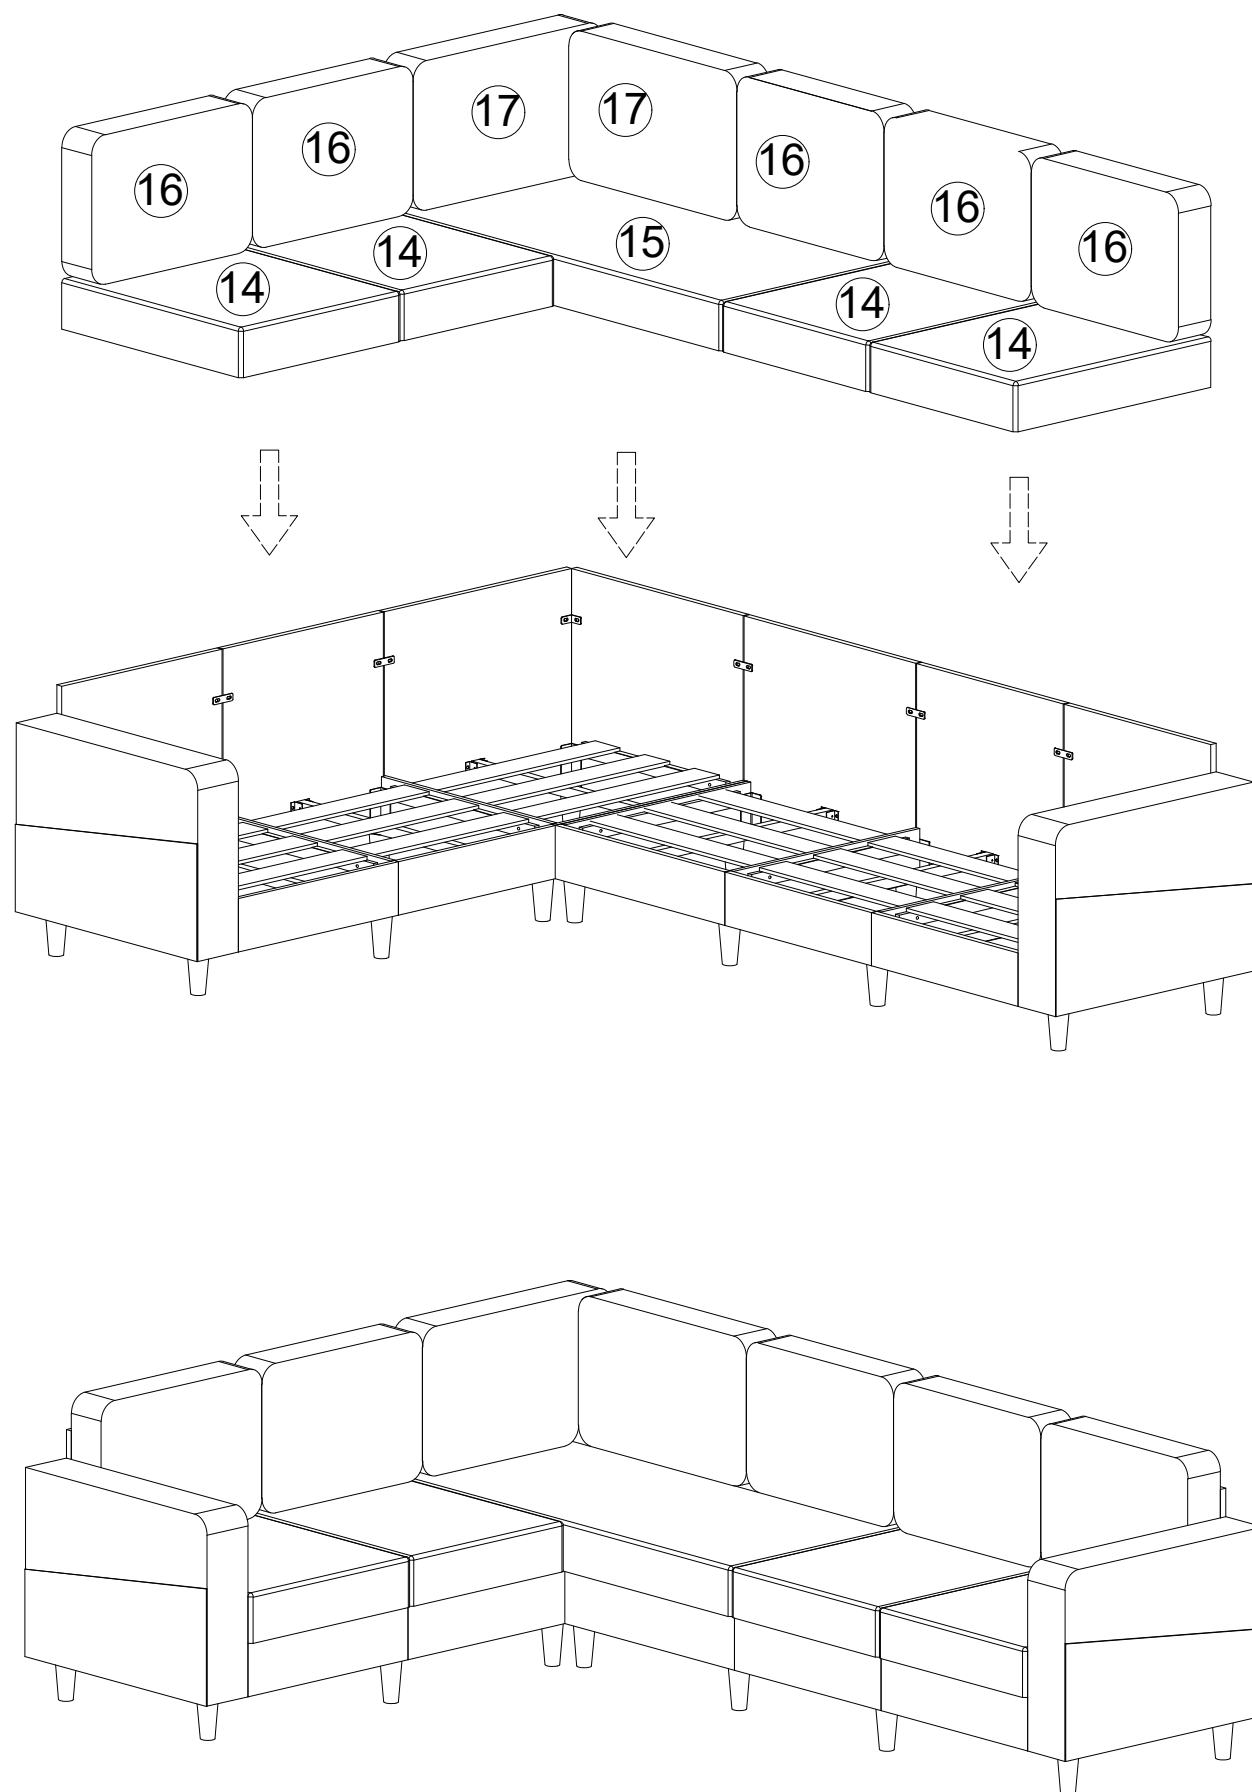
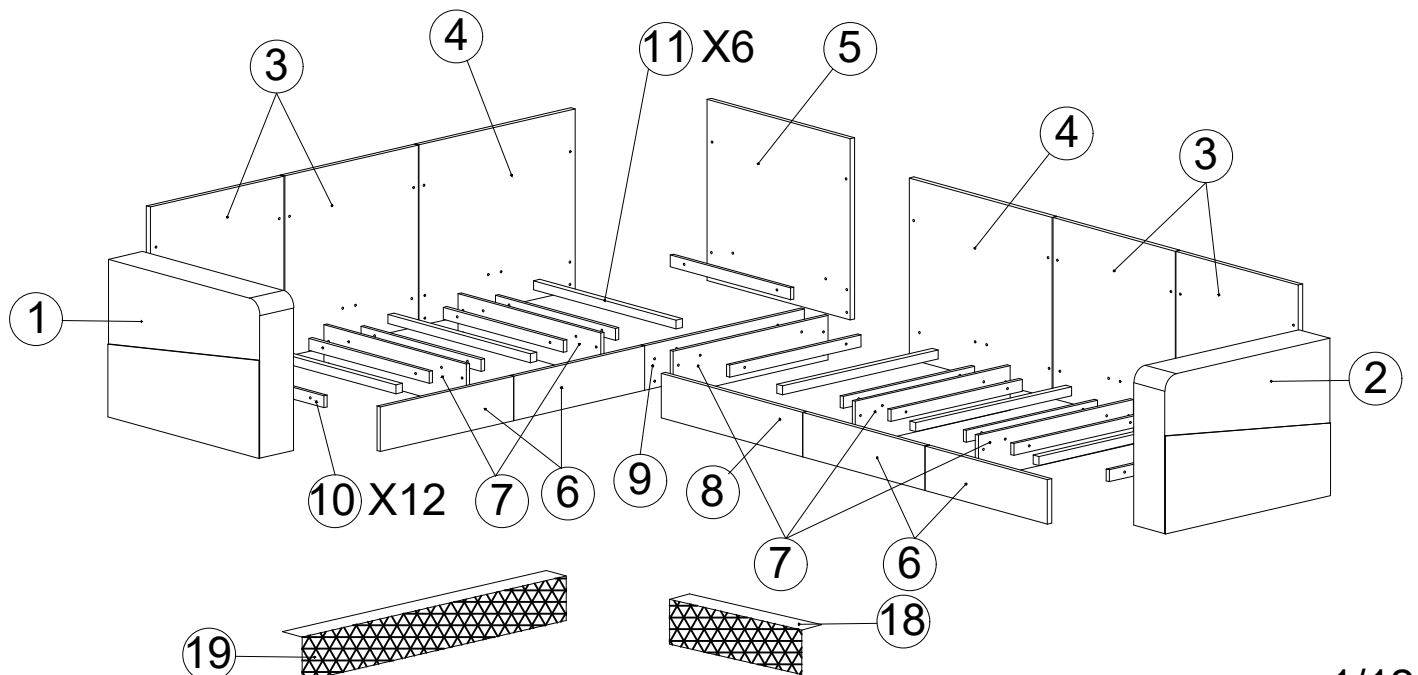
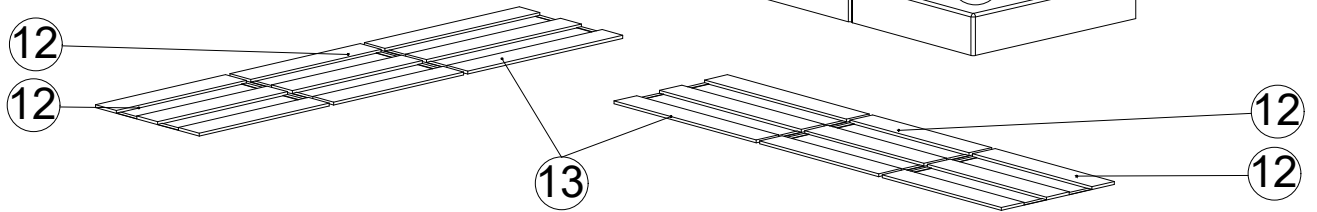
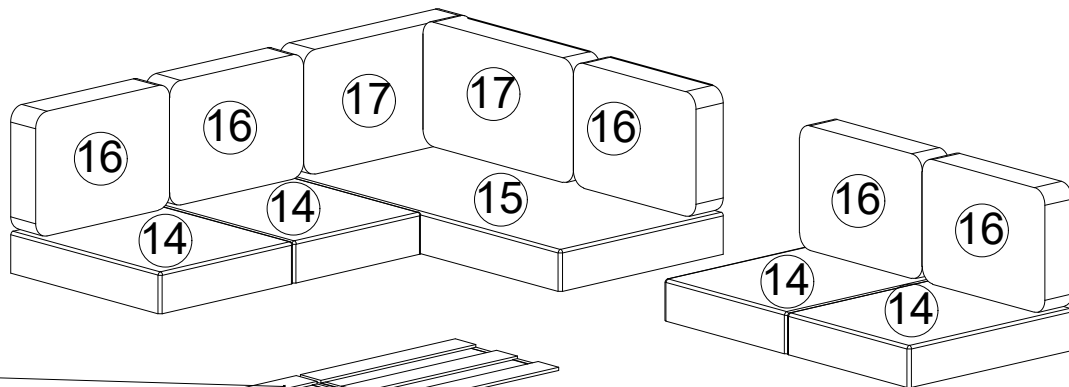
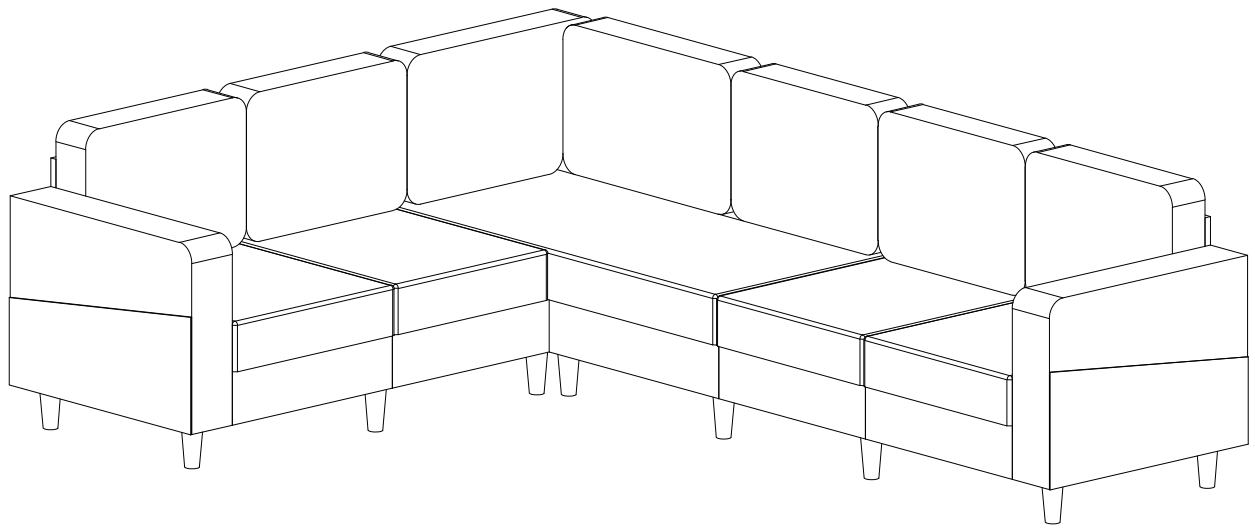
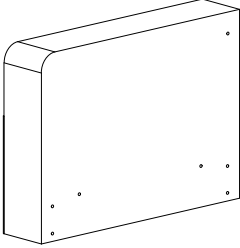
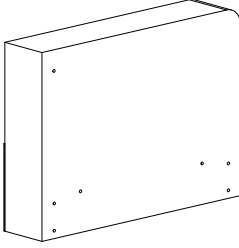
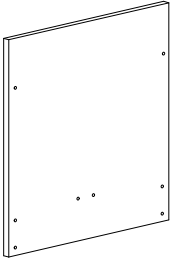
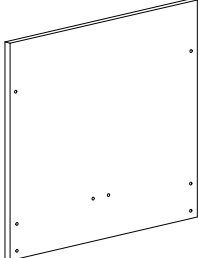
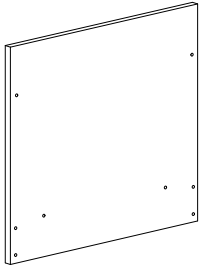





STEP 14




INSTALLATION GUIDE




①		1PCS	②		1PCS
③		4PCS	④		2PCS
⑤		1PCS	⑥		4PCS
⑦		5PCS	⑧		1PCS
⑨		1PCS	⑩		12PCS
⑪		6PCS	⑫		4PCS

R



#8-Ø4X14


24PCS

STEP 12

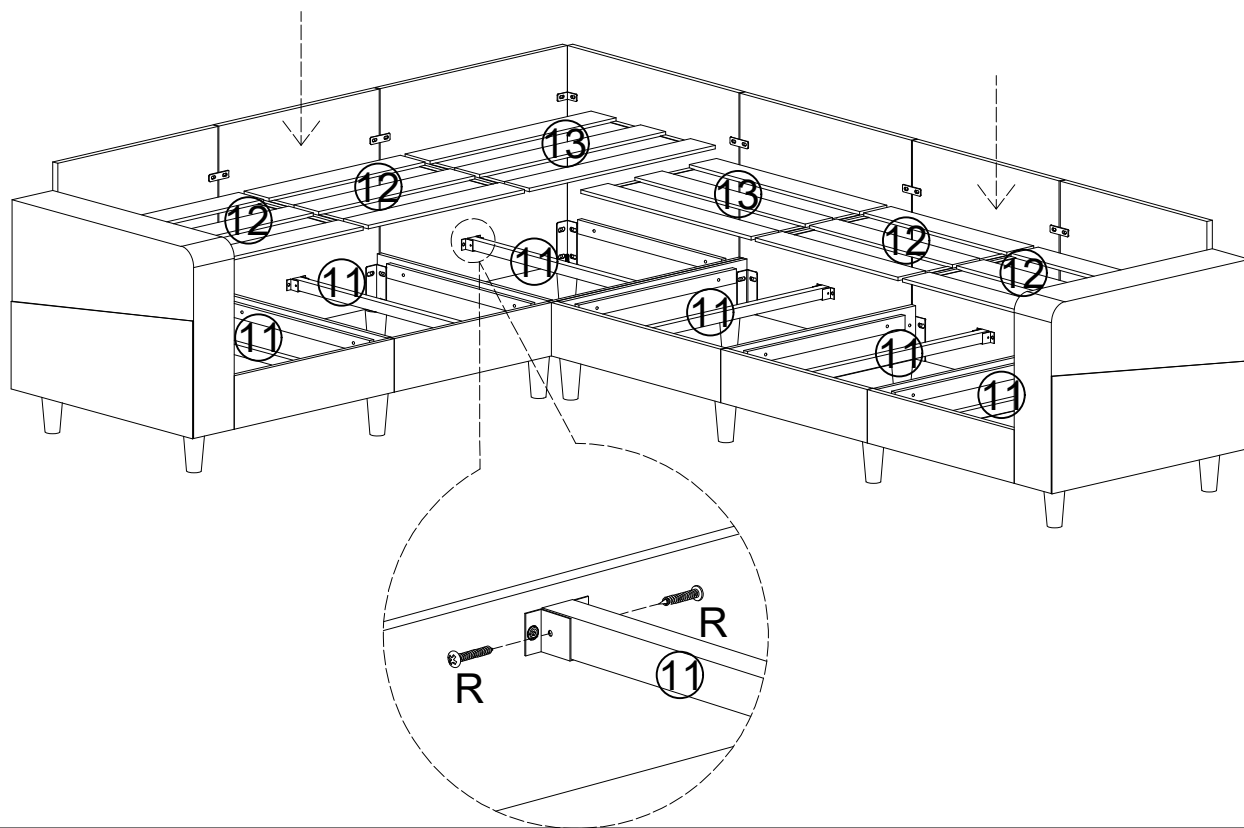


STEP 13

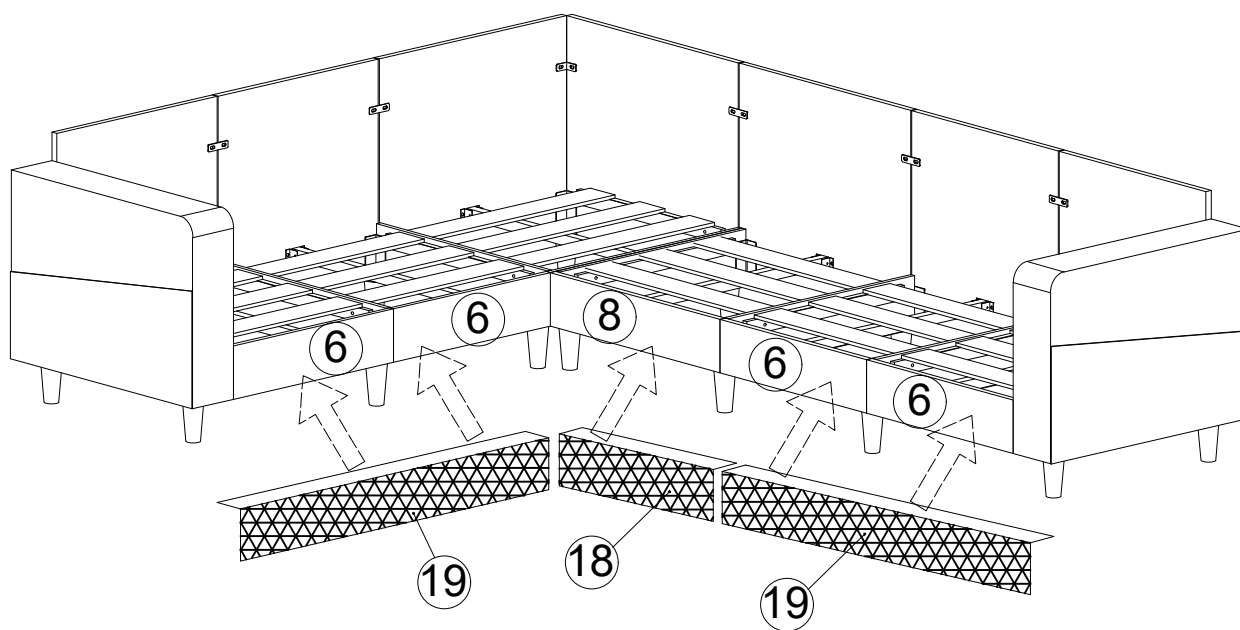


A	 M8*60	8PCS	E	 M8*1	16PCS
F	 M8	8PCS	Q	 M8	1PCS
O	 M5	1PCS			








STEP 10



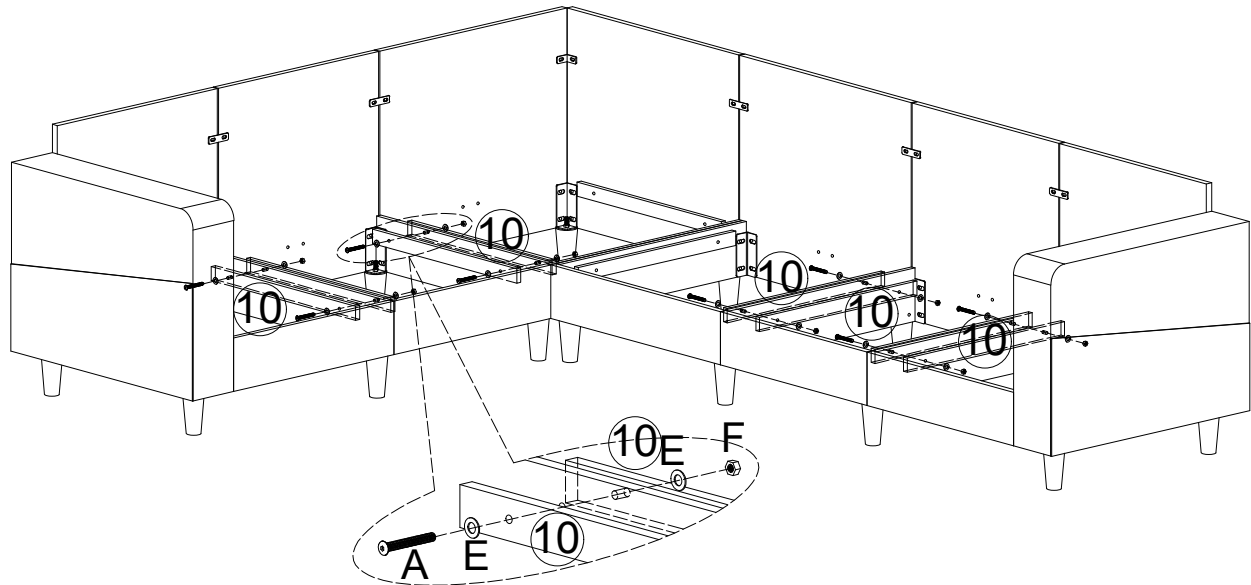


D	 M6*16	24PCS	L	 12PCS
P	 M4	1PCS		


STEP 11

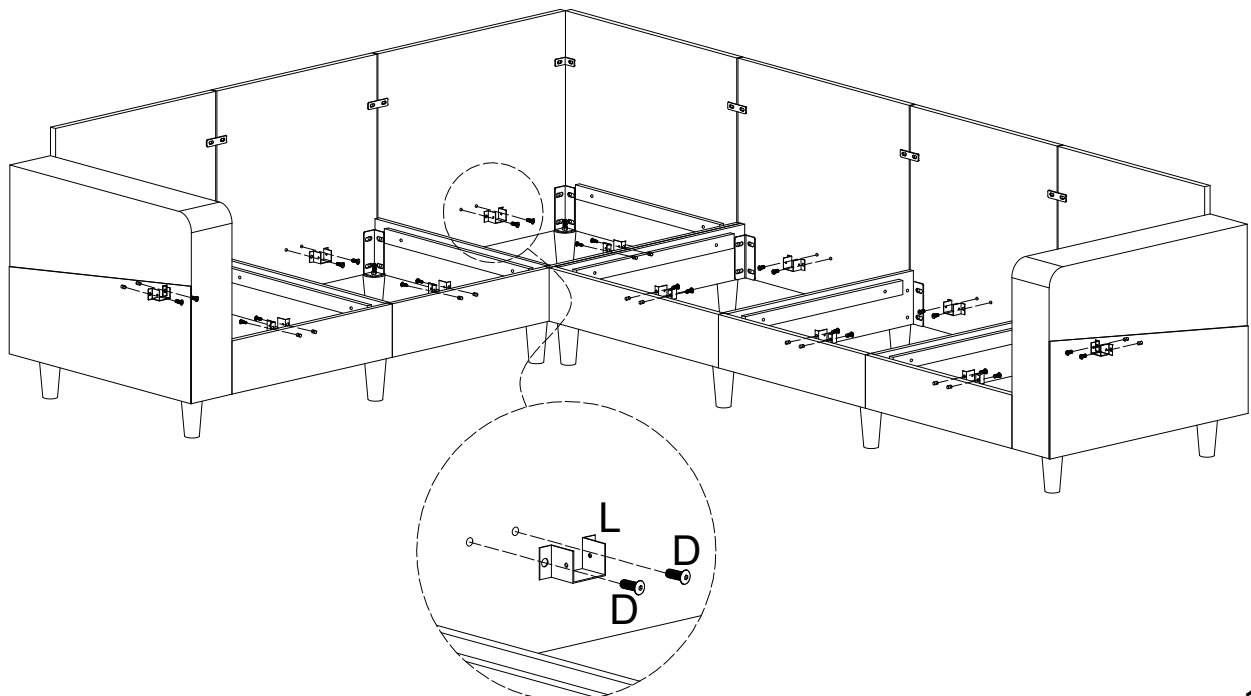

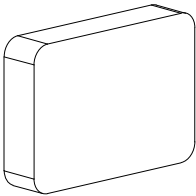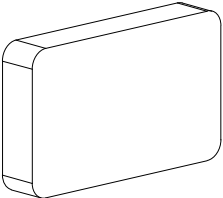⑬		2PCS	⑭		4PCS
⑮		1PCS	⑯		5PCS
⑰		2PCS	⑱		1PCS
⑲		2PCS			


A	 M8*60	10PCS	B	 M8*35	6PCS
C	 M8*16	80PCS	D	 M6*16	40PCS
E	 M8*1	106PCS	F	 M8	21PCS
G		15PCS	H		5PCS
I		3PCS	J		4PCS
K		4PCS	L		12PCS
M	 72*20	5PCS	N		3PCS
O	 M5	1PCS	P	 M4	1PCS
Q	 M8	1PCS	R	 #8-Ø4X14	24PCS

A	 M8*60	2PCS	D	 M6*16	16PCS
E	 M8*1	4PCS	M	 72*20	5PCS
N	 3PCS		P	 M4	1PCS
F	 M8	2PCS	Q	 M8	1PCS

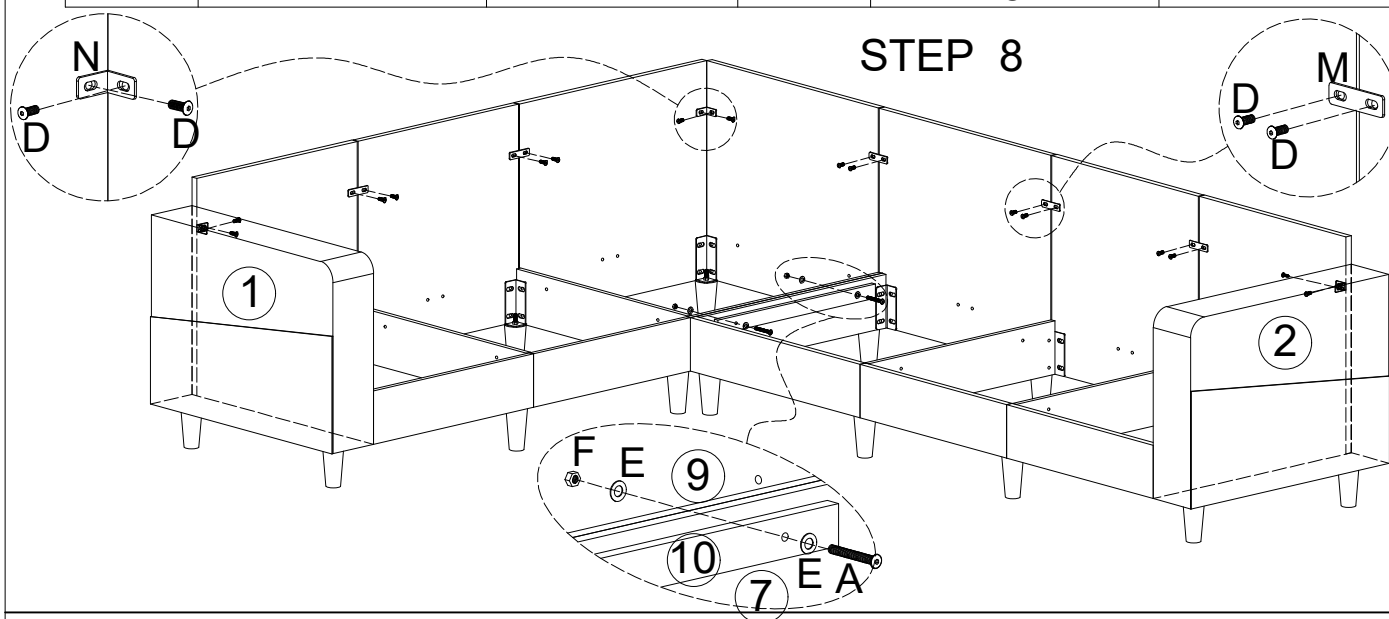




B	 M8*35	6PCS	E	 M8*1	6PCS
---	--	------	---	---	------


STEP 9

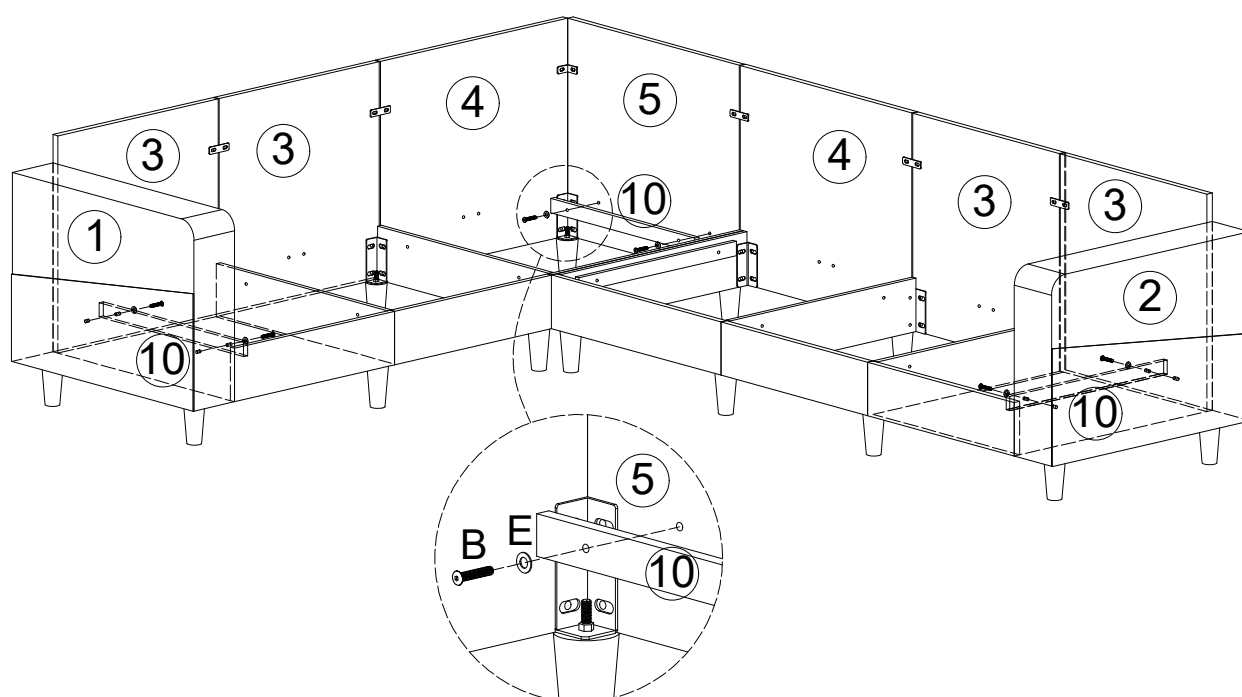


F	 M8	11PCS	G		15PCS
Q	 M8	1PCS			


STEP 7

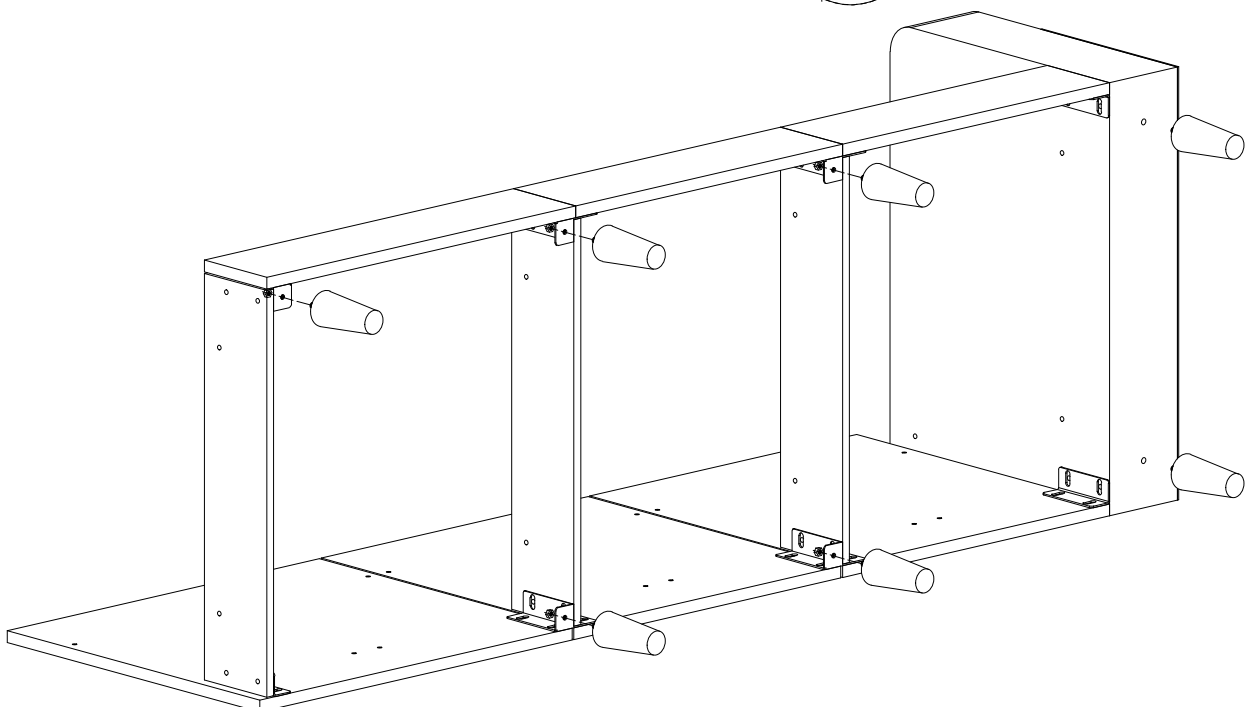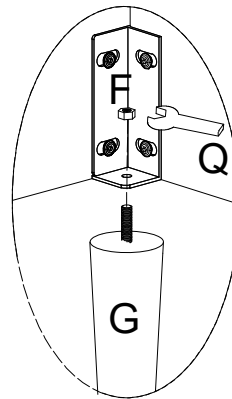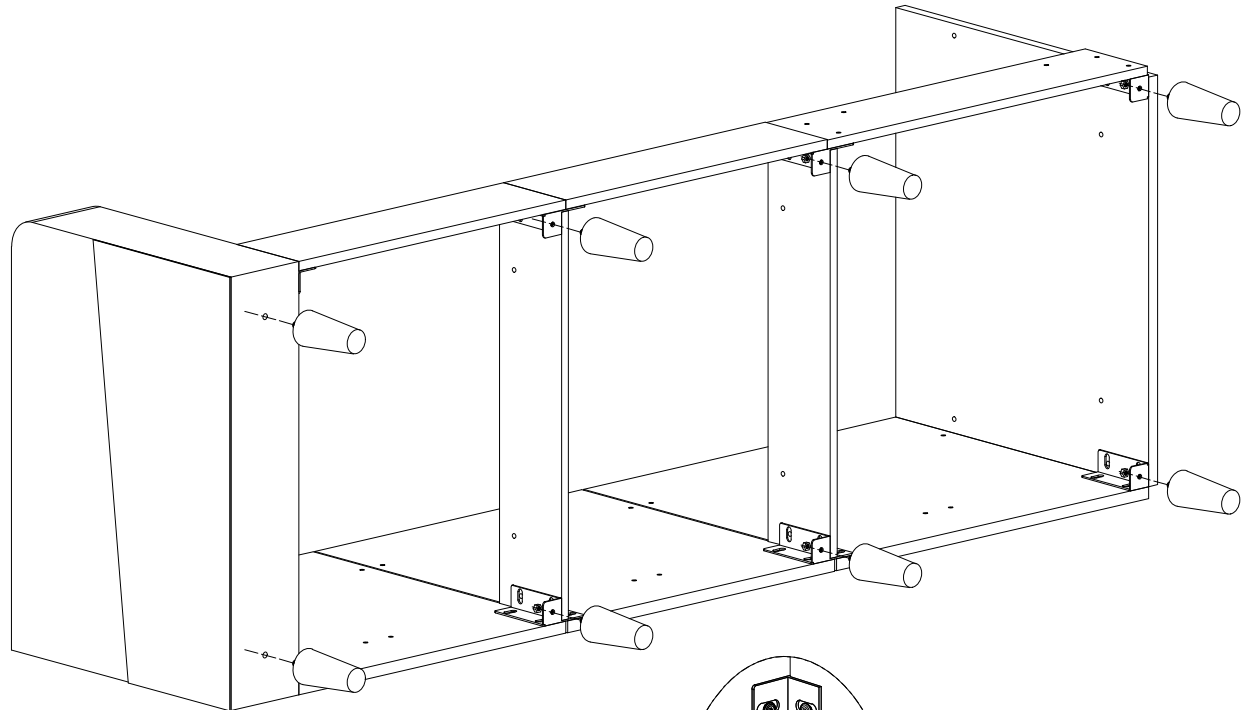


C	 M8*16	16PCS	E	 M8*1	16PCS
H		2PCS	J		1PCS
K		1PCS	O	 M5	1PCS


STEP 1

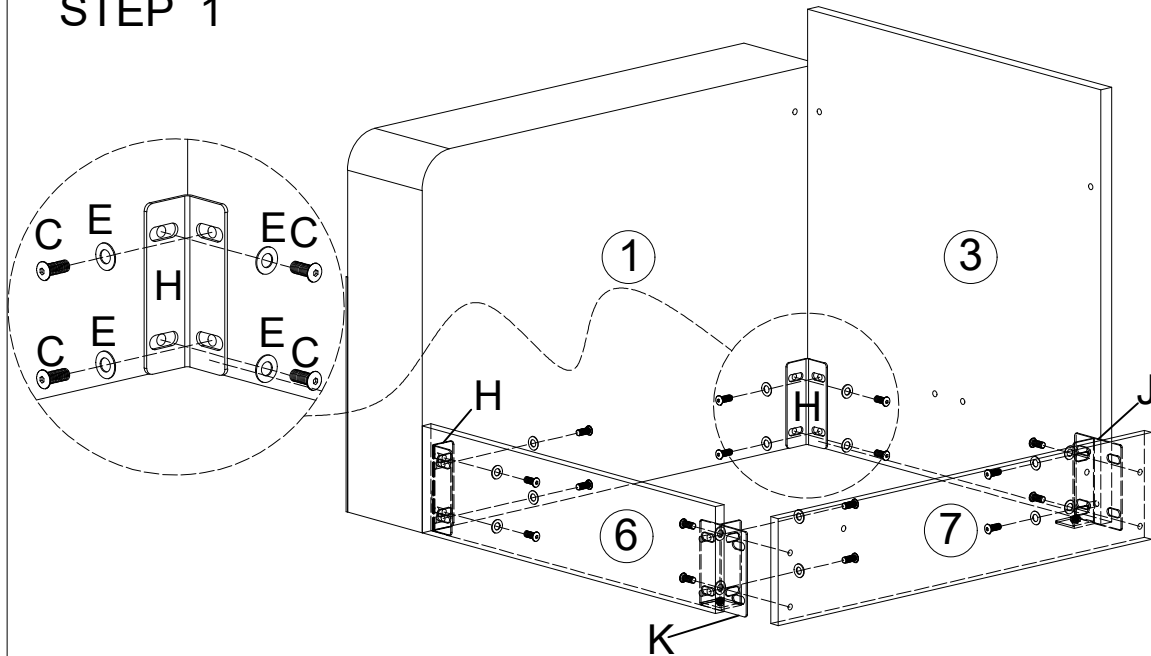


C	 M8*16	12PCS	E	 M8*1	12PCS
J		1PCS	K		1PCS
O	 M5	1PCS			

STEP 2

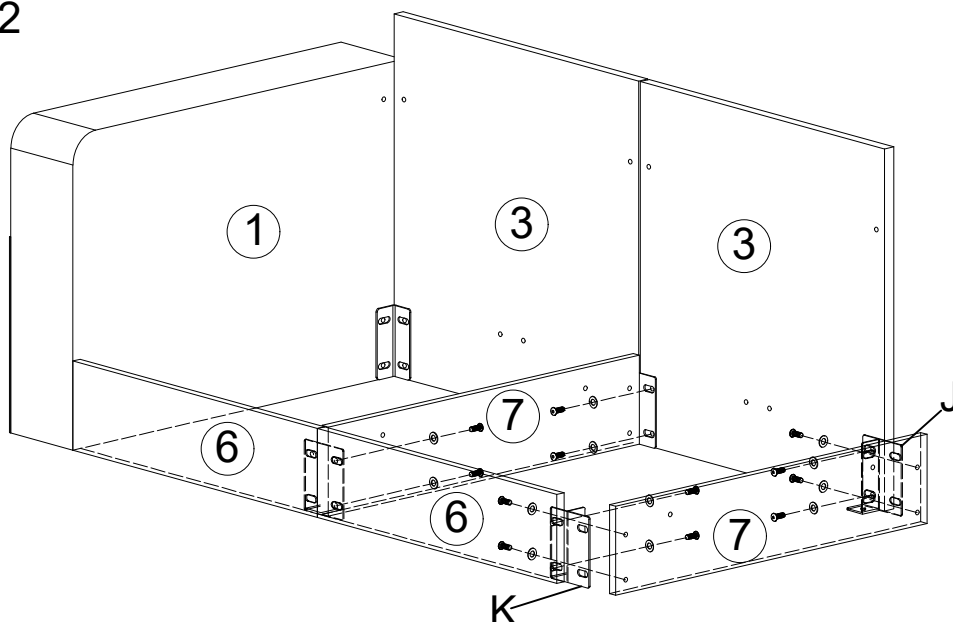


C	 M8*16	12PCS	E	 M8*1	12PCS
I		2PCS	O	 M5	1PCS


STEP 3

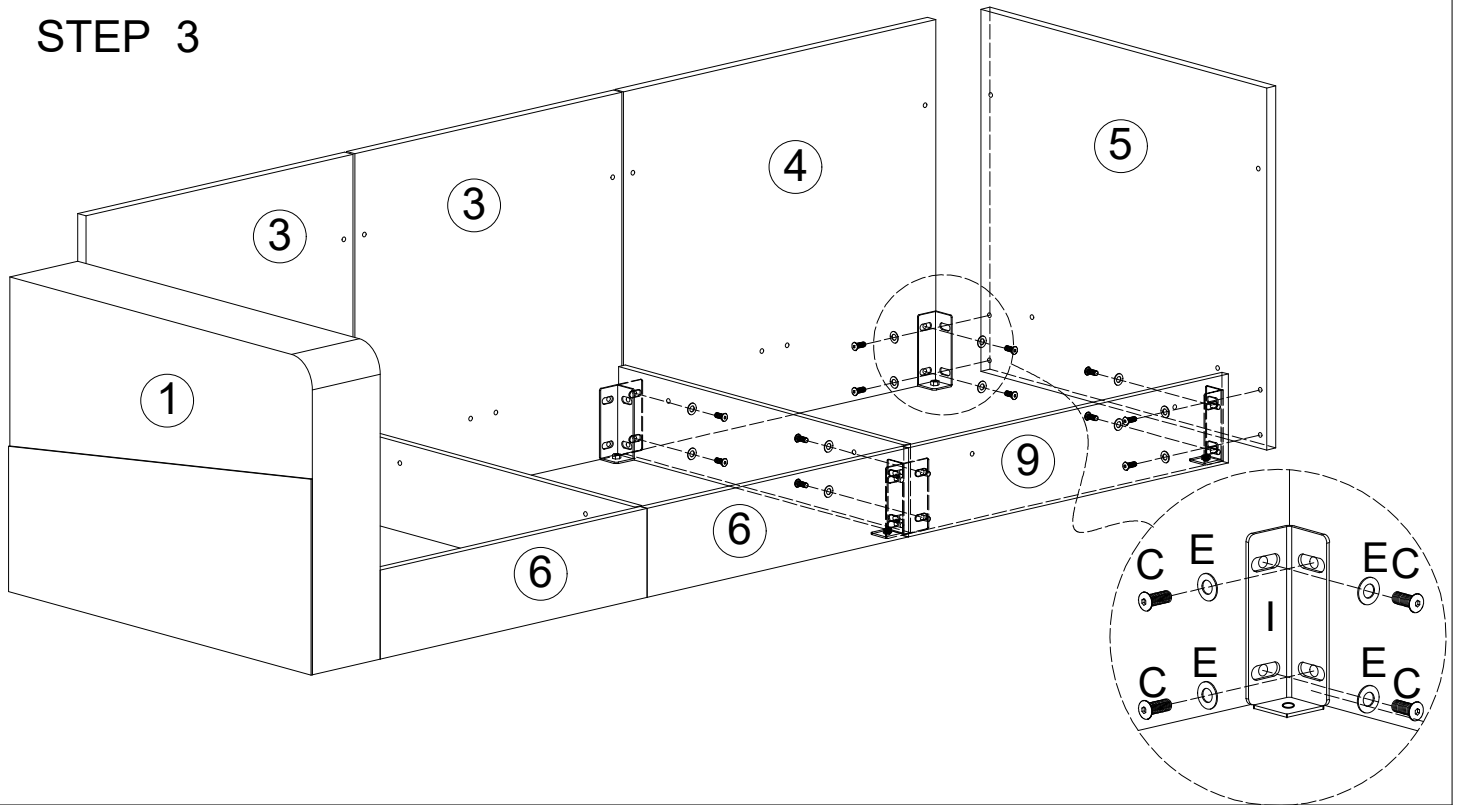


C	 M8*16	16PCS	E	 M8*1	16PCS
H		2PCS	J		1PCS
K		1PCS	O	 M5	1PCS


STEP 4

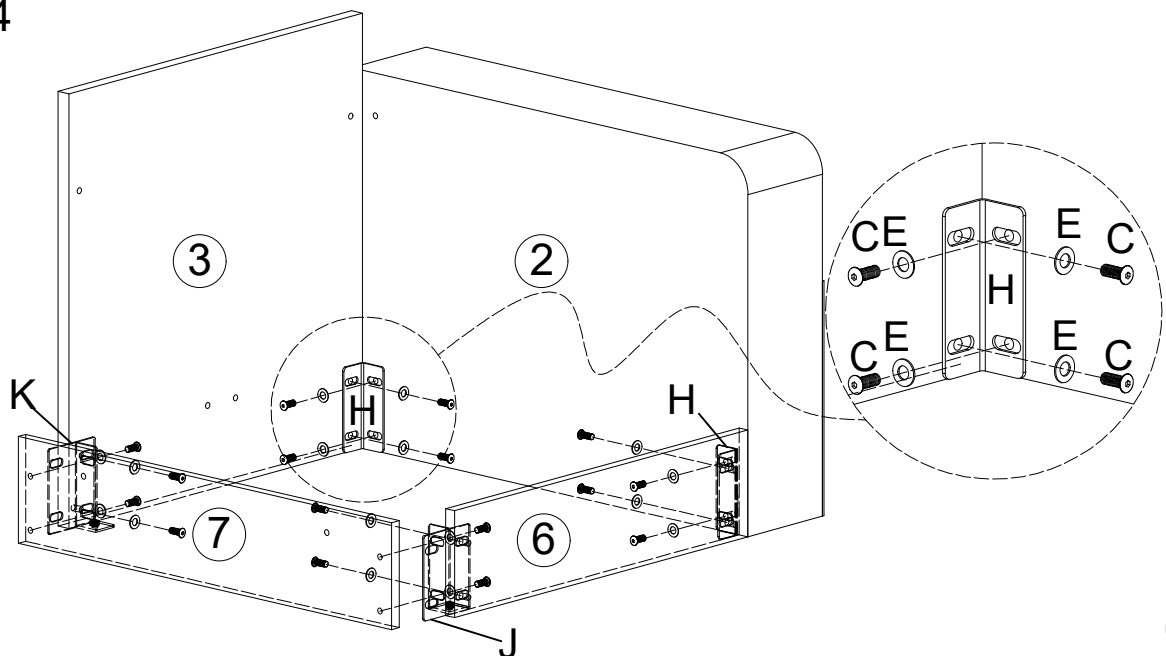

C	 M8*16	12PCS	E	 M8*1	12PCS
J		1PCS	K		1PCS
O	 M5	1PCS			

STEP 5

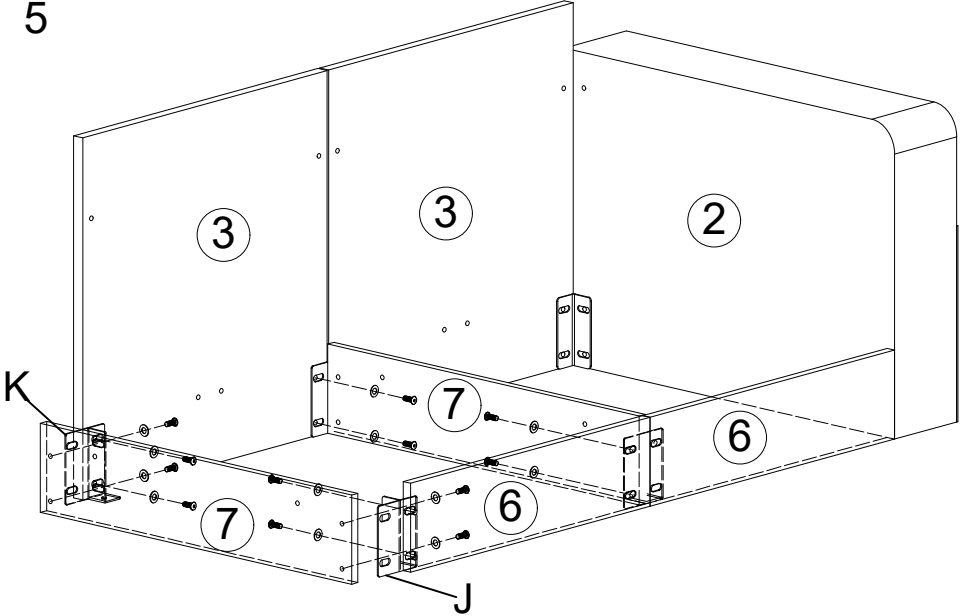

C	 M8*16	12PCS	E	 M8*1	12PCS
H		1PCS	I		1PCS
O	 M5	1PCS			

STEP 6

