
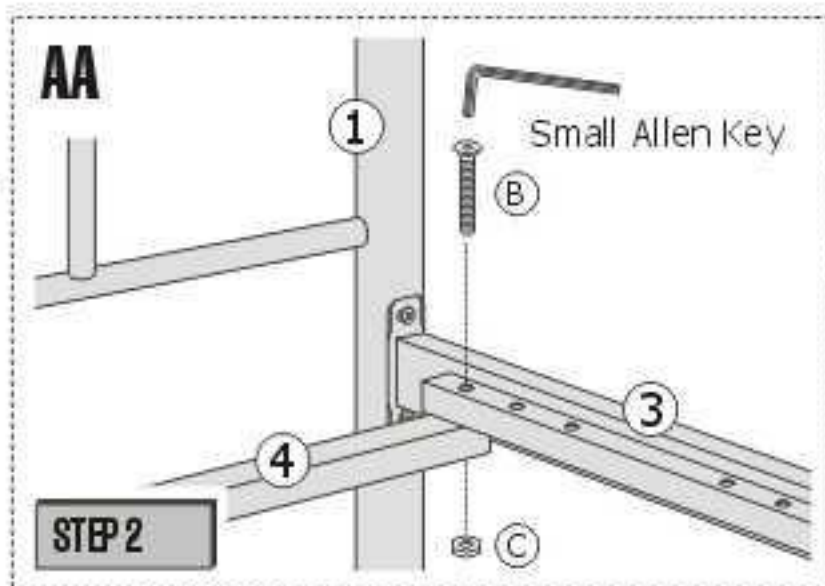


How do I assemble 4' & 4'6"?

- Step 1. Fix the Side Support (3) to the Headboard (1) and Footboard (2) with M6 x 16mm JCBC Screw (A). But do not tighten the screw yet before assembling the Side Frame (4) in Step 2.
- Step 2. Place the Side Frame (4) at the bottom of the Side Support (3) and tightly secure with M6 x 50mm JCBC Screw (B) and M6 Nut (C).
- Step 3. Place the Mid Support (5) on top of both Side Frame (4) and tightly secure with M8 Nut (I) & M8 x 50mm JCBC Screw (H).
- Step 4. Take the Base Leg (6) and fit to the Mid Support (5) according to the holes at the side using M6 x 40mm (D) and M6 Nut (C).

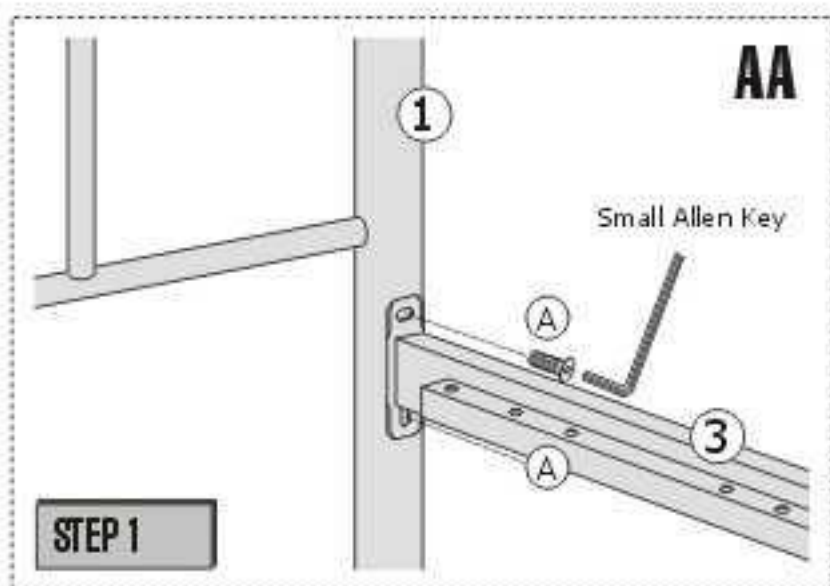


IMPORTANT

Do not tightly secure the screw yet before assembling the **Side Frame** (Step 2)

CAUTION!

Please see this picture carefully on the **Side Frame** position to be assembled before you proceed further.

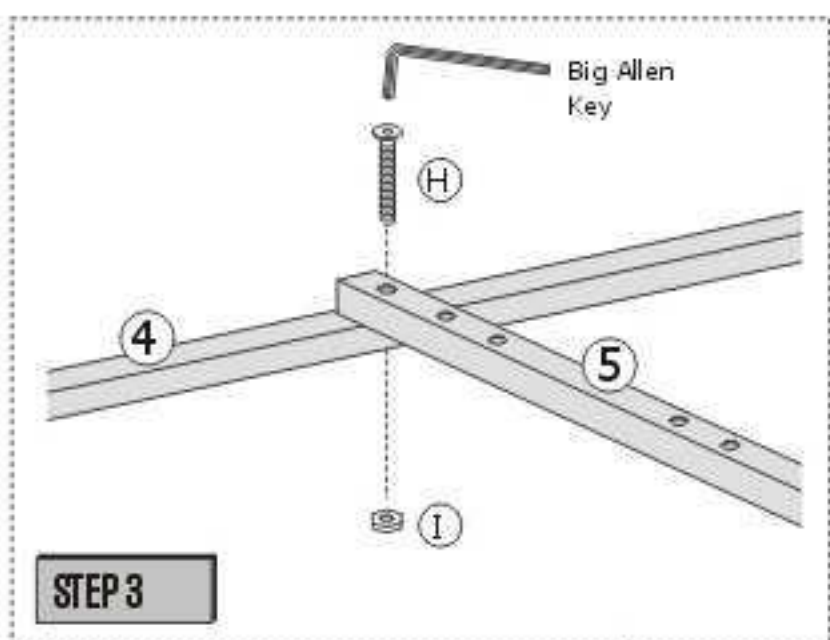

CAUTION!

Please see this picture carefully on the **Mid Support** position to be assembled before you proceed further.

