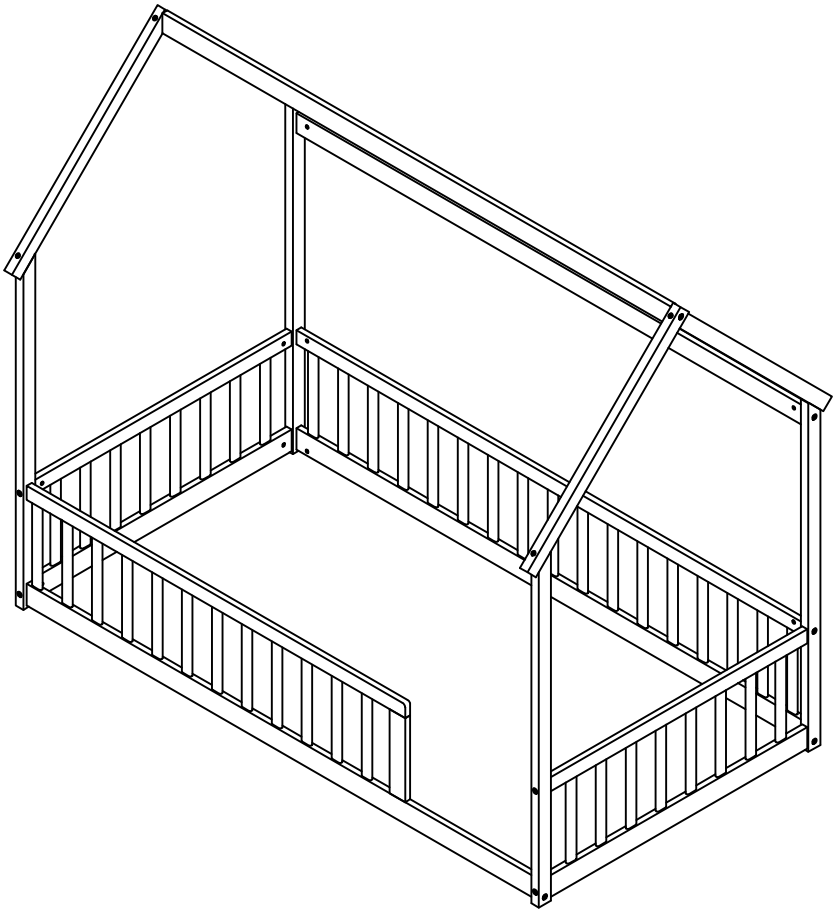
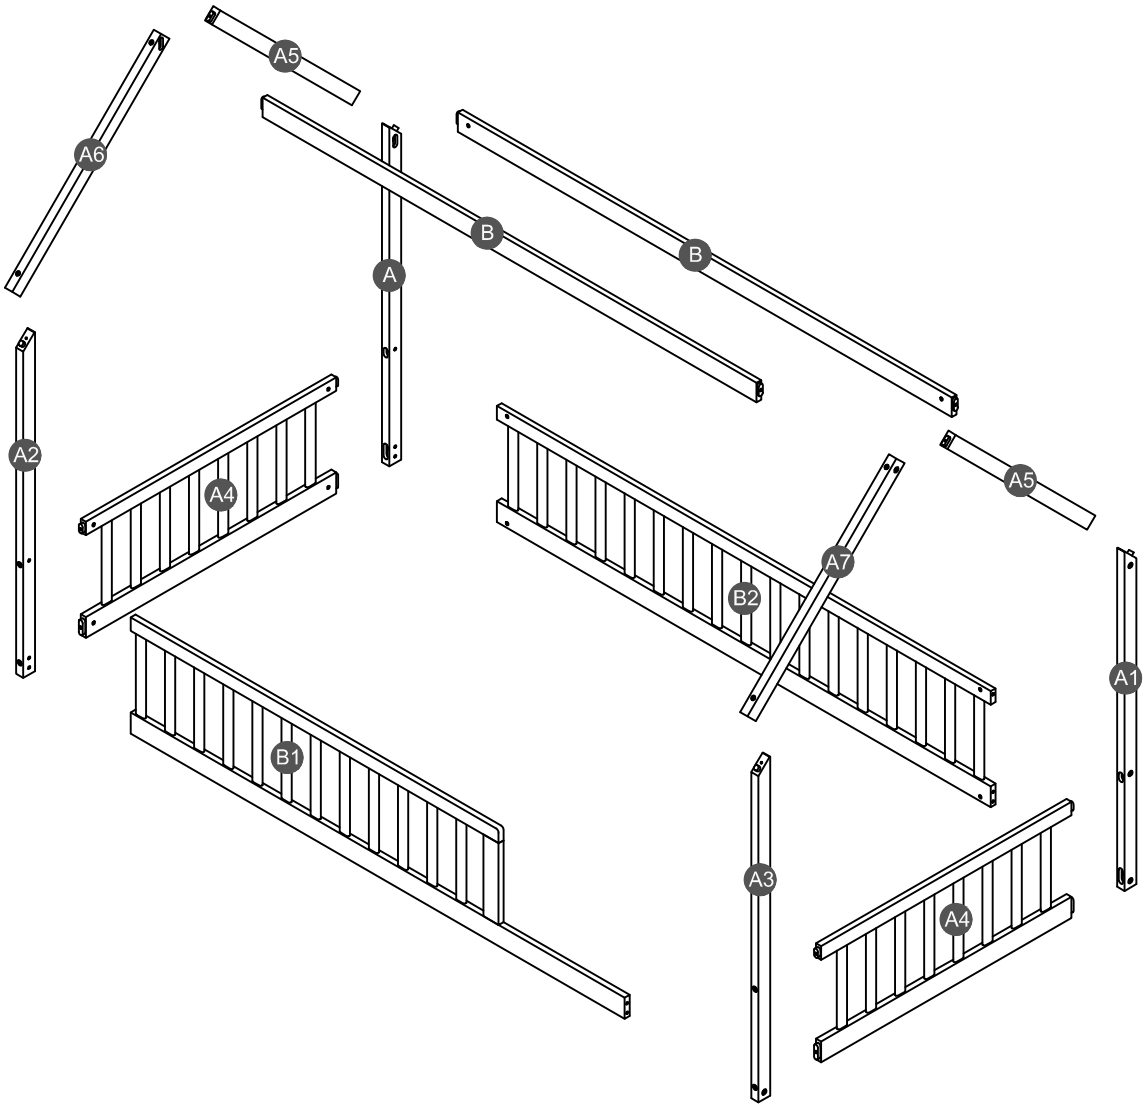
ASSEMBLY INSTRUCTIONS

TWIN FLOOR HOUSE BED














SA33846



Detail View




Part List


A  Leg (Left back) - 1pc	**A1**  Leg (Right back) - 1pc	**A2**  Leg (Left front) - 1pc
A3  Leg (Right front) - 1pc	**A4**  Guard rail HB/FB - 2pcs	**A5**  Upper bar (back) - 2pcs
A6  Upper bar (left front) - 1pc	**A7**  Upper bar (right front) - 1pc	**B**  Upper horizontal bar - 2pcs
B1  Guard rail (front) - 1pc	**B2**  Guard rail (back) - 1pc	


Hardware List

1  Ø8*30mm Wood dowel (4pcs)	**2**  (Ø15)1/4"*80mm Hex-Head bolts (19pcs)	**3**  1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)
4  (Ø12)1/4"*65mm Hex-Head Screws (6pcs)	**5**  21*21*17*1.7mm Metal bracket (1pc)	**6**  Ø3.5*15mm Wood screws (2pcs)
7  (1/4")4.5*58mm Allen key		

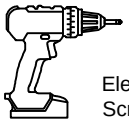OPTIONAL TOOLS FOR ASSEMBLY (NOT INCLUDED)









Electric Screwdriver

PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

2	3	4
4PCS	4PCS	3PCS

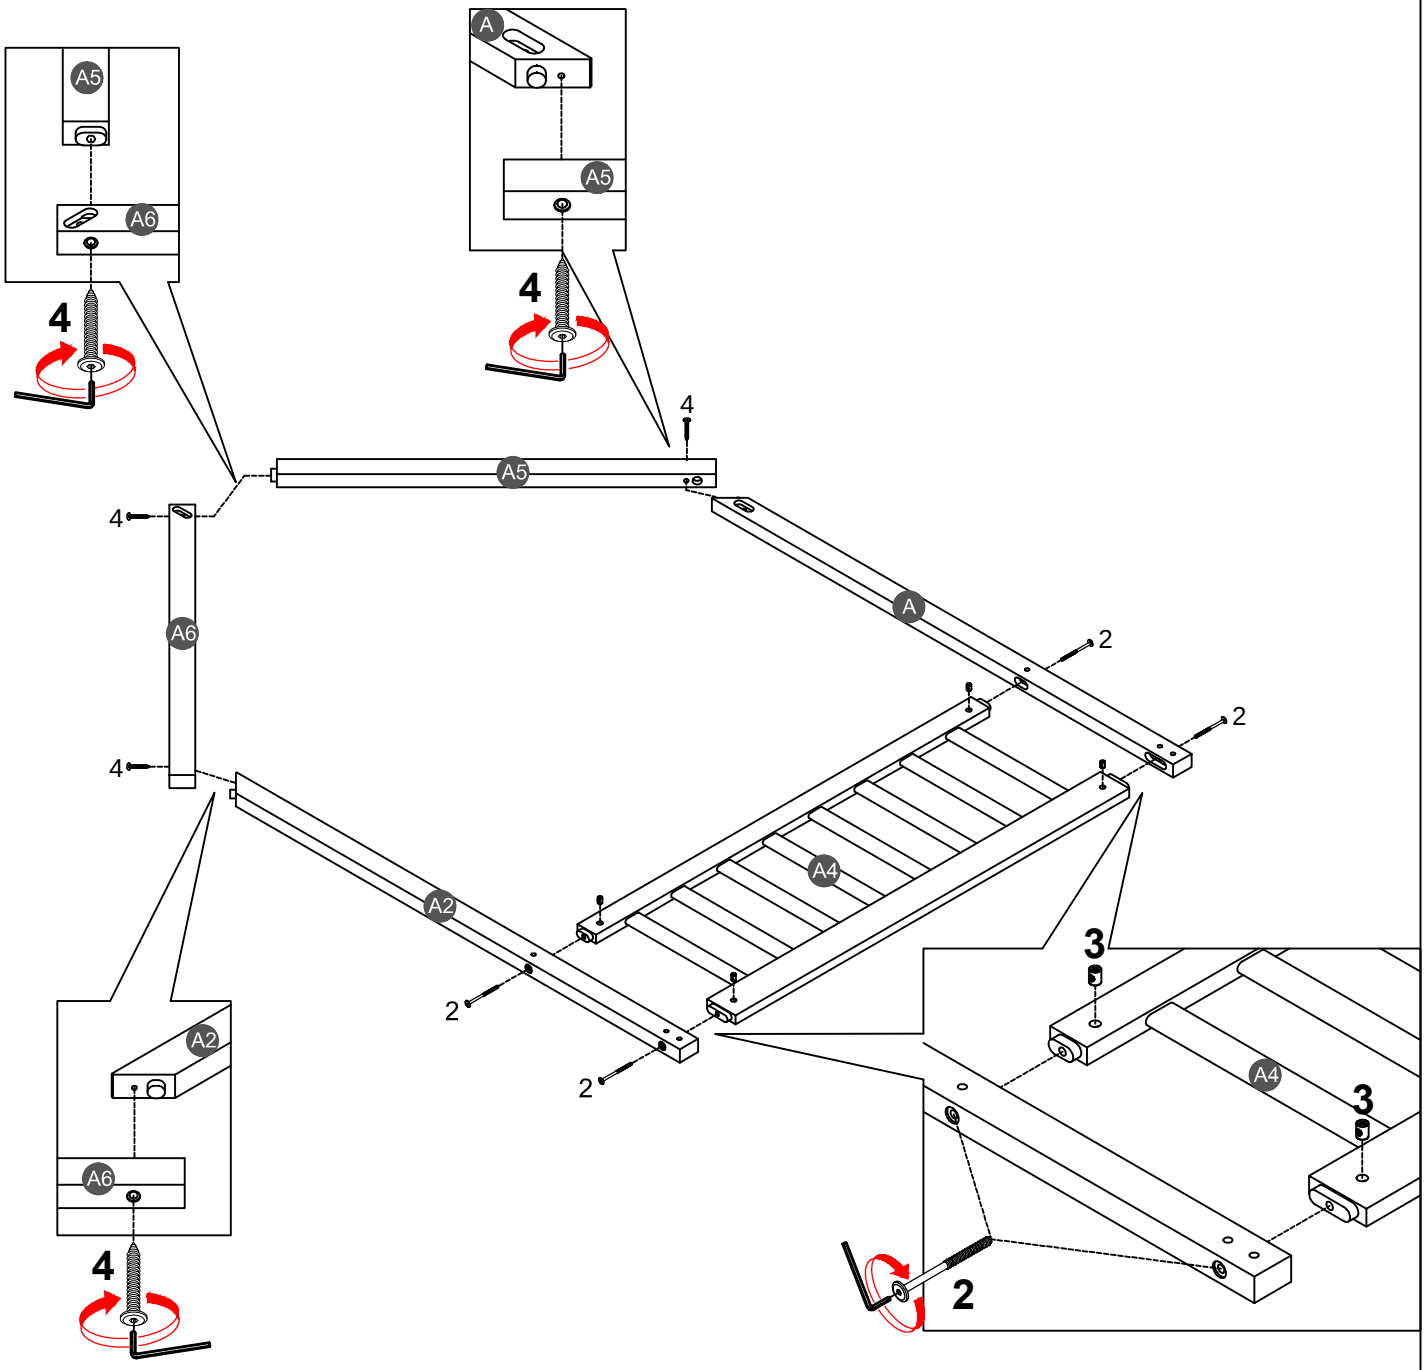


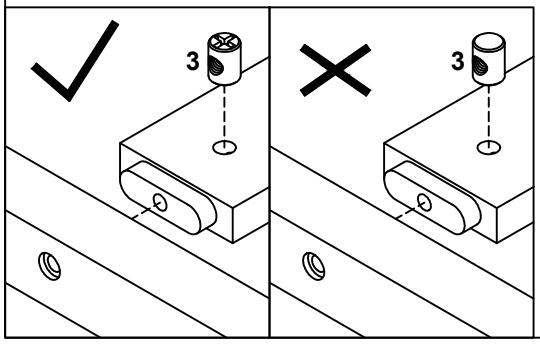

EN: Note: The side of part #3 with the "x" mark needs to be facing up, otherwise it cannot be tightened.


STEP 2:

2	3	4
4PCS	4PCS	3PCS

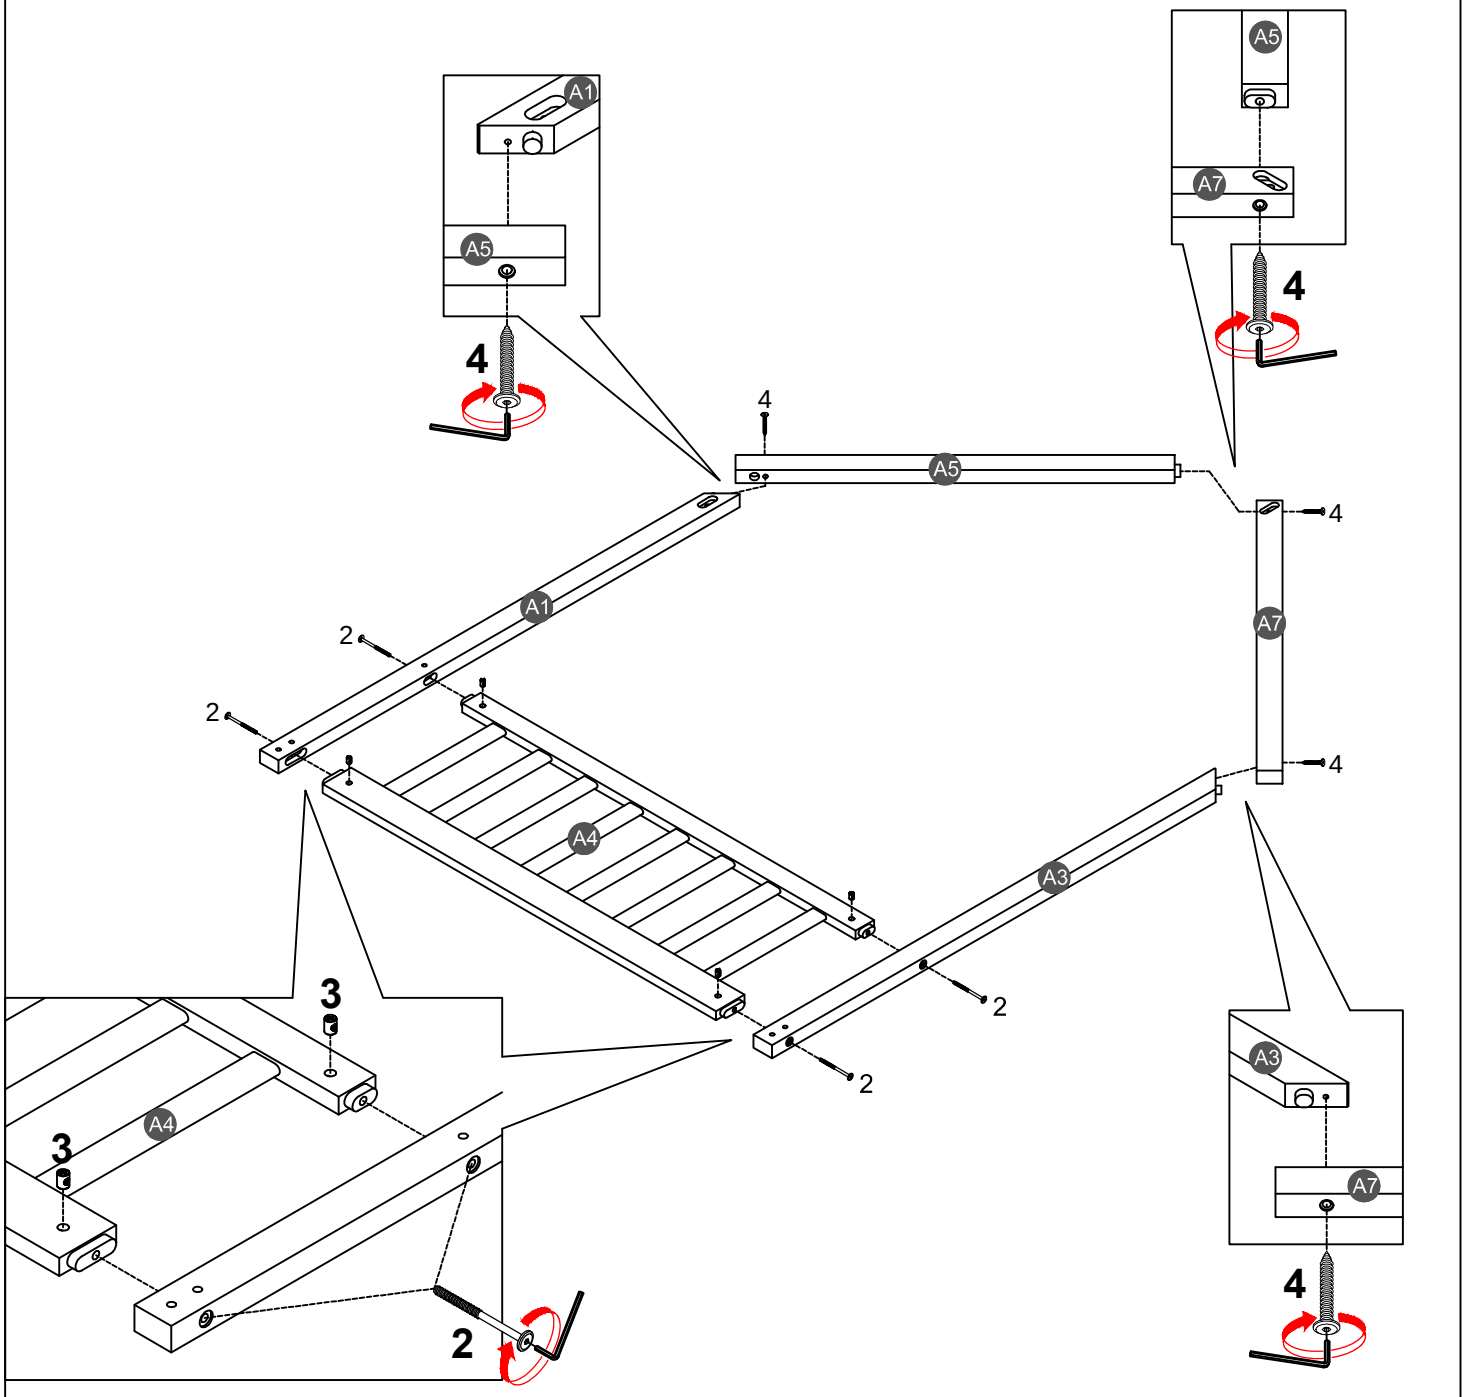

STEP 3:

1	2	3
x4	11PCS	11PCS

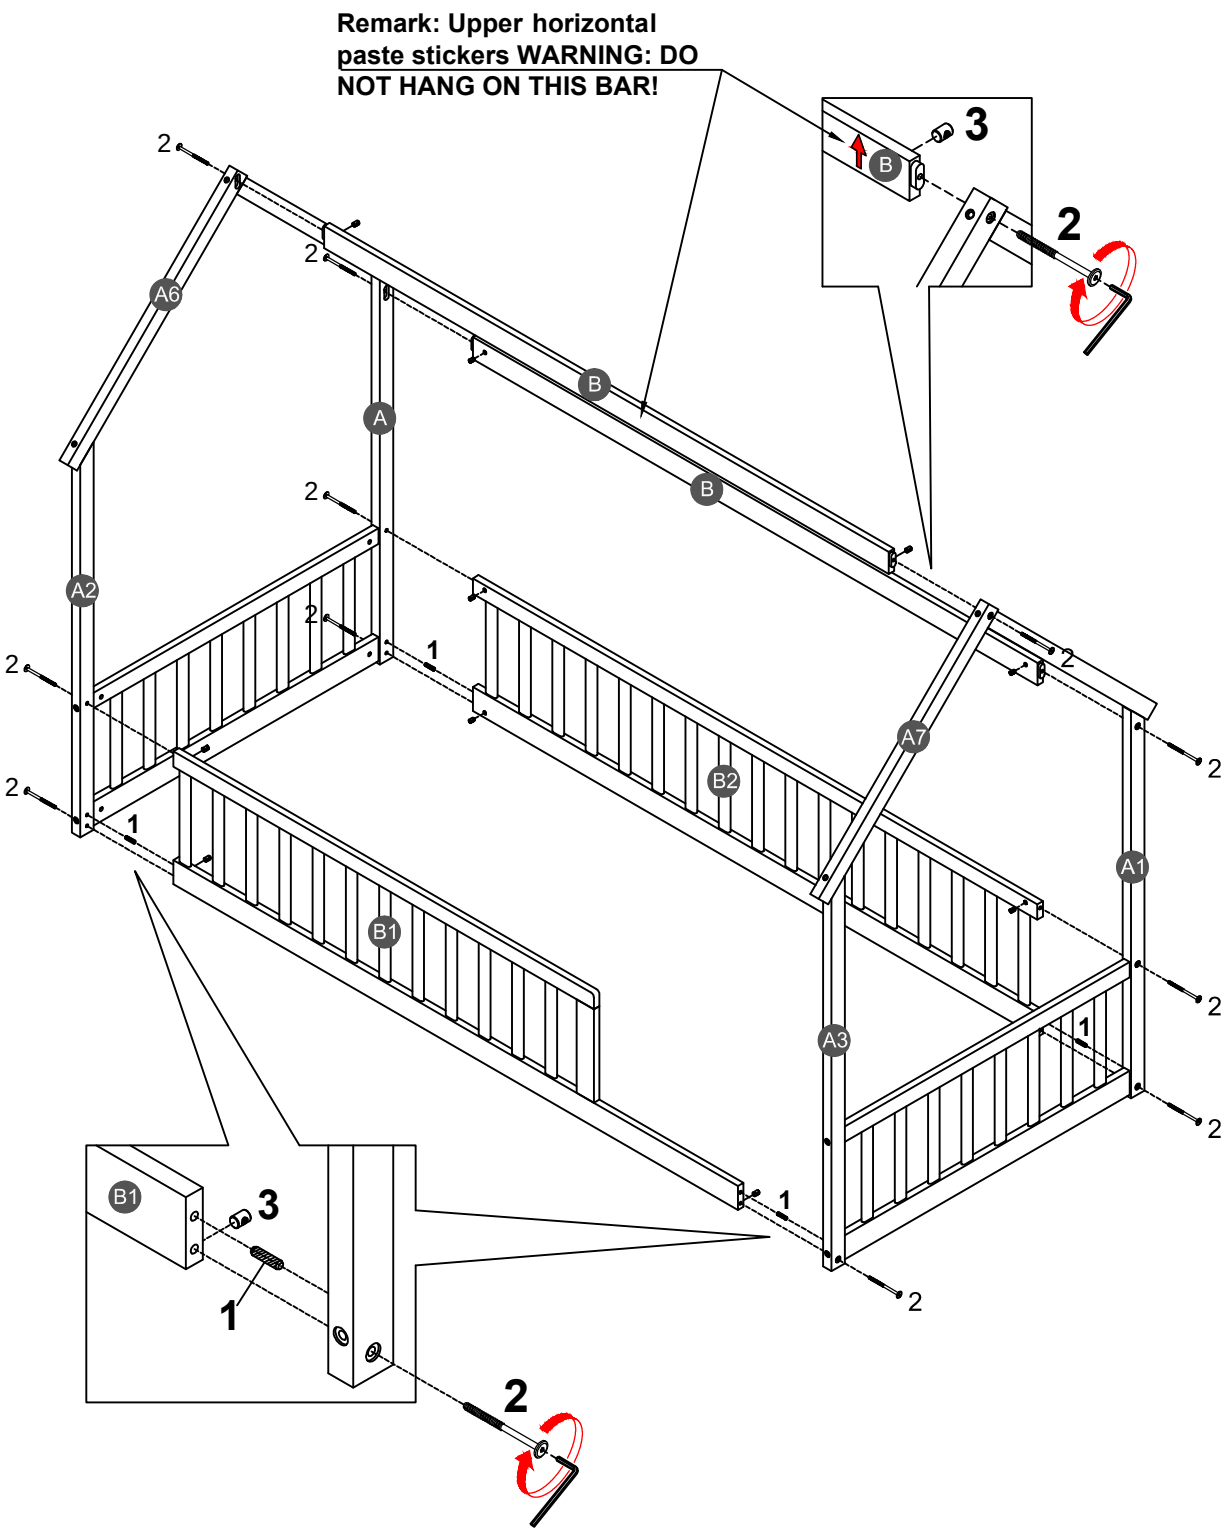

STEP 4:

5	6
1PC	2PCS

