

Assembly Instruction

HDPE Bar Table With Bucket


Your furniture requires assembly prior to use. It is important that you read the entire assembly instructions to become familiar with the unit before you set up this product.

Safety Warning and Precautions

WARNING: When setting up your furniture, basic precautions should always be followed to reduce risk of personal injury and damage to the product.

Read all instructions before assembly and usage this product.

1. Select ideal location. Set out all parts on a clear and level surface prior to assembly. Ideally, the furniture should be set up in the desired location to avoid moving it after assembly.
2. Use caution. During all the processes of assembling, especially when lifting heavy or large parts, pay attention to safety.
3. Tools and Assistance. An adjustable spanner is required for assembly. It is recommended 2 people assist with assembly.
4. Check all parts before assembling, ensure you have all parts detailed in the parts list on Page 2.
5. Refer to assembly diagram. During assembly, refer to the assembly instructions on following pages.
6. Caution. Keep children away from work area during assembly. Do not allow children to handle parts or tools while assembling.


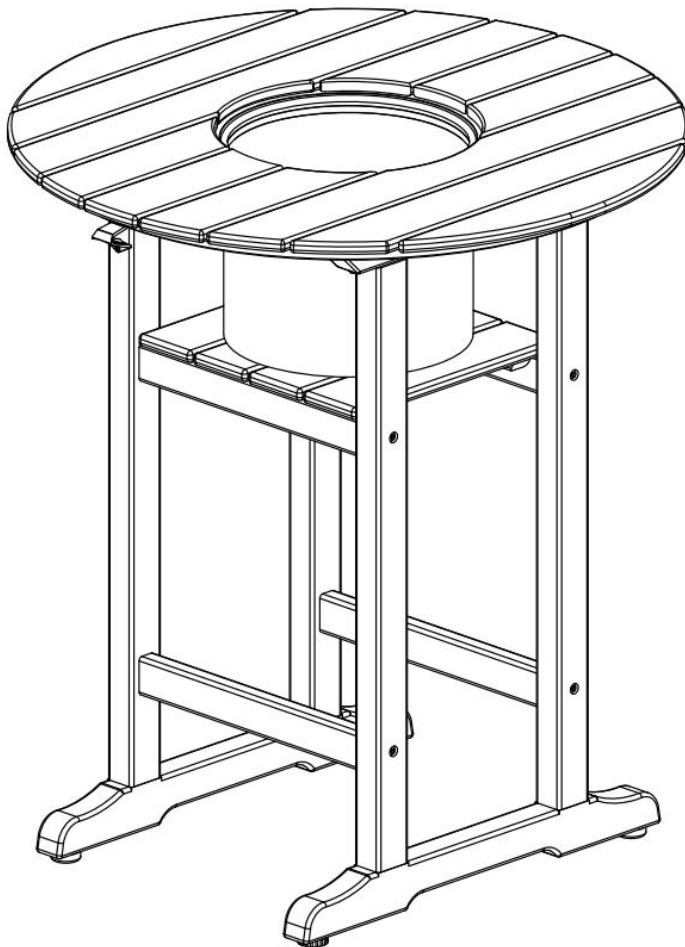


Assembly Instruction

HDPE Bar Table With Bucket

FITTINGS IDENTIFICATION


H665	M655	X	Y	Z
				
H6*65	M6*55	Ø16*Ø6.5*1.0		
16PCS	4PCS	4CS	1PCS	1PCS

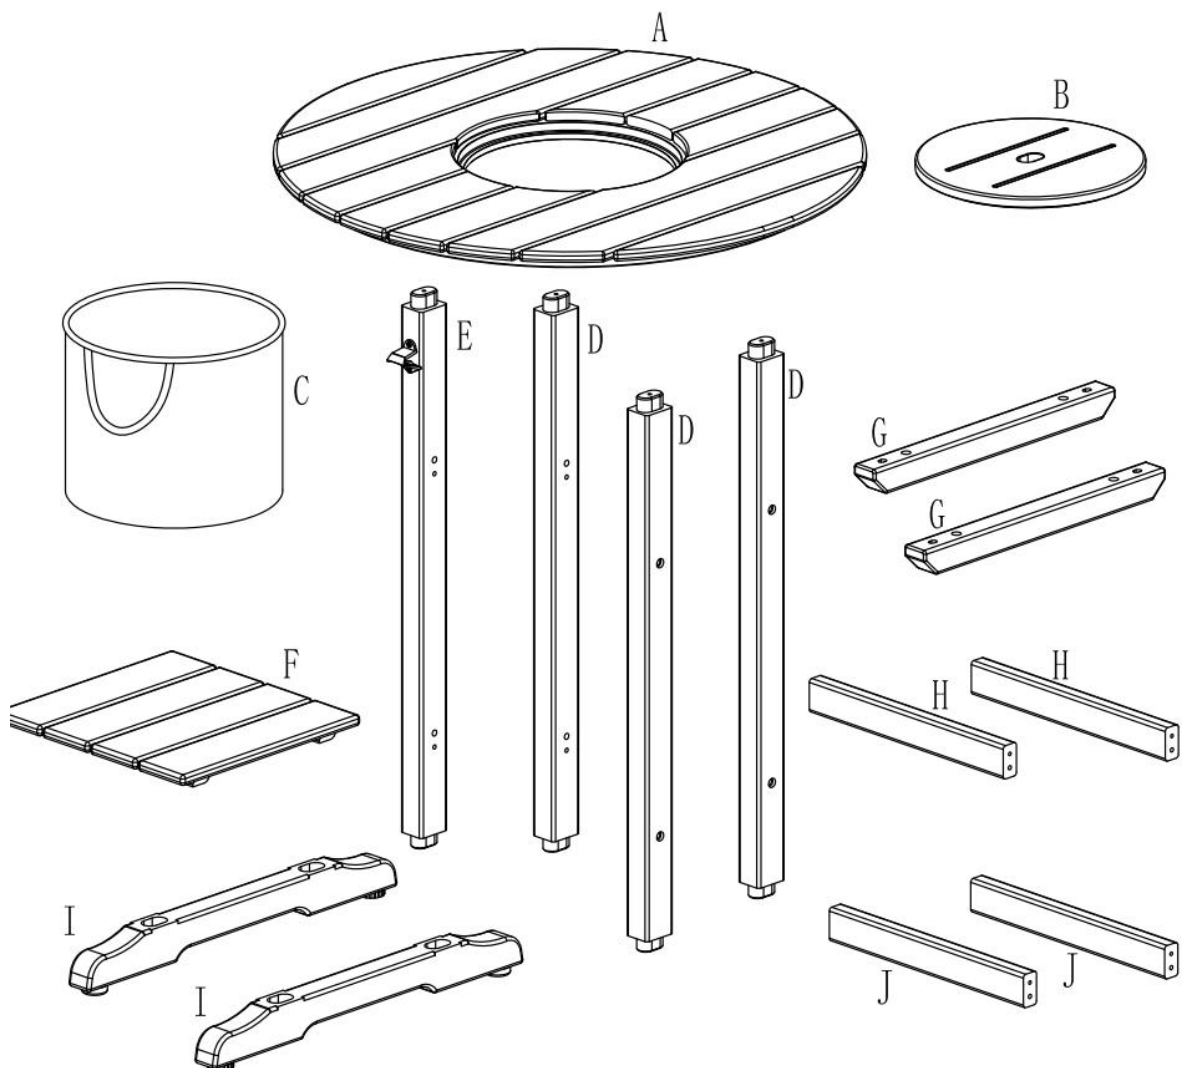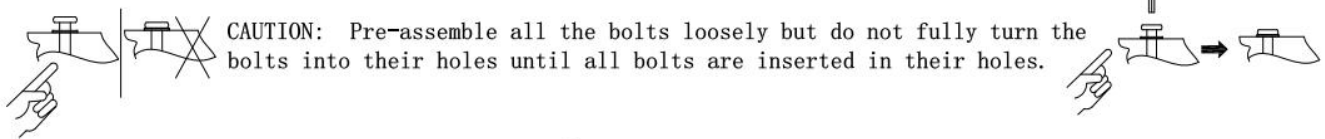


Assembly Instruction

HDPE Bar Table With Bucket

STEP1

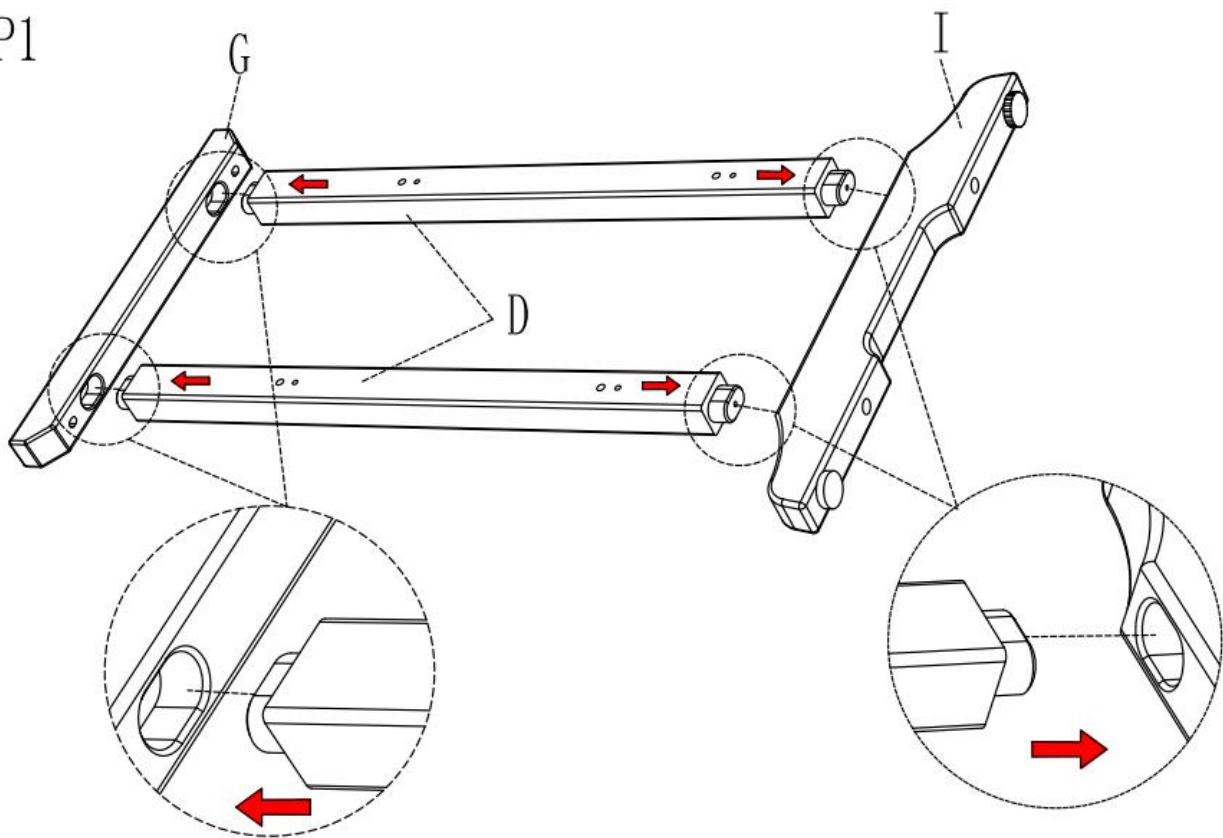


STEP2

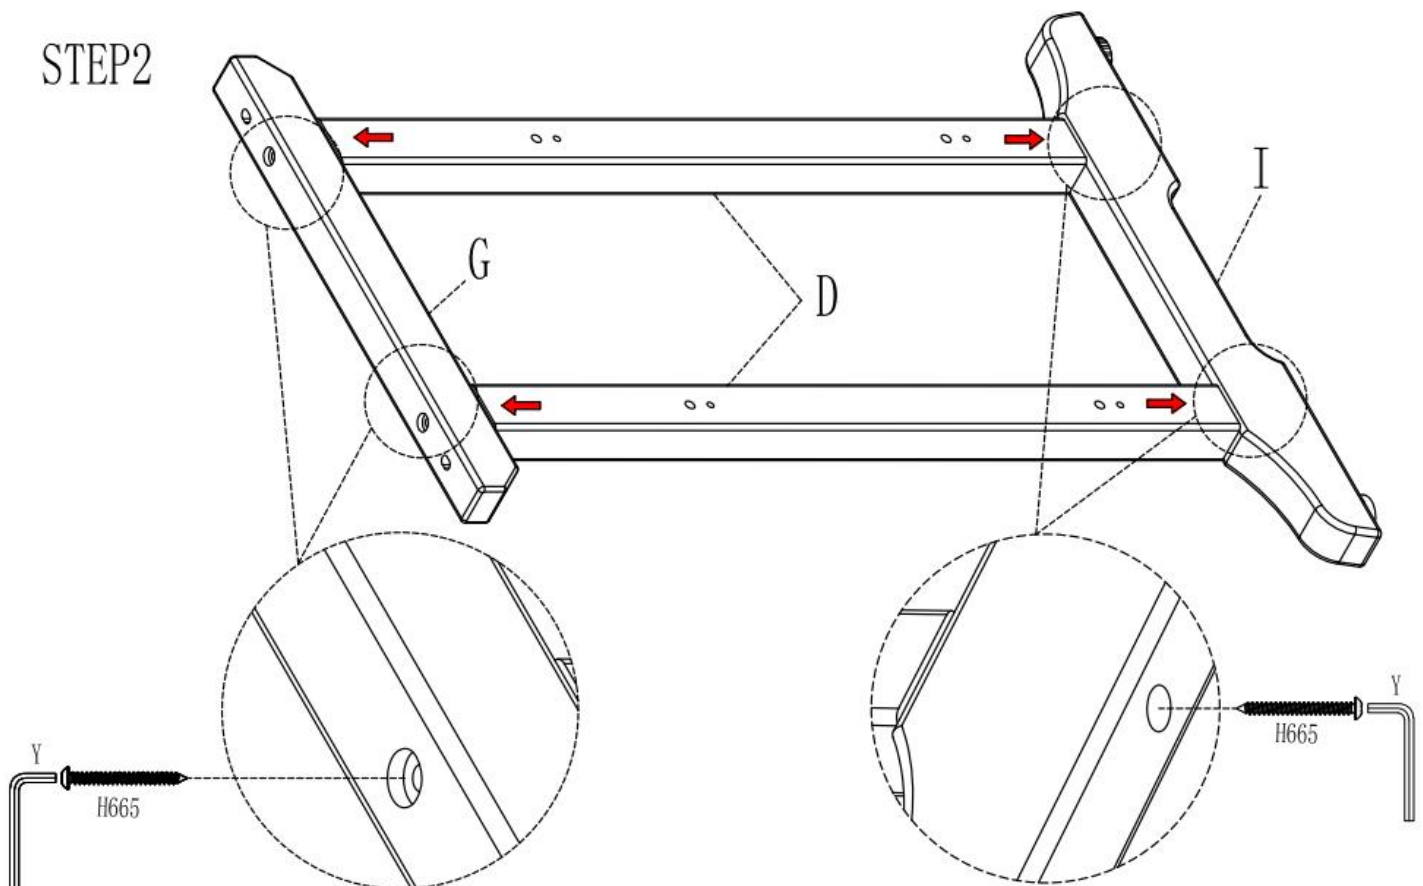


Assembly Instruction

STEP3

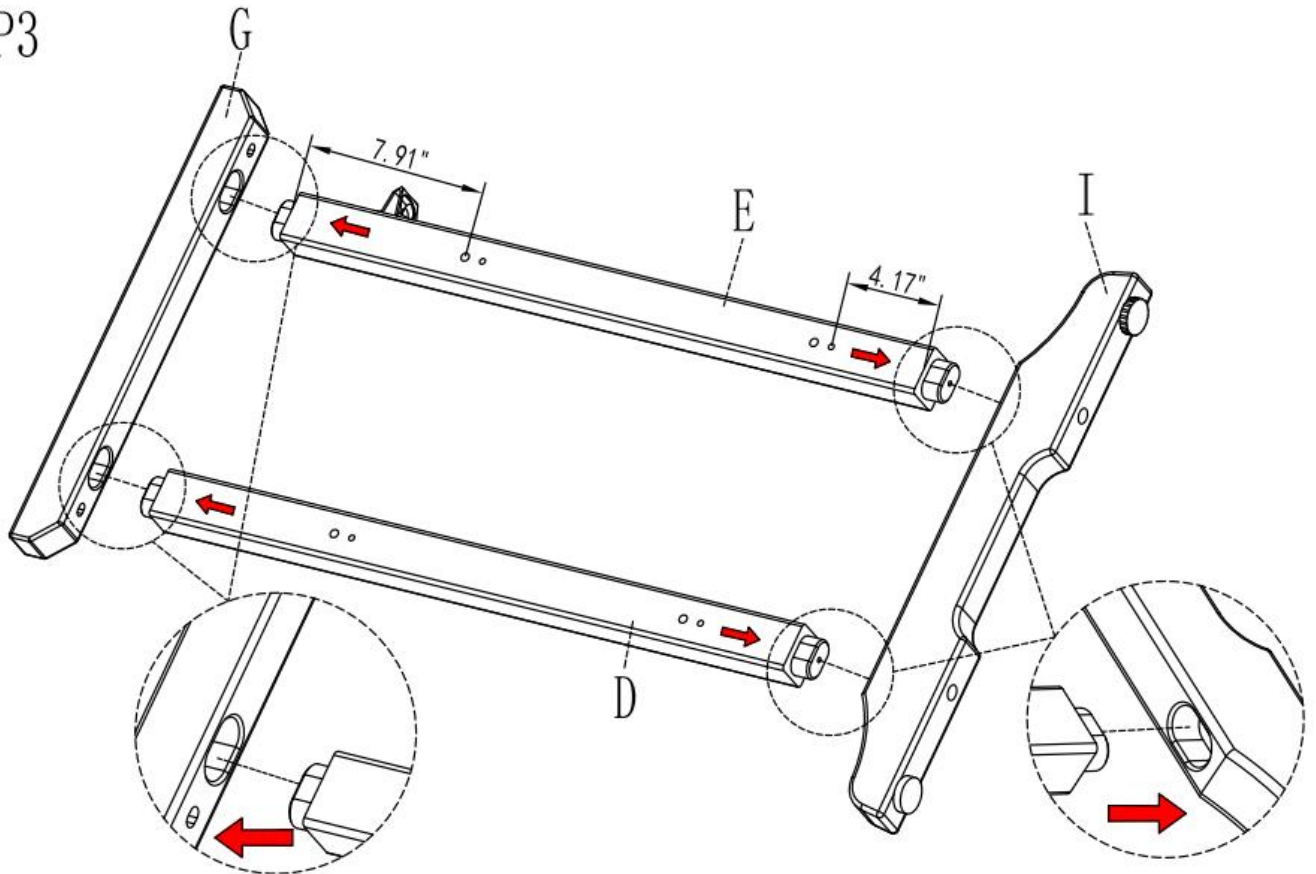


STEP4

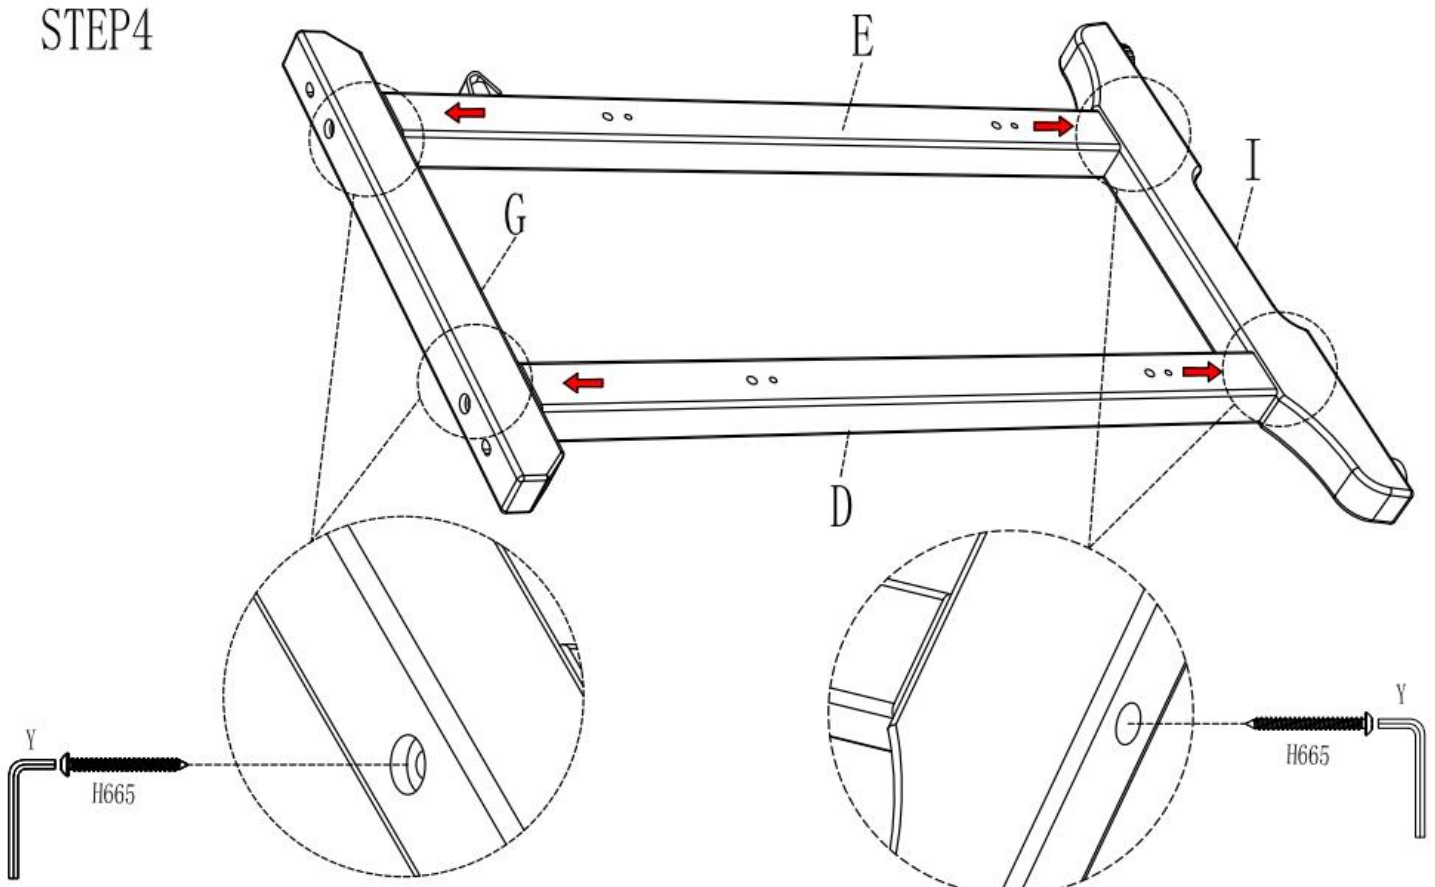


Assembly Instruction

STEP5

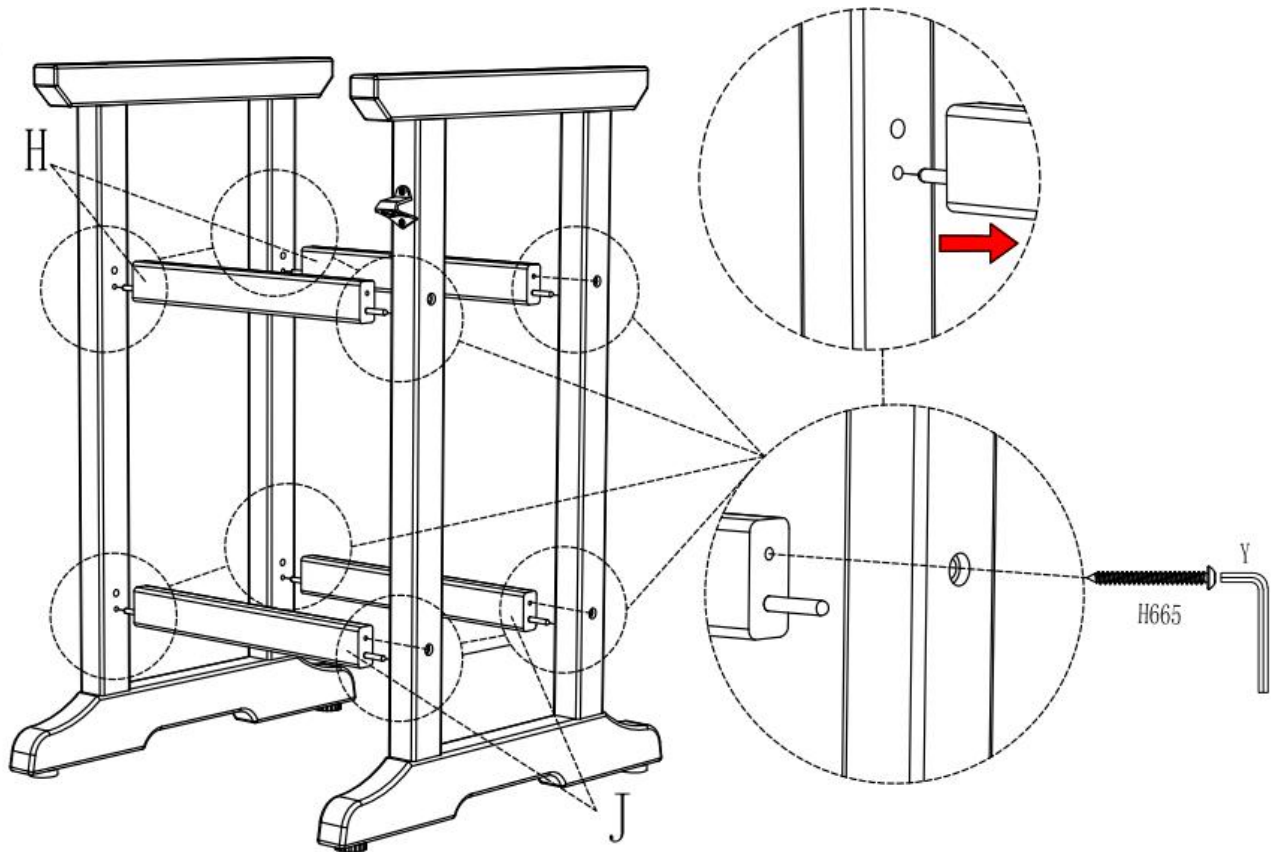


STEP6

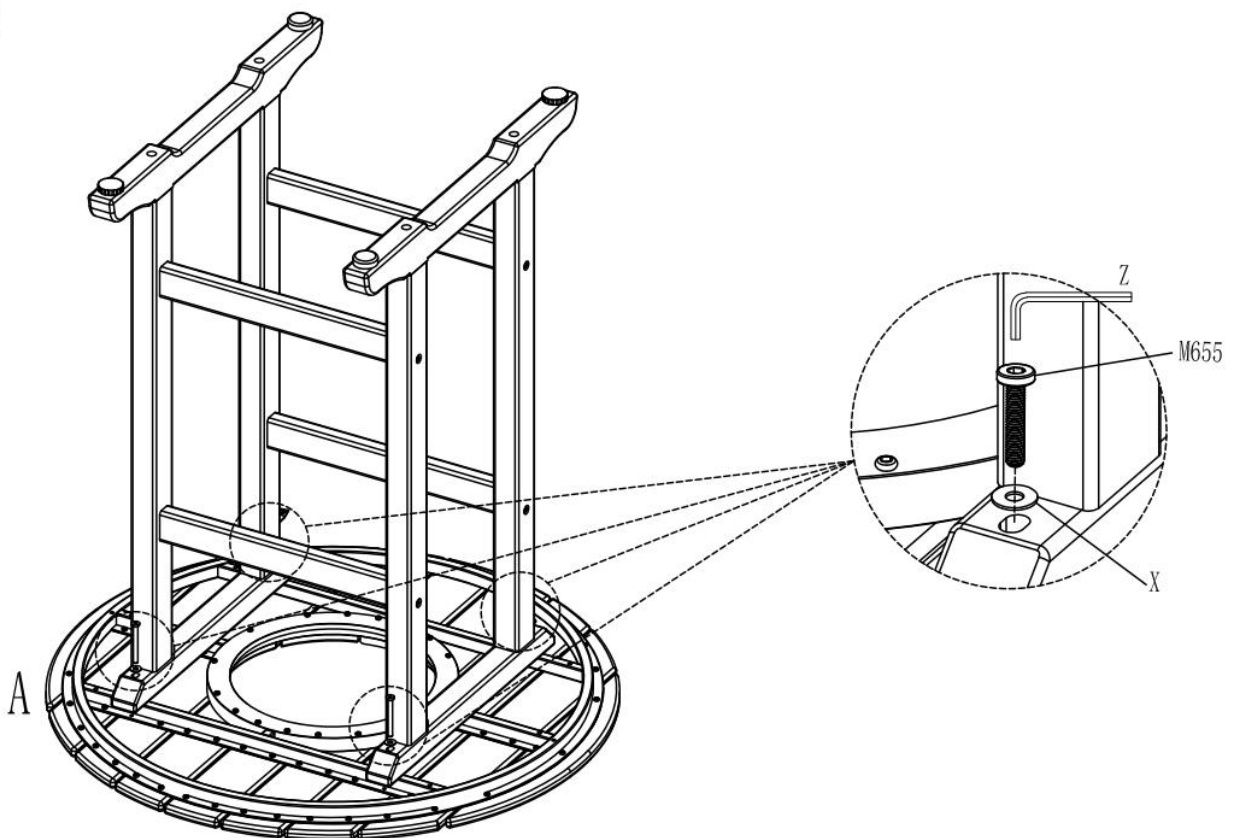


Assembly Instruction

STEP7


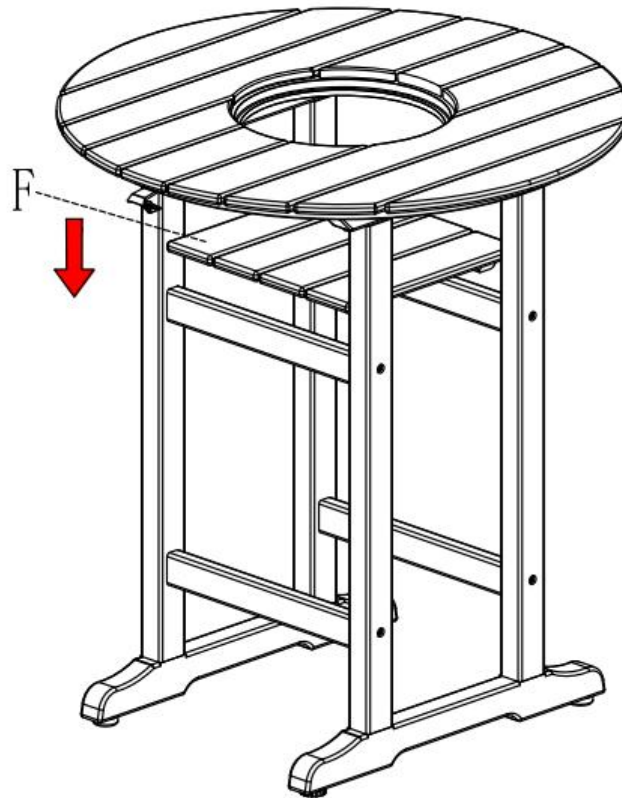


STEP8

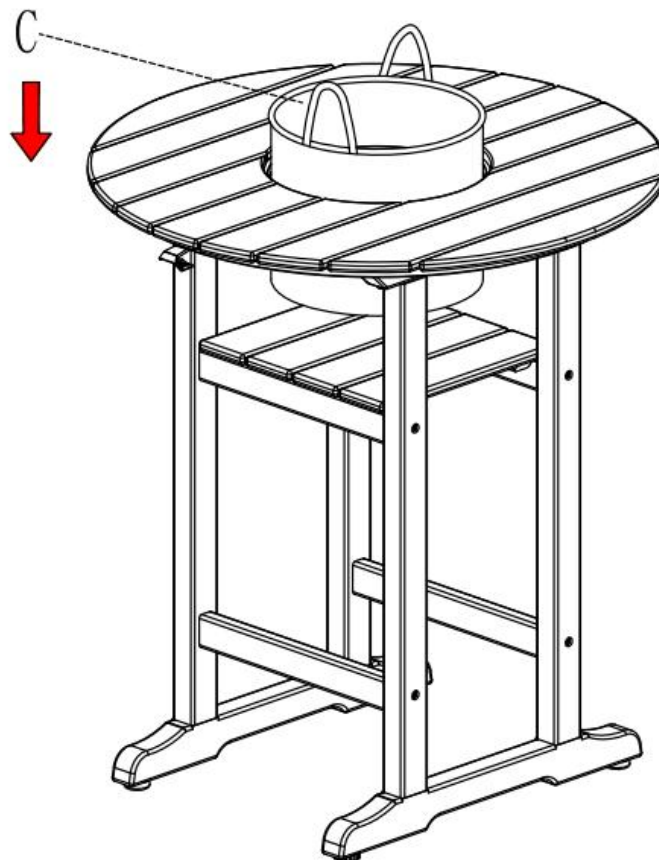

Assembly Instruction

STEP9

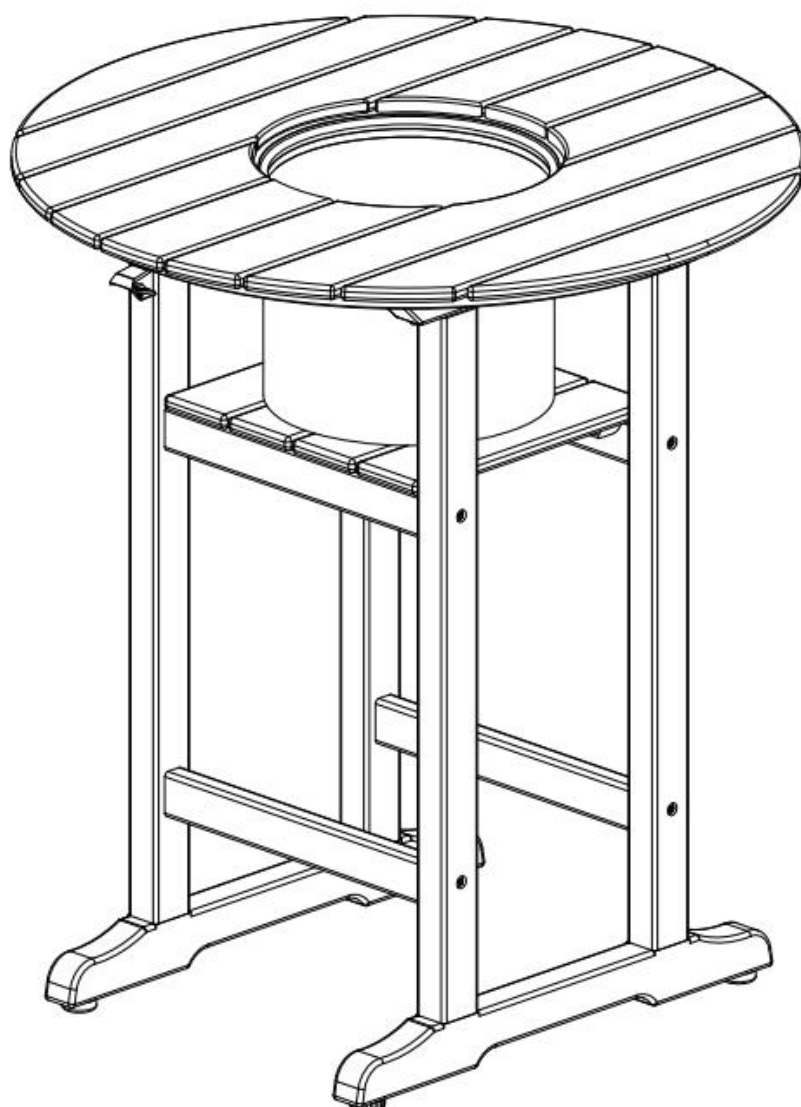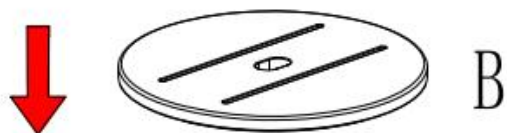

Assembly Instruction

Steps:

1. Attach the Part G&I to the Part D with Screw H6*65 (Part H665) by using the Allen Wrench (Part Y).
2. Attach the Part G&I to the Part E&D with Screw H6*65 (Part H665) by using the Allen Wrench (Part Y).
3. Attach the Part H to the assembled left and right table legs with Screw H6*65 (Part H665) by using the Allen Wrench (Part Y).
4. Attach the assembled table base to the Part A with Screw M6*55 (Part M655) and Part X by using the Allen Wrench (Part Z).
5. Place Part F under the desktop, following the Step 7.
6. Put the basket inside the table. Then you can decide for yourself whether to cover it or not.
7. Tighten all screws. Your Bar Table is ready to use. (Note: Pre-assemble all the bolts loosely but do not fully turn the bolts into their holes until all bolts are inserted in their holes.)
8. Periodically check and make sure that all screws are fully tightened.