


Platform King Bed

Assembly Instruction

Contains One Bed and Hardware



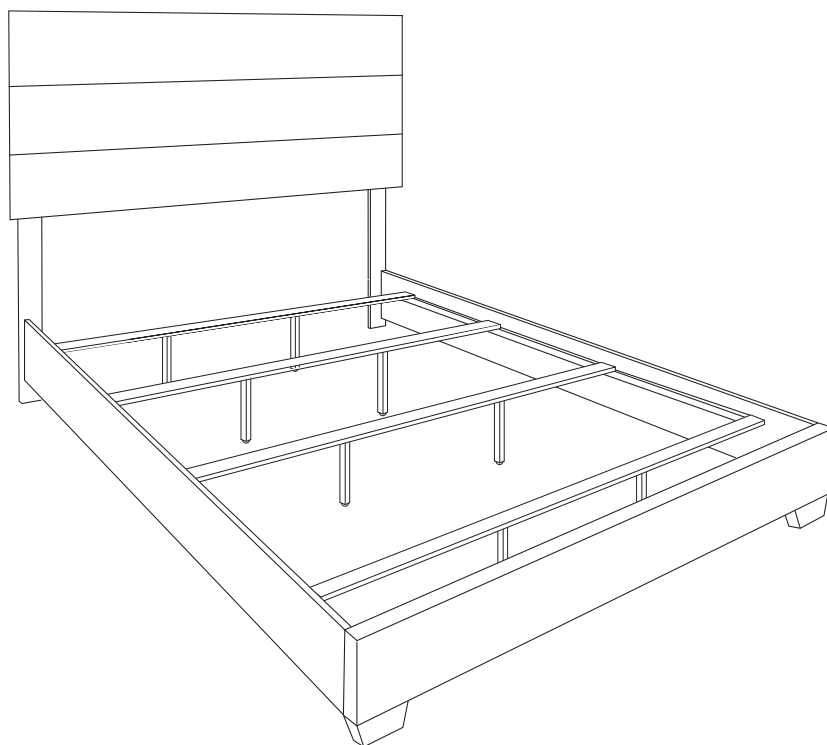


IMPORTANT NOTE:




Carefully remove all the parts from the box. Arrange on a flat surface and verify you have all of the following parts and hardware

TOOLS REQUIRED:
Phillips Screwdriver

PARTS LIST

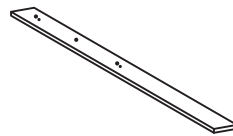A.Headboard (3 pcs)**B.Headboard Legs (2 pcs)****C.Side Rail (2 pcs)****D.Footboard (1 pc)****E.Headboard Support Wood (2 pcs)****F.Center Leg (8 pcs)****G.Footboard Legs (2 pcs)****H.Wood Slat (4 pcs)**


HARDWARE LIST

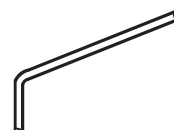1. 20mm Bolt (8 pcs)**2.Flat Washer (12 pcs)****3.Spring Washer (12 pcs)****4. 45mm Screw (4 pcs)****5. 32mm Screw (8 pcs)****6. 40mm Bolt (20 pcs)****7. Small Hex Key (1 pc)****8. Large Hex Key (1 pc)****9. 38mm Screw (4 pcs)****10. Adjuster (8 pcs)**



ASSEMBLY INSTRUCTIONS

STEP 1

Attach headboard leg(Part B) and headboard support wood(Part E) to the headboard(Part A) using twelve 40mm bolts(Part 6), twelve spring washer(Part 3) and twelve flat washers(Part 2). Use small hex key(Part 7) to tighten.

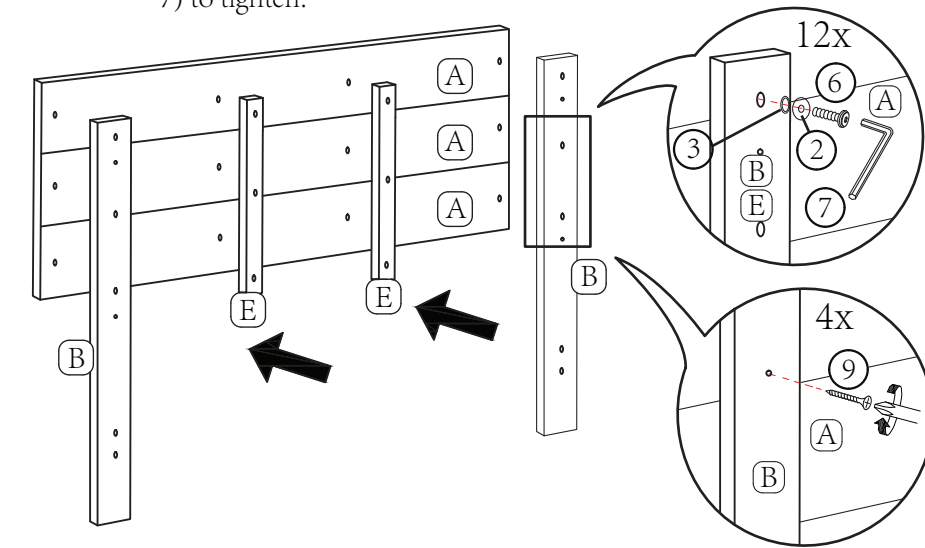



Attach the 38mm screw(Part 9) to the headboard leg(Part B) using Phillips Head Screwdriver(Not provided). Secure tightly.

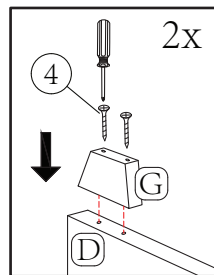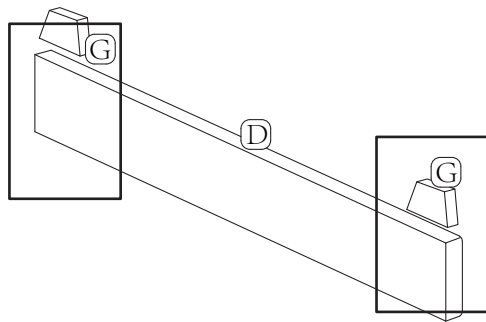

Attach the footboard legs(Part G) to the footboard(Part D) using two 45mm screw(Part 4) and Phillips head Screwdriver(Not provided). Secure tightly.

STEP 2

Attach the eight 20mm bolts(Part 1) to the headboard leg (Part B) and footboard(Part D) using the large hex key (Part 8). Do Not tighten.

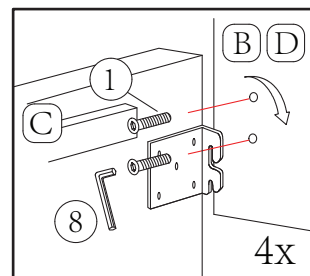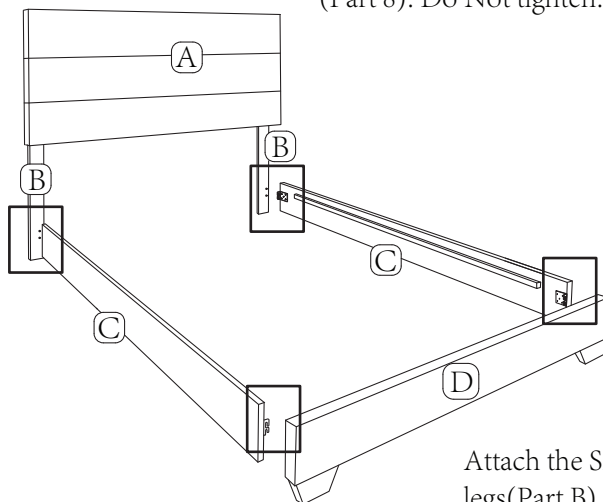


Attach the Side Rails(Part C) to the headboard legs(Part B) and the footboard(Part D). Secure tightly using the large hex key(Part 8).

ASSEMBLY INSTRUCTIONS

STEP 3

Attach the center legs(Part F) to the wood slats(Part H) using 40mm bolt(Part 6) and small hex key(Part 7) to tighten.

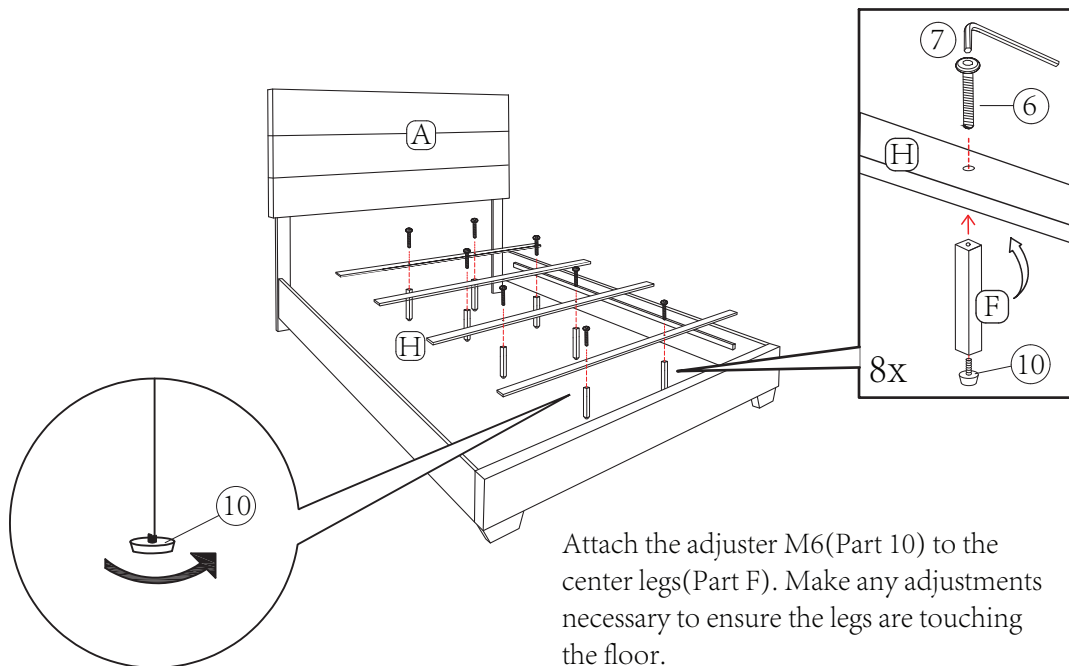

Attach the adjuster M6(Part 10) to the center legs(Part F). Make any adjustments necessary to ensure the legs are touching the floor.

STEP 4

Place the wood slat(Part H) into the bed as shown. Secure the wood slat to the Side Rail(Part C) using eight Screws 32mm(Part 5) and a Phillips head Screwdriver(Not provided). Your bed is now set up and ready for use.

