
INSTRUCTION MANUAL





PF-75	1524X1524MM	60"X60"
	1219X1930MM	48"X76"
	1524X1930MM	60"X76"

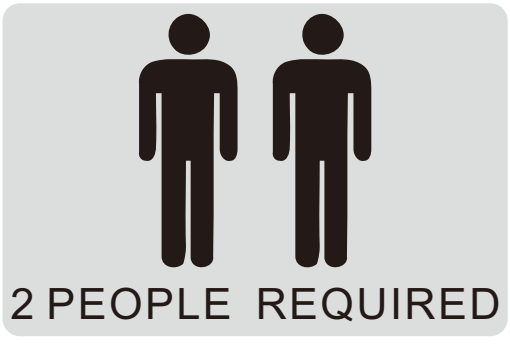

Please keep this manual and product code number for future reference and for ordering replacement parts if necessary.

GENERAL INSTRUCTIONS

Read this manual carefully and completely before proceeding.

.It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

If your shower door is to be installed over ceramic tiles,the tiles should lay completely under the wall jamb.Silicone ·should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

.Caulking: no sealant is required inside the shower,unless otherwise stated.

.Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR

Never use scouring powder pads or sharp instruments on metal pieces or glass panels.

An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels and aluminum parts looking new.


.We recommend wiping the glass panels with a squeegee after each use.


Product specifications are subject to change without notice

CHOOSEA CONFIGURATION







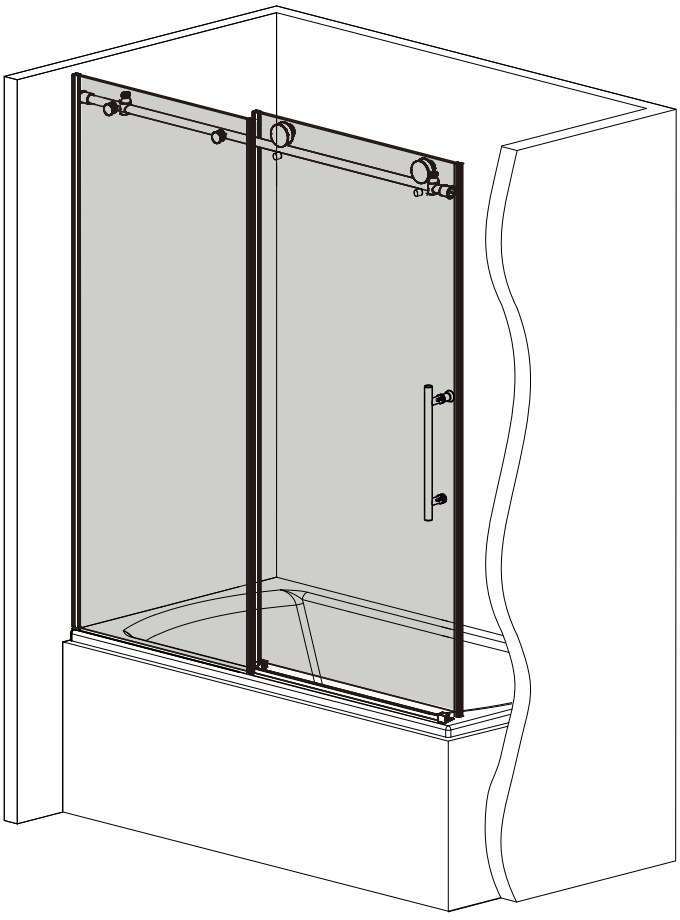














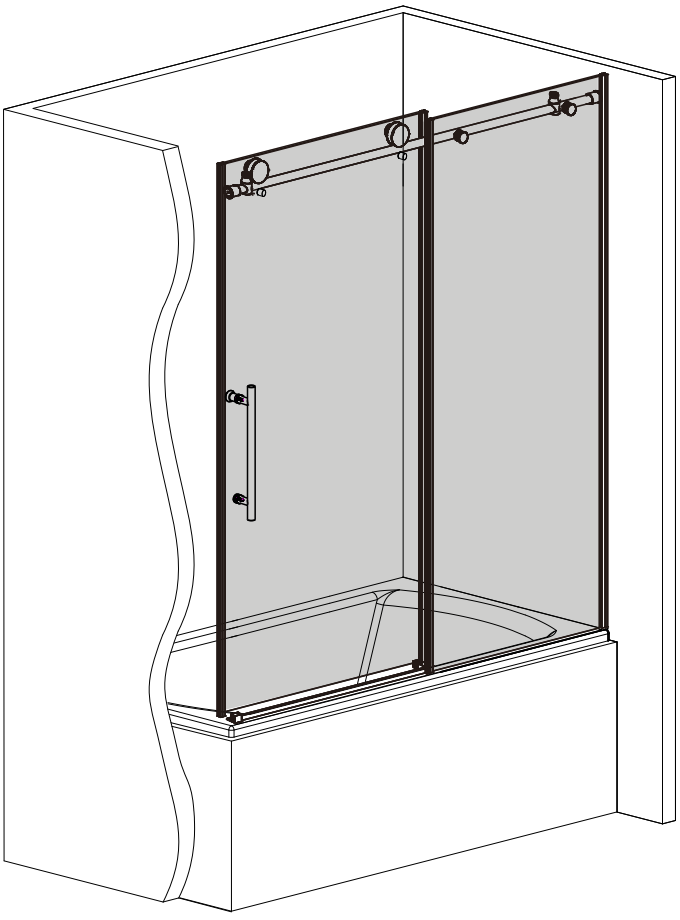


PARTS LISTING

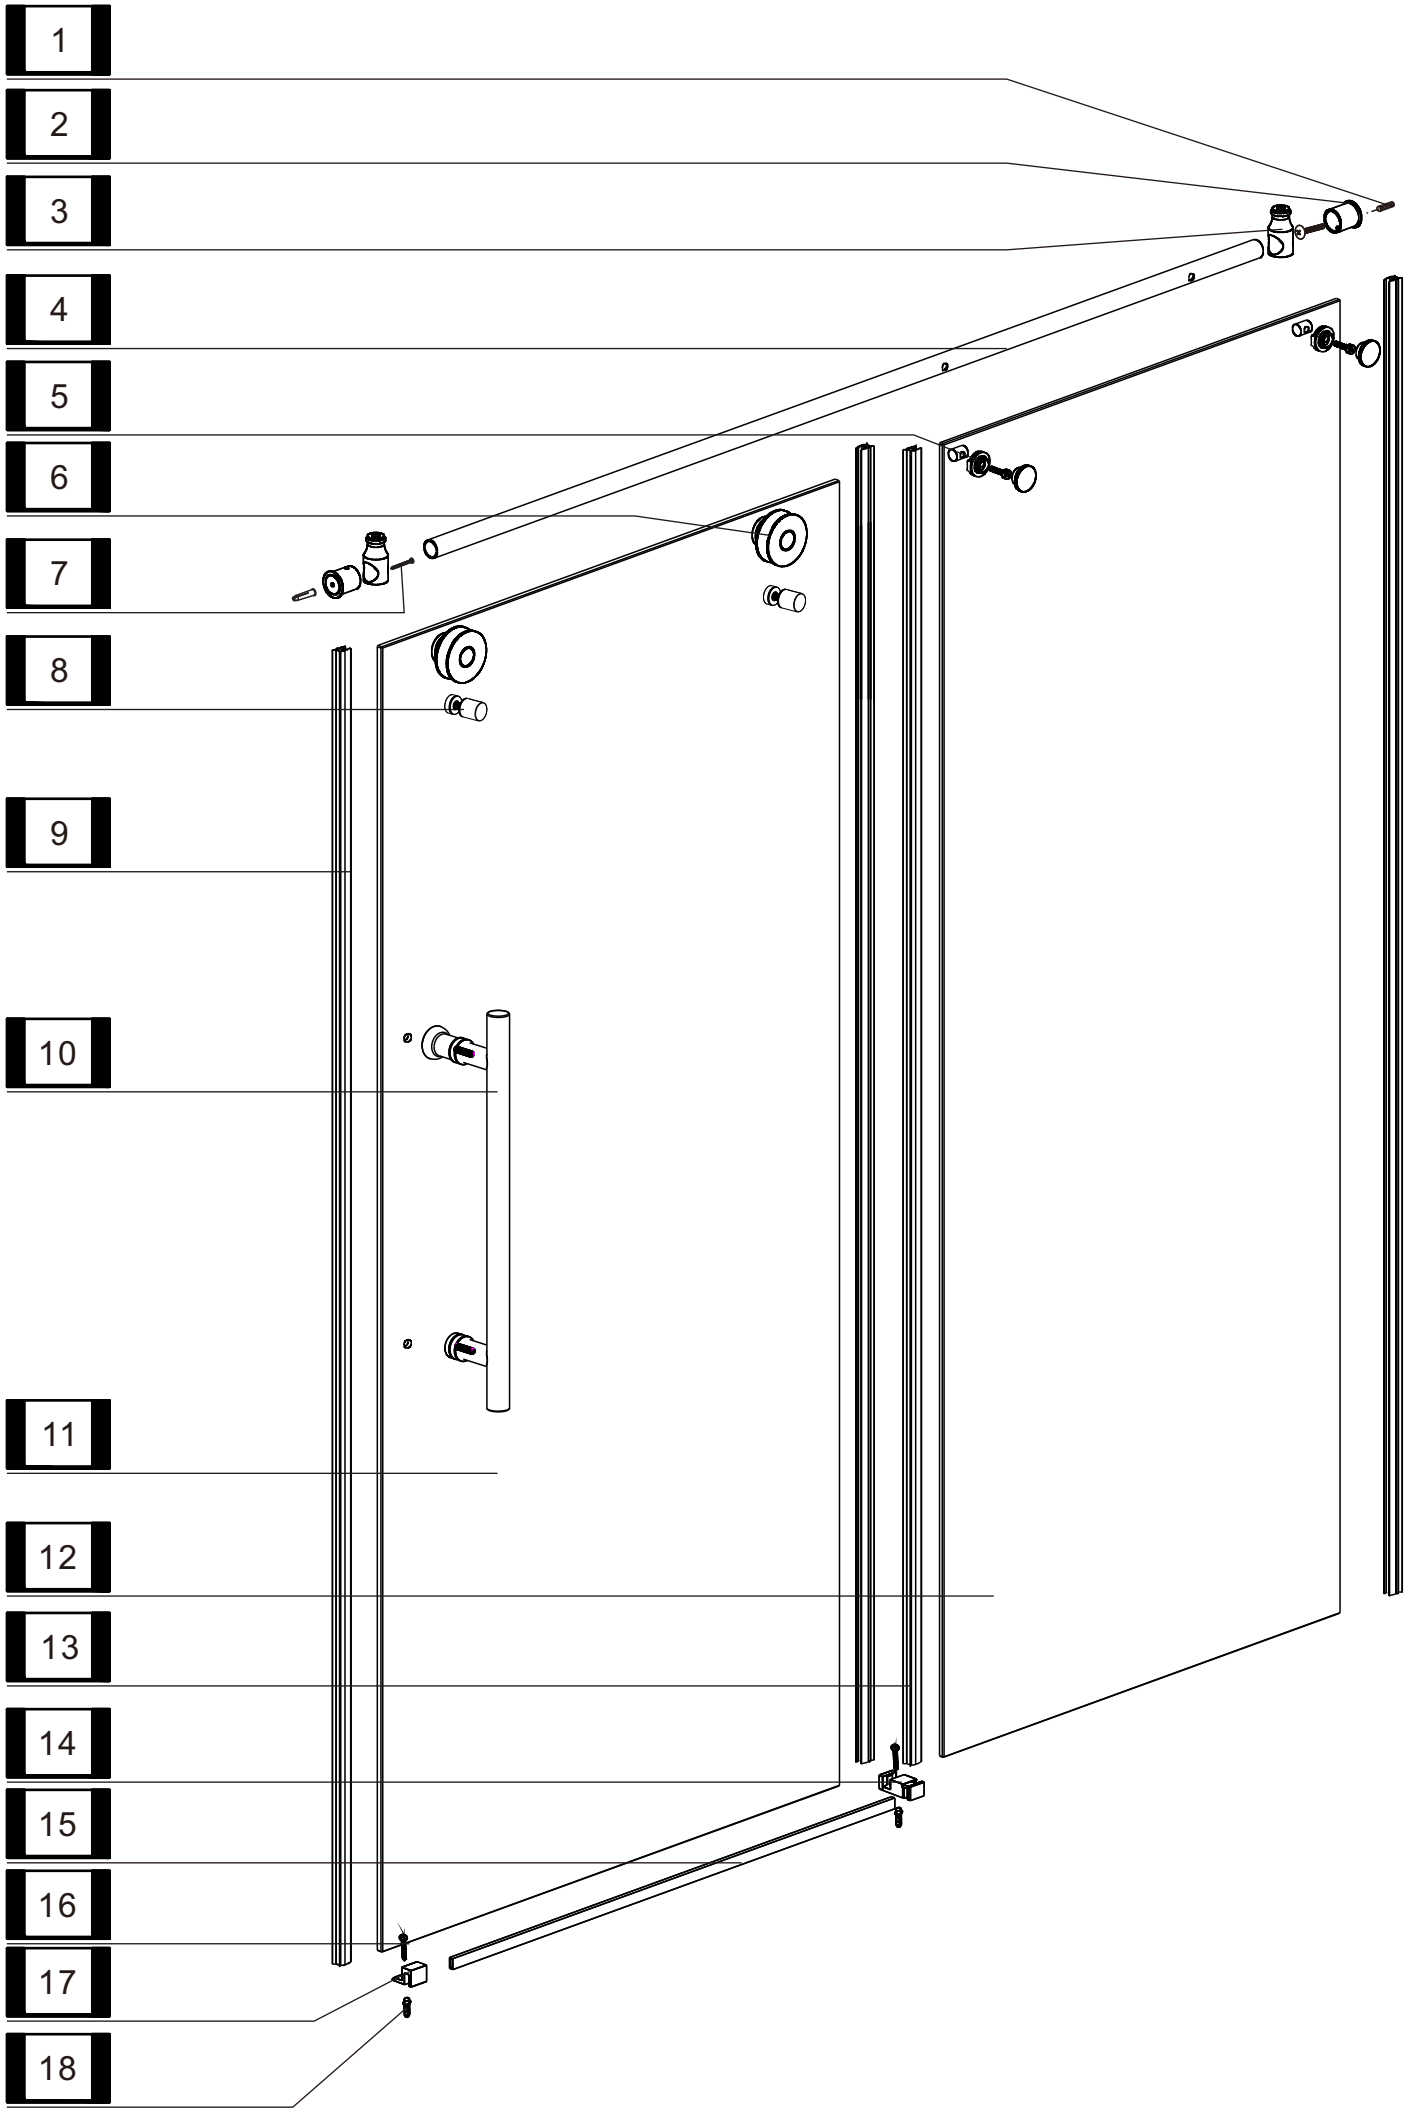


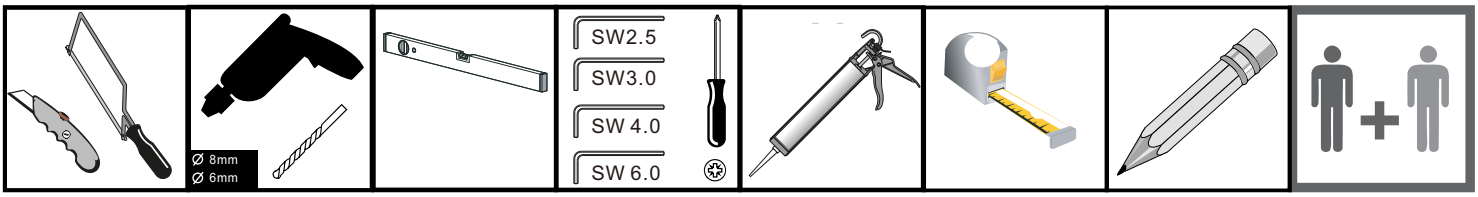


◆ Box Contents


Item	Prats	Photo	Qty
1	Wall Anchor (Ø8mm)		2
2	Stainless Steel Wall Bracket		2
3	Stainless Steel Positioning Block		2
4	25mm Round Track		1
5	Fixed Glass Clamp Set		2
6	Roller		2
7	Flat Head Screw (5×35mm)		2
8	Glass Anti-Jump Clip		2
9	Waterproof Sealing Gasket		2
10	Stainless Steel Pull Handle		1
11	Movable Glass Panel		1
12	.Fixed Glass Panel		1
13	F-Shaped Water Barrier		2
14	Sliding Door Bottom Guide		1
15	Bottom Water Guide		1
16	Flat Head Screw (4×30mm)		2
17	Bottom Water Guide Bracket		1
18	Wall Anchor (Ø6mm)		2

1

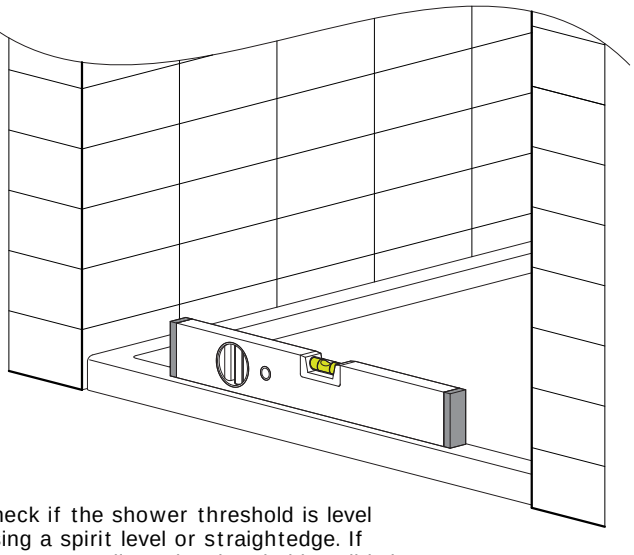

Check if the shower threshold is level using a spirit level or straightedge. If necessary, adjust the threshold until it is perfectly level

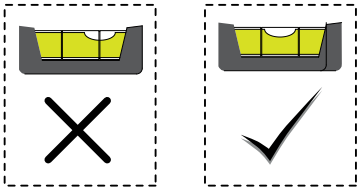


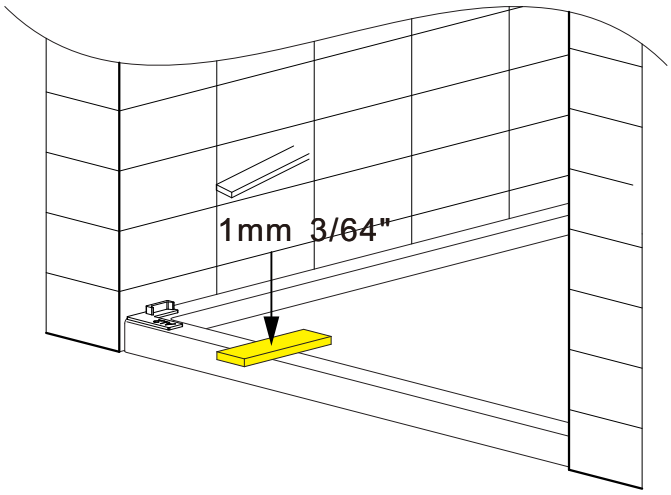





If it is not level, adjust the threshold until it is perfectly level.

1.1

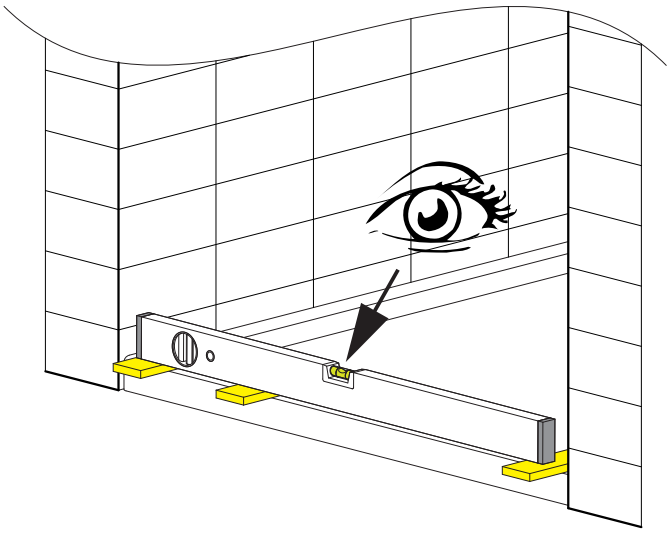


The threshold must be perfectly level

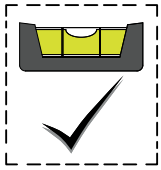


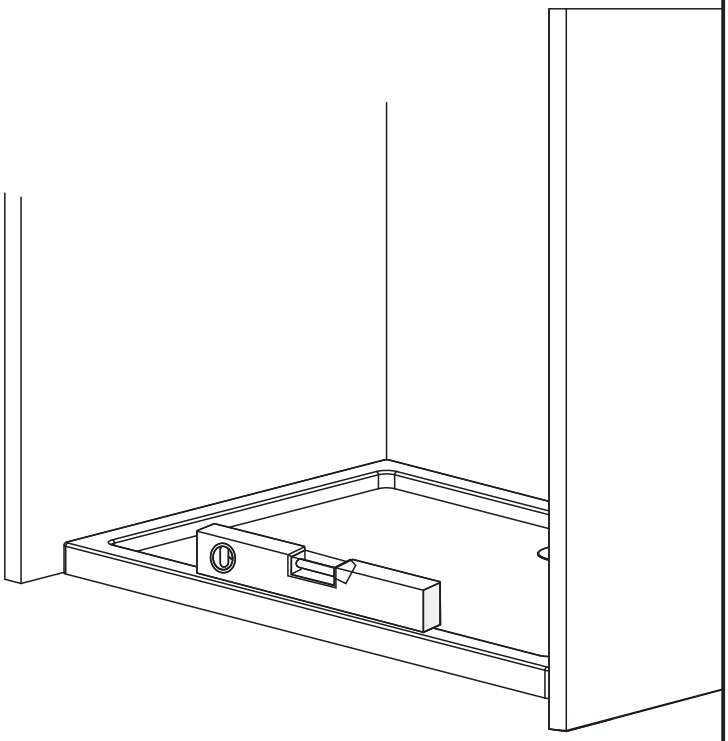



2 Installing the Head Rail Wall Kit

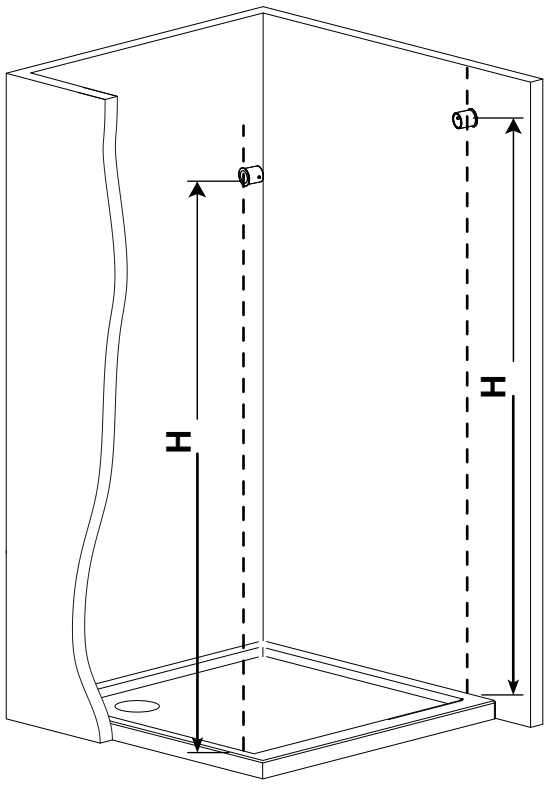


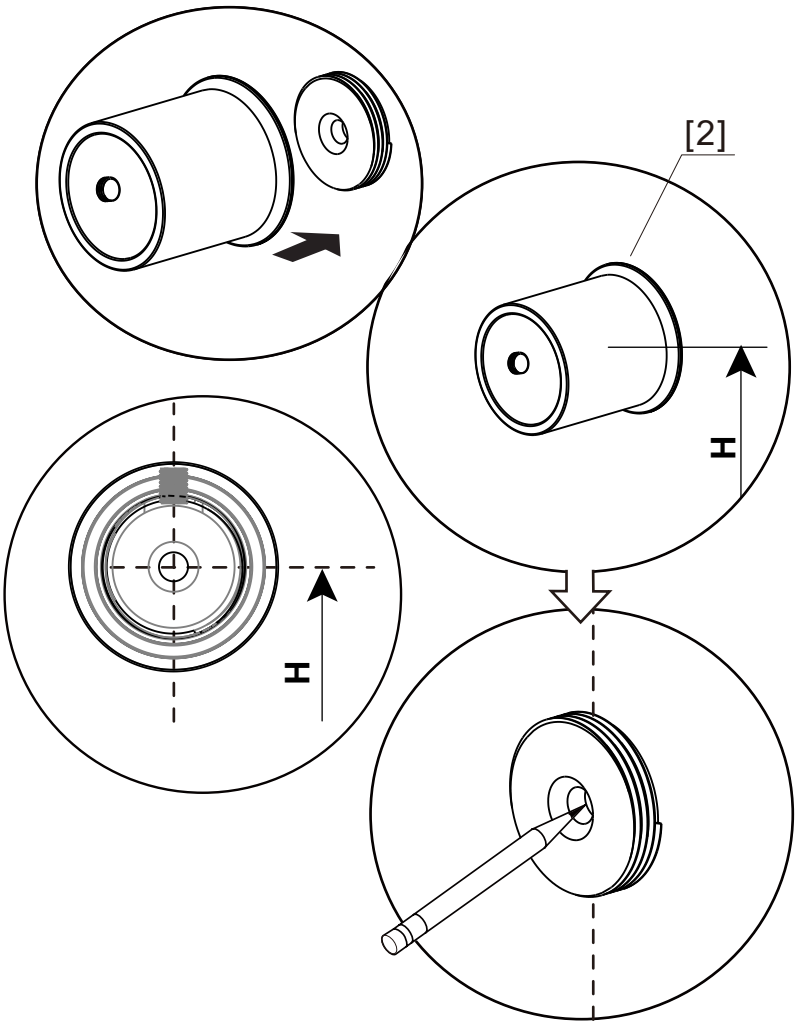


OK

Mark the center hole with a pencil


3

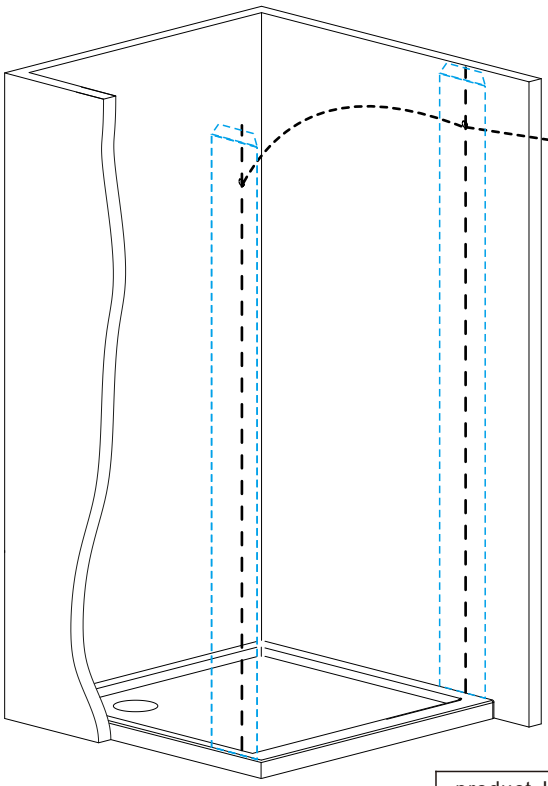

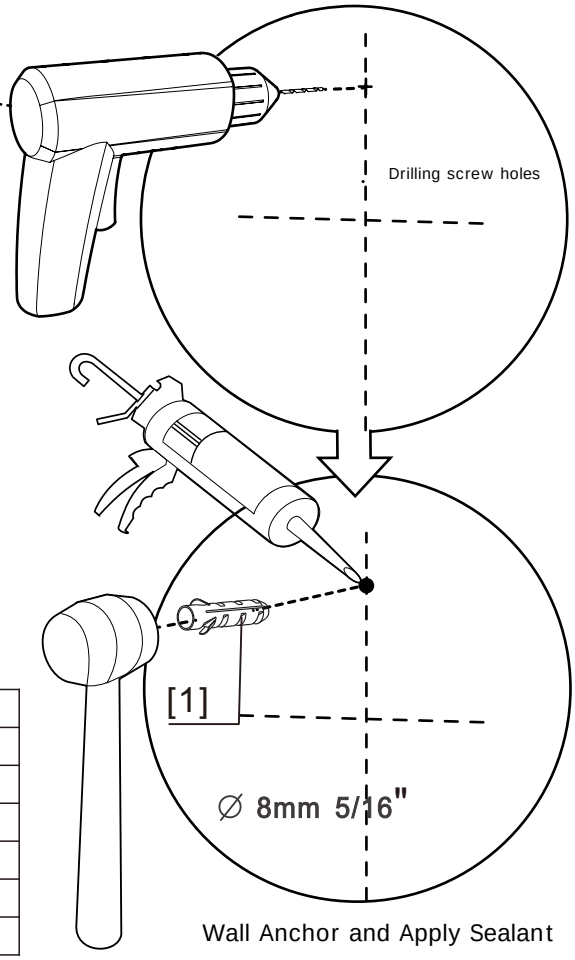


product Height"	Header Height"
(60")	56-1/4"
(66")	62-1/4"
(72")	68-1/4"
(76")	72-1/4"
(79")	75-1/4"
(84")	80-1/4"

Wall Anchor and Apply Sealant

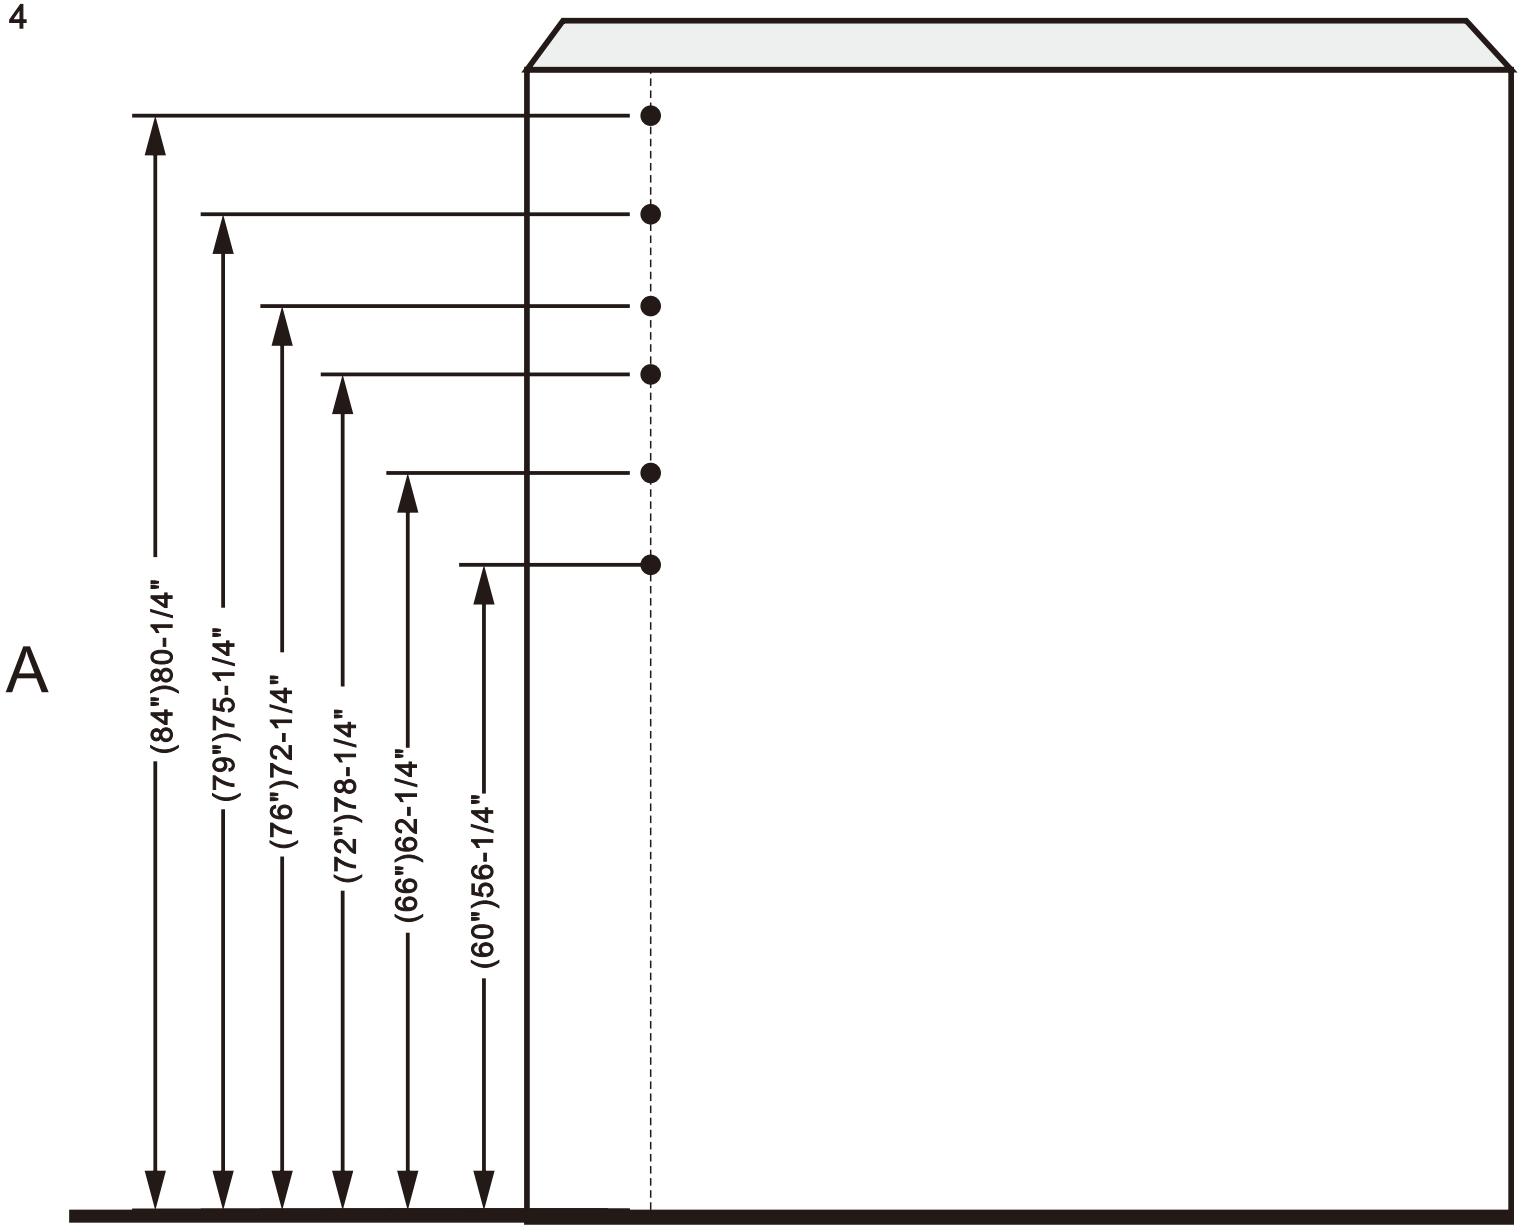


product Height"	Header Height"
(60")	56-1/4"
(66")	62-1/4"
(72")	68-1/4"
(76")	72-1/4"
(79")	75-1/4"
(84")	80-1/4"

5

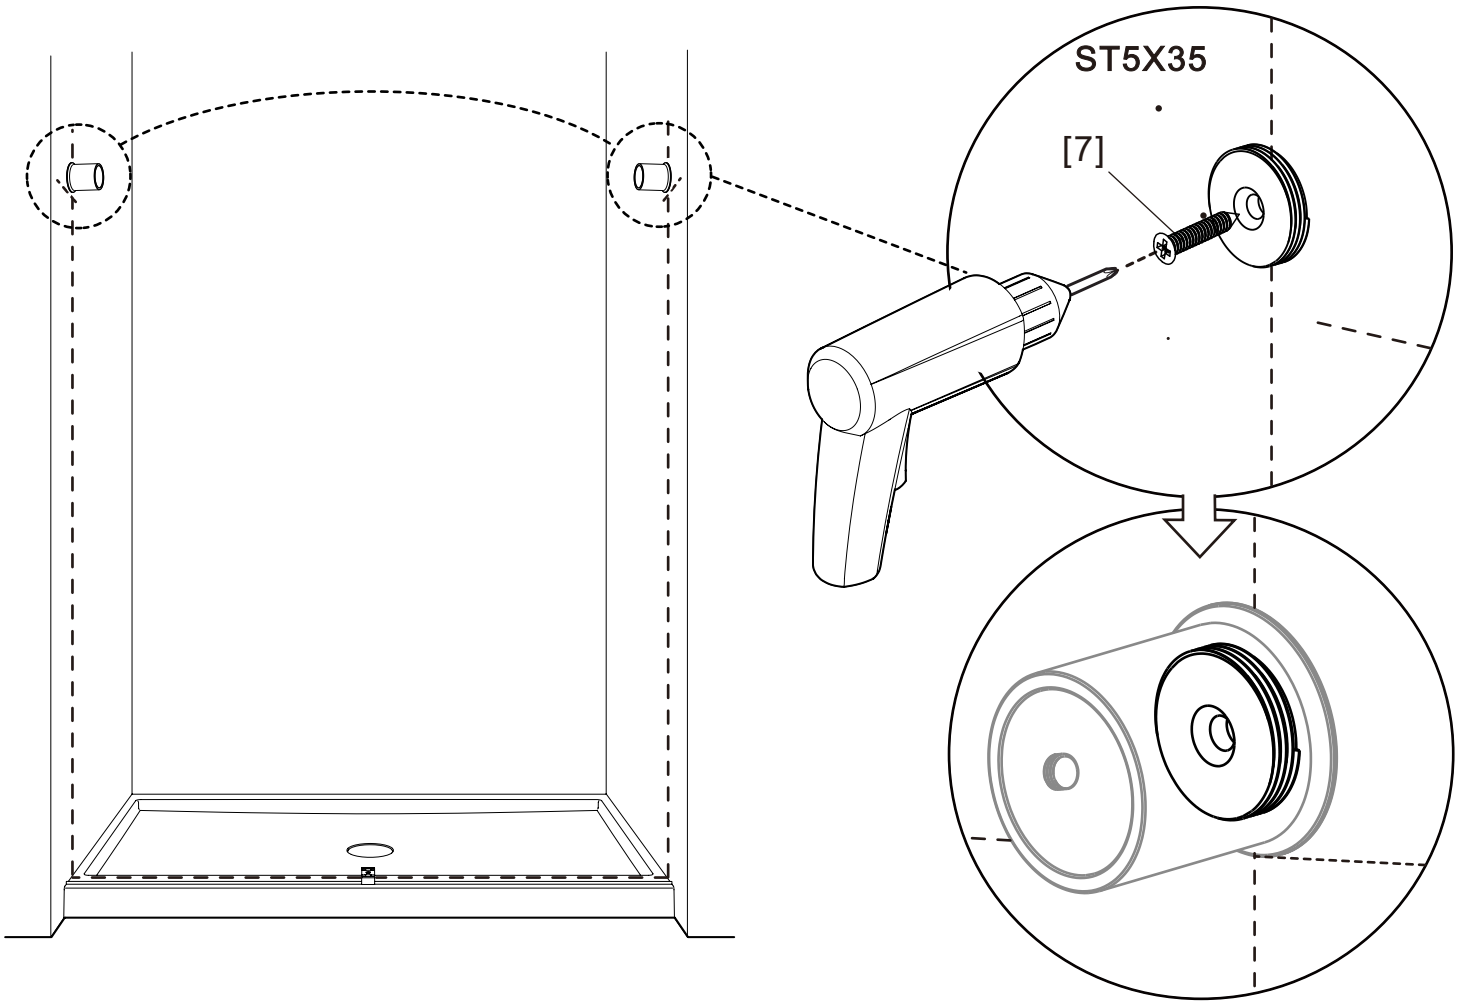

6

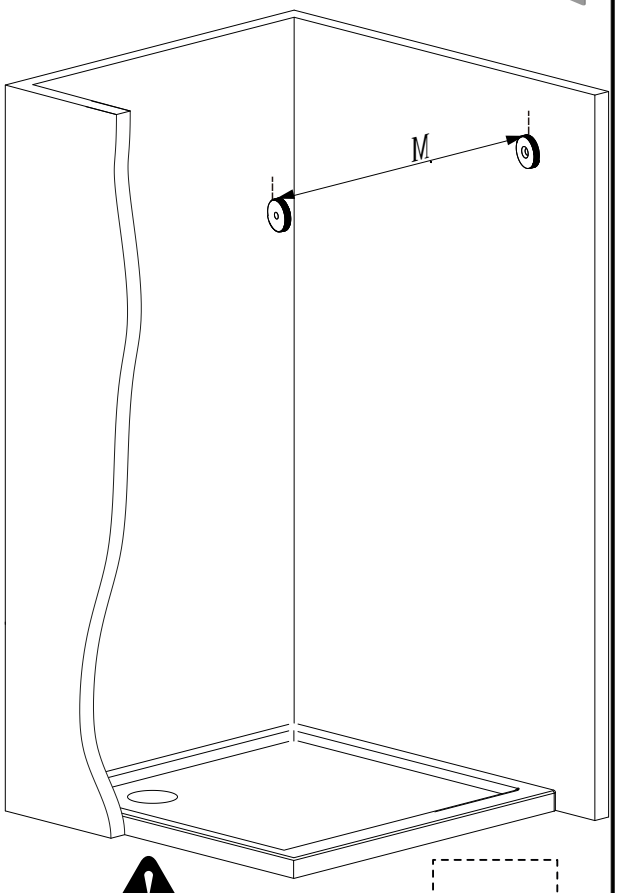


Make sure the walls and foundation are level and vertical

5.1


Measure and cut the head rail accessory [6] to fit your installation space.

Note: Only cut the end facing the sliding glass (D2).


Do NOT cut the end facing the fixed glass panel (D1)

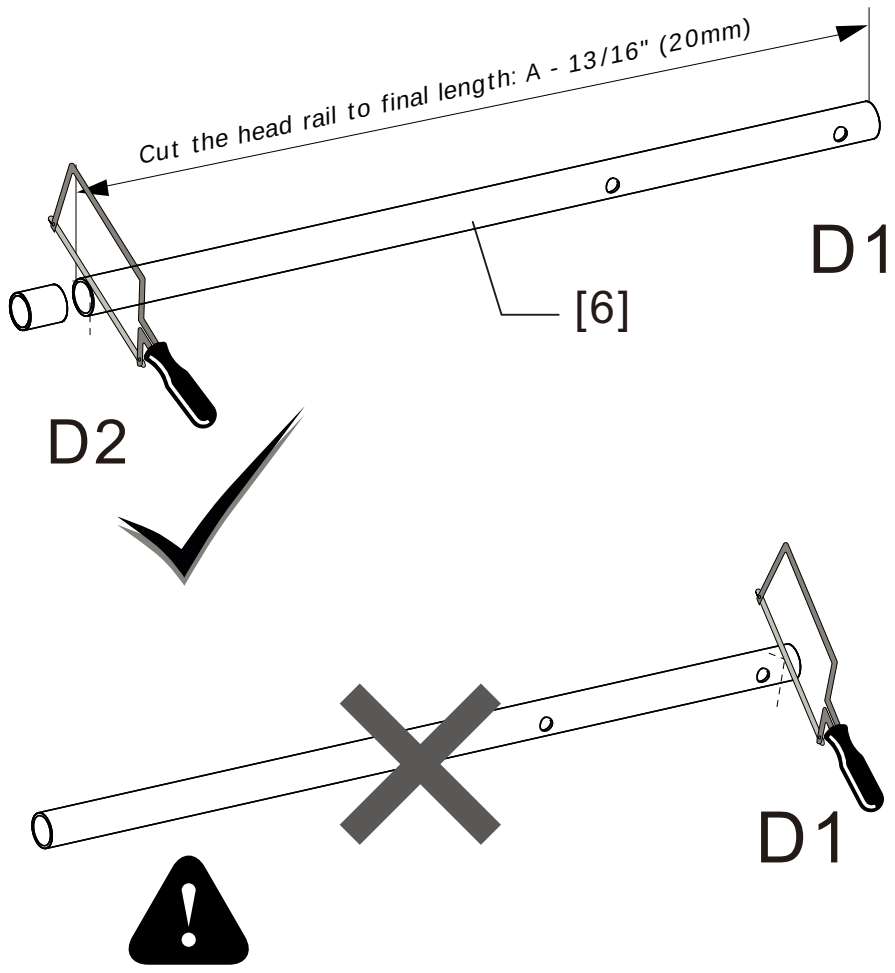


7

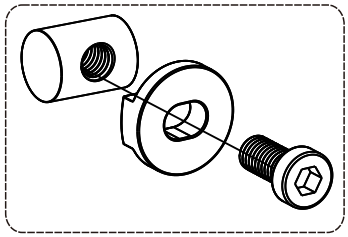


7.1

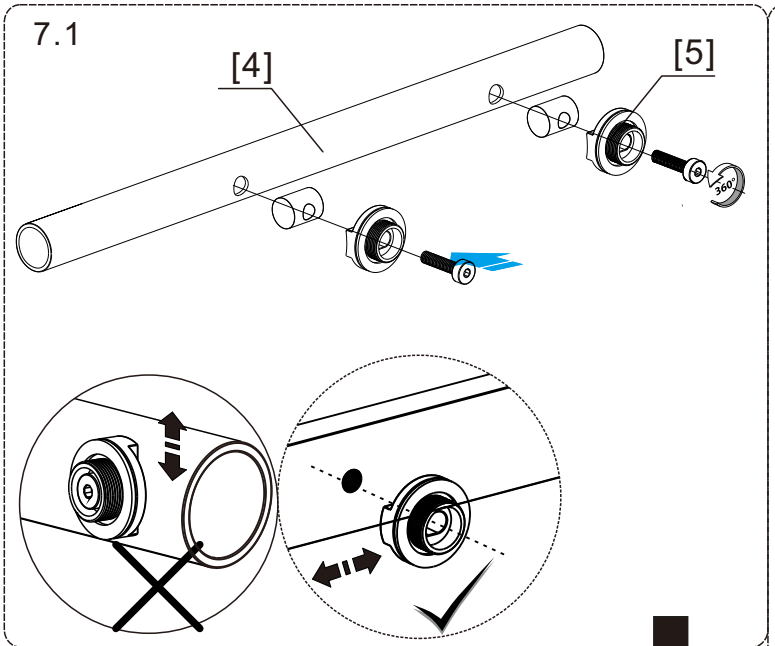


7.2

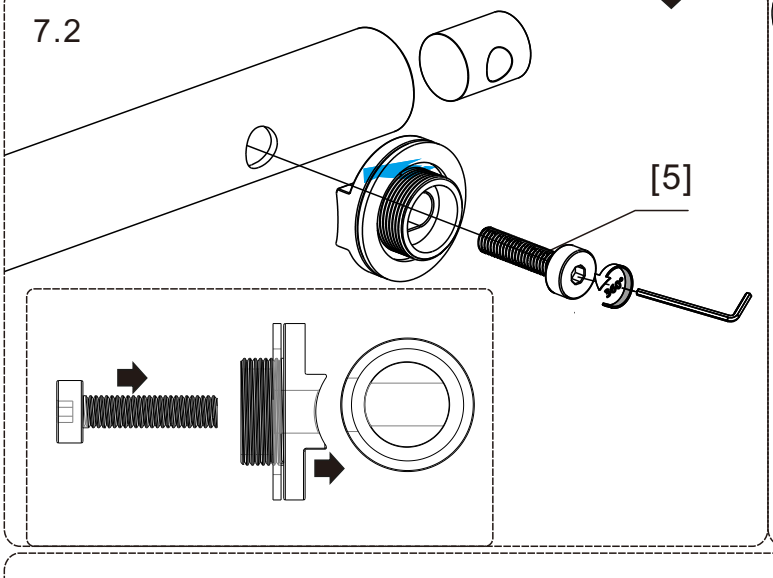


7.3

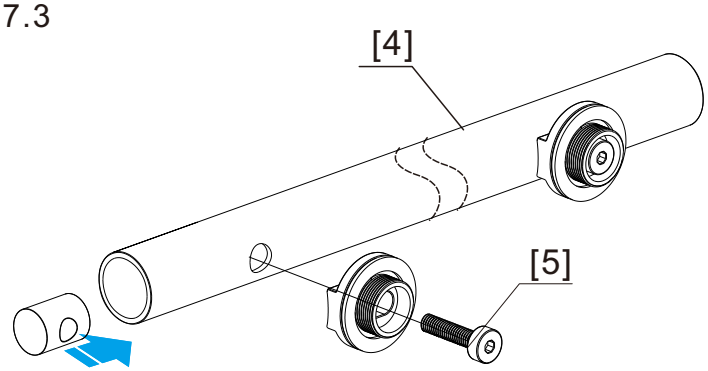


7.4

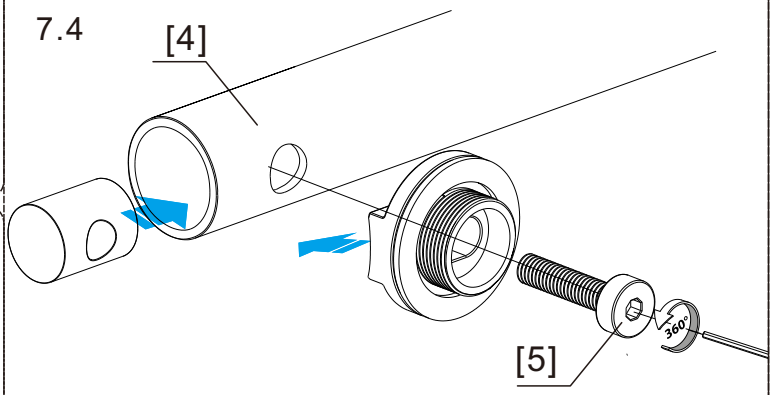


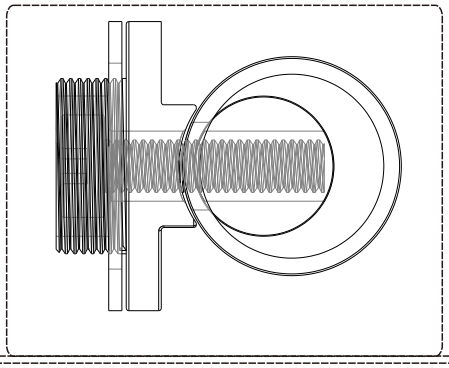


7.5

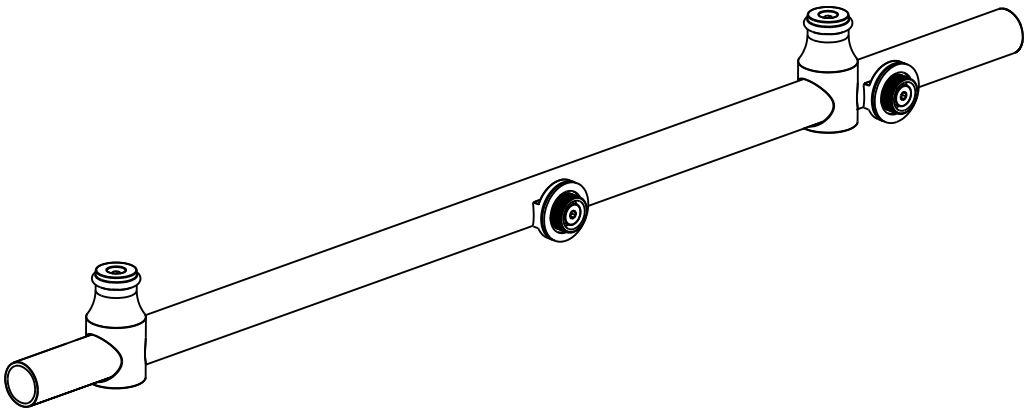


8

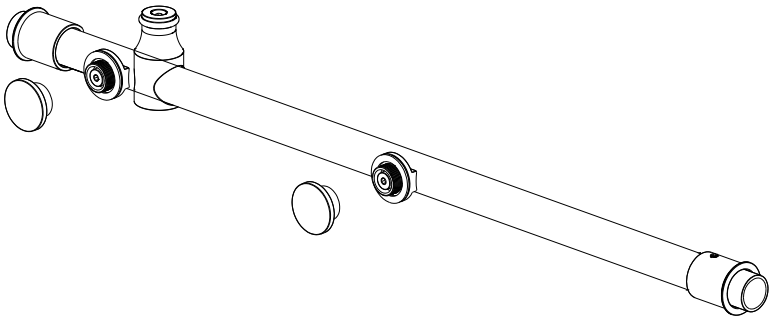


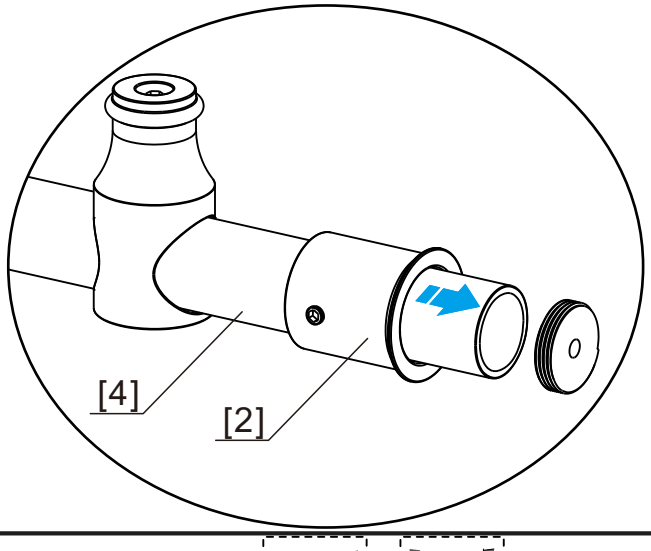

8.1

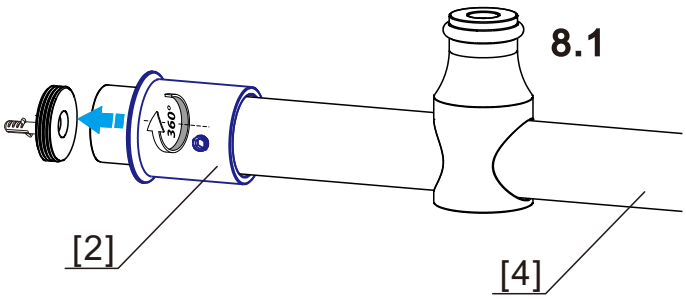



8.2

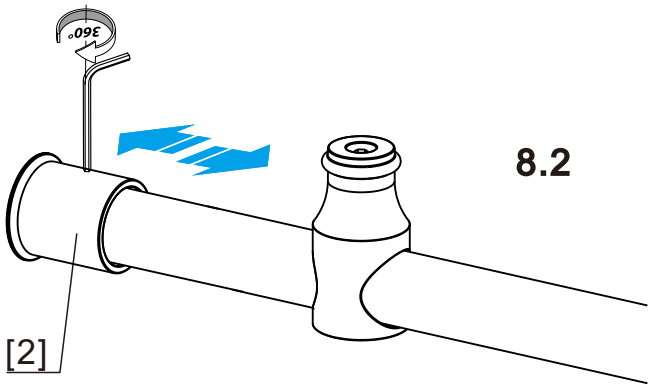



OK

9

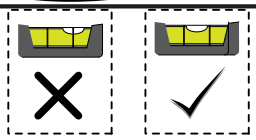

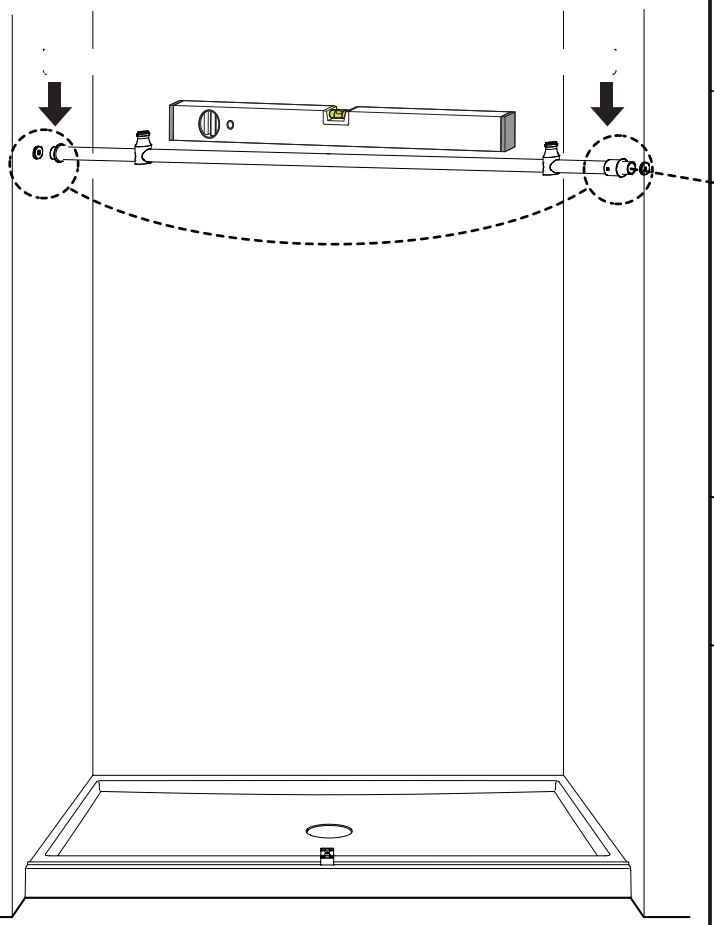


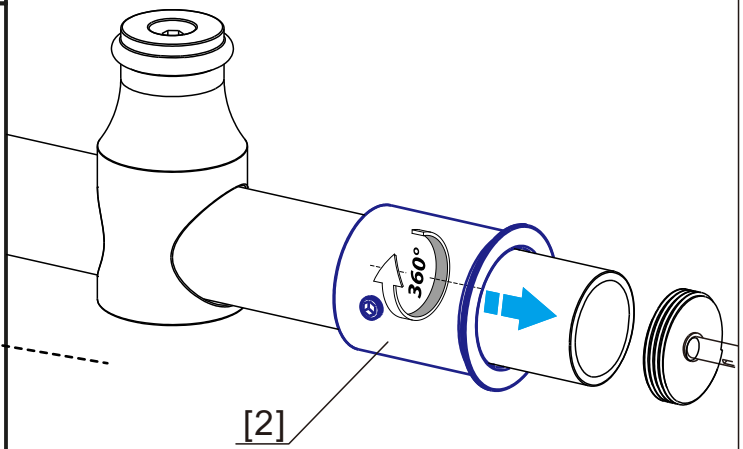

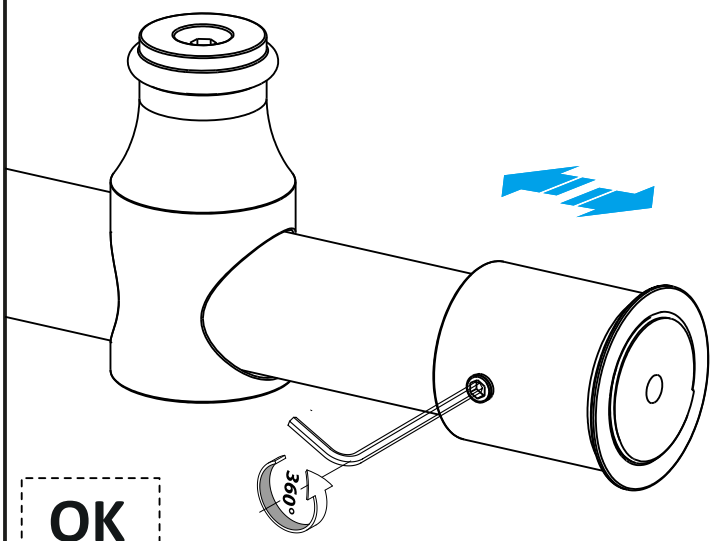


OK


10

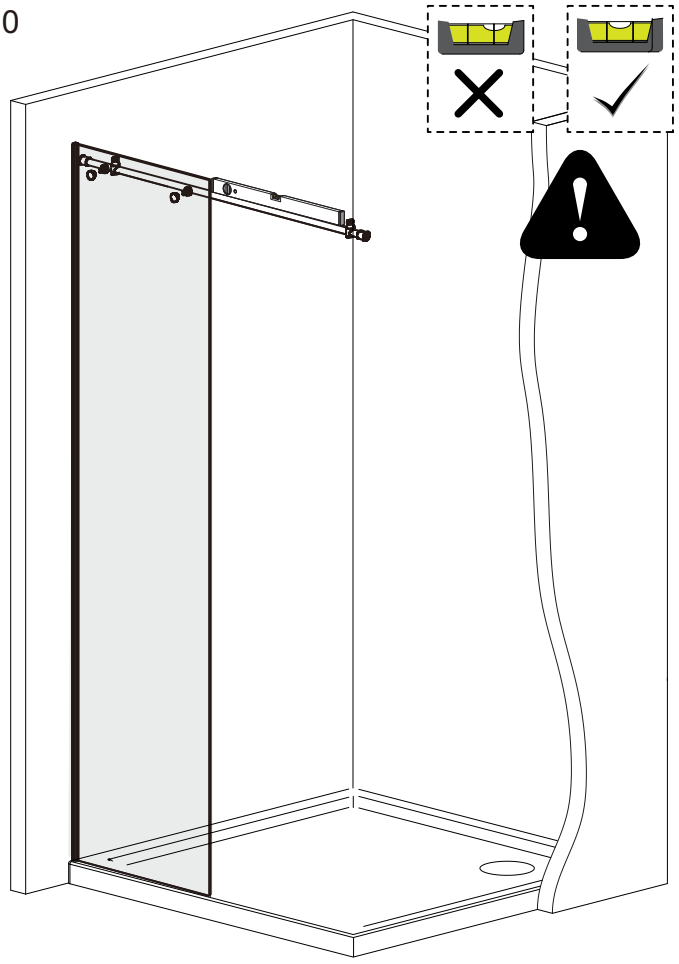


10.1

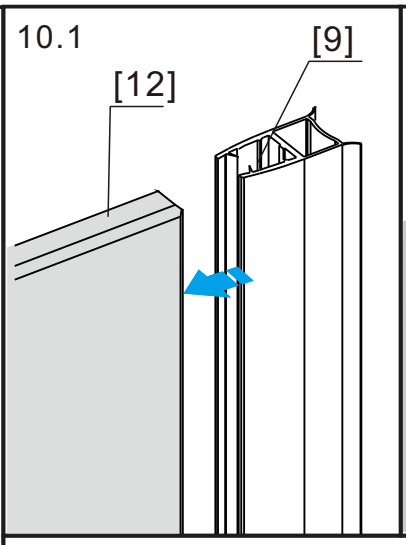


10.2

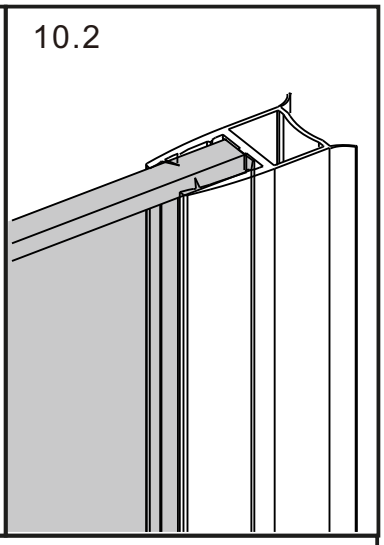


10.3

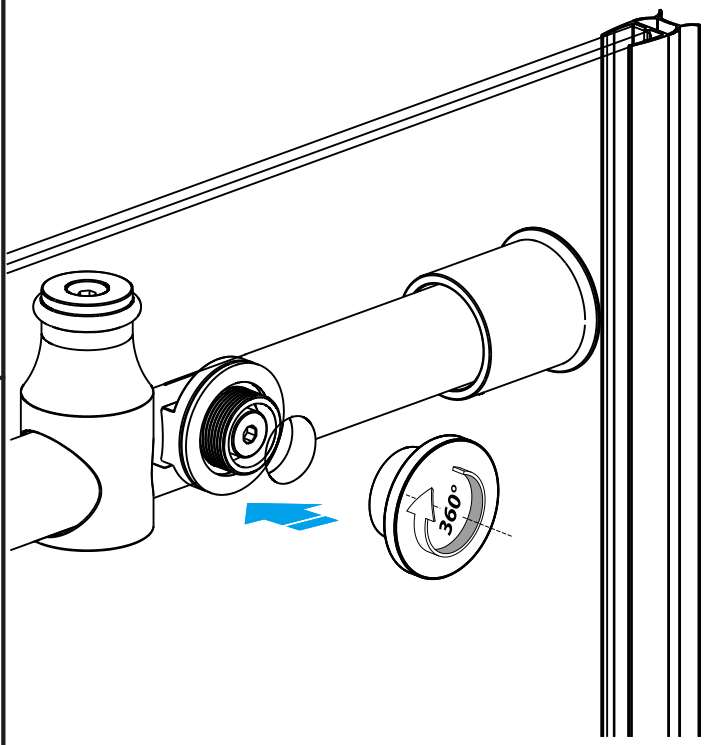


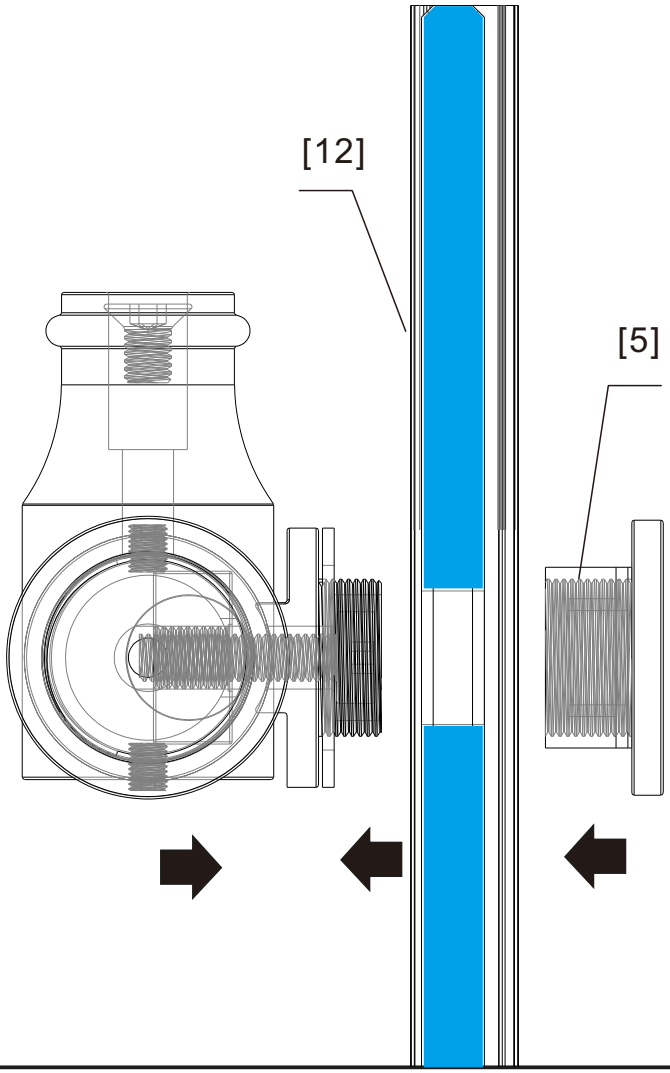


10.4

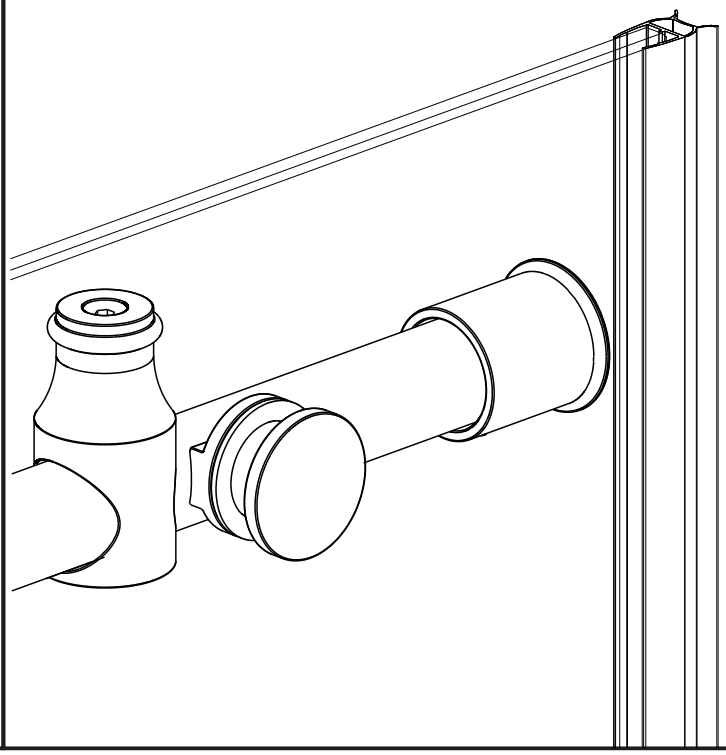


11

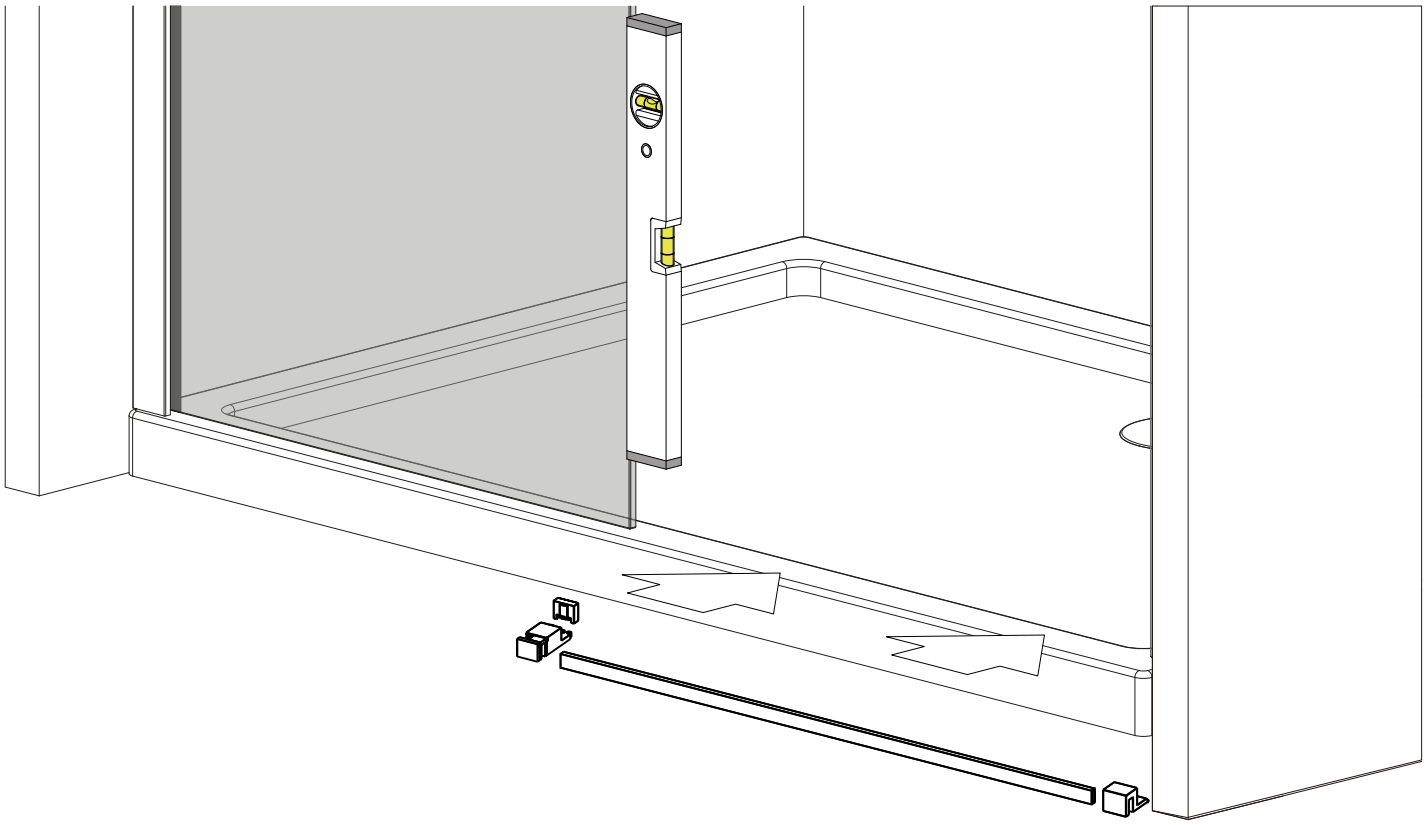



11.1

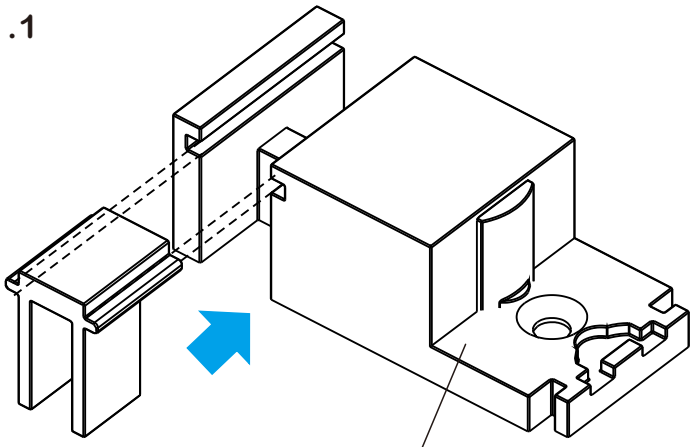

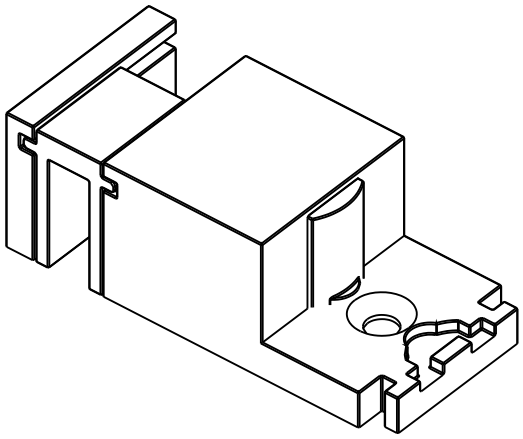


11.2

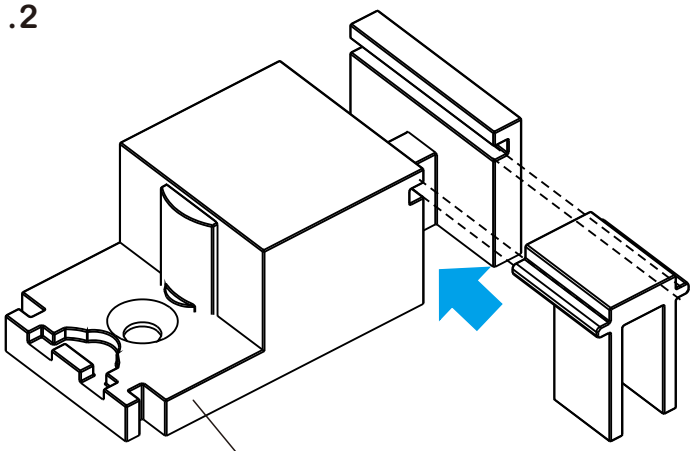

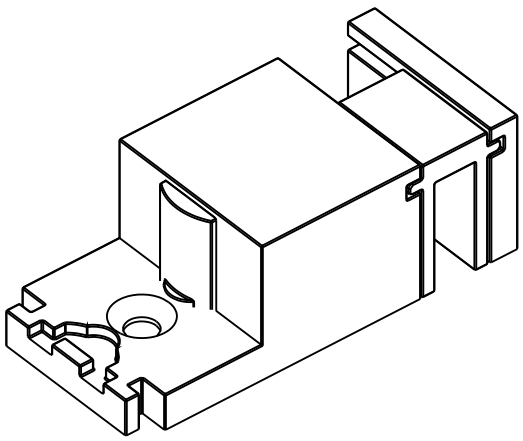


11.3

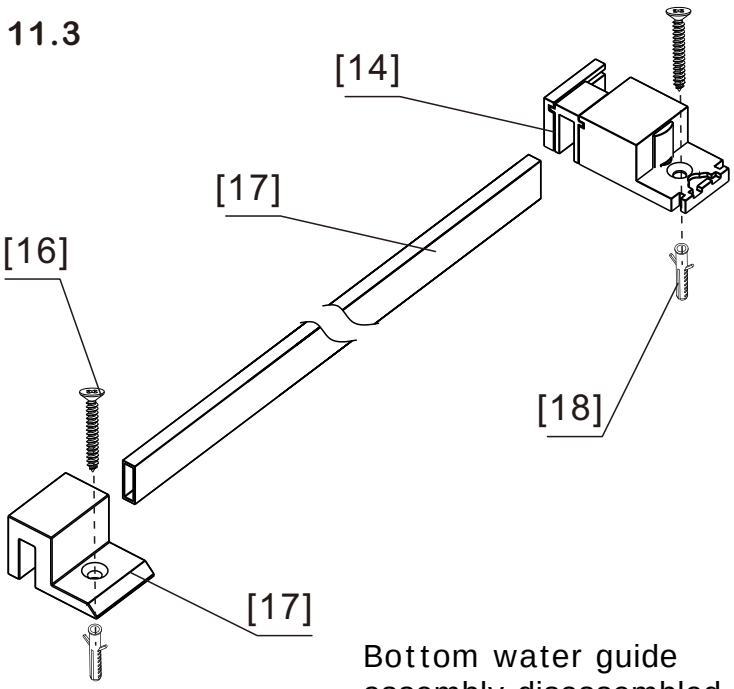


Bottom water guide assembly disassembled

11.4

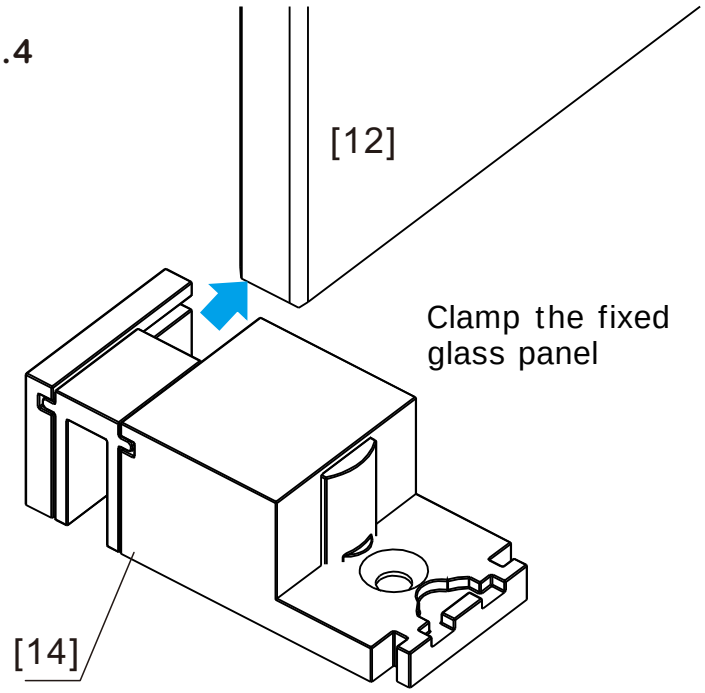


Clamp the fixed glass panel


11.5

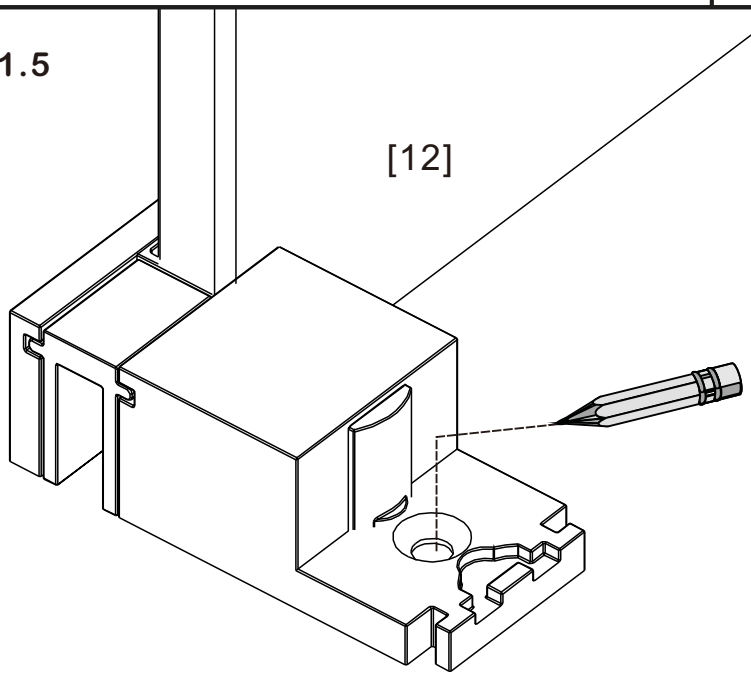

11.6

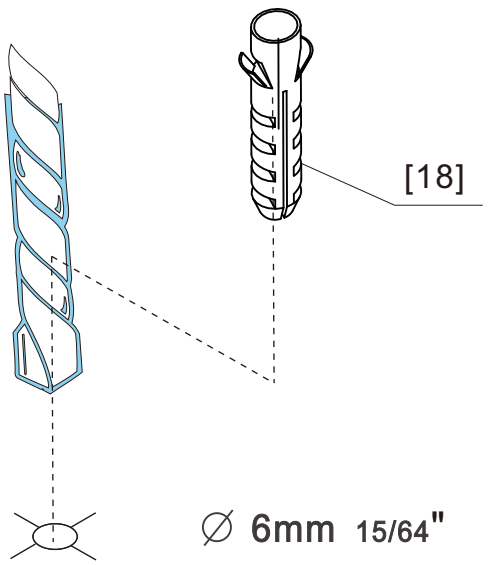


11.7

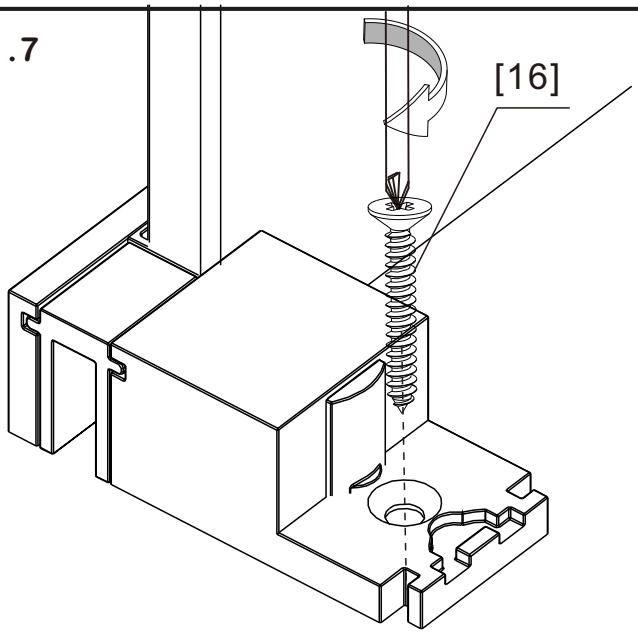


ST4X30


11.8

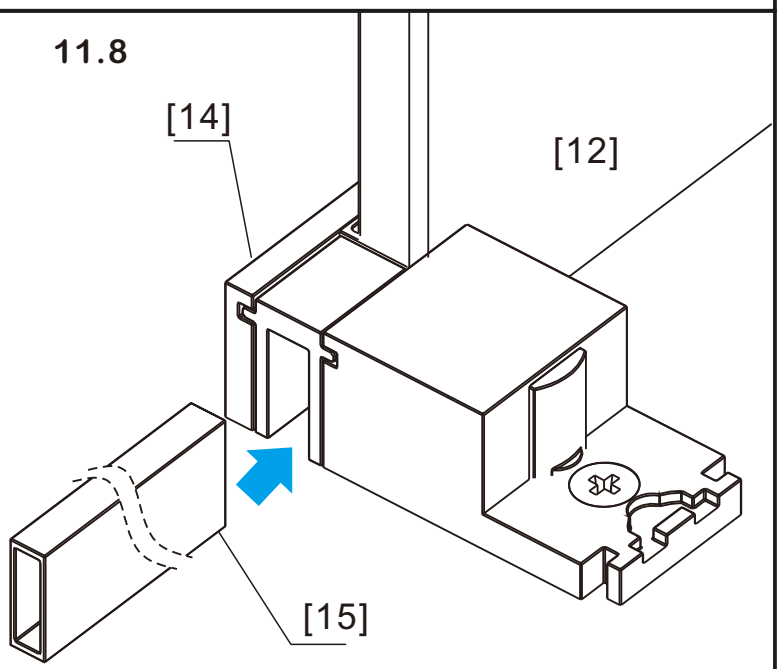


11.9

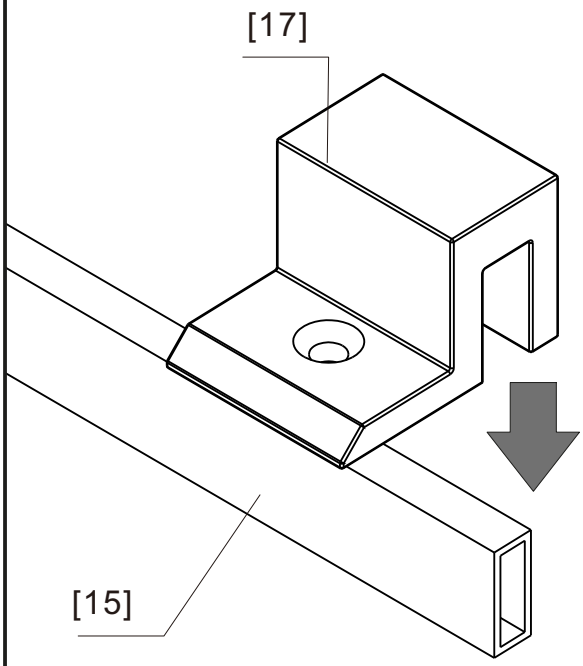


11.10

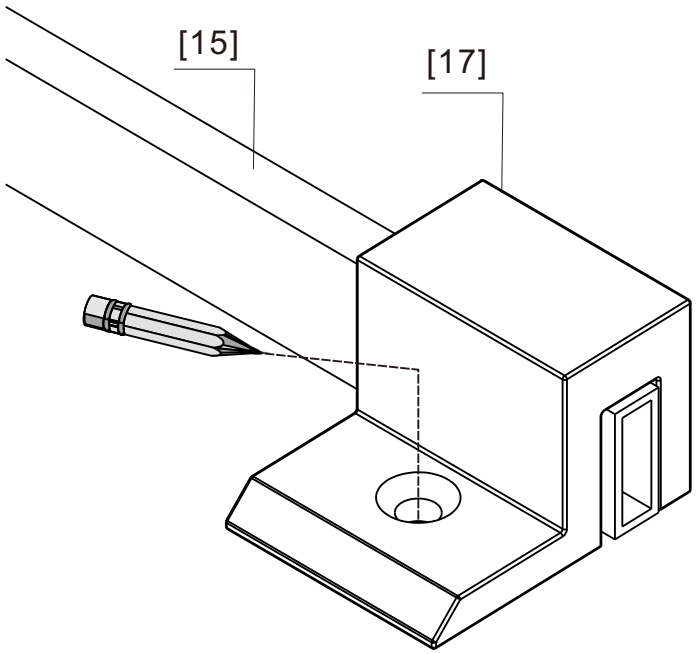

11.11

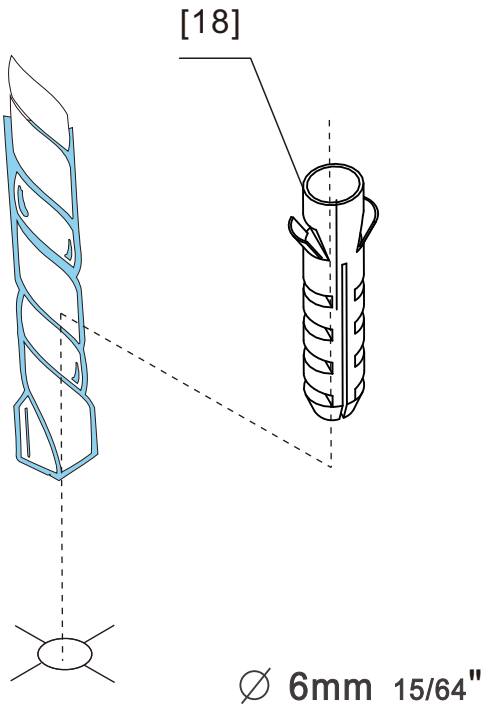


11.12

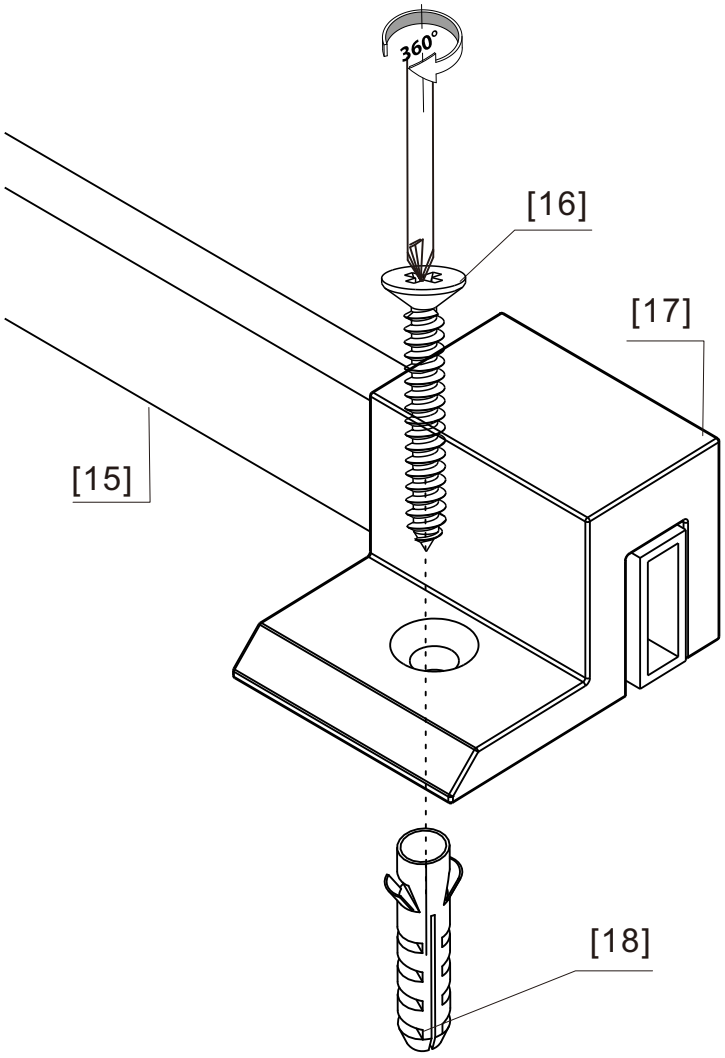


ST4X30


12

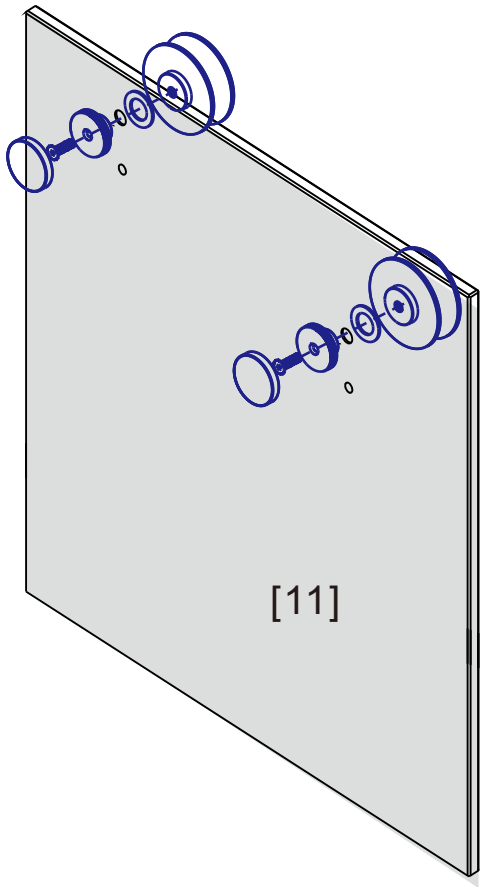


12.2

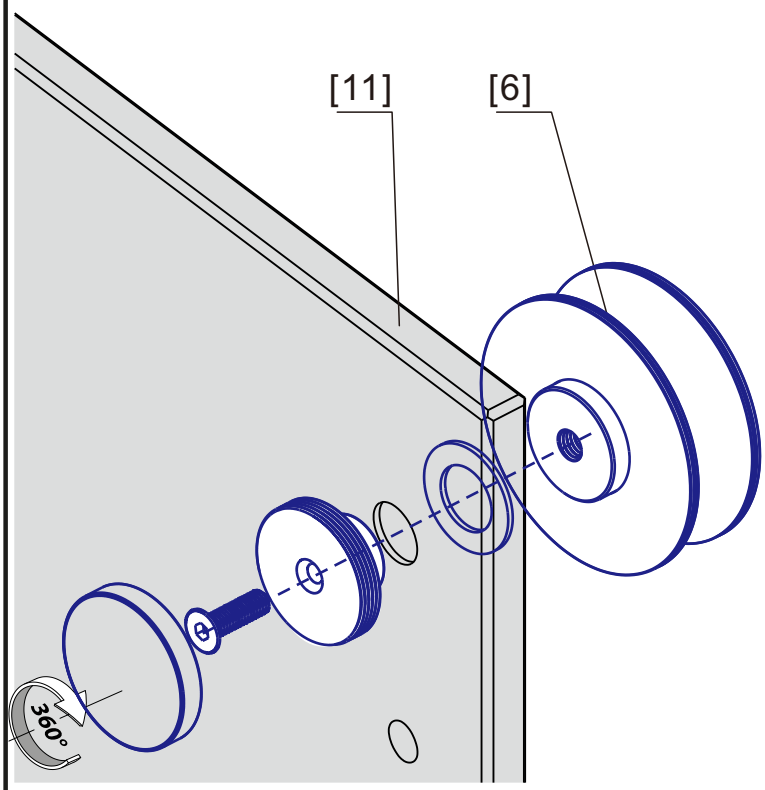


12.1

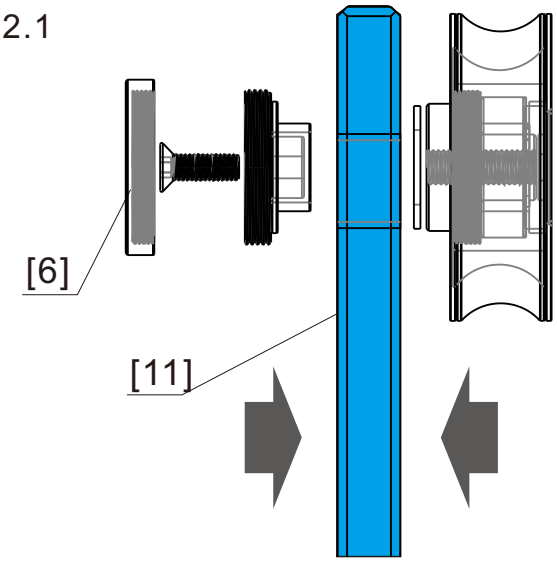


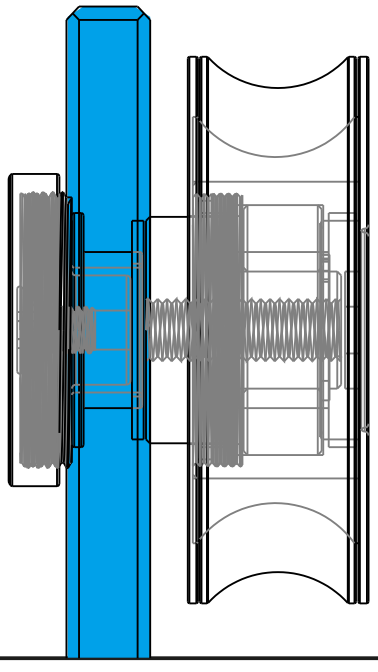


12.3

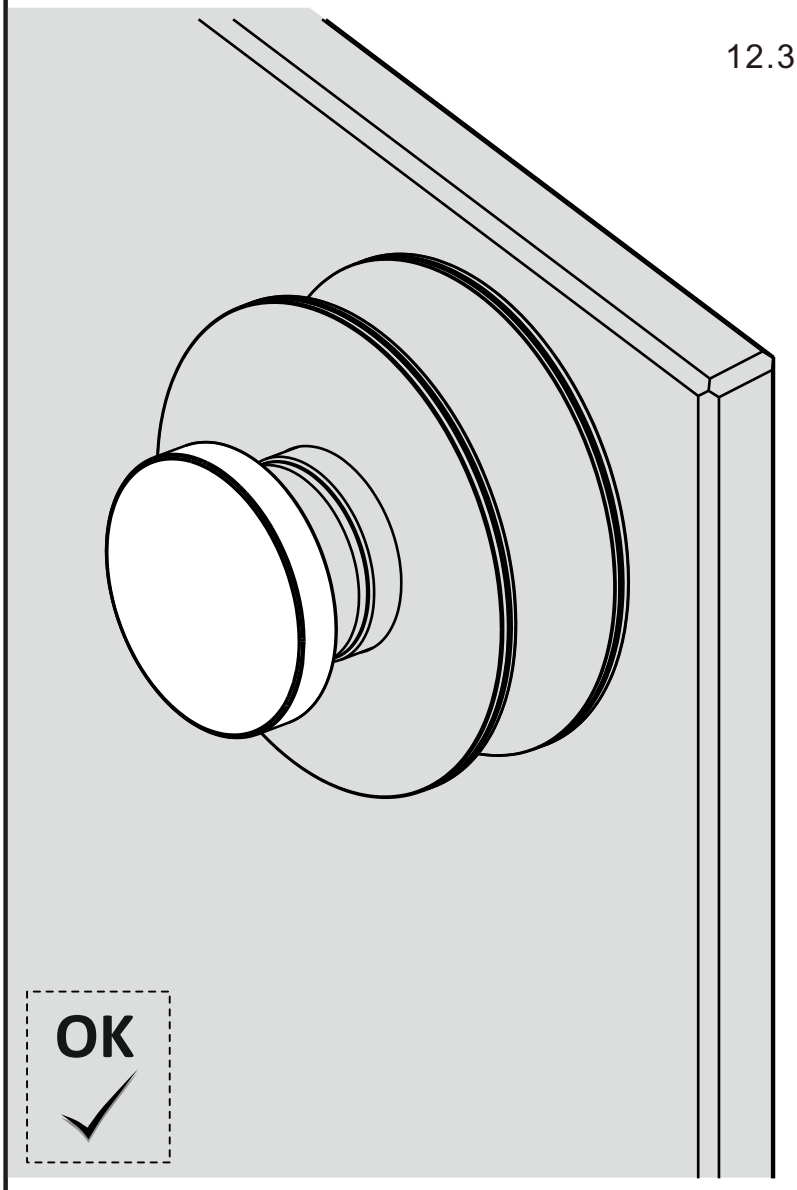

13 Installing Sliding Glass Panels

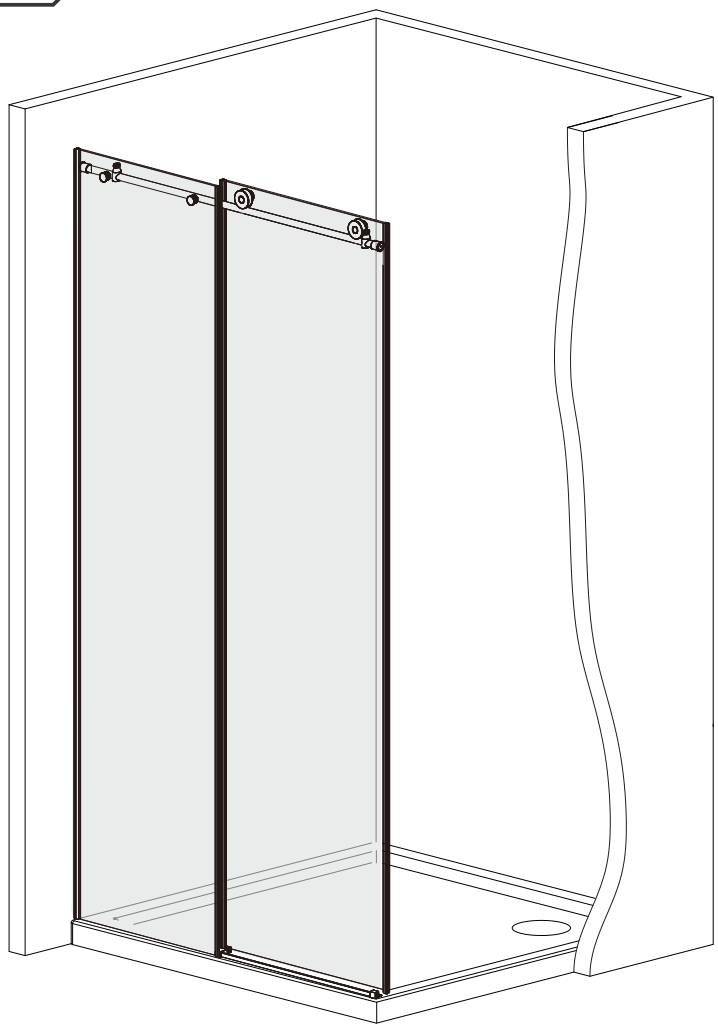


13.1

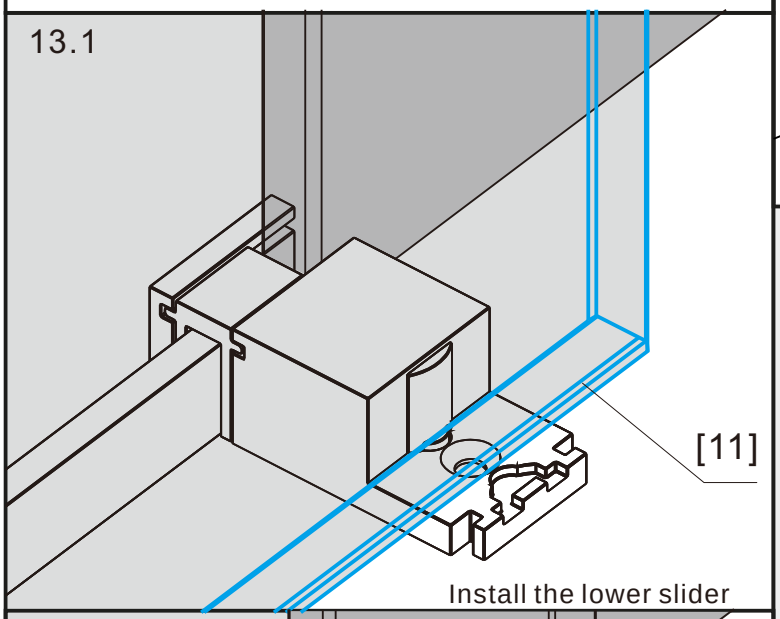

Install the lower slider


13.2

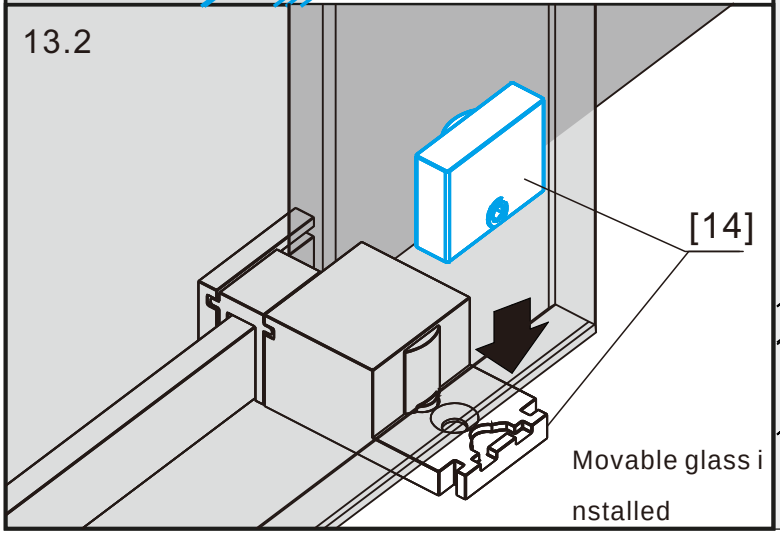


Movable glass i

nstalled


13.3

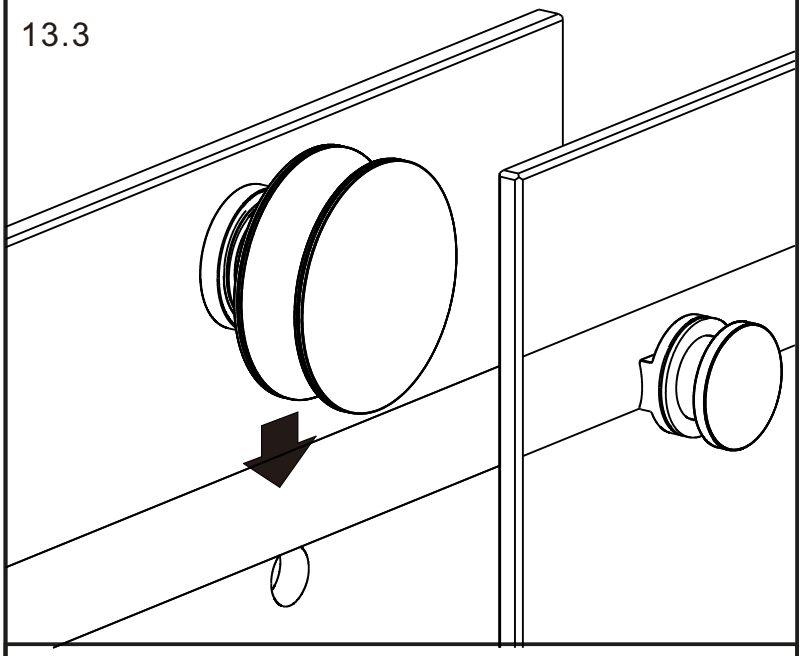

13.4

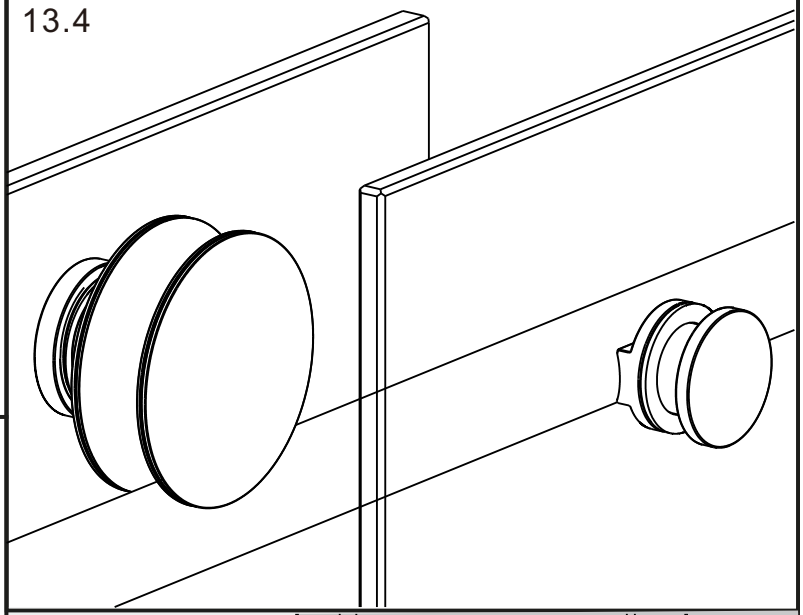


13.5

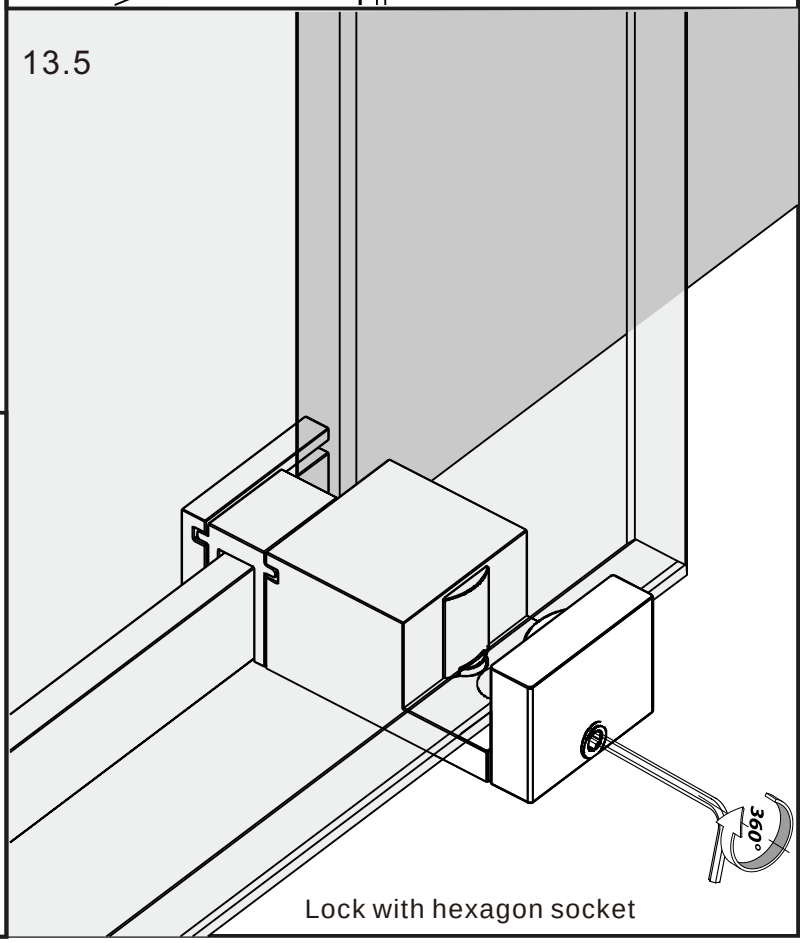


Lock with hexagon socket


14

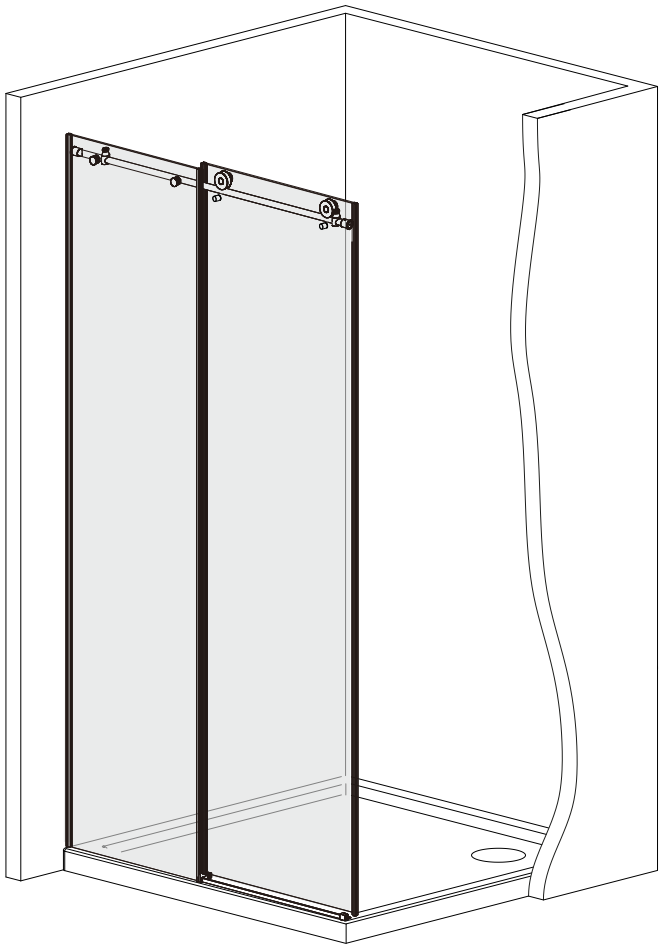

14.1

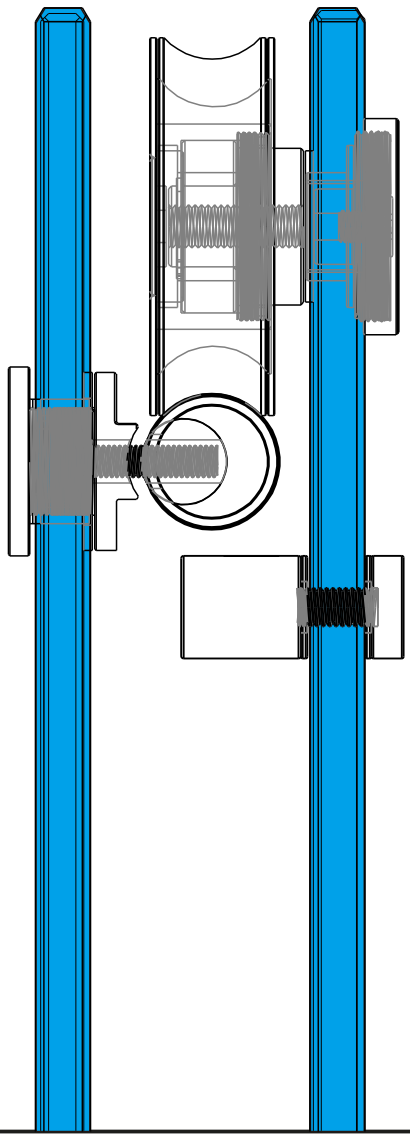


14.2

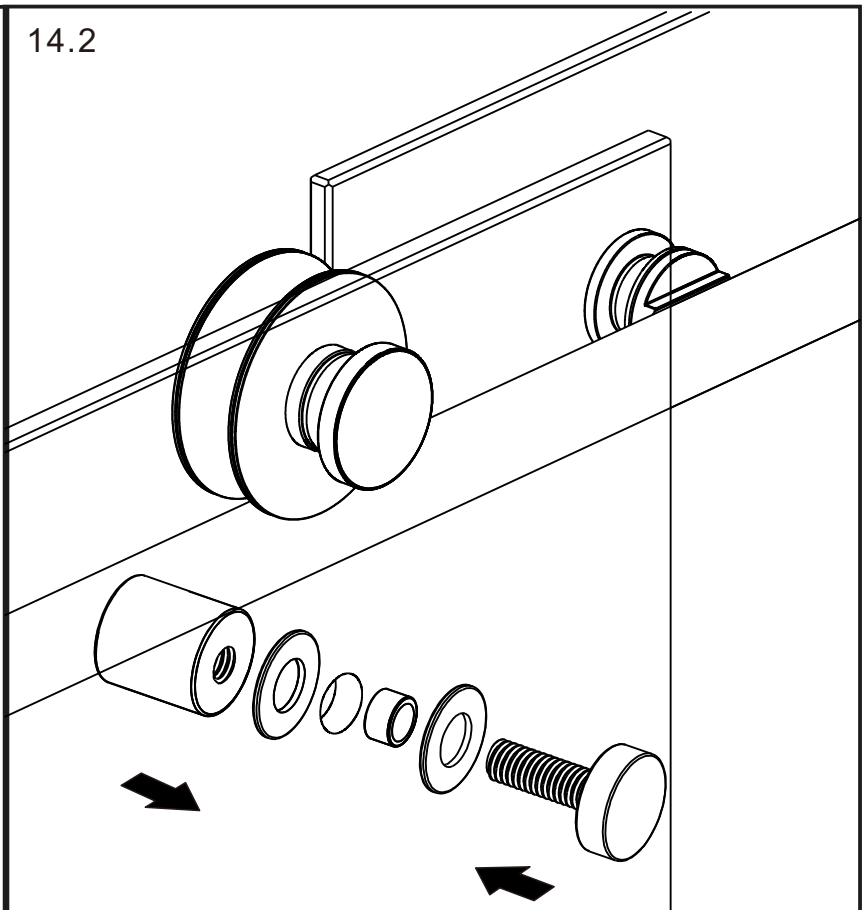


The anti-jump piece is installed on the movable door [11].


14.3

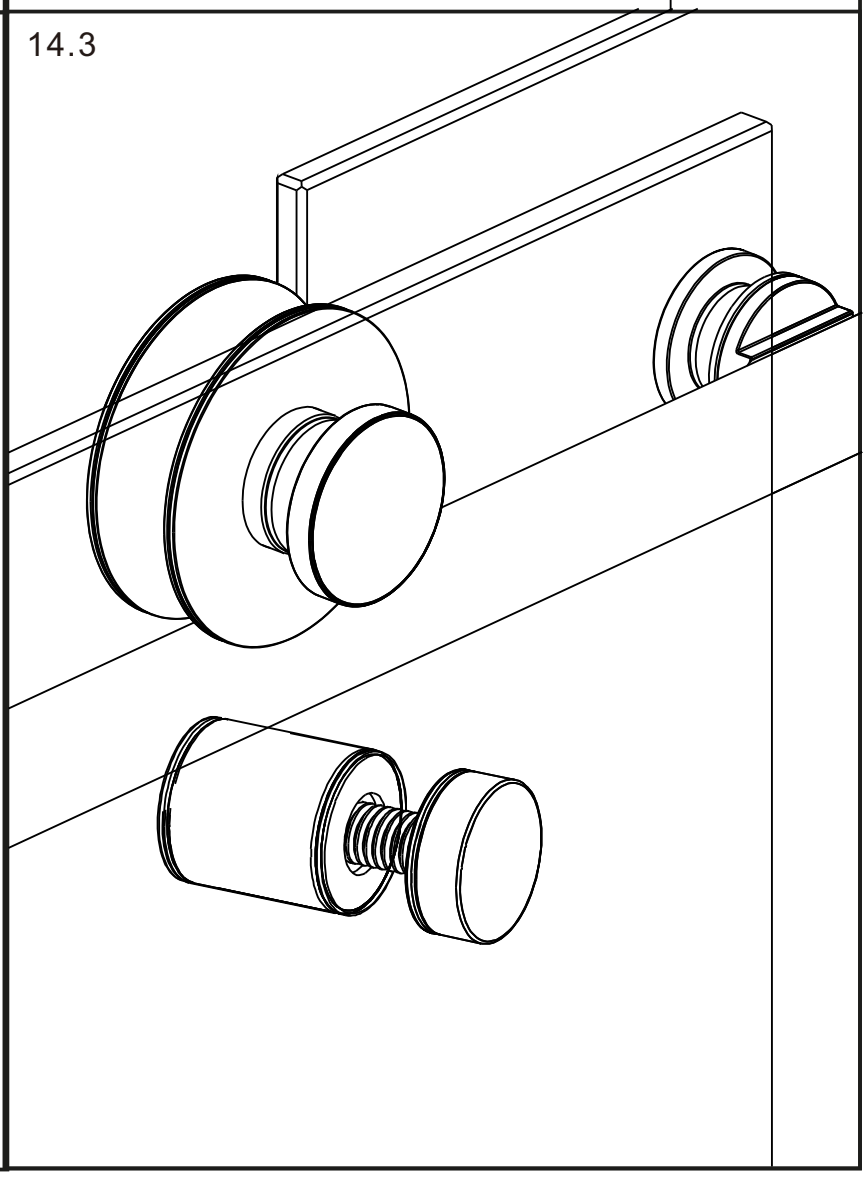



15 Install water barrier

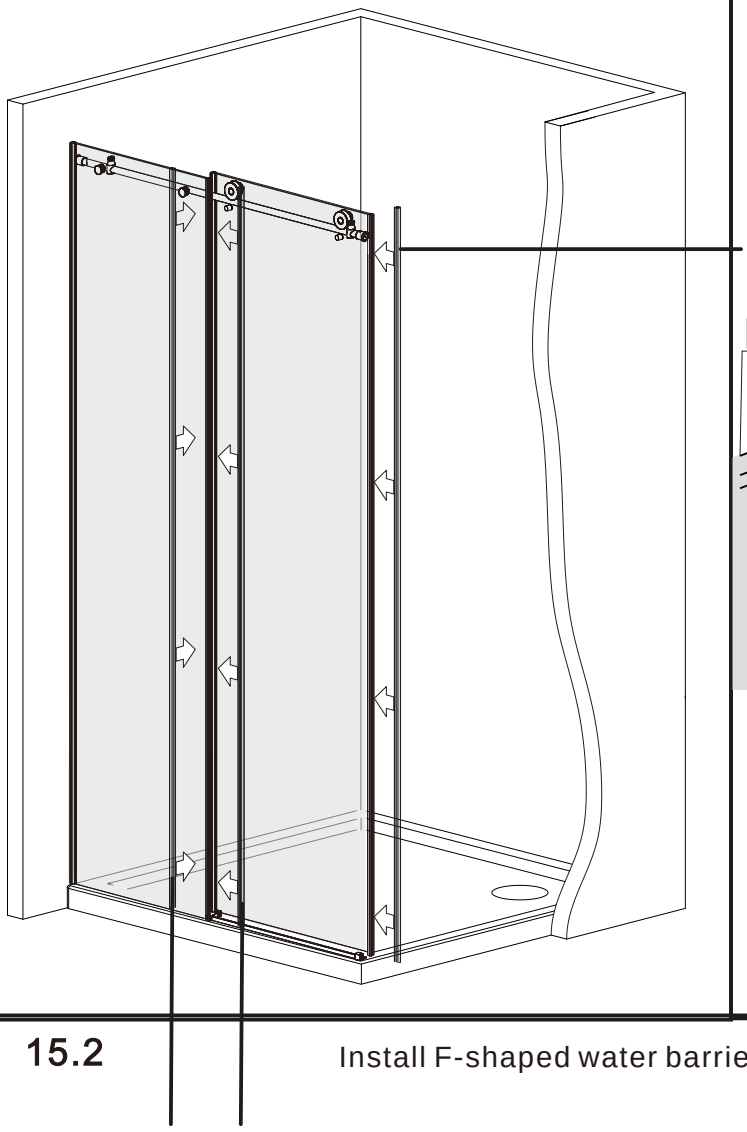

15.1

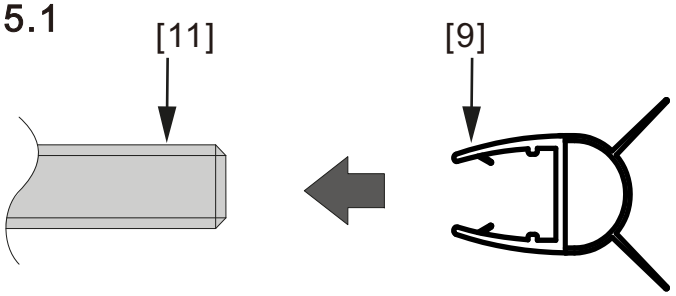

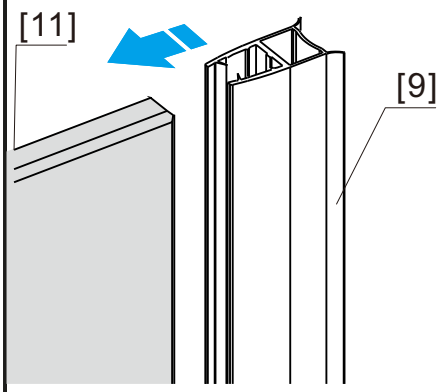


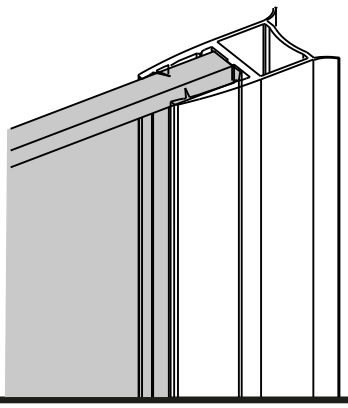


Install waterproof s


trips[9]

15.2 Install F-shaped water barriers on **fi**xed and movable glass[13].

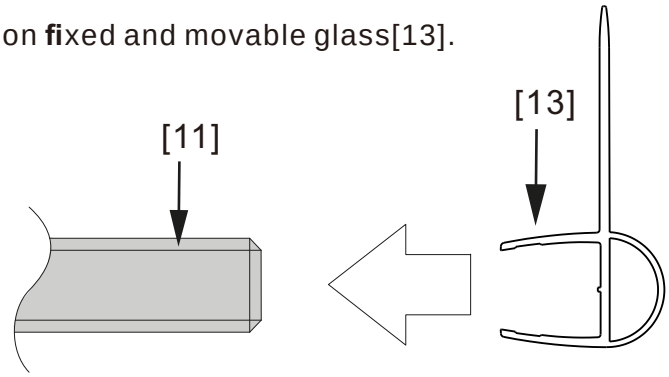


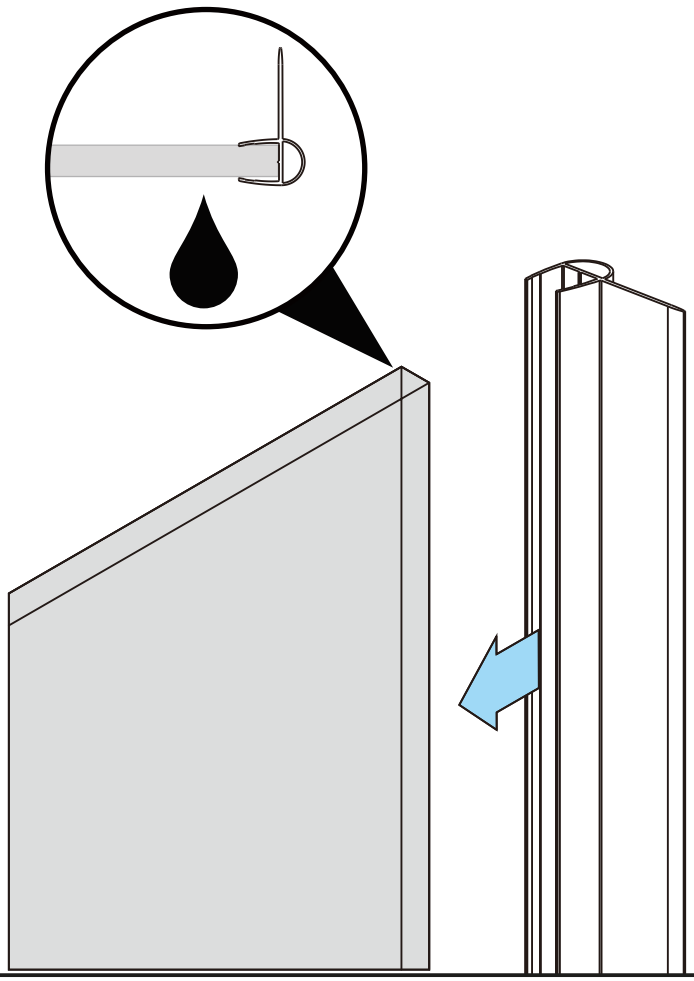


15.3

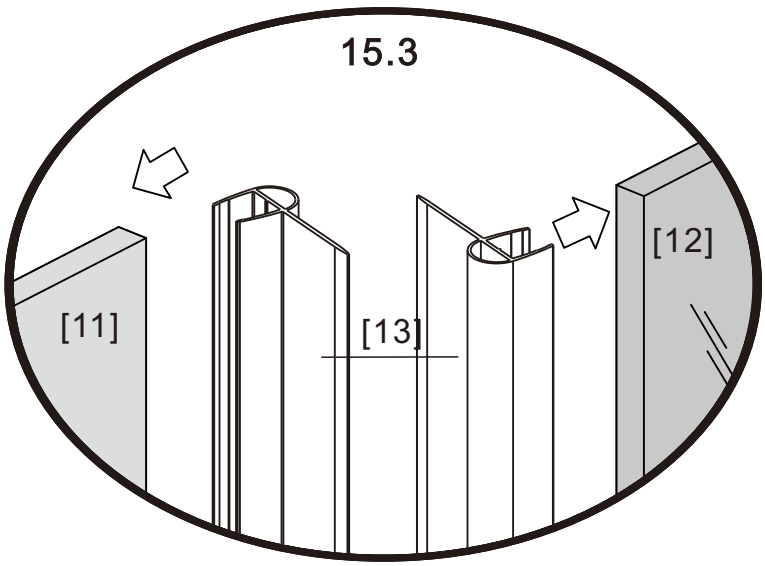

16

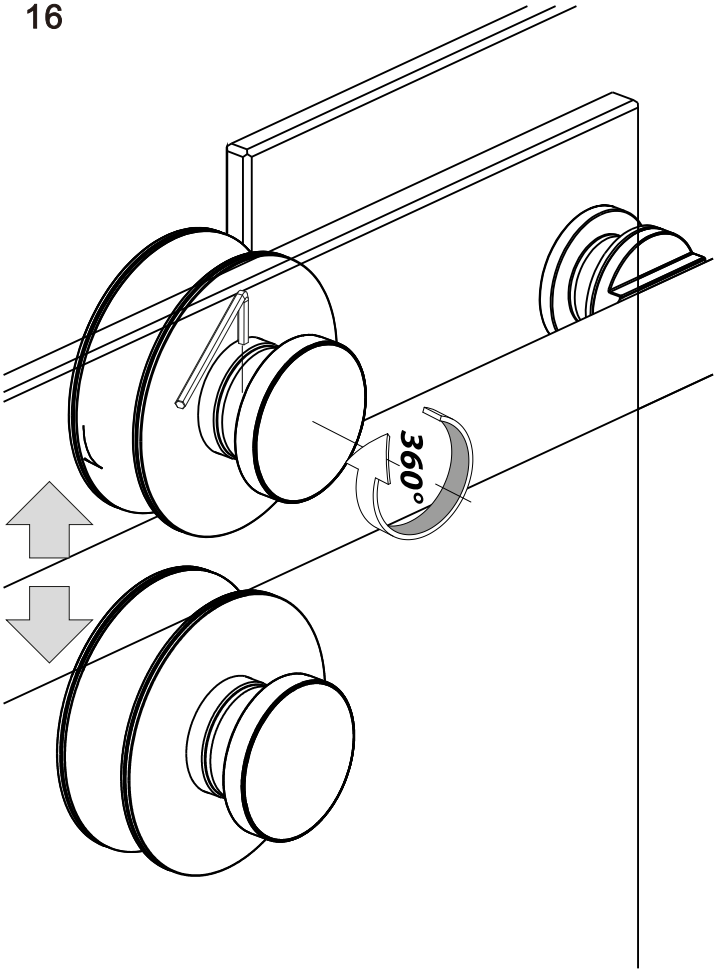


Up and down level height adjustment

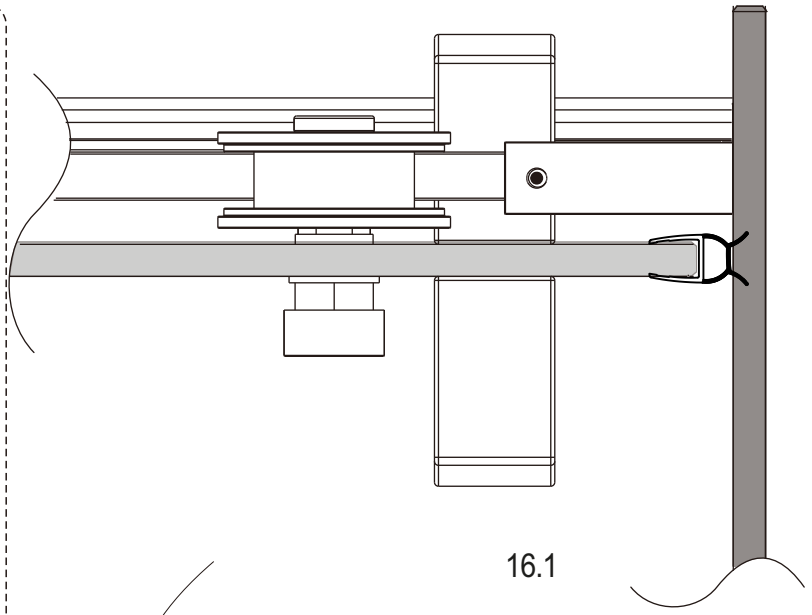


16.1




16.2

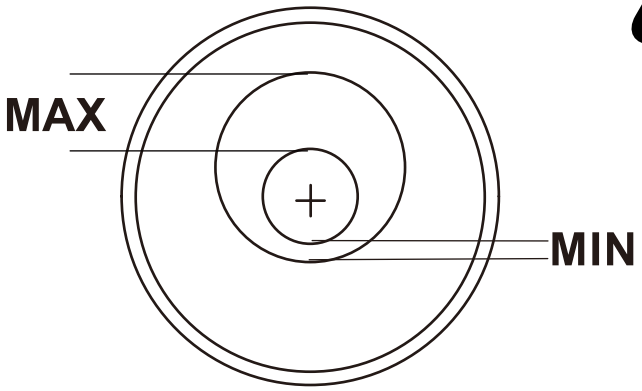


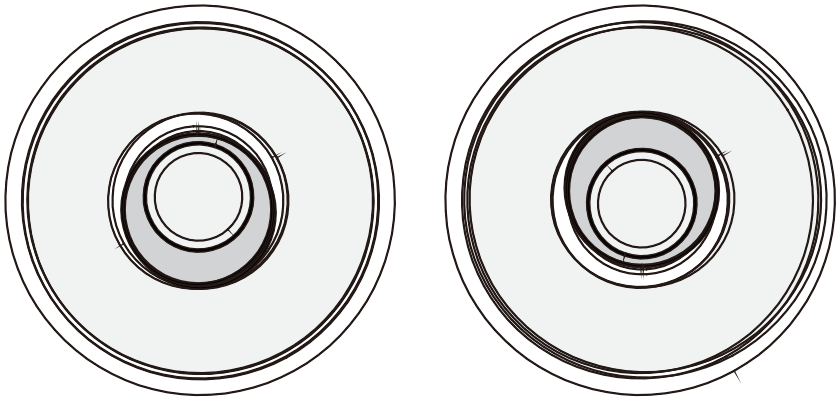


16.3

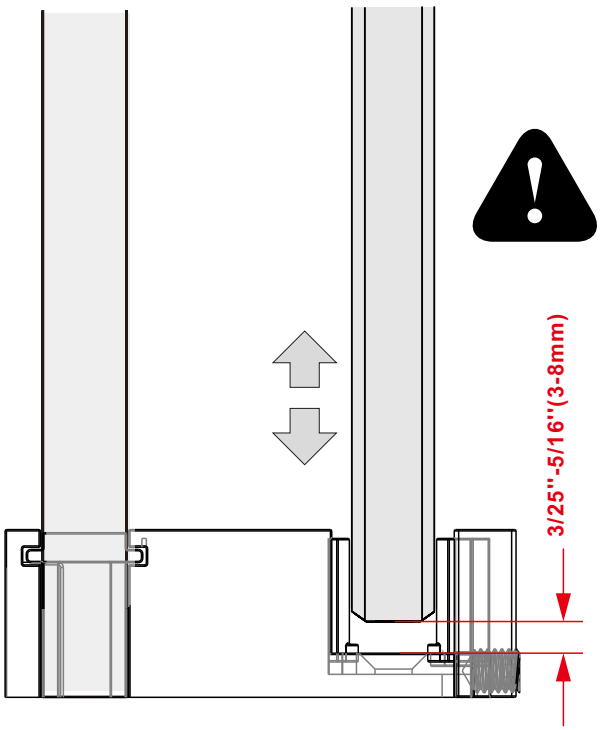

17

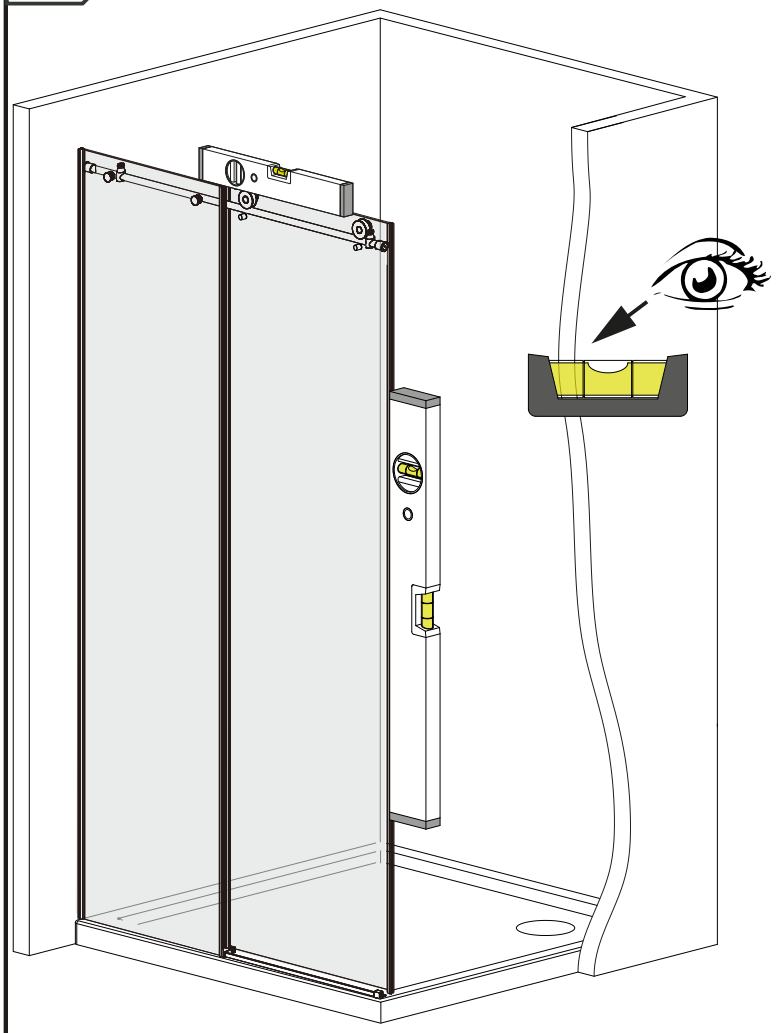


17.1

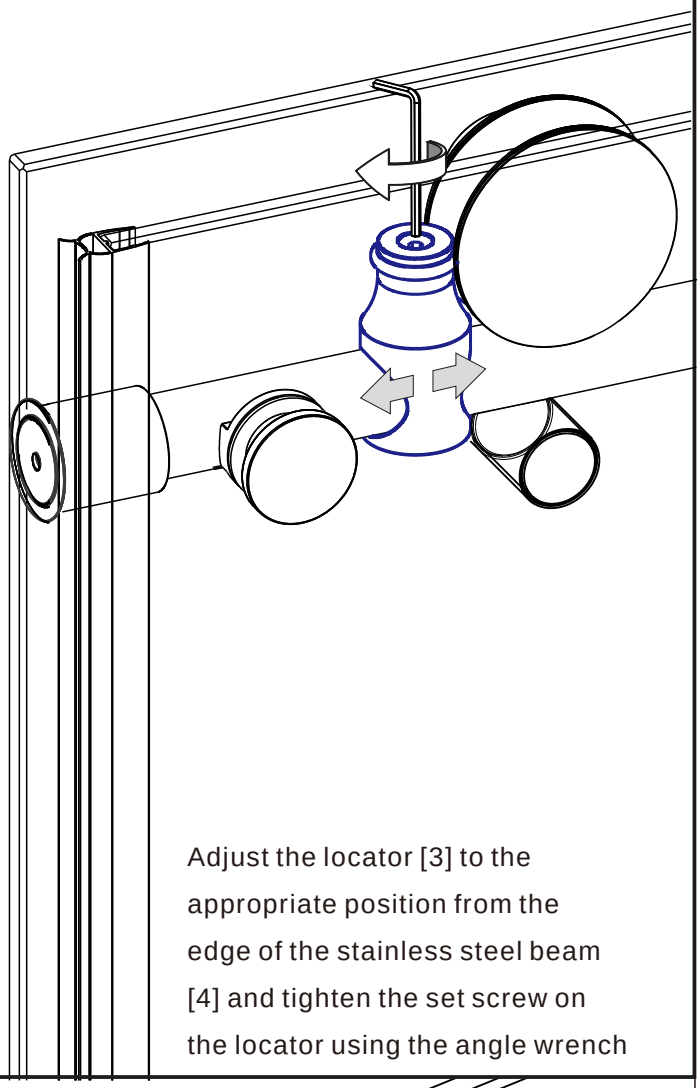

Adjust the locator [3] to the appropriate position from the edge of the stainless steel beam [4] and tighten the set screw on the locator using the angle wrench


17.2

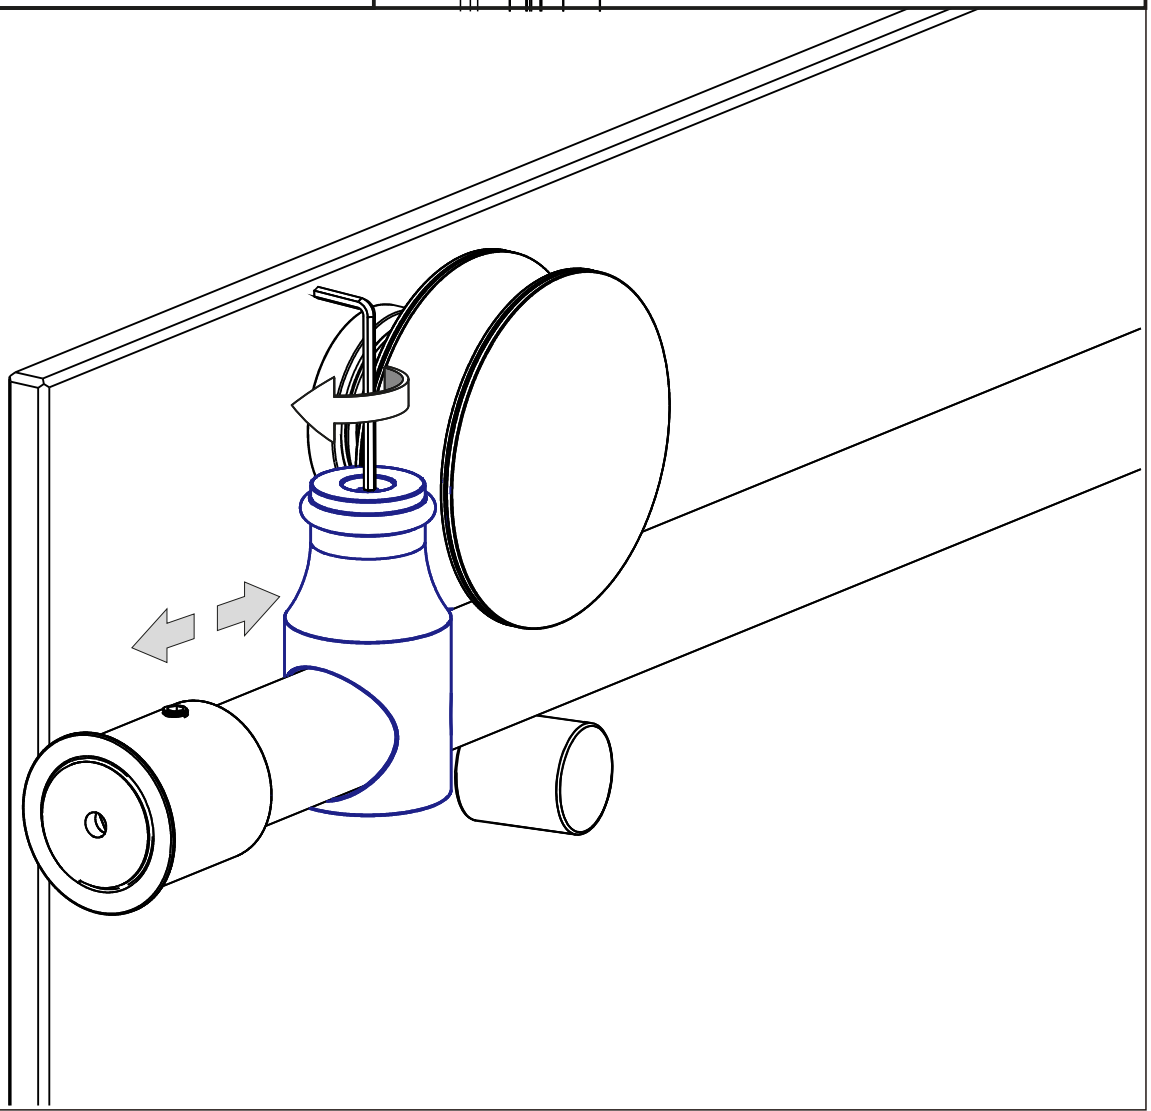

18



18.1

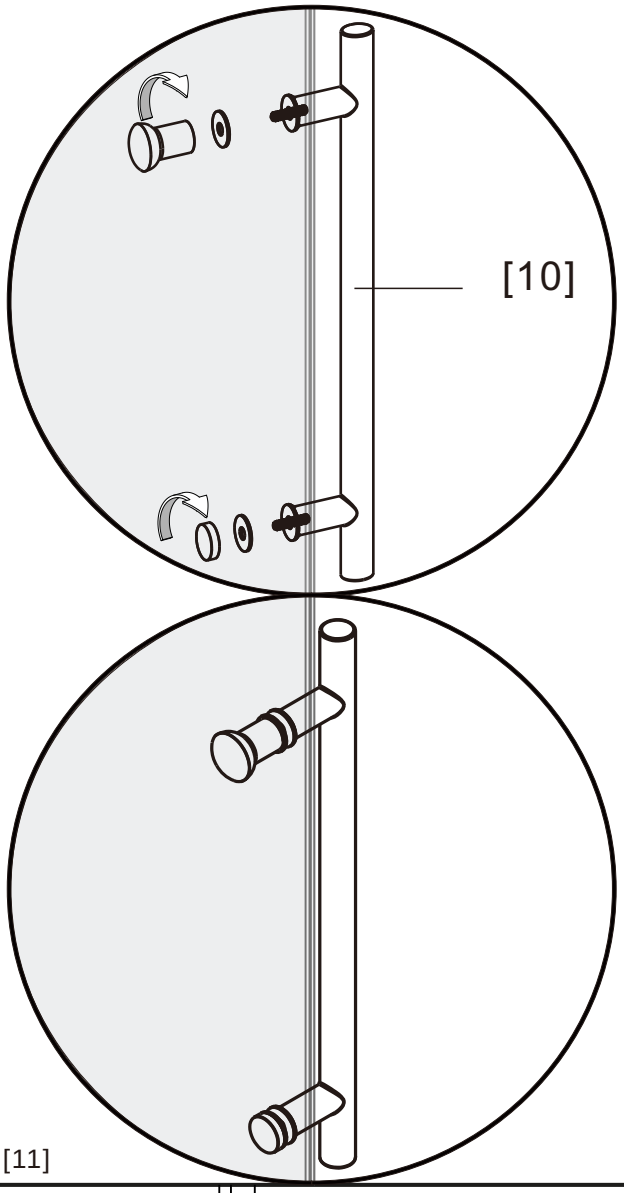


Install the handle [10] onto the sliding glass [11]

19


Allow the glass glue to cure fo


r 24 hours before using

the shower.

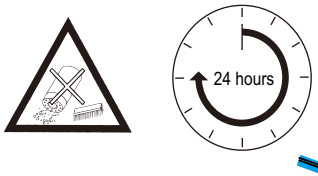



19.1

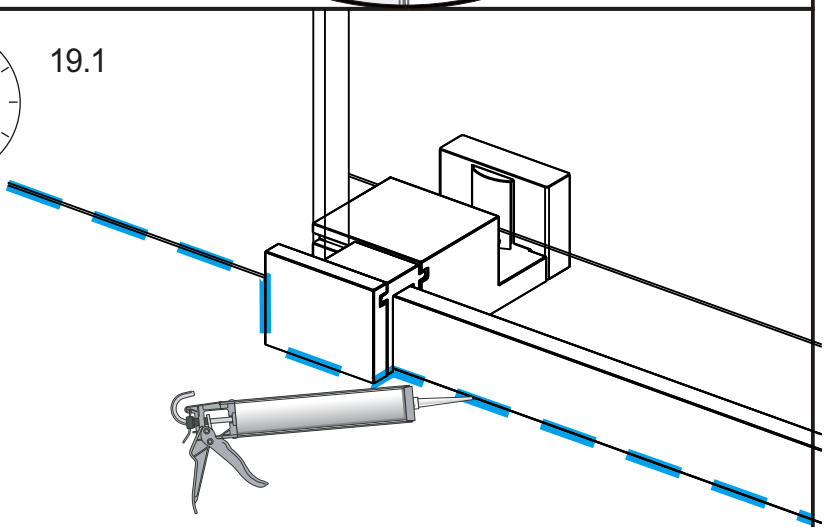

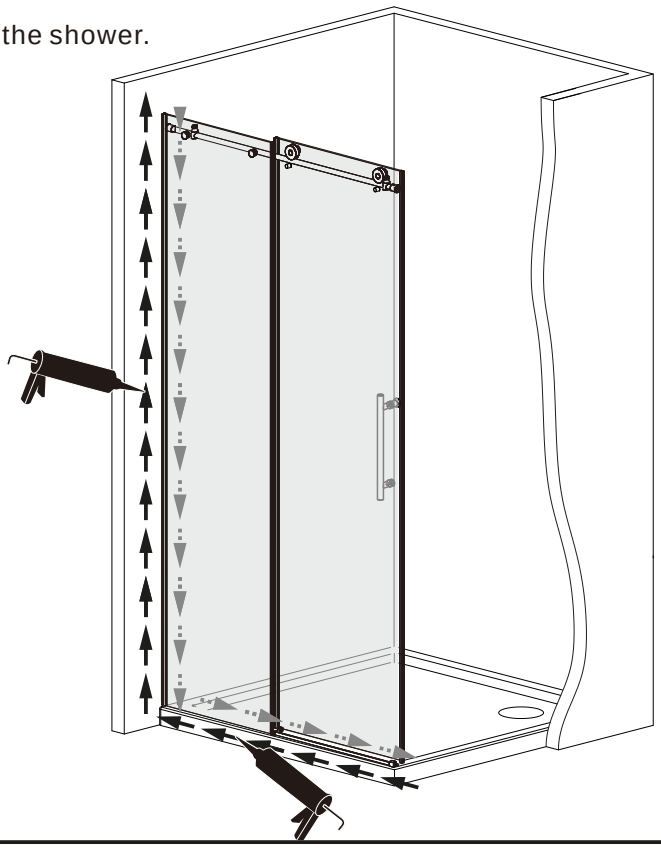

19.2

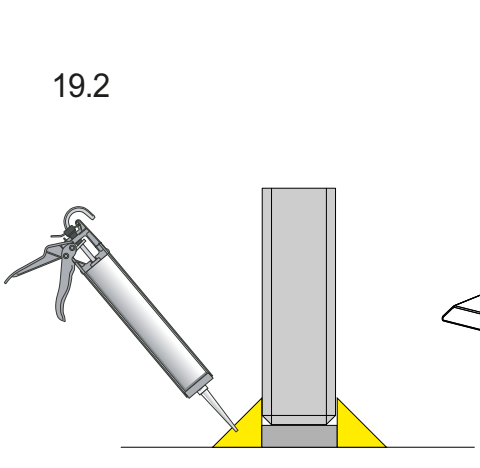

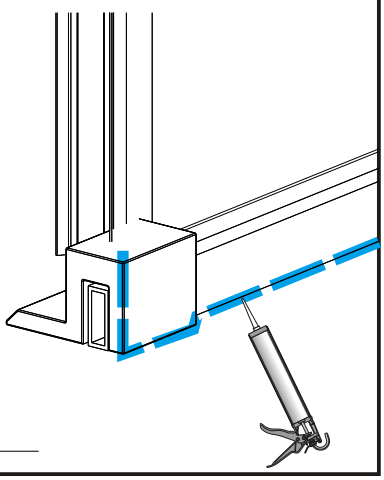

THANK YOU

We hope you enjoy
your purchase.

All of our products are crafted with an
obsessive attention to detail.

Any problem with installation,
please watch the video.

Scan Me