



Installation Guide(With Existing Junction Box)

Hardwired

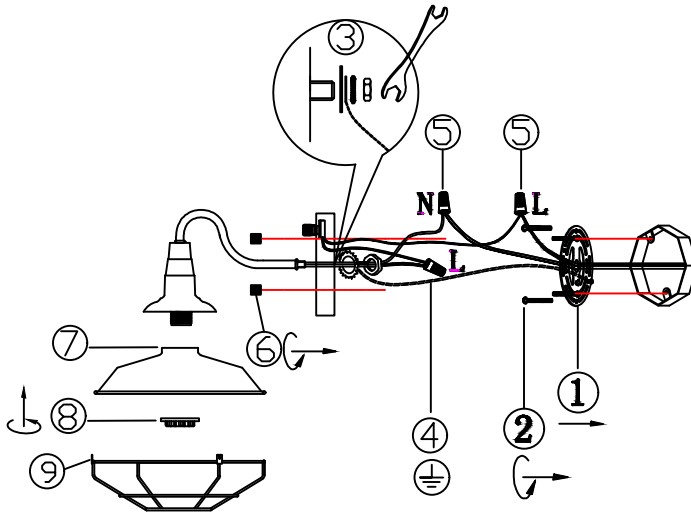


Plug-in

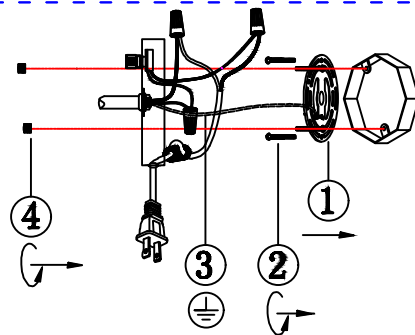

Black:Live Wire(L)
White:Null wire(N)
Bronze:Ground wire⊕

Steps of Connecting the wires

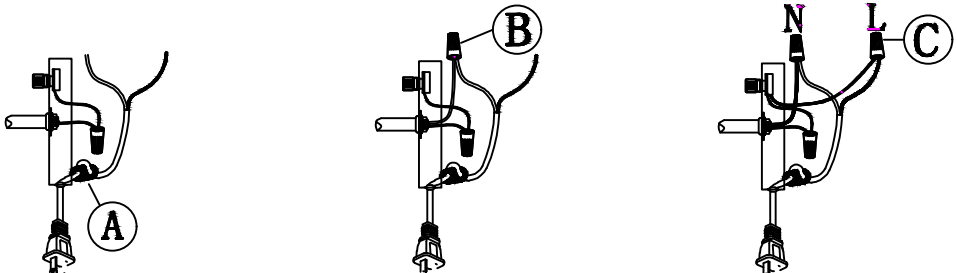

- A:Pass the wire through the hole on the side of the canopy and fasten the wire with 8-snape fastener.
- B:Connect the null wire (white) to the fixture null wire (white).
- C:Connect the live wire (black) to the fixture live wire (black). After the connection is done. wrap the wires with wire ties included.