



Installation Instructions


1. Add and screw different quantities of A together.

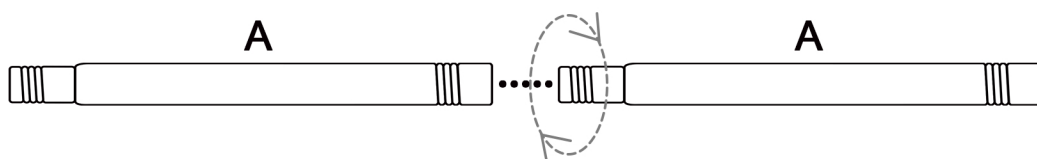


2. Screw each side of A to B and C correctly.

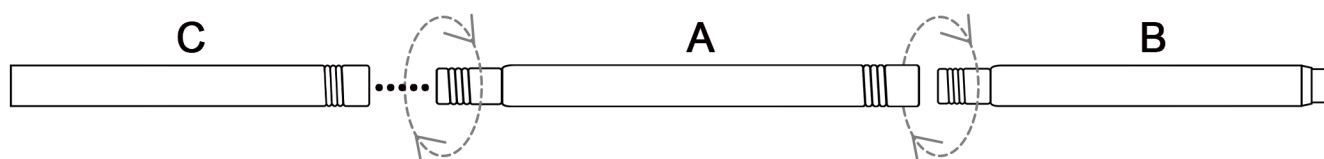


3. Extend telescopic rod slightly to the length you need.

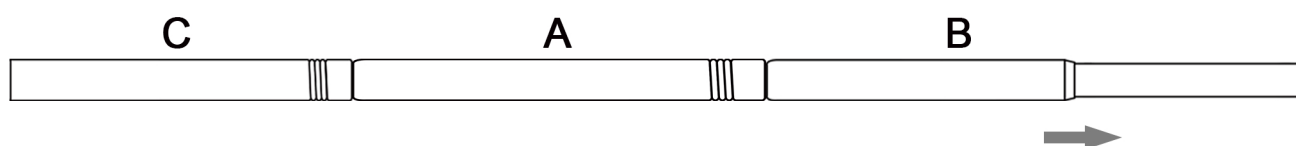


4. Slide the curtain onto the rod.

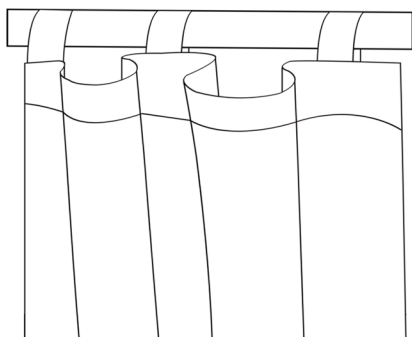

5. Screw the caps onto the end pipes.

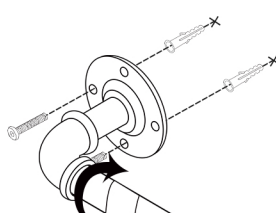


6. Install the central bracket onto the wall as you need.

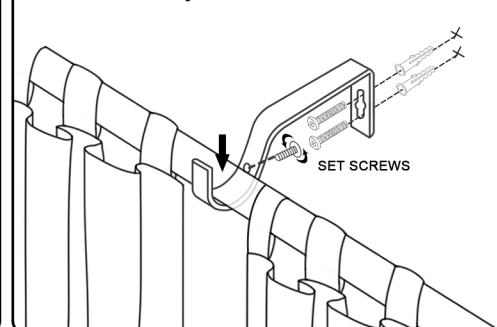


Tips:

The side telescopic pipe is composed of a thicker pipe and a thinner pipe. Make sure that the thinner pipe is at least 5 cm inside the thicker pipe, so that the curtain rod can be sturdy.




Parts Included


16-28



x1




x1

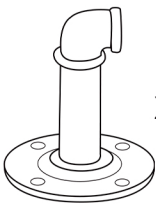


x2



x8




x8




x1


32-48




A x1



B x1




C x1

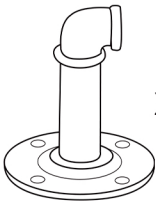


x2



x8




x8



x1


48-86




A x3




B x1



C x1




x1

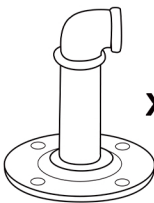


x2



x10



x10



x1

66-120




A x6




B x1



C x1




x1

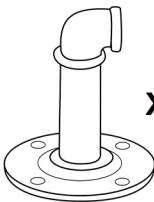


x2



x10




x10




x1

72-144




A x7




B x1



C x1




x1

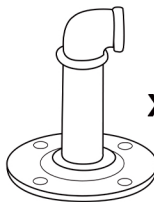


x2



x10




x10



x1

144-168




A x9




B x1



C x1




x2

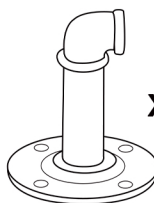


x2



x12



x12



x1