



"IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY"


1. Choose a clean, level, spacious assembly area. and Arrange the accessories neatly according to the label, Avoid missing part and affect installation.
2. Two or more people are required for assembly.
3. Always read the assembly instructions carefully before beginning assembly.
4. To avoid squeaking, please tighten the bolts all the way.
5. Professional installation is highly recommended.

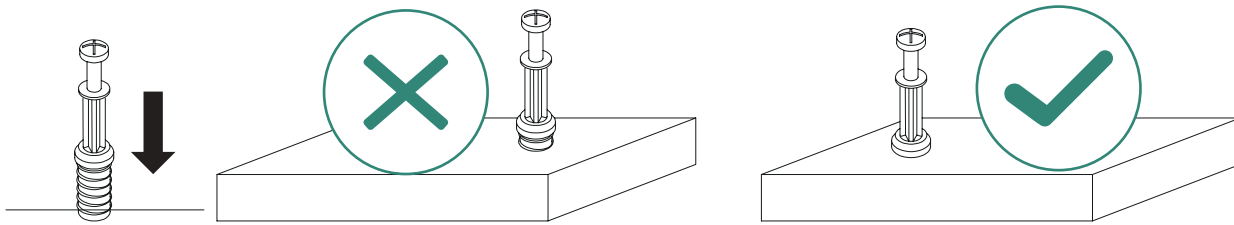

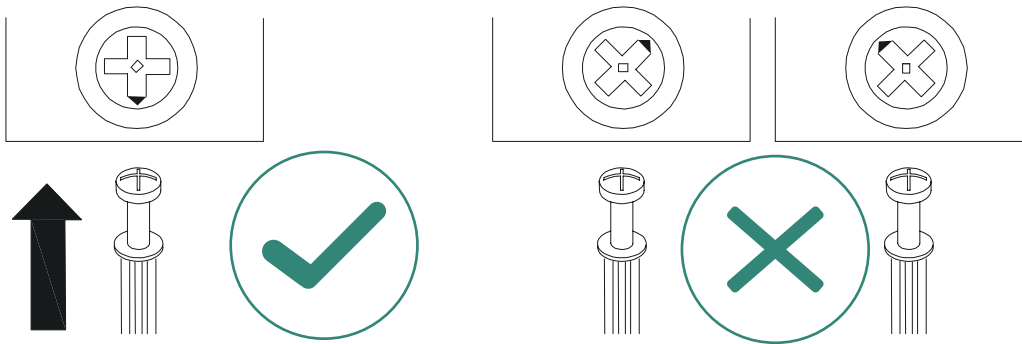






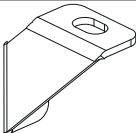
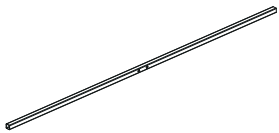

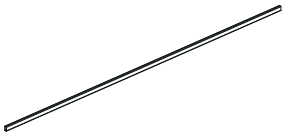

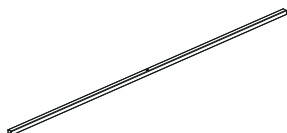
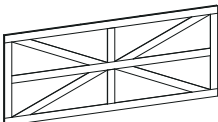
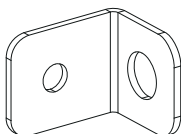

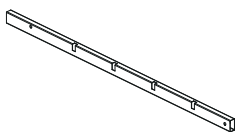

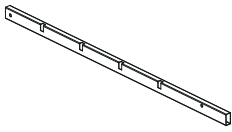

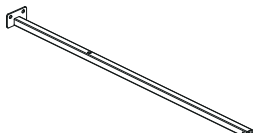
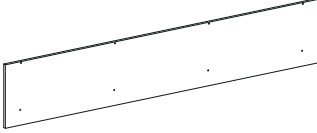
Adjust the connectors rod until the shoulder is flush with the panel. Do not overtighten or loosen too much.


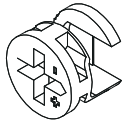
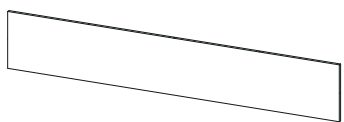
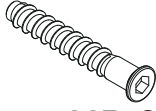
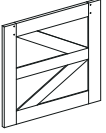
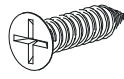
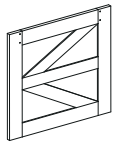
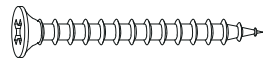
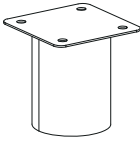

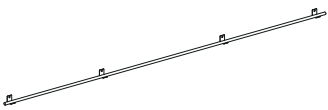

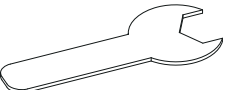

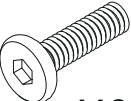
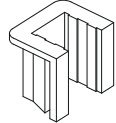
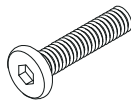
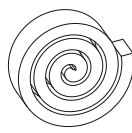
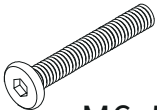


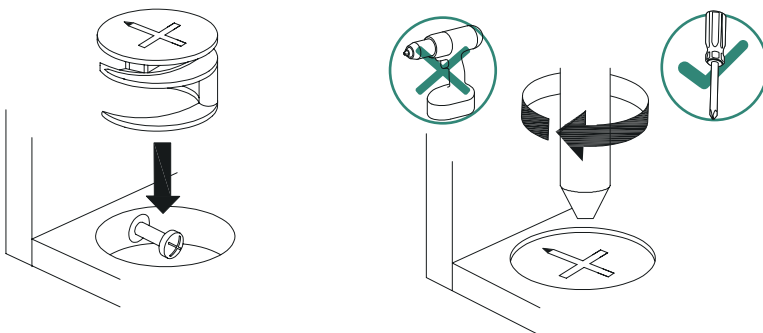


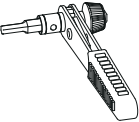
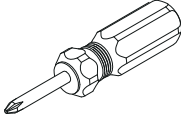

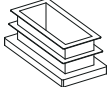
When installing the cam lock, make sure the initial position is correct before inserting connectors rod.





The head of the connectors rod should be in the center of the cam lock when the two panels are joined.
Turn the cam clock to tighten by manual Phillips screwdriver

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
1		X2	12		X2
2		X2	13		X1
3		X1	14		X2
4		X1	15		X4
5		X2	16		X4
6		X8	17		X1
7		X1	18		X1
8		X2	19		X1
9		X2	20		X1
10		X2	21		X4
11		X2	22		X1

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
23		X1	E		X4
24		X1	F	 M5x35mm	X31
25		X1	G	 M3.5x12mm	X4
26		X1	H	 M4x30mm	X8
27		X1	J	 M6	X14
28		X1	K		X4
29		X1	L		X6
A	 M6x20mm	X8	M		X16
B	 M6x35mm	X22	N		X1
C	 M6x55mm	X9	Q	 M4x12mm	X12
D	 M6x28mm	X4	P	 M4x18mm	X4




Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
S		X1	T		X1
W	 M3	X1	Y	 20x40mm	X9

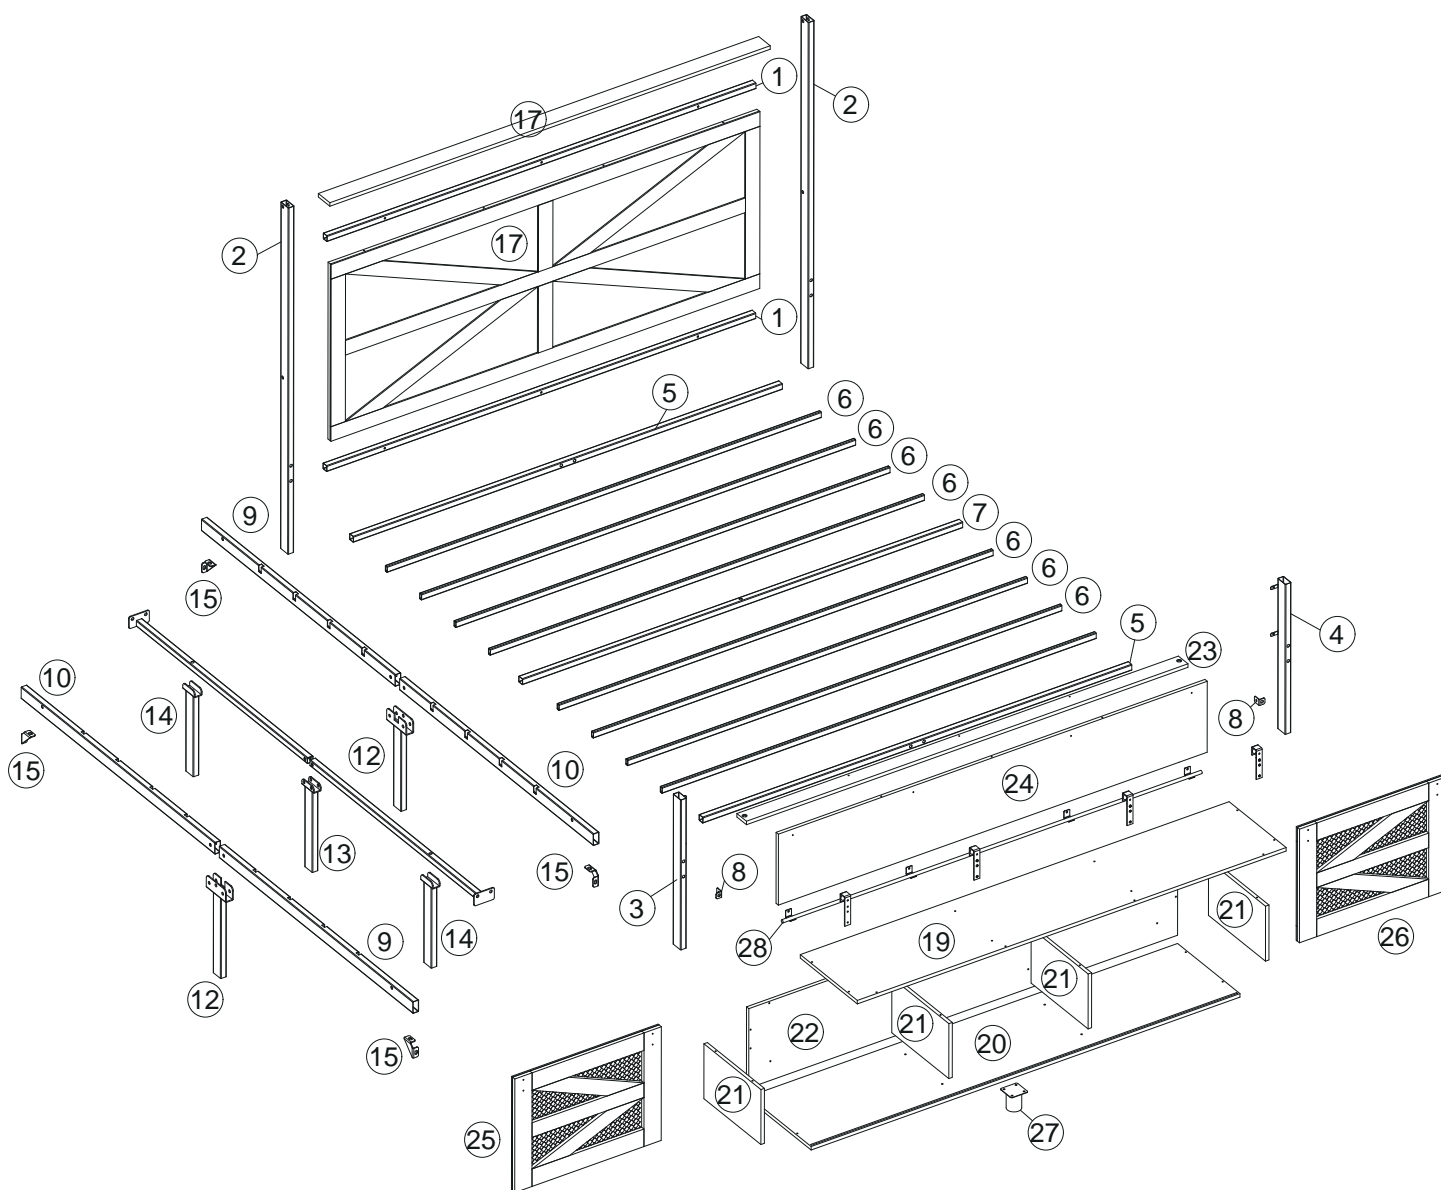

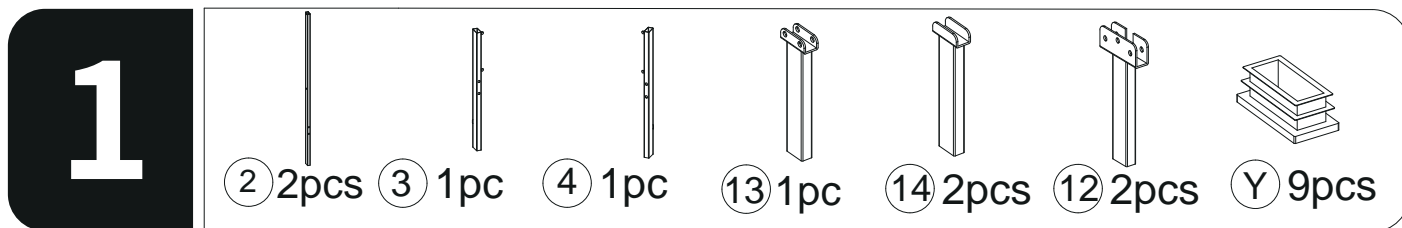

Step 1:

Install foot pads(Y)to all legs of this bed frame, (just do it as indicating diagram).

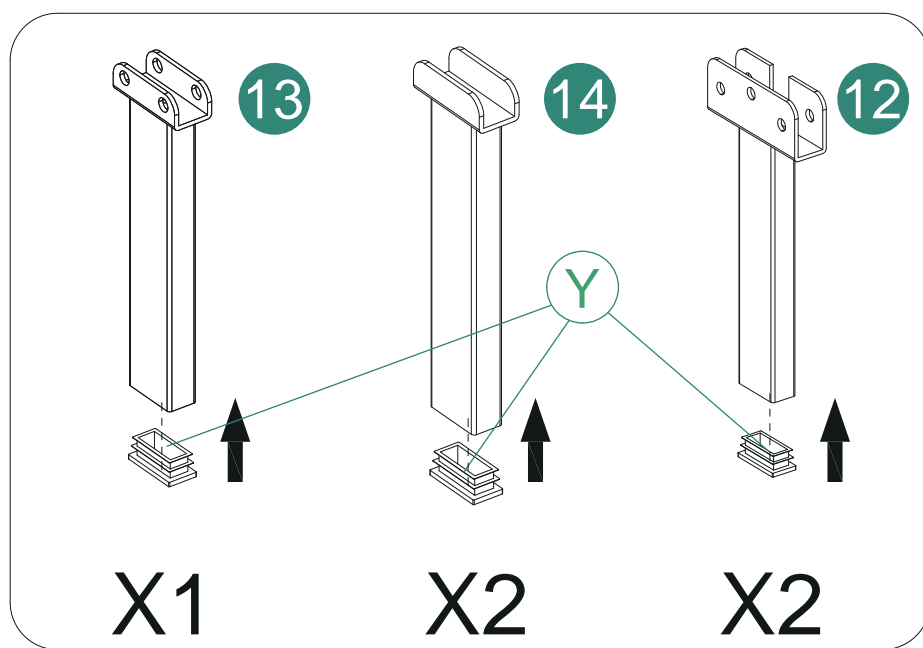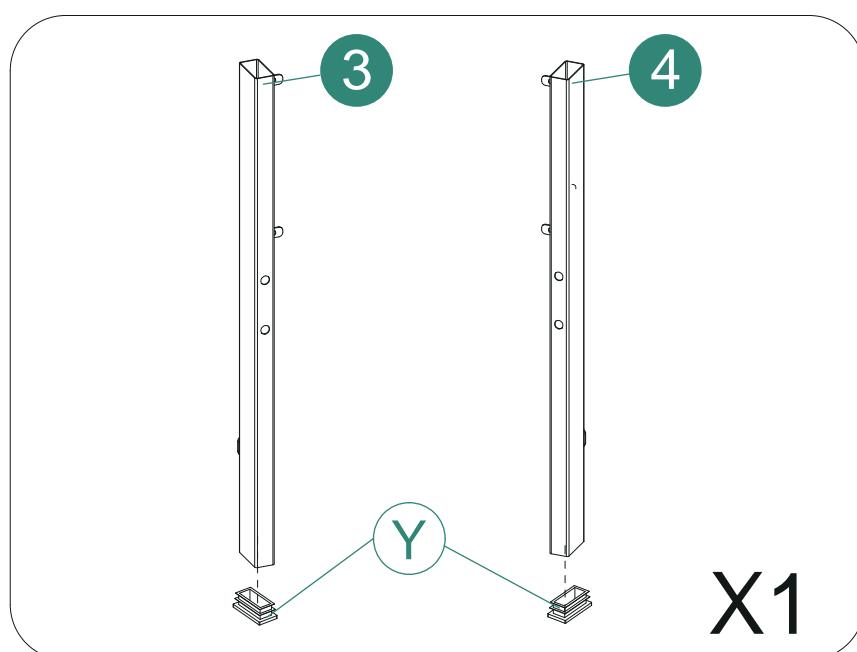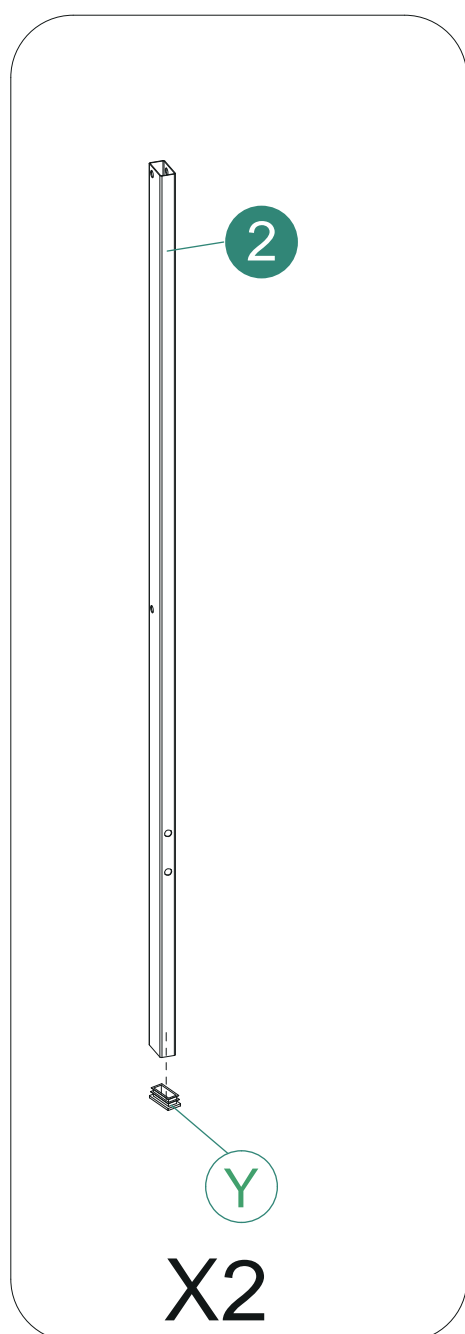

2



① 2pcs



② 2pcs




Ⓑ 4pcs




Ⓚ 1pc

Step 2:

Install Headboard cross beam (part 1) to Headboard side leg(part 2) by screws (B).

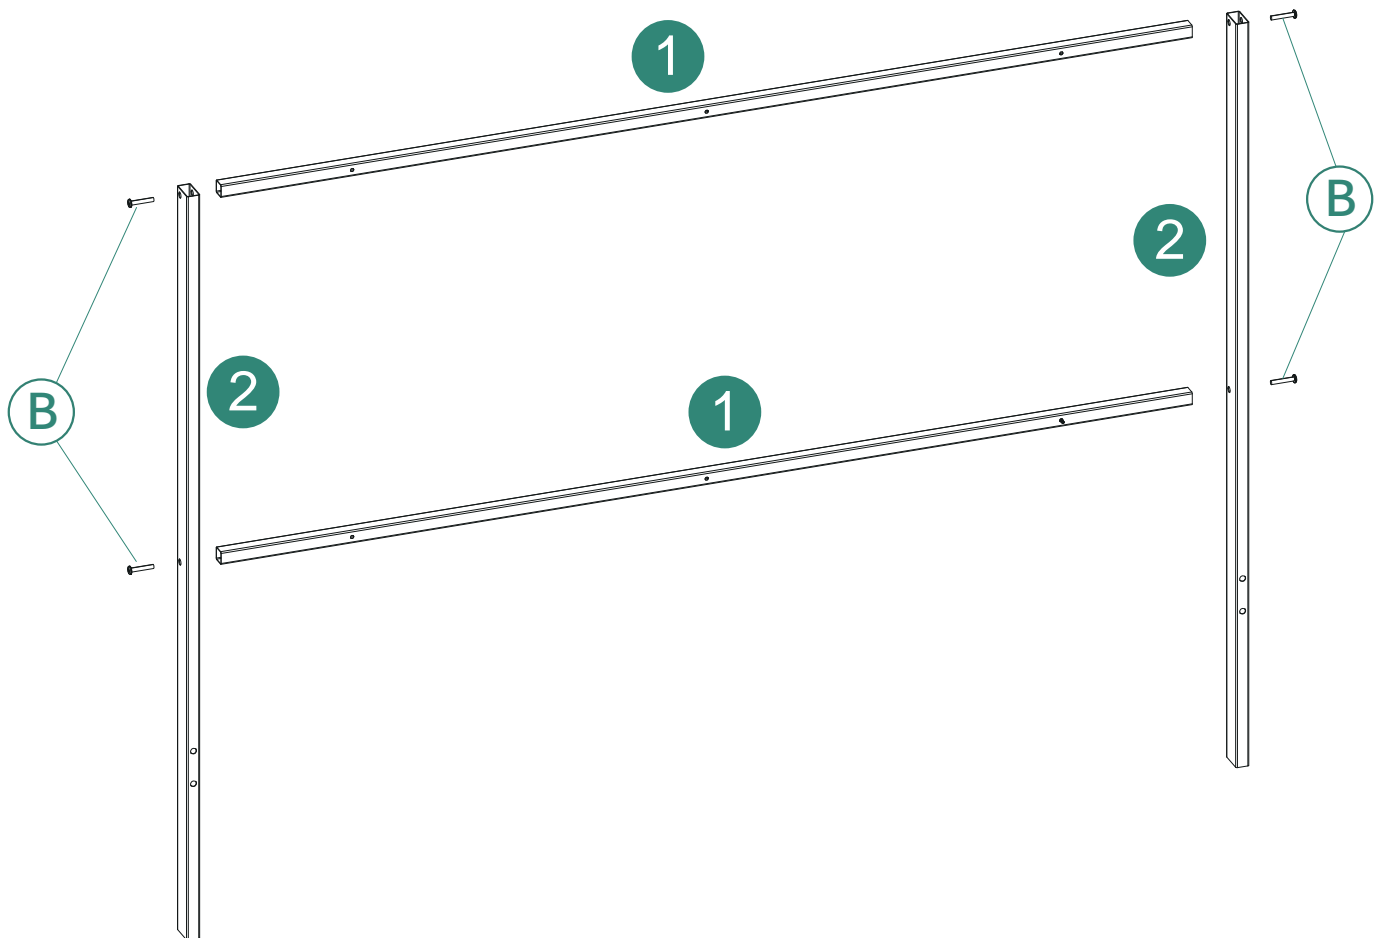


3

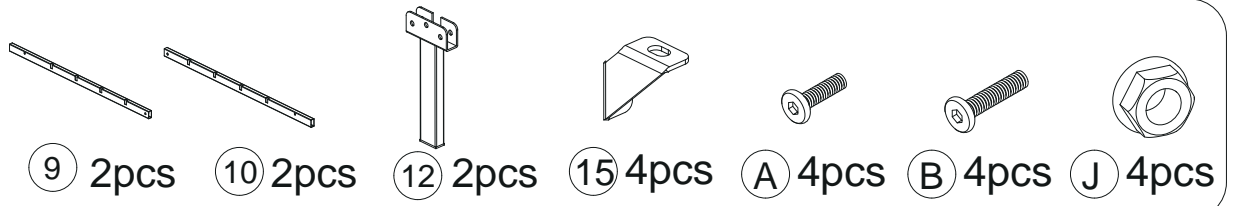

Step 3:

Align vertical beam-1 (part 9) with vertical beam-2 (part 10),connect them with Right/left leg(part 12) by screw (B),bolts (J); Secure Bracket (part 15) into the end of side vertical beam(part 9 and 10).

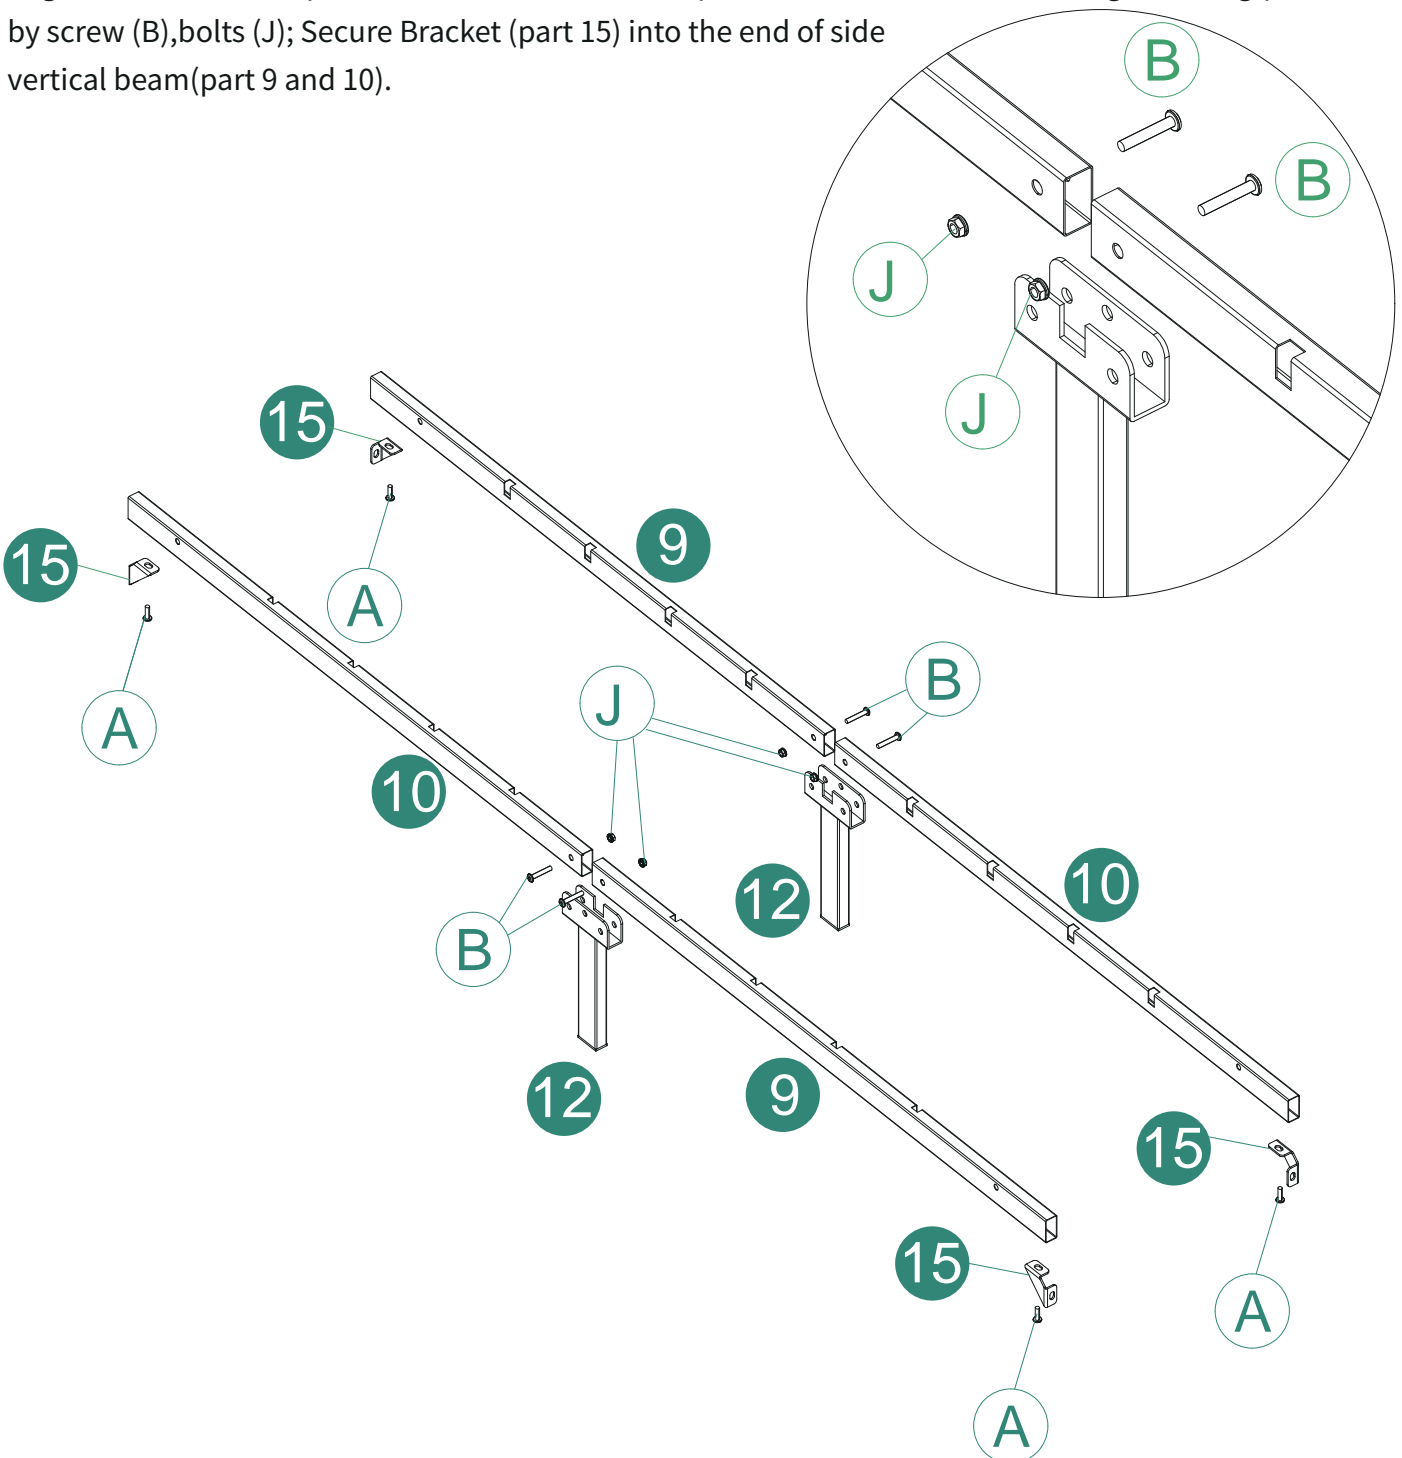

4




C 4pcs




J 2pcs

Step 4:

Align two side vertical beam with Headboard side leg (2), secure with nut (J), bolts (C).

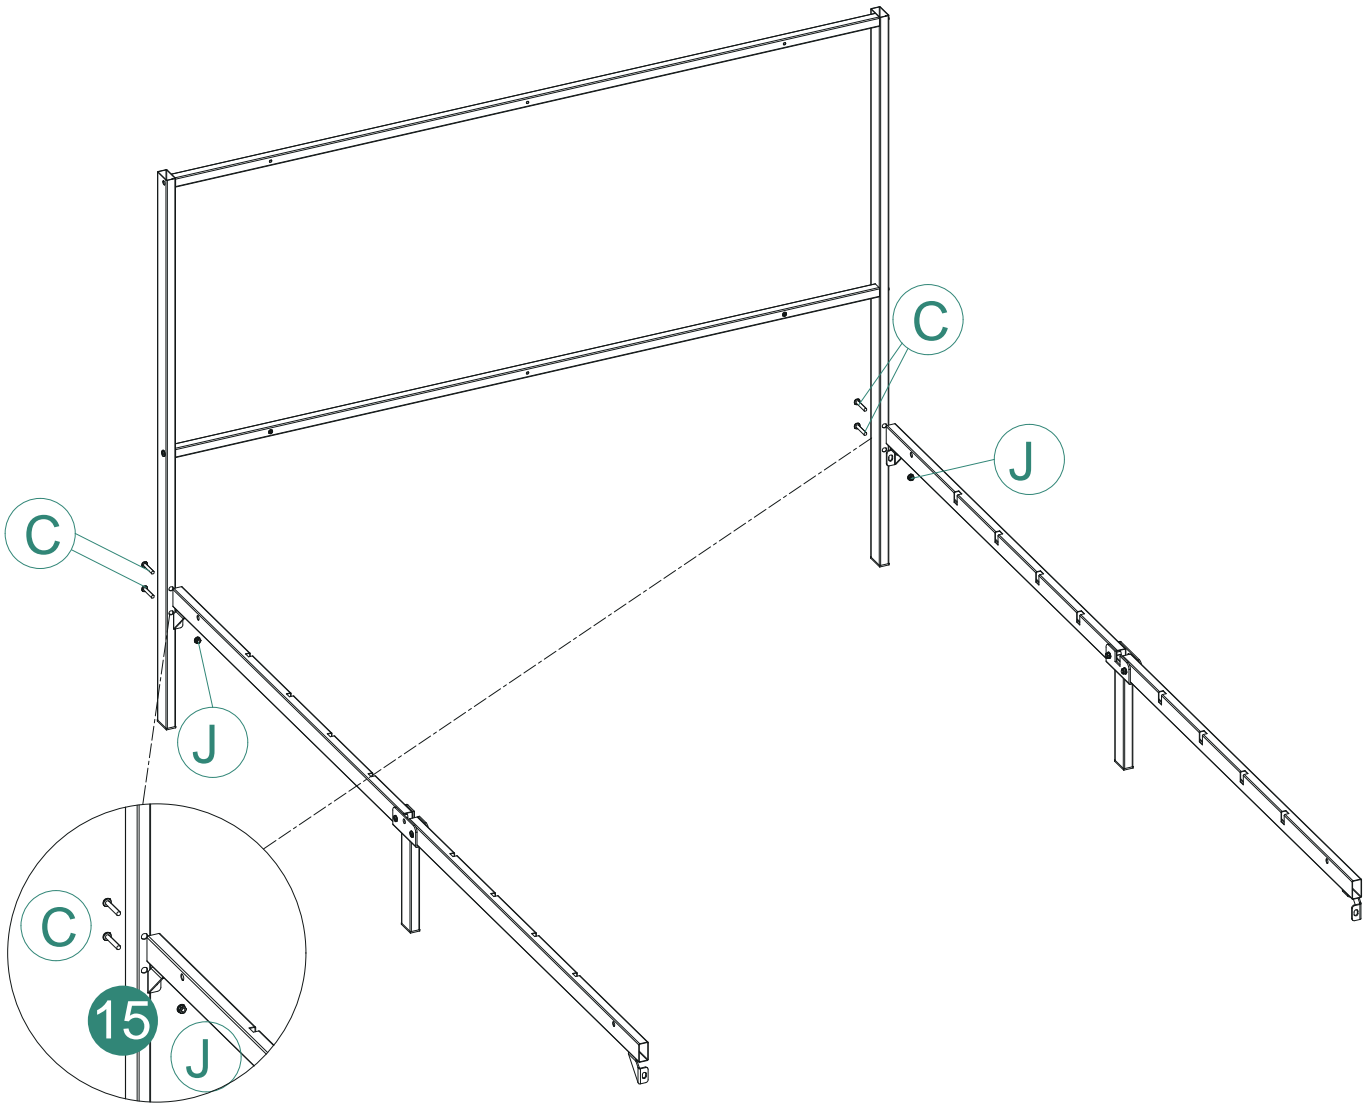


5



Ⓒ 4pcs



Ⓐ 2pcs



Ⓜ 16pcs




③ 1pc



④ 1pc

Step 5

Press Rubber card slot(M)into the slots on side vertical beam(part 9 and 10),Then connect two side vertical beam and Bracket(part 15) to Footboard side leg (part 3 and4) with nut (J),bolts (C).

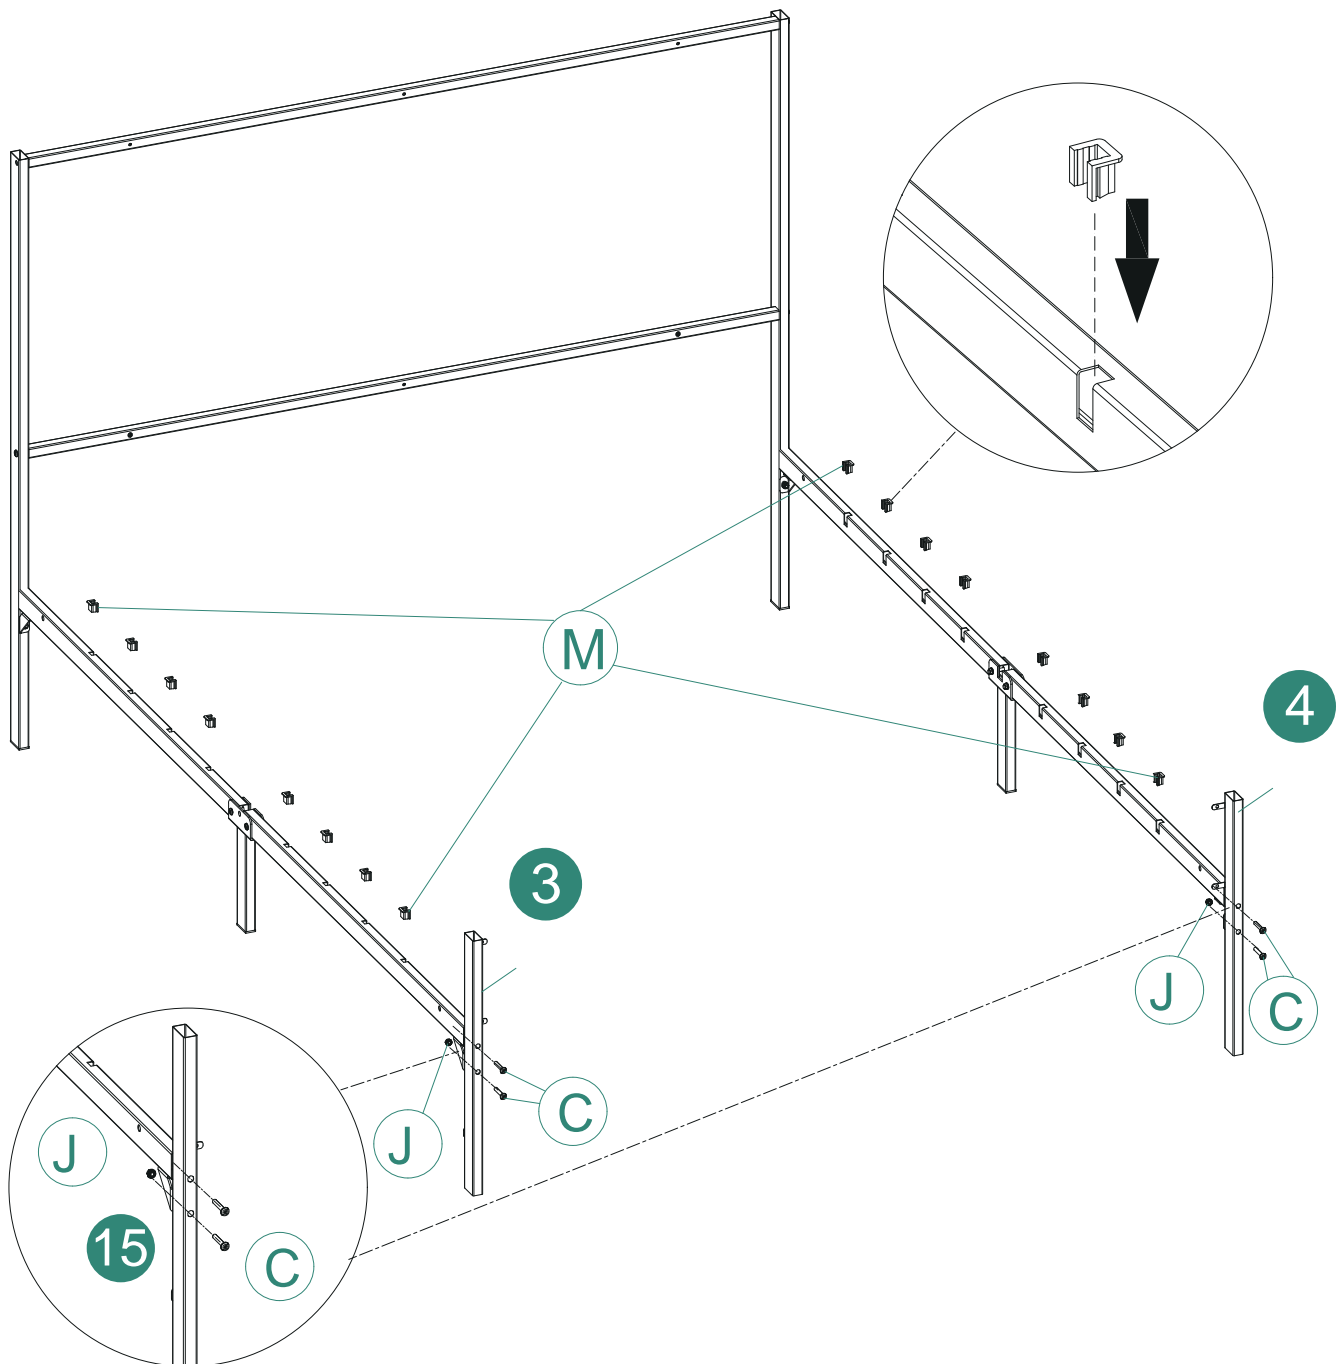

6




(B) 4pcs




(5) 2pcs

Step 6:

Install Front/Back cross beam(part 5) into side vertical beam with screw (B).

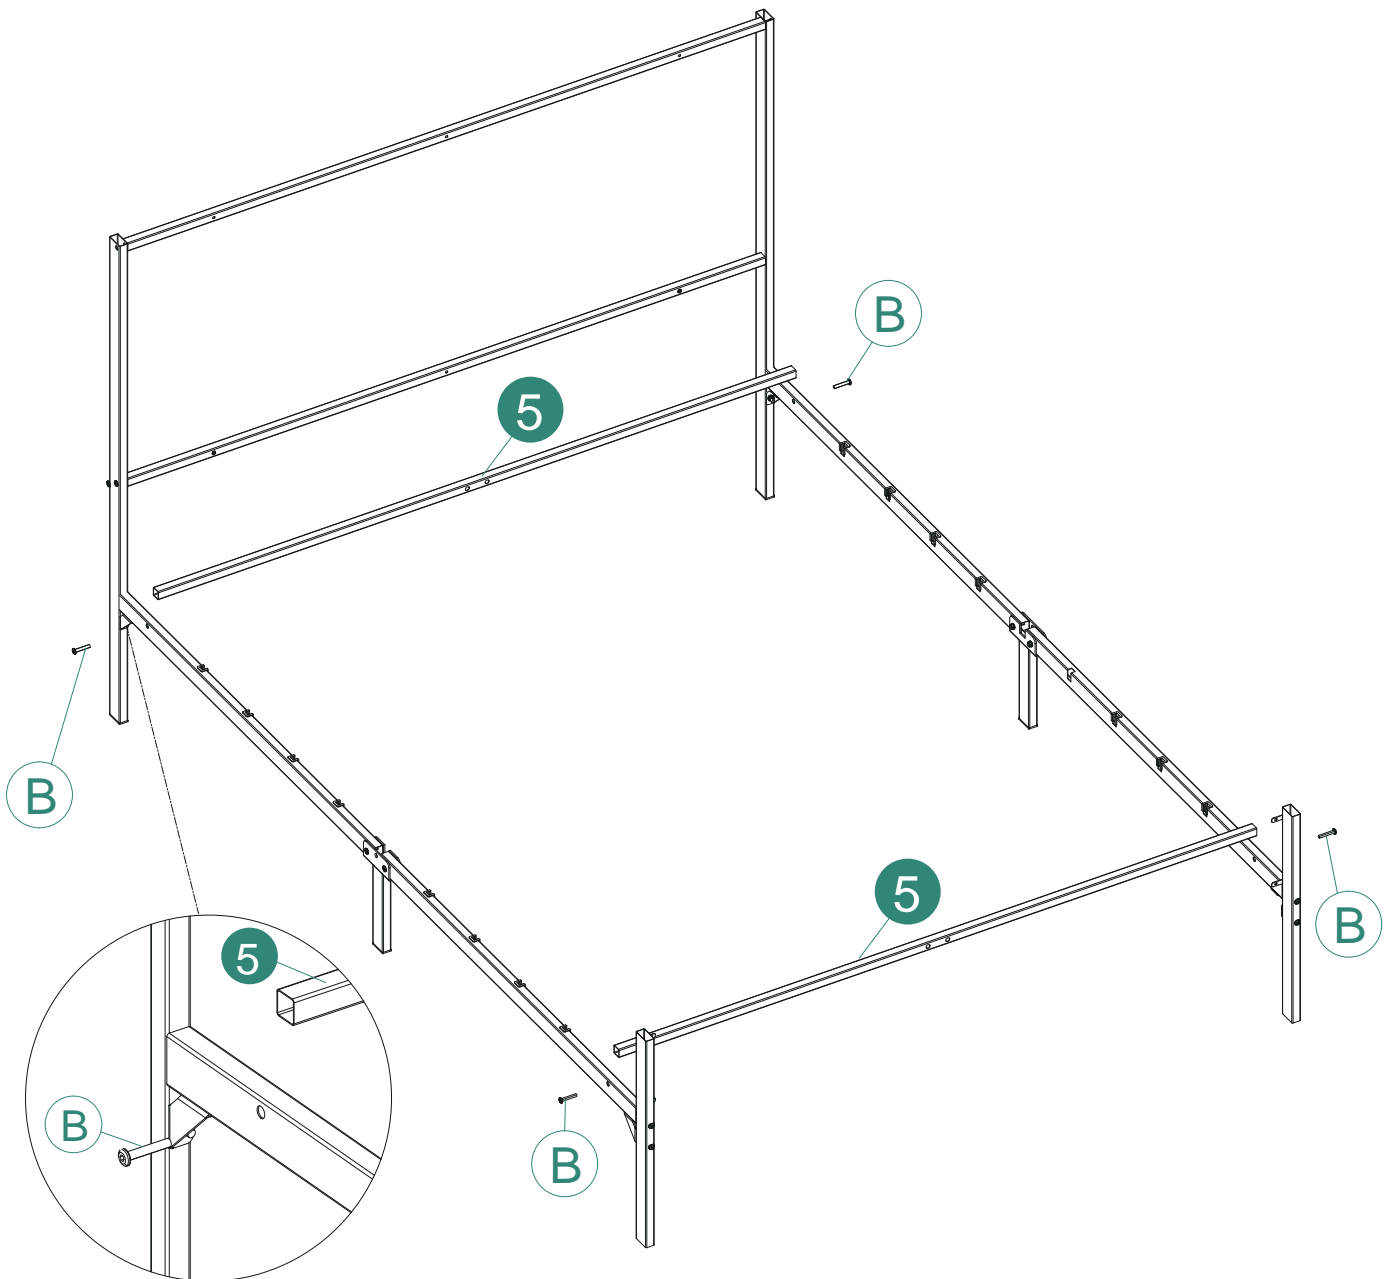


7

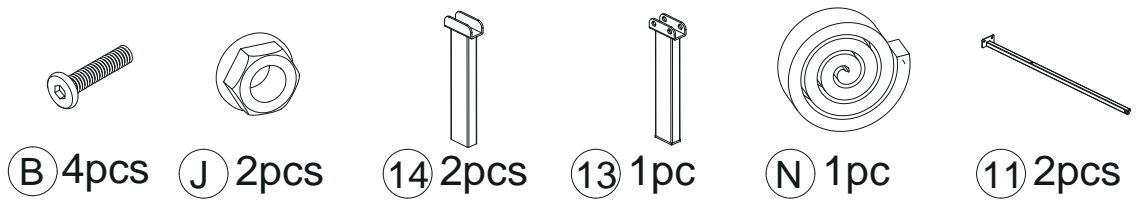


Step 7:

Align Middle vertical beam (part 11), Middle leg (part 13) with screw (B) and nut (J), then connect Front/back leg (part 14) to middle vertical beam with screw (B). Then stick EVA mute stickers (N) to Middle vertical beam.

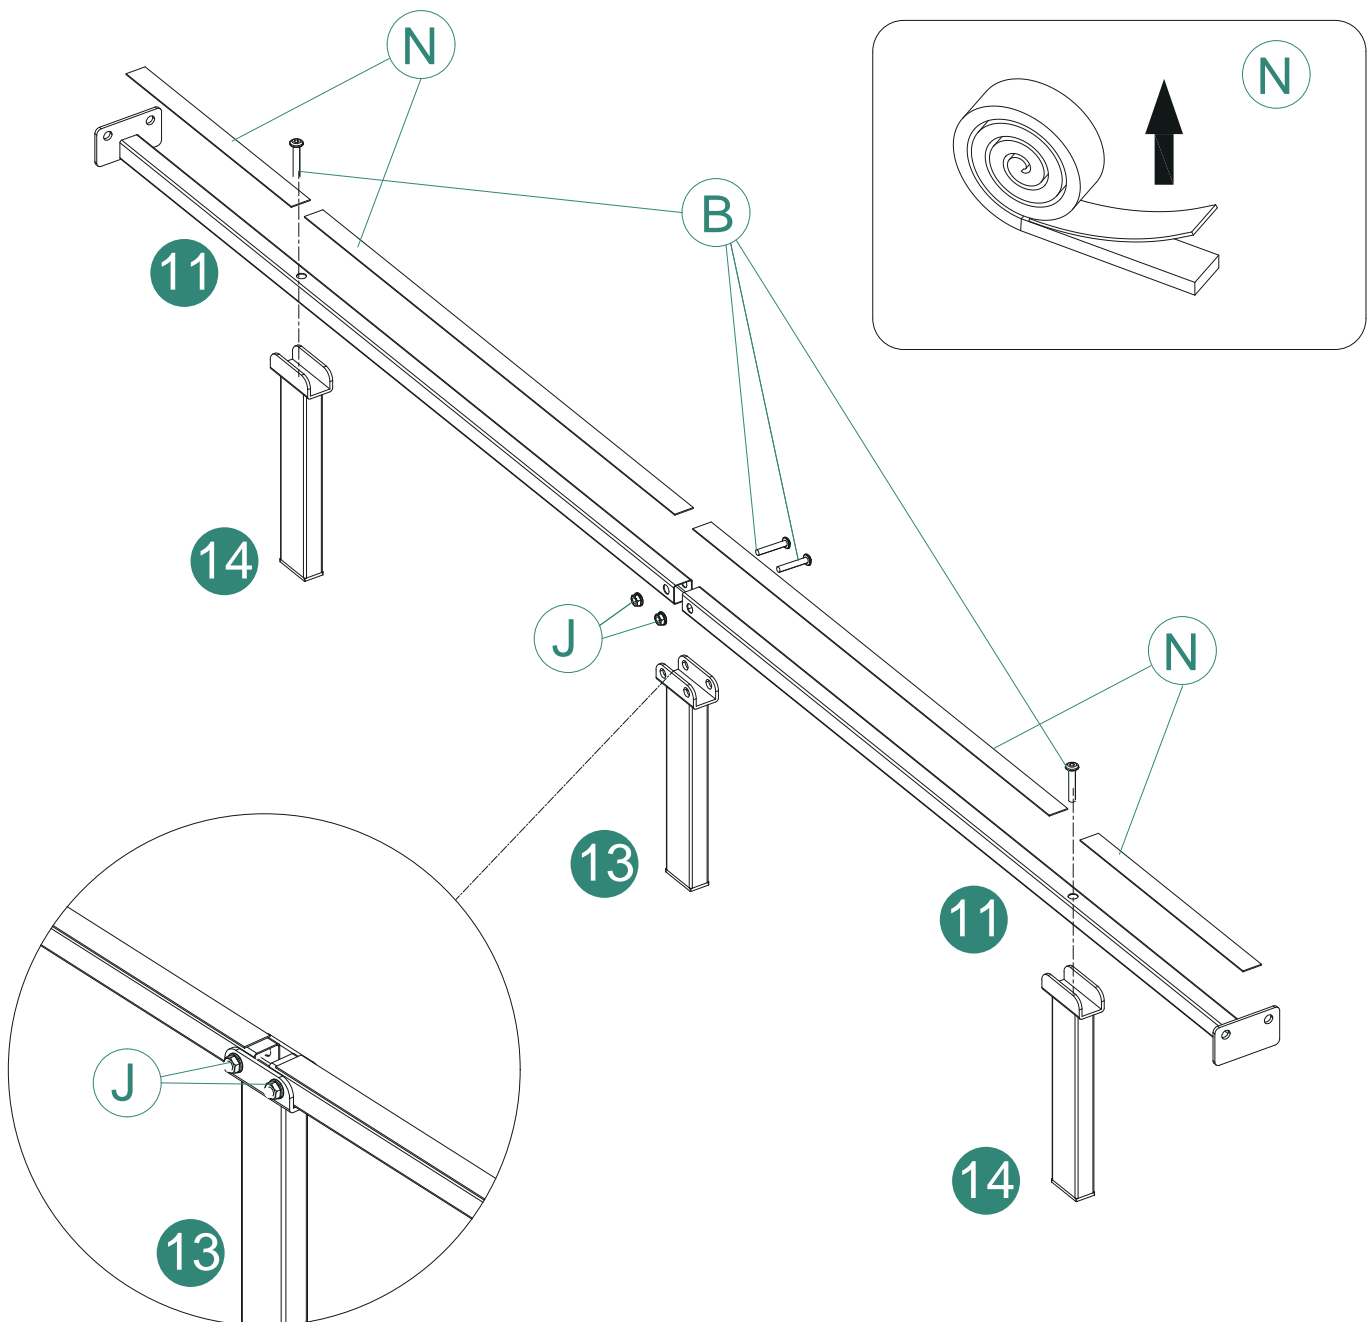


8

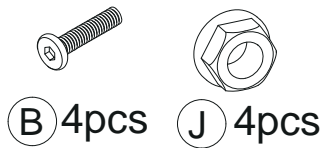

Step 8:


Secure middle vertical beam (part 11) to Front/Back cross beam (part 5) with screw (B) and nut (J).

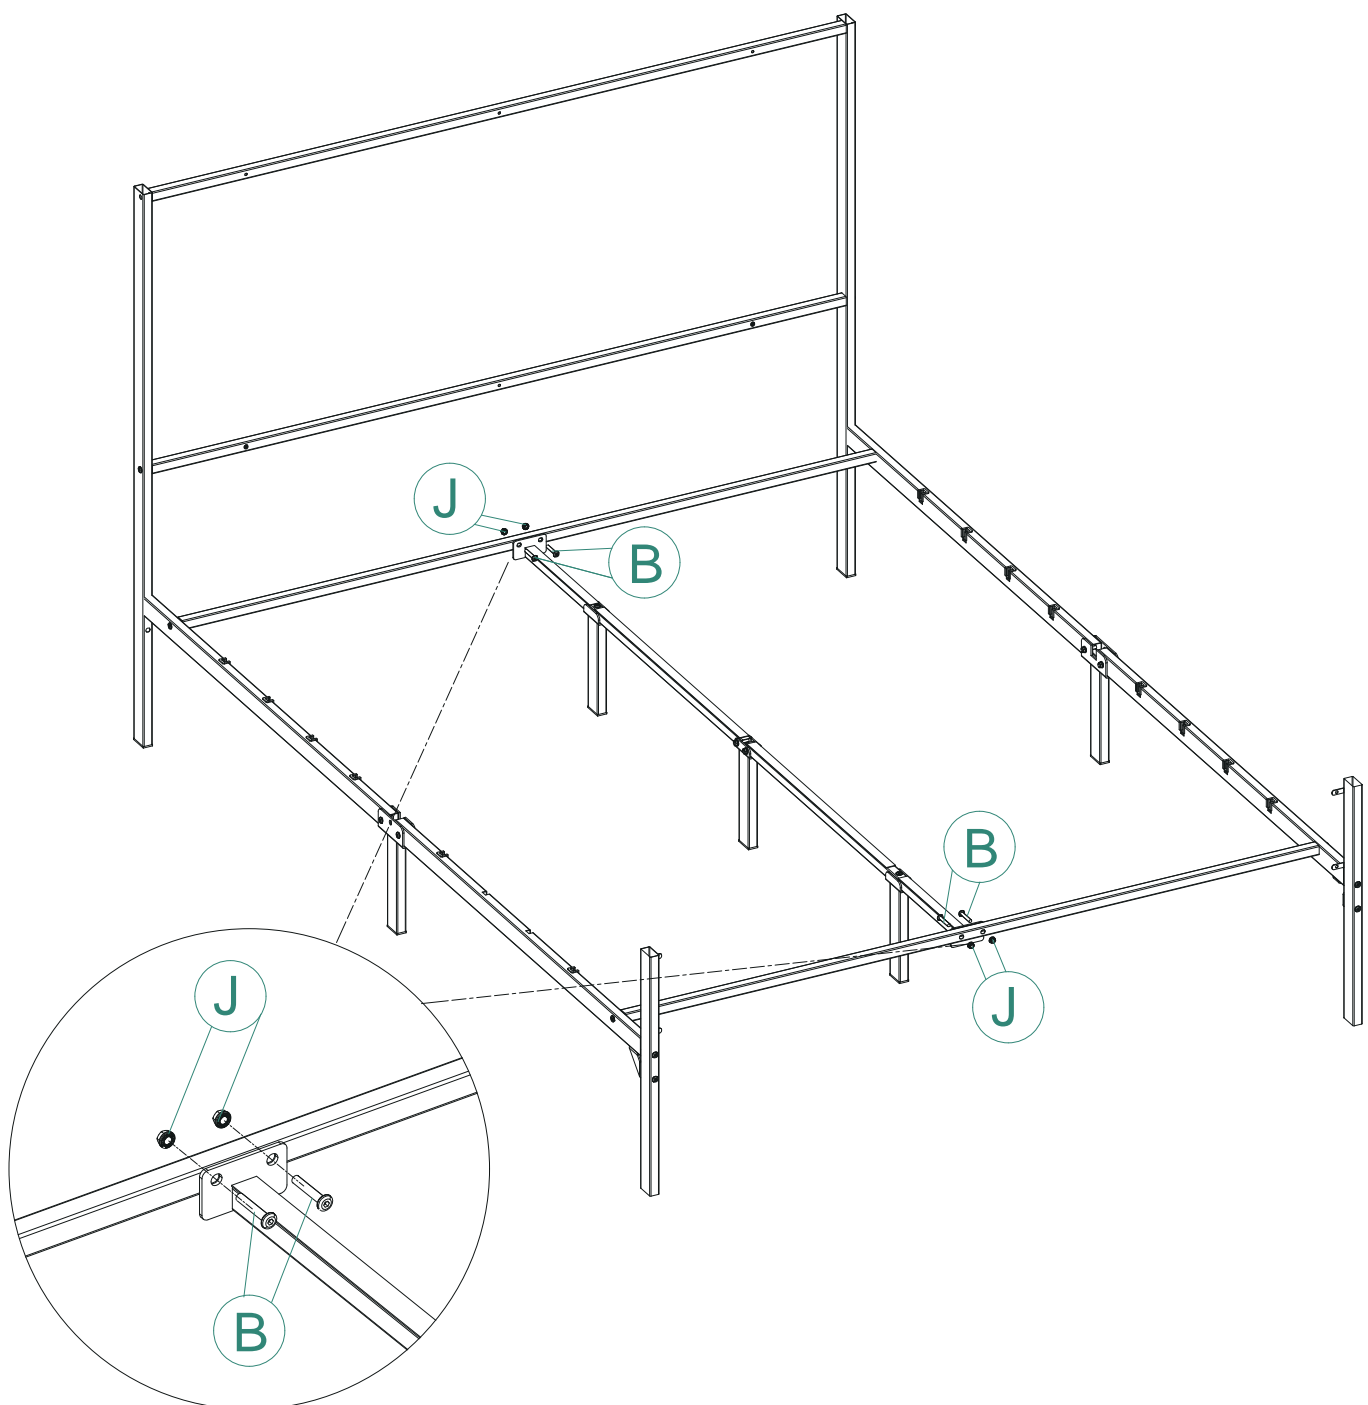

9




⑥ 8pcs



③ 1pc





④ 2pcs




⑦ 1pc

Step 9:

Press Metal slats(part 6)into Rubber card slot(M),secure Middle cross beam(part 7)on Right/left leg(part 12)with screw (A and C).

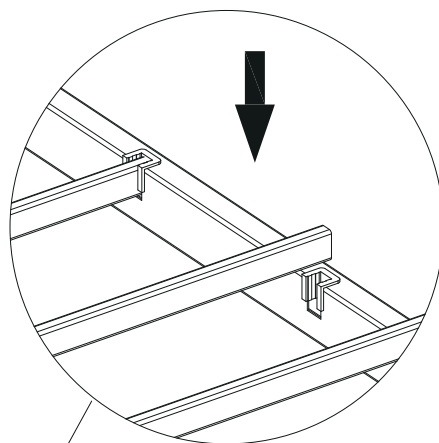
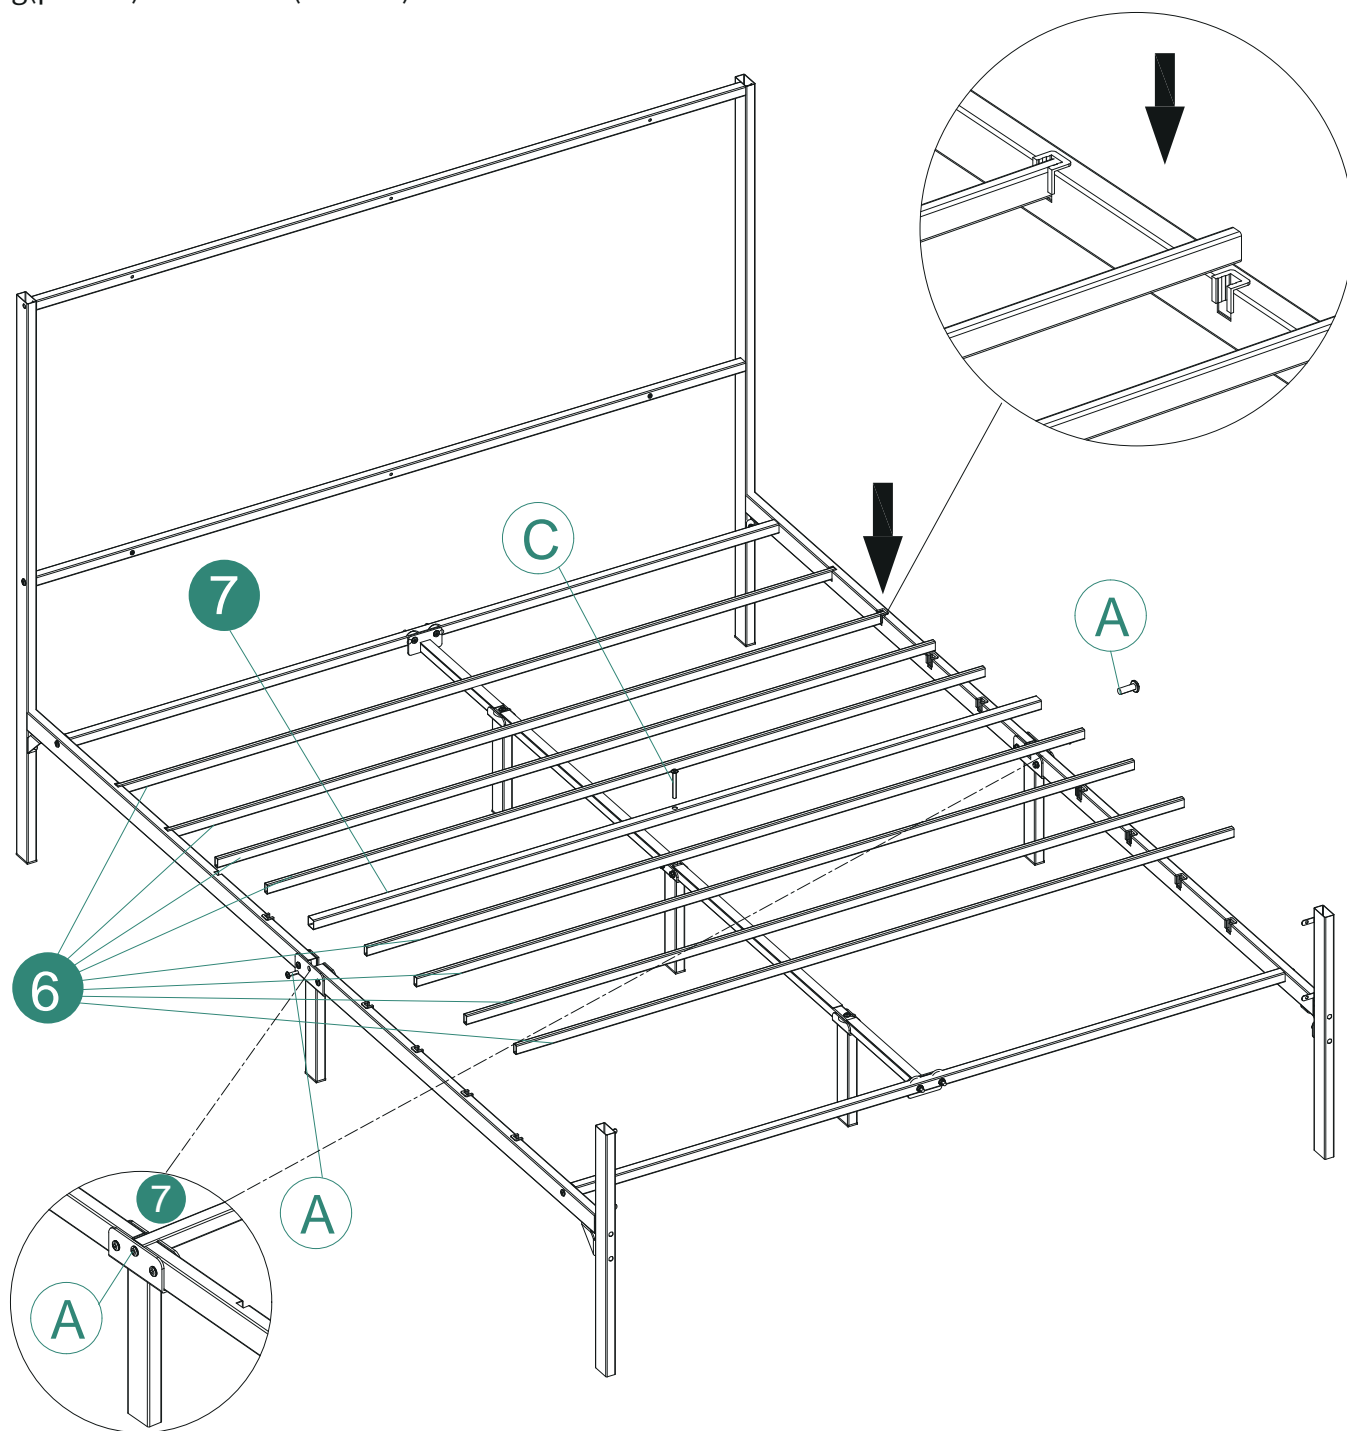


10

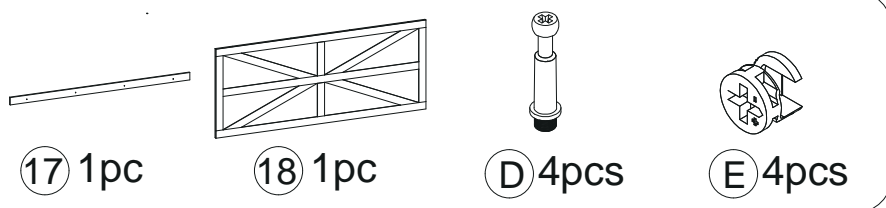


Step 10:

Install Connectors rod (D) into Board-1(part 17),then connect Board-1(part 17)with Board-2(part 18)by Cam lock(E).

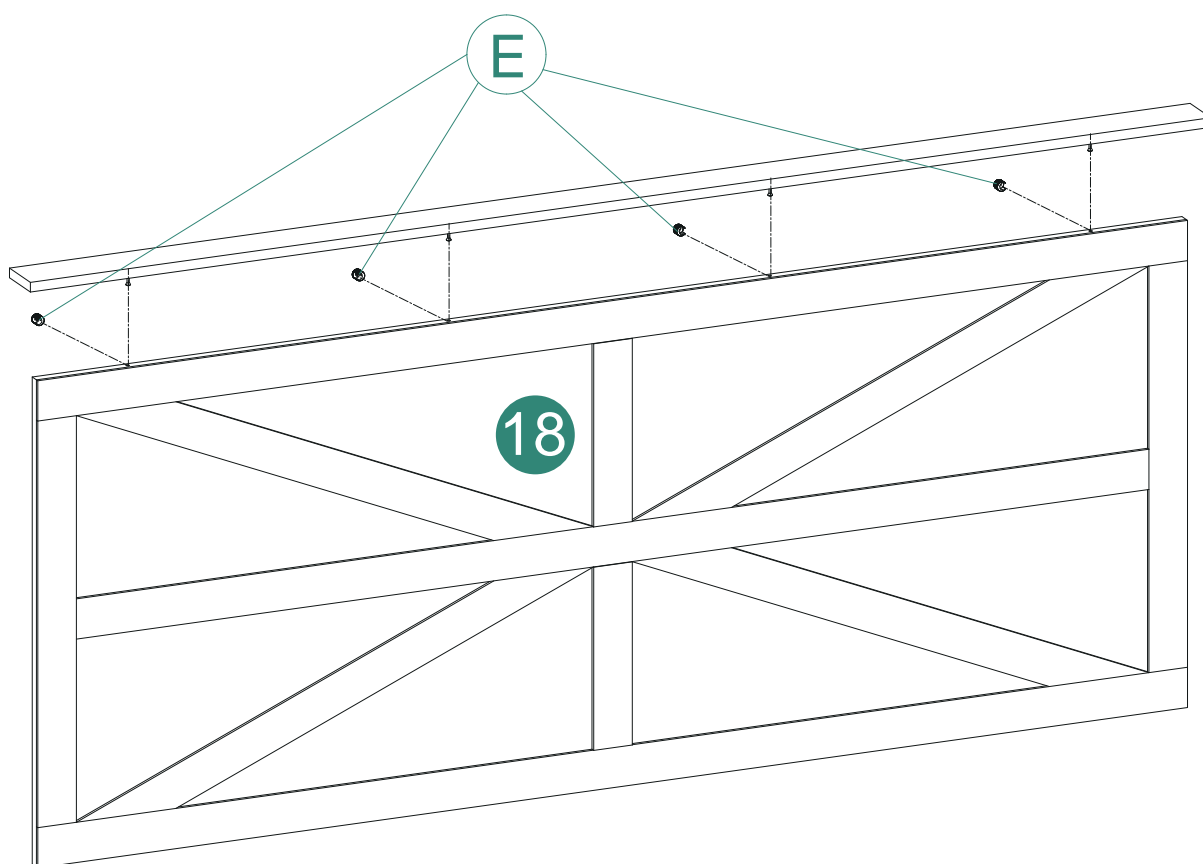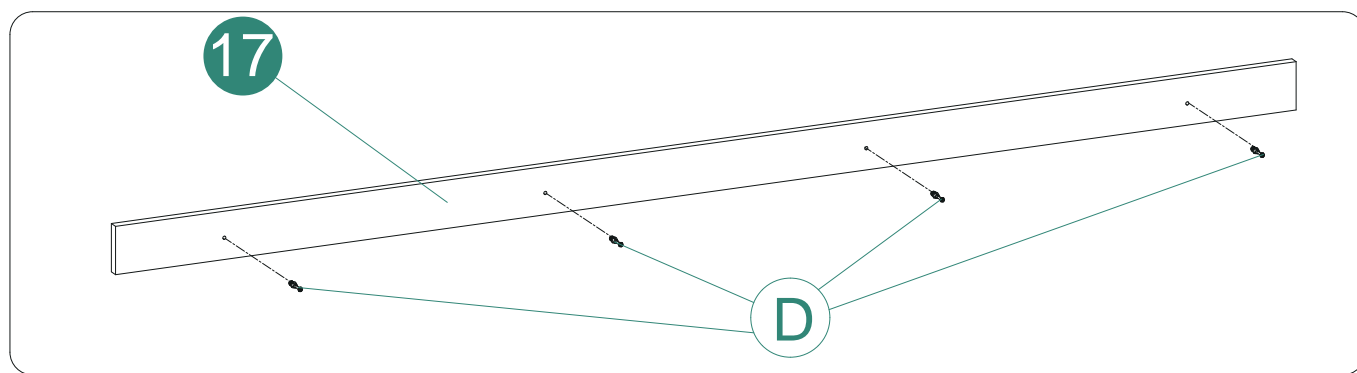


11




Ⓜ H 6pcs

Step 11:

Secure them with screw(H), (just do it as indicating diagram).

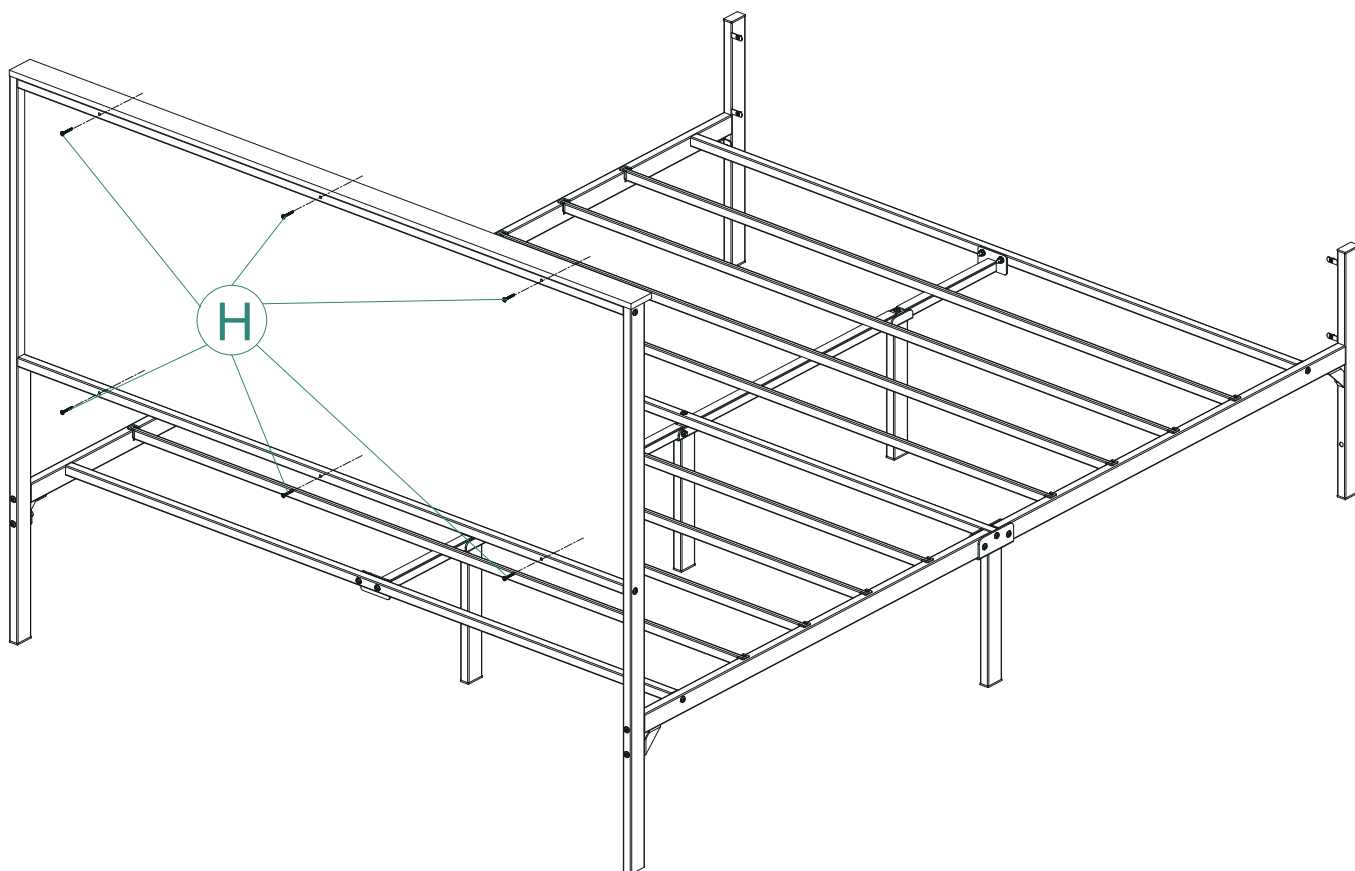

12



F 16pcs



19 1pc




20 1pc




21 4pcs

Step 12:

Connect Board-3(part 19) with Board-4(part 20) , Board-5(part 21) separately by screw(F).

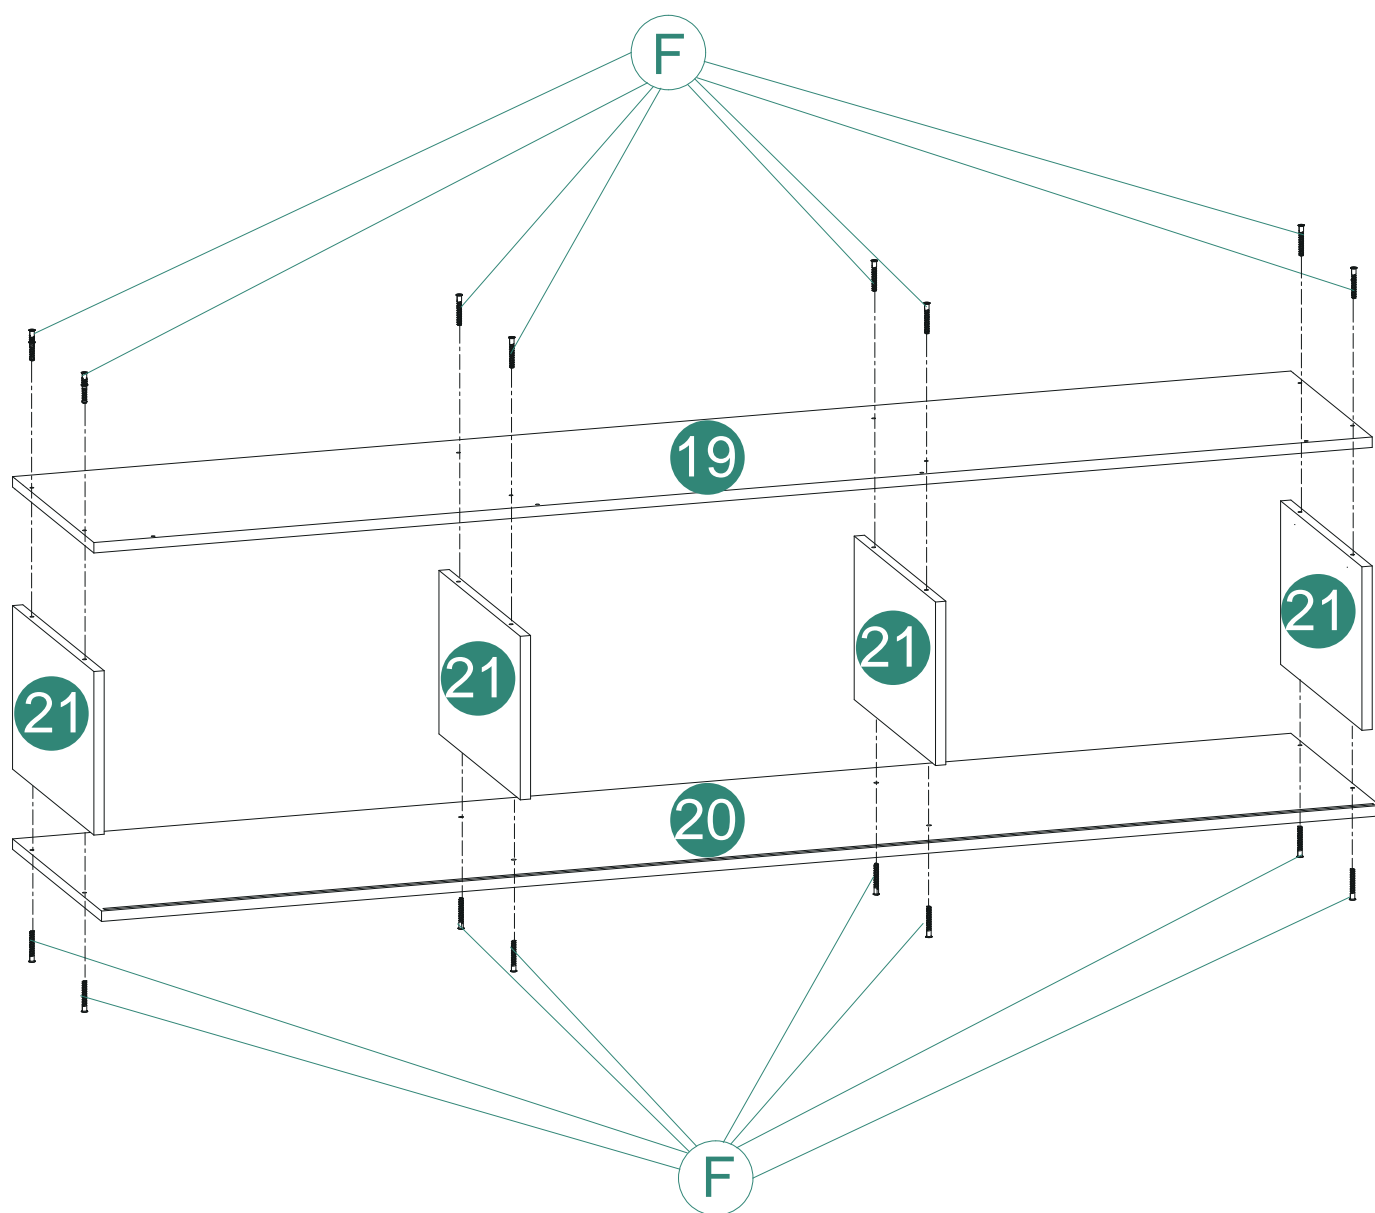



13

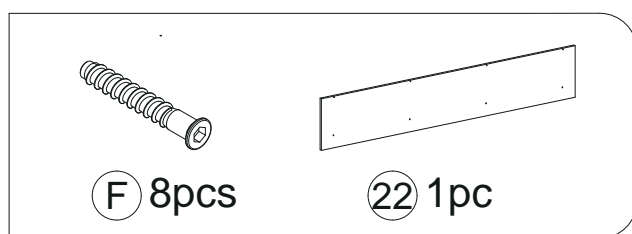

Step 13:


Cover Board-3 (part 19) and Board-4(part 20) by Board-6(part 22) then sccure them by screw(F),(just do it as indicating diagram)

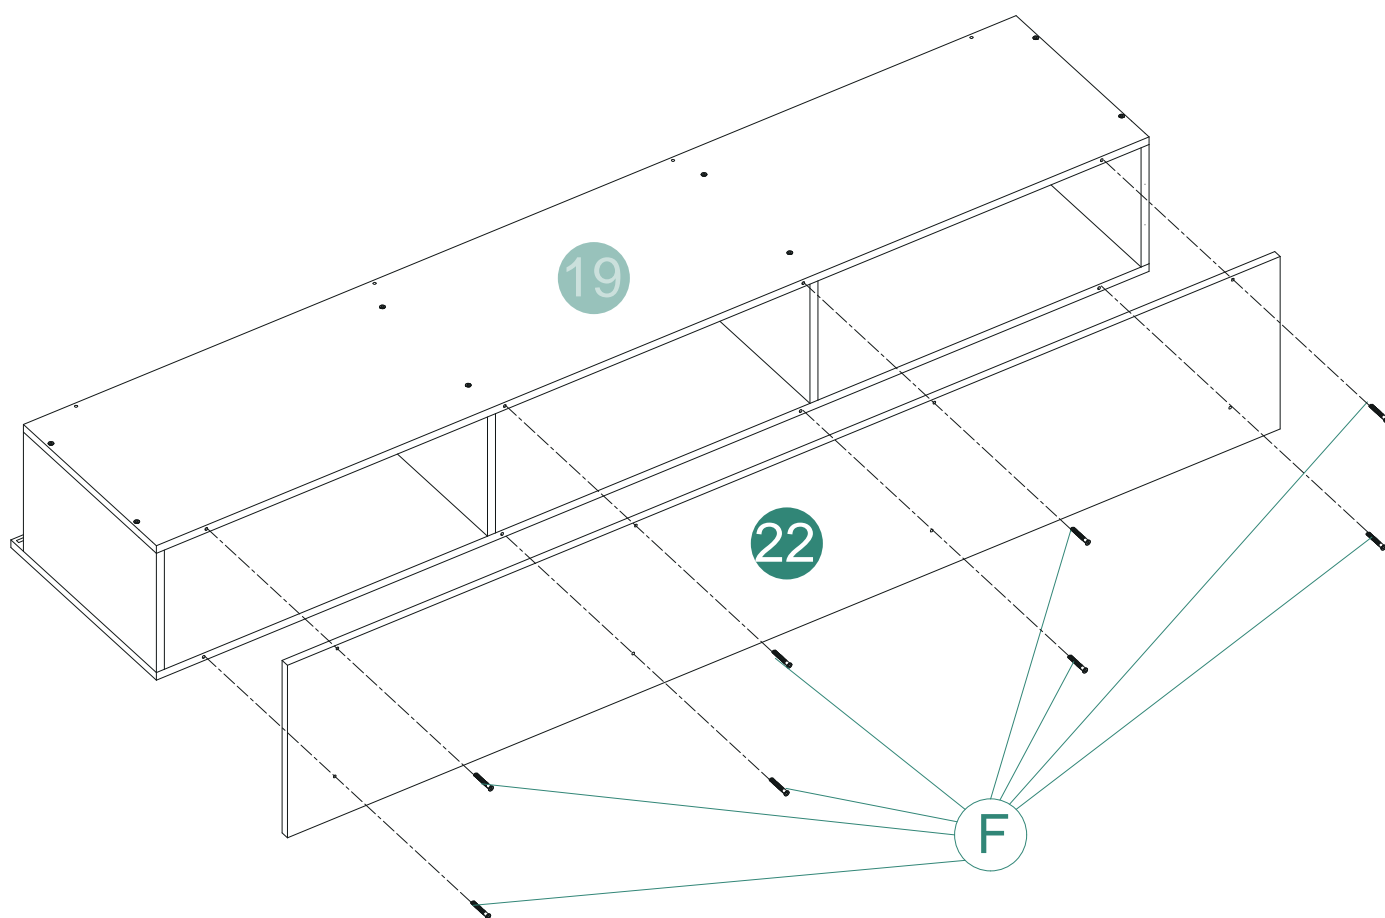

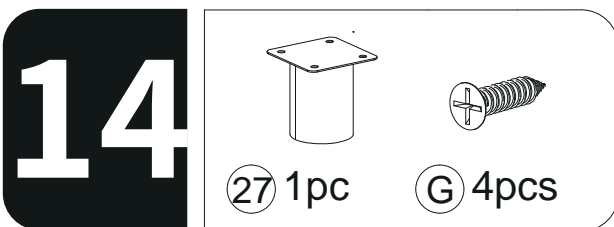


Step 14:

Install Central leg at the end of bed (part 27) into Board-4(part 20) by screw(G).

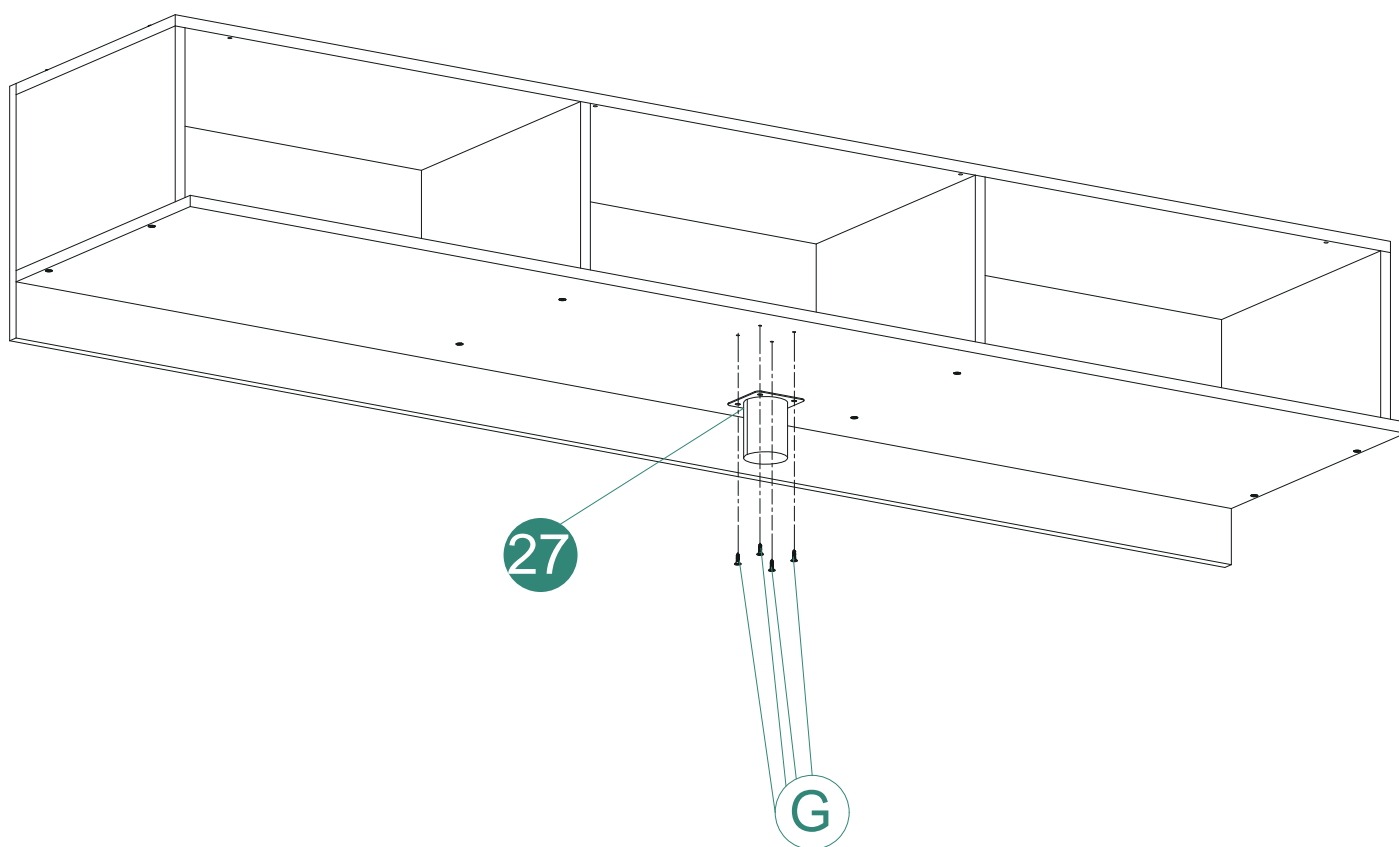

15



Ⓕ 7pcs




Ⓒ 1pc



Ⓓ 1pc

Step 15:


Connect Board-7(part 23) with Board-8(part 24) by screw(F).

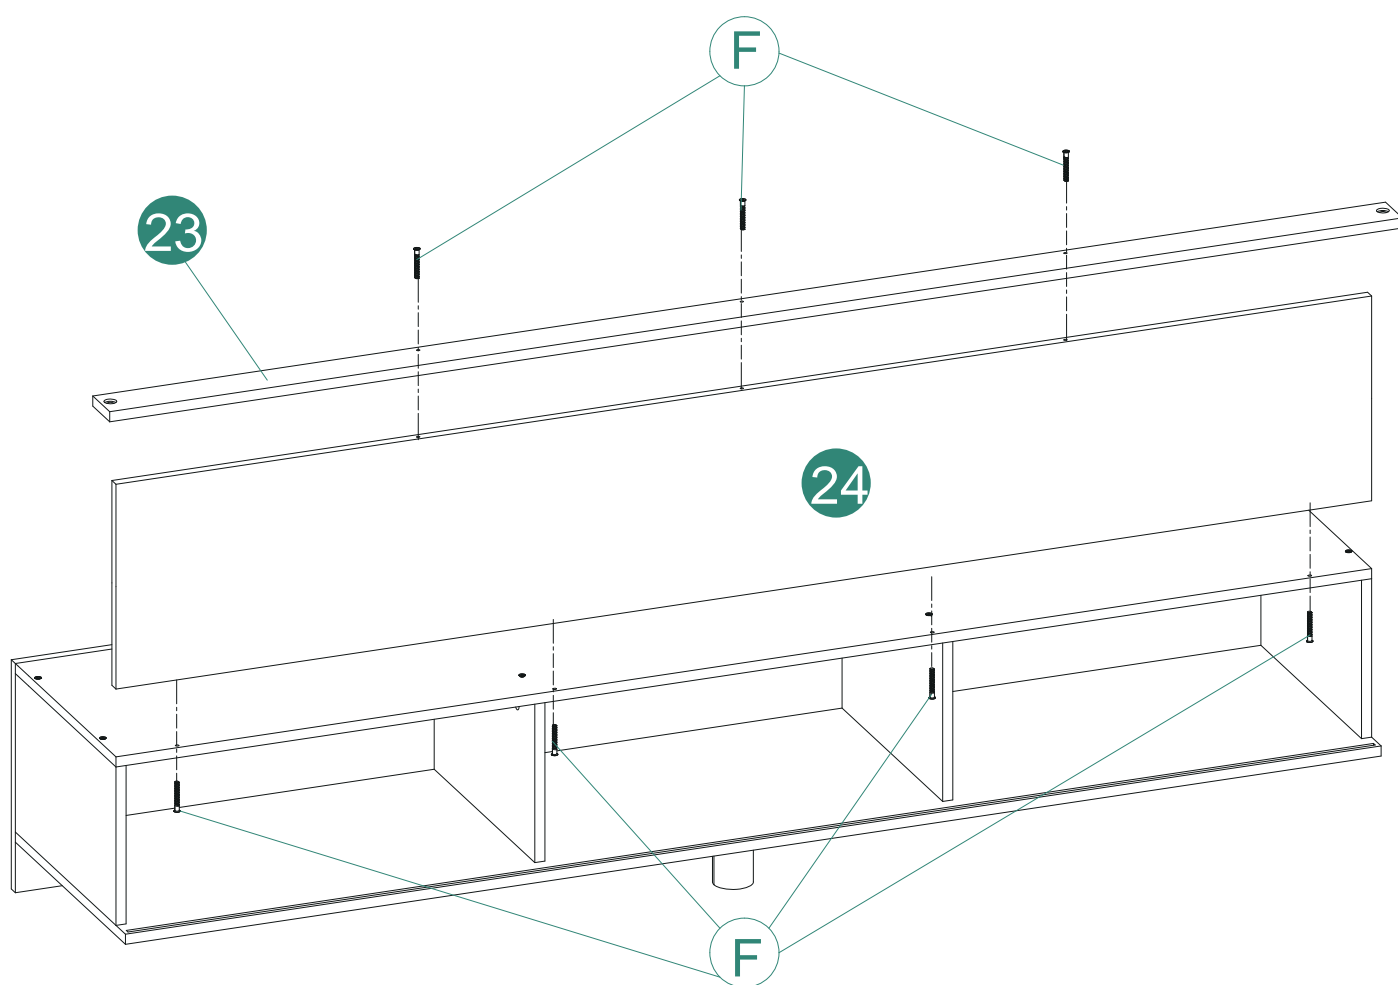

16




28 1pc




Q 4pcs

Step 16:


Install Rail and Hook (part 28) into Board-8(part 24) by screw (Q).

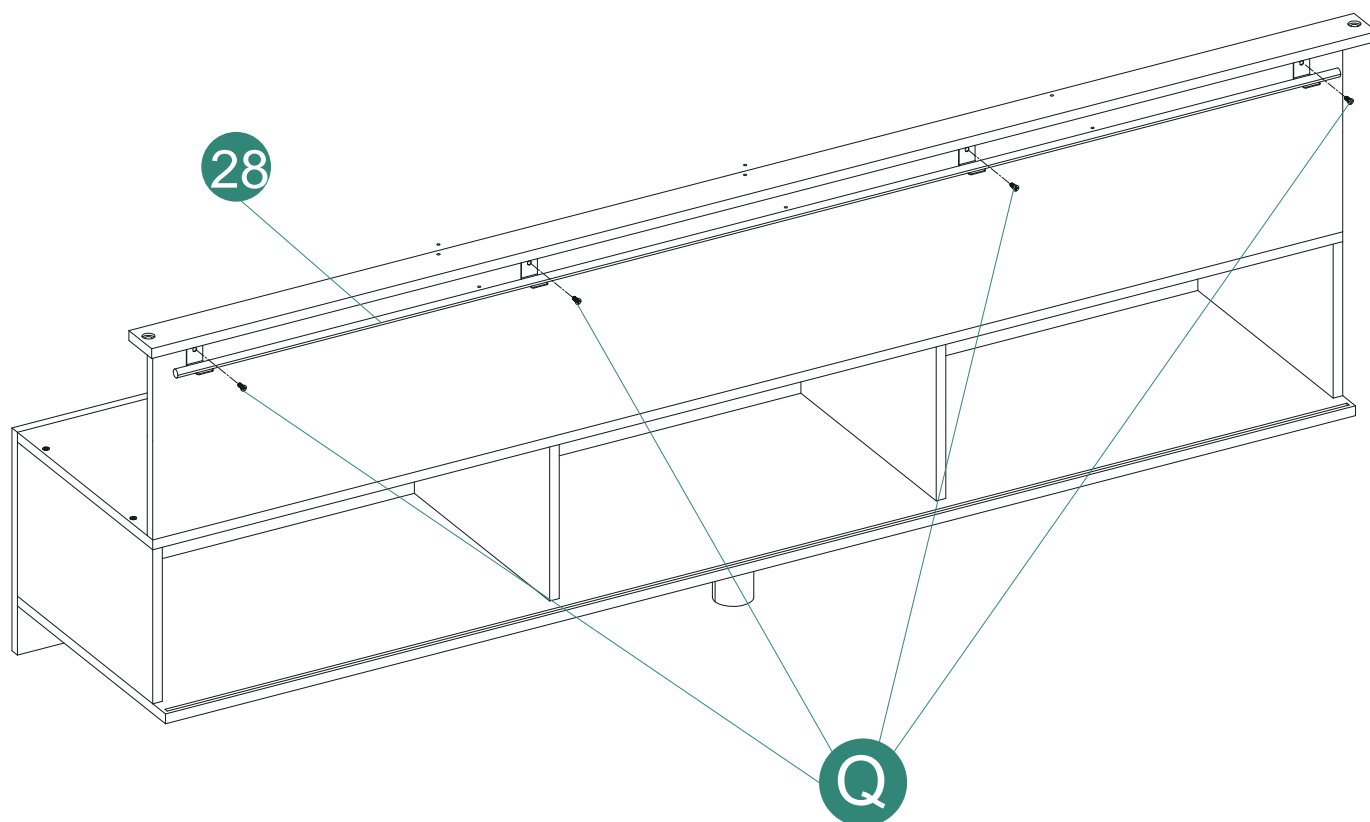

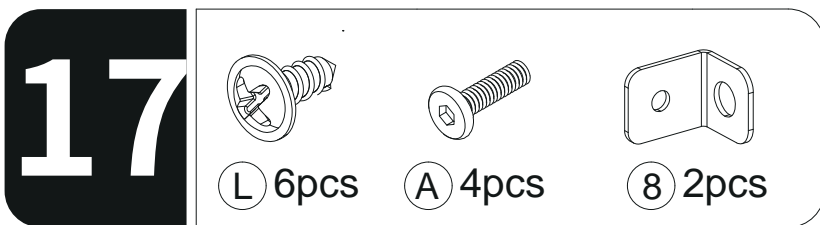


Step 17:

Secure Footboard with screw (A and L), then secure footboard side leg to barn by Bracket-L(part 8).

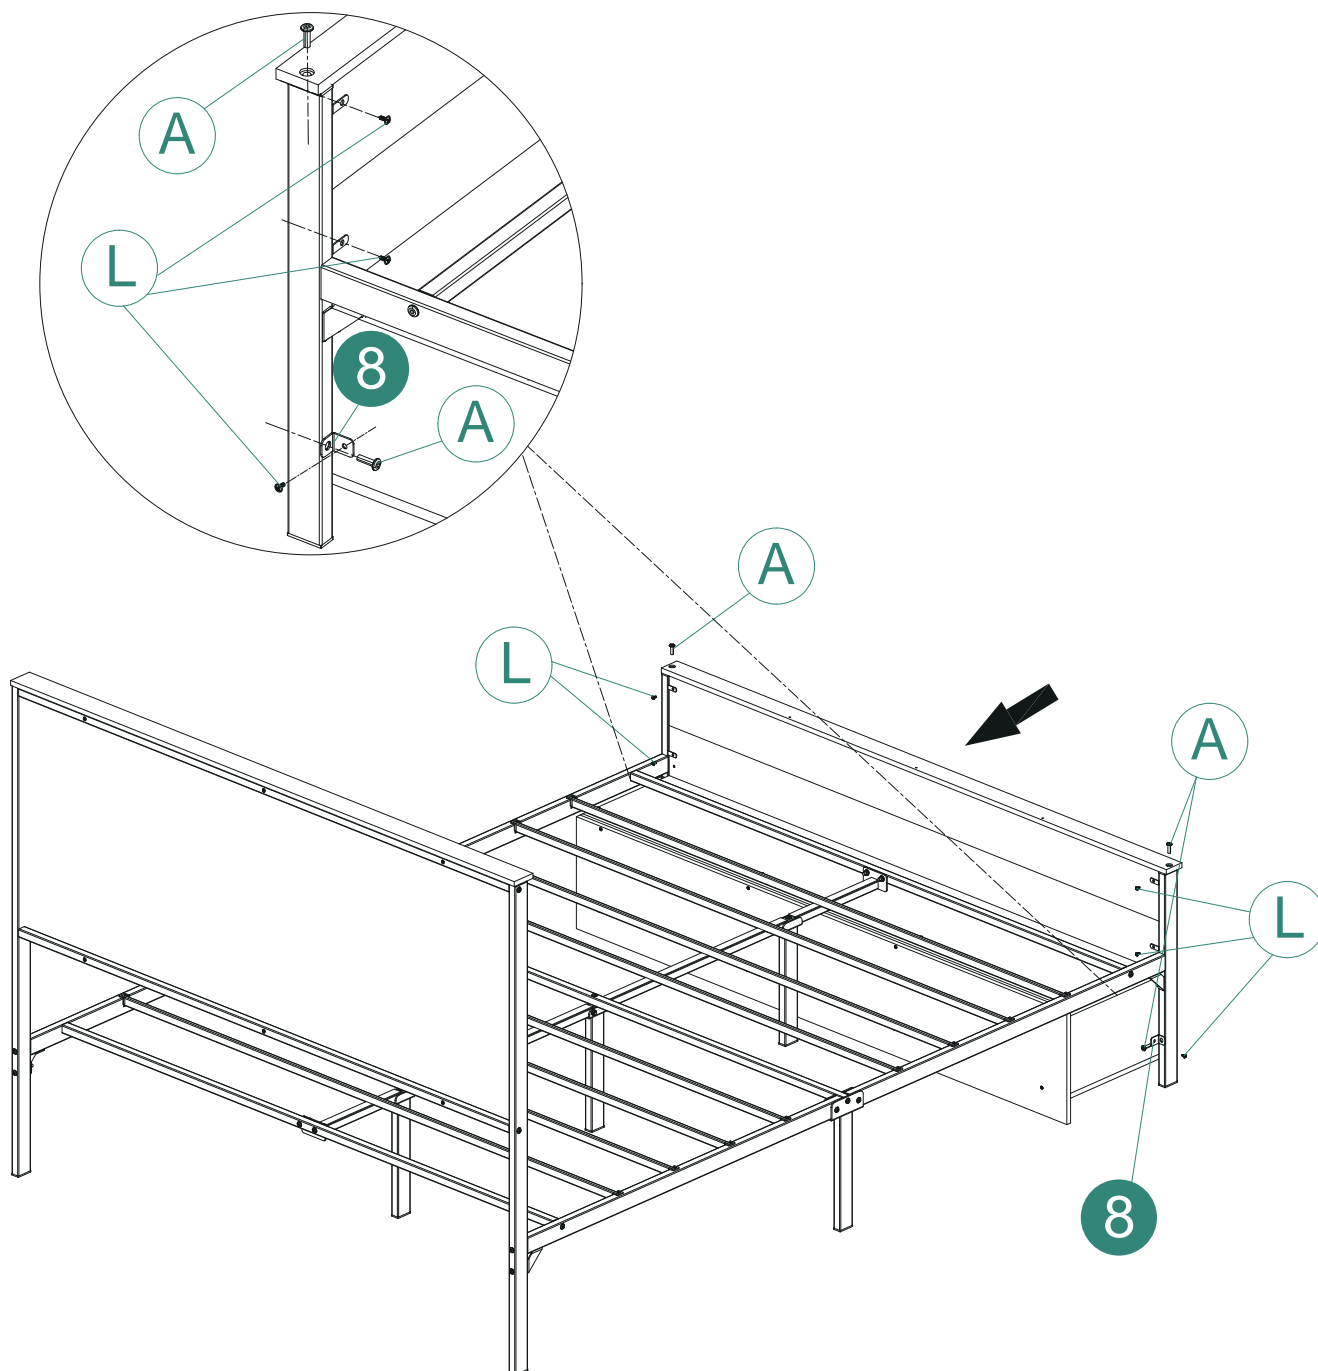


18

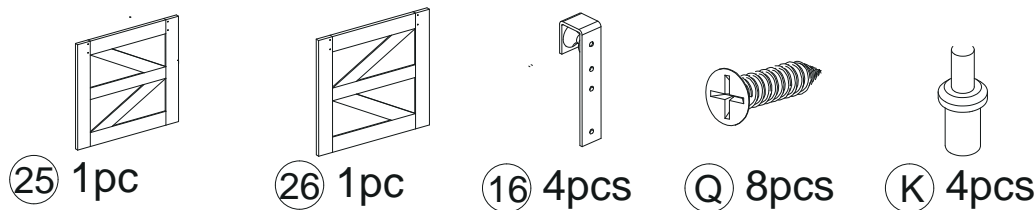


Step 18:

Secure Hangers (part 16) on left and right barn door(part 25 and 26)separately by screw (Q),then insert Metal dowel (K)into left and right barn door.

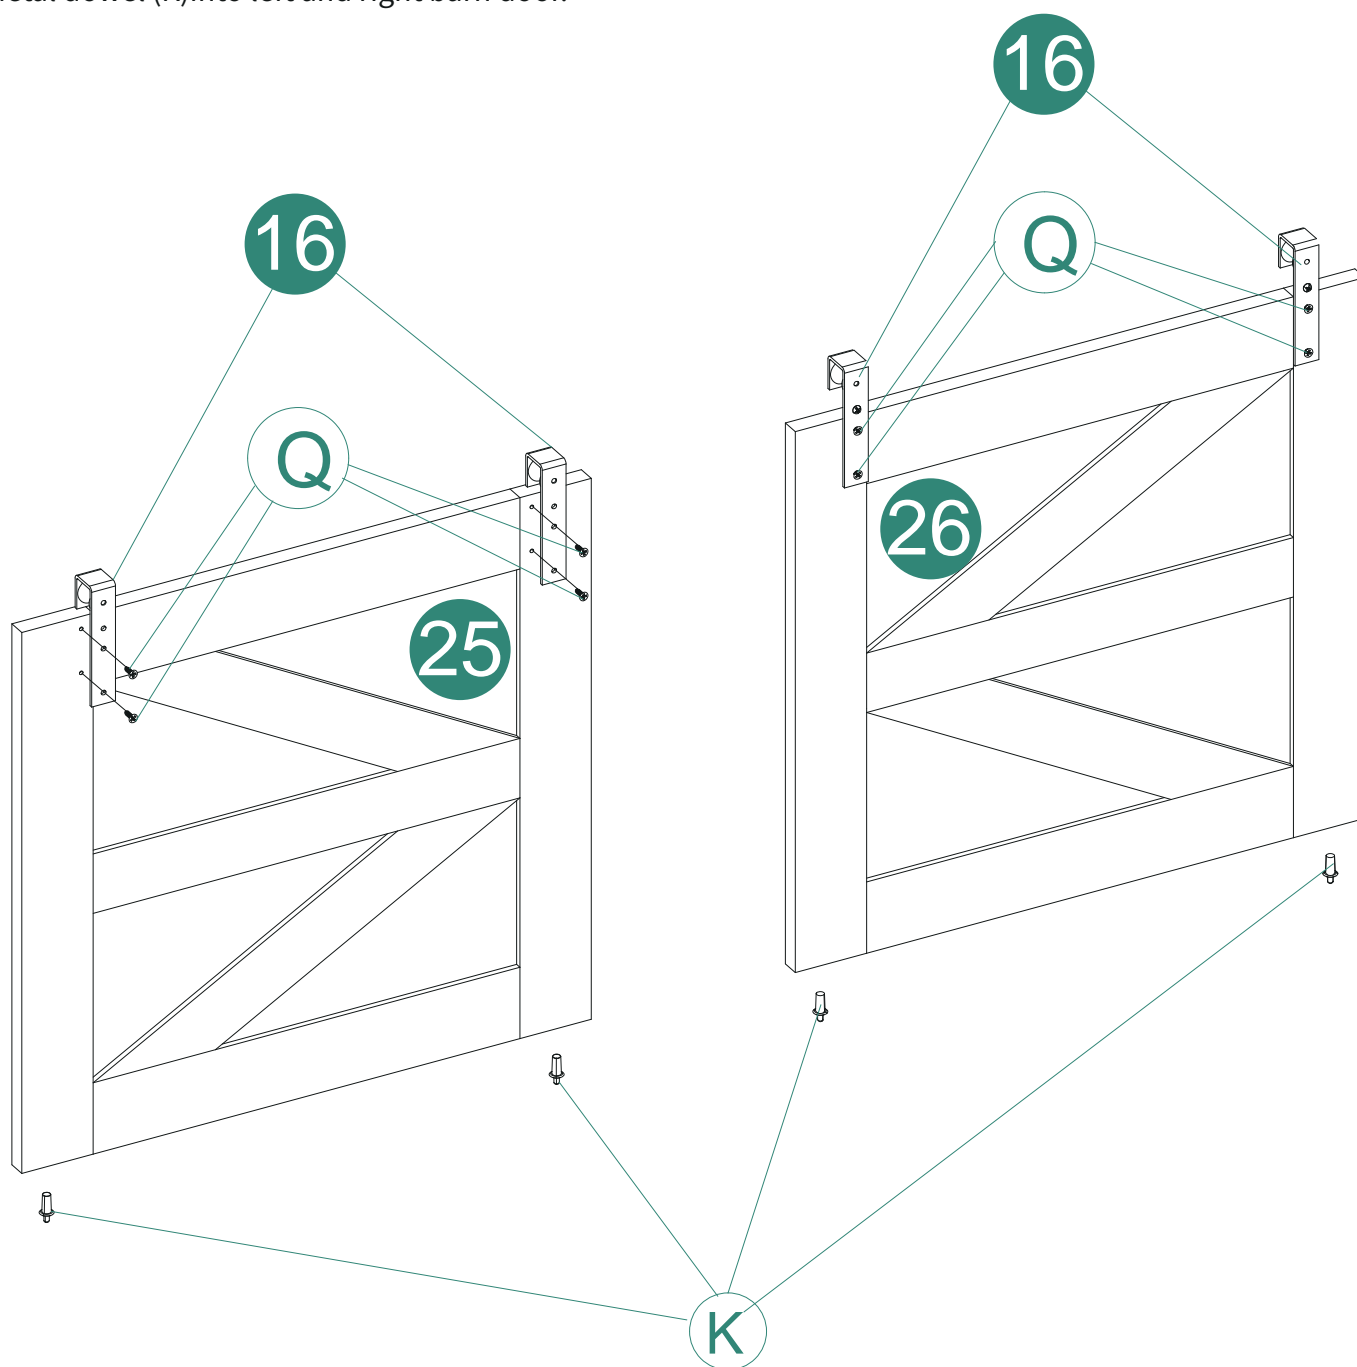


19

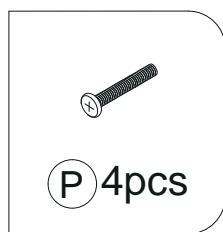


Step 19

Install screw(P) into Hangers(part 16) in order to support and secure the rail.

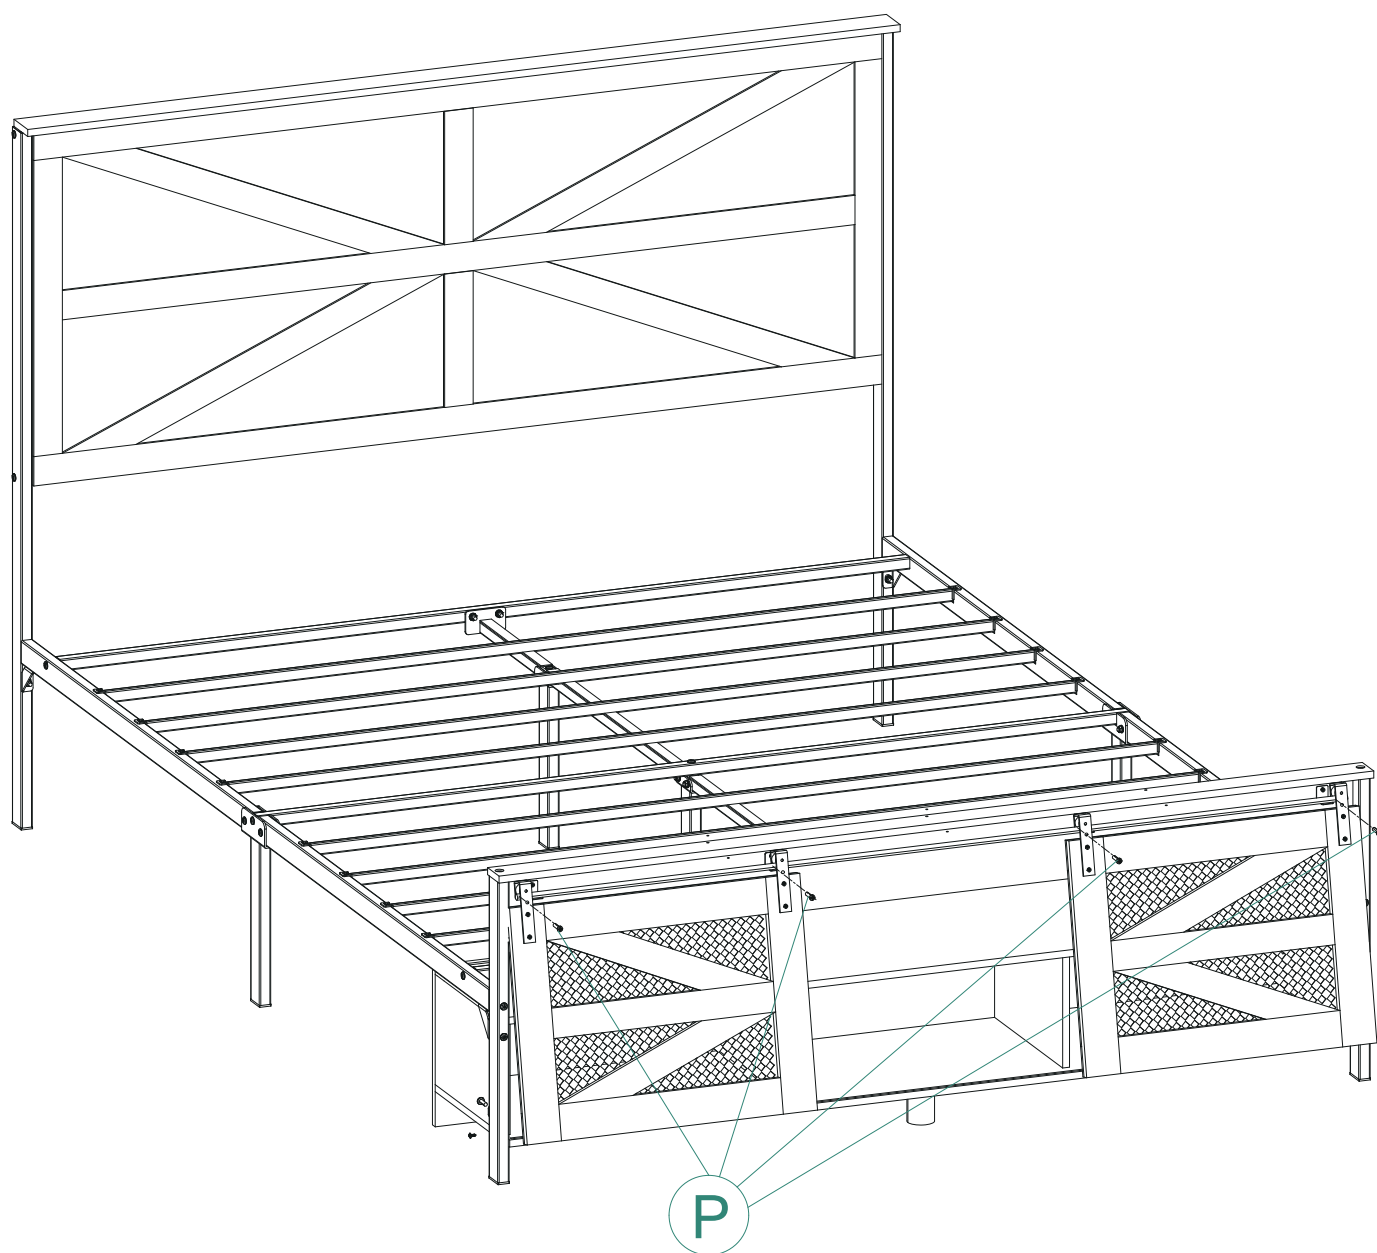

20

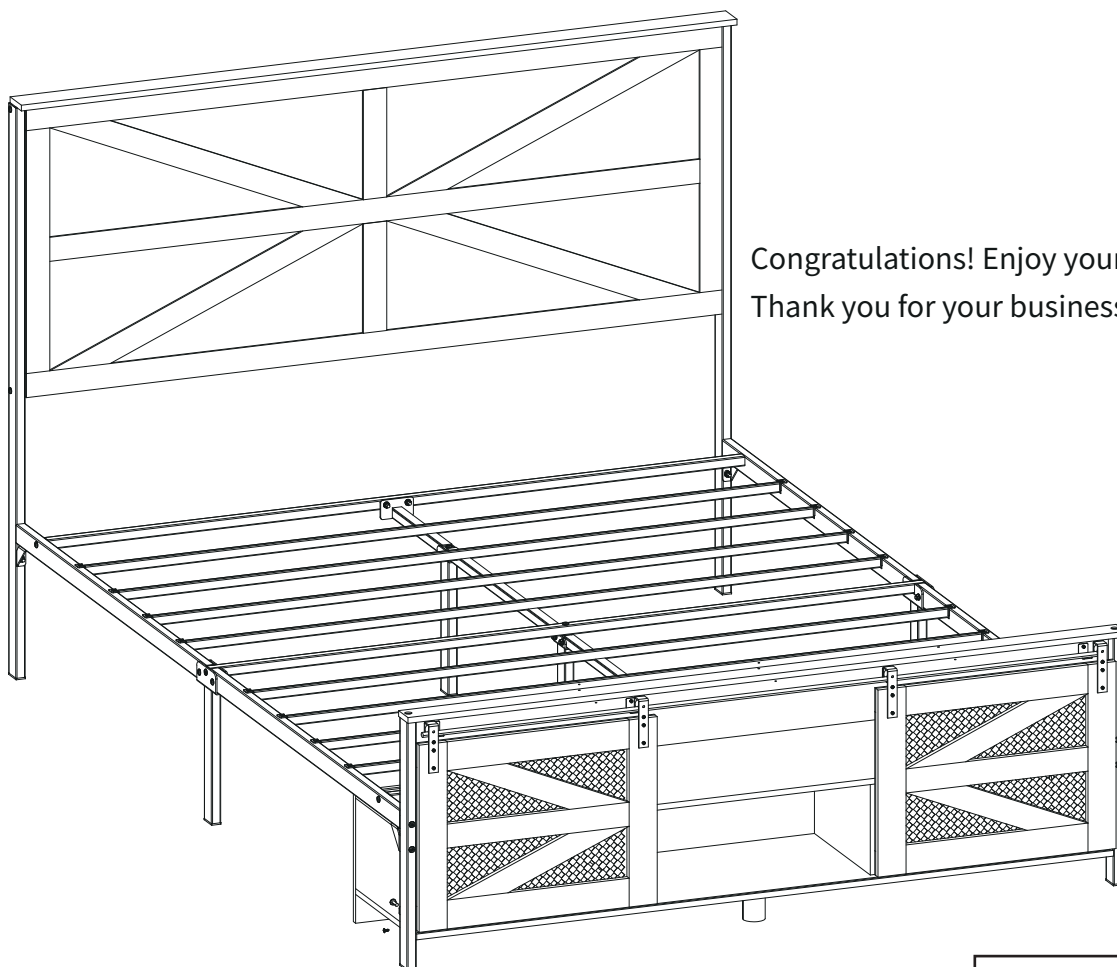

Congratulations! Enjoy your new purchase.
Thank you for your business



Installation Completed

Installation abgeschlossen

Installation complétée

Installazione completata

Instalación completada