

Outdoor Storage Shed


Assembly Guide



3 Hours



x 2

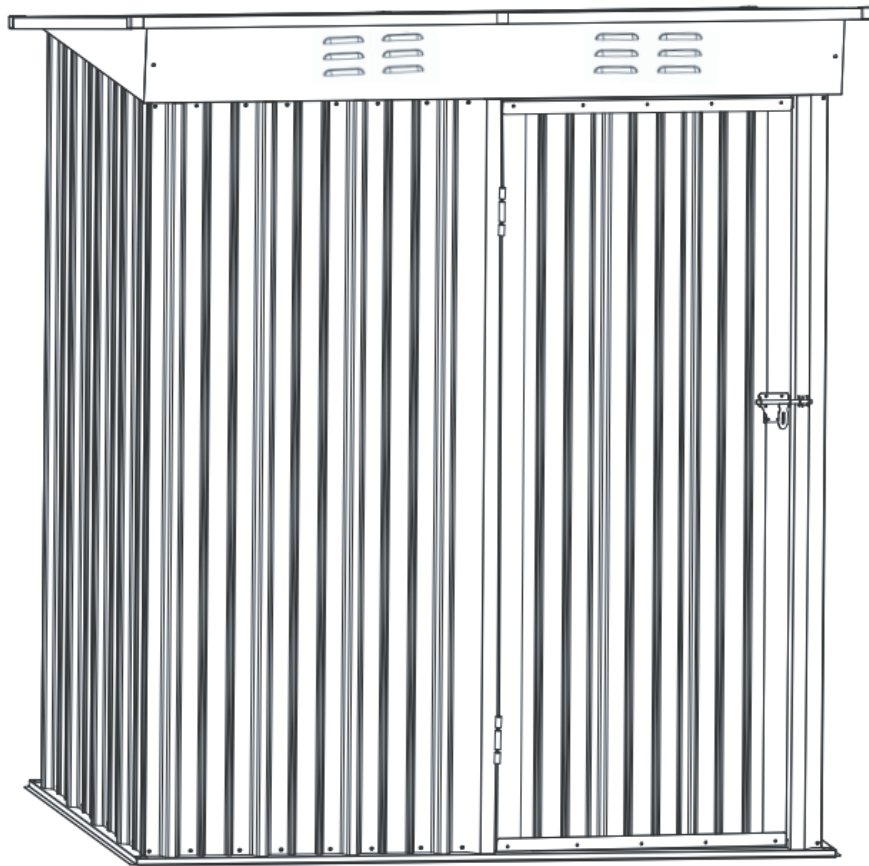


CUSTOMER FIRST, SERVICE FOREMOST!

QUESTIONS? ISSUES?

CONTACT US

REPLY WITHIN 24 HOURS IN BUSINESS DAYS

Exploded View

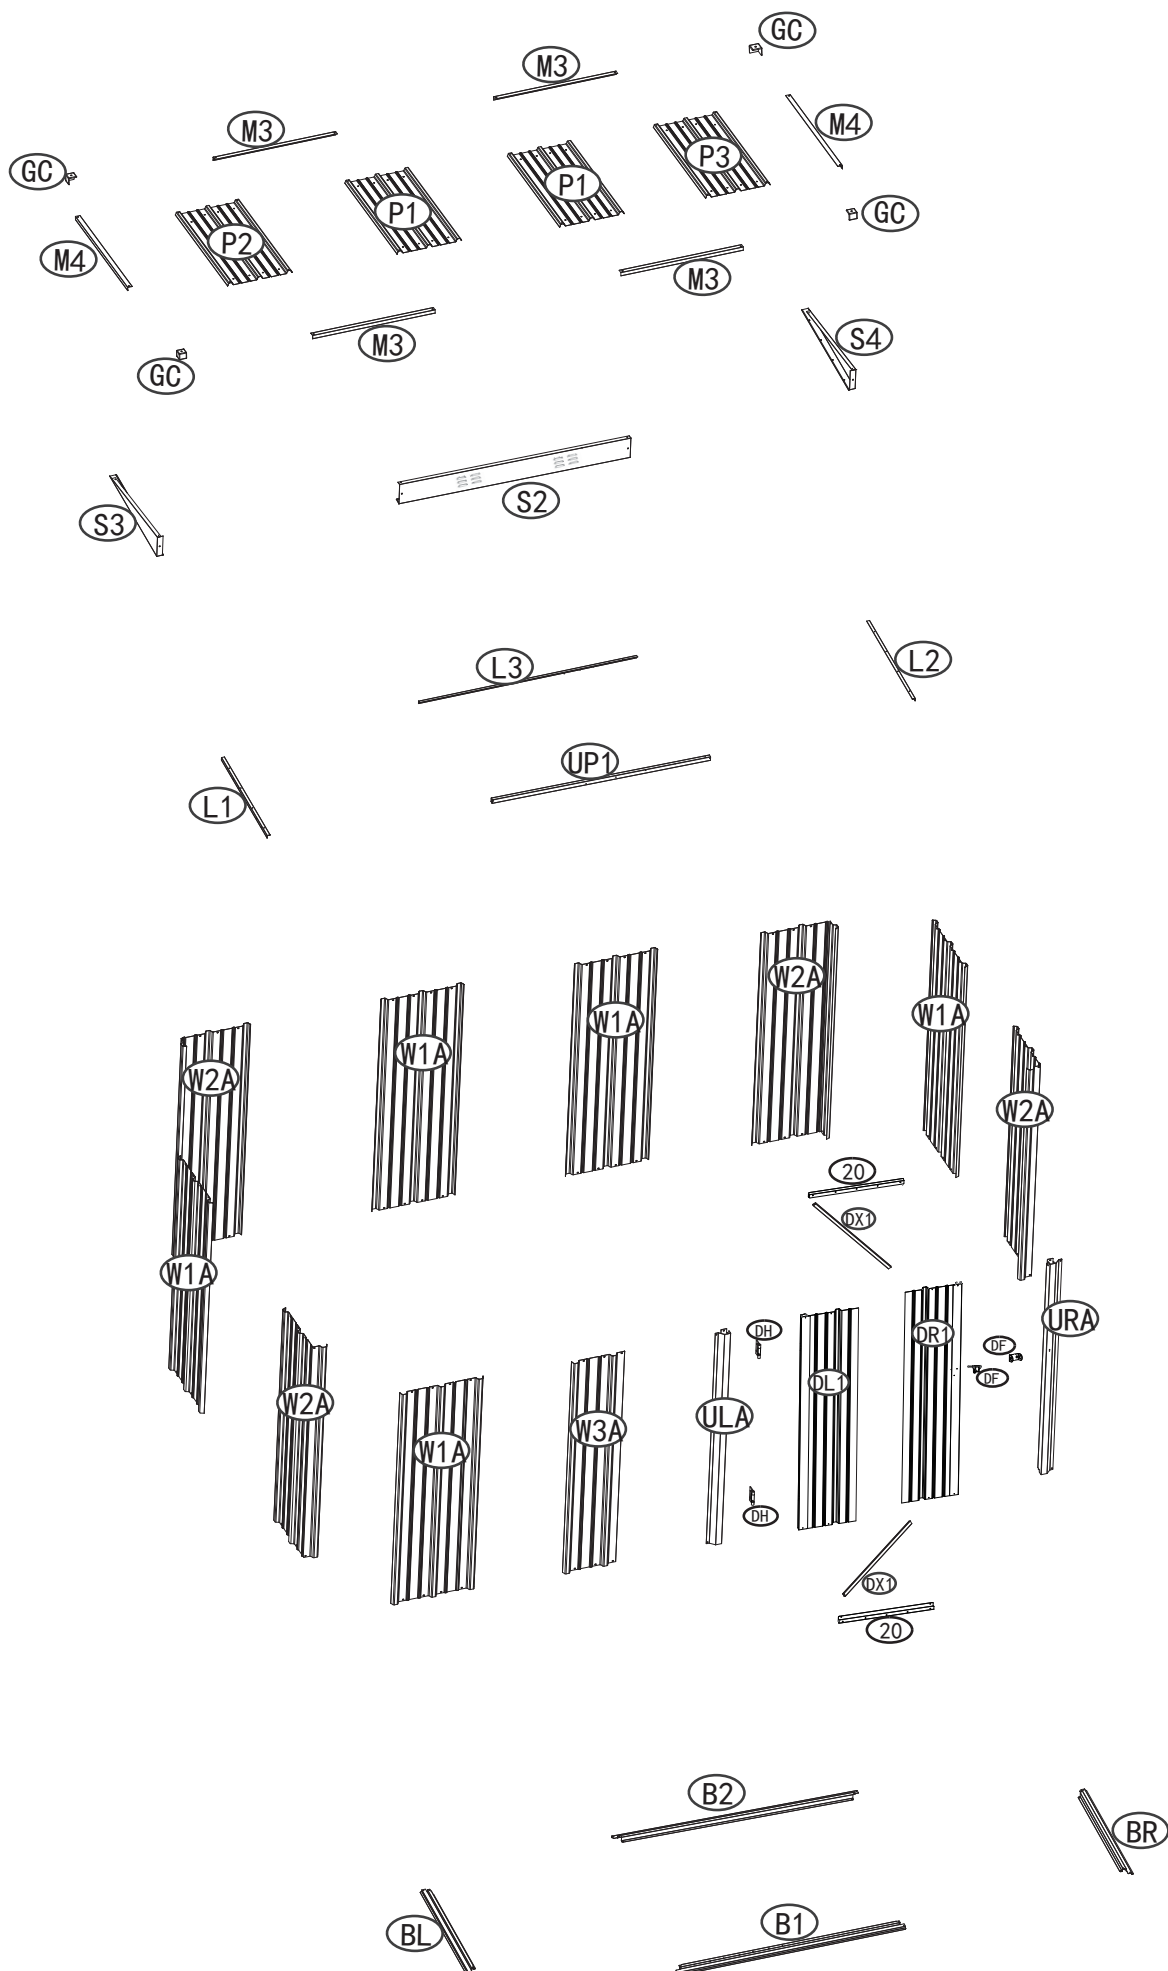

Thank you for purchasing this item, please read this instruction guide carefully before assembly and keep it for future reference.

THE TOOLS YOU NEED TO PREPARE






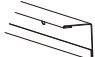










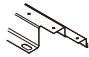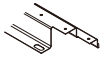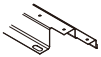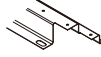






















WARNING

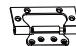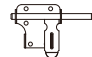- Remove all parts from the box and sort them by number. Ensure all parts are present before assembly.
- Wear work gloves, long sleeves and safety goggles during assembly. Some components contain sharp edges that may cause damage.
- Set your drill's torque limit to prevent damage to the metal parts.
- Ensure ground stability is adequate when necessary to use a ladder. Never rest your entire weight on the roof or on any other part of the storage shed.
- Do not attempt to assemble the storage shed in strong windy conditions.
- Keep children and animals away from the assembly site.


Part List





The parts are stacked together for easier transportation. When you think something is missing, please try to separate every part first and check.

PART	NO.	Qty.
	B1	1
	B2	1
	BL	1
	BR	1
	L1	1
	L2	1
	L3	1
	UP1	1
	M3	4
	M4	2
	W1A	5
	W2A	4
	W3A	1
	P1	2
	P2	1
	P3	1
	DL1	1
	DR1	1
	ULA	1
	URA	1
	20	2


PART	NO.	Qty.
	S2	1
	S4	1
	S3	1
	DF	1
	DX1	2
	DH	2
	DG	1
	GC	4
	LOCK	1
 M4x10	F1	168
 M4x10	F2	9
 M5x12	F3	16
 M4x16	F5	4
 M8x100	F6	4
	V2	150
	S1	150



Step1

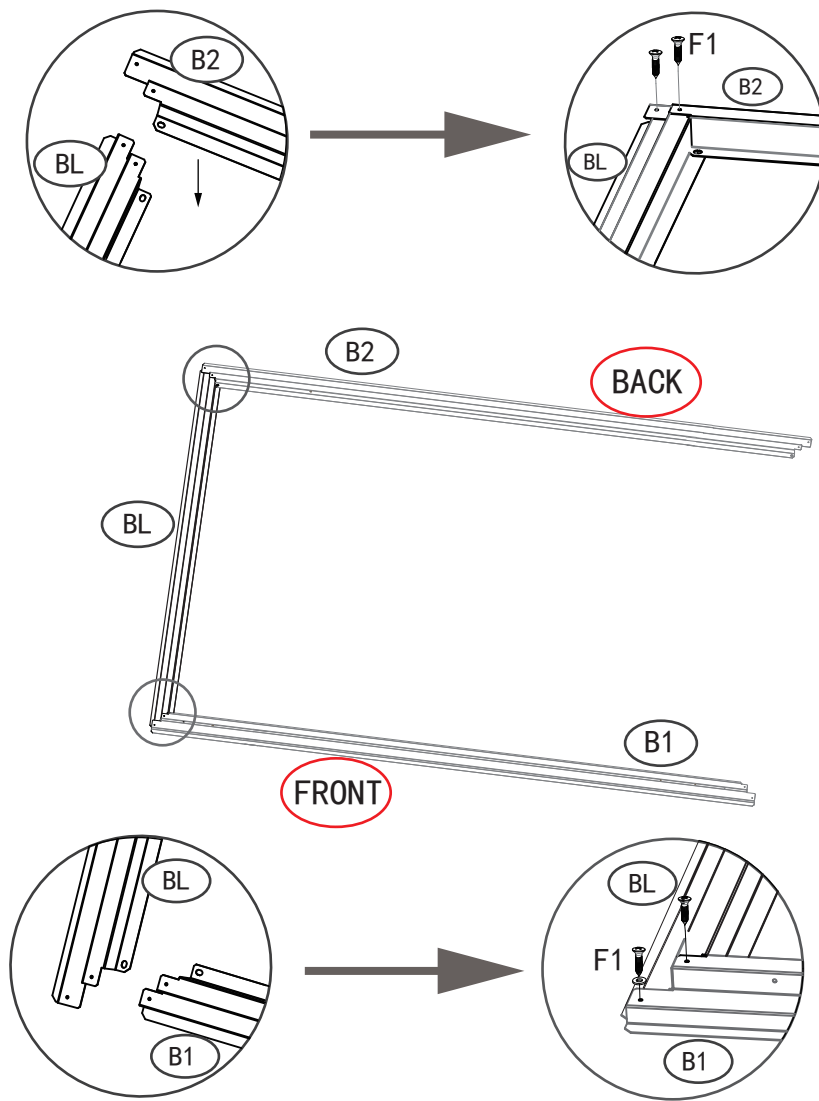

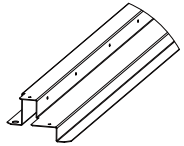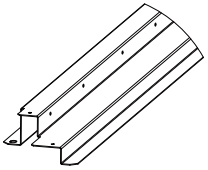
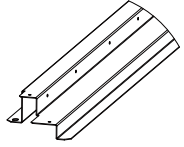
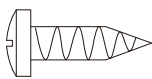
B1	
B2	 1 PC
BL	 1PC
F1	 4 PC

Step2

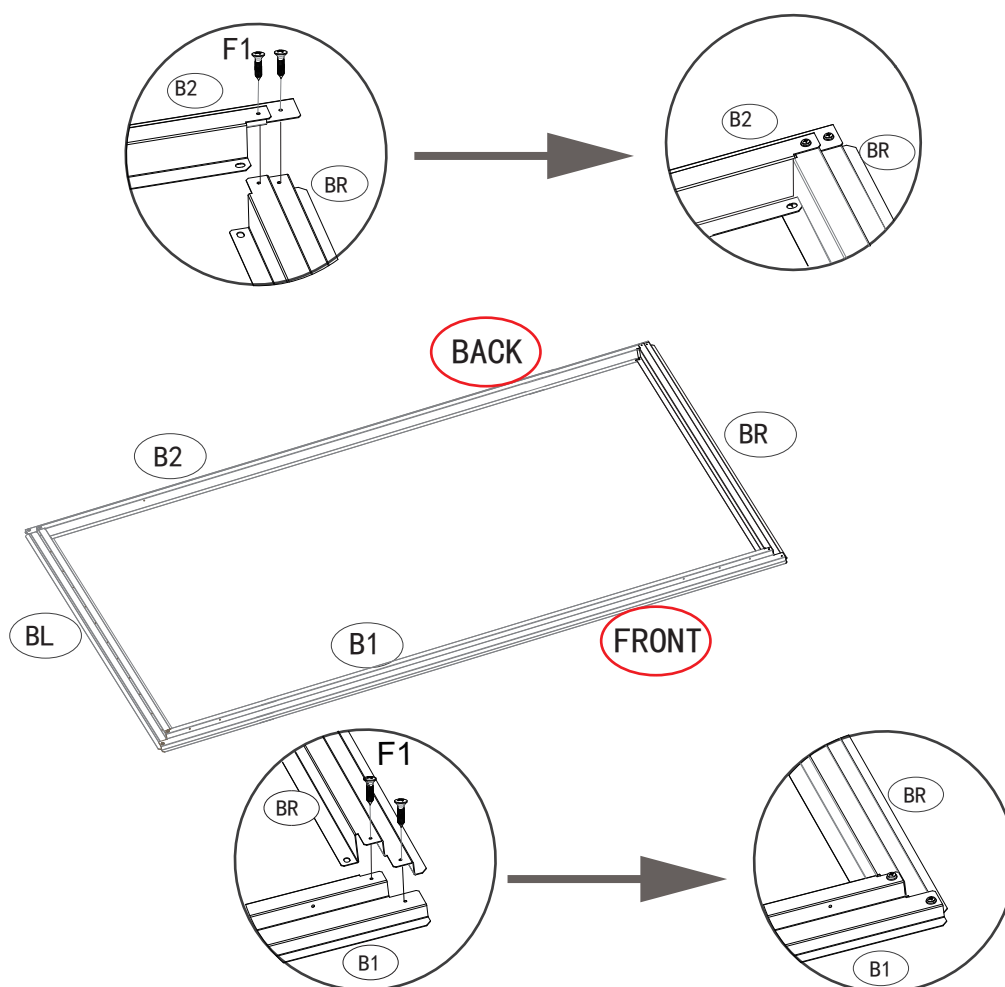


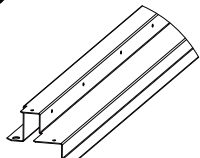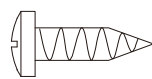BR	 1 PC
F1	 4 PC




Step3

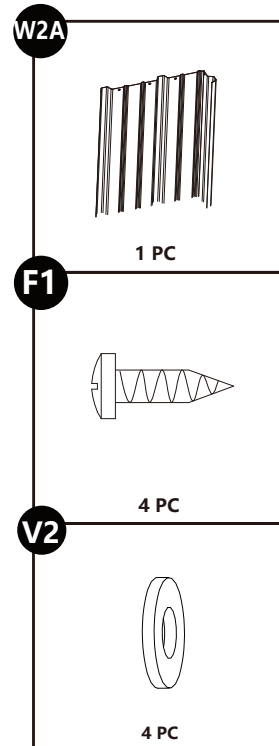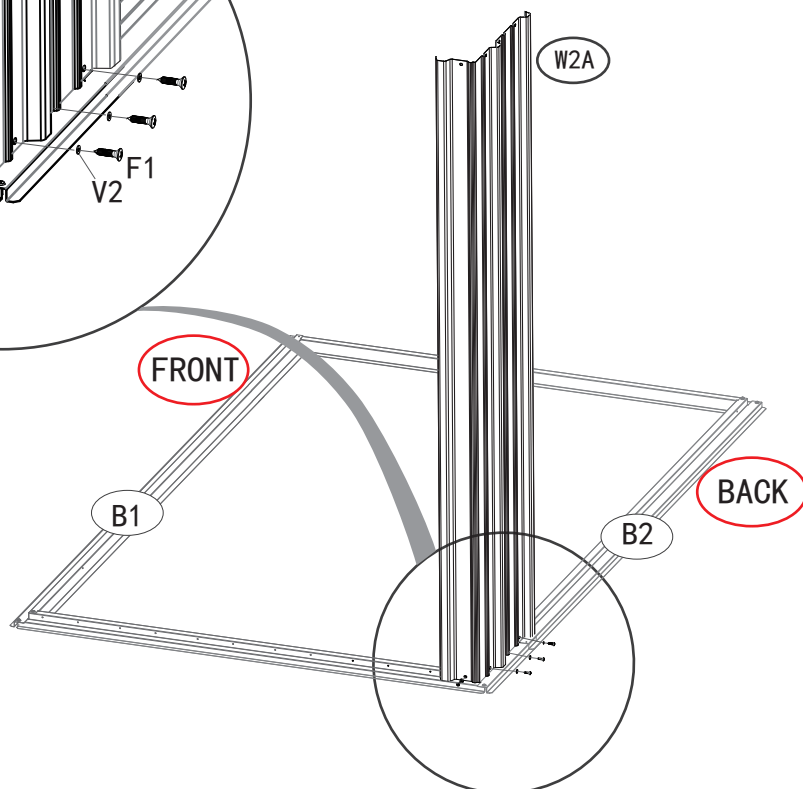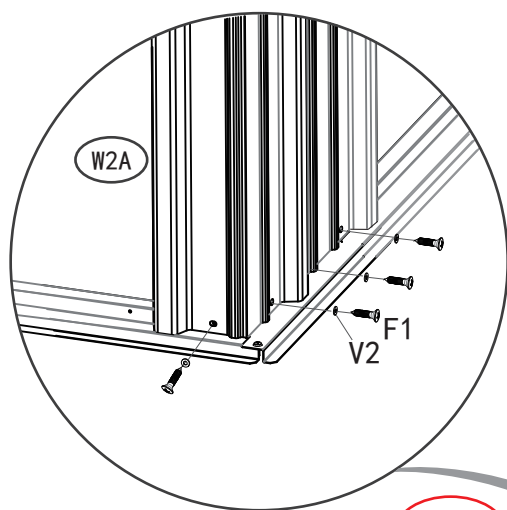

Remove the protective films from all panels first.
The light color side is the interior of the panel.
Combine [F1] and [V2] like this:

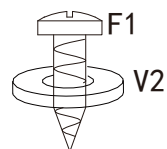


Step4

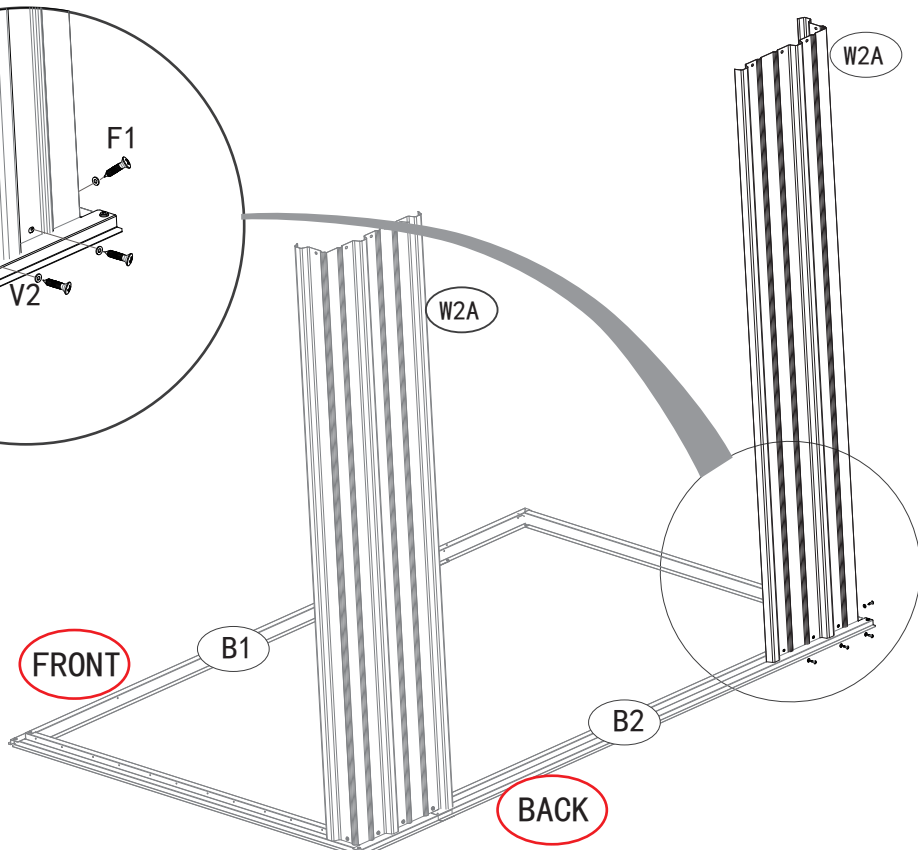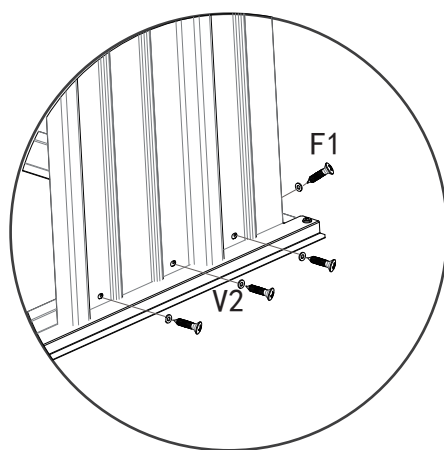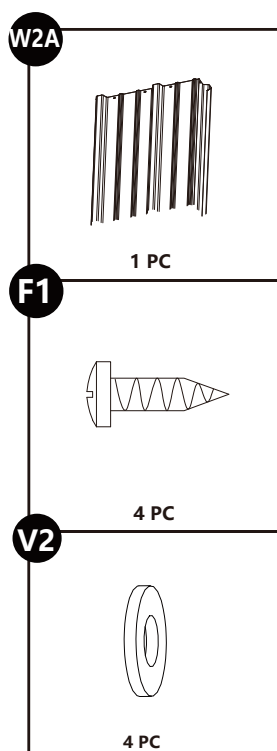

Step5


X: This screw hole doesn't need to be assembled in this step.

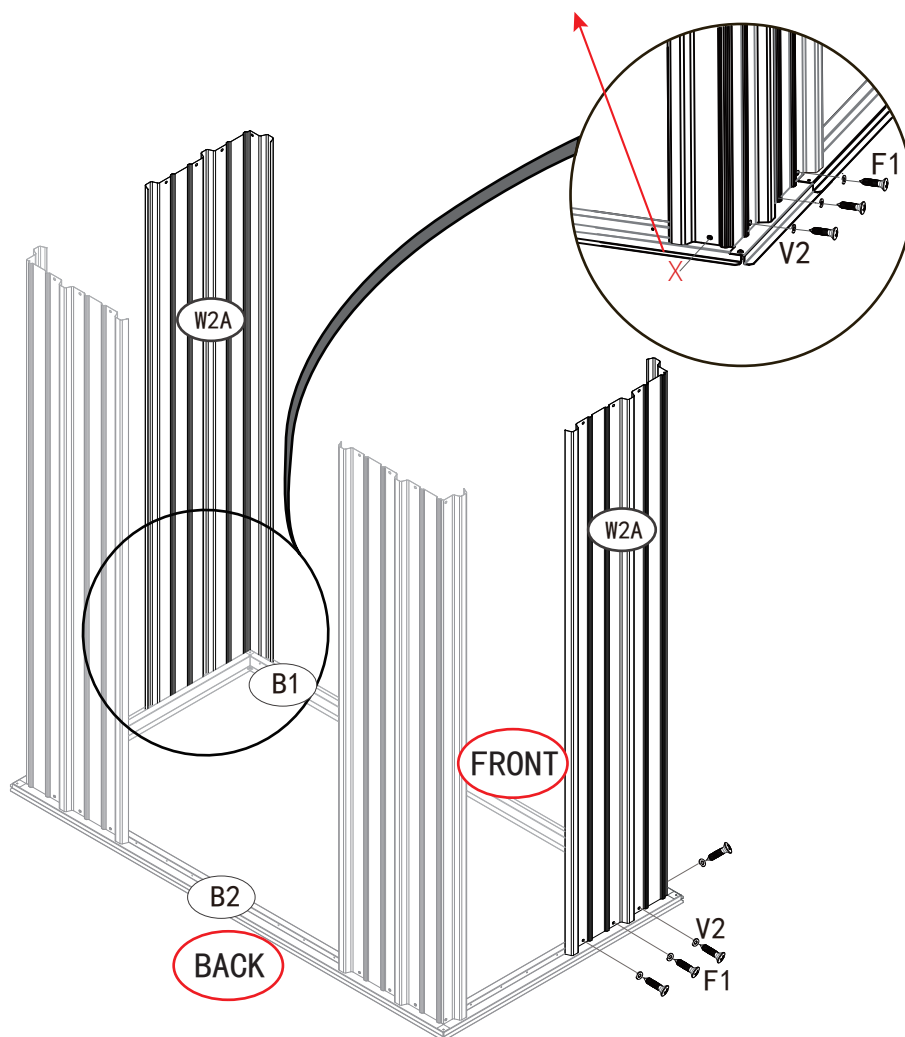



W2A		2 PC
F1		7 PC
V2		7 PC

Step6



L3		1 PC
F1		6 PC
V2		6 PC

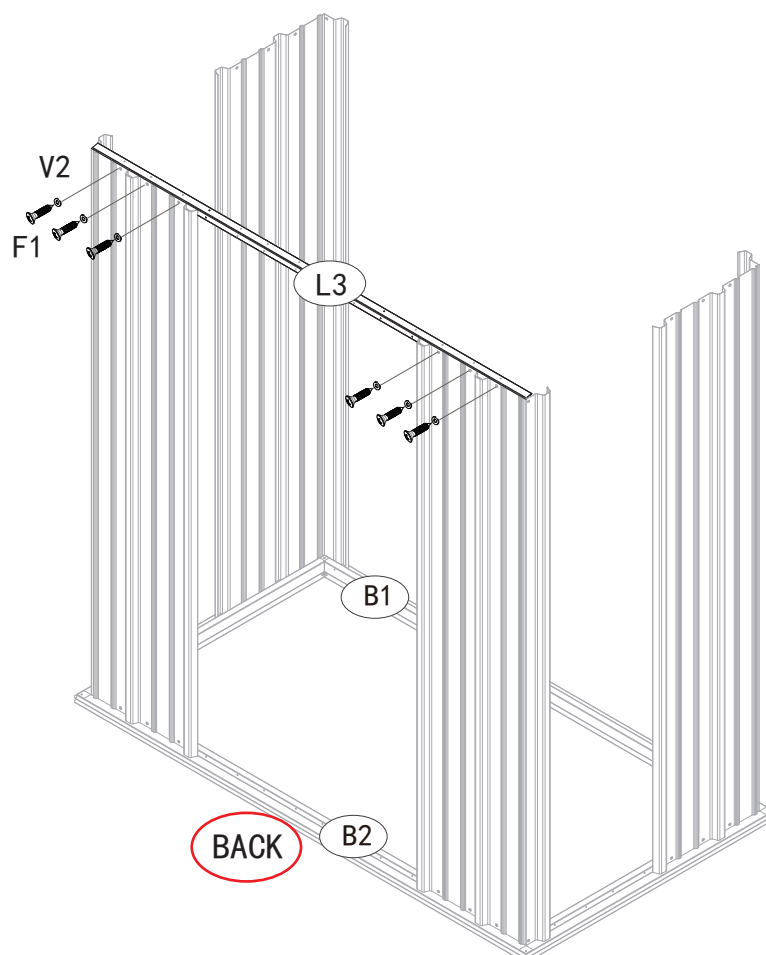



Step7

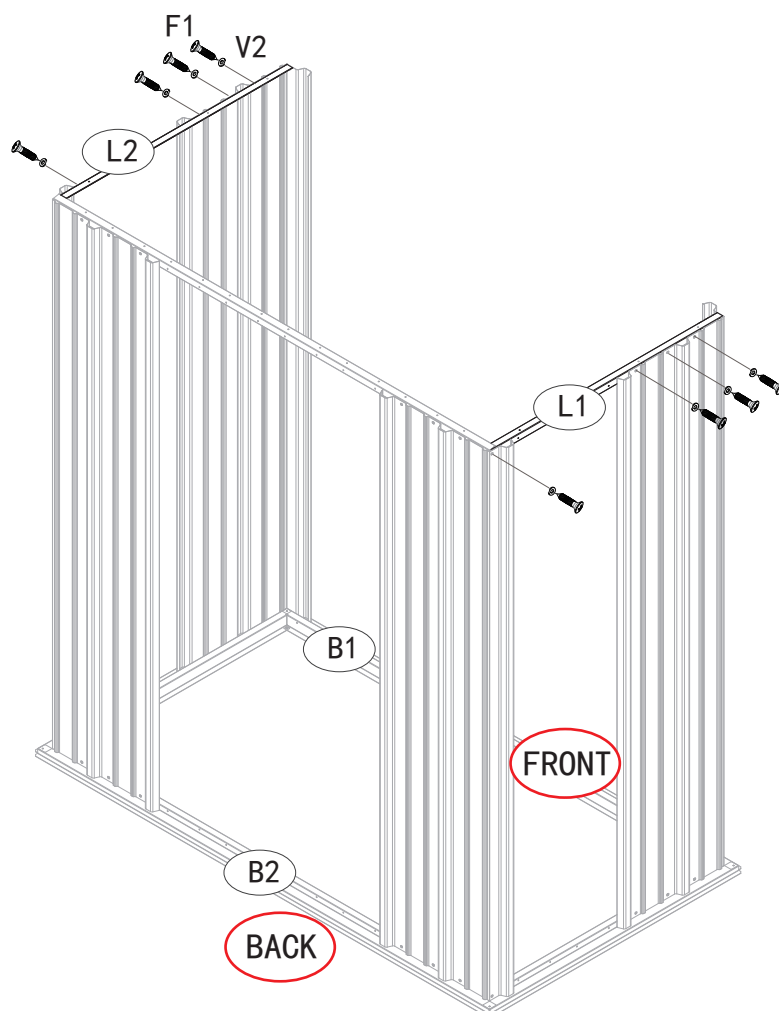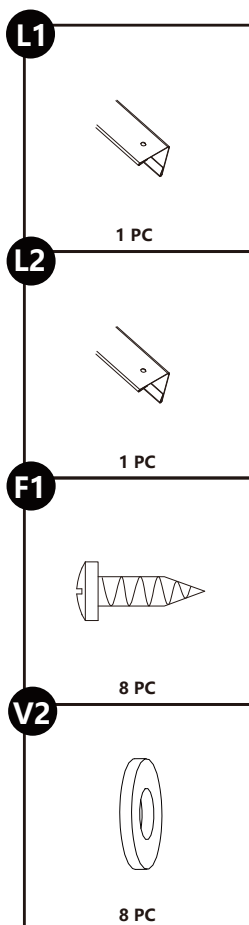



Step8

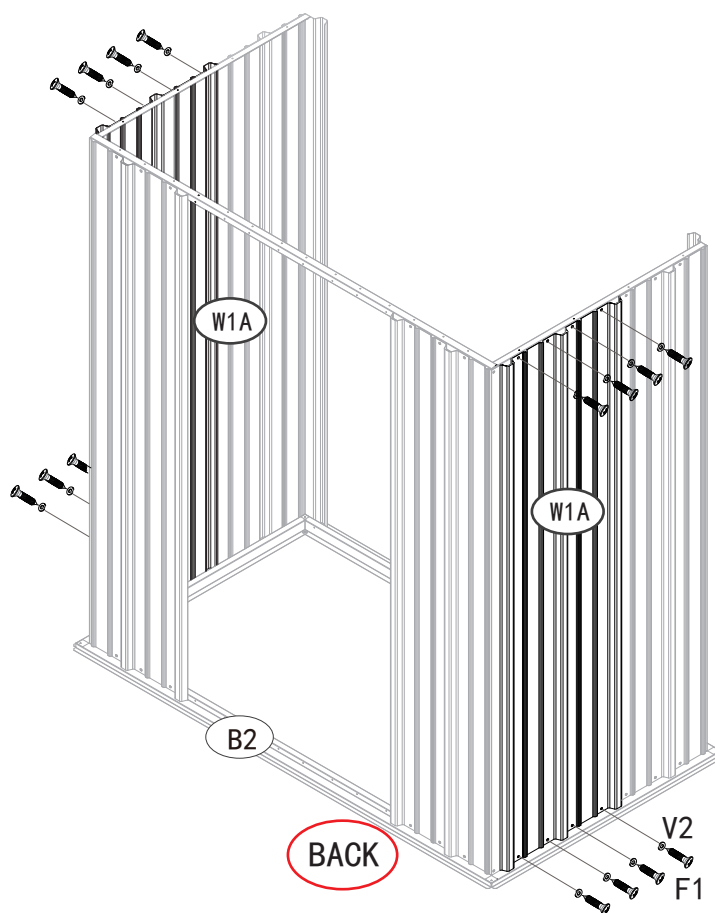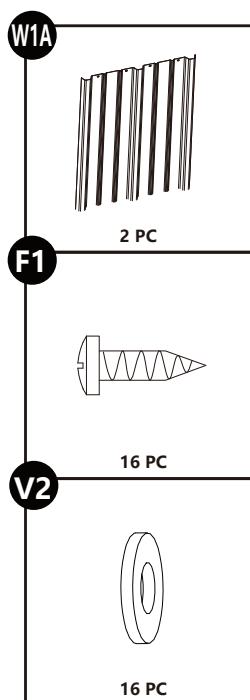

Step9

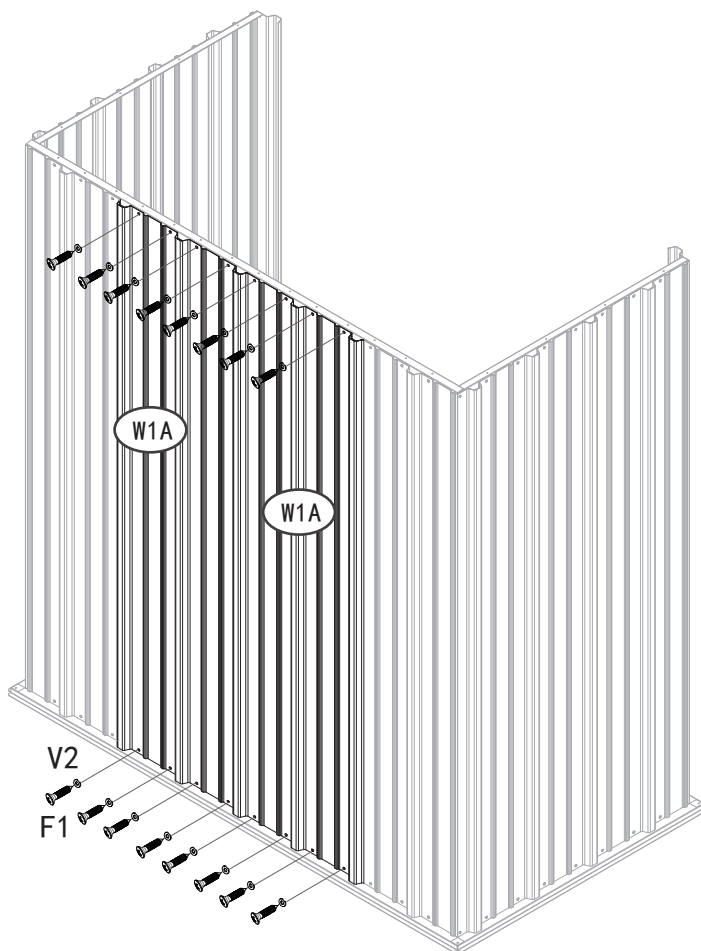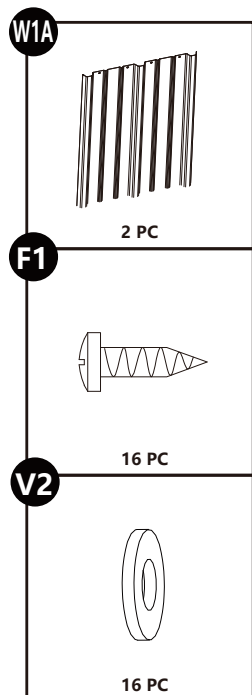


Step10

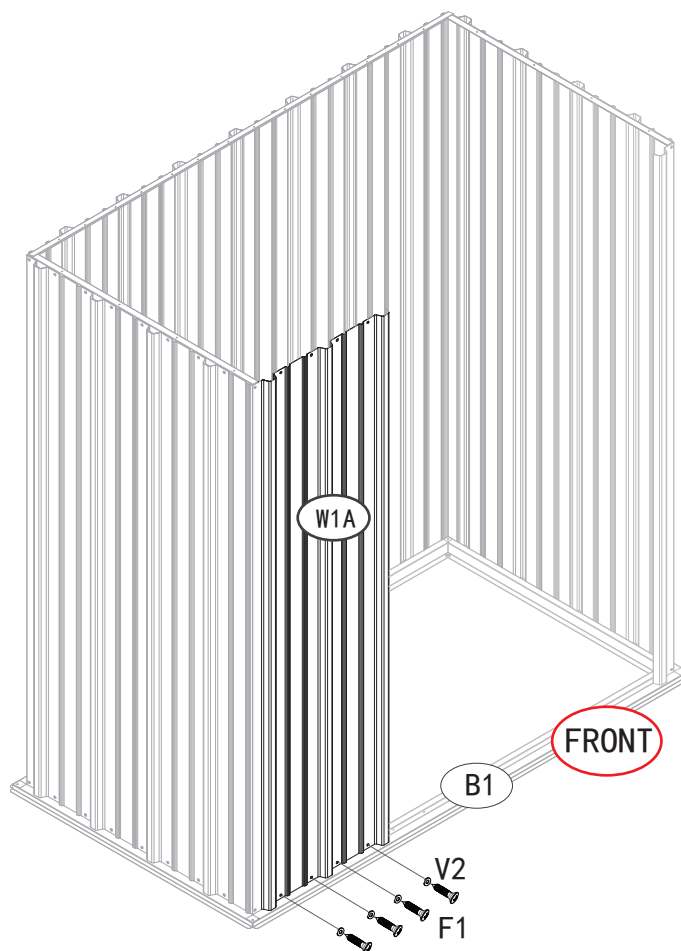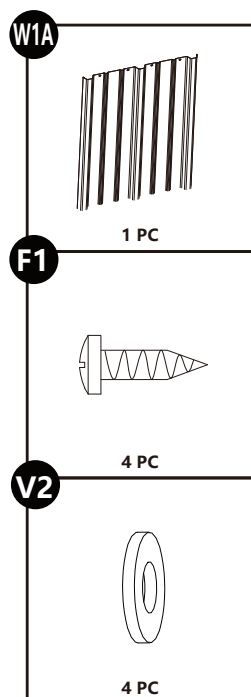


Step11

UP1

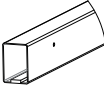


1 PC

F1

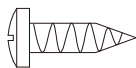


5 PC


V2




5 PC

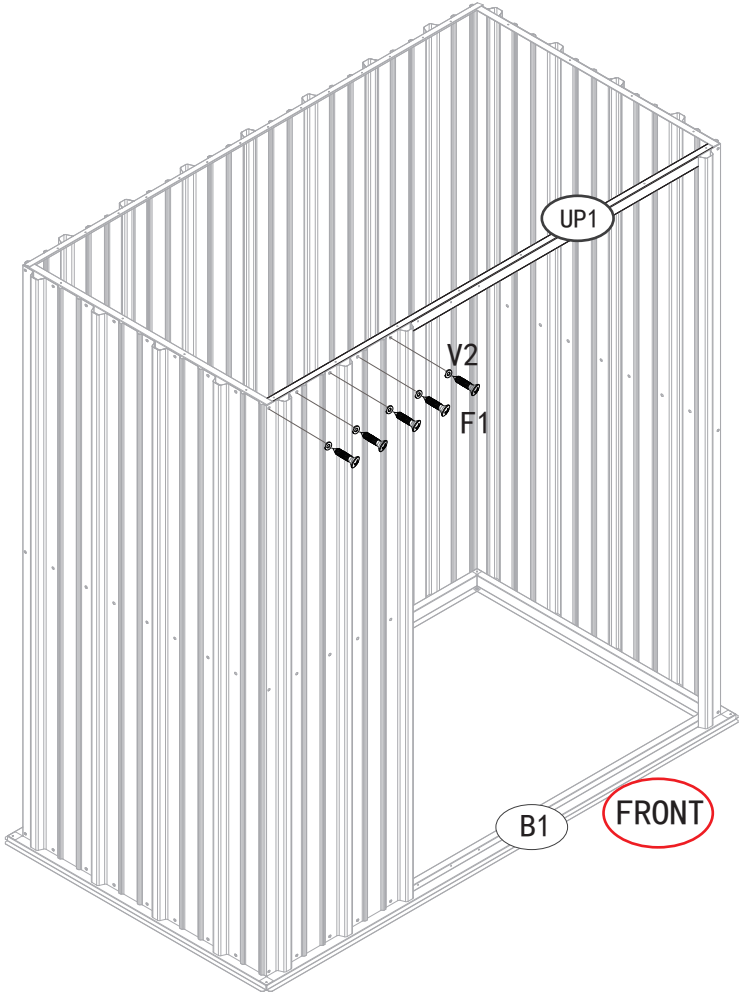

Step12

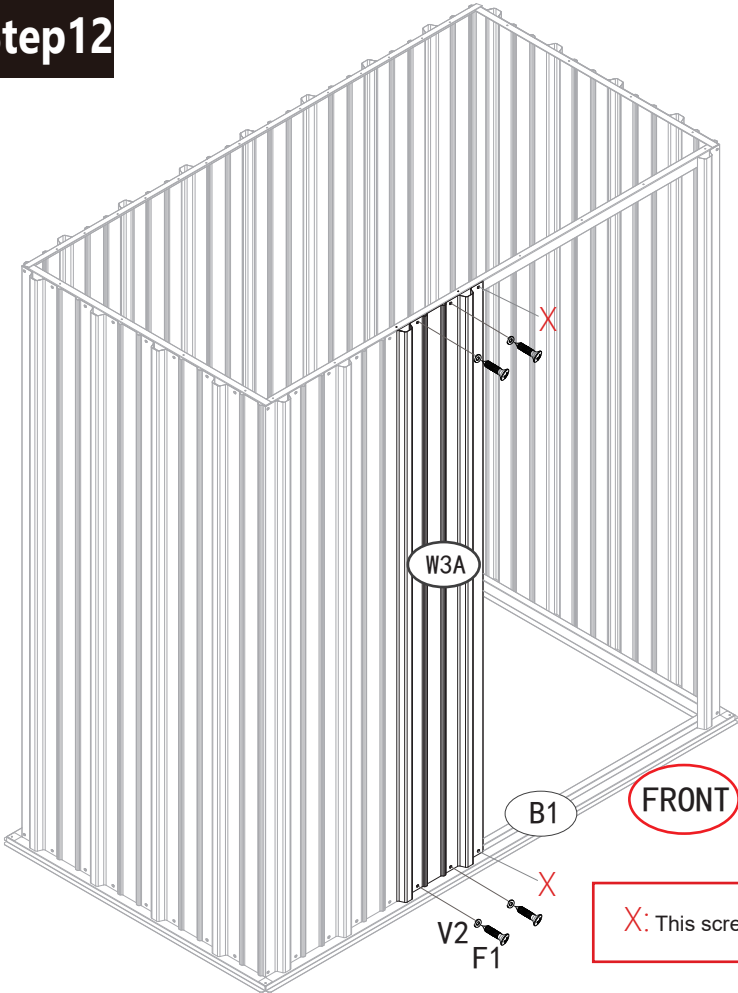


W3A




1 PC

F1

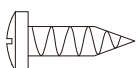

4 PC

V2




4 PC

X: This screw hole doesn't need to be assembled In this step.

Step13


internal setup

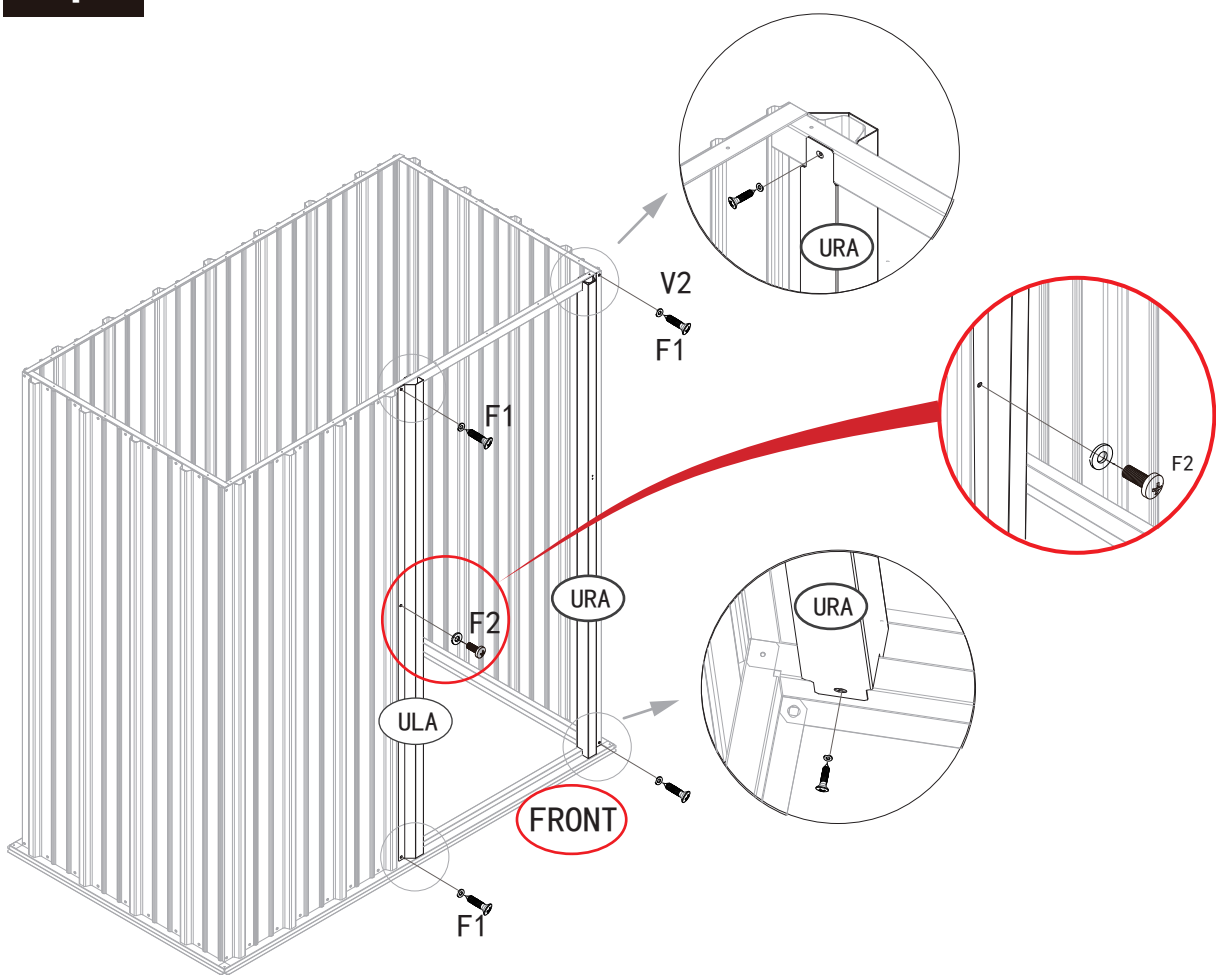


URA		1 PC
ULA		1 PC
F1		8 PC
V2		9 PC
F2		1 PC

Step14

S2		1 PC
F1		8 PC
V2		8 PC

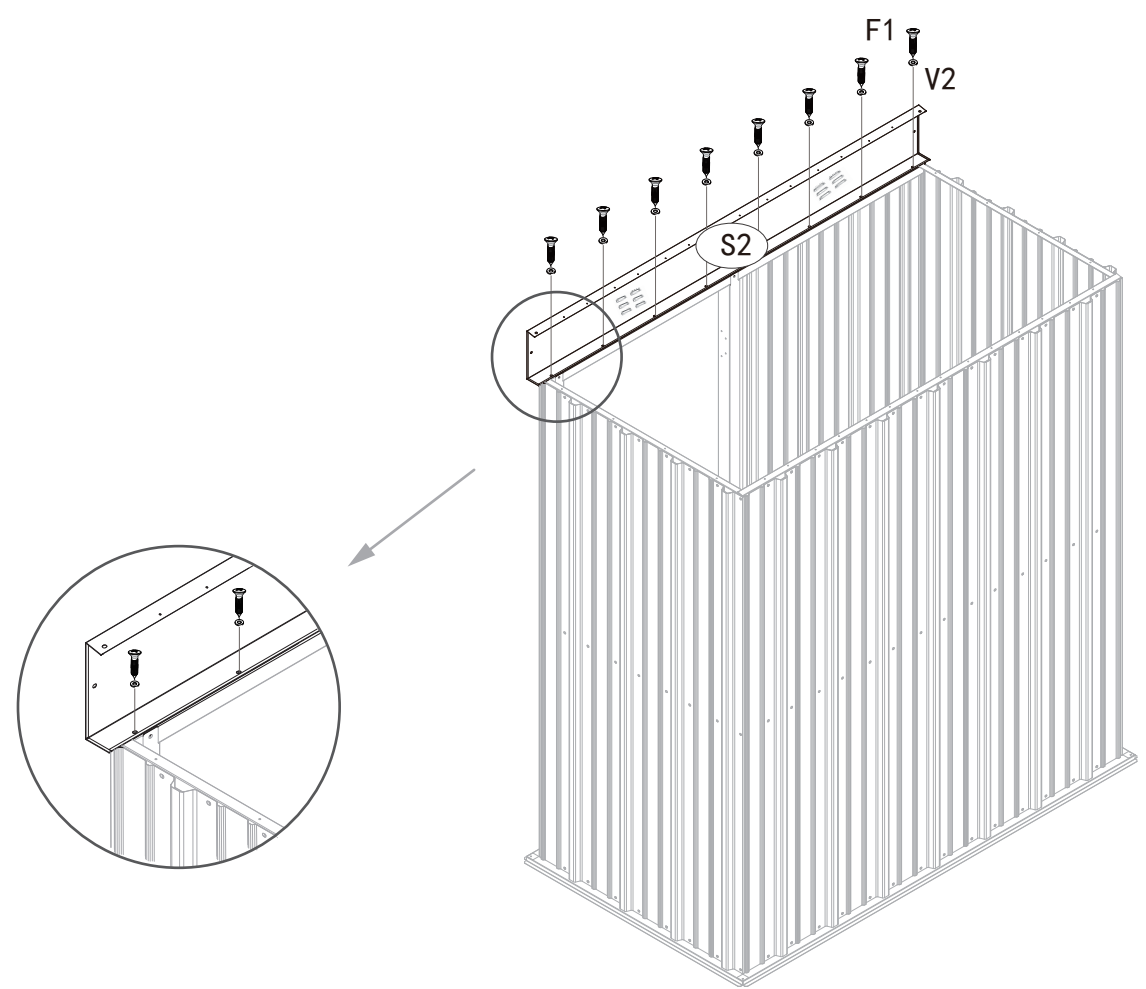


Step15

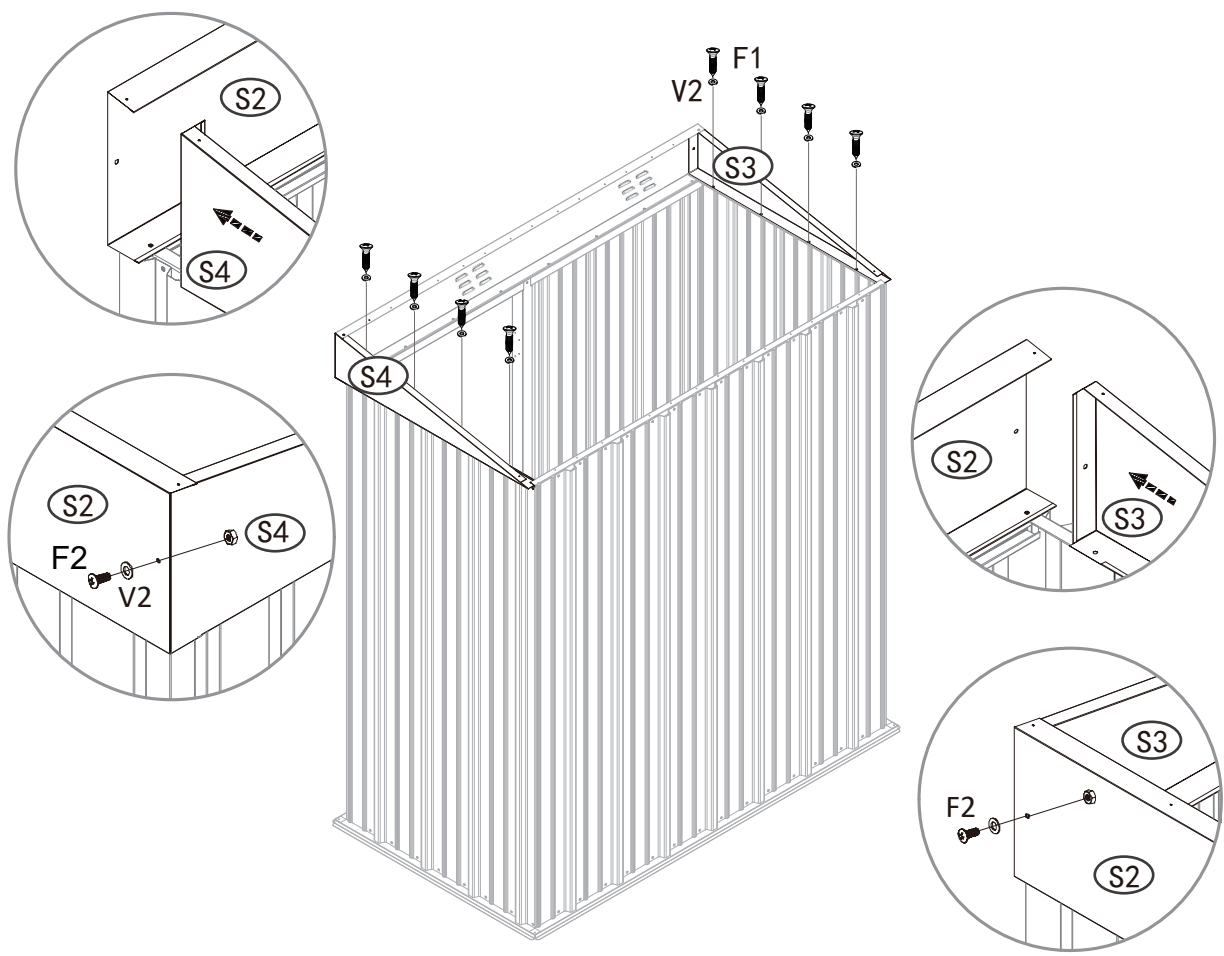

S3		1 PC
S4		1 PC
F1		8 PC
V2		10 PC
F2		2 PC







Step16

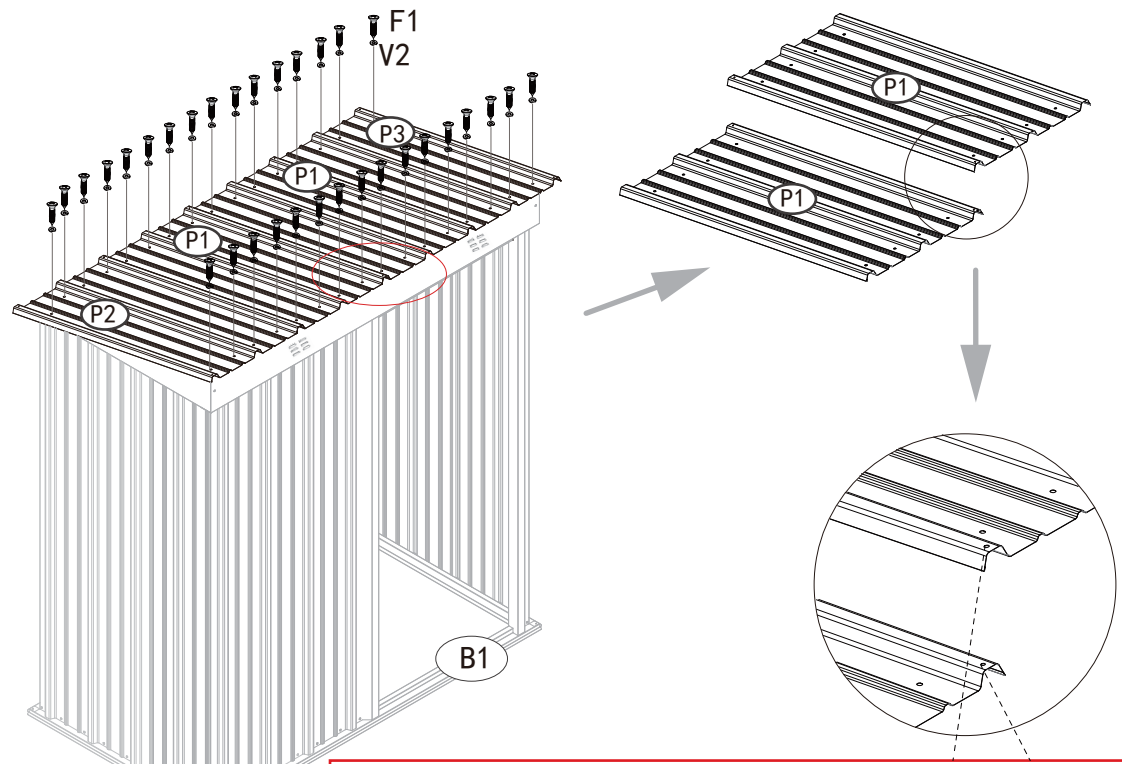


There are 2 holes on each edge of one side of 2 pcs of [P1], which need to be stacked together.


P1		2 PC
P2		1 PC
P3		1 PC
F1		32 PC
V2		32 PC

Step17

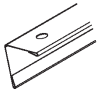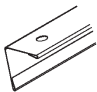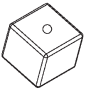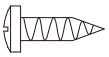
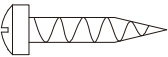
M3		4 PC
M4		2 PC
GC		4 PC
F1		2 PC
F5		4 PC
V2		2 PC

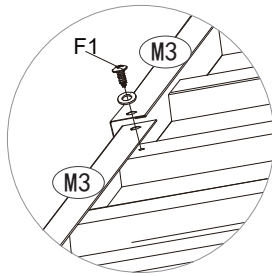

x2

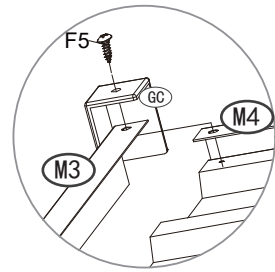


x4

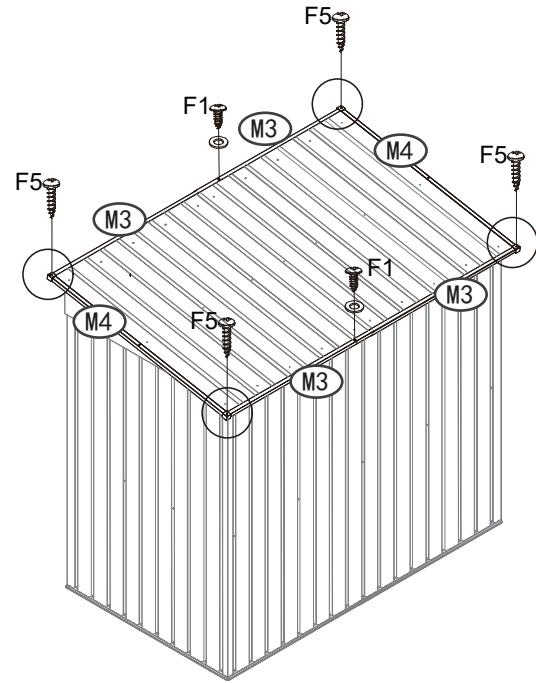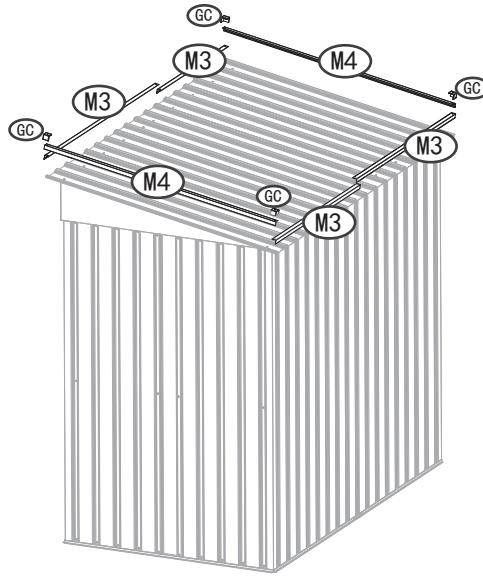


Step18


The Parts List of Door

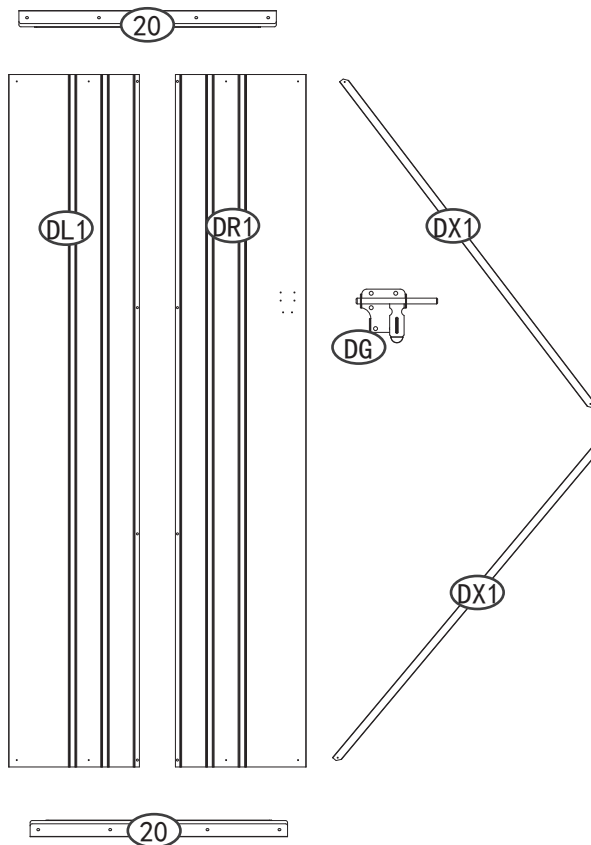

Step19

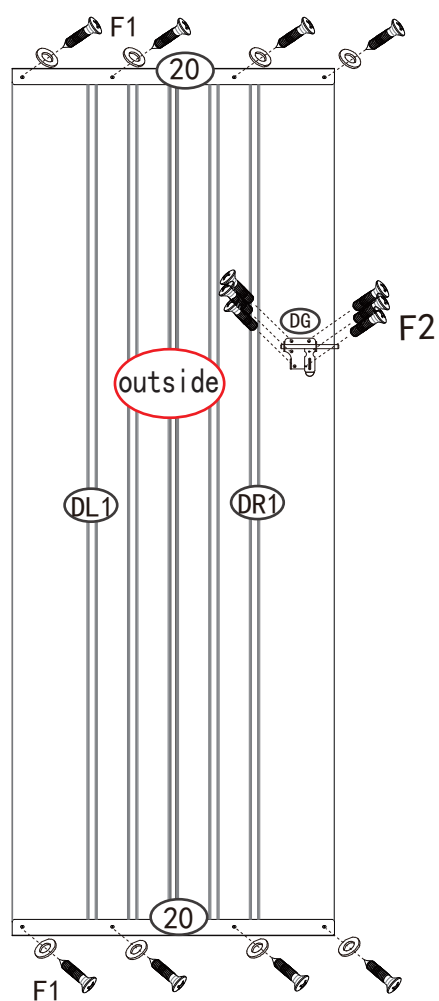


The light color is the inside of the door, facing the [20] side with only 2 screw holes

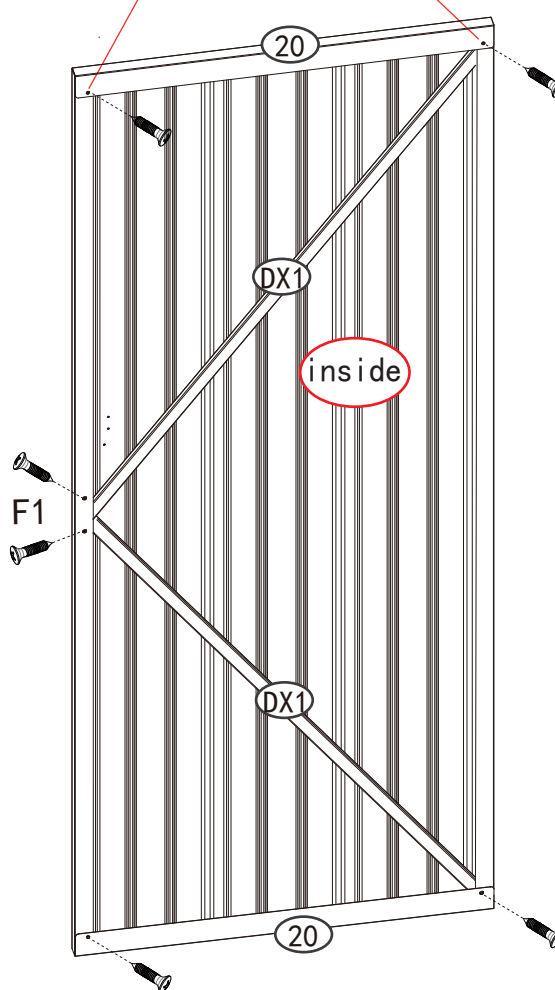

DX1 2 PC	20 2 PC	DL1 1 PC	DR1 1 PC
DG 1 PC	F1 14 PC	F2 6 PC	V2 8 PC


Step20

DH

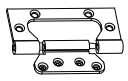


2 PC



F3

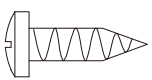


8 PC

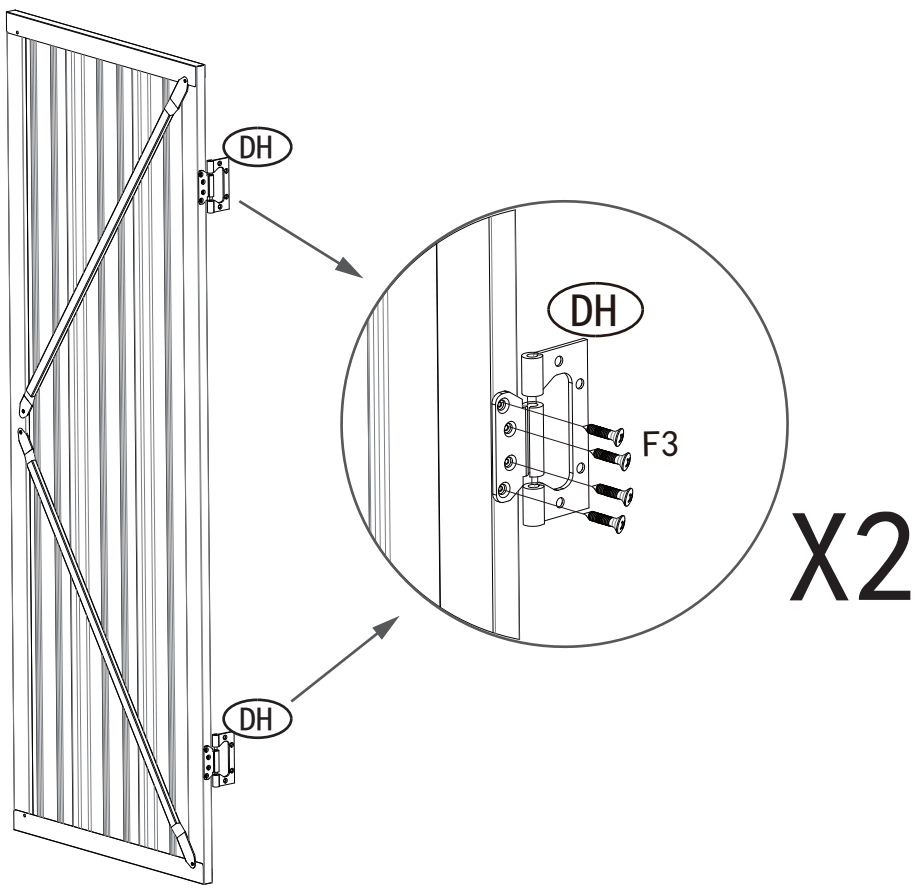

Step21

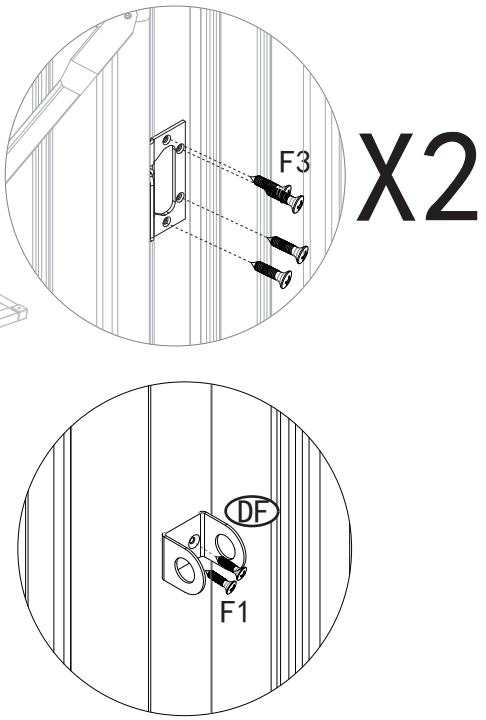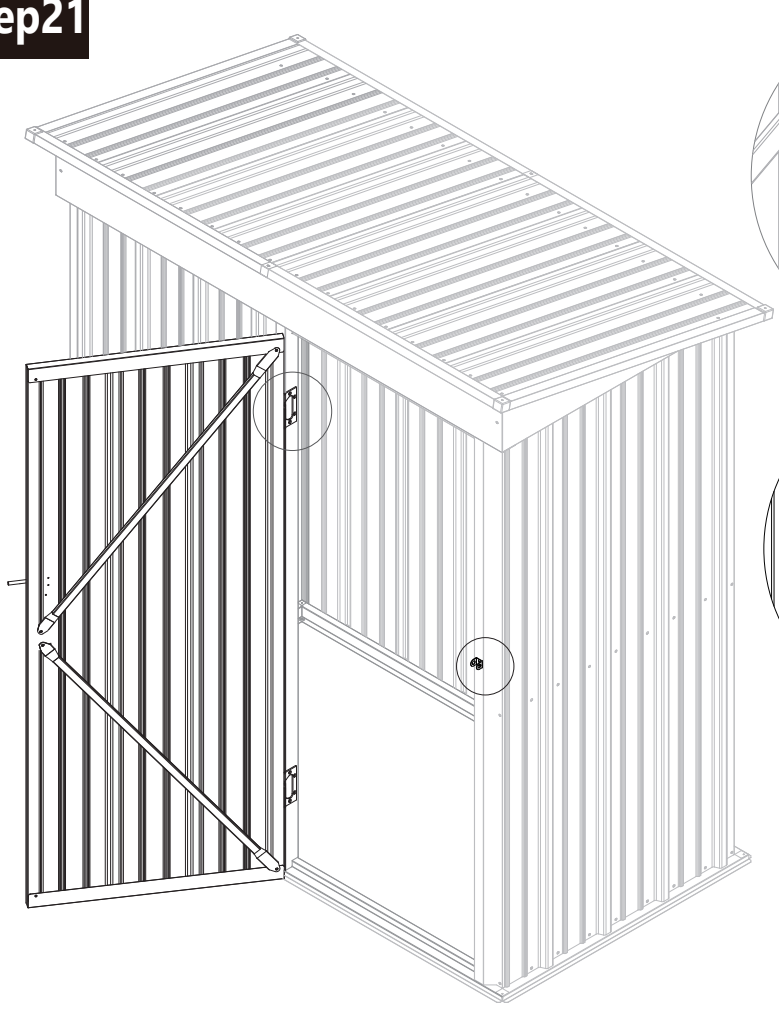


DF

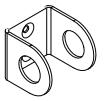


1 PC

F1

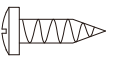

2 PC

F3

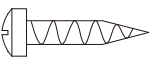

8 PC

Step22

After completing the installation,
cover the protruding screw tips with [S1] to prevent injury.

