
# 8 '× 8 ' Metal Patio Gazebo ASSEMBLY MANUAL

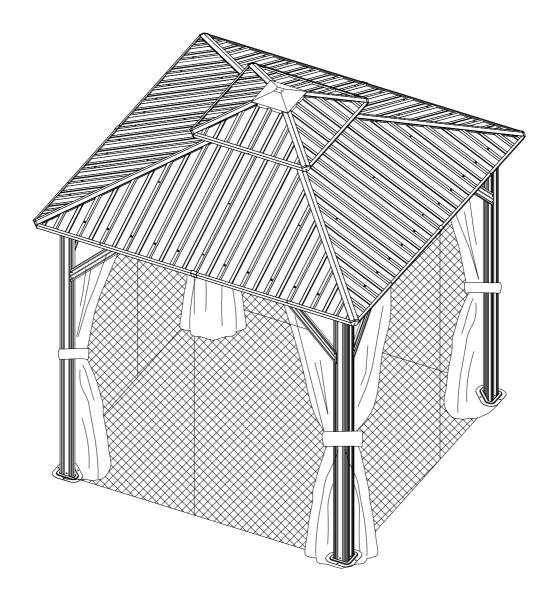

MODEL#:LGMF1654B

Missing part? Damaged? Contact us via email at service@domioutdoorliving.com

www.domioutdoorliving.com

#### Pre-assembly



1.Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6.For ease of construction, you may need a drill.



7. You may need a safety goggle.




8.Do not fully tighten screws prior to complete assembly.

#### Warning & Attention


- -Try to assemble this product on the flat ground, otherwise it is difficult to carry out;
- -It would be much easier to assemble the product with three or more people;
- -After assembly, please check whether all screws are tightened, to prevent parts from falling apart.


▲ Use bolts to secure the frame to the ground to against the strong wind.

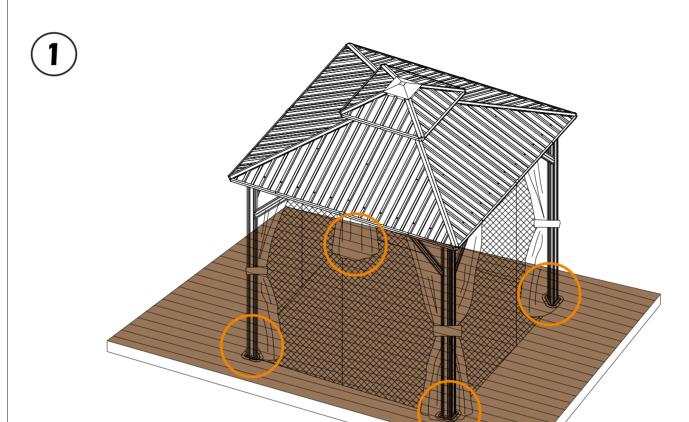


If the deck is hard wood and the depth of it is over 3 inch, you can use 5/16 in. ×4 in. Structural Wood Screw to mount the gazebo.

×12

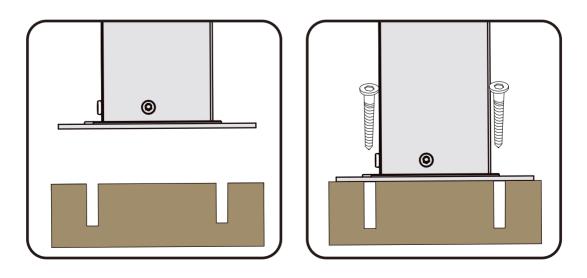

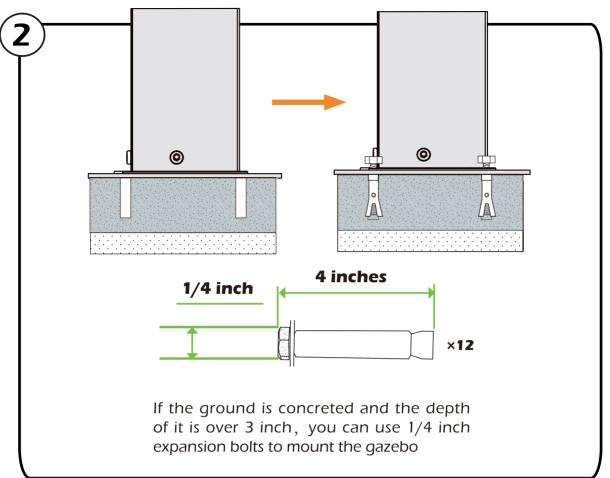


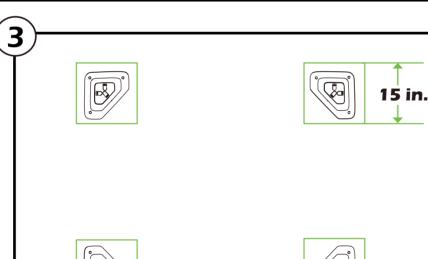



Or you can make a concrete footing for gazebo,  $15 \times 15 \times 15$  inches is recommended use expansion bolts to mount the pergola like (2) shows.


IMPORTANT: Anchor is not recommended




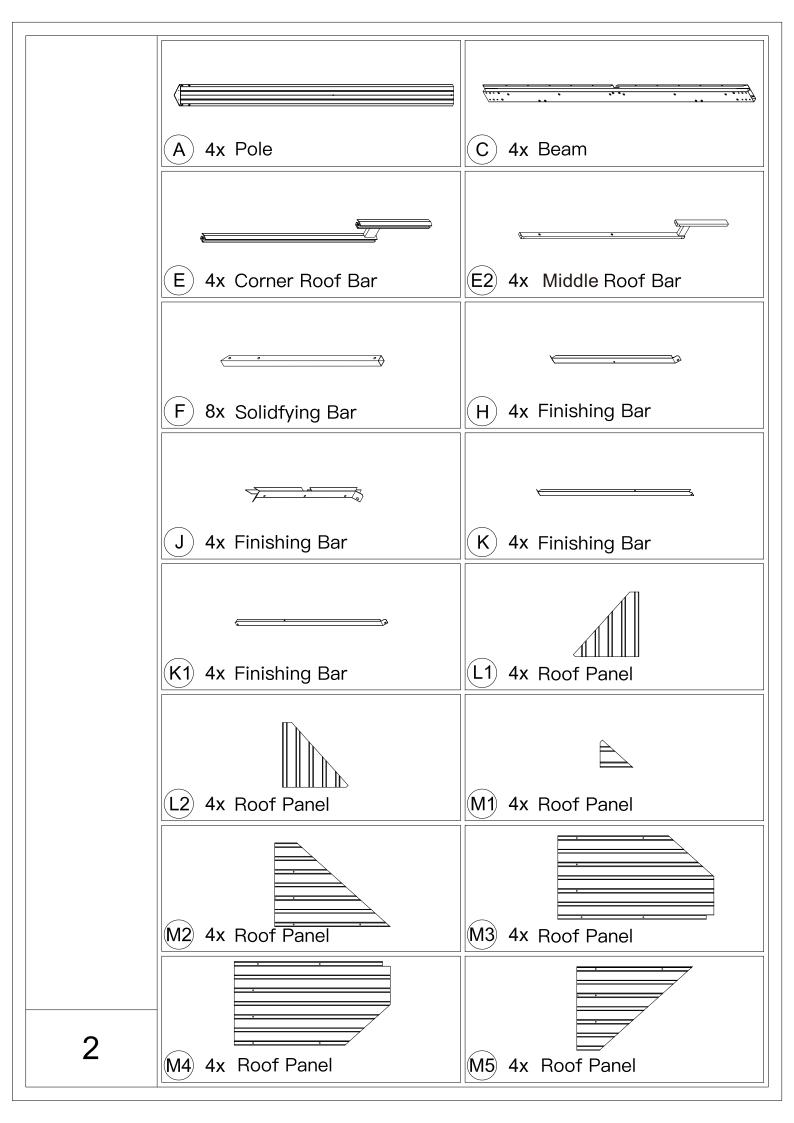


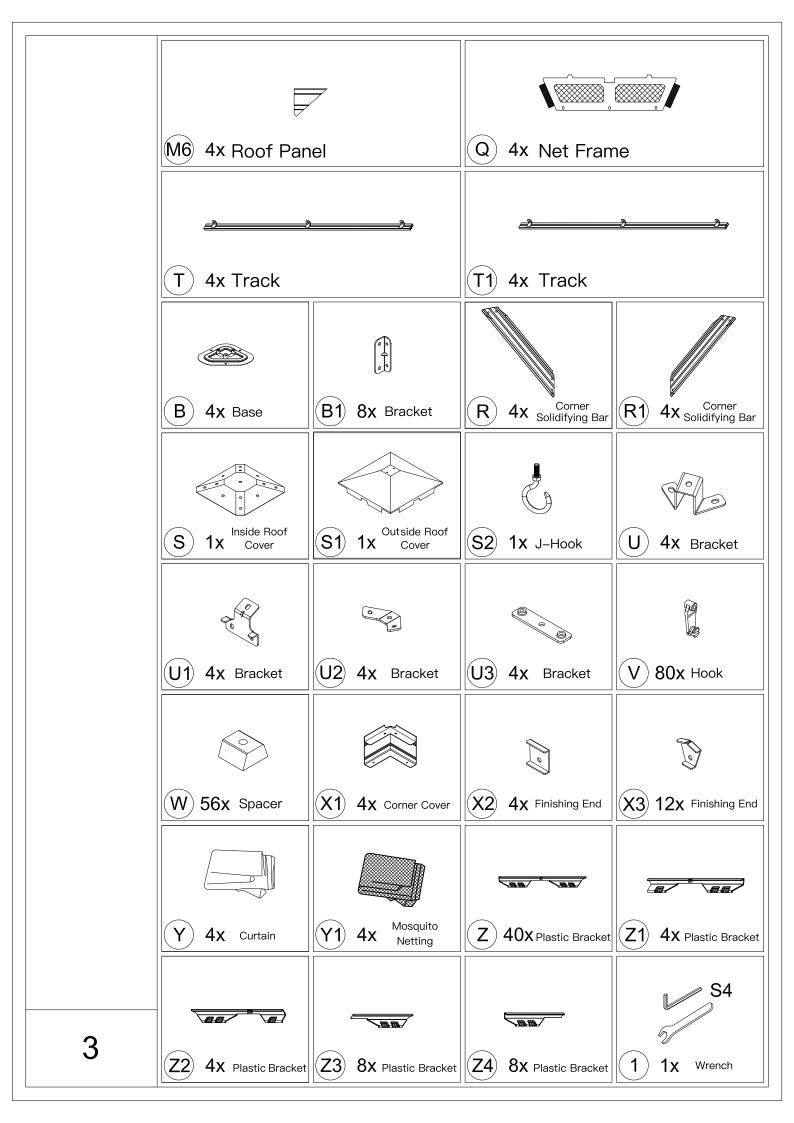


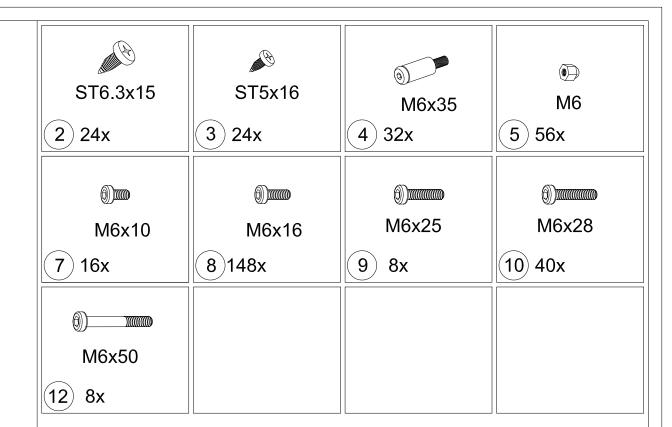


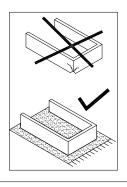


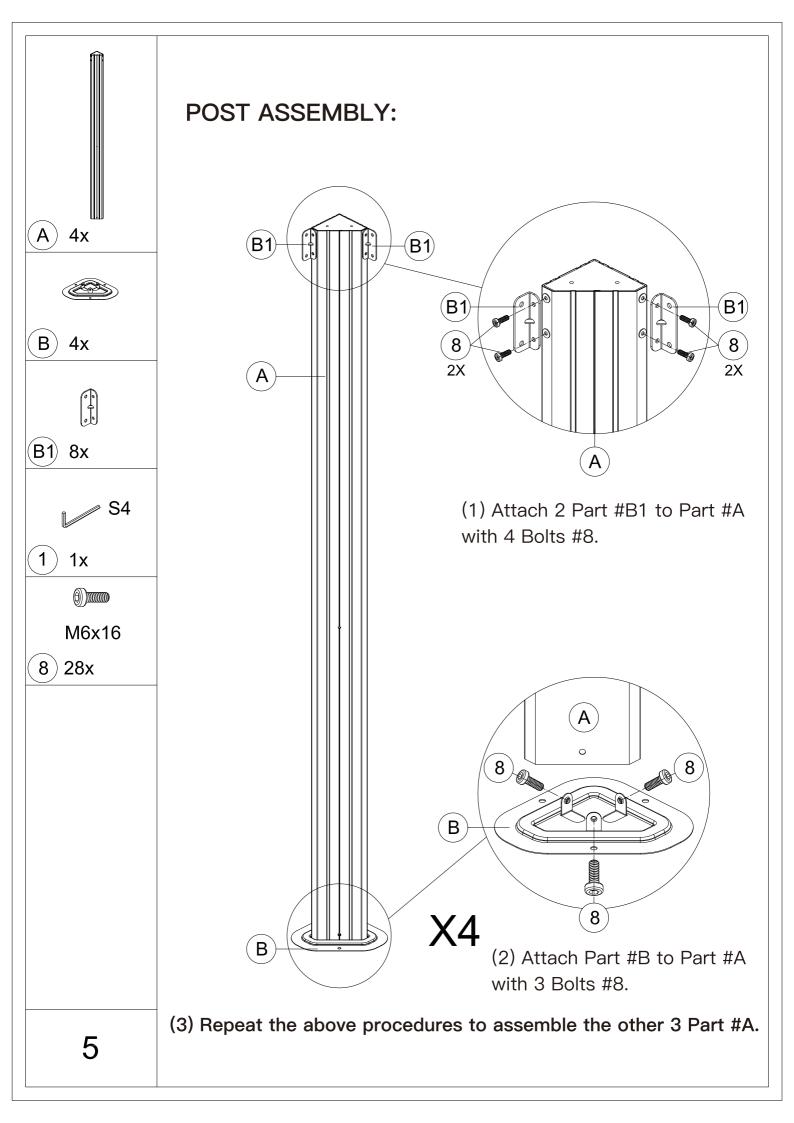


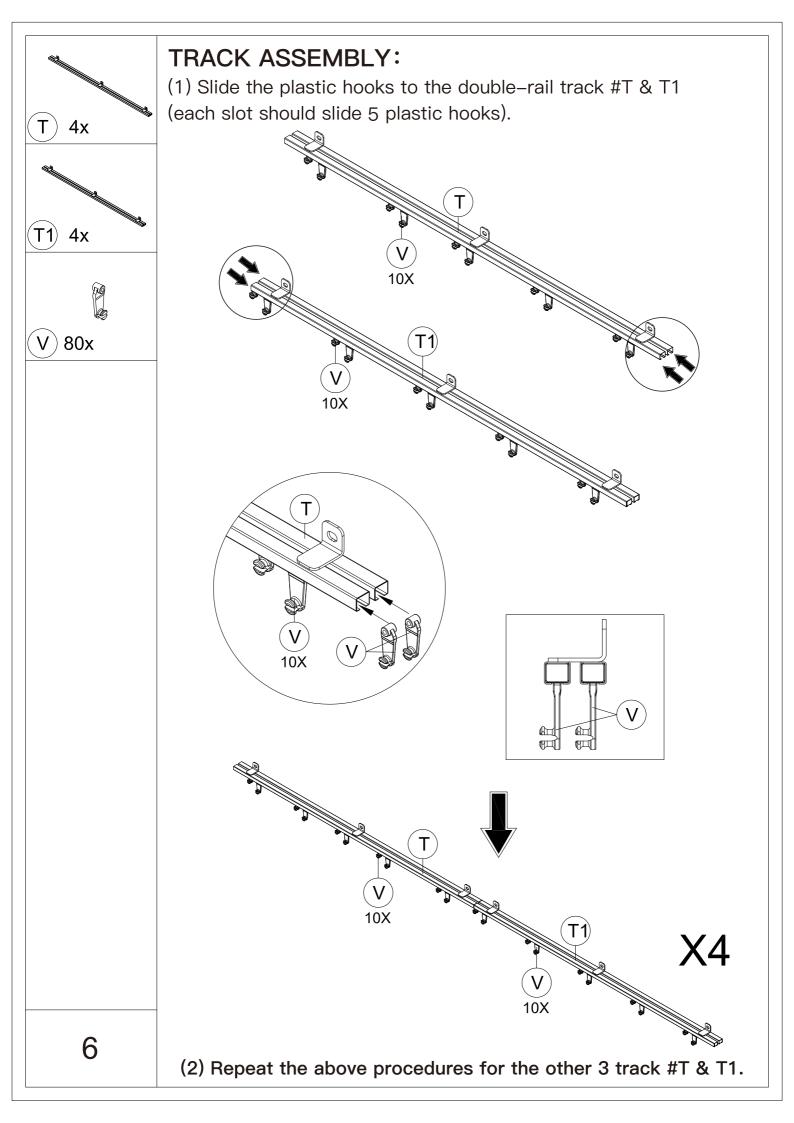


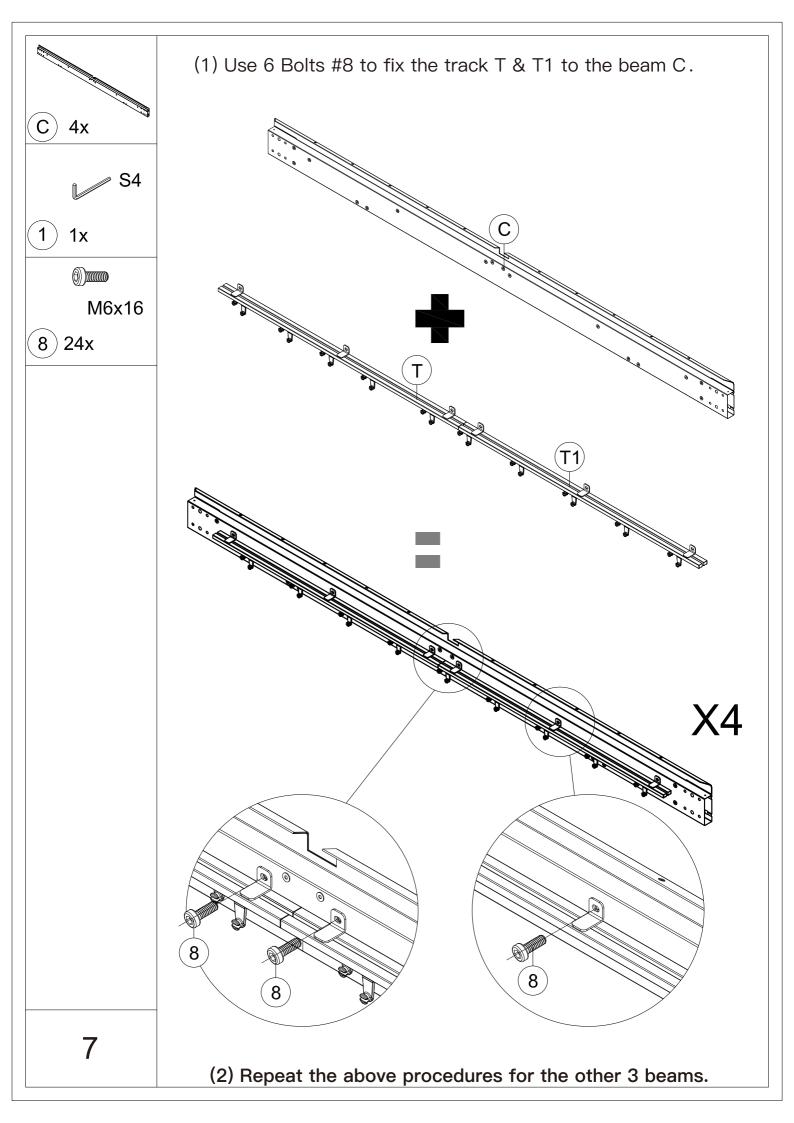


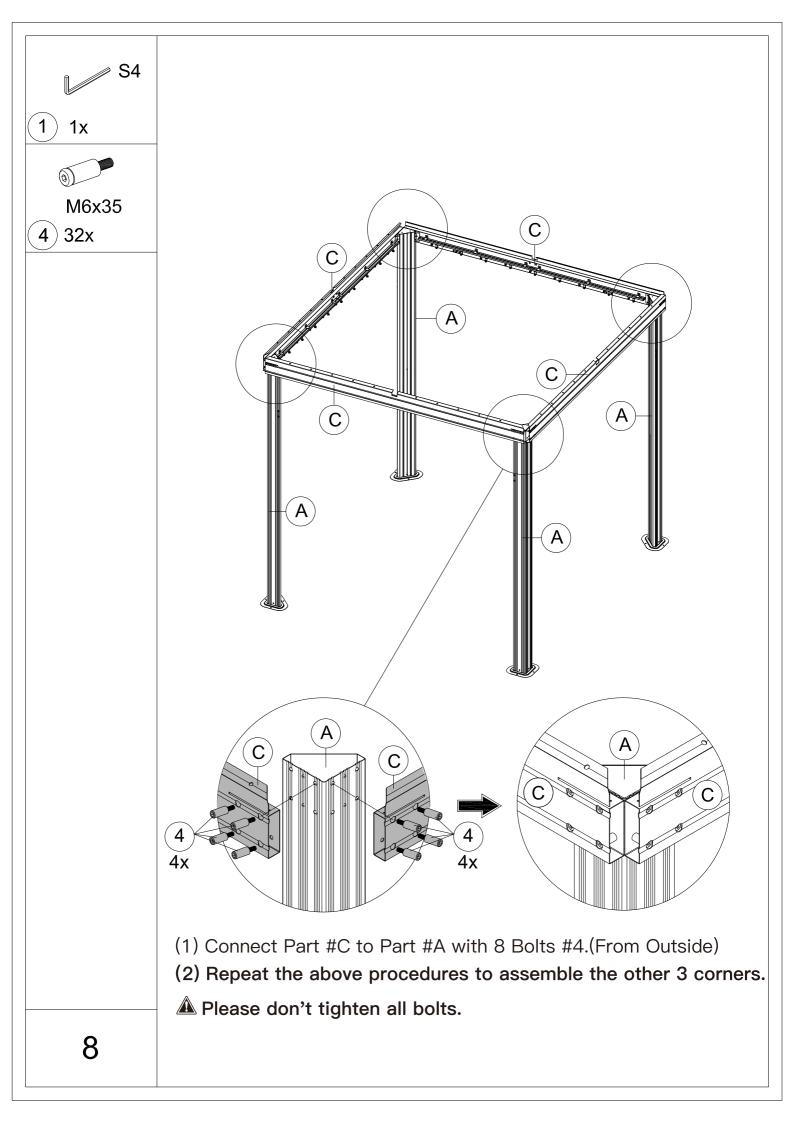

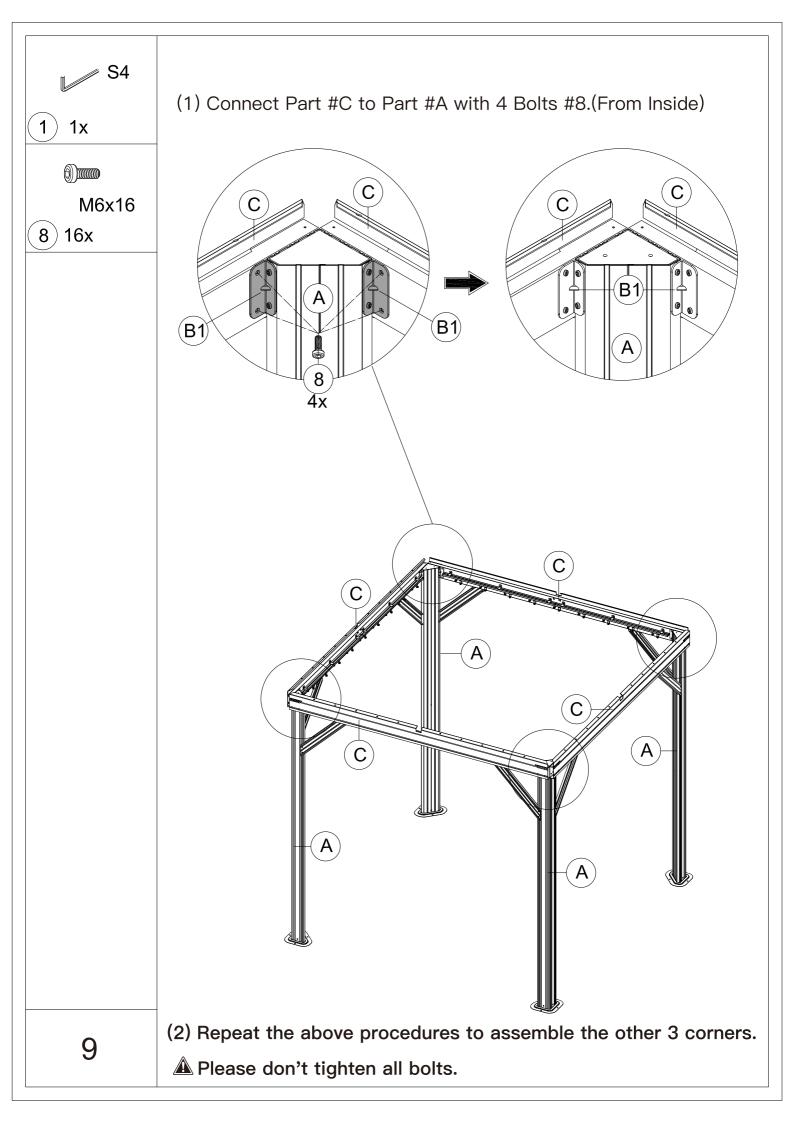

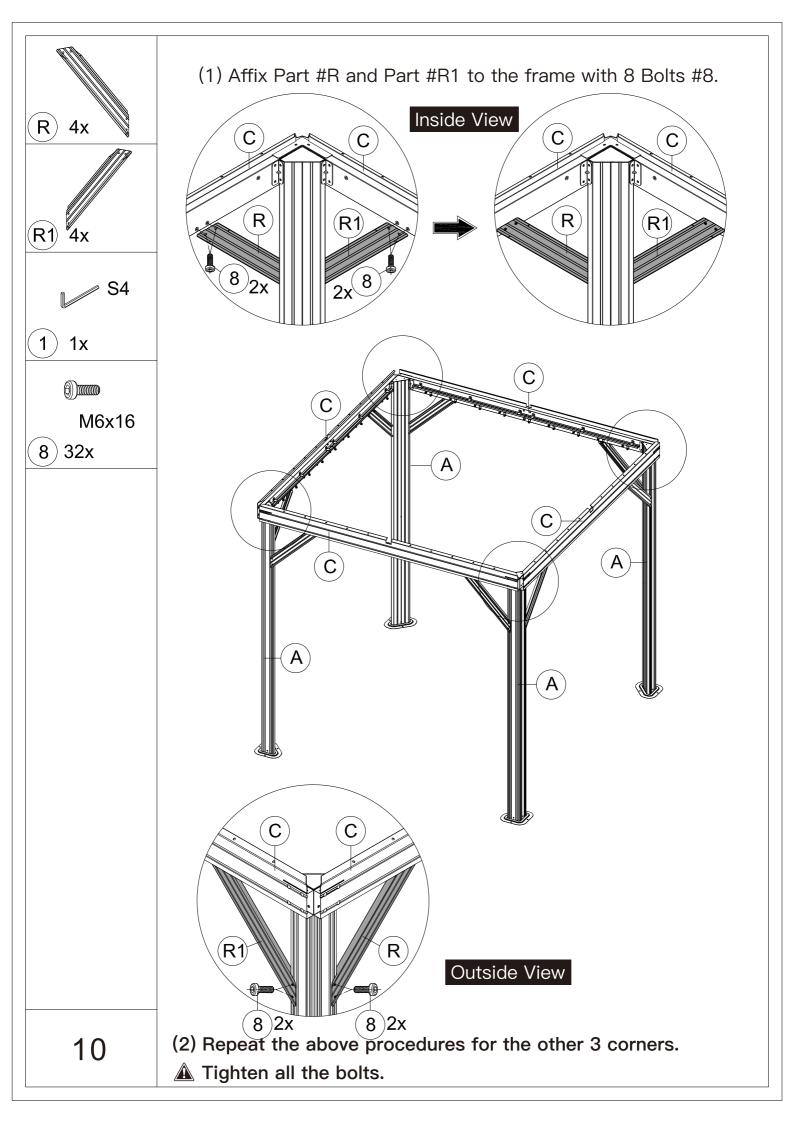

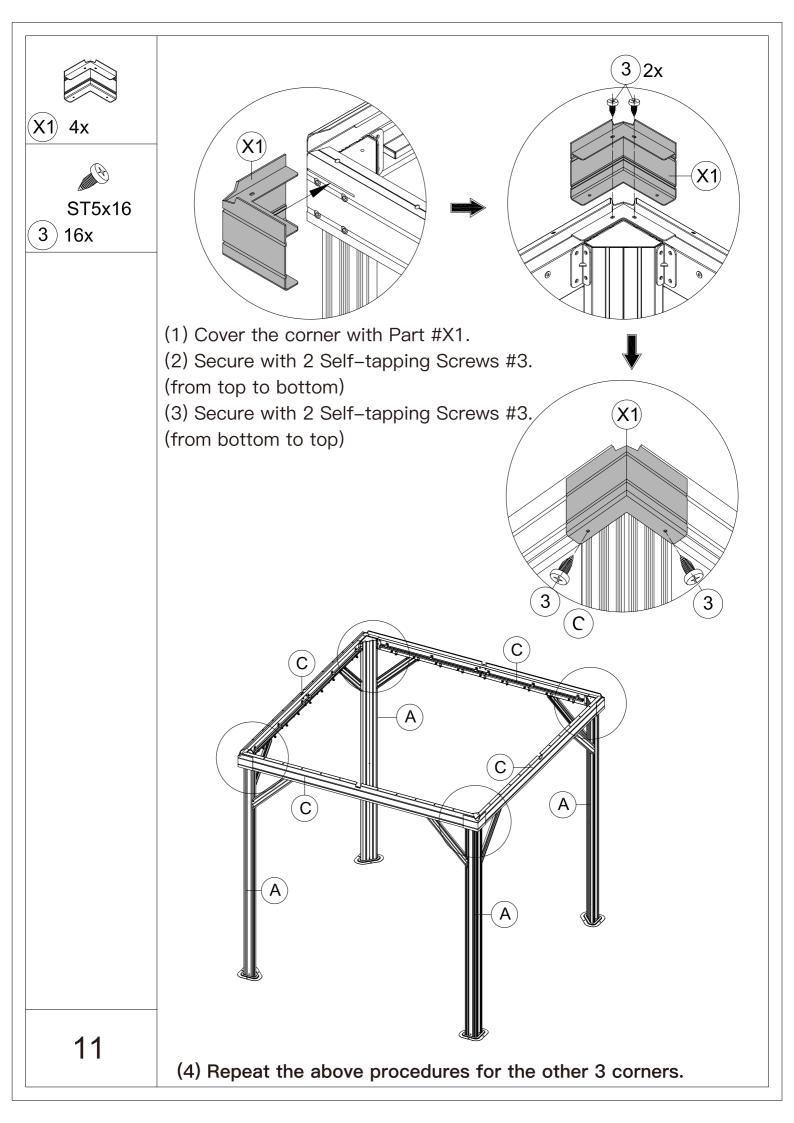



### Corner Roof Tube Assembly:




(U) 4×




1) 1x


M6x16


8) 4x

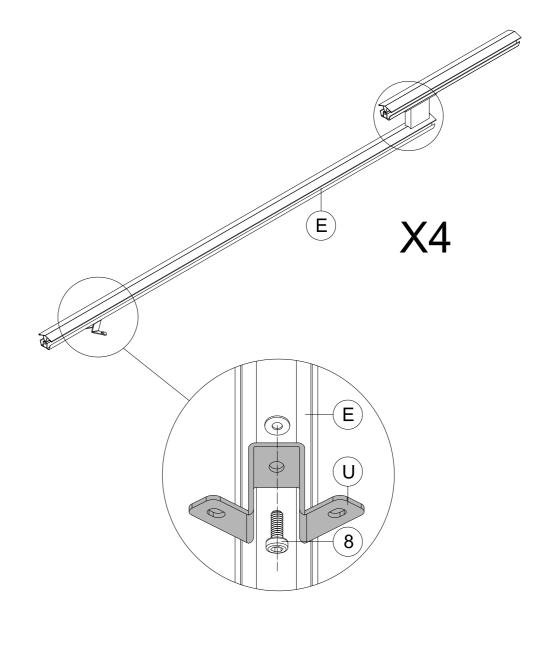

- (1) Attach Part #U to Part #E with Bolt #8.
- (2) Repeat the above procedures for the other 3 corner roof bars.

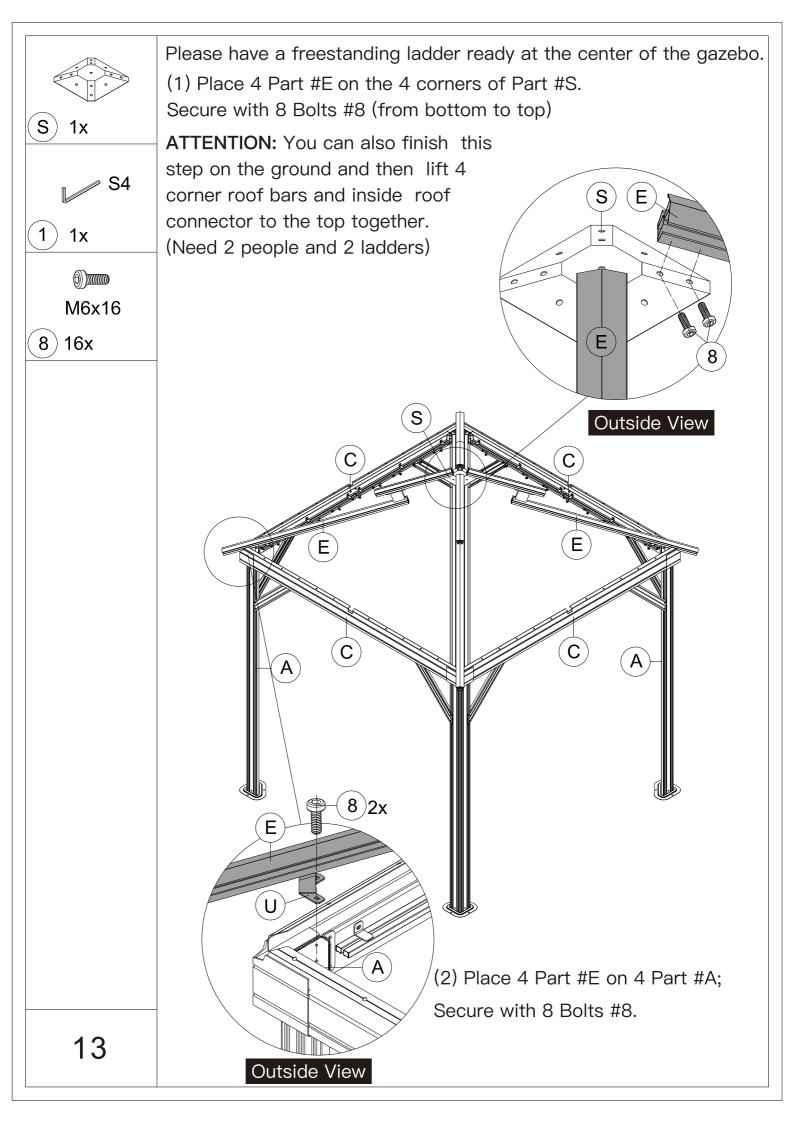


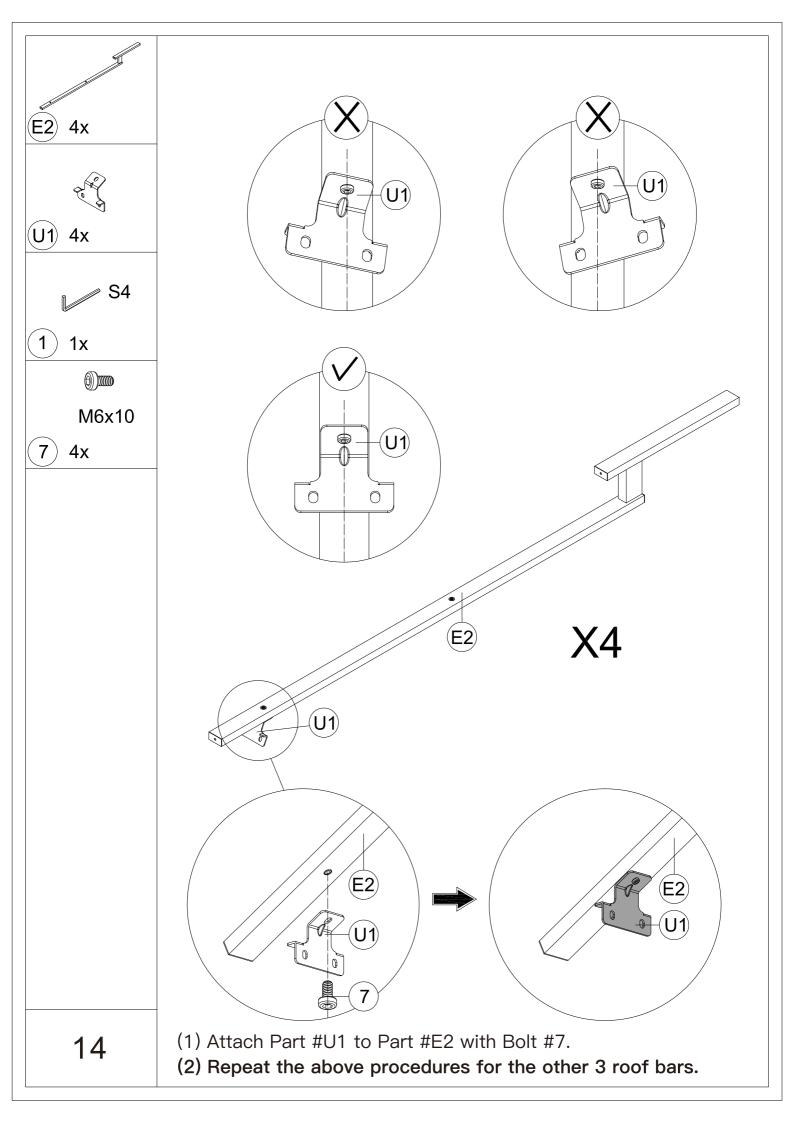


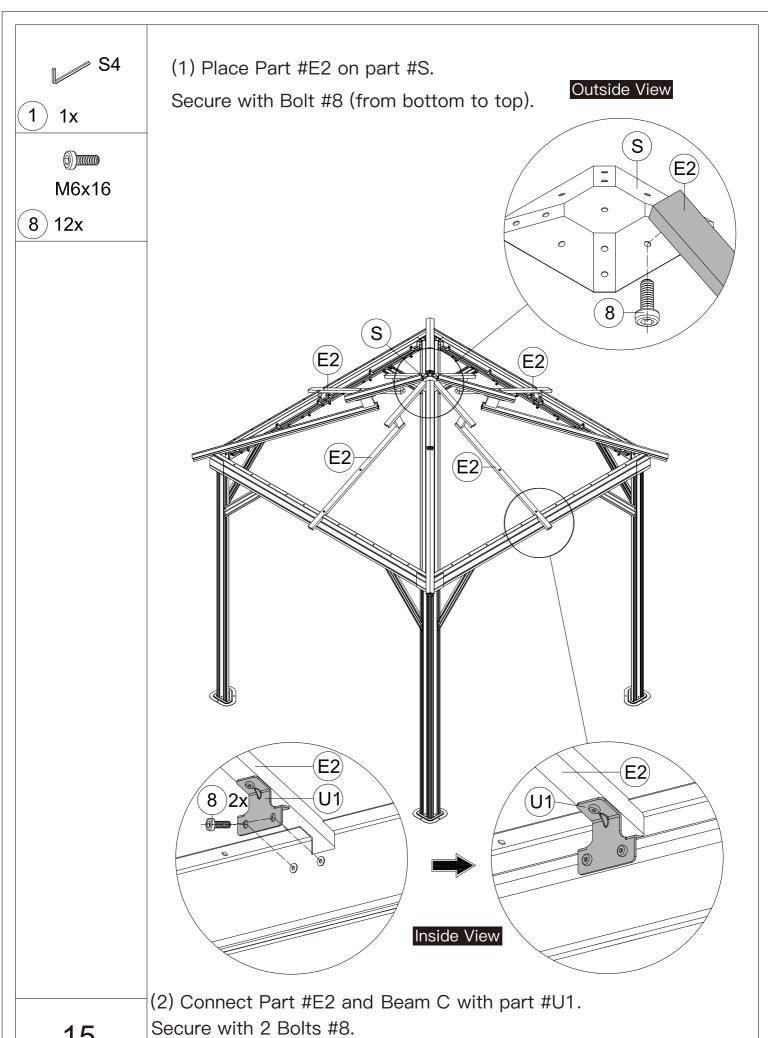



(3) Repeat the above procedures for the other 3 sides.

15

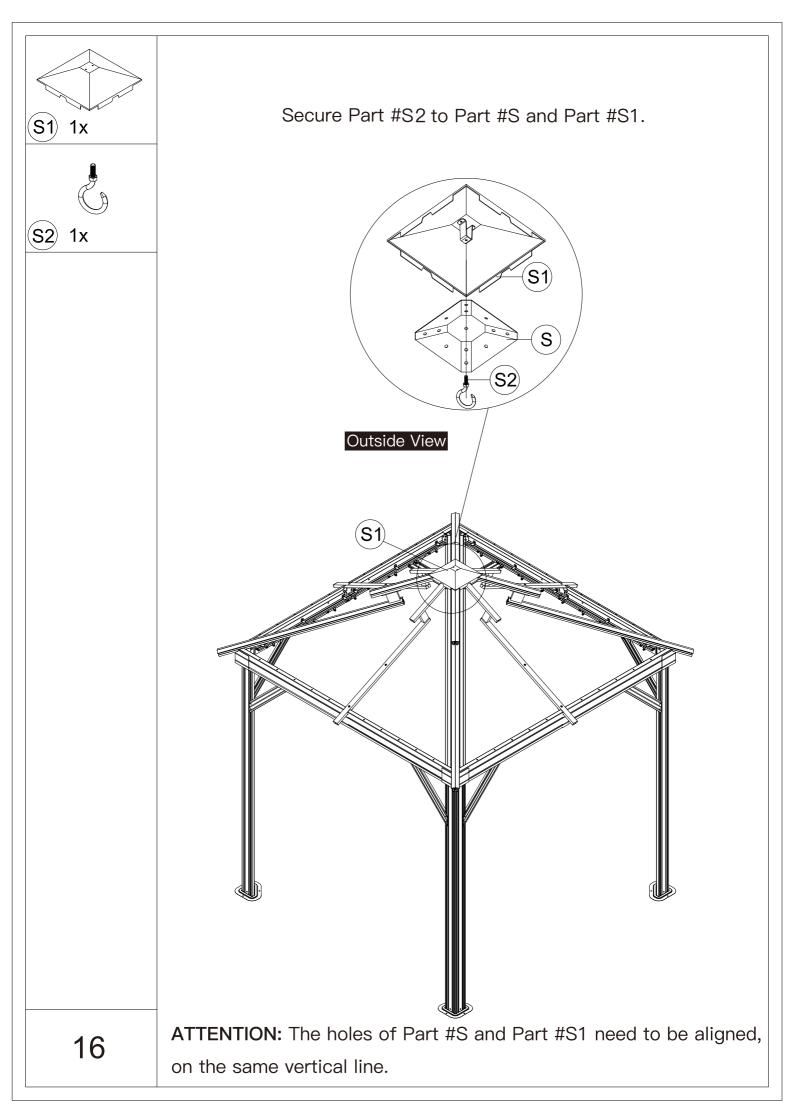

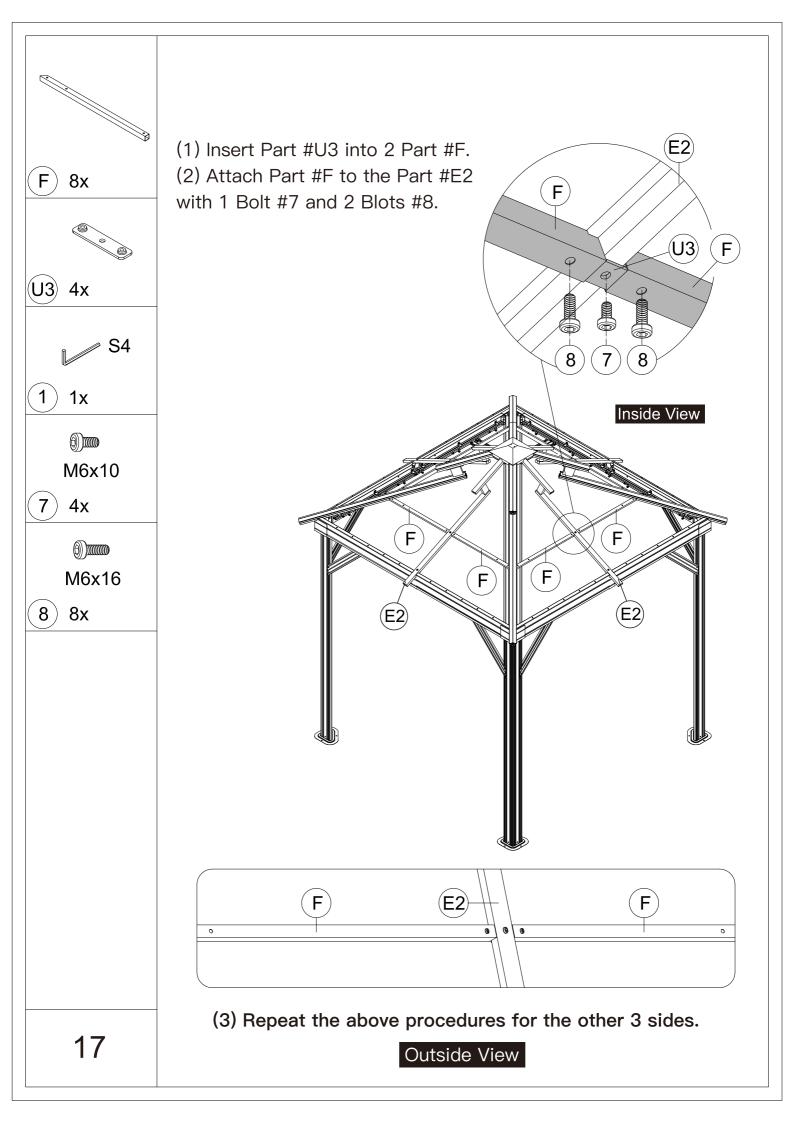

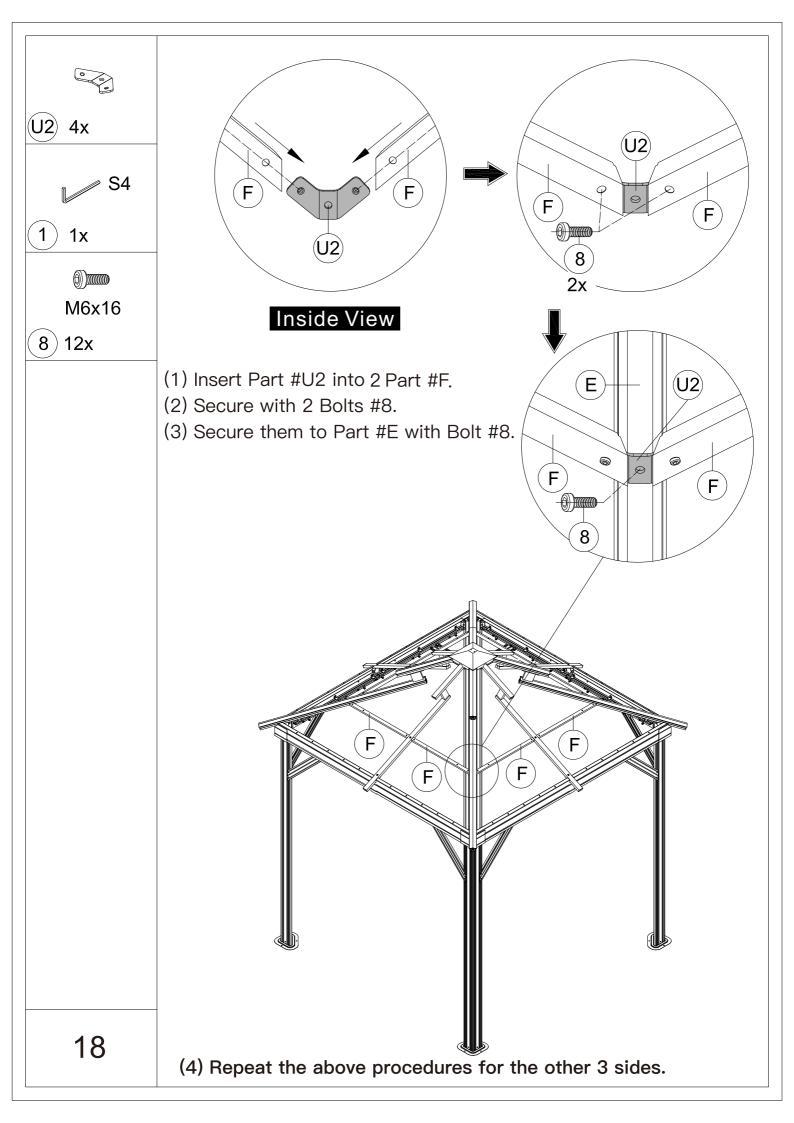

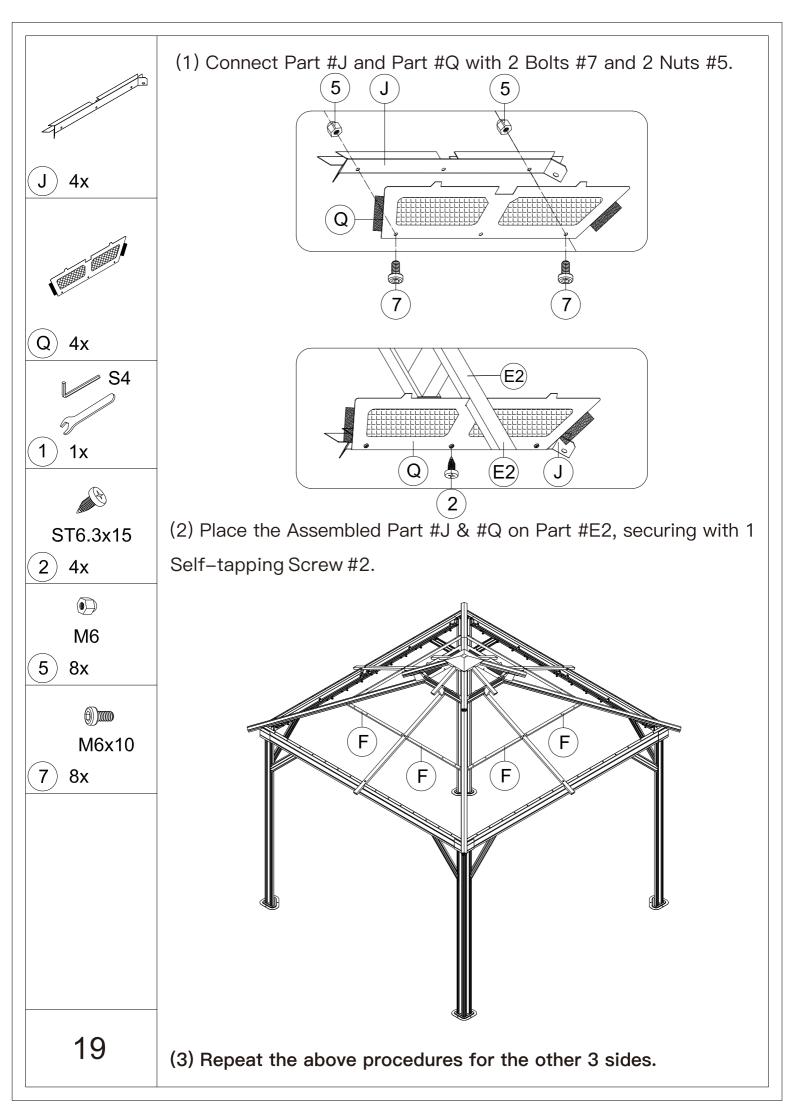




(X3) 4x




ST6.3x15


4x

(1) Place 2 Part #J on Part #E, put on Part #X3 and secure with Self-tapping Screw #2.

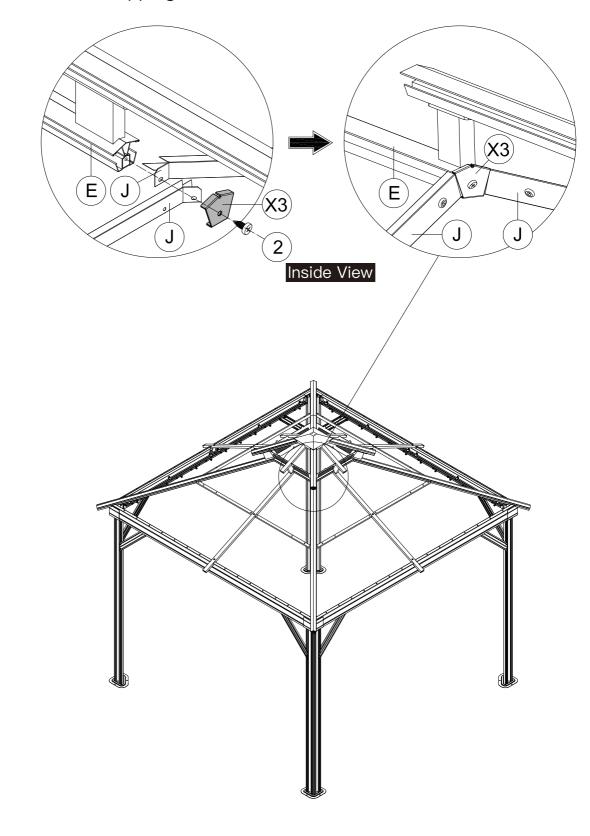

(2) Repeat the above procedures for the other 3 corners.

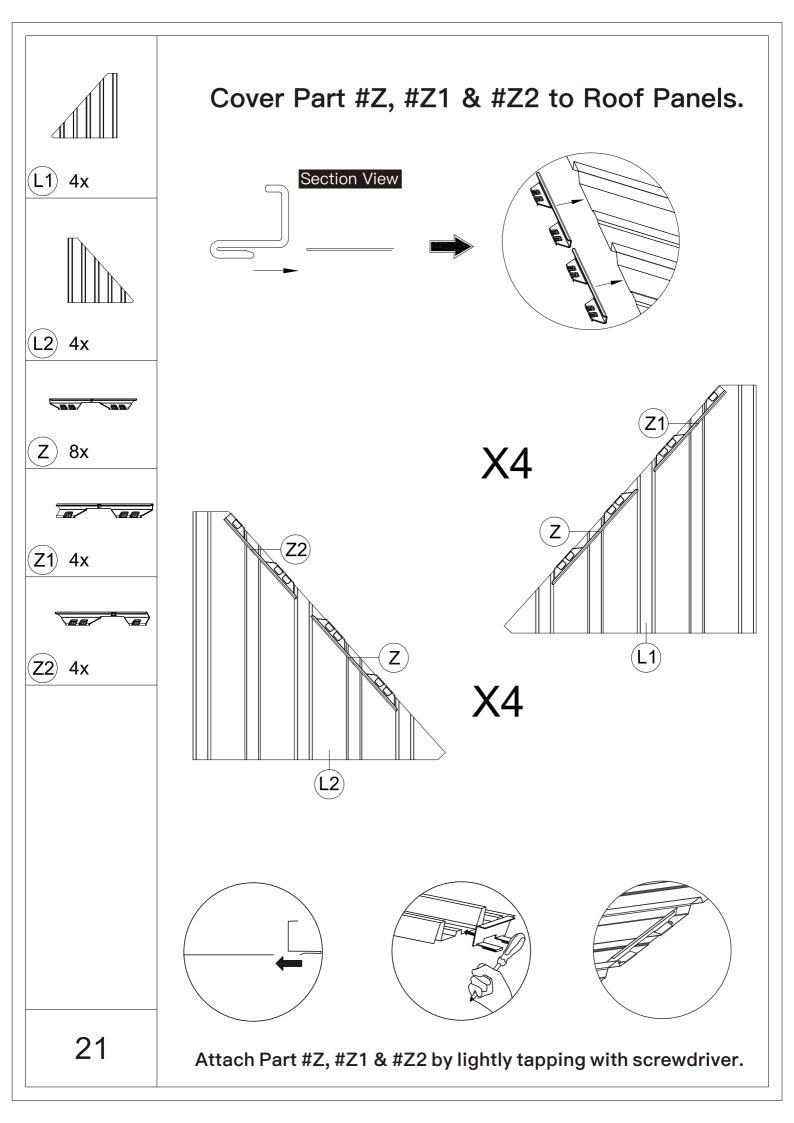

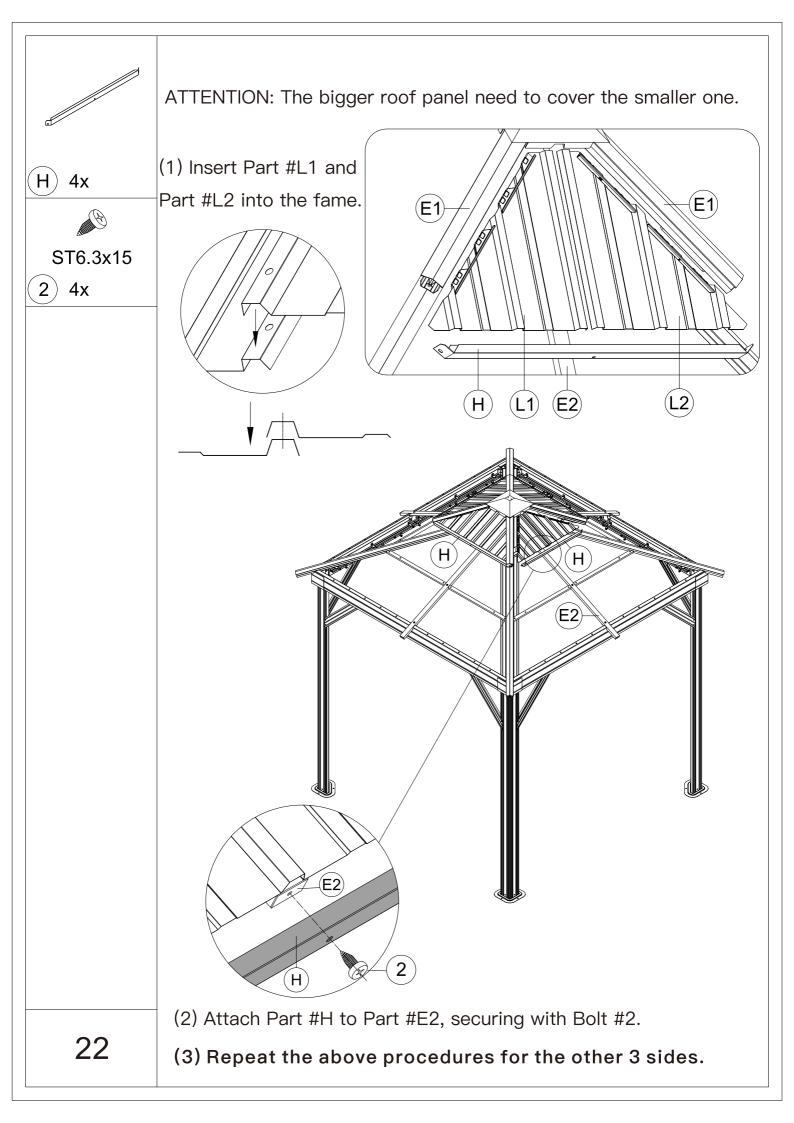




(X3) 4x




ST6.3x15


2) 4x


(1) Place 2 Part #H on Part #E1, put on Part #X3 and secure with Self-tapping Screw #2.

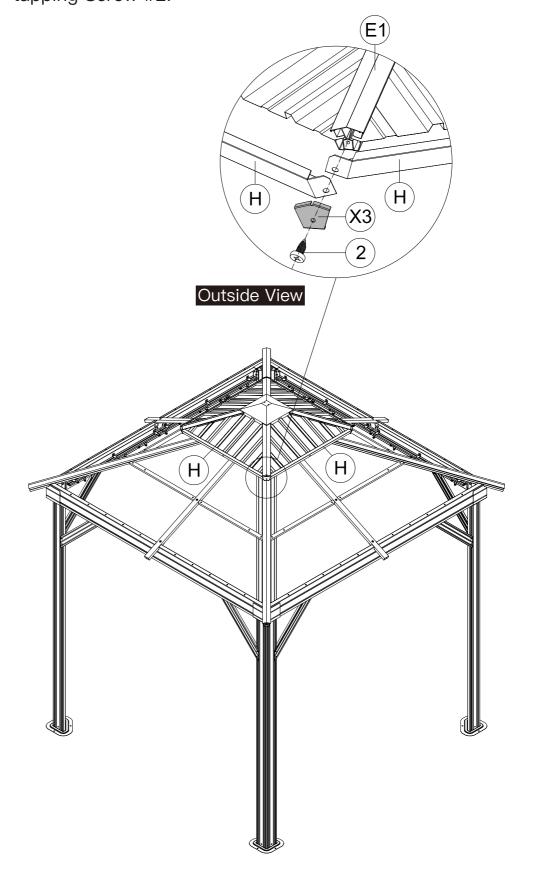



(2) Repeat the above procedures for the other 3 corners.

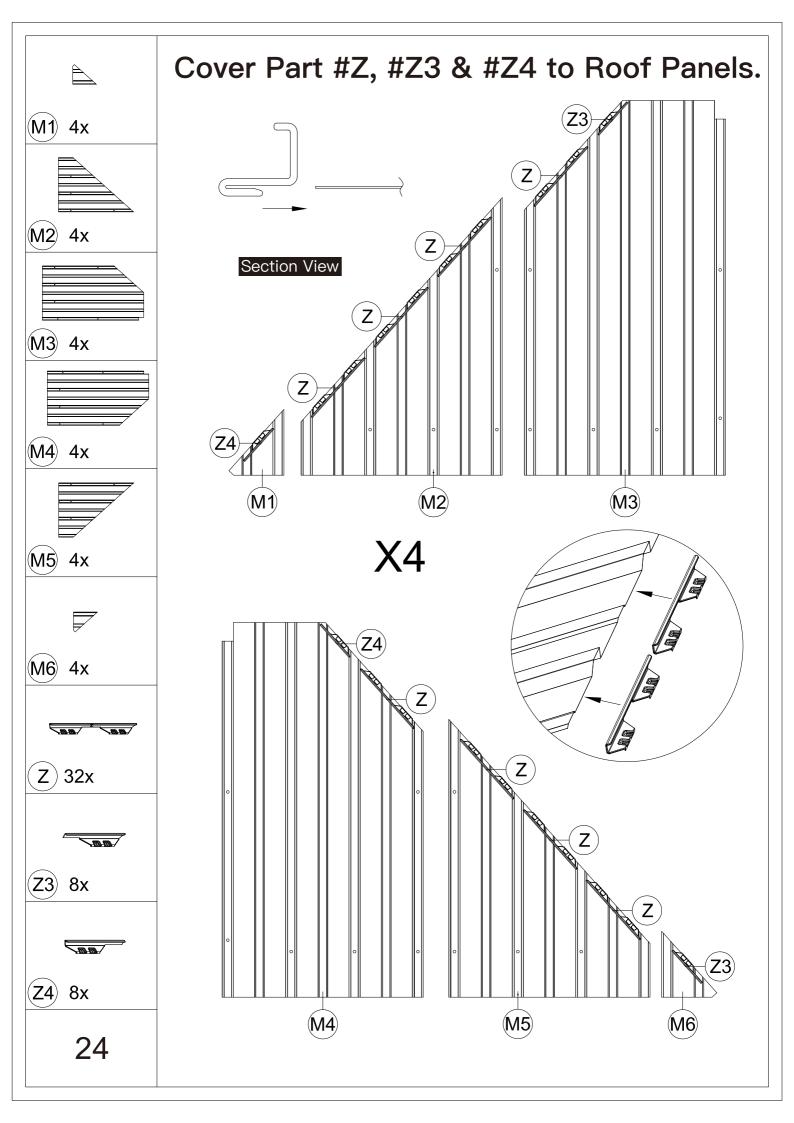

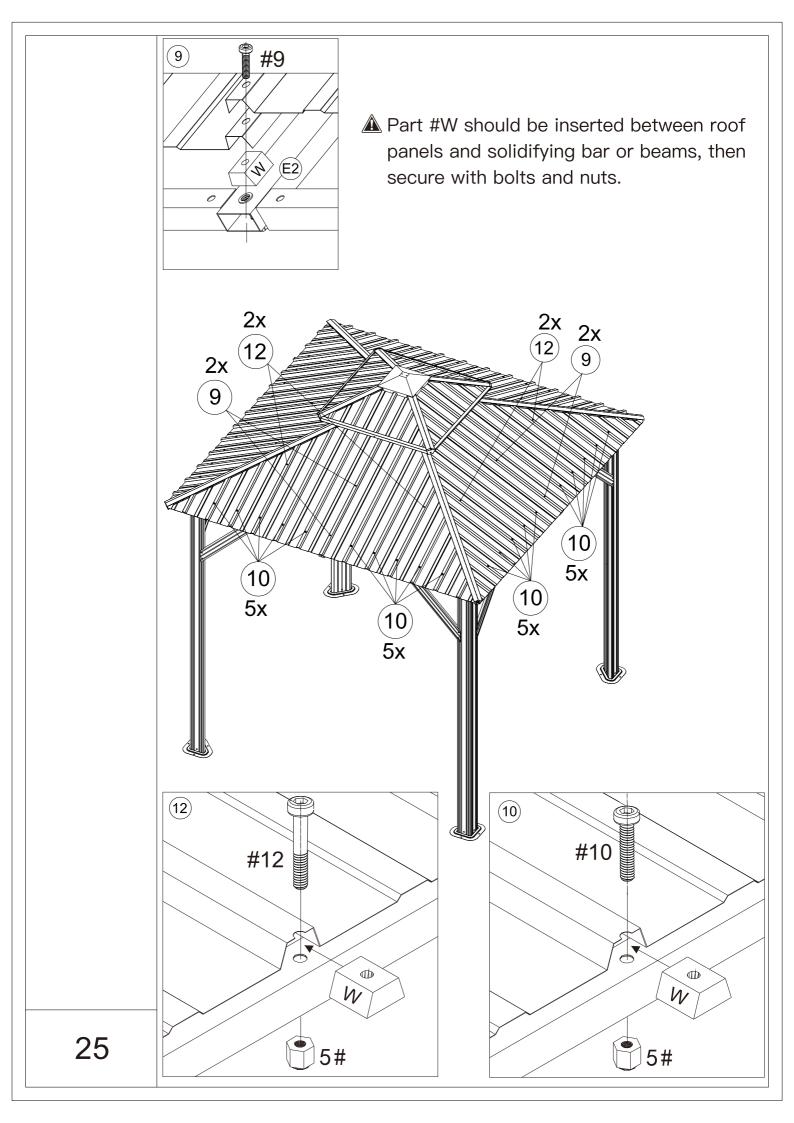


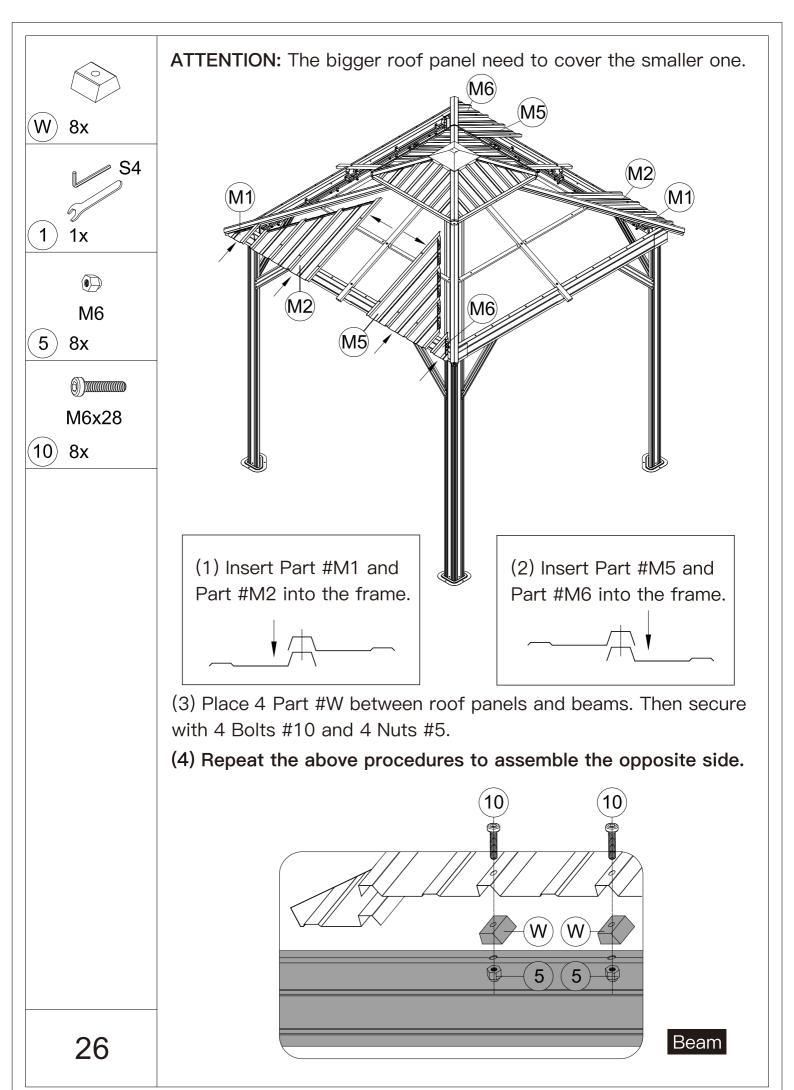


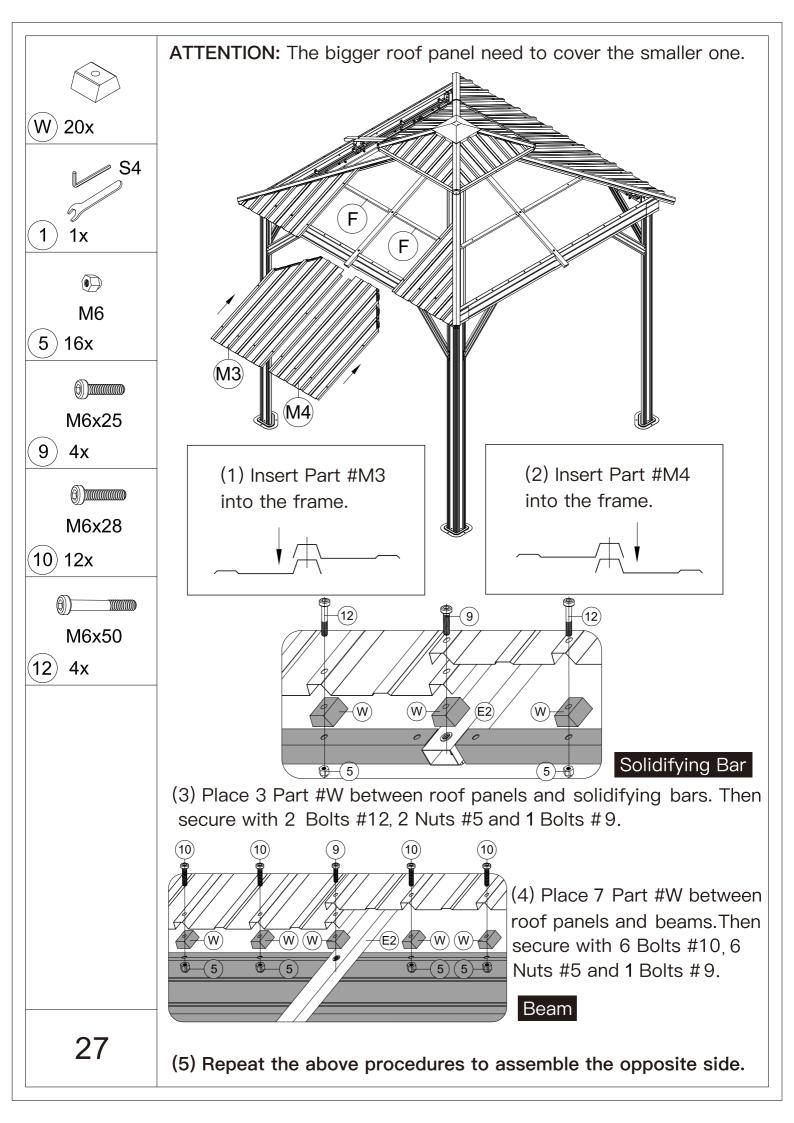

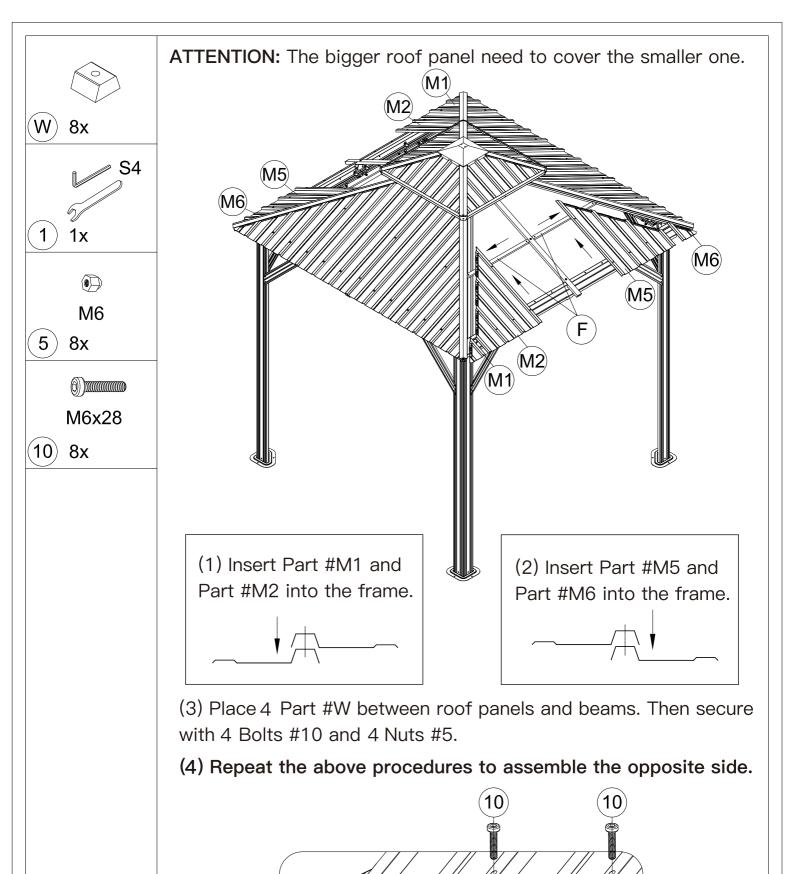

Beam

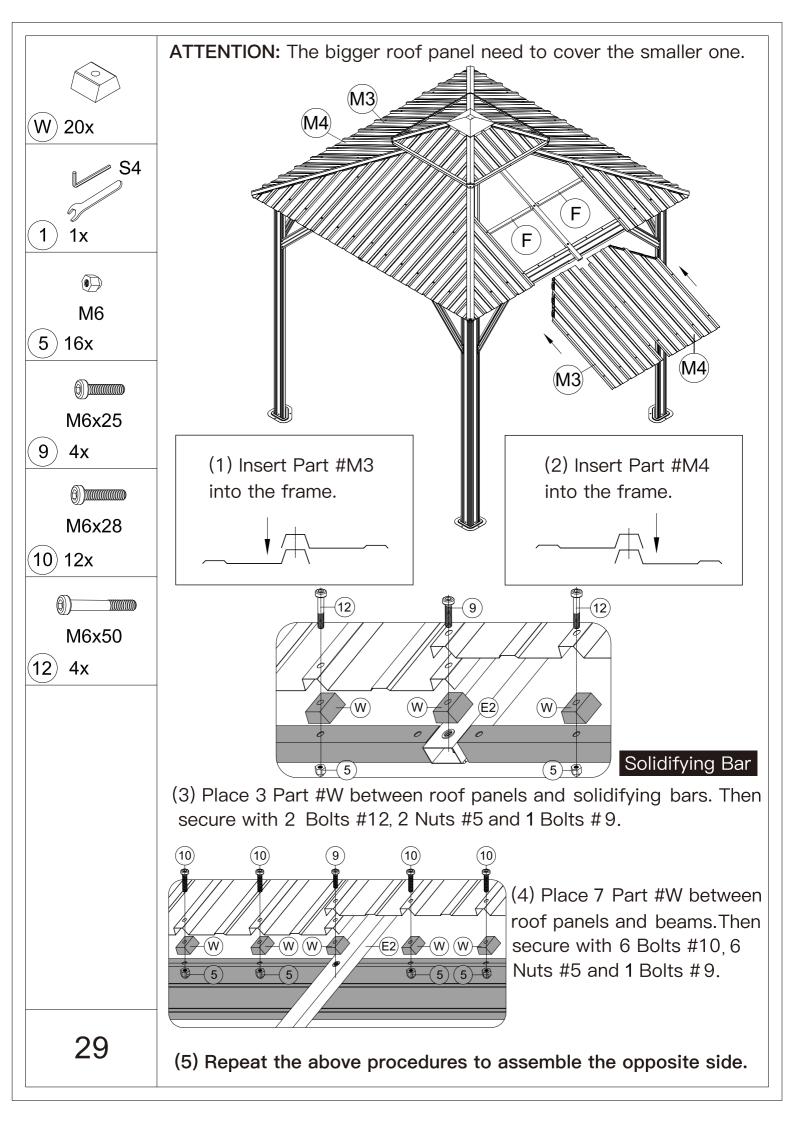

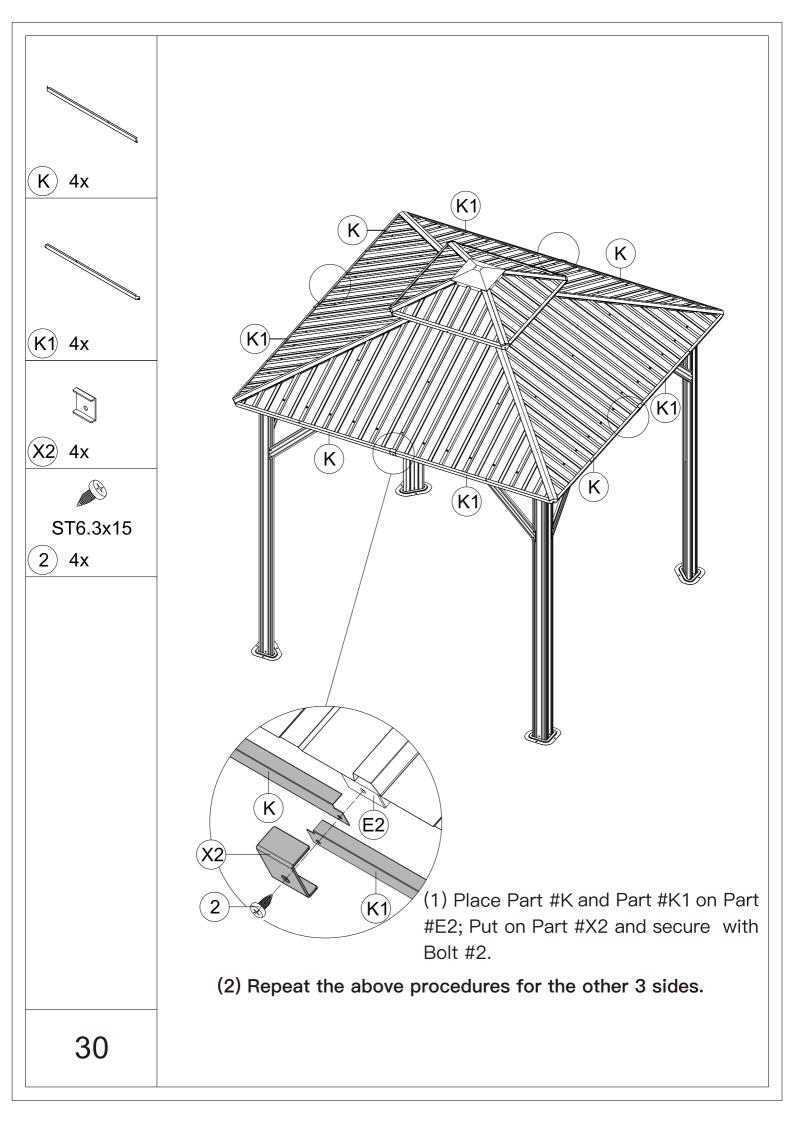




(X3) 4x



ST6.3x15


2) 4x

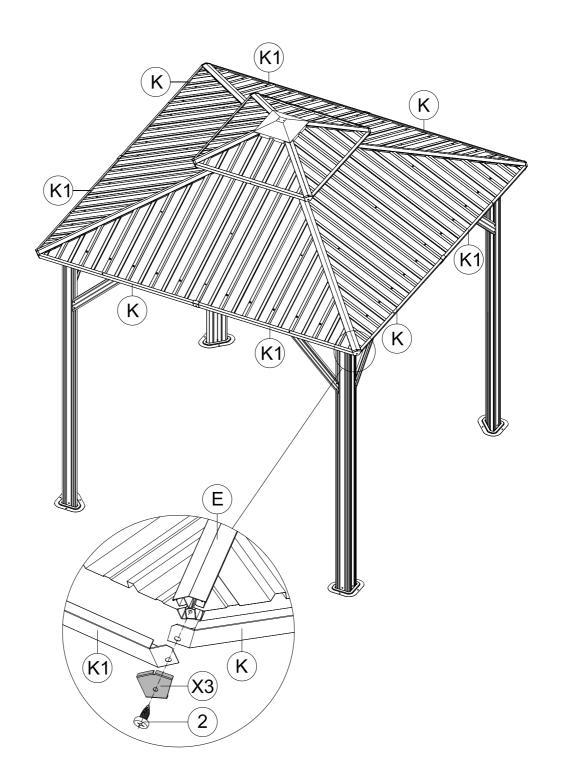


- (1) Place Part #K1 and Part #K on Part #E; Put on Part #X3 and secure with Self-tapping Screw #2.
- (2) Repeat the above procedures for the other 3 corners.




3) 8x

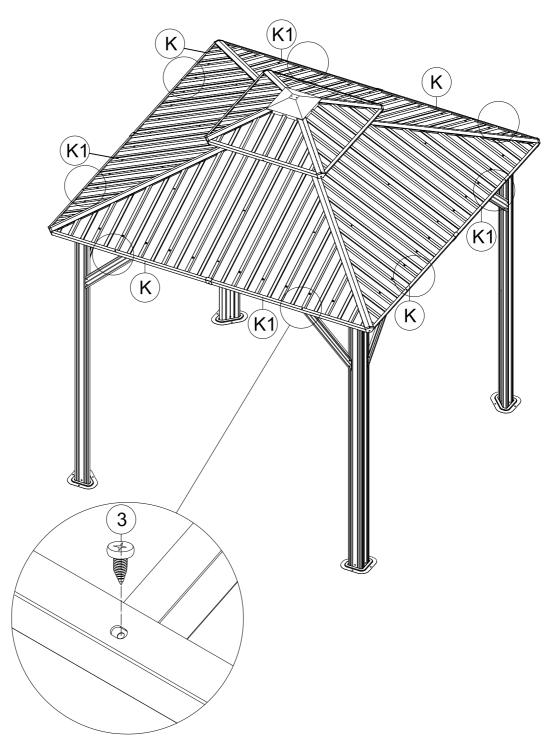

- (1) Attach roof panels to finishing bars with 2 Self-tapping Screws #3.
- (2) Repeat the above procedures for the other 3 sides.

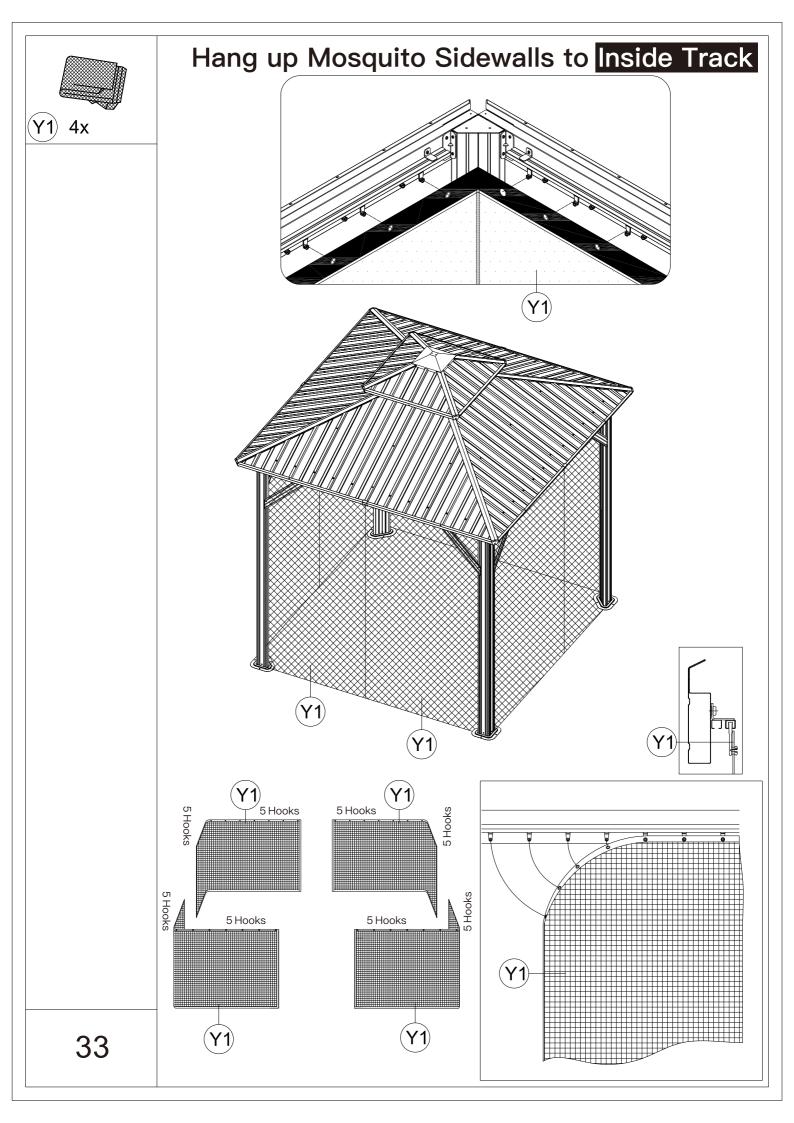

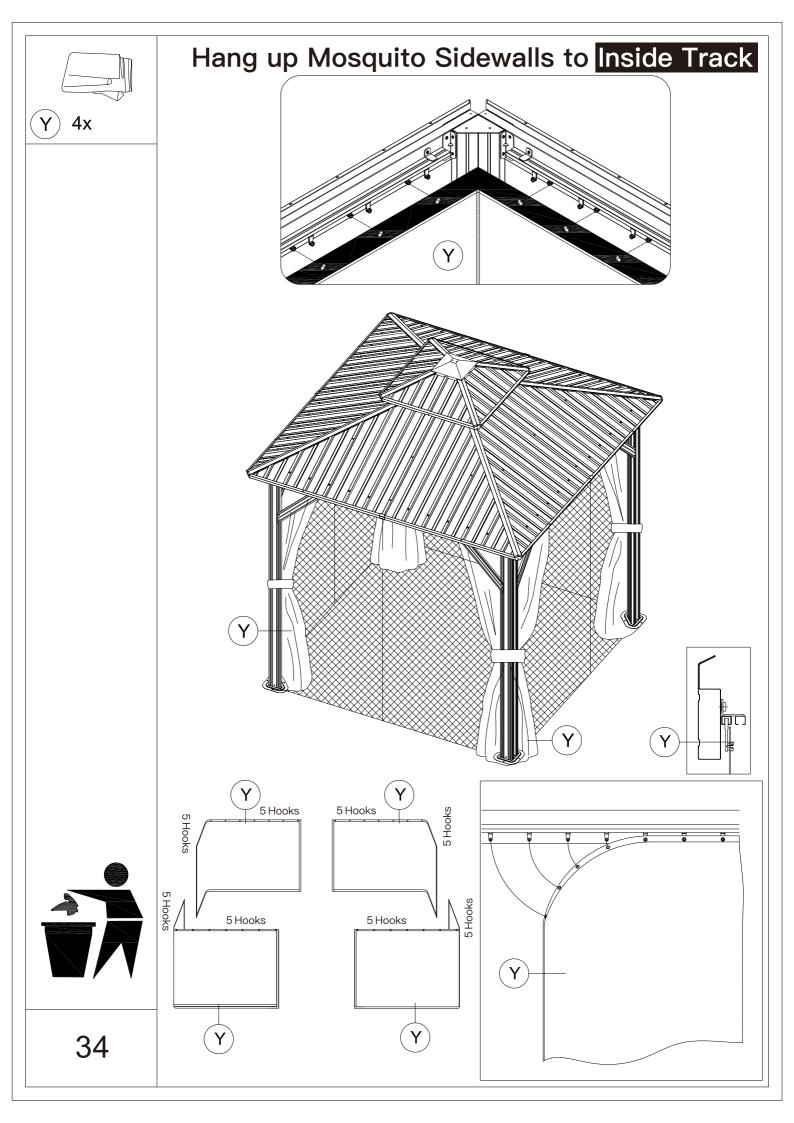

### Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

## **Support:**





#### **After-sales contact email:**

service@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.