
Bamboo Bed Frame
Set-up Instruction


Size: Full (8903-16/18)

If you have any questions about the product, please don't hesitate to contact us.
You can reach us through your order. Thanks for your support!


Components-Parts



①×2PCS



②×2PCS




④×4PCS




A×4
M8*28




B×28
M8*14

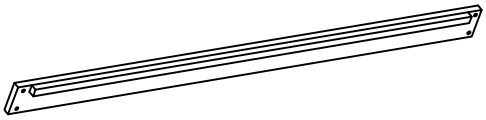

⑤×2PCS



⑥×1PCS



⑦×2PCS



C×2
M8*33



D×1PCS
M8*56



⑧×1PCS



⑩×12PCS




⑪×2PCS




NOTE:The M8*27 for the bolt indicates a diameter of 8 mm (0.315 in) and a length of 27 mm (1.06 in).


Spare: A×1、B×1、C×1、E×1

Component Distribution - Easy Assembly in 7 Steps

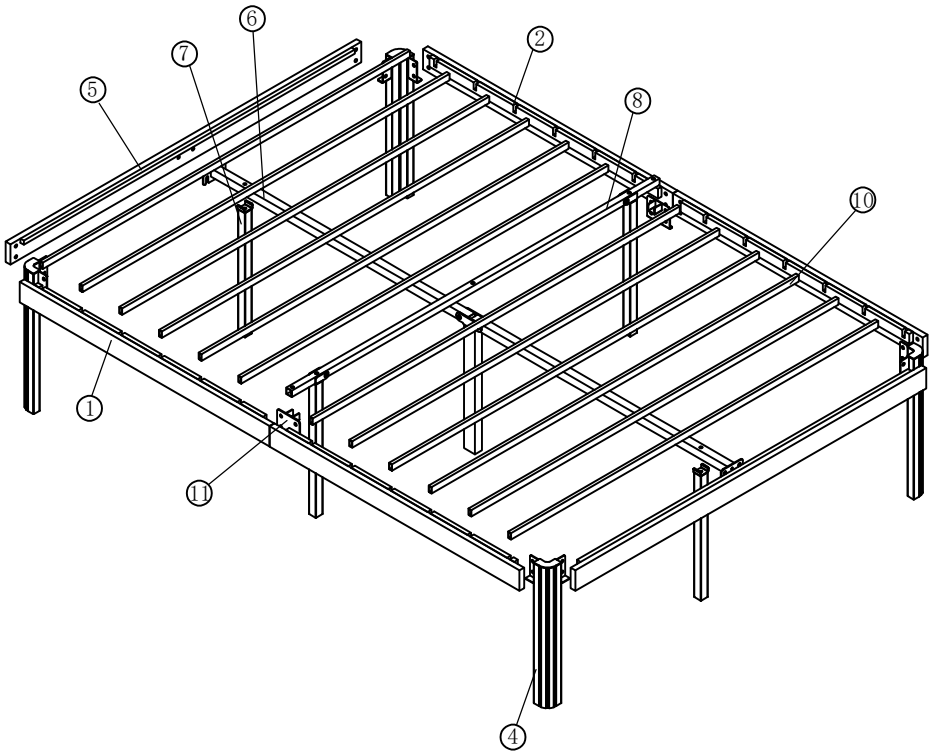



Step1:Take out parts ①&②&⑪; Joint them with screws as shown

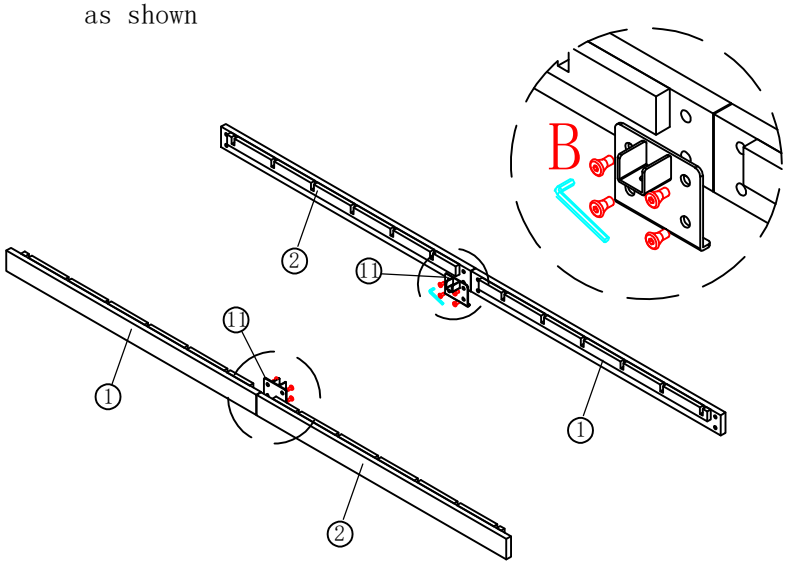


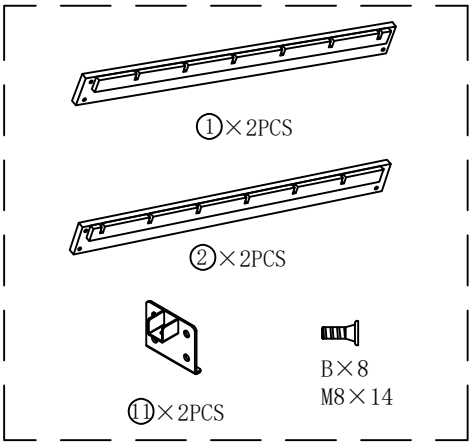


Step2:Joint four corners with screws as shown

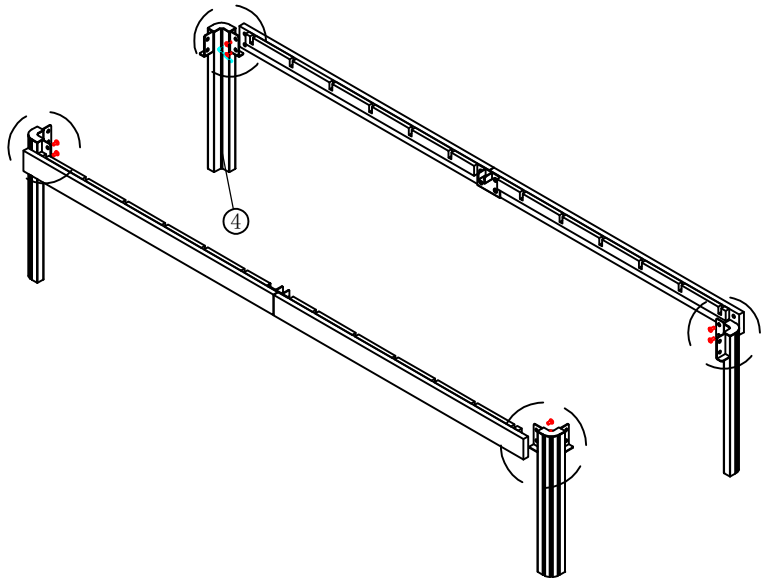


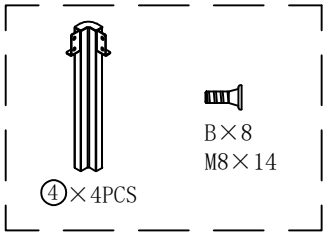


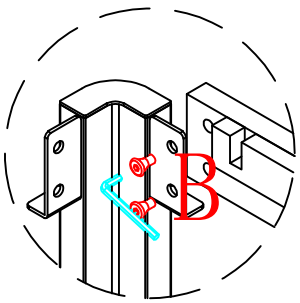


Step3:Joint parts ⑤ with screws as shown

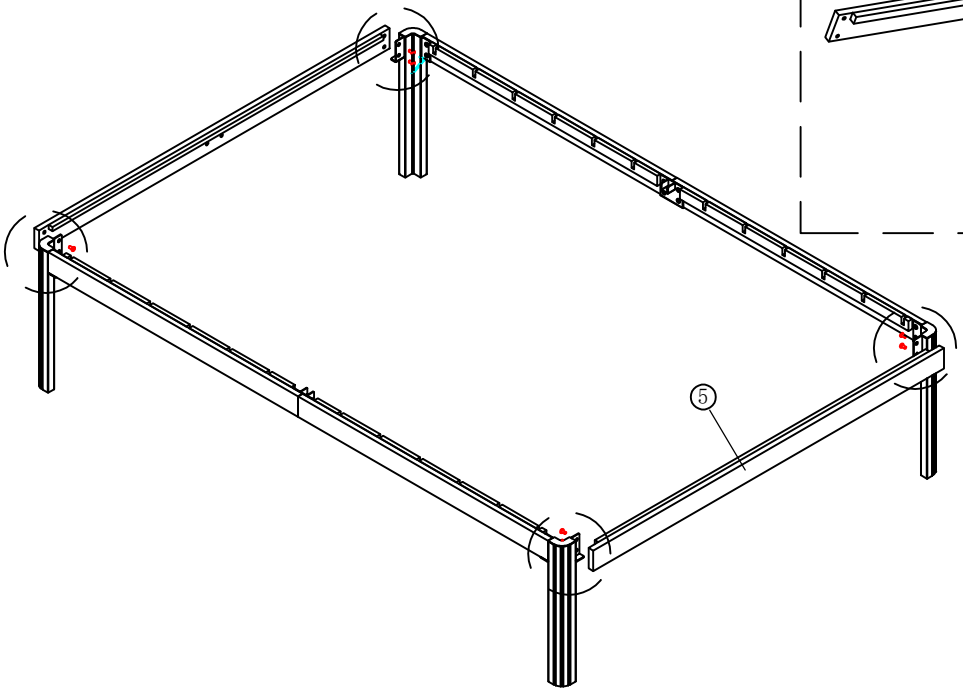


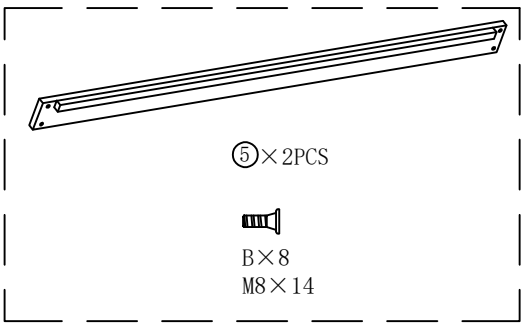

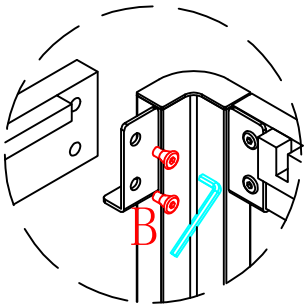

Step4:Joint parts ⑥ with screws as shown

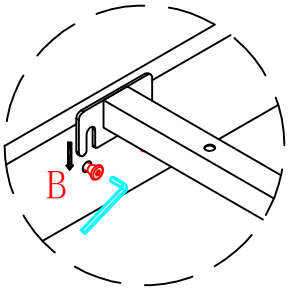





⑥×1PCS




B×4
M8×14

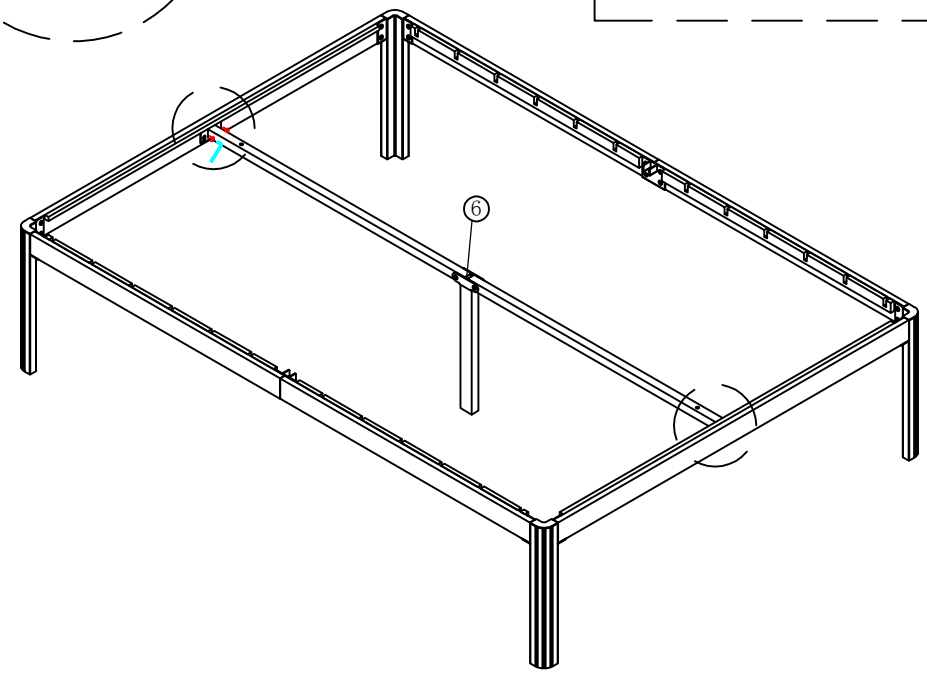

Step5:Joint parts ⑦ with screws as shown

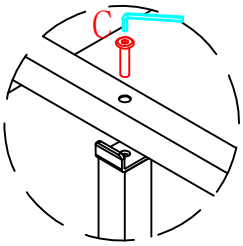





⑦×2PCS




C×2
M8×33

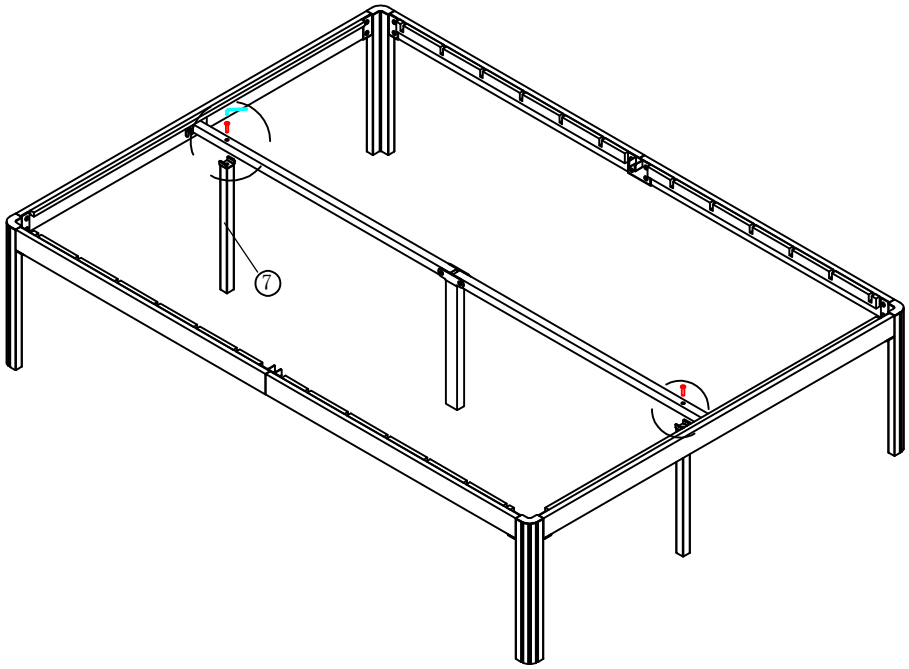

Step6:Joint parts ⑧ with screws as shown

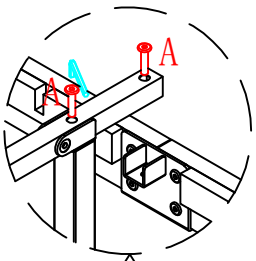




⑧×1PCS




A×4
M8×28





D×1
M8×56

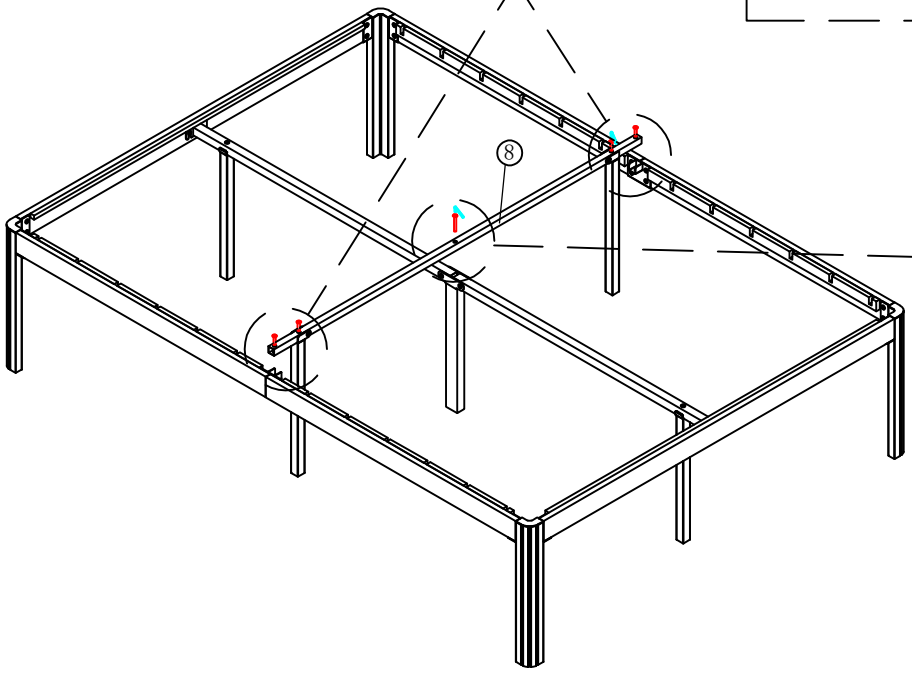

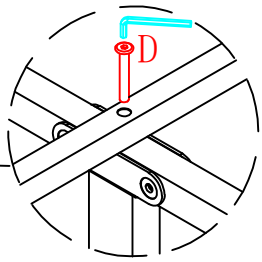


Step7:Insert 12 slats

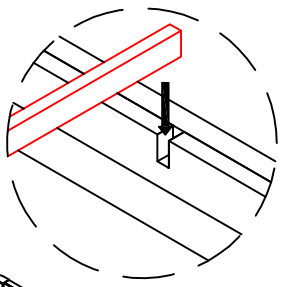



⑩×12PCS

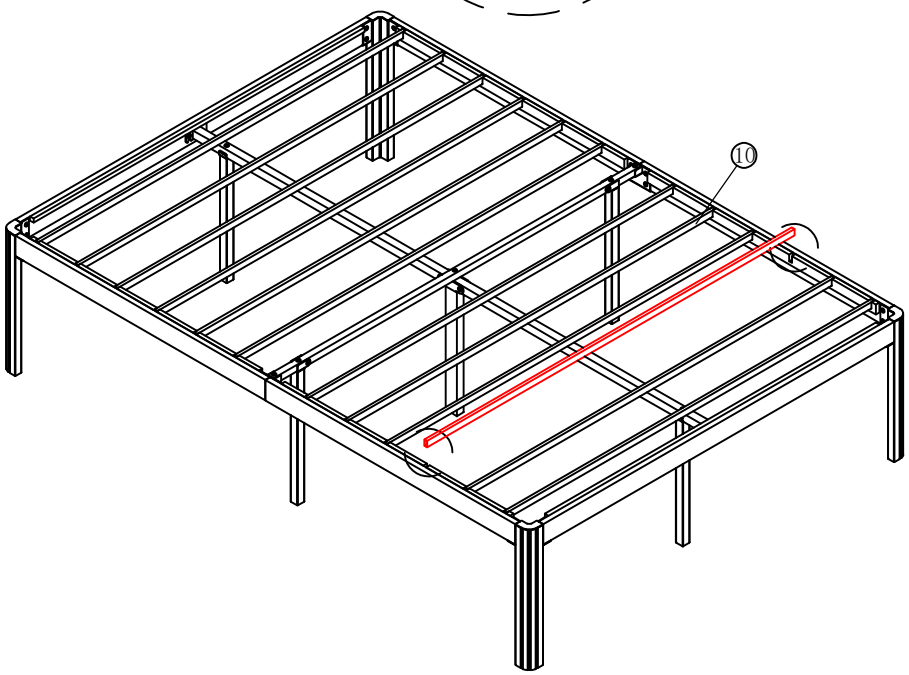

In the last step, please make sure all the screws are tightened.