


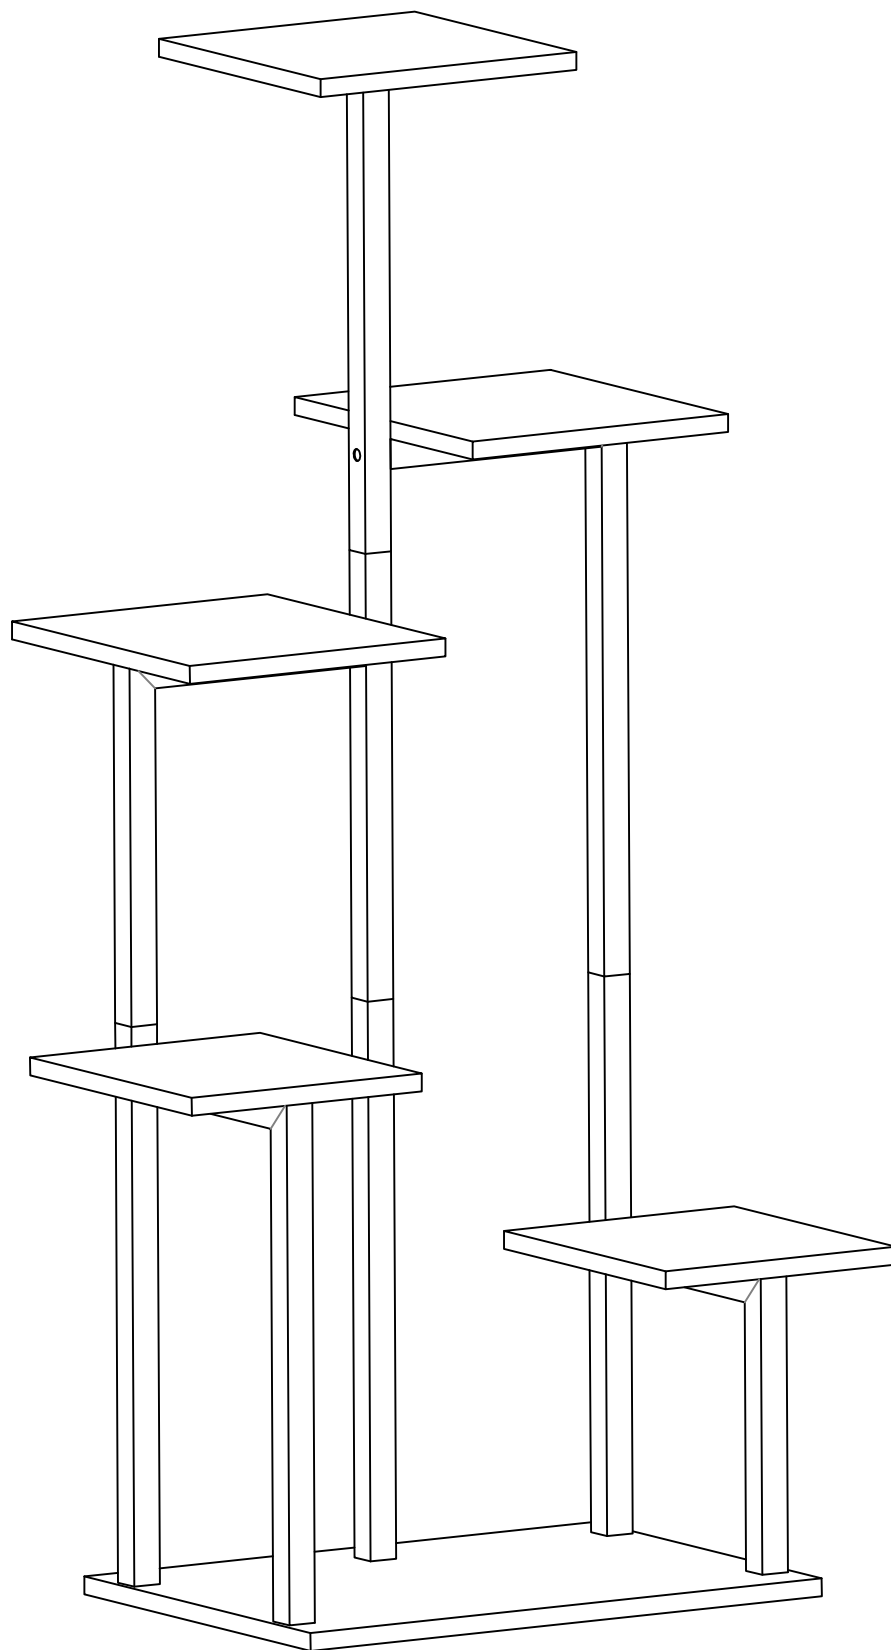
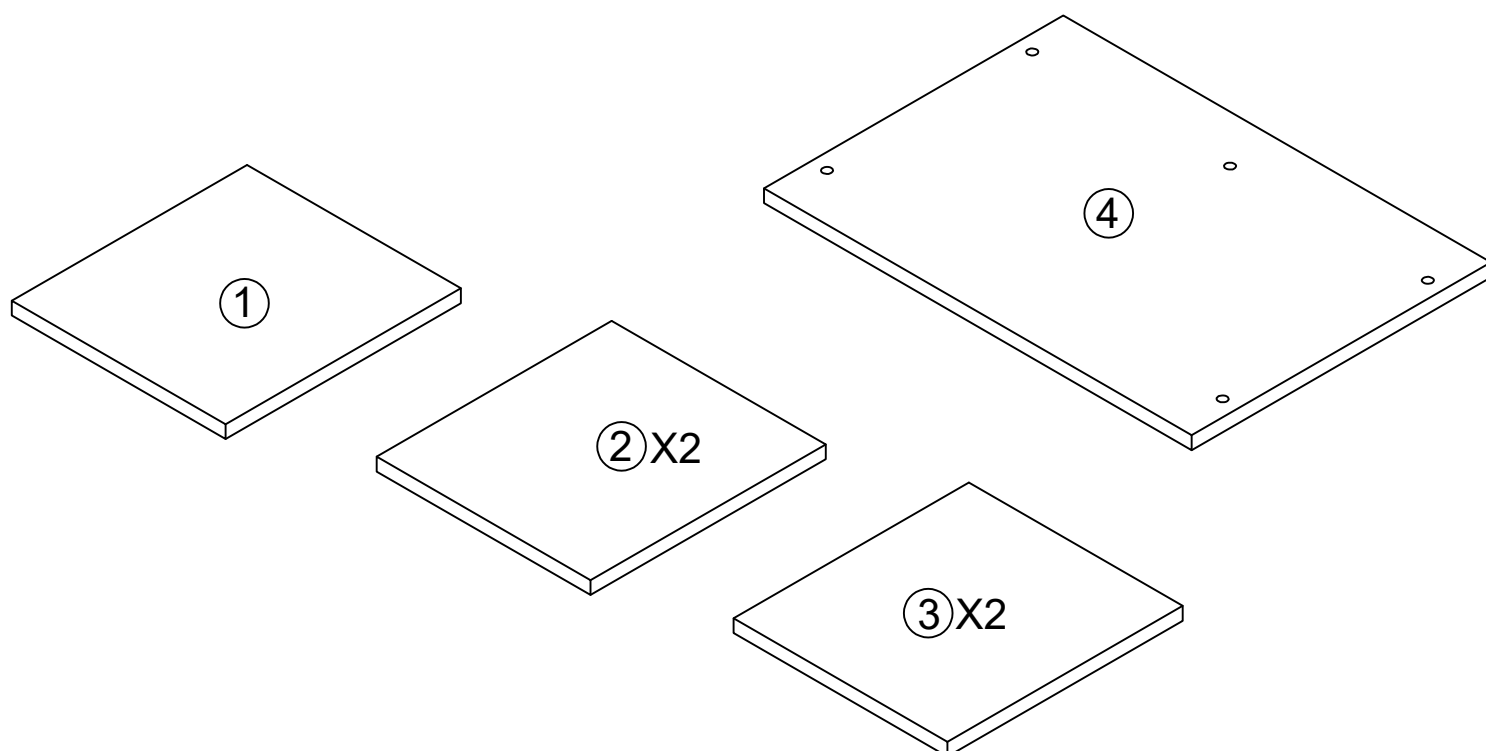


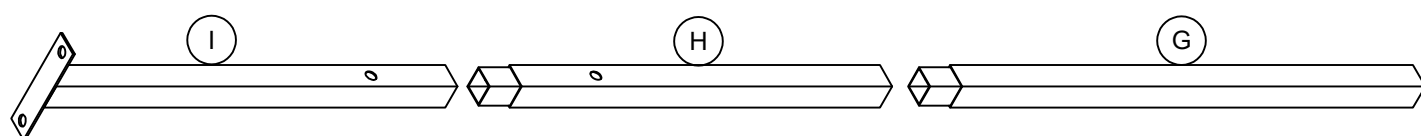


1#	10PC	2#	8PC	3#	9PC	EVA Pads*6	Large wrench*1

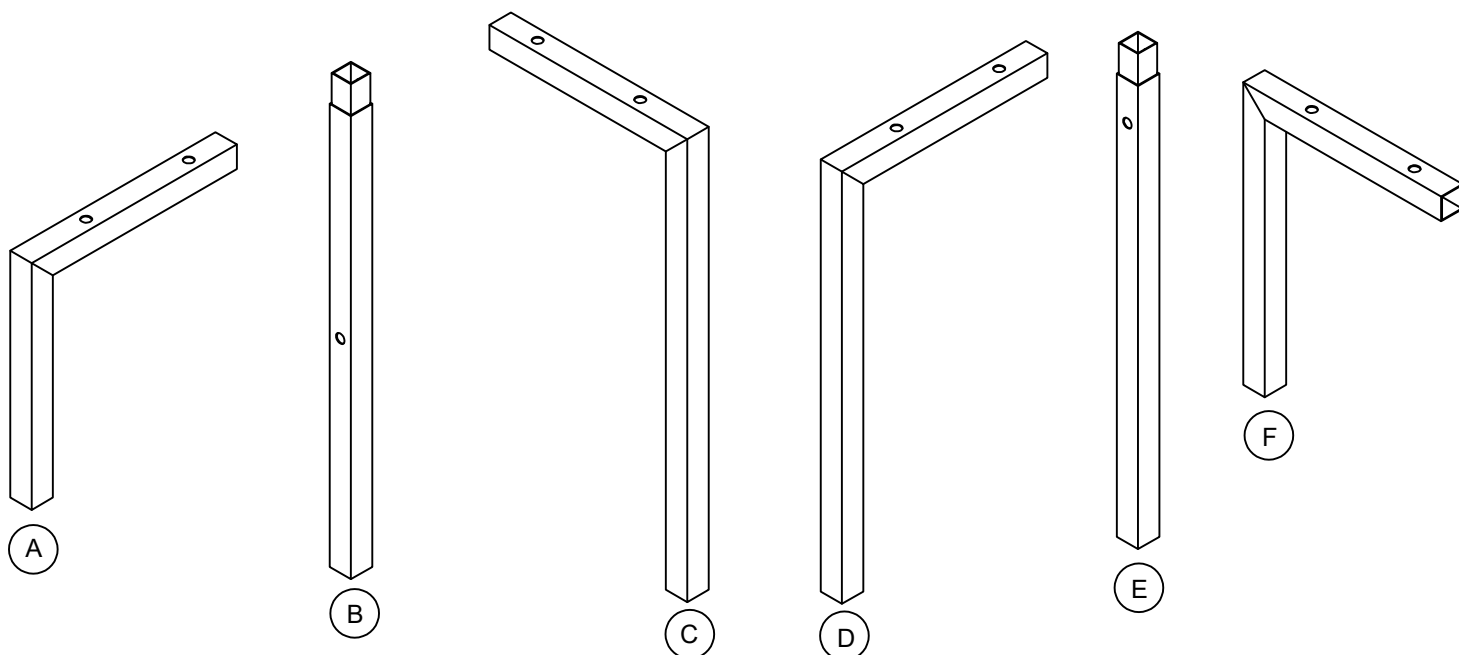


STEP 1

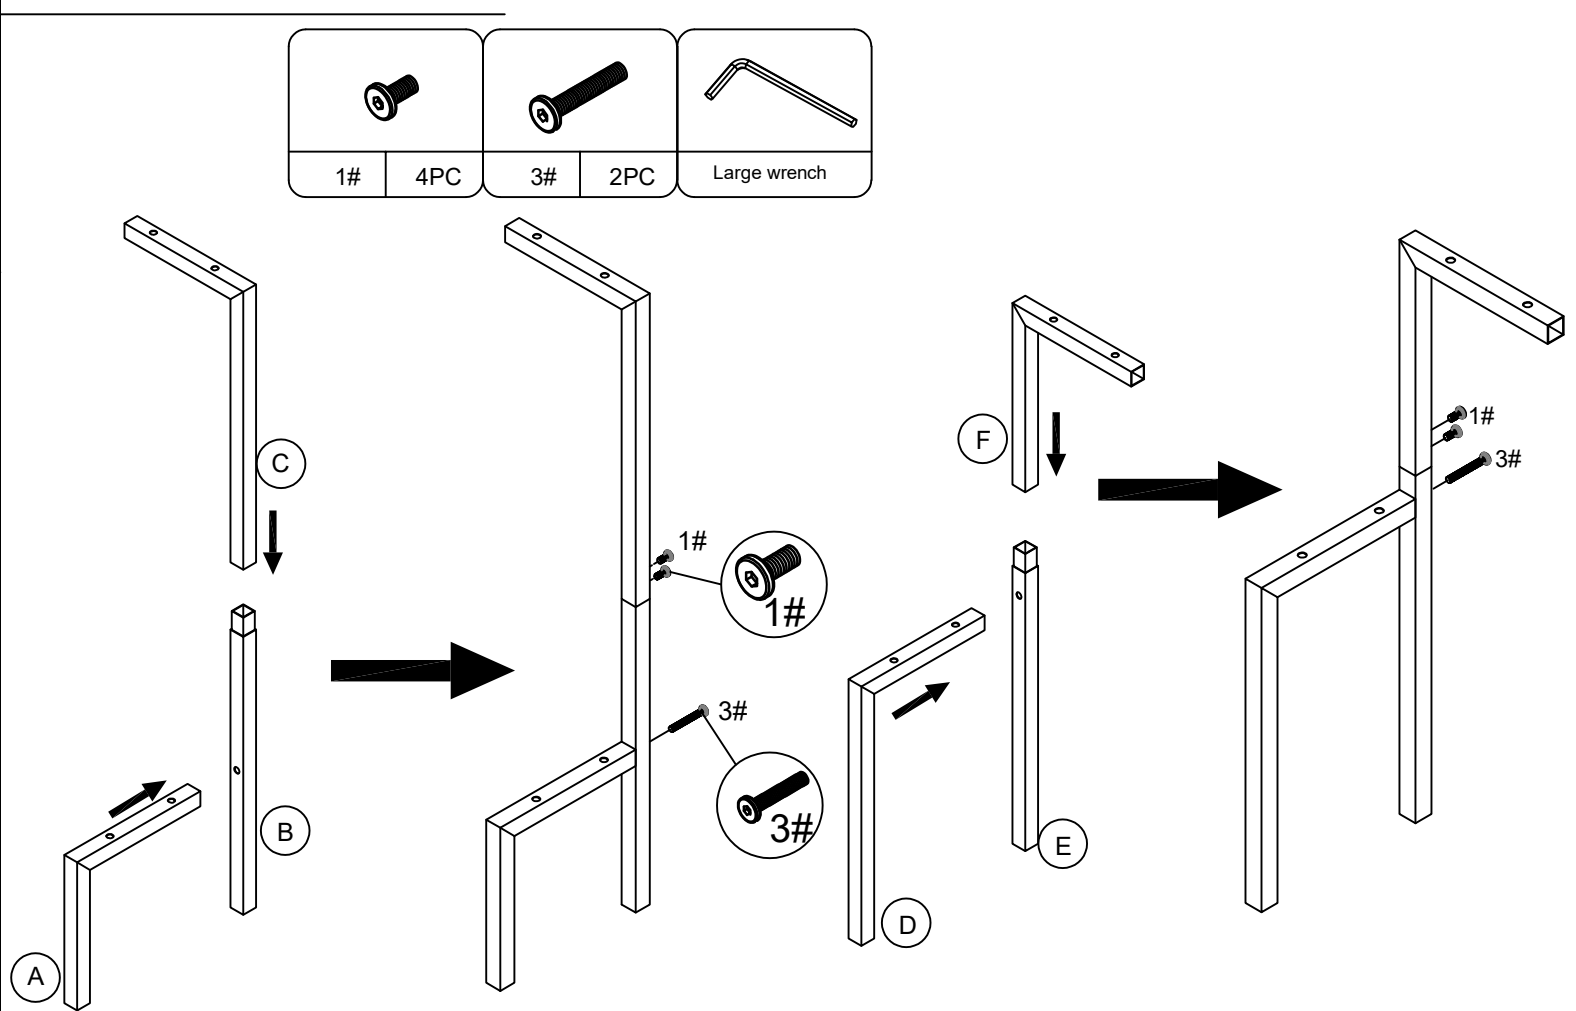


STEP 2

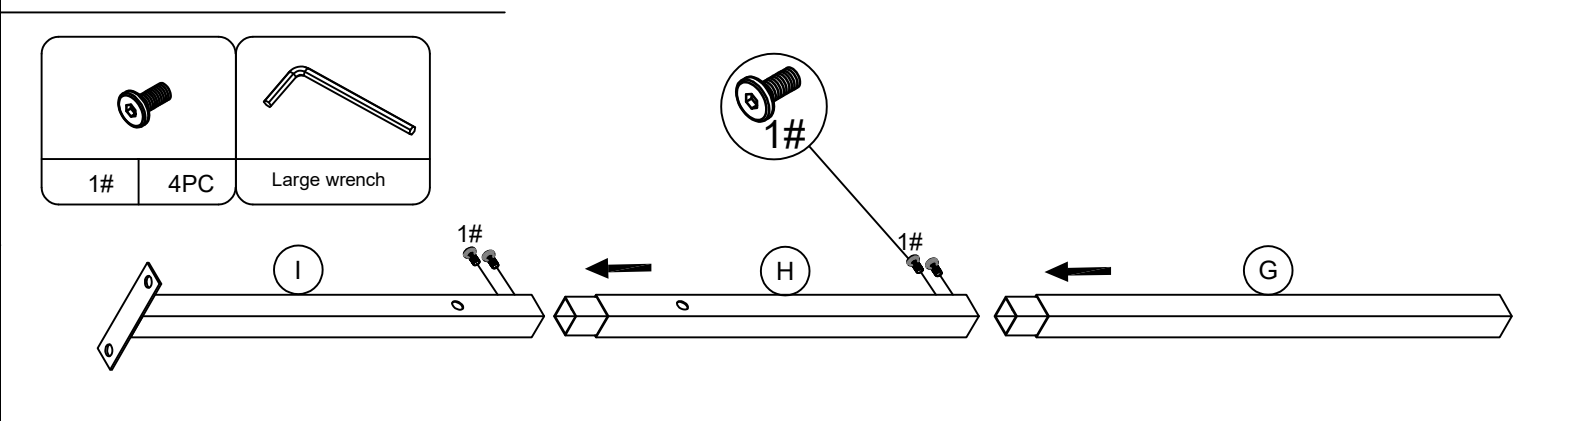


STEP 3

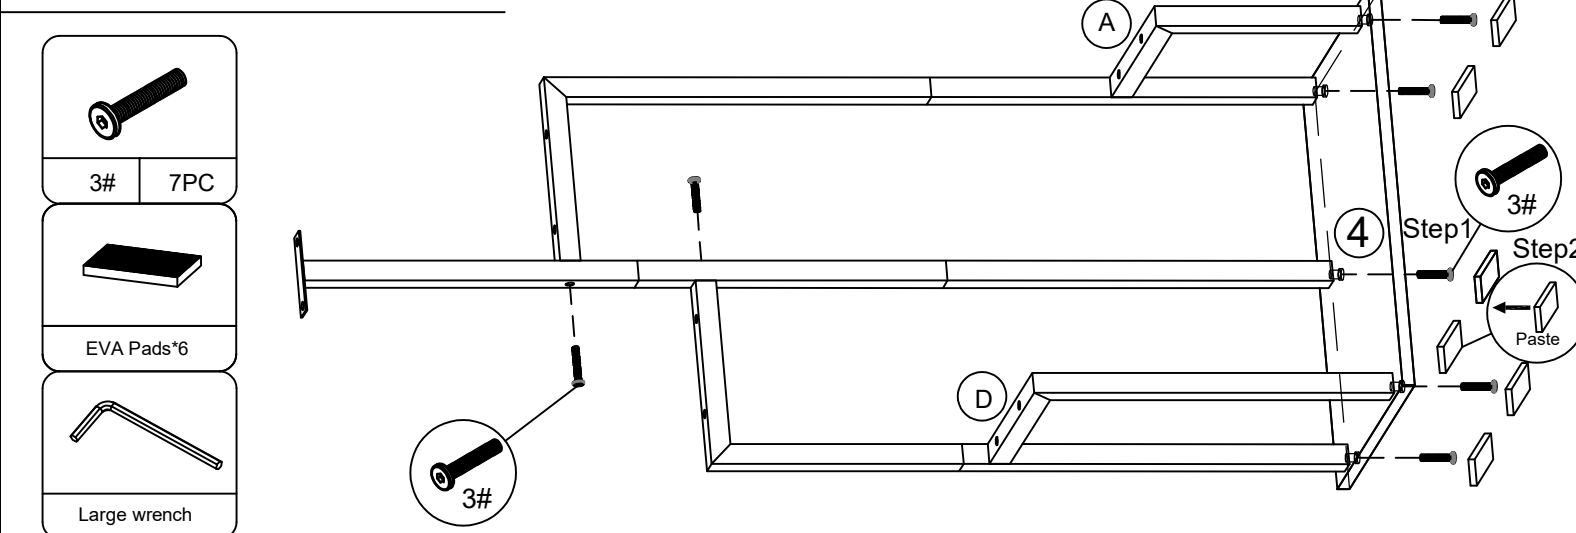


STEP 4

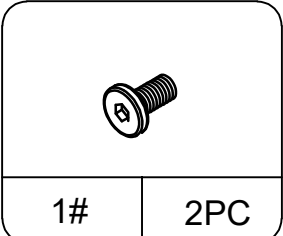

2PC

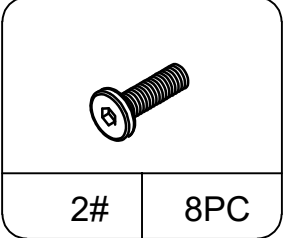

8PC

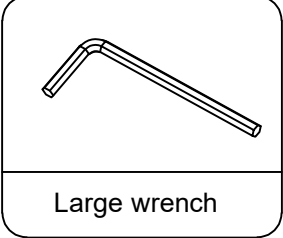

Large wrench

