

MANUAL INSTRUCTION

TRIPLE-DOOR METAL STORAGE SHED

G37104-03-HJ



Reach us at:



service@kmcglobe-us.com



(USA) +1 213-816-4788


We offer a diverse range of products to meet the needs of customers.




part 1: Precautions and preparations 3-5

part 2: Material list (please check before installation) 6-12

part 3: Cabinet installation 13-26

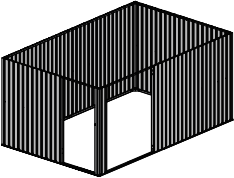

part 4: Roof installation and internal fixing 27-40

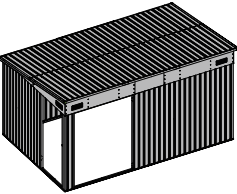

part 5: Door installation and adjustment41-58



part 6 59

BEFORE YOU START

Owner's Manual

Prior to installation, it is important that you contact your local government authority to determine if building approval is required. Study and understand this owner's manual. Important information and helpful tips will make your construction easier and more enjoyable.

Assembly instructions

Instructions are supplied in this manual and contain all appropriate information for your building model. Review all instructions before you begin. During assembly, follow the step sequence carefully for correct results Please be aware: **this unit takes two people about one full day to complete.**


Parts

Check to be sure that you have all the necessary parts for the building.

Separate contents of the carton by the part number while reviewing parts list.


Familiarize yourself with the hardware and fasteners for easier use during construction. These are packaged within the carton. Note that extra fasteners have been supplied for your convenience.

TOOLS MAY REQUIRED

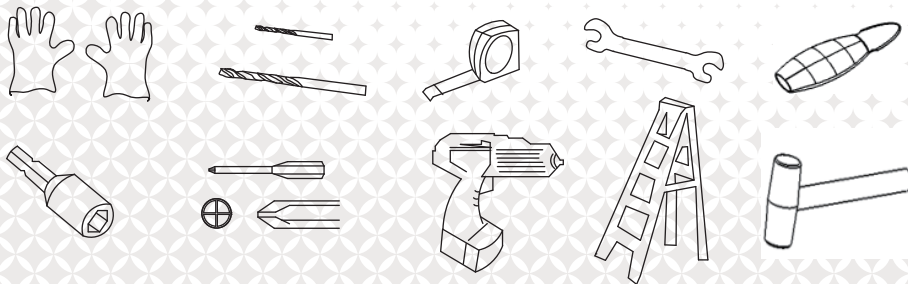

Use heavy duty gloves when handling steel sheets and flashing

PLAN AHEAD

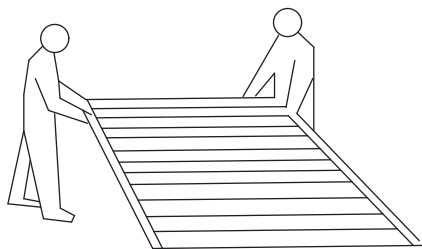

It requires two people a full day to complete installation

Watch the weather:

Please be sure the day you select for installation is dry and calm.

DO NOT attempt to assemble your shed in windy weather because of risk of damage to panels, or personal injury. Be careful of wet or muddy ground.

Teamwork:

Whenever possible, two or more people should work together to assemble the building. One person can position parts or panels while the other is able to handle the fasteners and the tools.

Site Selection

- Avoid overhanging trees as much as possible as leaves will make regular cleaning necessary and broken branches are a potential hazard.
- Small trees, bushes or fences nearby can be helpful, acting as a wind break

Site Preparation

The site must be prepared so that the base of the shed is level all round and checking with a spirit level is required.

The base can be constructed by treated timber or concrete, in order to stop the moisture getting into the shed. The shed is not designed to be built onto lawn directly. Also the ground will get muddy during rainy days.

If a concrete pad is made, it is important that this slopes towards the edges to prevent water ingress. Time must be allowed for any concrete or cement to dry before building the shed on top

Bases can also be constructed from bricks, blocks, or mounted on a concrete pad. The bricks or blocks should be cemented onto firm and level concrete footings and the greenhouse frame drilled and screwed to the base.

IMPORTANT NOTES

- Find someone to help you: it is much easier with someone to hold parts, pass tools etc. Also some steps require two people to lift structures together. This is not very heavy work so would suit most able-bodied people.
- Allow plenty of time: rushing often causes errors and the re-doing of incorrect assemblies. If you have never built a shed before, it can take most of a day to carefully complete the construction.
- Have the right tools to hand.
- Safety clothing as recommended in the 'Tools' section.
- Ideally lay out the parts and check that all are present before commencing construction. Lay on cloths or plastic sheets if there is any risk of scratching the parts.
- Tighten all nuts carefully, being sure not to miss any. Check the frame is square and using a spirit level to check that it is upright.

Part 2: Material list

As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

(please check before installation)

Hardware list

☒



☒



☐



☐



P7

Parts list

☒



☒



☐



☐



P8-P12

PARTS A



W5 X 19



W5-X X 1



E810-8M X 12



W3 X 2



W2-HR X 1



W5-K X 2



E810-8 X 4



W3-HX X 1



W2-HL X 1

PARTS B



W3-C X 4



E810-8M X 14



E810-1L X 2



E812-1R X 2



E810-2 X 2



K710-2R X 2



E810-3L X 2



E810-3R X 2



E812-4L X 1



E812-4R X 1



E810-5L X 1



E812-5M X 1



E812-5R X 1



K812-6L X 1




K812-6M X 1



K812-6R X 1

PARTS B

	E810-6L1 X 1		K812-9L X 2
	E810-6L2 X 1		K812-9M X 2
	E810-6R1 X 1		K812-9R X 2
	E810-6R2 X 1		ULA X 1
	E810-7L X 1		URA X 1
	E812-7M X 1		DX1 X 2
	E812-7R X 1		DLA1 X 1
	E810-9 X 4		DRA1 X 1

PARTS B



DD X 2



UA X 2



DA X 2



DLA X 1



DRA X 1



DDA X 4



DBA X 4




C18 X 6



E810-11 X 2



GF X 4




DC X 2



GL X 1



GC X 4



T-F X 4



C2 X 4



ST4.2x10mm

F1 X 492

PARTS B



M4x10mm

F2 X 113



ST4x10mm

F3 X 48




φ10xφ4x1


V2 X 103




SL X 72




DH X 6



DCS X 1




M20 X 1



ST X 2

PARTS C



K810-DL X 1



K810-DR X 1



K810-DM X 12



K812-DL1 X 1




K812-DR1 X 1





DM-850 X 4

Part 3 : Wall

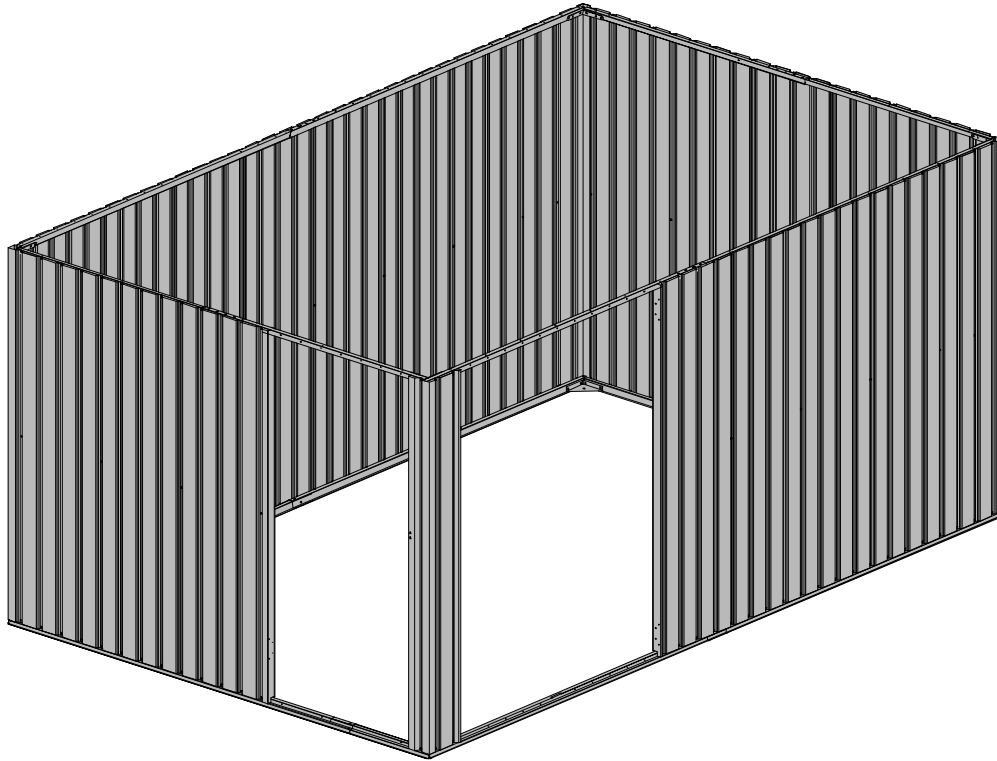




1

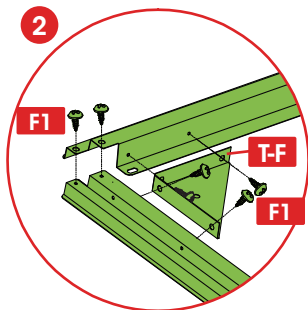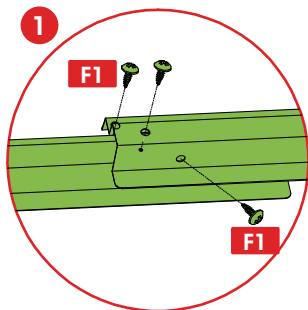

Note: The larger hole is always covered over the small hole.

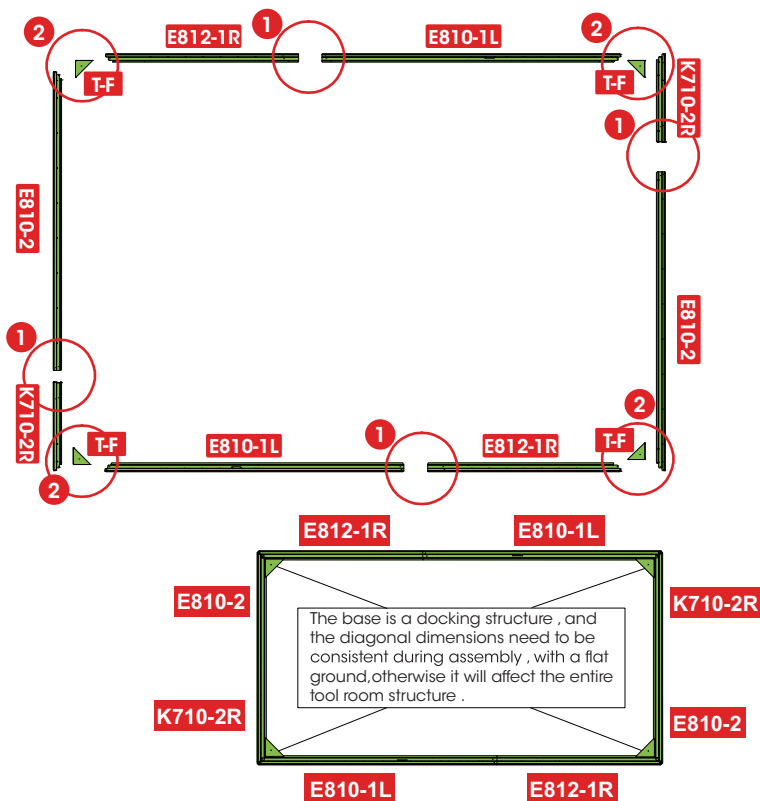






2



W3-C X 4



F1 X 4

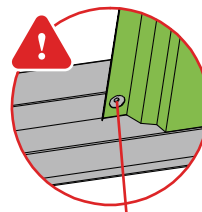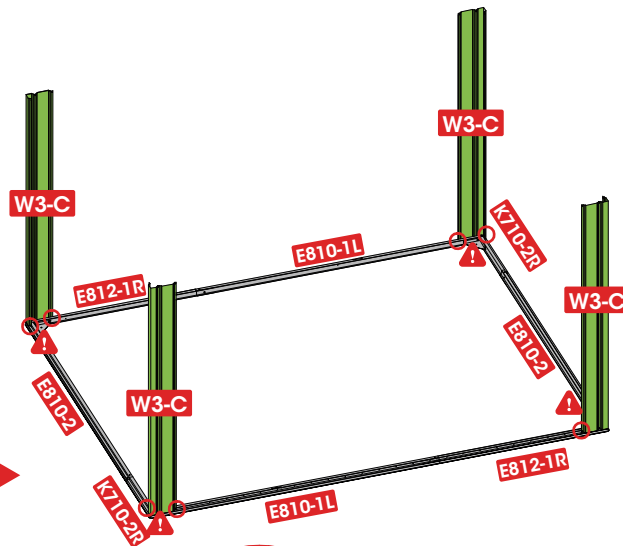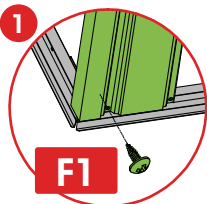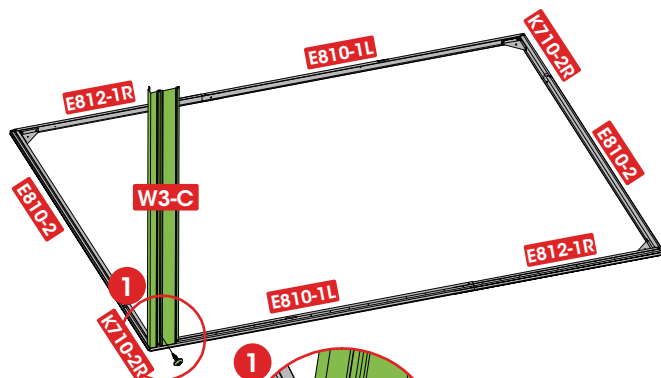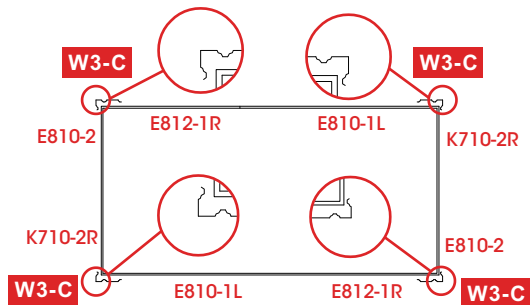

! Do not install screws here.

3



E812-4L X 1




E812-4R X 1



C2 X 2




F1 X 8

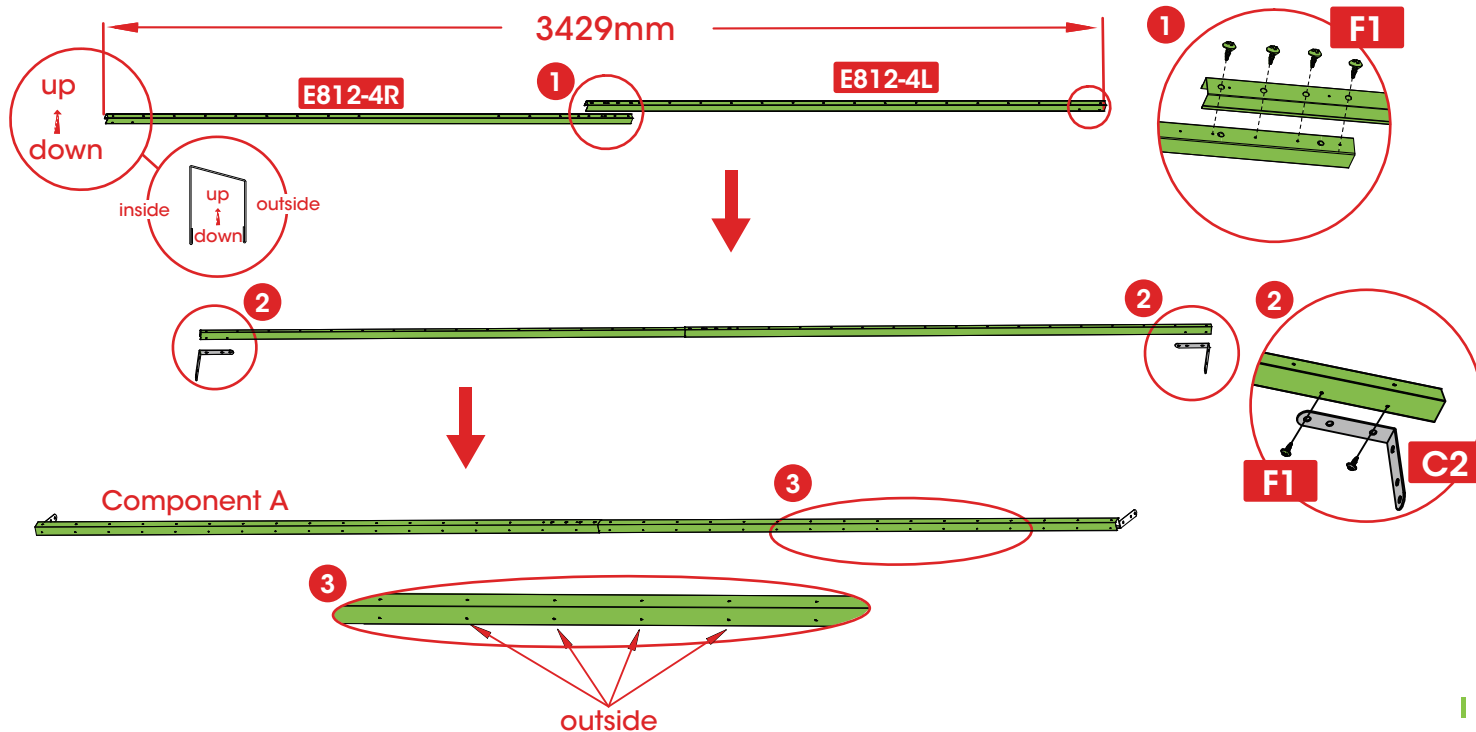



4



F1 X 2

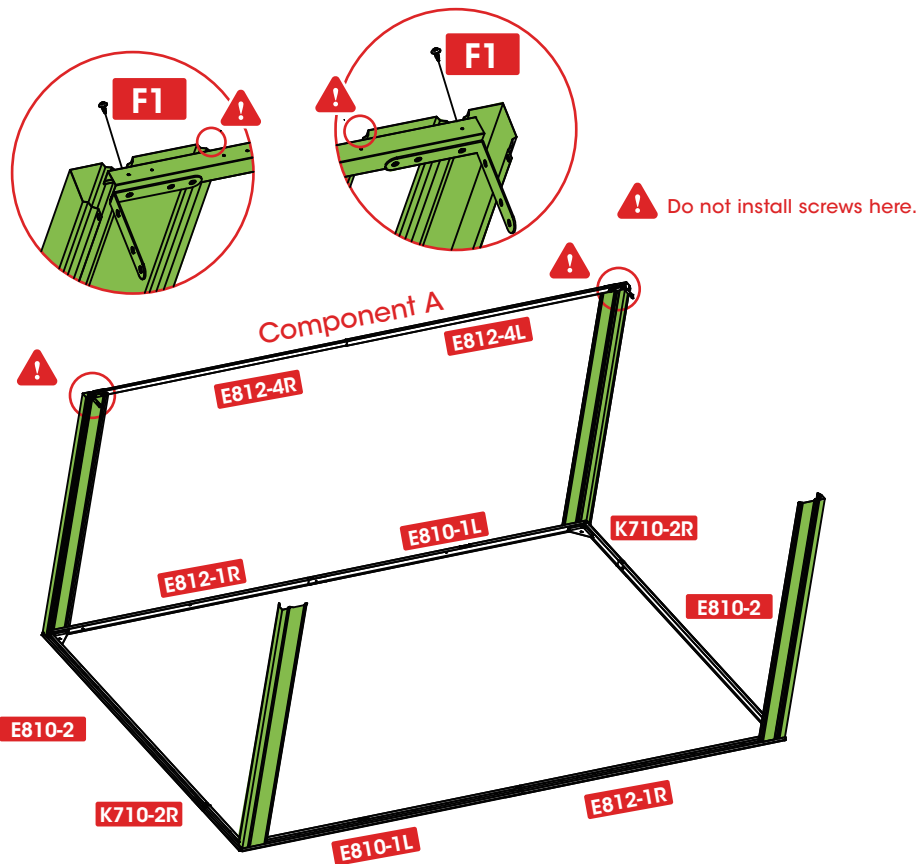

5


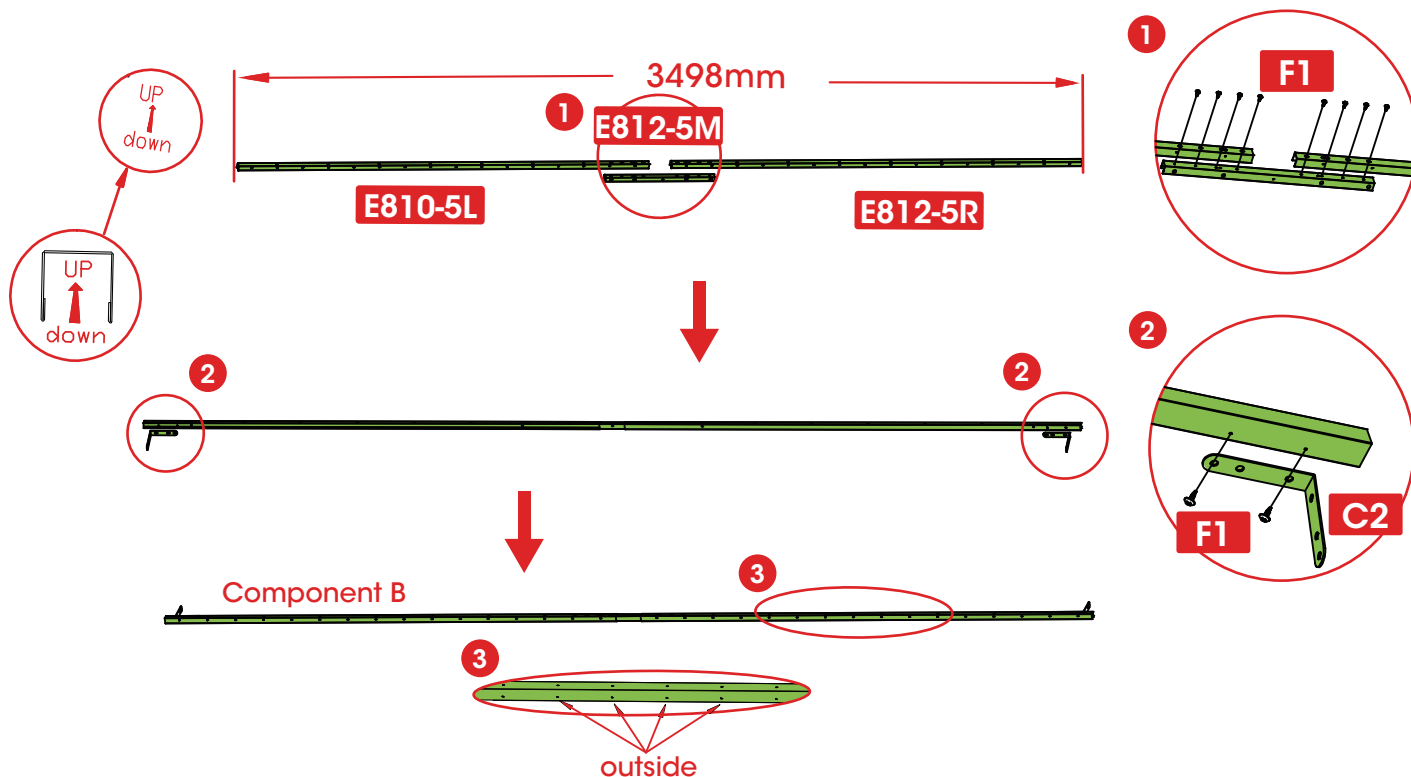
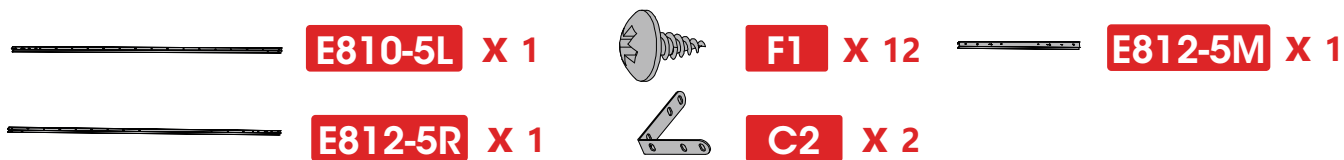


6



F1 X 2

! Do not install screws here.

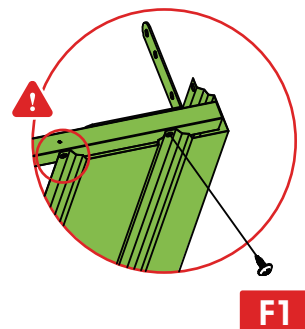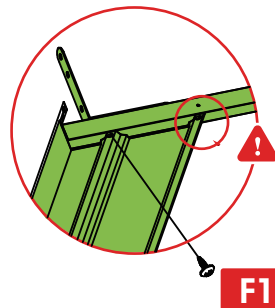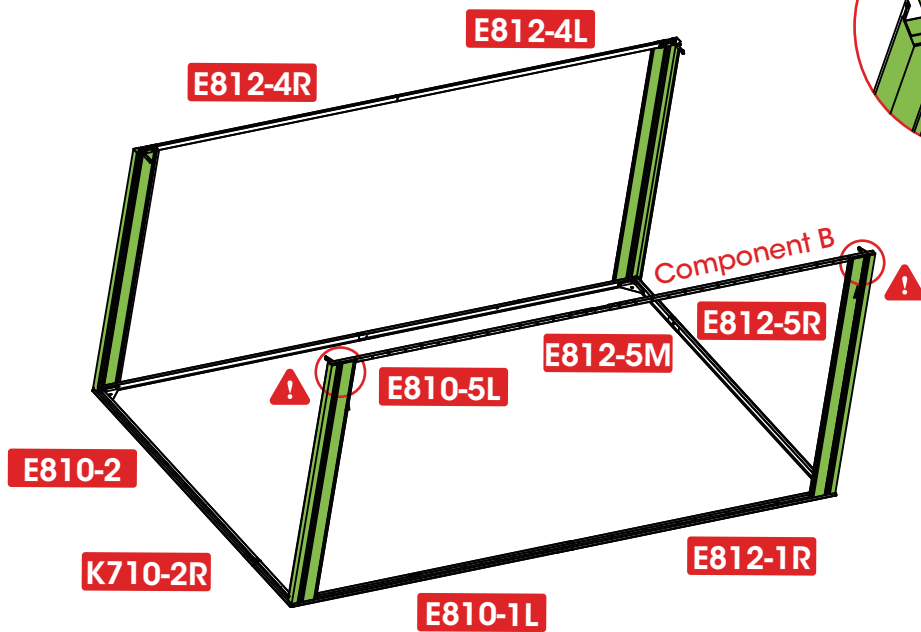

7



E810-3L X 2




E810-3R X 2



F1 X 8



x2

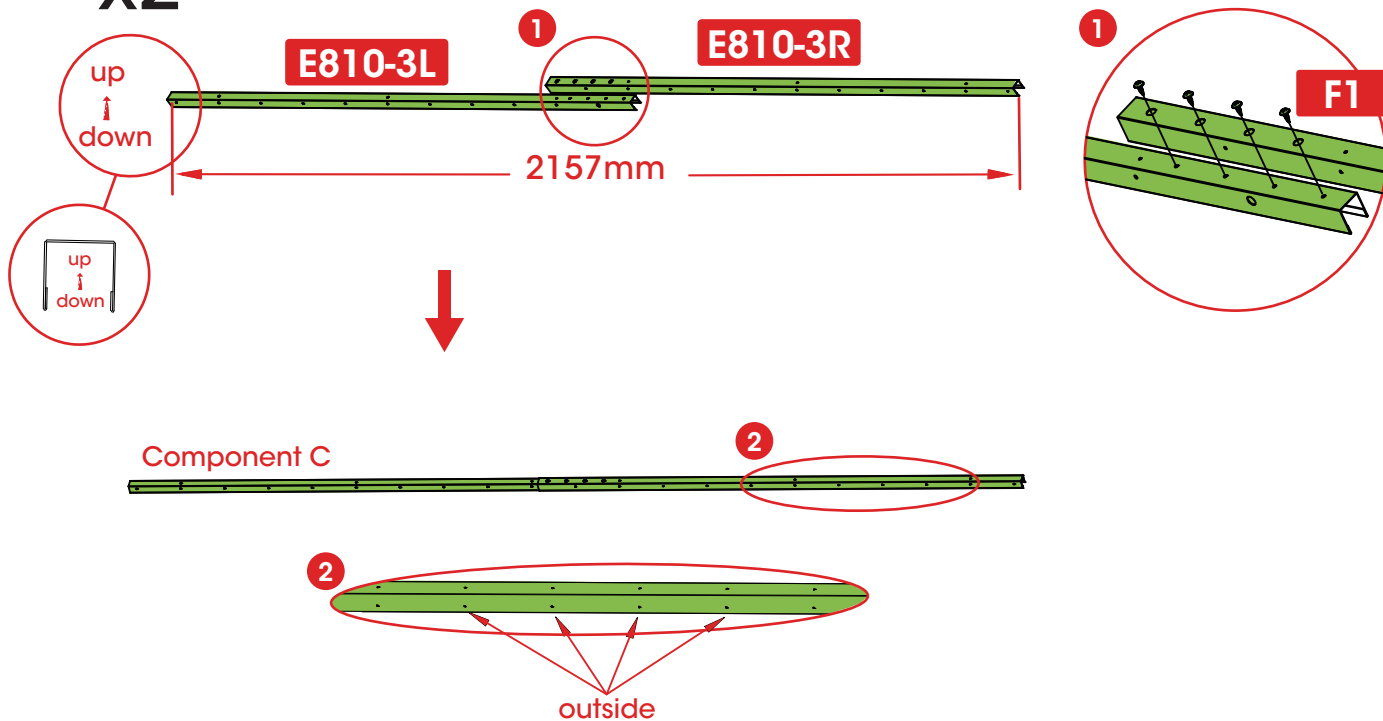


8



F1 X 8

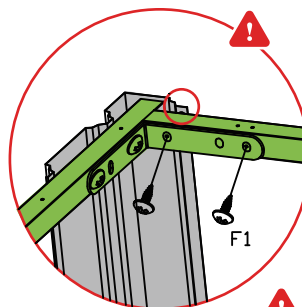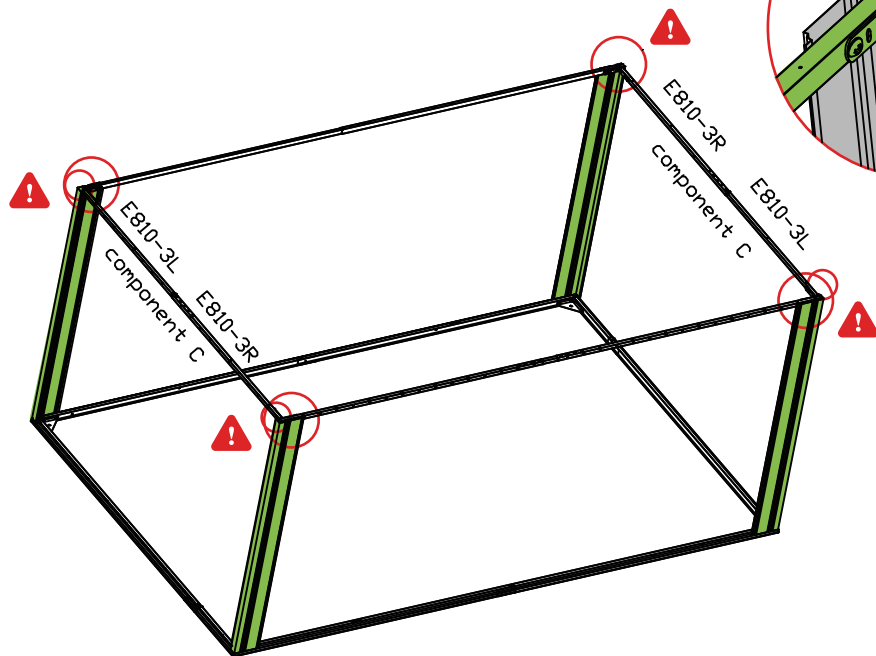

! Do not install screws here.

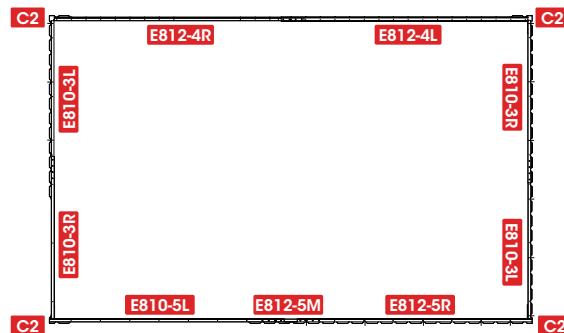


9









W5 X 8



F1 X 66









F2 X 9

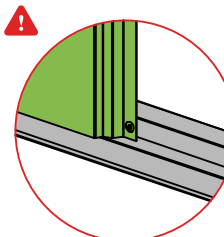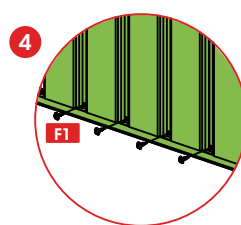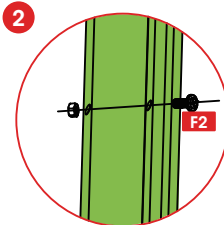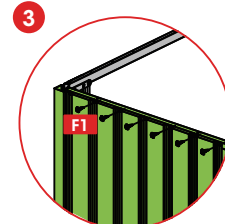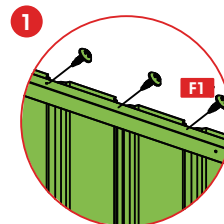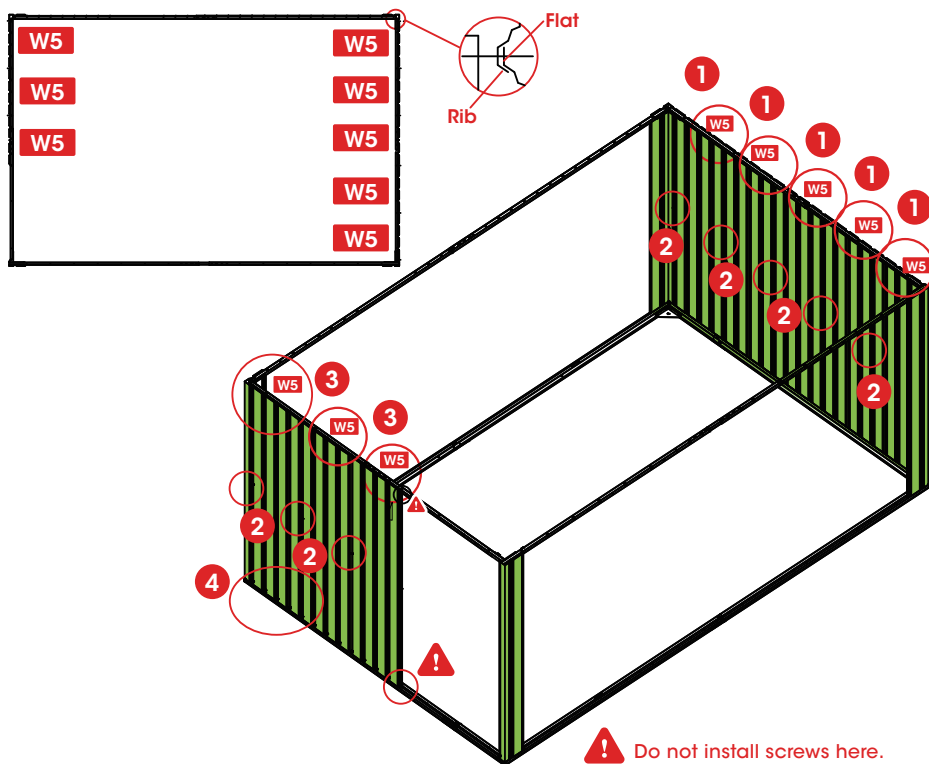





! Do not install screws here.

10

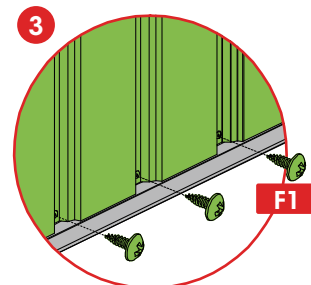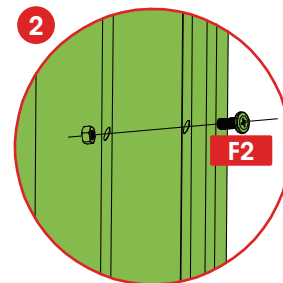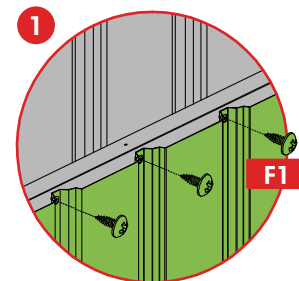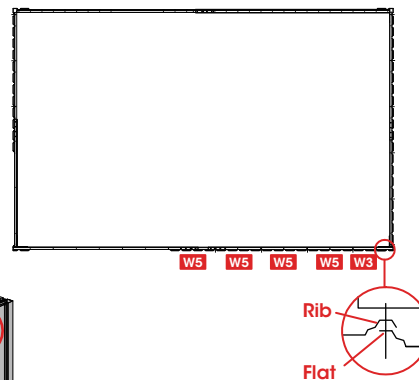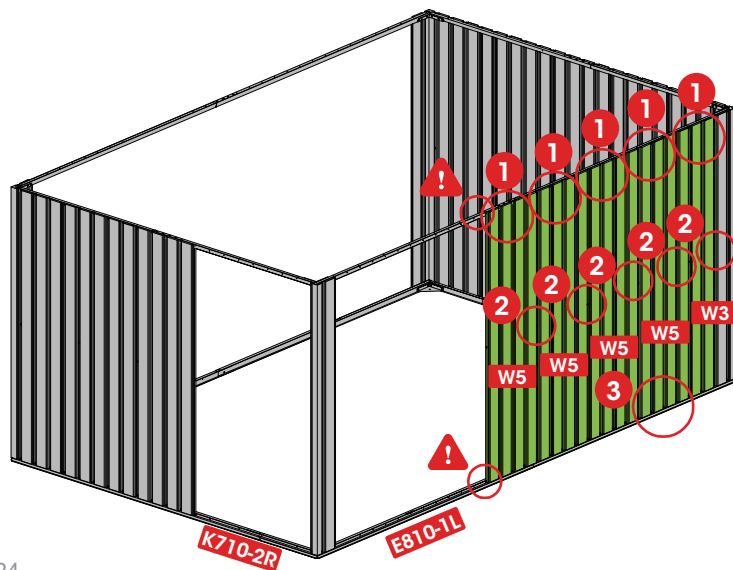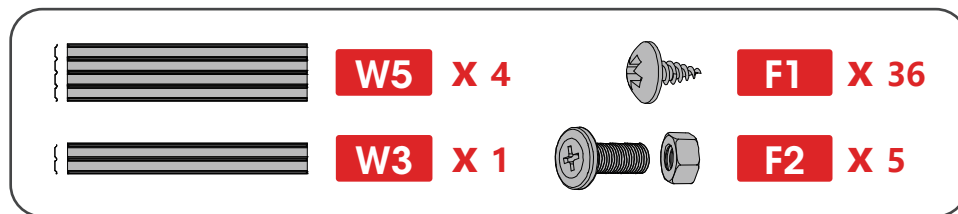

 Do not install screws here.

11

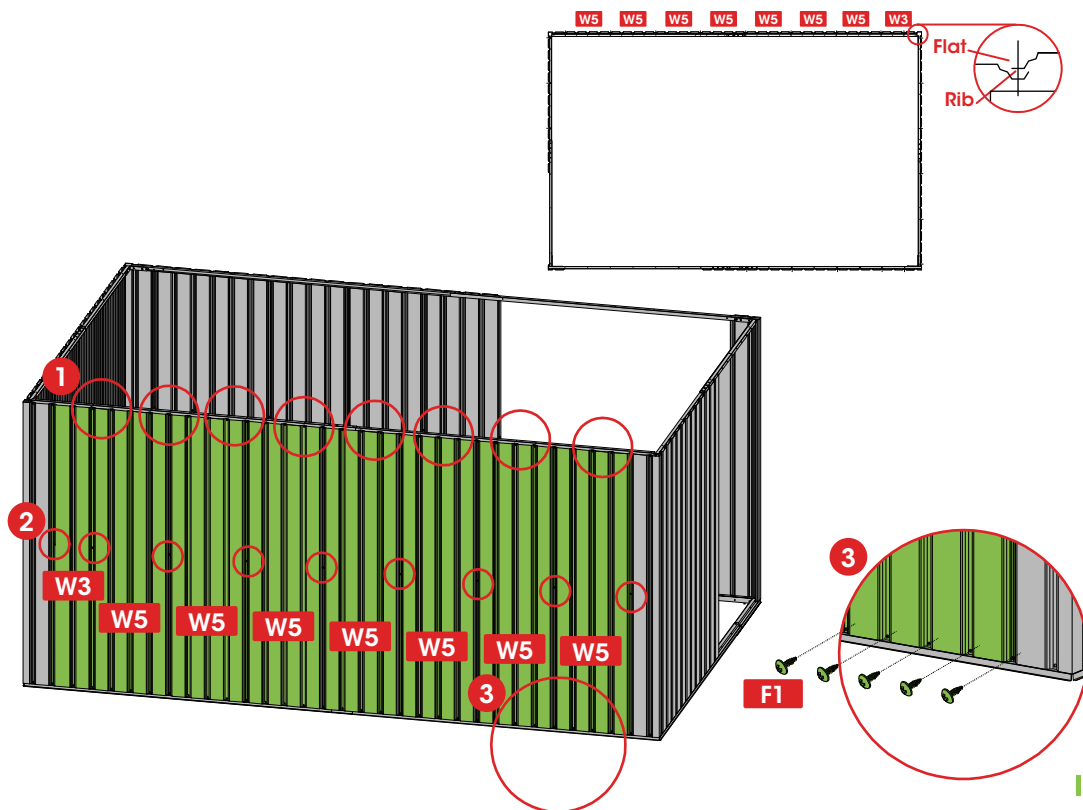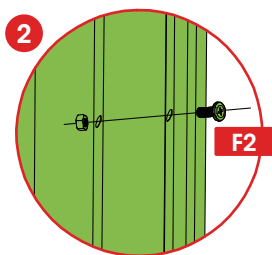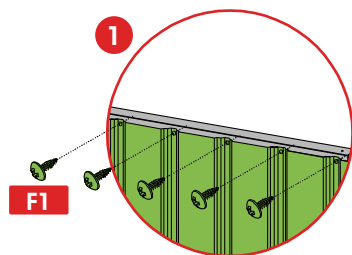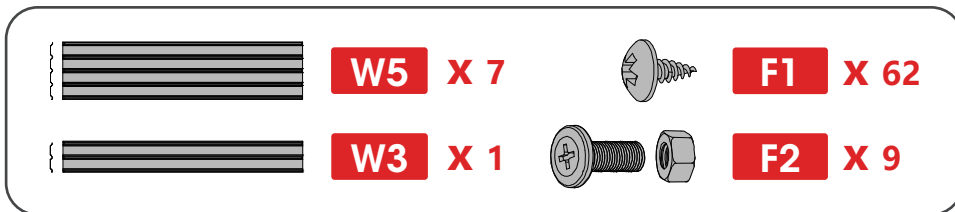





UA X 1







F1 X 4






F2 X 1

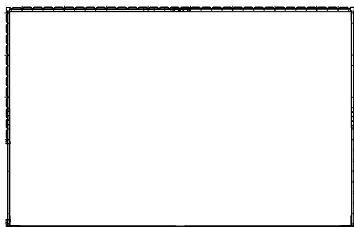

UA

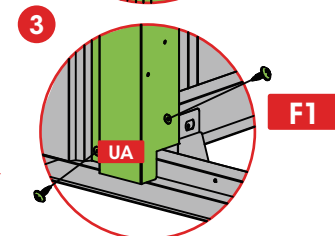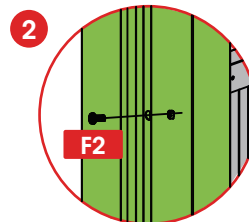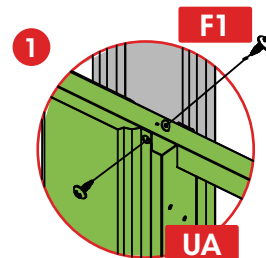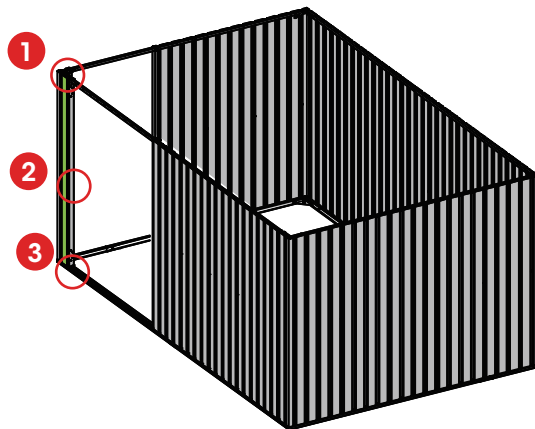

4 F1 screw fixation.

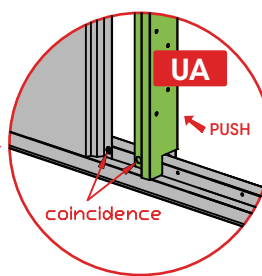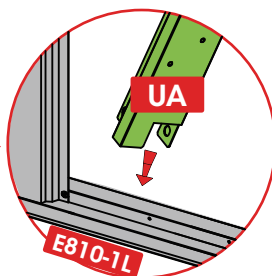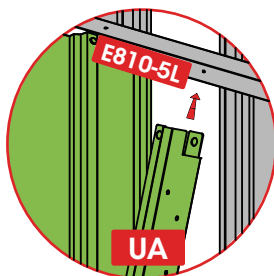

1 UA notch is inserted into E810-5L.

2 UA notch is inserted into E810-1L.

3 Push UA to coincide with the screw holes on the board.


13




UA X 1







F1 X 4






F2 X 1

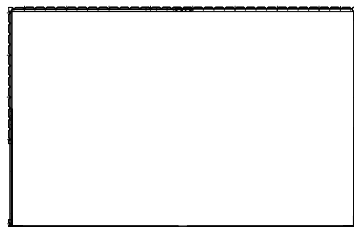

UA

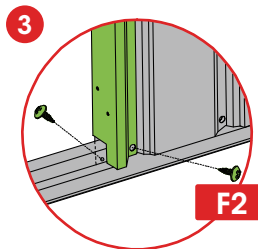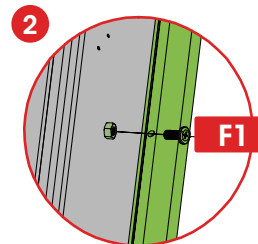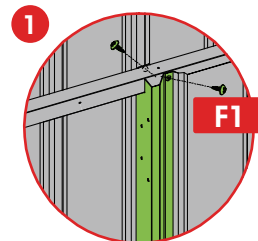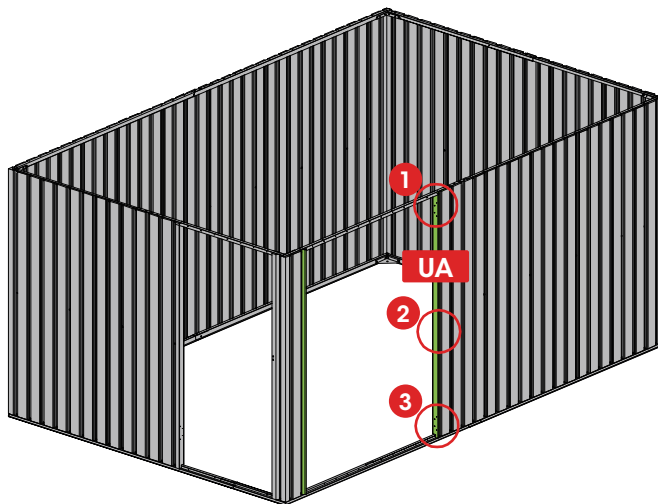

4 F1 screw fixation.

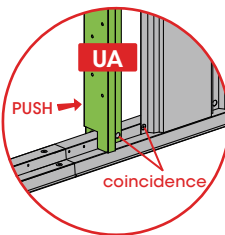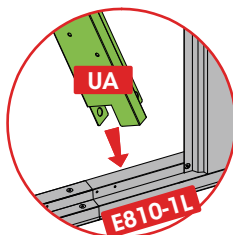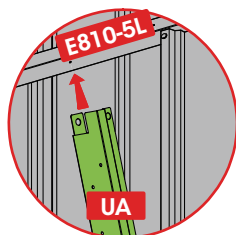

1 UA notch is inserted into E810-5L.

2 UA notch is inserted into E810-1L.

3 Push UA to coincide with the screw holes on the board.


14



ULA X 1








F1 X 4






F2 X 1

ULA

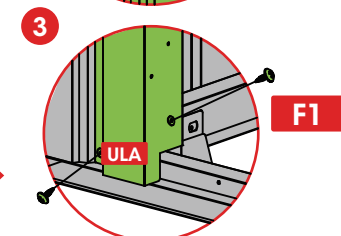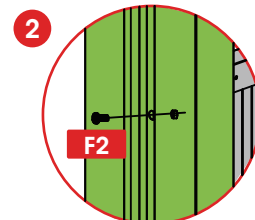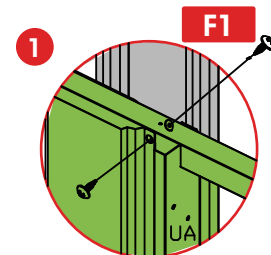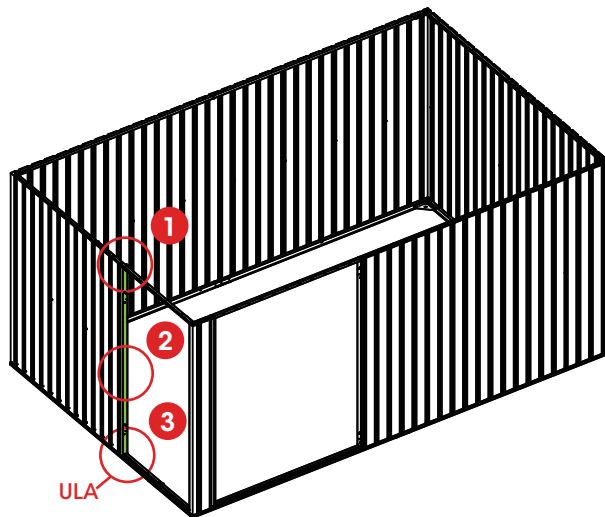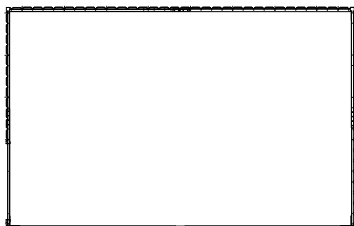

4 F1 screw fixation.

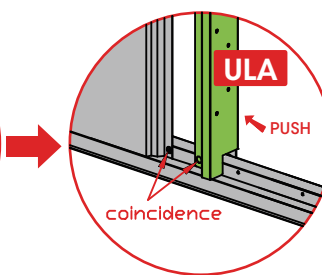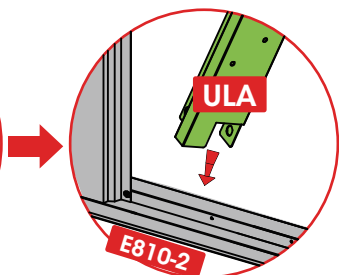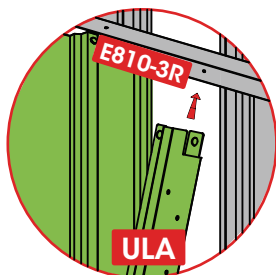


15




URA X 1







F1 X 4






F2 X 1

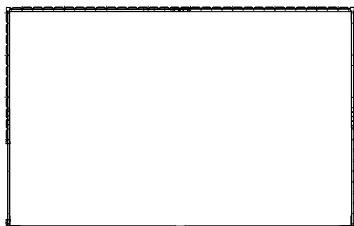

URA

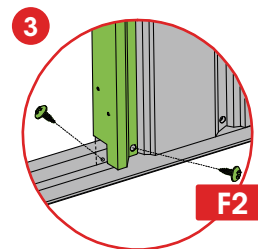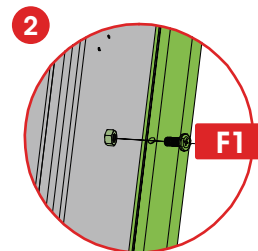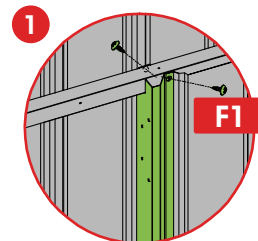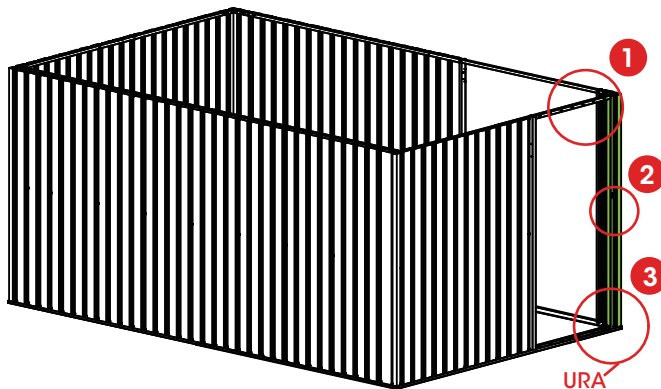



4 F1 screw fixation.

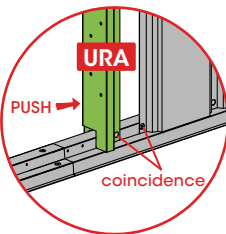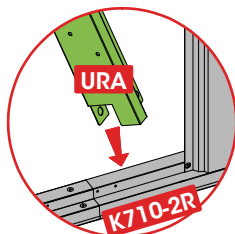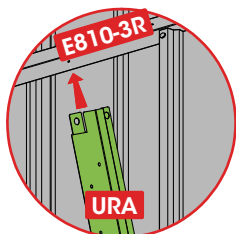

- 1** URA notch is inserted into E810-5L.
- 2** URA notch is inserted into E810-1L.
- 3** Push URA to coincide with the screw holes on the board.

Part 4: Roof

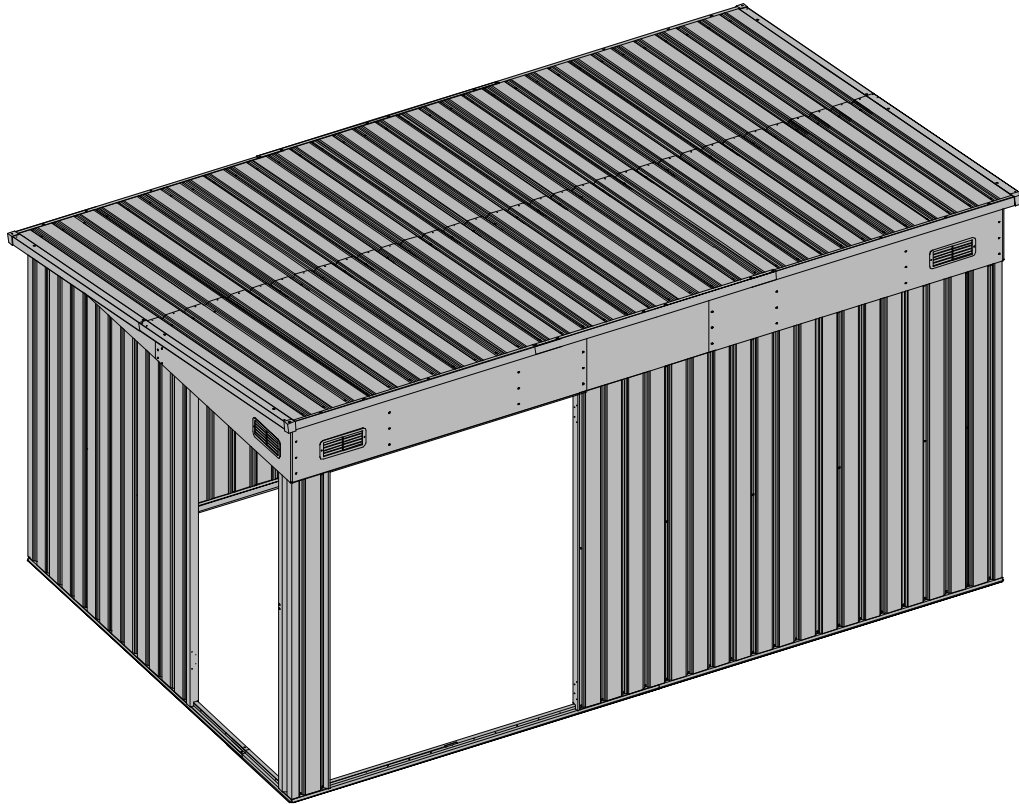

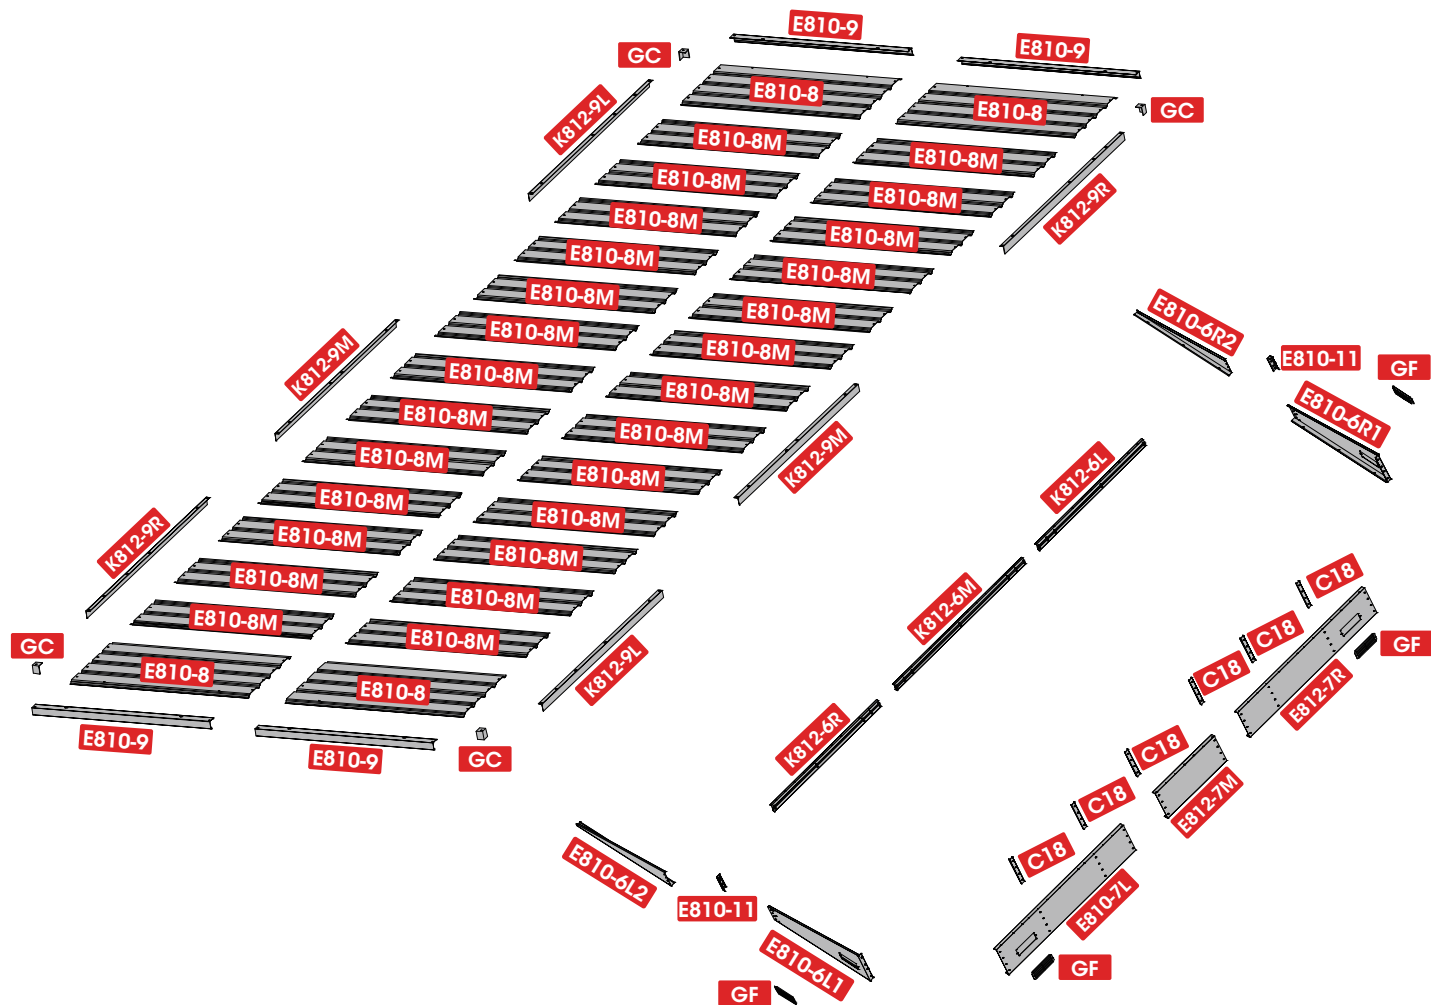

16



E810-6L1 X 1







E810-6R1 X 1



GF X 2



F2 X 4

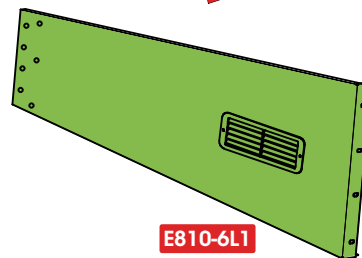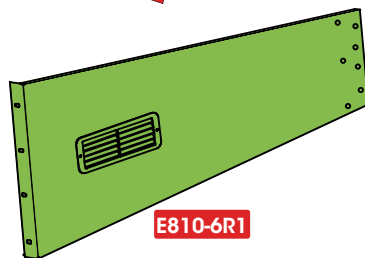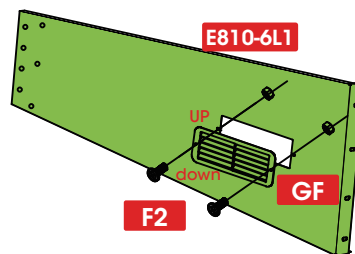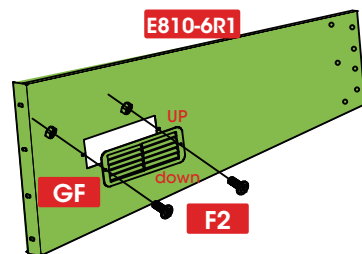

Pay attention to the installation direction of GF and the inclined surface of the louver.

17





E810-6L2 X 1



E810-6R2 X 1



F2 X 8


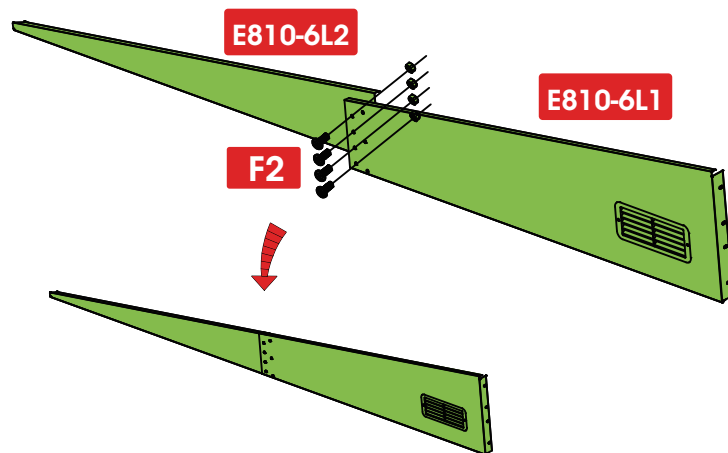
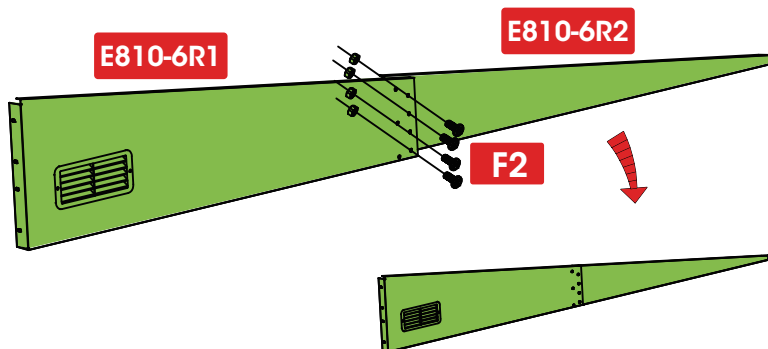





E810-11 X 2



F1 X 18

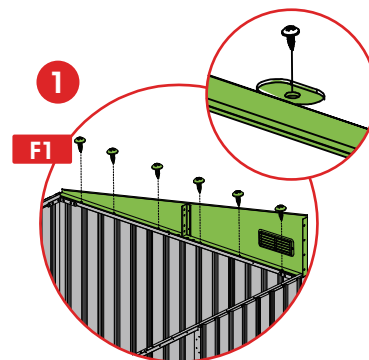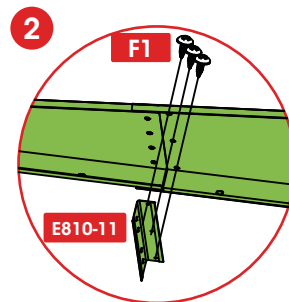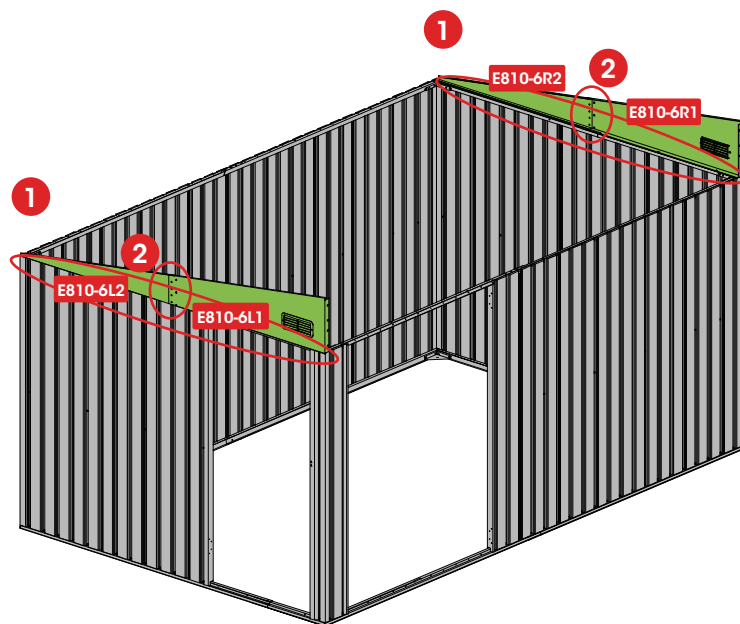


Attention: Assemble the ventilation board screws in the order shown in the diagram, Install the middle hole first to avoid misalignment.



E810-7L X 1



E812-7M X 1




E812-7R X 1



C18 X 6




GF X 2





F2 X 28

Small hole faces upwards

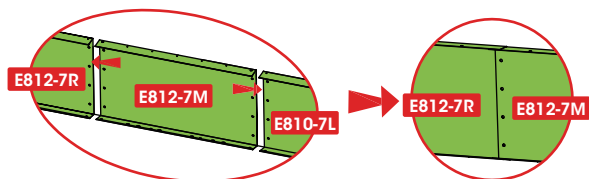

E812-7M has a smaller width and is inserted into E810-7L and E812-7R. After aligning the holes, it is connected with F2 screws.

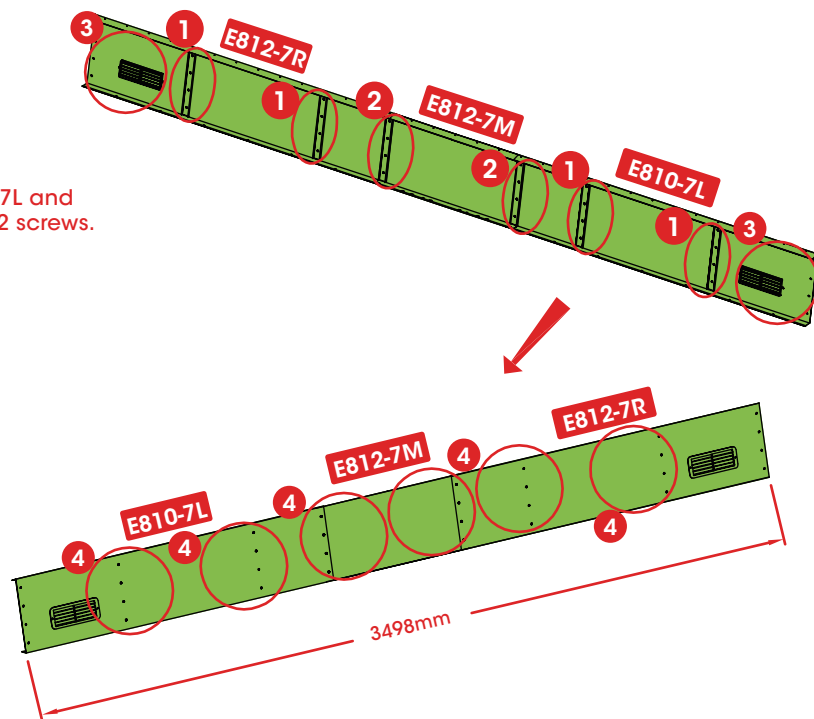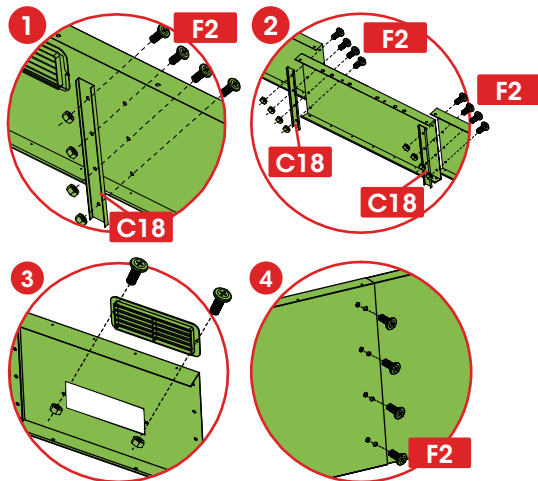


20



F1





X 16




F2

X 8


small hole faces upwards.

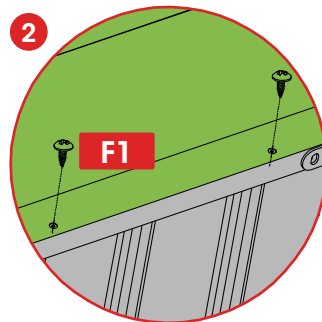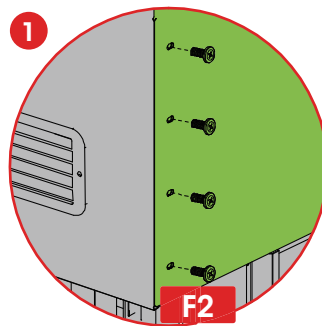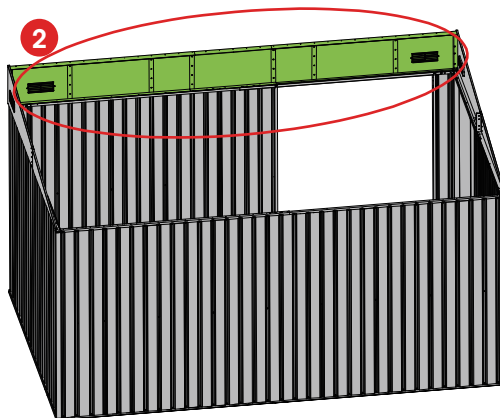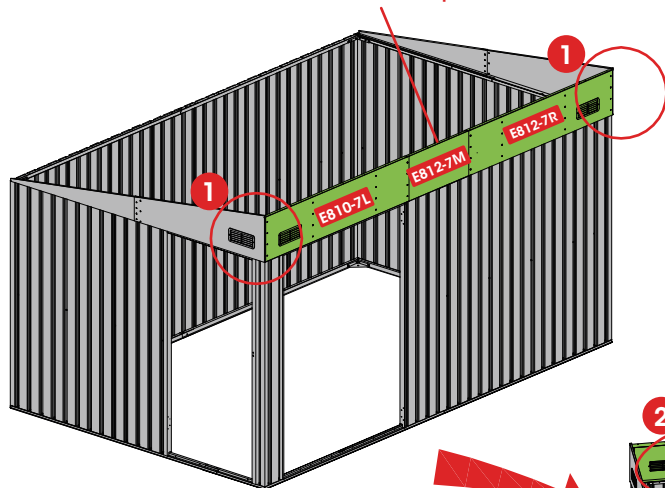

21




K812-6L X 1




K812-6R X 1



K812-6M X 1




F2 X 12

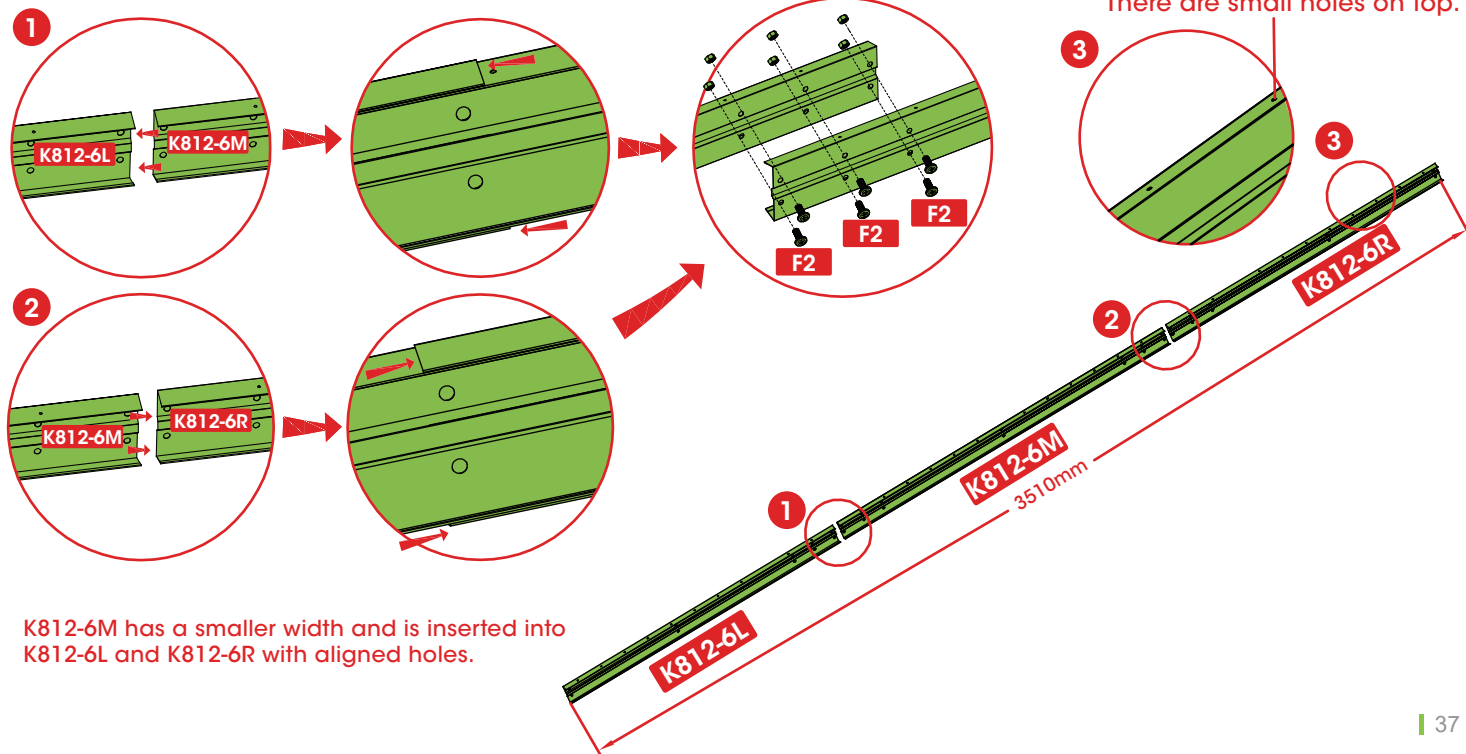


K812-6M has a smaller width and is inserted into K812-6L and K812-6R with aligned holes.


22



F2 X 4

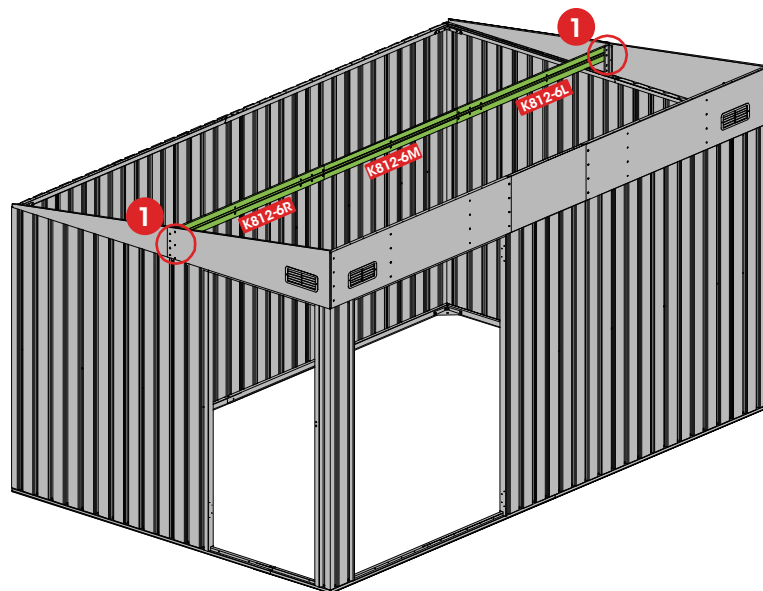

Pay attention to the installation direction.

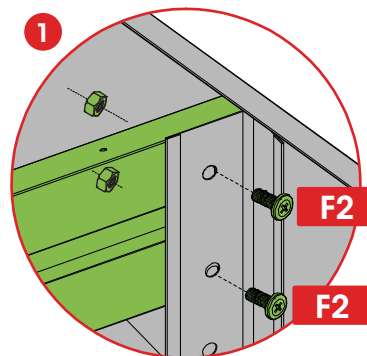




23




E810-8 X 2

This is a flat edge and E810-9 Install, otherwise there may be interference.

E810-8

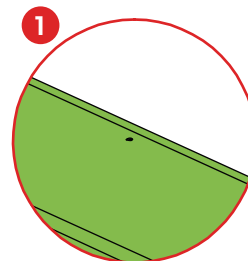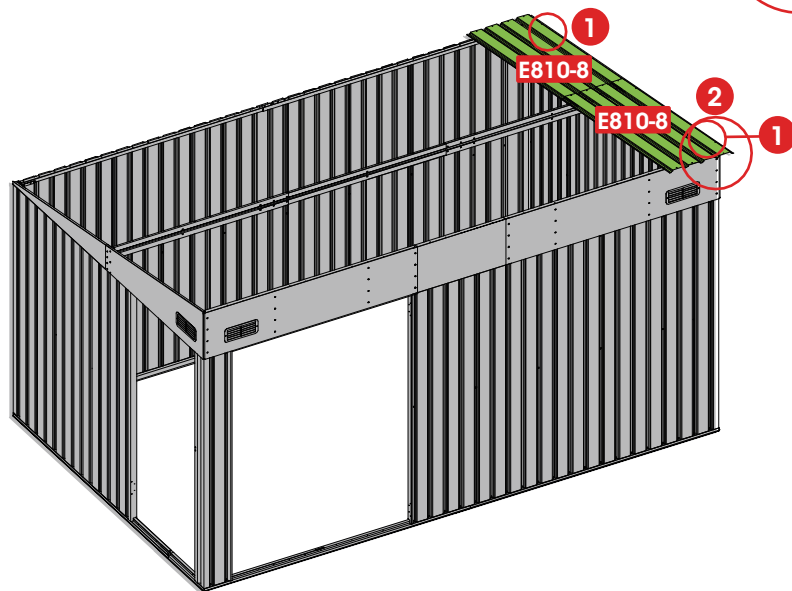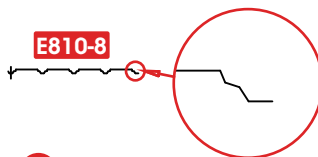

Install the flat edge with a small hole on the outside, and the small hole is the E810-9 accessory assembly hole.

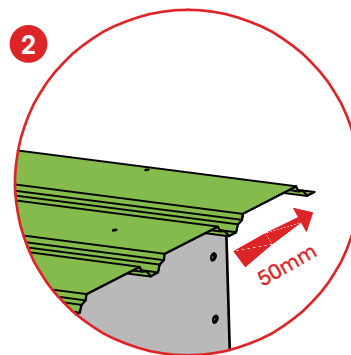

Install according to the diagram: The edge extends outward by about 50mm.

24






F1

X 9



V2

X 9

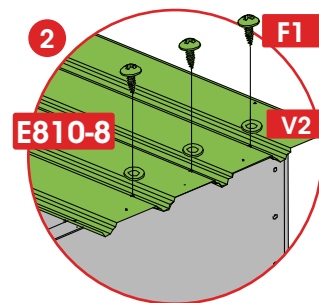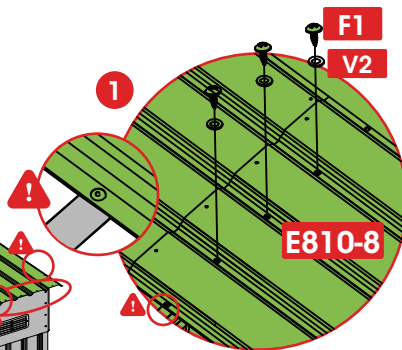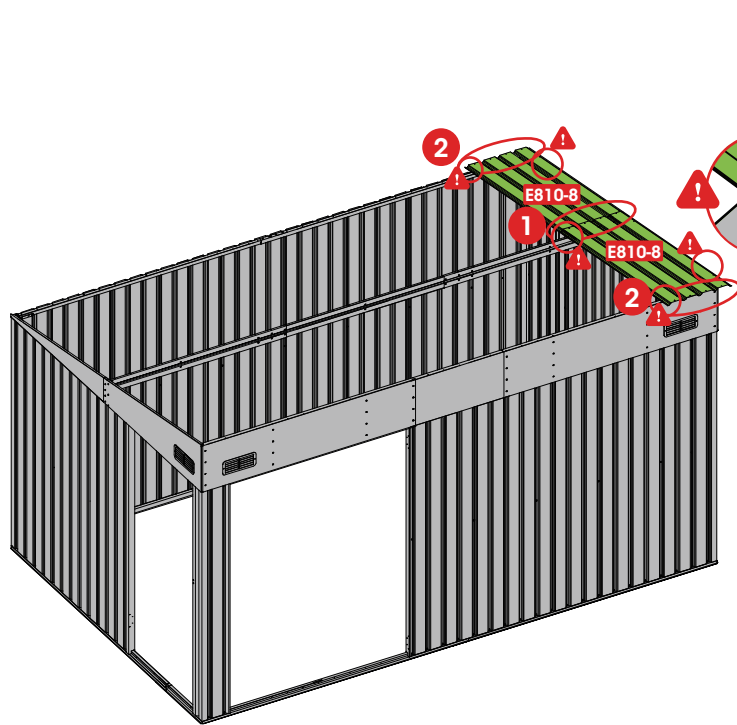

! Do not install screws here.

25



E810-8 X 2




F1 X 90




E810-8M X 26





V2 X 90

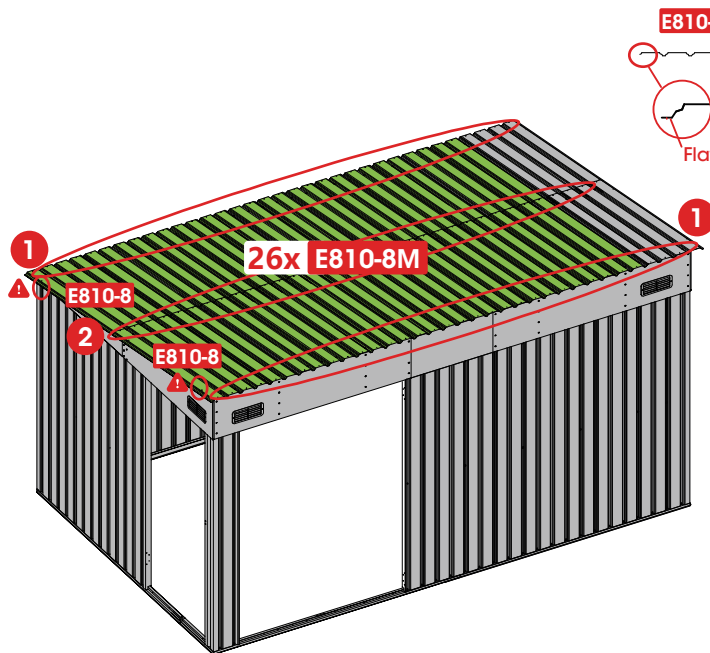

! Do not install screws here.

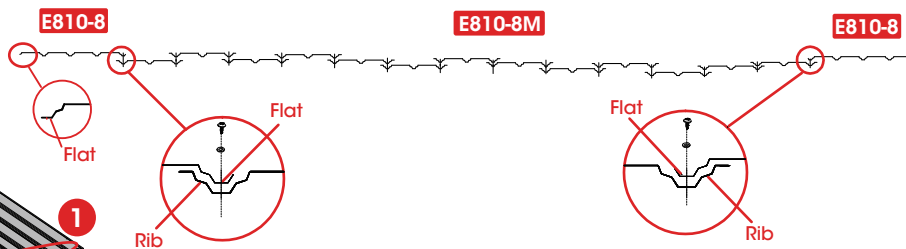

Attention The overlapping method of the top cover (as shown in the figure) should be used to prevent rainwater from leaking through the overlapping area.

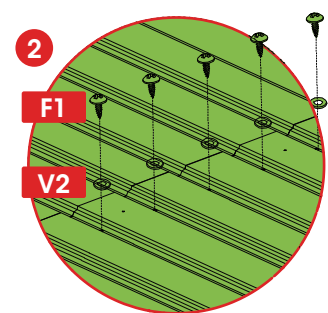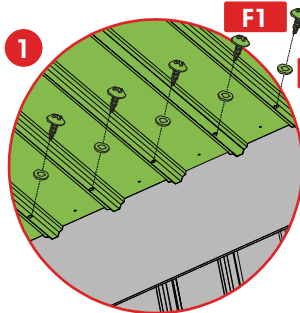



26






E810-9 X 4



F1 X 8

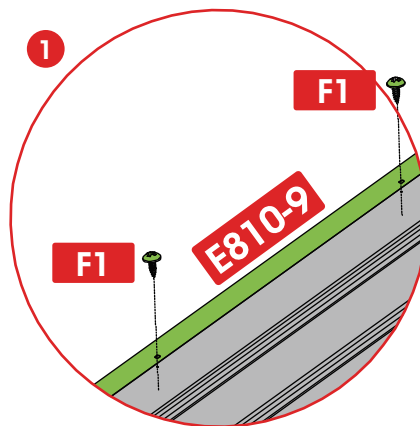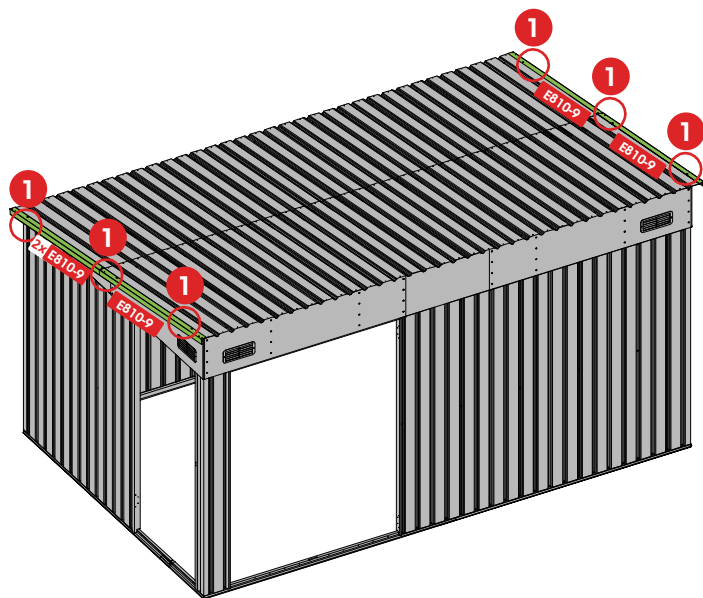

27

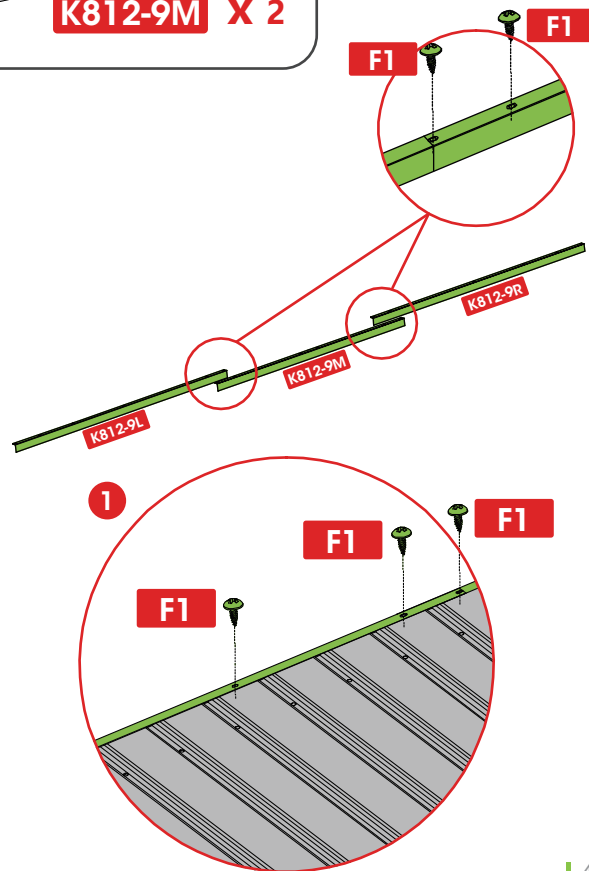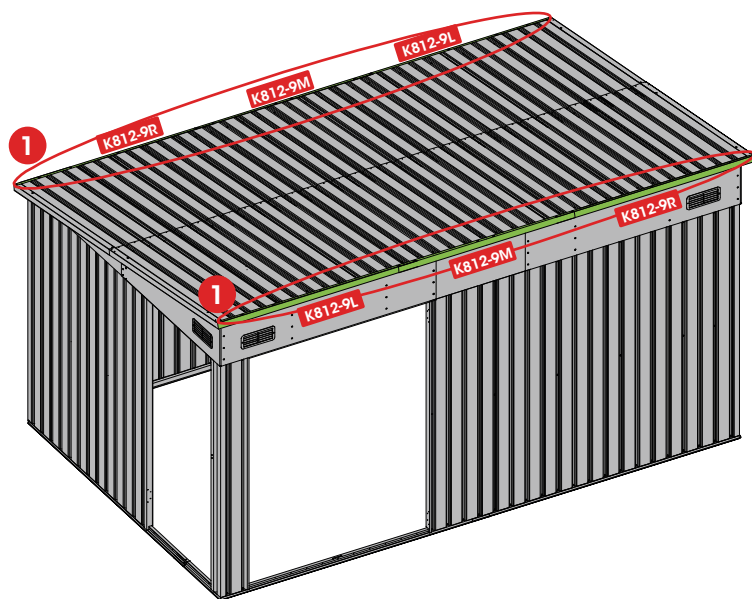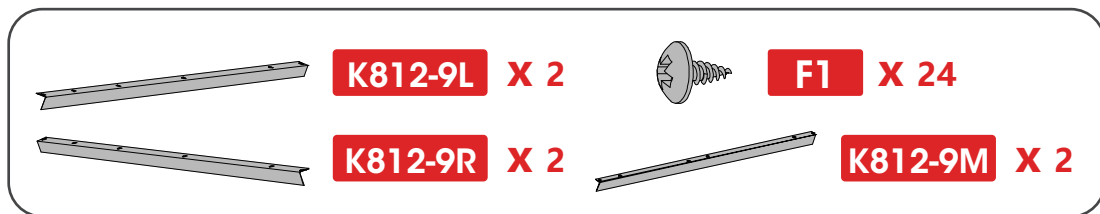

28






GC

X 4





F1

X 4

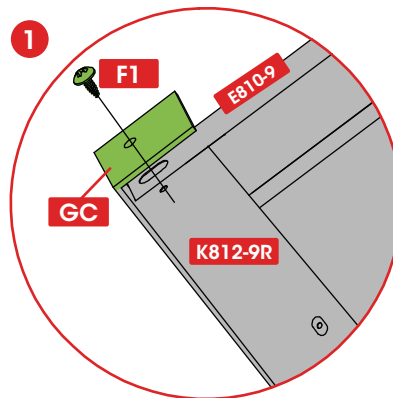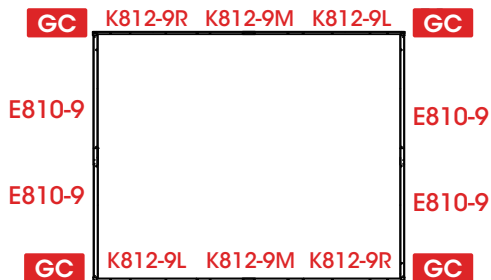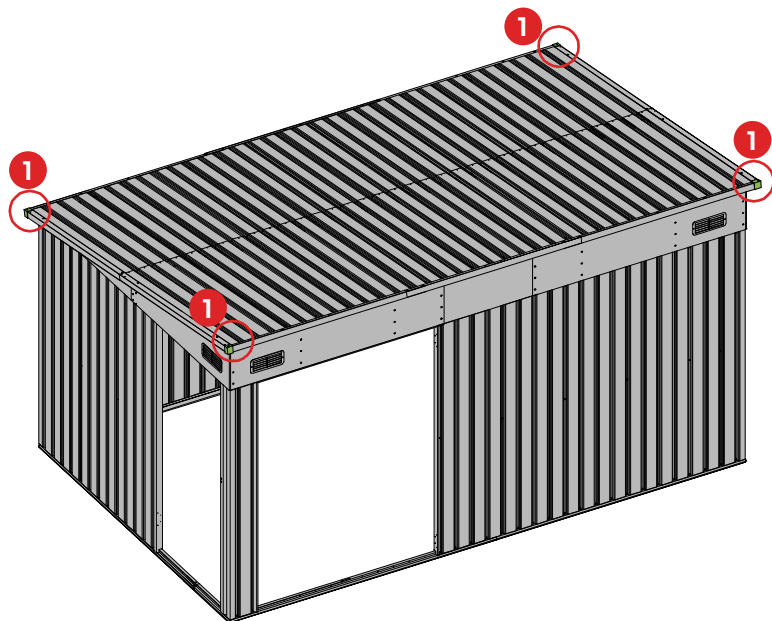


Part 5: Door

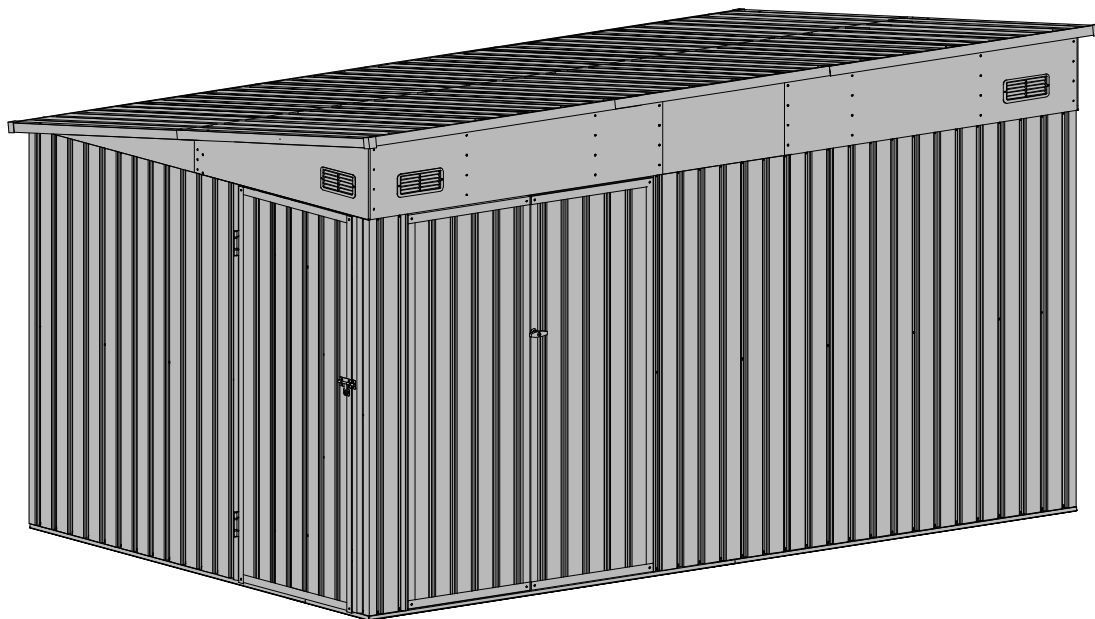


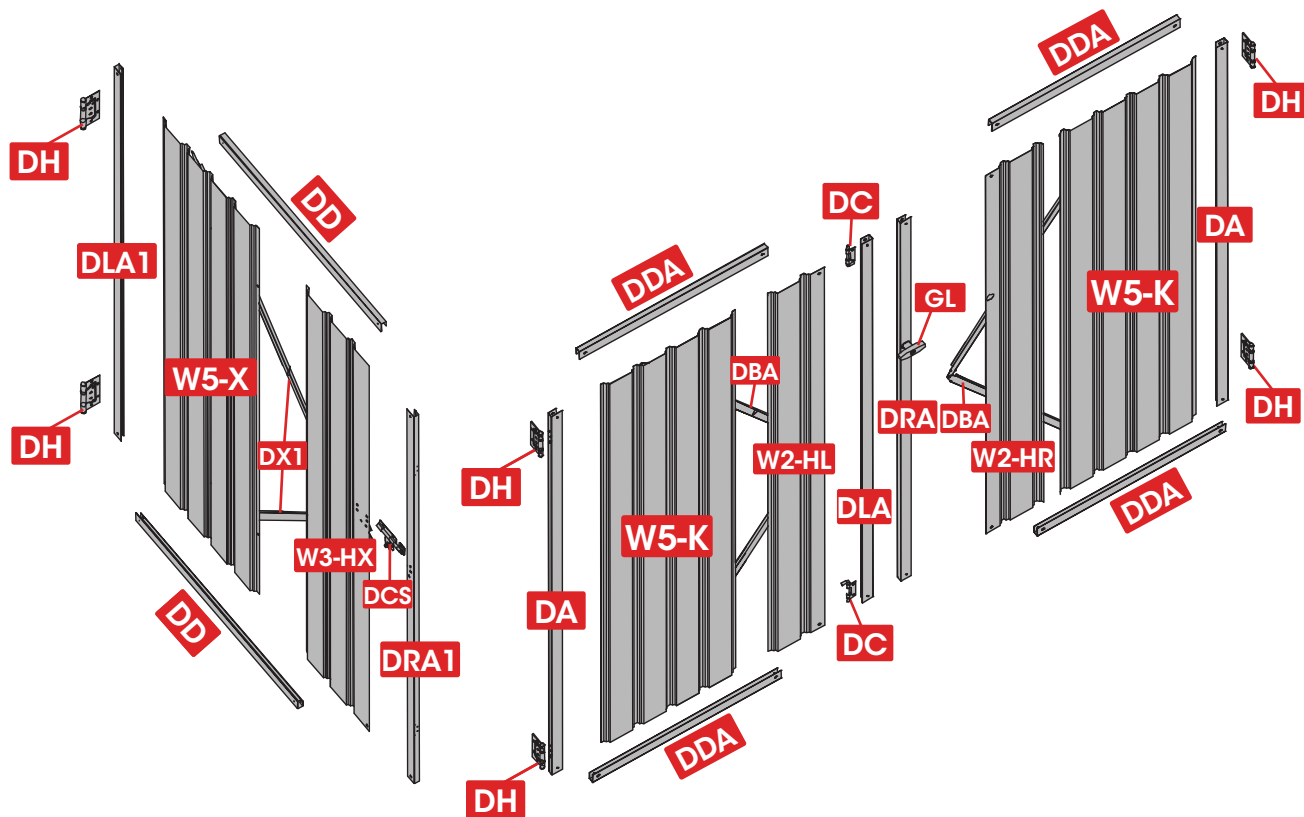

29

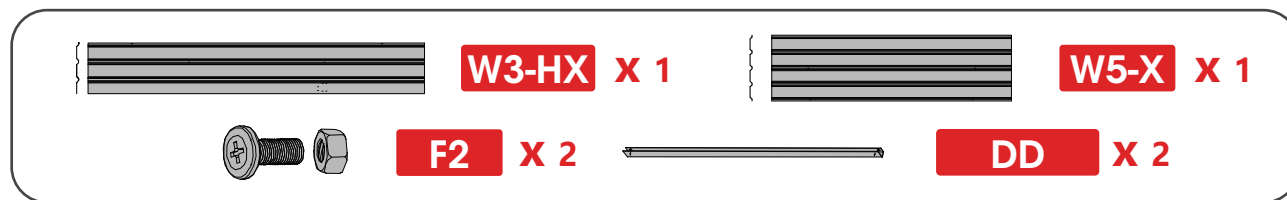


Coated surface

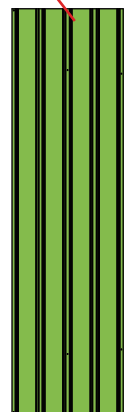






W5-X



W3-HX

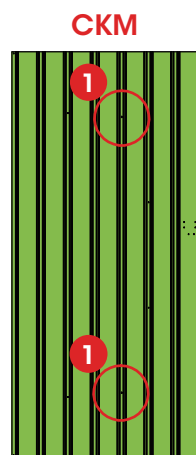


W5-X W3-HX

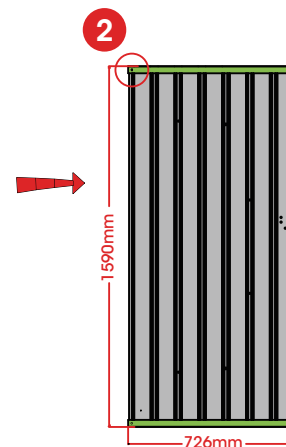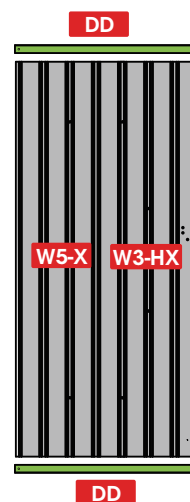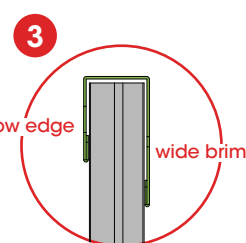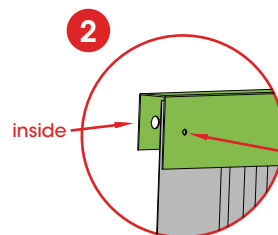
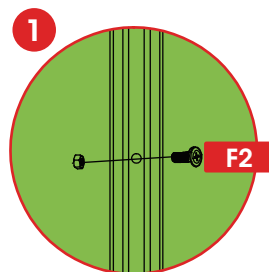


Front color-coated surface

The door panel W3-HX and W5-X snap into the DD slot.

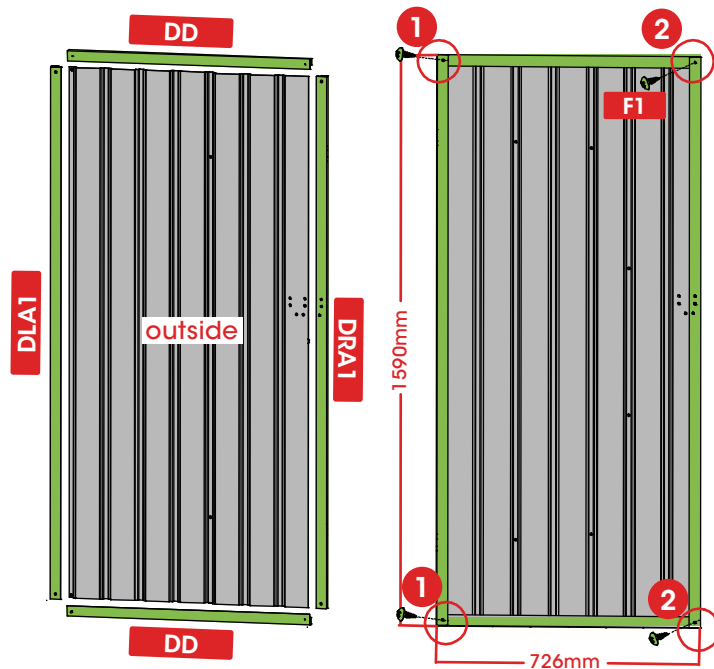

Big hole on the outside, small hole on the inside, connected with an F1 screw.

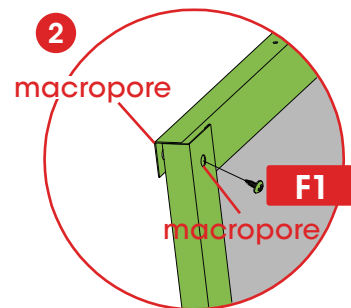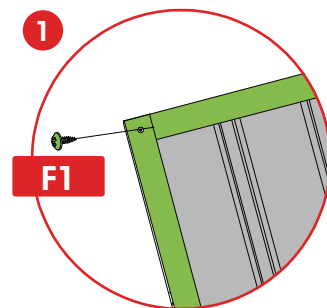






DX1 X 2




F1 X 5





F2 X 4

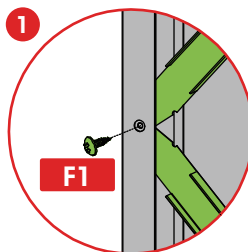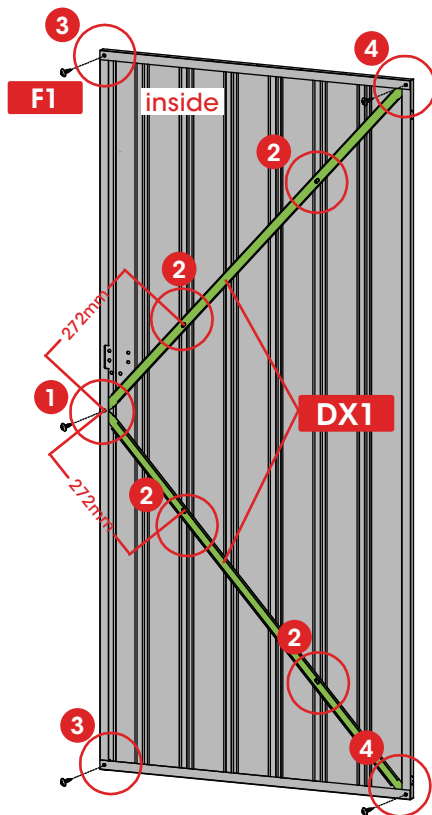

The two ends of the DX1 crossbar must be assembled inside the door frame.

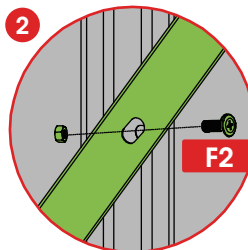

The cross pole DX1 must be installed underneath DLA1 and DD.

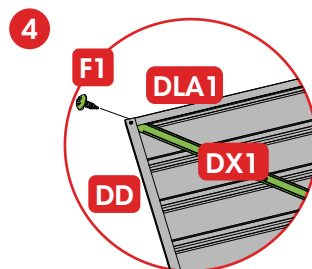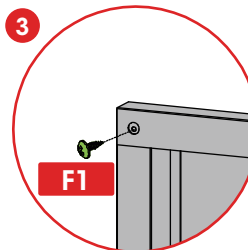



F2 X 6






F3 X 8



DCS X 1




DH X 2

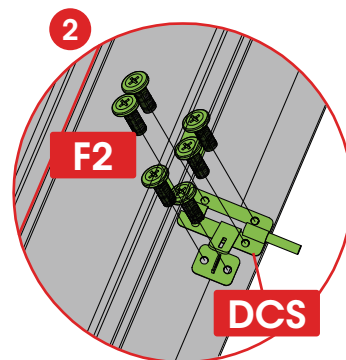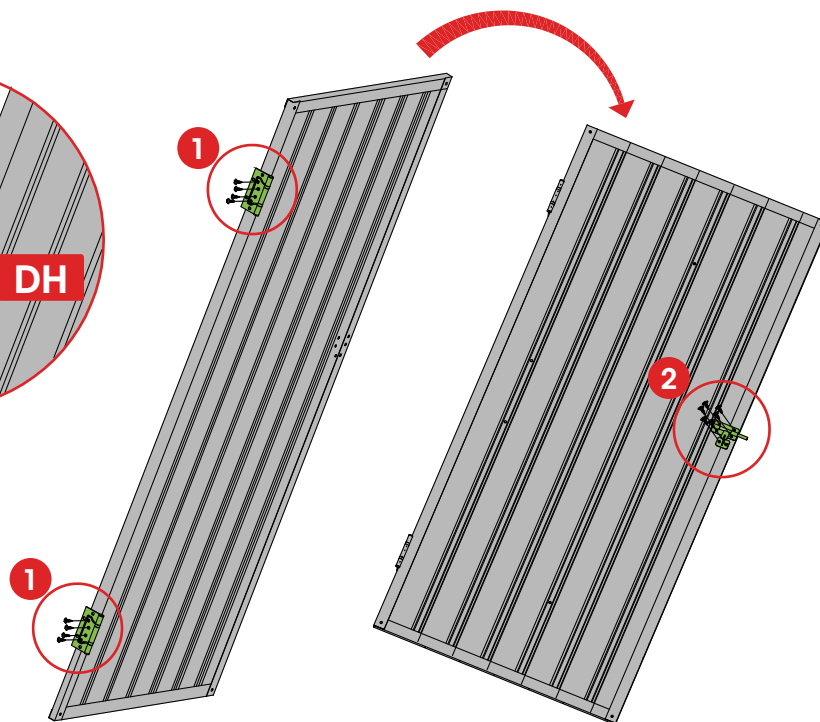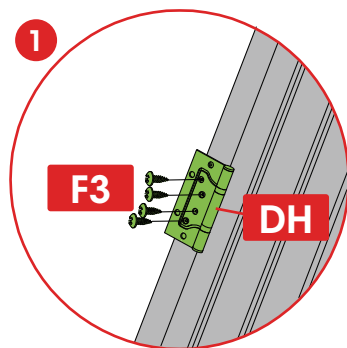

33



Left door panel splicing DL

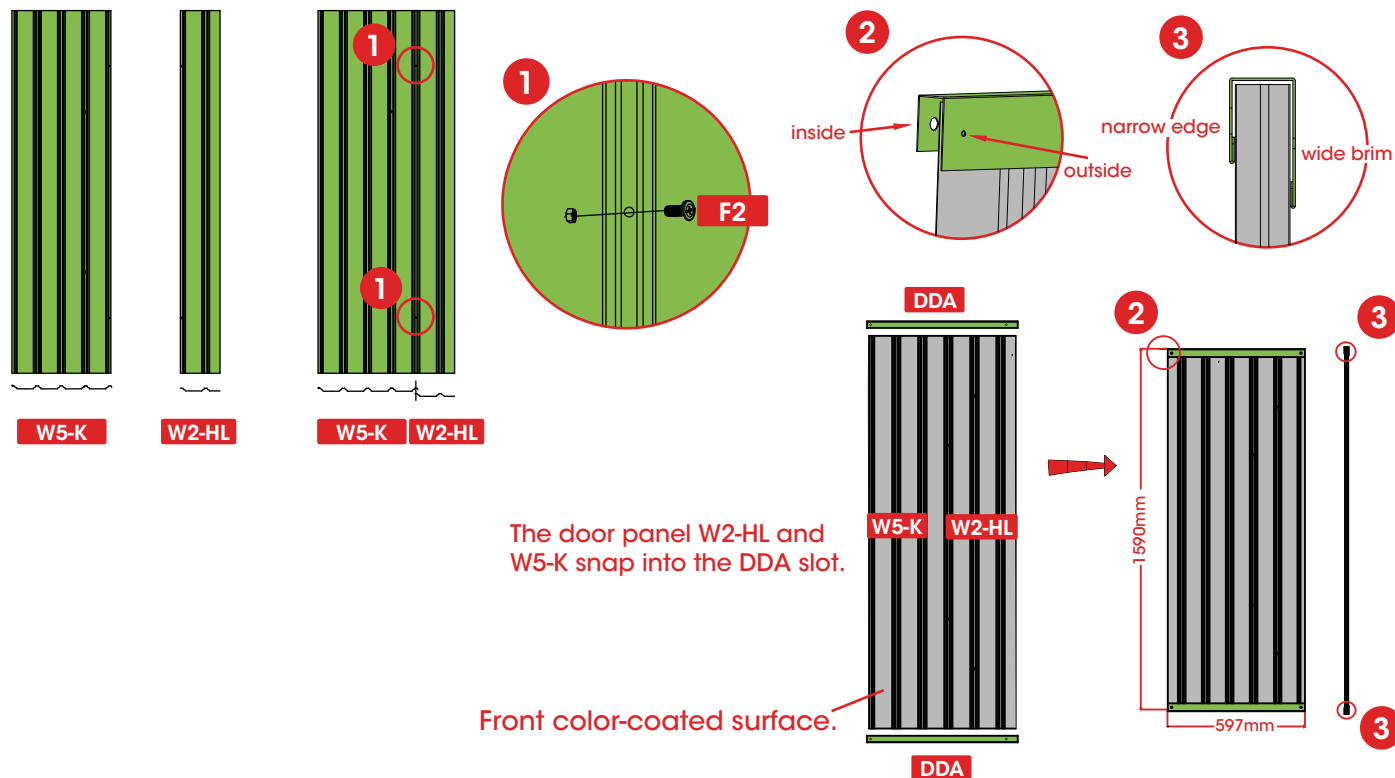

34







DA X 1



DLA X 1



F1 X 4

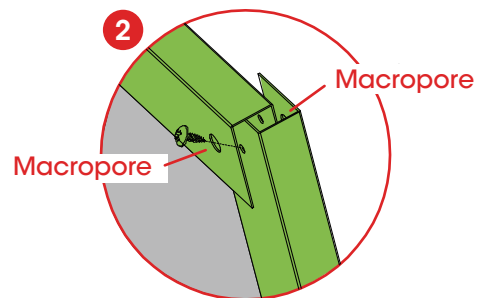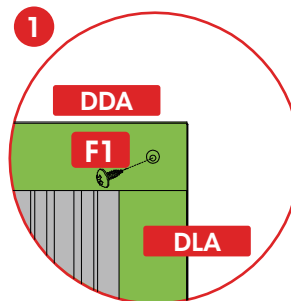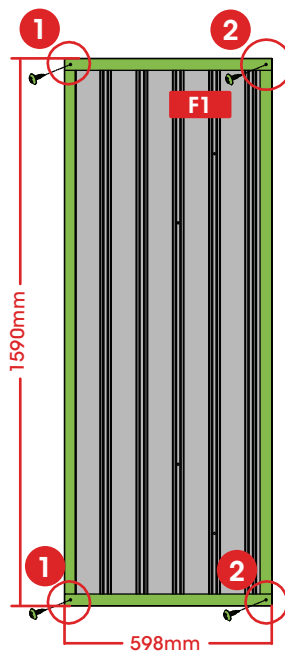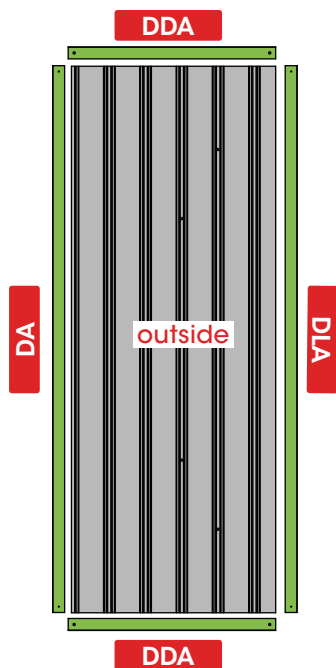


Big hole on the outside, small hole on the inside, connected with an F1 screw.





DBA X 2





F1 X 5




F2 X 2

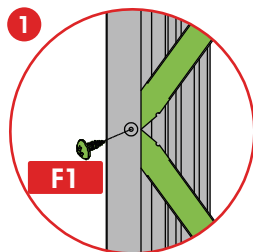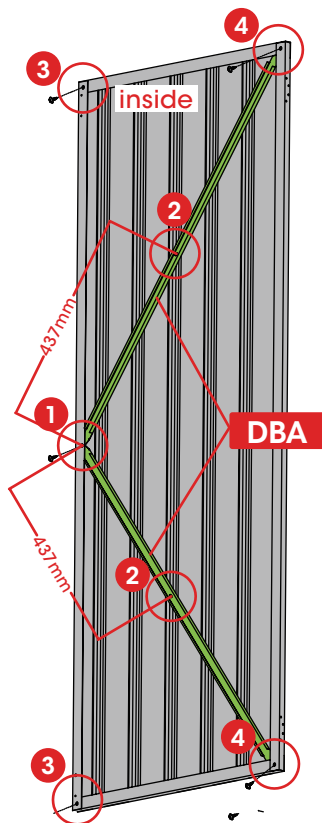

The two ends of the DBA crossbar must be assembled inside the door frame.


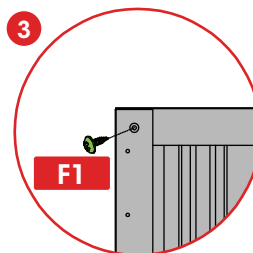
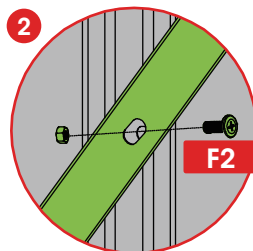


The cross pole DBA must be installed underneath DDA and DA.

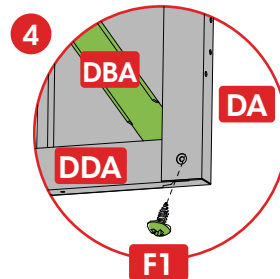




Right door panel splicing DR

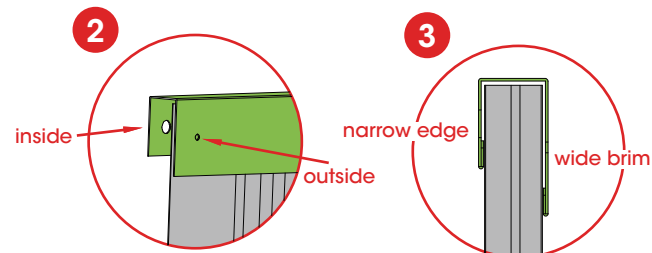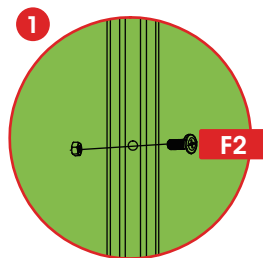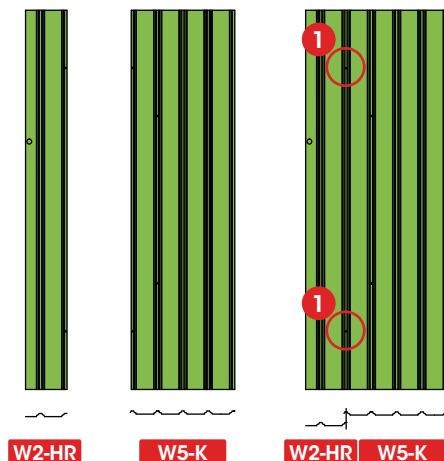

The door panel W2-HR and W5-K snap into the DDA slot.

Front color-coated surface.

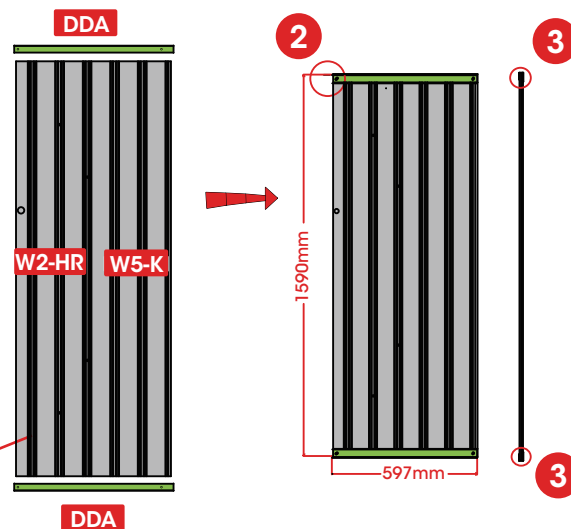



DA X 1







DRA X 1



F1 X 4

The door frame is wide and facing outward.

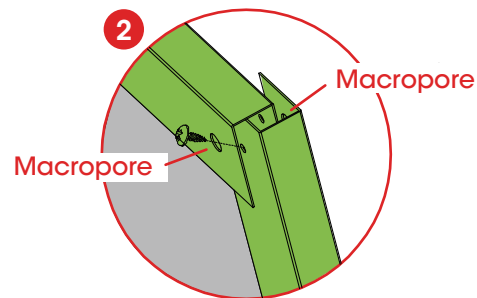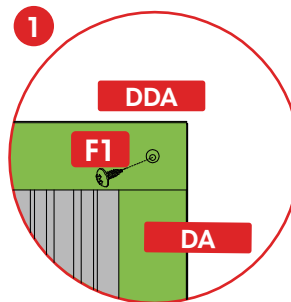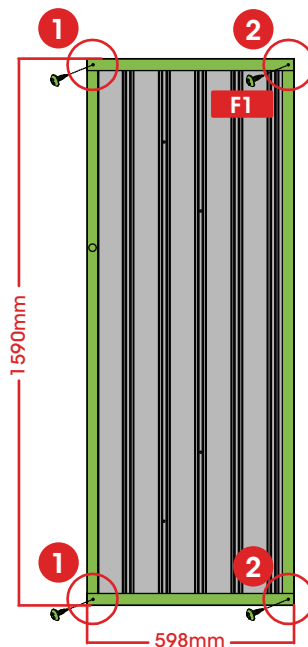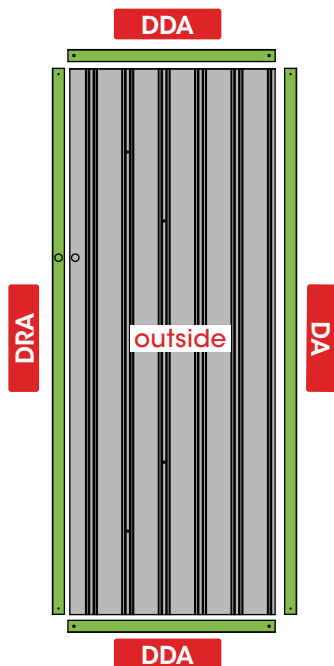


Big hole on the outside, small hole on the inside, connected with an F1 screw.



DBA X 2





F1 X 5





F2 X 2


back

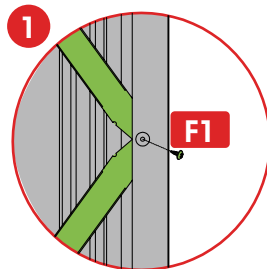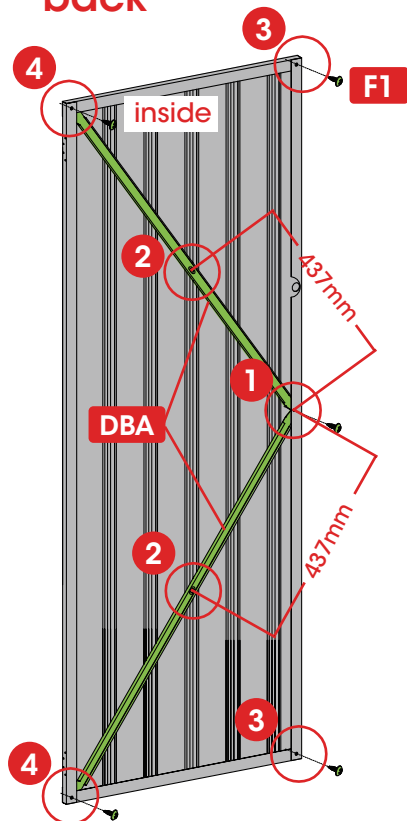

The two ends of the DBA crossbar must be assembled inside the door frame.

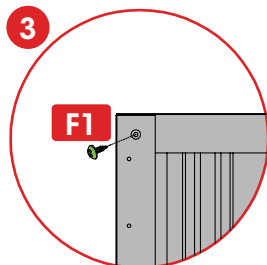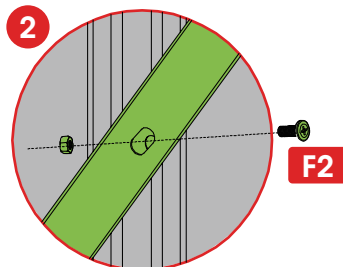

The cross pole DBA must be installed underneath DDA and DA.

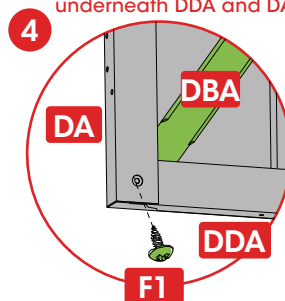


39




GL X 1

1


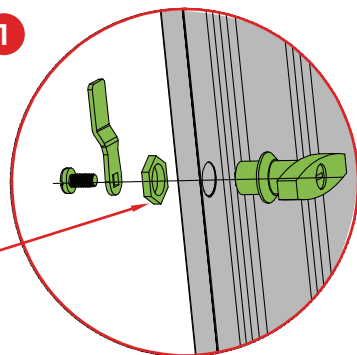


M20

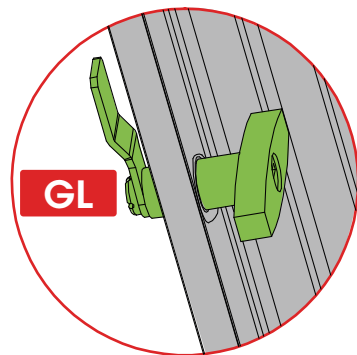


GL

1

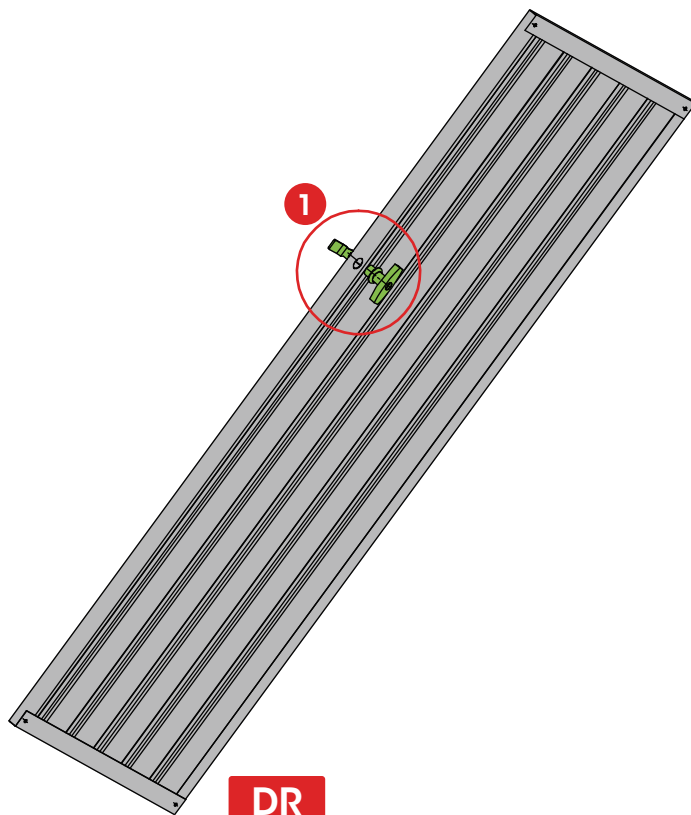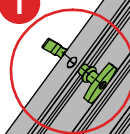


DR

1

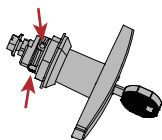


Take the lock and observe it. There are four pin holes on the thread.

2




Rotate the key counterclockwise 180°

3




Push the locking pinout of the limit hole

4

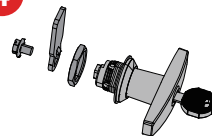


Remove the locking plate, screw, and hex nut

5

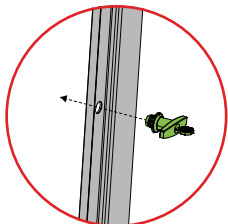


6

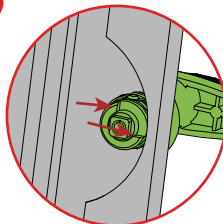


The limit gap is consistent with the illustration

7

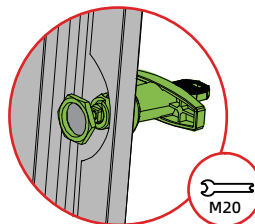


Use a wrench to tighten the nut. Keep the lock handle balanced and do not turn it.

8

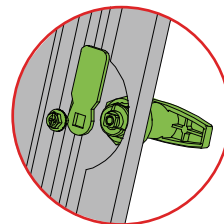


9

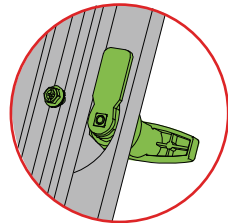

Install the locking plates and screws in sequence

10

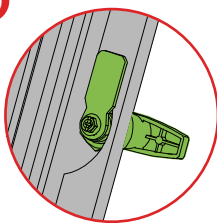

Scan the QR code to watch the video on installing the door handle

41



F1 X 4



F3 X 16






DC X 2



DH X 4



V2 X 4

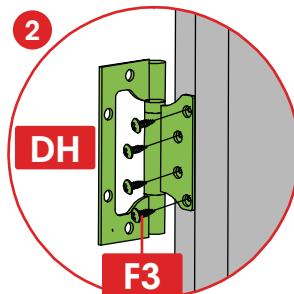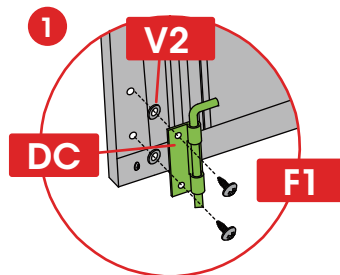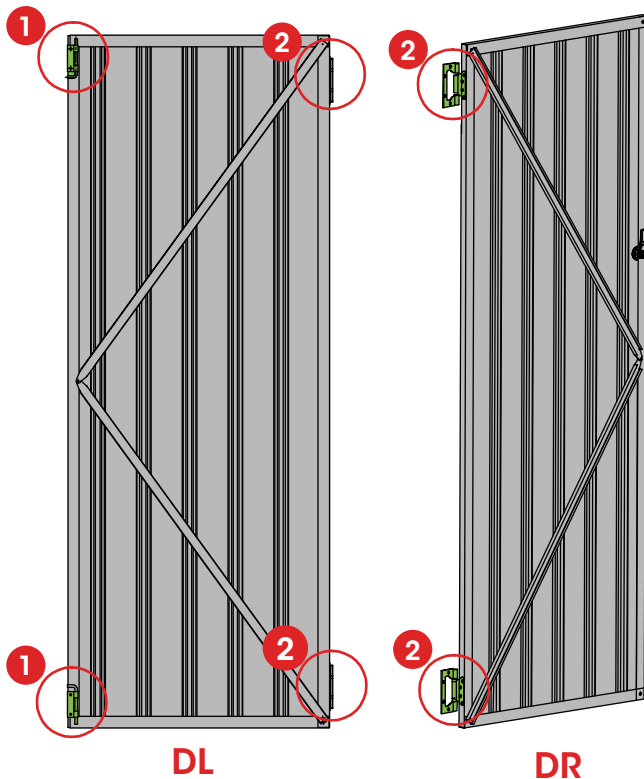


Front side has a counterbore.



42



F3 X 16

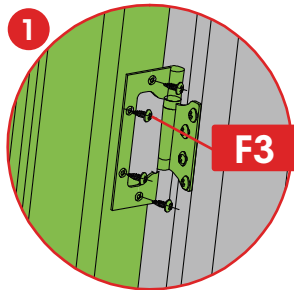

Front side has a counterbore.

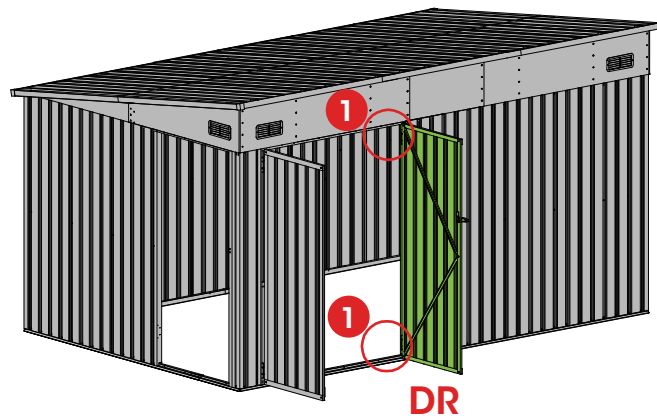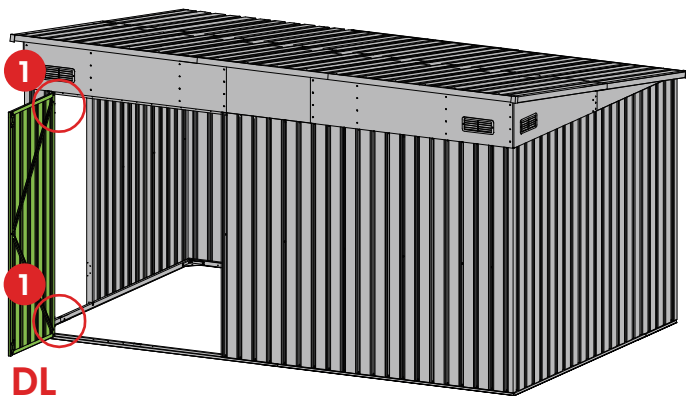




43






F2 X 2





F3 X 8

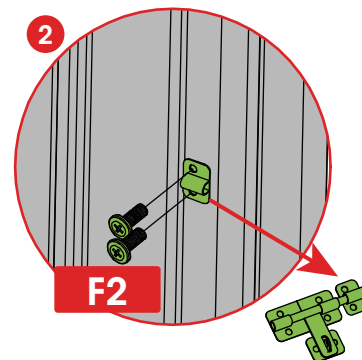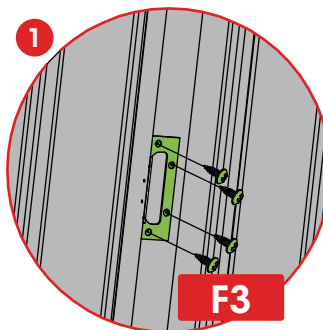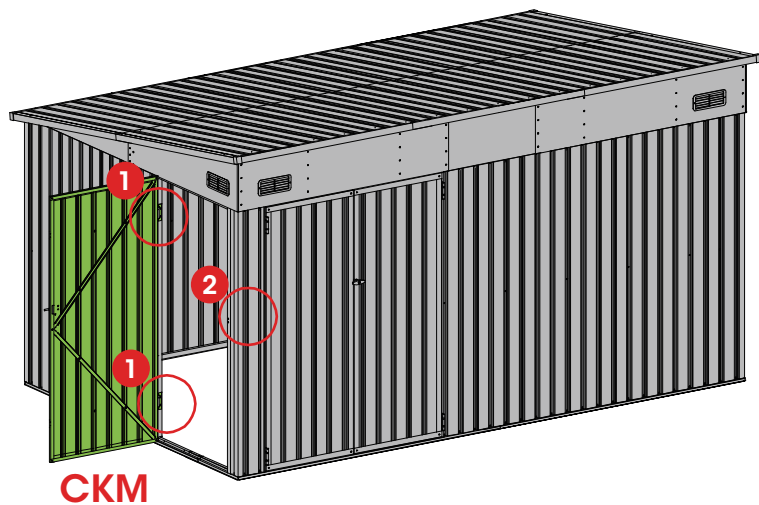

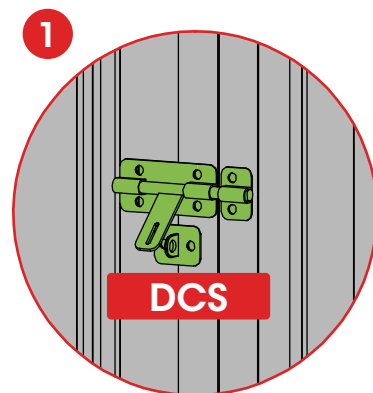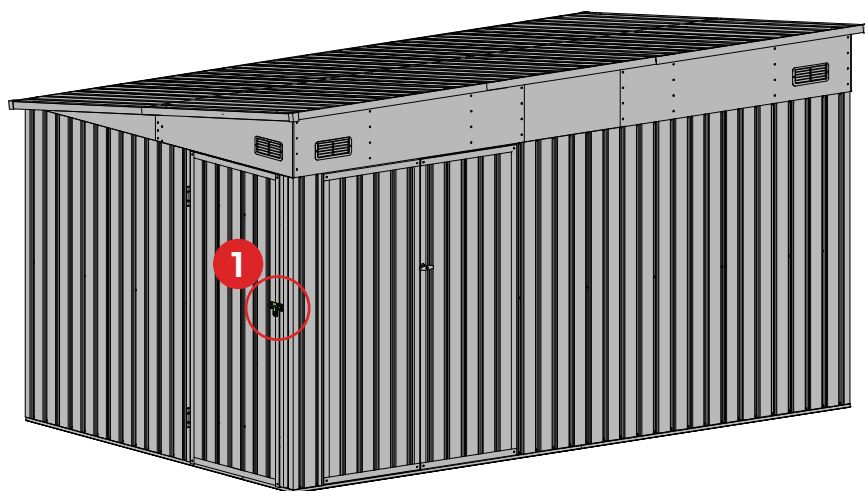

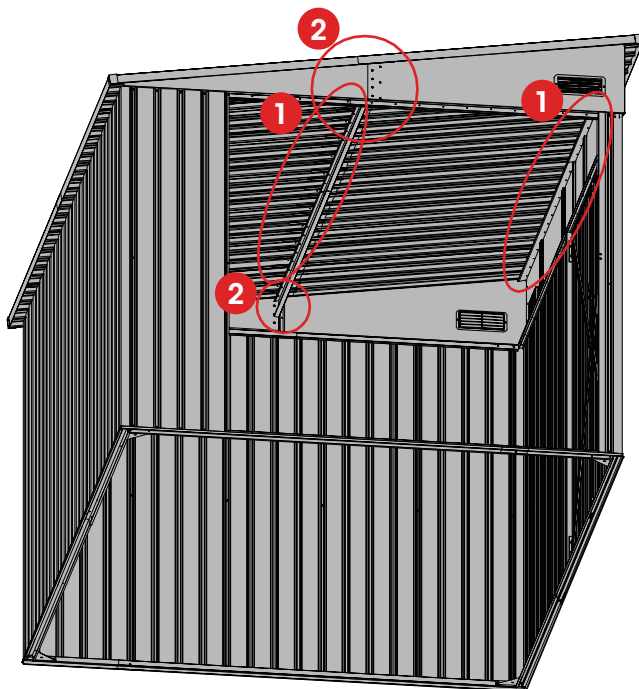

SL X 72


K812-6L, K812-6M, K812-6R, E810-7L, E812-7M, E812-7R and the exposed part of the top cover assembly screws need to be covered with plastic protective caps.

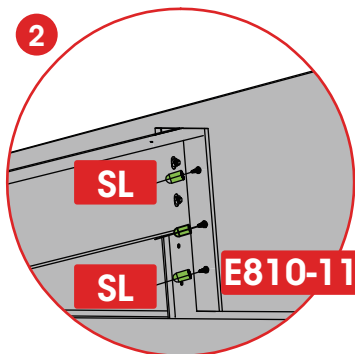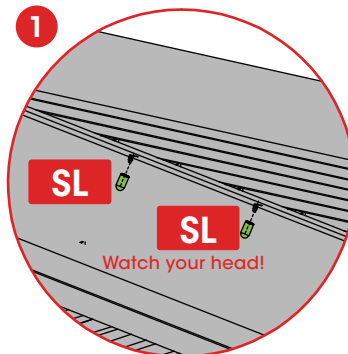


The connecting screws of ventilation boards K812-6L, K812-6R and E810-11 need to be covered with plastic protective caps.


part 6: Floor

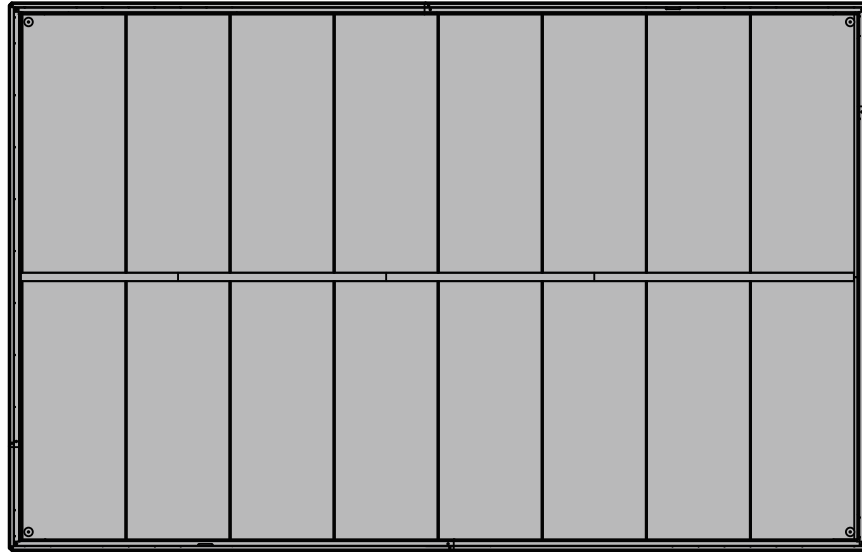

K812-DL1	K812-DR1
K810-DM	K810-DM
K810-DM	K810-DM
K810-DM	K810-DM
K810-DM	K810-DM
K810-DM	K810-DM
K810-DM	K810-DM
K810-DL	K810-DR

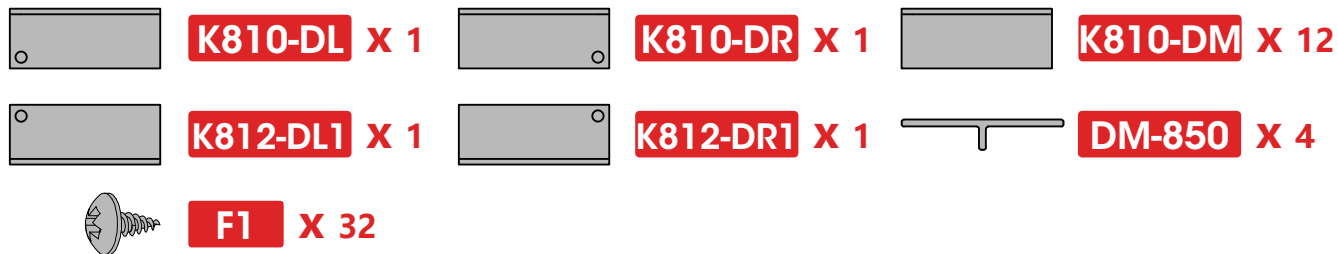


F1: Self-tapping screws.

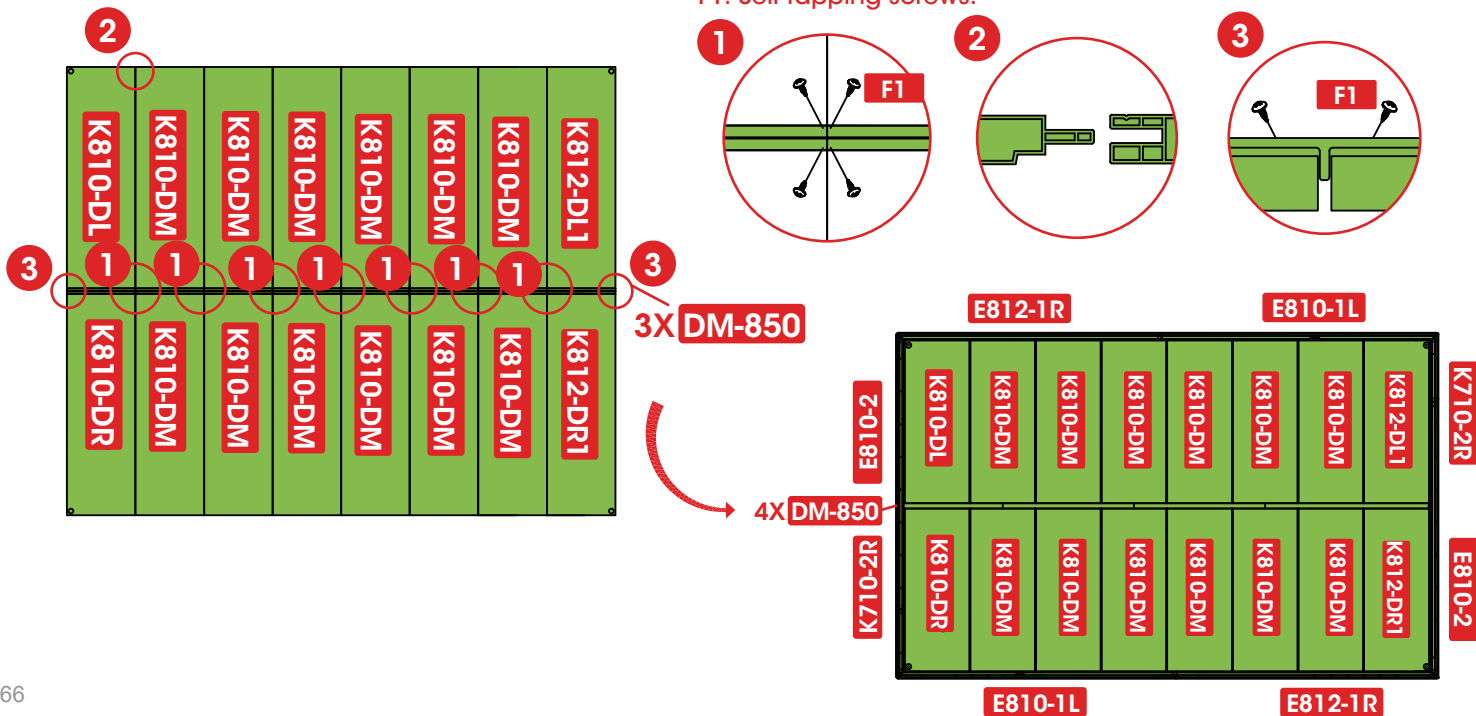

HELP CENTER


Question about your product? We're here to help. Visit us at:



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

We Stand Behind the Quality of Their Furniture

If you have any issues with your item please let us know! We will always do our best to come up with a solution that you will be happy with. Please get in touch with our customer service team before returning the product. And pls do not throw the original box(es) if you have not finished assembling or confirmed no quality issues.

Length of return period:

Items can be returned within 30 days of purchase.

In the meanwhile, everything you purchased from us comes with a one-year warranty.

Who is responsible for the return shipping fee:

We will cover the return shipping fees if:

1. Your item has a manufacturing defect in its materials or workmanship. For example, torn wicker or misaligned screw holes. We will send you a prepaid shipping label after photos are sent.
2. Your item has been damaged in transit. For example, glass is broken or wicker is damaged. We will send you a prepaid shipping label after photos are sent.
3. You receive the wrong box(es) due to a warehouse error. We will send you a prepaid shipping label after photos are sent of the wrong SKU numbers on the outer box(es).
4. One or more boxes are lost in transit. We will send you a prepaid shipping label if you no longer want the item.

*However, we still hope to work with you for a better solution instead of a return. Please don't hesitate to contact our customer service team.

Customer will cover the return shipping fees if:

1. You don't like the product(s) after receiving the box(es).
2. You no longer need the product(s) but you have received the box(es).
3. You buy the product(s) by mistake but you have received the box(es).
4. Order/Shipment cancellation failed and you have received the box(es).

Return Request

In order to get a full refund as described in this return policy, all items must be: (1) In a brandnew/unused condition, please provide photos before and after packaging.

(2) When returning, all accessories and parts are firmly packed in all original packaging.

If your return does not meet the requirements, you may not get a full refund.

When will I be refunded?

The refund is released once the goods have been returned to our warehouse.

What if the product is damaged/defective outside of the valid return period?

We want you to be a happy customer. Please reach out to us by email and we will come up with a solution to make sure you are satisfied. ☺

Reach us at

 service@kmcglobe-us.com

 (USA) +1 213-816-4788