

6PC NUMBERED HOOK SET

Assembly Instructions



6PC NUMBERED HOOK SET

Parts List


Please review all parts and hardware before disposing of any packaging.

Call Customer Service if missing hardware. Do not return to store/retailer.

Using a screw that is too long will cause damage. Before beginning assembly, separate each type of screw. Carefully study the screw diagrams below.

A


12PCS



Plastic Anchor

B

12PCS



Screw

C




Frame

Care and Cleaning Instructions:

Before using , wipe with a clean , dry cloth. Periodically apply furniture wax to renew. Avoid rubbing or scratching the surface with rough or abrasive objects.

Assembly Tool Required
No.2 Phillips Screwdriver
Not Included





Tool List: 1/4" drill bit, drill, tape measure and pencil.

6PC NUMBERED HOOK SET

Assembly Instructions

NOTE: NO DRILLED HOLE OR PLASTIC ANCHOR REQUIRED WHEN MOUNTING TO WOOD WALL. USE SCREW ONLY. WE DO NOT SUPPLY HARDWARE FOR MOUNTING ON CONCRETE WALLS.

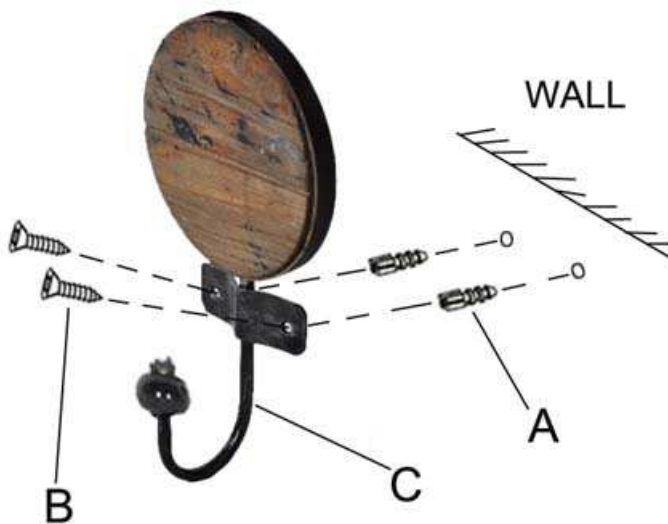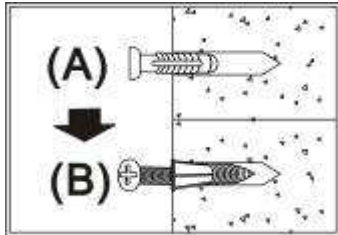

Step 1: Drill two 1/4" holes on wall with measurements as shown below.

Insert plastic anchors (A) into the holes of wall as shown.

(When doing this, you will need a hammer help you).

Using the phillips head screwdriver, install screw (B) into each of the anchors (A). Turn the screw (B) in until there is a gap of 3mm between the head of the screw and the wall as shown.

Install the unit onto the screw (B) and secure the bracket is resting securely on the mounting screw (B).

Please repeat above steps for each number.

Parts Replacement Form

Customer Information

Name

Address

City/State/Zip Code

Phone Number

Please indicate where you purchased this item: Store/Website/Catalog

Please indicate color/size/style number:

Style No

Parts Letter

Parts Description

Quantity Needed

Please immediately examine this product carefully.