

ASSEMBLY INSTRUCTION


SIDE LIFT OTTOMAN DOUBLE BED

Important











If for any reason you need to return this
Item, you must return it in its original packaging.
Assembled items cannot be returned.

IMPORTANT NOTE * PLEASE CHECK ALL PARTS CAREFULLY BEFORE YOU START
THE ASSEMBLY OF YOUR FURNITURE




- * PLACE ALL PARTS ON A CLEAN AND FLAT SOFT SURFACE TO
PREVENT SCRATCHES.
- * KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY
STEP.

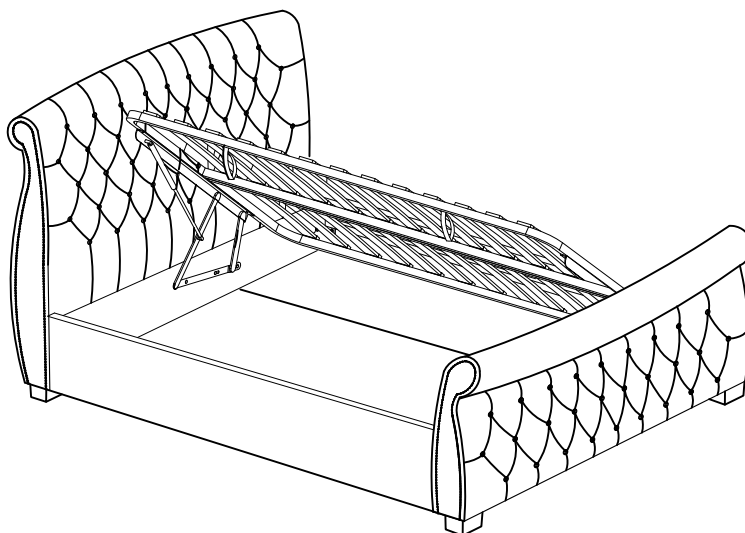



Parts

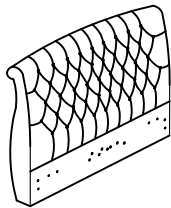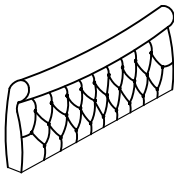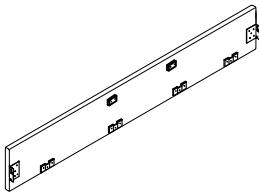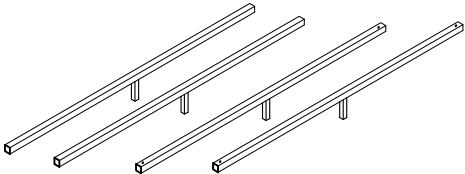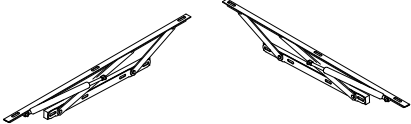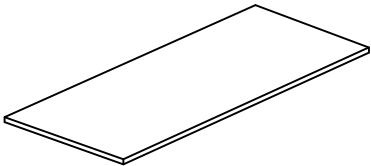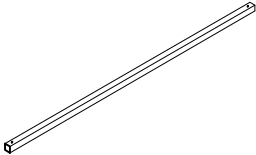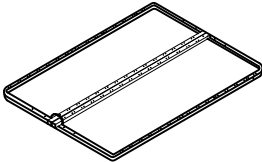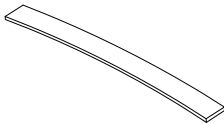① HEADBOARD - 1PC 	② FOOTBOARD - 1PC 	③ SIDE RAILS - 2PCS 
④ WOODEN SUPPORT - 4PCS 	⑤ GAS LIFT PARTS - 2PCS 	⑥ METAL CORNER - 4PCS 
⑦ BASE BOARD - 2PCS 	⑧ HORIZONTAL SUPPORT BAR - 1PC 	⑨ METAL FRAME BASE -1PC 
⑩ FEET - 4PCS 	⑪ SLATS - 26PCS 	⑫ BRACKET - 2PCS 




Fittings

Ⓐ 24x 30mm M8 bolt 	Ⓑ 8x 40mm M8 bolt 	Ⓒ 6x 45mm M8 bolt 	Ⓓ 2x 70mm M8 bolt 	Ⓔ 8x M8 Nut 
Ⓕ 40x Flat Washer M8X17mm 	Ⓖ 32x Spring Washer M8 	Ⓗ 12x 50mm M5 screw 	Ⓙ 1x M5 allen key 	⓵ 1x spanner 
Ⓚ 4x 45mm M4 screw 	Ⓛ 52x Single cap 			

Step 1

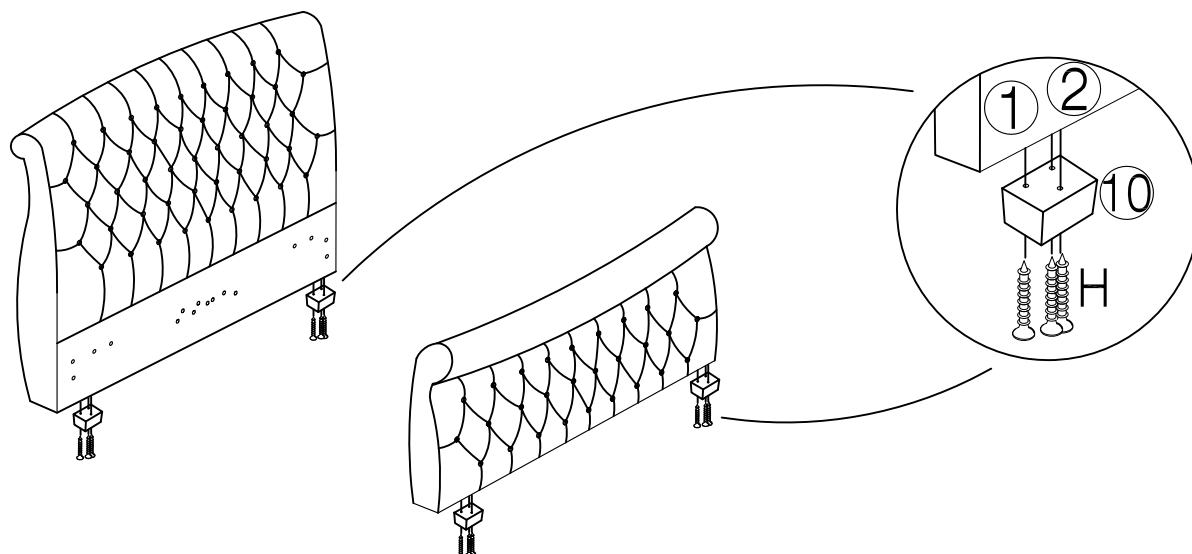
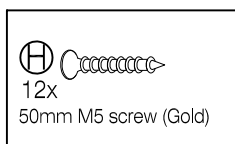


Step 2

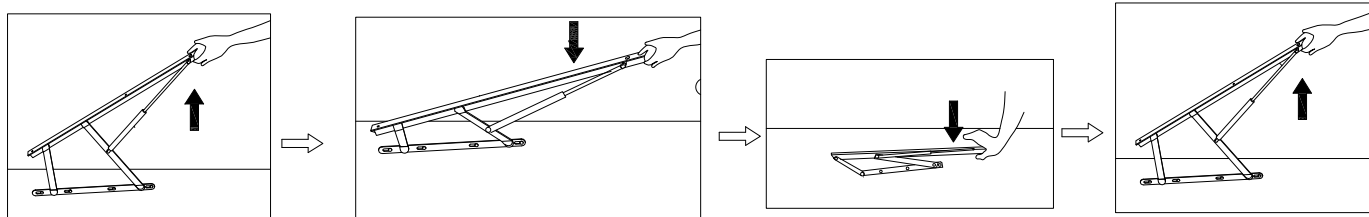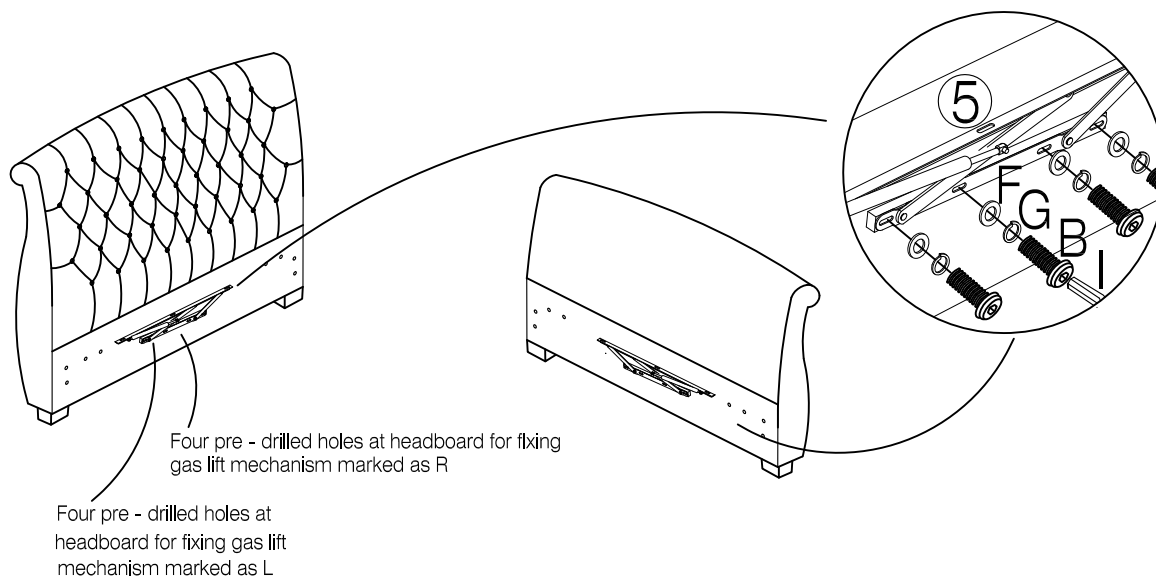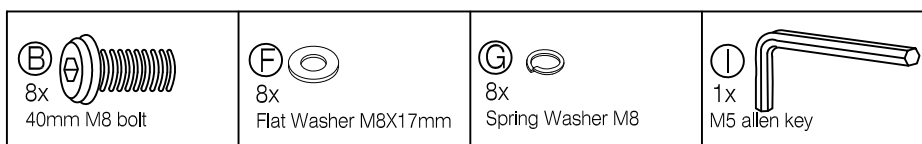



Step 3

Ⓐ 8x 30mm M8 bolt	Ⓕ 8x Flat Washer M8X17mm	Ⓖ 8x Spring Washer M8	Ⓛ 1x M5 allen key
------------------------------	-------------------------------------	----------------------------------	------------------------------

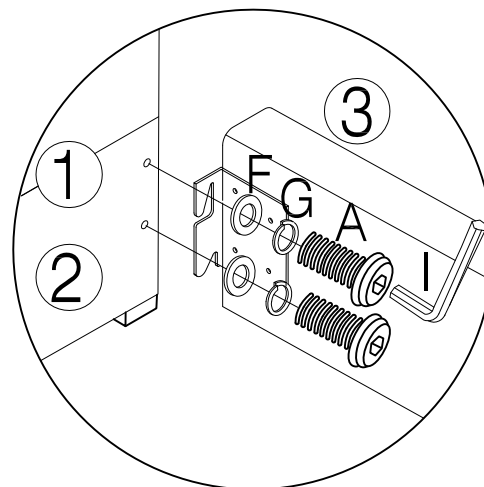
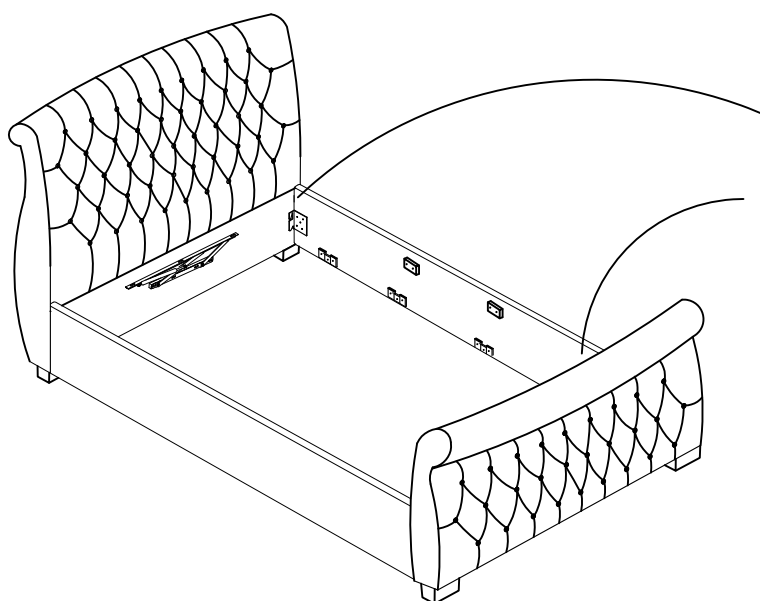


Step 4


Ⓐ 16x 30mm M8 bolt	Ⓕ 16x Flat Washer M8X17mm	Ⓖ 16x Spring Washer M8	Ⓛ 1x M5 allen key
-------------------------------	--------------------------------------	-----------------------------------	------------------------------

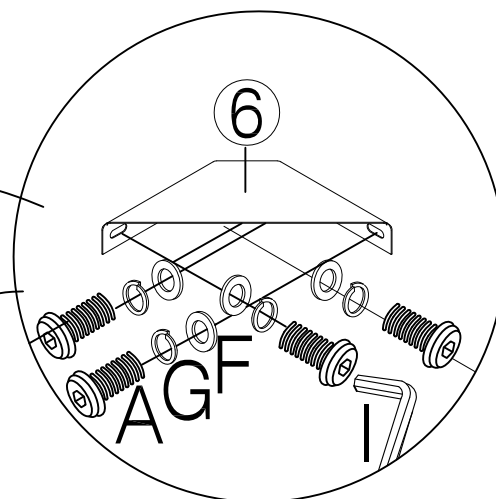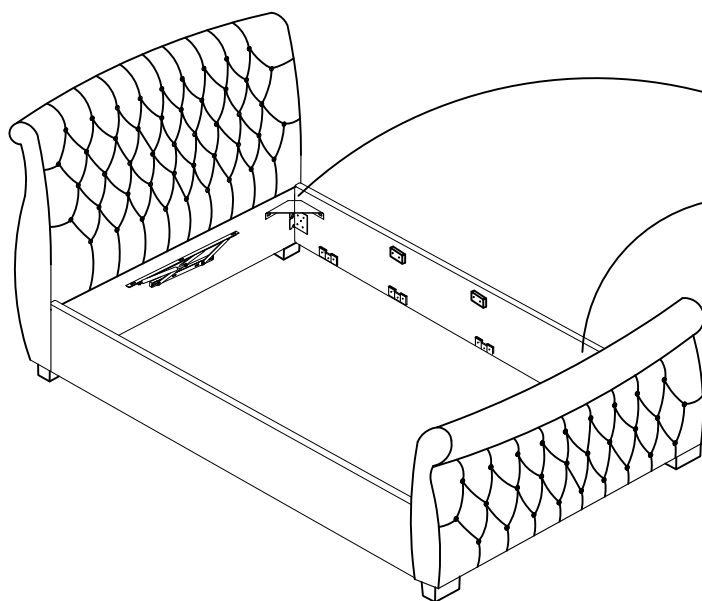



Step 5

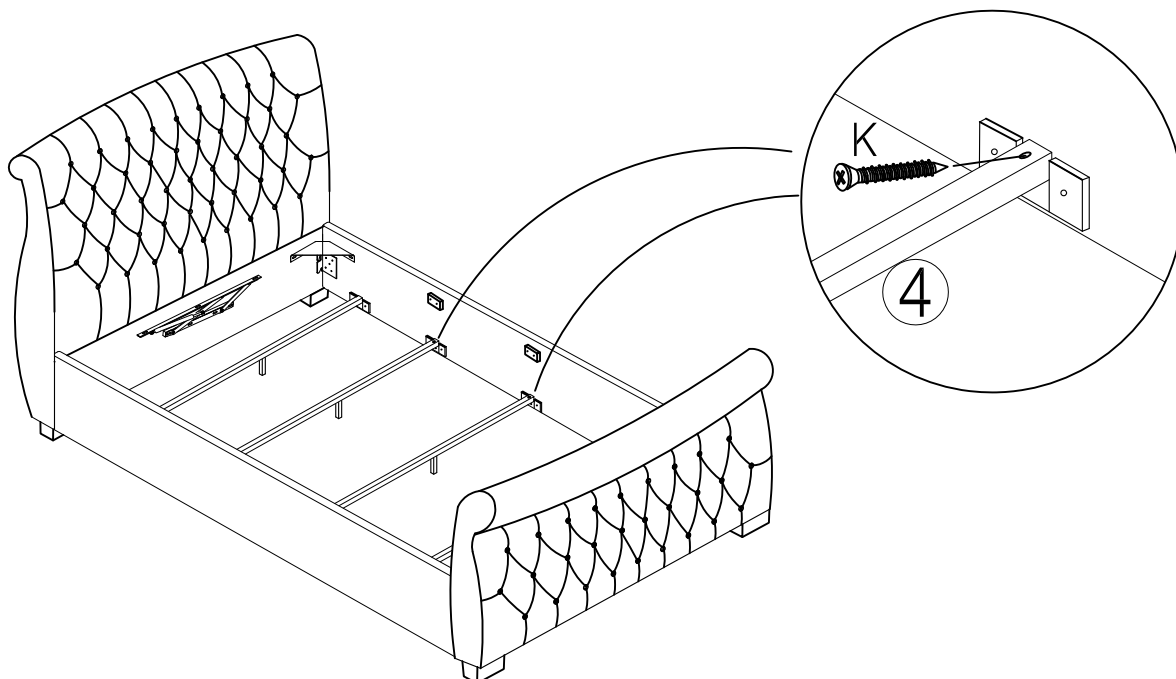
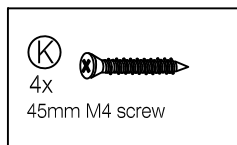


Step 6



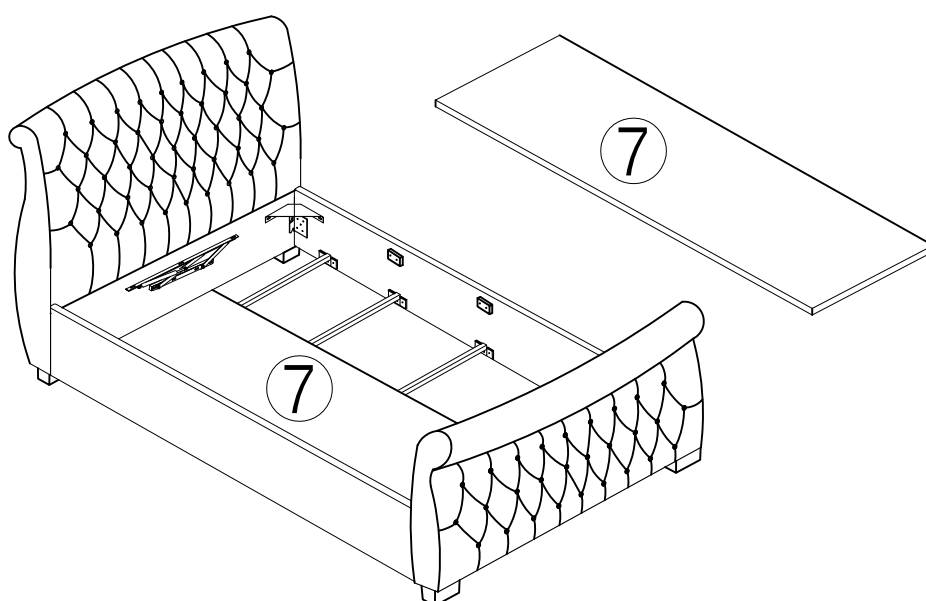




Step 7

 6x 45mm M8 bolt	 6x Flat Washer M8X17mm	 6x M8 Nut	 1x M5 allen key	 1x spanner
--	---	--	--	---

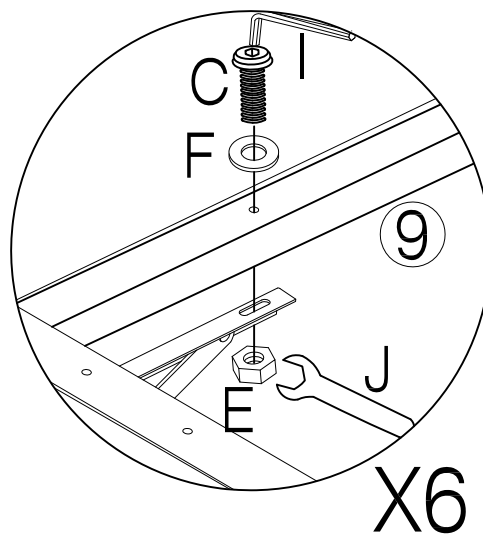
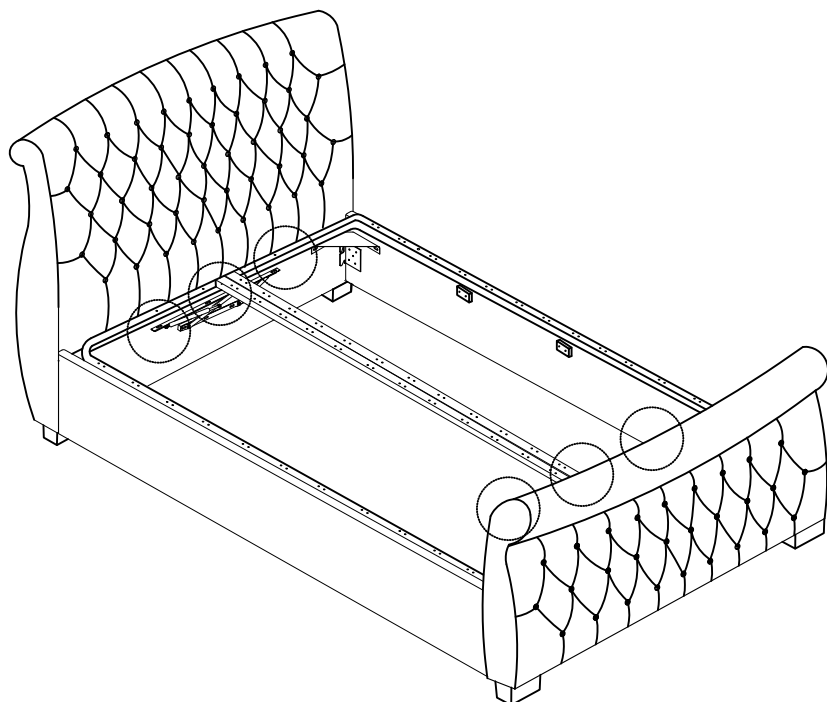


Step 8

 2x 70mm M8 bolt	 2x Flat Washer M8X17mm	 2x M8 Nut	 1x M5 allen key	 1x spanner
---	--	---	---	--

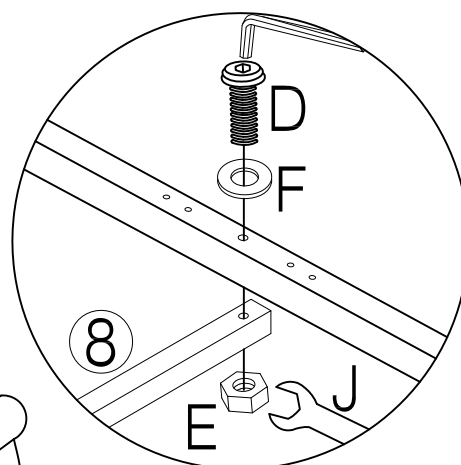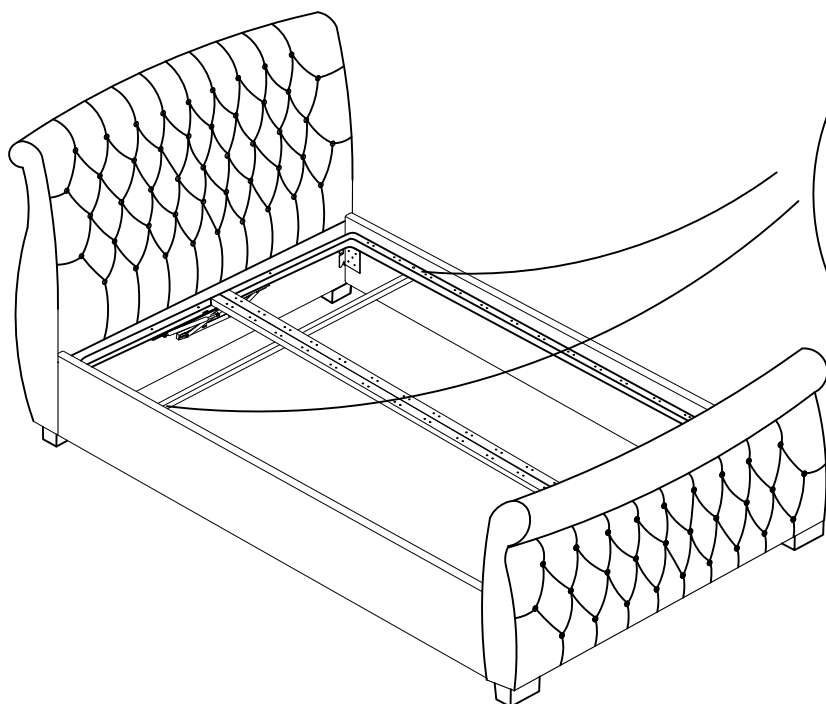

Step 9

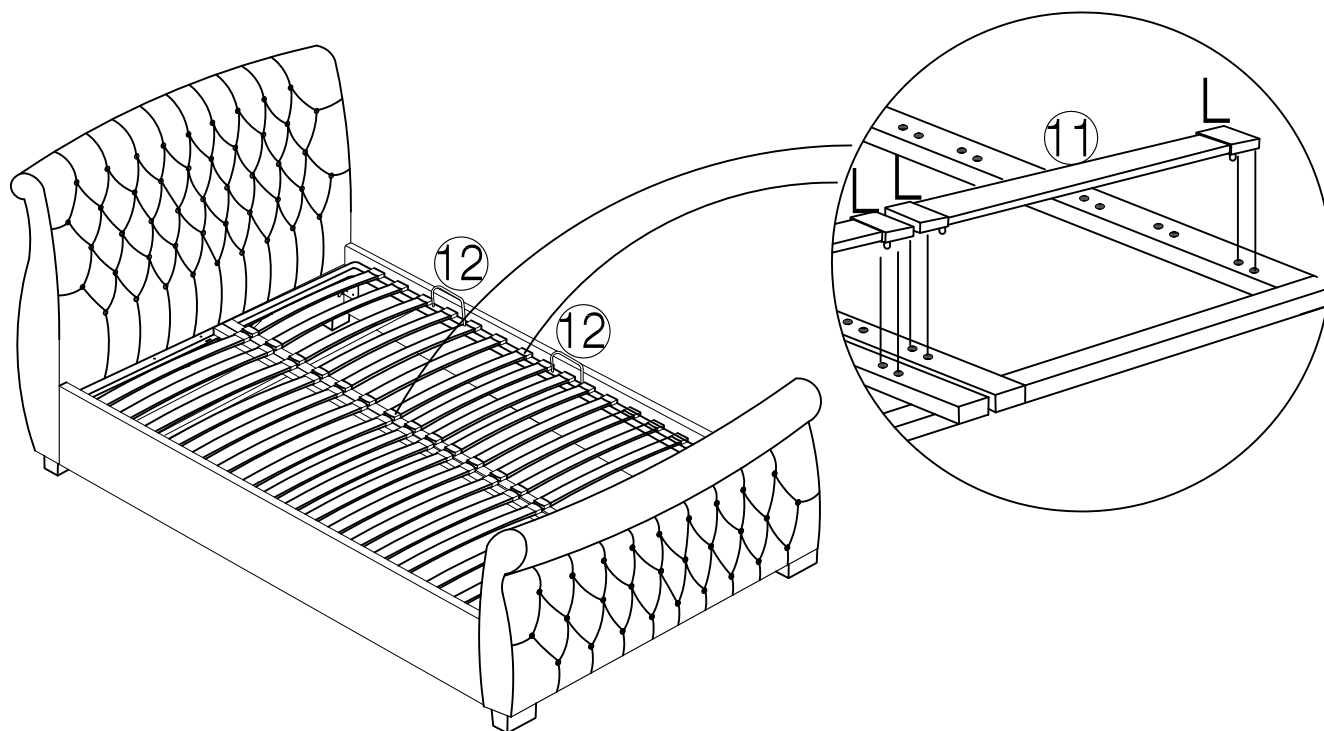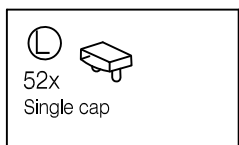

Step 10

