


INSTALLATION MANUAL - *Manual de Instalación*

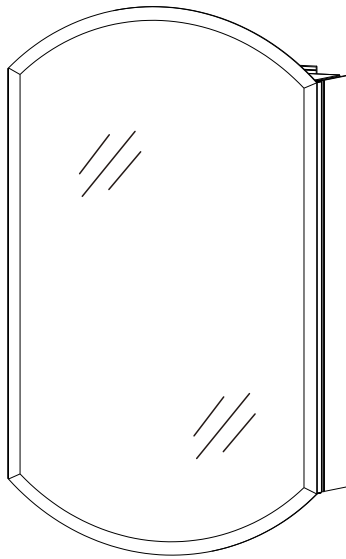

THANK YOU / Gracias

We can assure you that has used the best materials and has applied the strictest quality control measures to ensure that each and every unit meets the highest quality standards. This booklet contains general information about the unit as well as step-by-step installation instructions.

Podemos asegurarle que se han utilizado los mejores materiales y se han aplicado las más estrictas medidas de control de calidad para garantizar que cada unidad cumpla con los más altos estándares de calidad. Este folleto contiene información general sobre la unidad, así como instrucciones de instalación paso a paso.

BEFORE BEGINNING / Antes de comenzar

Carefully read the instructions before beginning the installation


- It is recommended that you wear safety glasses at all times during the installation
- Observe all local plumbing and building codes.
- It is strongly recommended that this installation be performed by a professional plumber or contractor.

Lea cuidadosamente las instrucciones antes de comenzar la instalación.

- *Se recomienda usar gafas de seguridad en todo momento durante la instalación.*
- *Observe todos los códigos locales de plomería y construcción.*
- *Se recomienda encarecidamente que esta instalación sea realizada por un plomero o contratista profesional.*

Product specifications are subject to change without notice • Las especificaciones del producto están sujetas a cambios sin previo aviso.


TOOLS REQUIRED / Herramientas necesarias

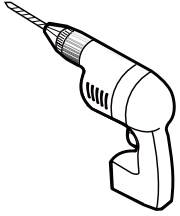

DRILL
PERFORADORA




3/32" DRILL BITS
BROCAS DE 3/32"

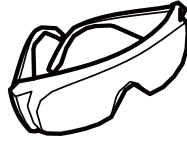


SAFETY GLASSES
GAFAS DE SEGURIDAD



SCREWDRIVER
DESTORNILLADOR

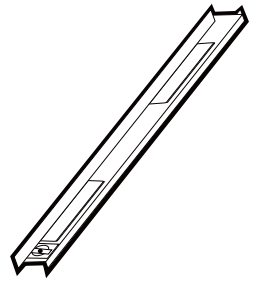

LEVEL
NIVEL

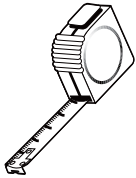


TAPE MEASURE
CINTA MÉTRICA



PENCIL
LÁPIZ





STUD SENSOR
SENSOR DE VIGAS

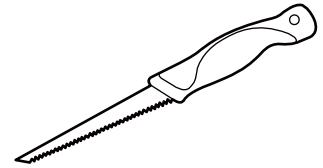


CEMENT BOARD SAW
SIERRA PARA TABLERO DE CEMENTO

PARTS LISTING / Listado de piezas

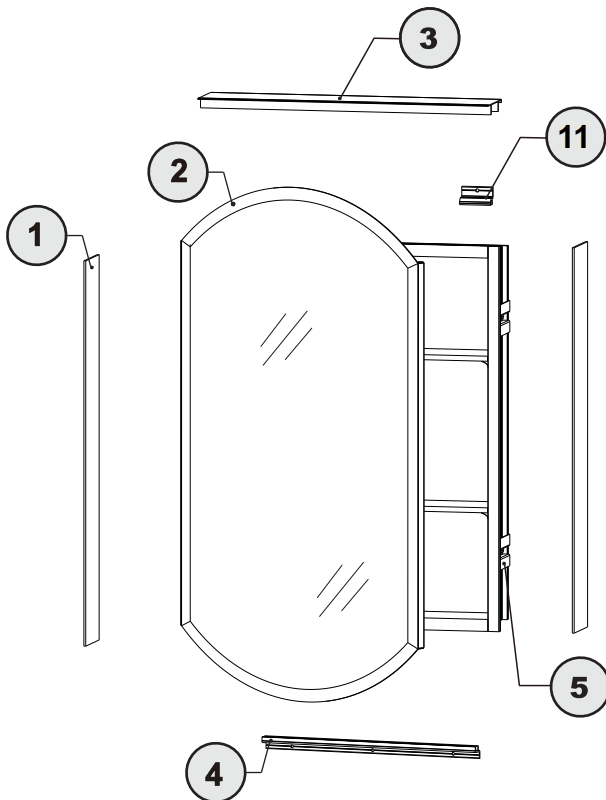

6



7




8




9



10

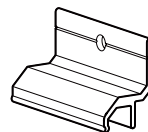

11

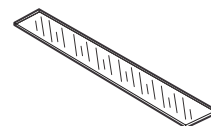

12



13


ITEM	PARTS LISTING / Listado de piezas	QTY
1	SIDE PANEL / Panel lateral	2
2	MIRROR CABINET / Armario con espejo	1
3	TOP PLATE / Placa superior	1
4	BOTTOM SUPPORT / Soporte inferior	1
5	SIDE MOUNTED BRACKET / Soporte lateral	4
6	WALL PLUG 35.5*7.1 / Taco de pared	5
7	SCREW ST4*35 / Tornillo	5
8	SCREW CAP / Tapa de tornillo	4
9	HOLE CAP / Tapa de agujero	34
10	SHELF SUPPORT PEG / Clavija de soporte de estante	8
11	TOP BRACKET / Soporte superior	2
12	GLASS SHELF / Estante de vidrio	2
13	Door Bumper / Anti-Kollisions-Kleber	4

* FOR SURFACE MOUNTED INSTALLATION SEE PAGE 5
FOR RECESSED INSTALLATION SEE PAGE 11

* PARA INSTALACIÓN SOBRE SUPERFICIE, VEA LA PÁGINA 5.
PARA INSTALACIÓN EMPOTRADA, VEA LA PÁGINA 11.


SINGLE DOOR MODEL, SIZE SPECIFICATIONS / Modelo de una puerta, especificaciones de tamaño

MODEL / Modelo	WIDTH / Ancho (A)	HEIGHT / Altura (B)
ROSA2032CRV	20"	32"
*FORMULA TO CALCULATE THE CUT OUT FOR RECESSED INSTALLATION <i>Fórmula para calcular el corte para instalación empotrada</i>		
CUTOUT WIDTH = A - 0.512" CUTOUT HEIGHT = B - 8.512"		

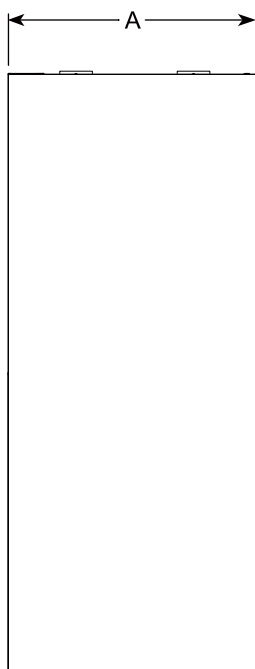


FRONT VIEW
Vista frontal

WALL MOUNTED / Montado en la pared

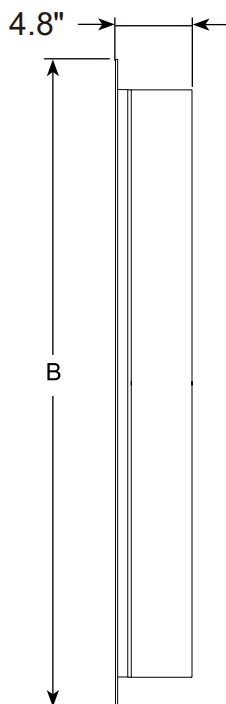

SIDE VIEW
vista lateral


* RECESSED / Empotrado

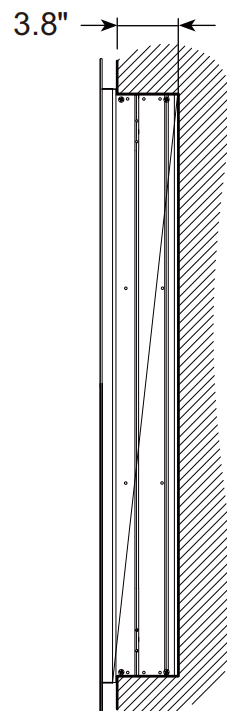


SIDE VIEW
vista lateral

1 LEVEL AND MARK THE CABINET POSITION / NIVELAR Y MARCAR LA POSICIÓN DEL ARMARIO



A




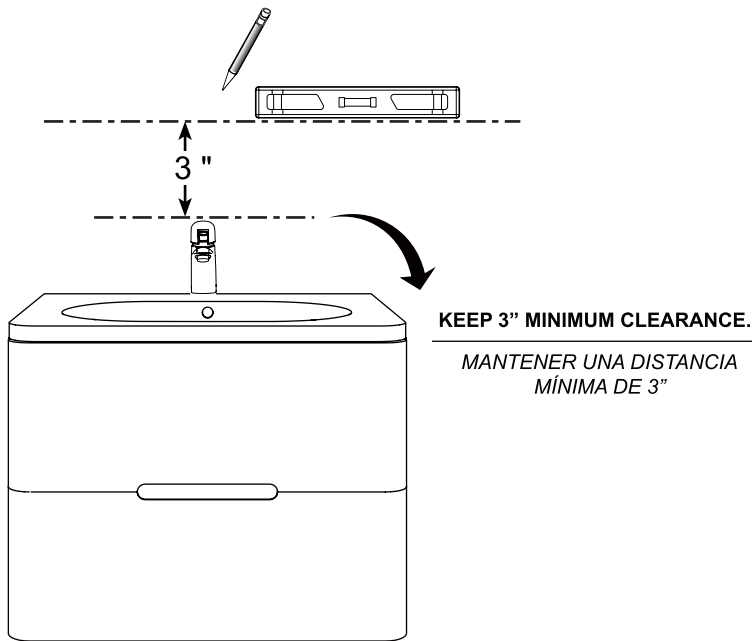


B

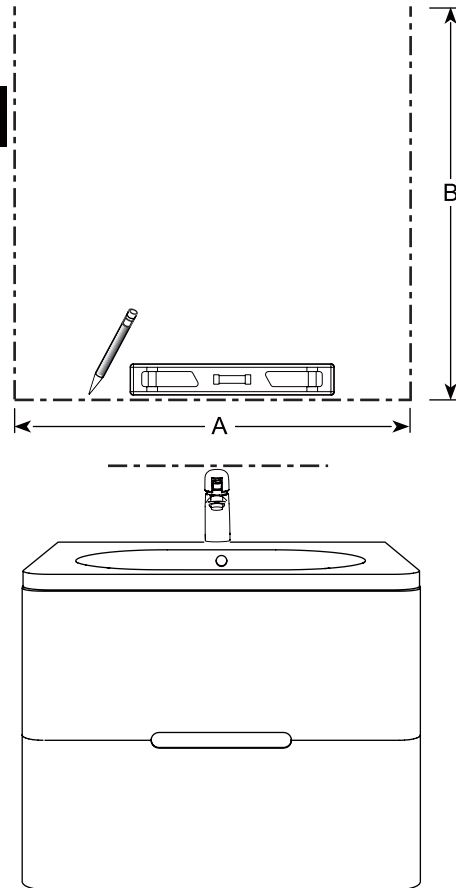


2 MARK THE BOTTOM SUPPORT ON THE WALL / MARCAR EL S OPORTE INFERIOR EN LA PARED

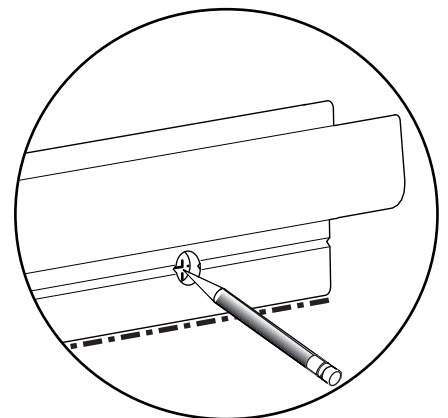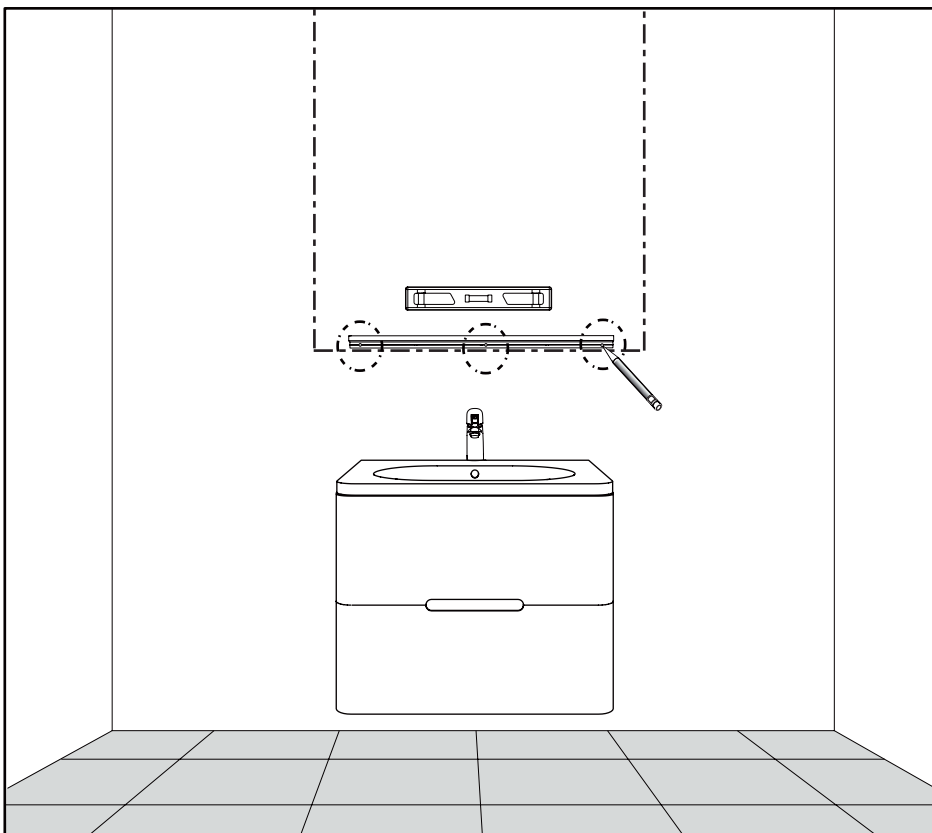


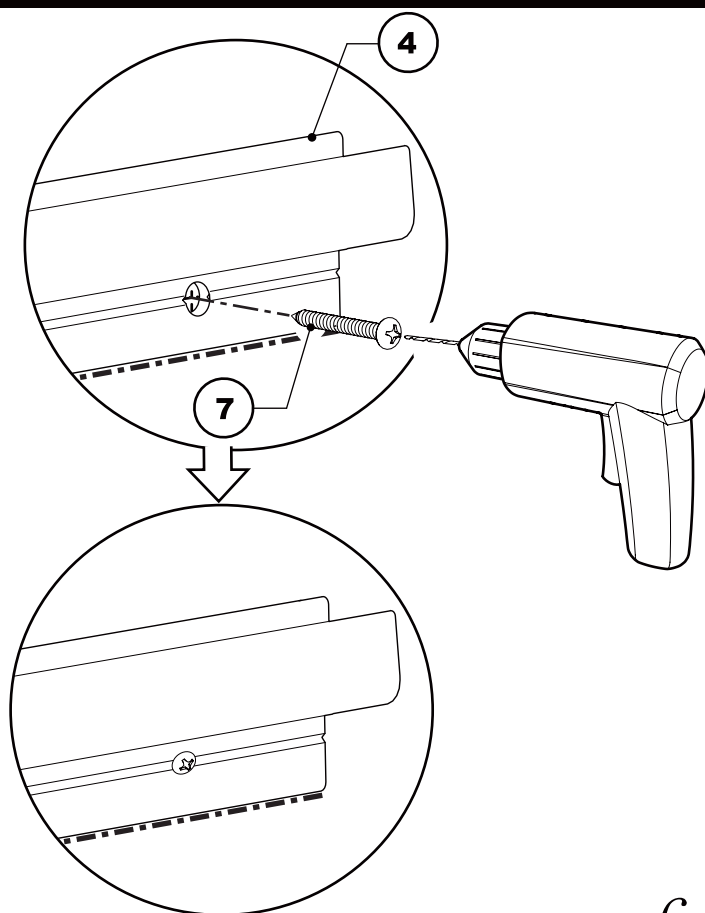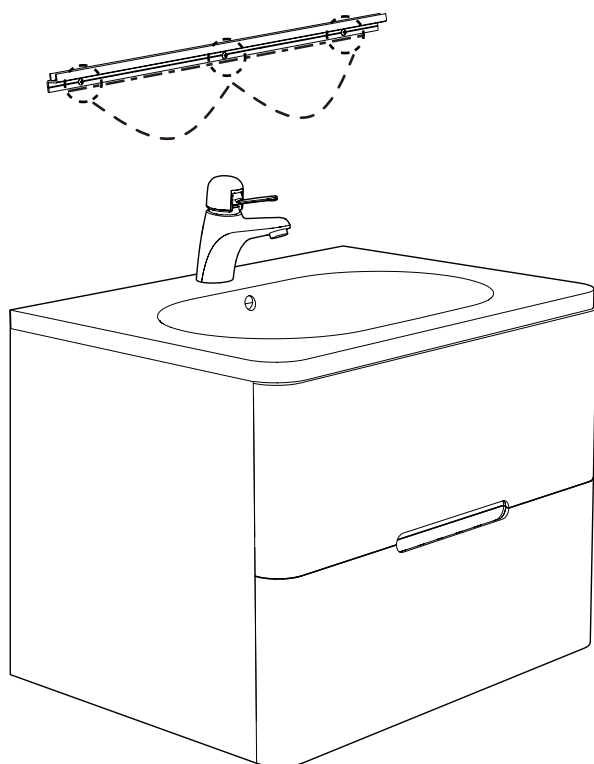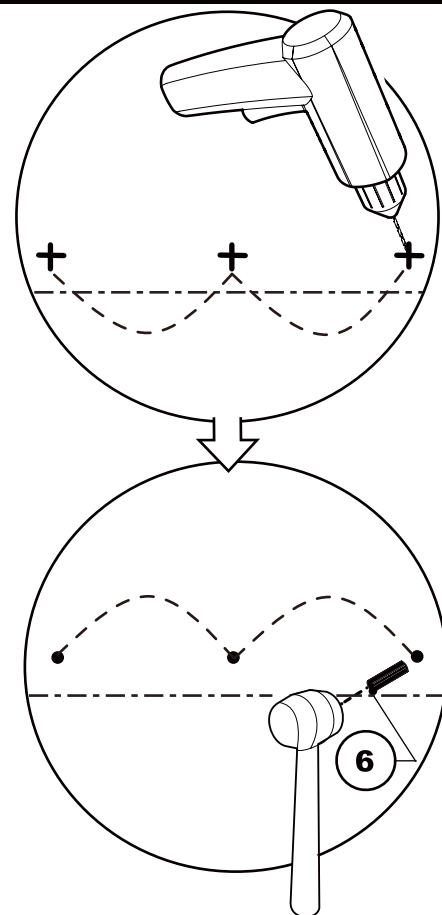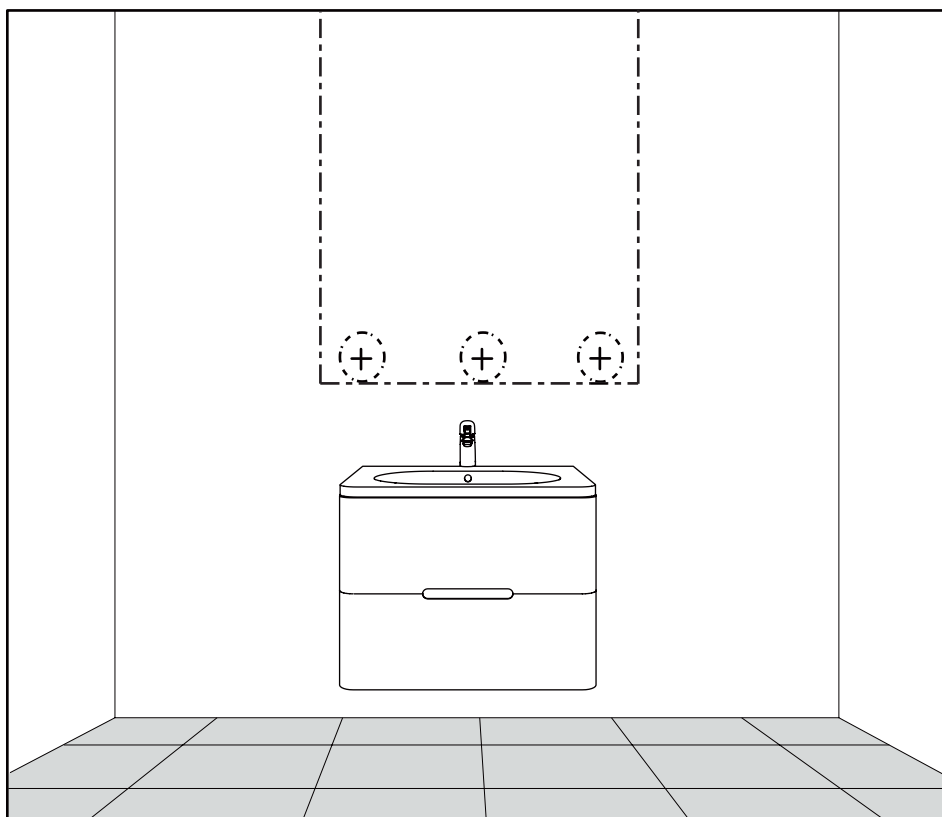

5

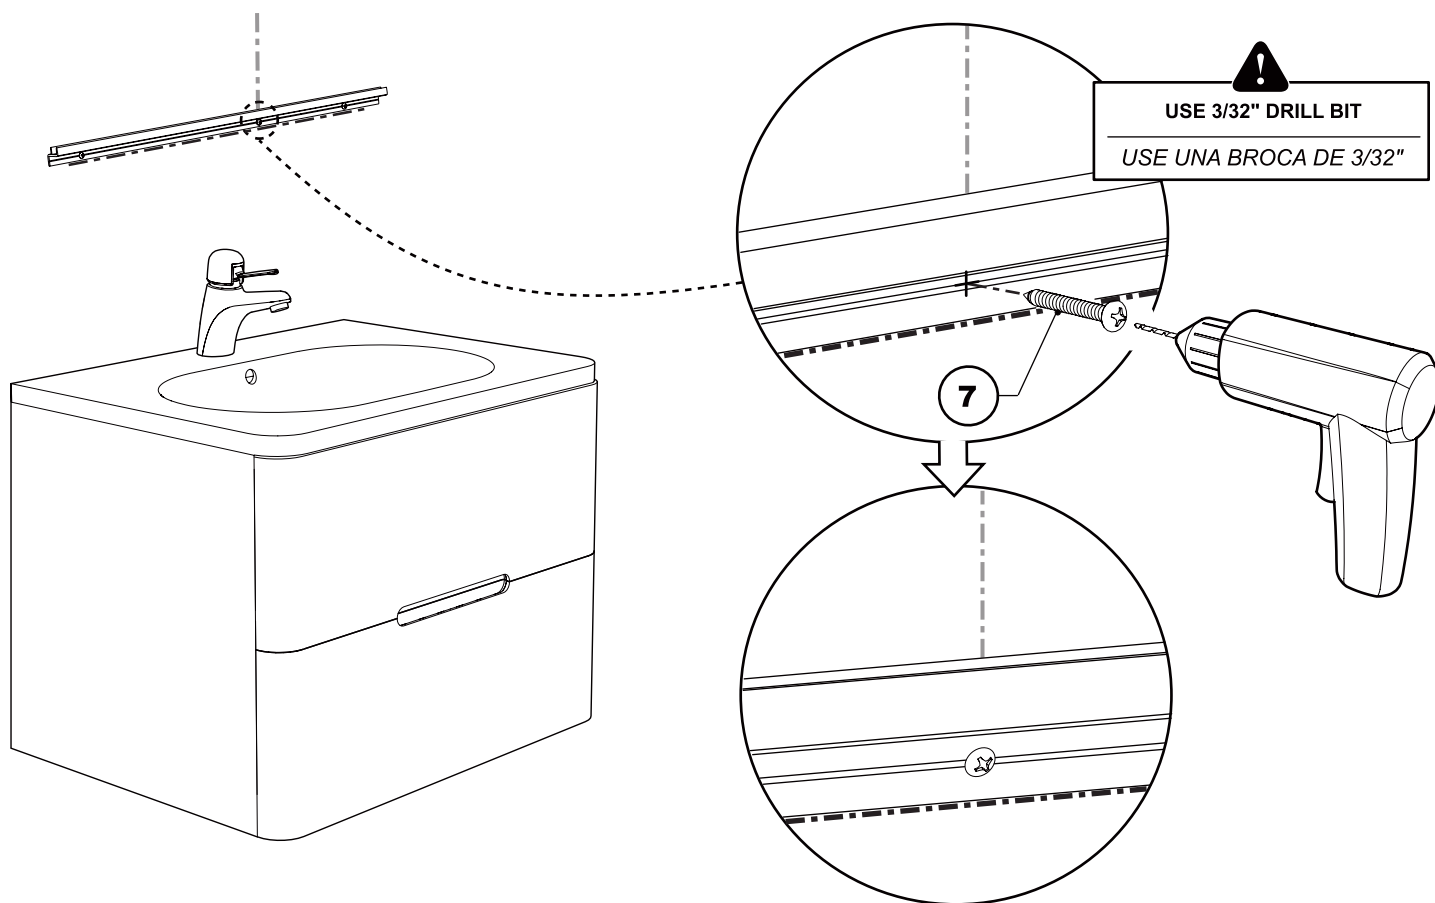
FASTEN THE BOTTOM SUPPORT ON THE STUD*FIJAR EL SOPORTE INFERIOR A LA VIGA*

6

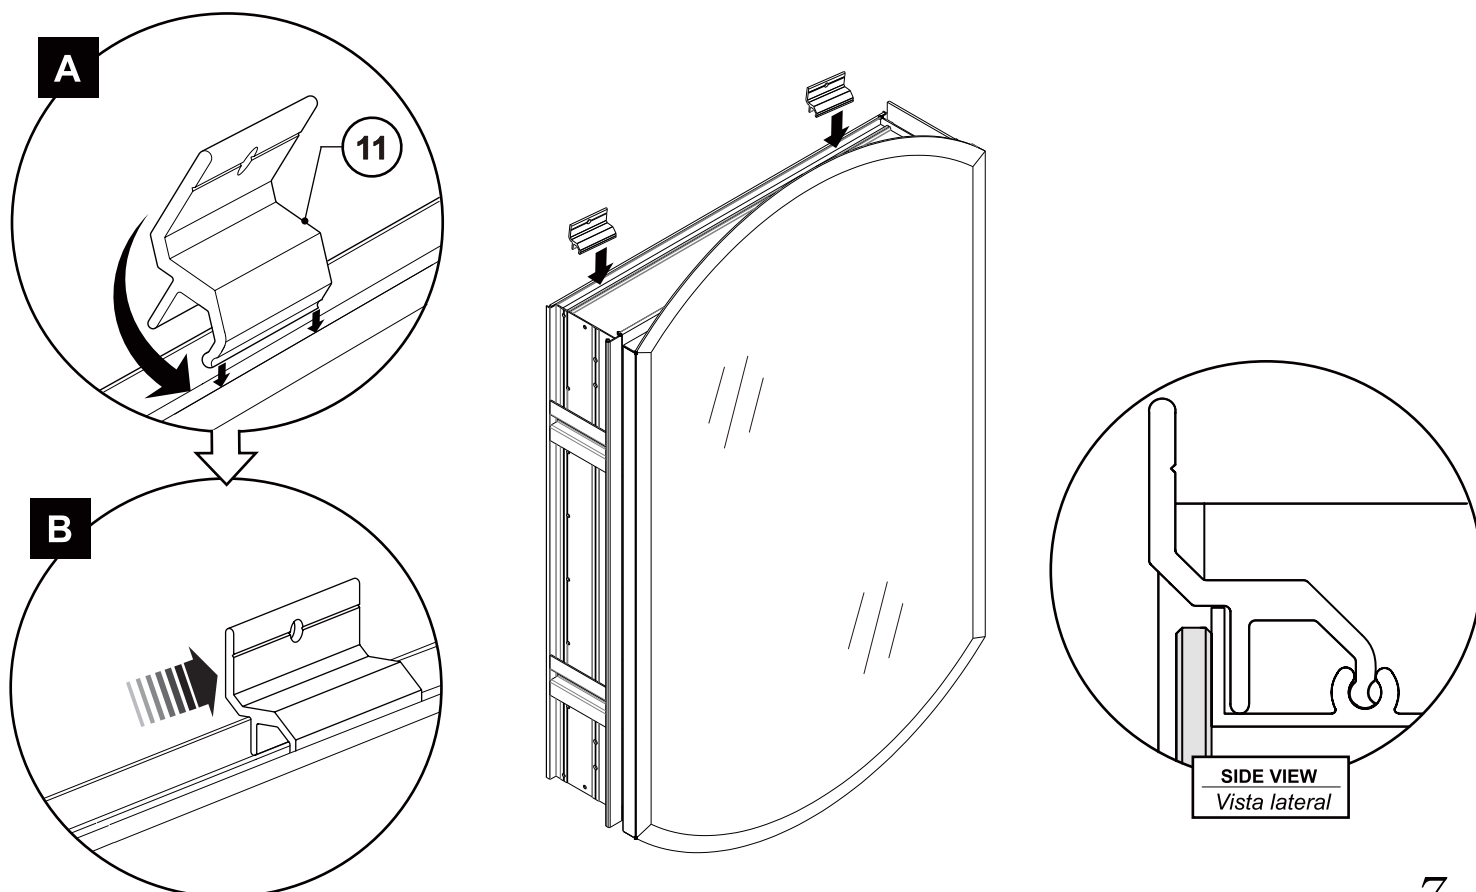INSTALL THE TOP BRACKETS / INSTALAR LOS SOPORTES SUPERIORES


7

PLACE THE CABINET ON THE WALL / COLOCAR EL ARMARIO EN LA PARED

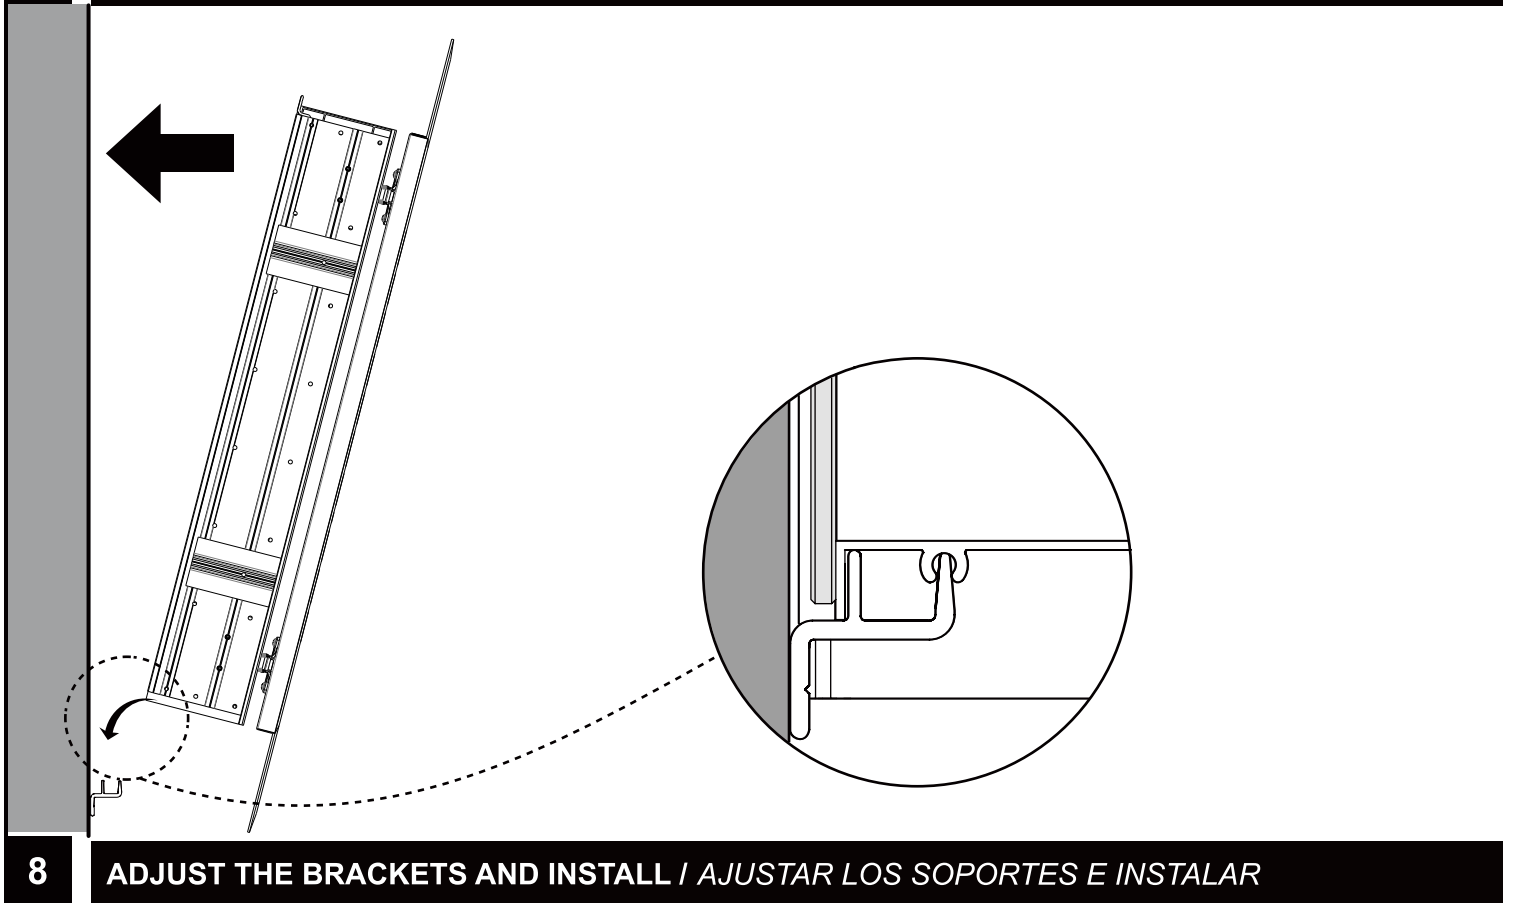



8

ADJUST THE BRACKETS AND INSTALL / AJUSTAR LOS SOPORTES E INSTALAR

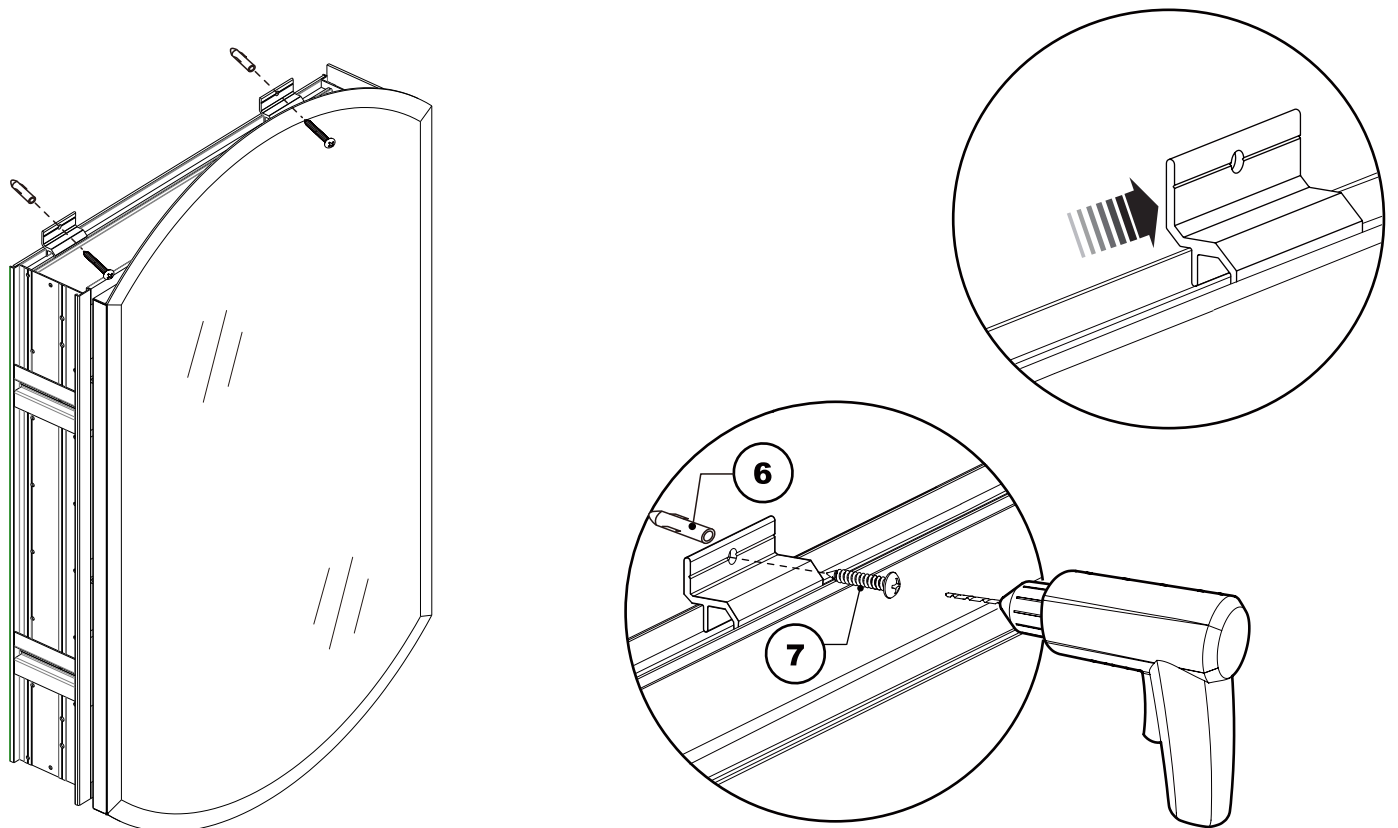

**REMOVE THE TAPE FROM THE SIDE BRACKETS
BEFORE INSTALLING THE SIDE PANELS**




*Retire la cinta de los soportes laterales
antes de instalar los paneles laterales*

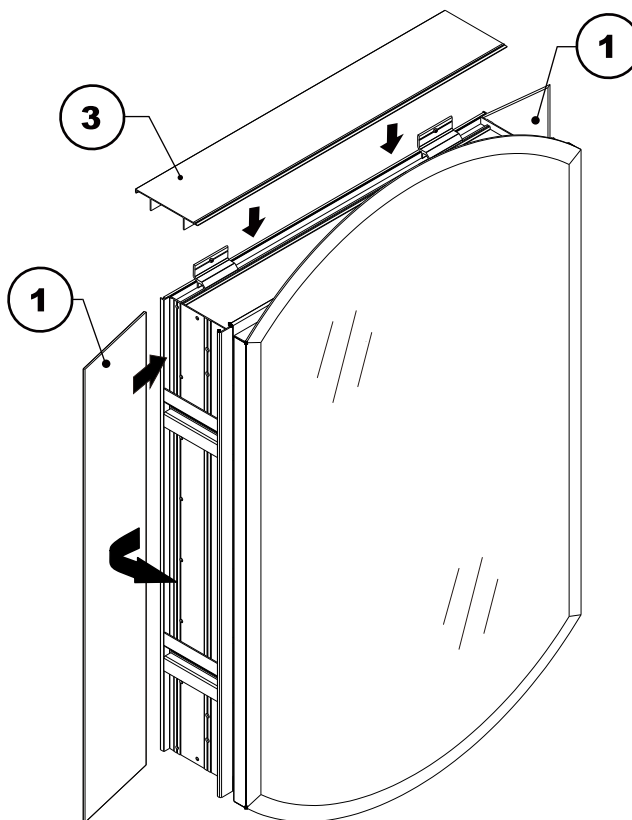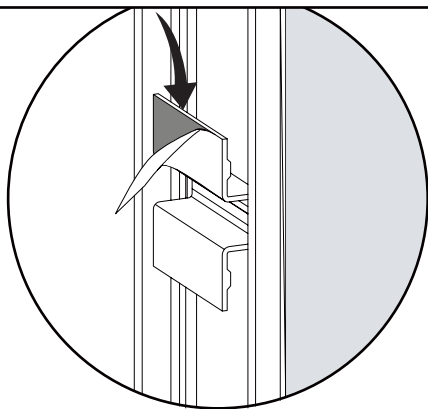

10 INSTALL THE SHELF SUPPORT PEG / INSTALAR LA CLAVO DE SOPORTE DEL ESTANTE


**THESE PERFORATIONS ALLOW THE
HEIGHT ADJUSTMENT OF THE SHELVES**

*Estas perforaciones permiten el
ajuste de altura de los estantes*

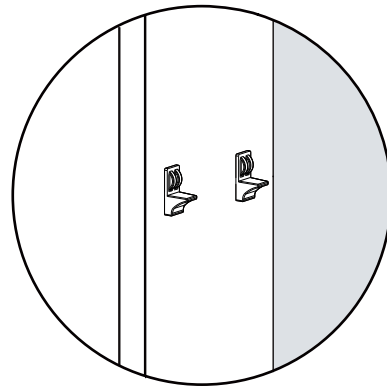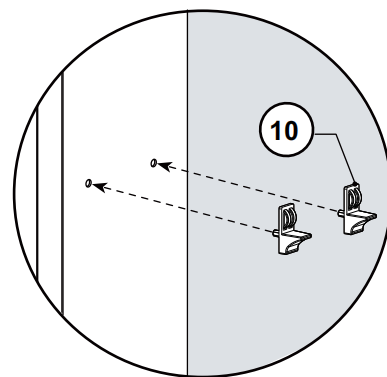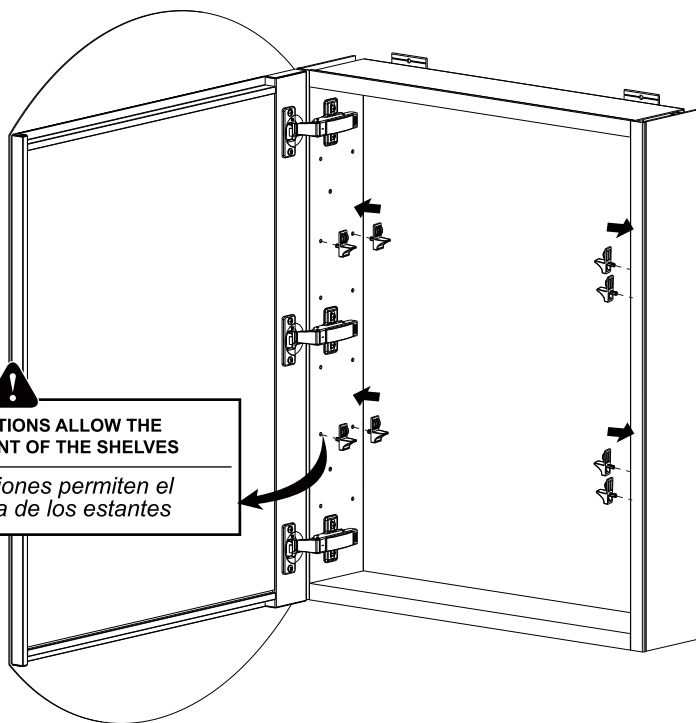





11

INSTALL THE GLASS SHELVES AND THE HOLE CAPS / INSTALAR LOS ESTANTES DE VIDRIO LAS TAPAS DE LOS AGUJEROS

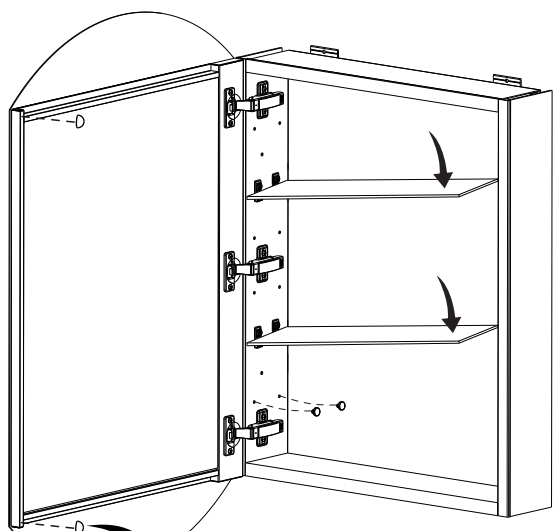

**INSTALL THE ANTI-COLLISION
BUMPERS.**


Instale las perlas de antiimpacto.

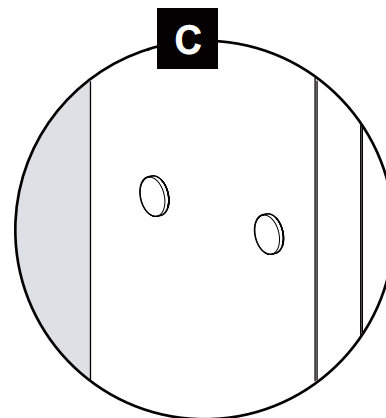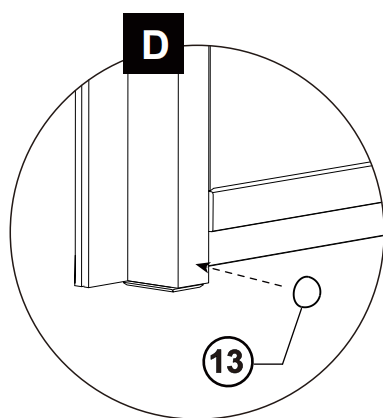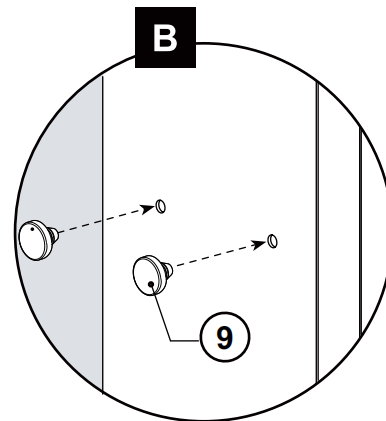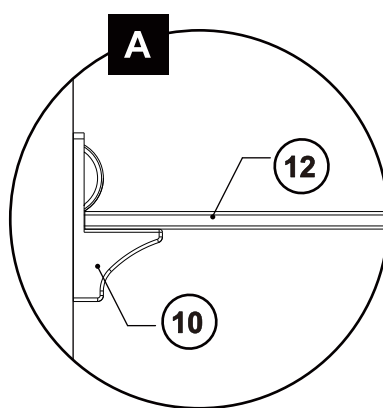


12

ADJUST THE DOORS / AJUSTAR LAS PUERTAS


ADJUST THE GAP BETWEEN DOOR AND CABINET / Ajustar el espacio entre la puerta y el armario

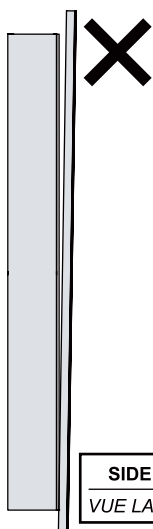


**SIDE VIEW
VUE LATÉRALE**

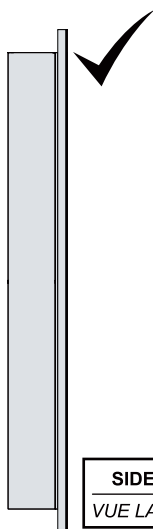


**SIDE VIEW
VUE LATÉRALE**

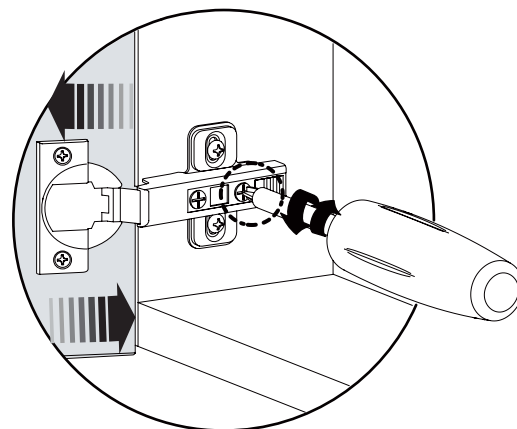

1 REMOVE THE SIDE MOUNTED BRACKET / RETIRAR EL SOPORTE LATERAL

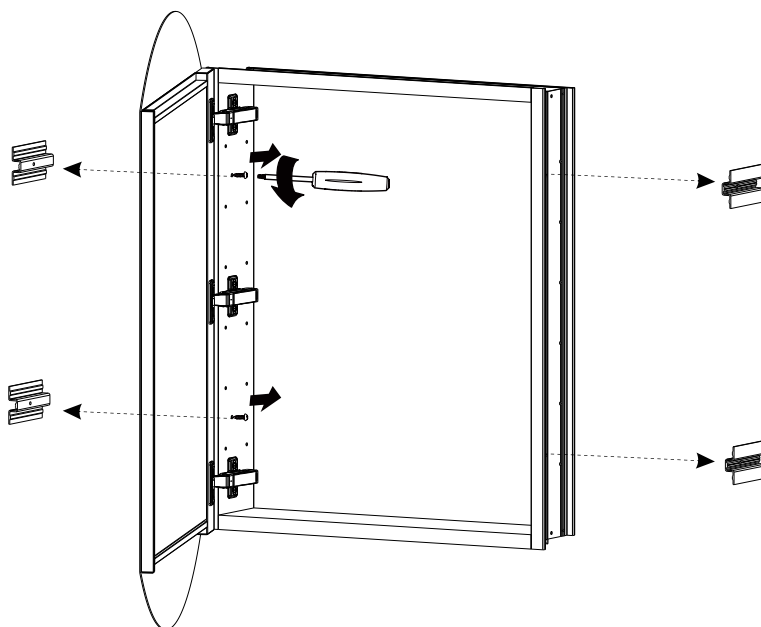

2 LEVEL AND MARK THE DIMENSION FOR RECESSED CABINET
NIVELAR Y MARCAR LAS DIMENSIONES PARA EL ARMARIO EMPOTRADO

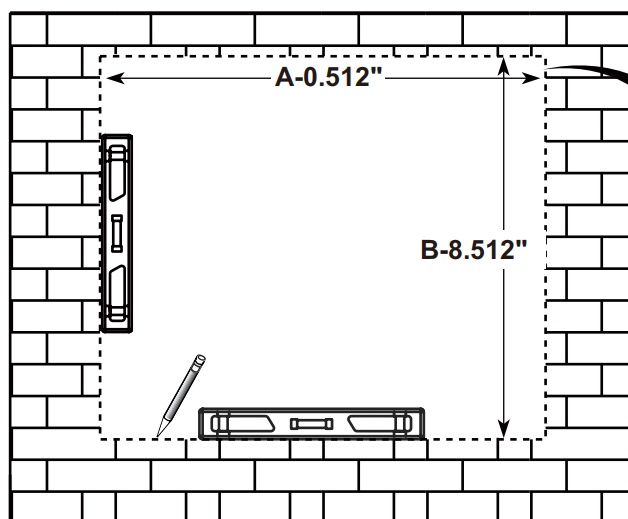


* REFER TO PAGES 4 FOR CUTOUT SIZE SPECIFICATIONS

CONSULTE LAS PÁGINAS 4 PARA LAS ESPECIFICACIONES DEL TAMAÑO DEL CORTE



IT IS RECOMMENDED TO HAVE THIS STAGE CARRIED OUT BY A PROFESSIONAL


Se recomienda que esta etapa sea realizada por un profesional

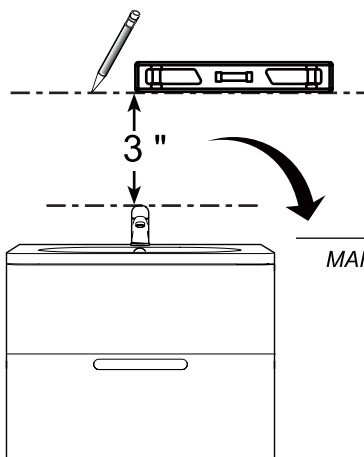



KEEP 3\"



MANTENER UNA DISTANCIA MÍNIMA DE 3\"

3 PLACE THE CABINET INTO THE WALL / COLOCAR EL ARMARIO EN LA PARED

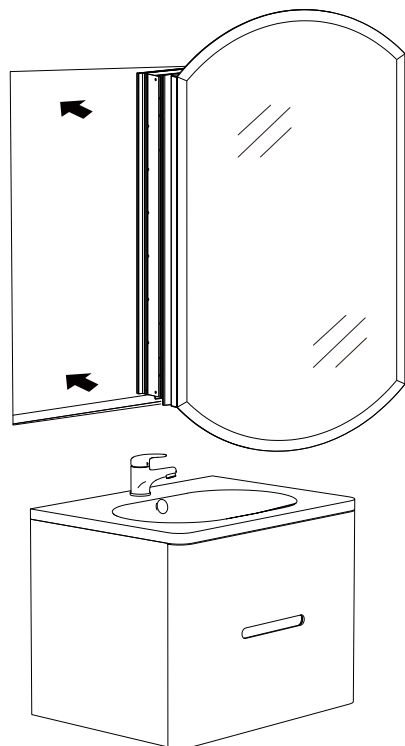


4 SECURE THE MEDICINE CABINET INTO THE WALL / FIJAR EL ARMARIO DE MEDICINA A LA PARED

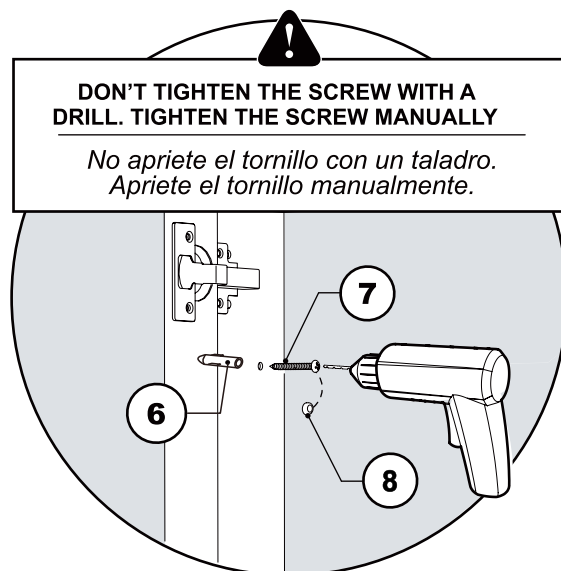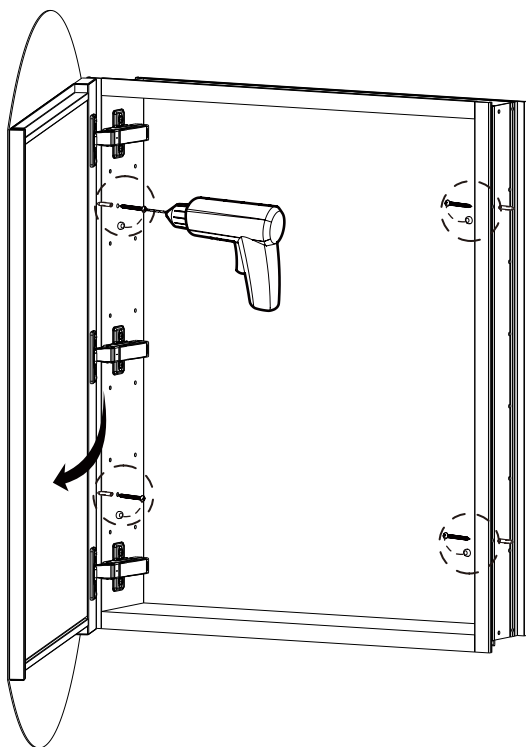

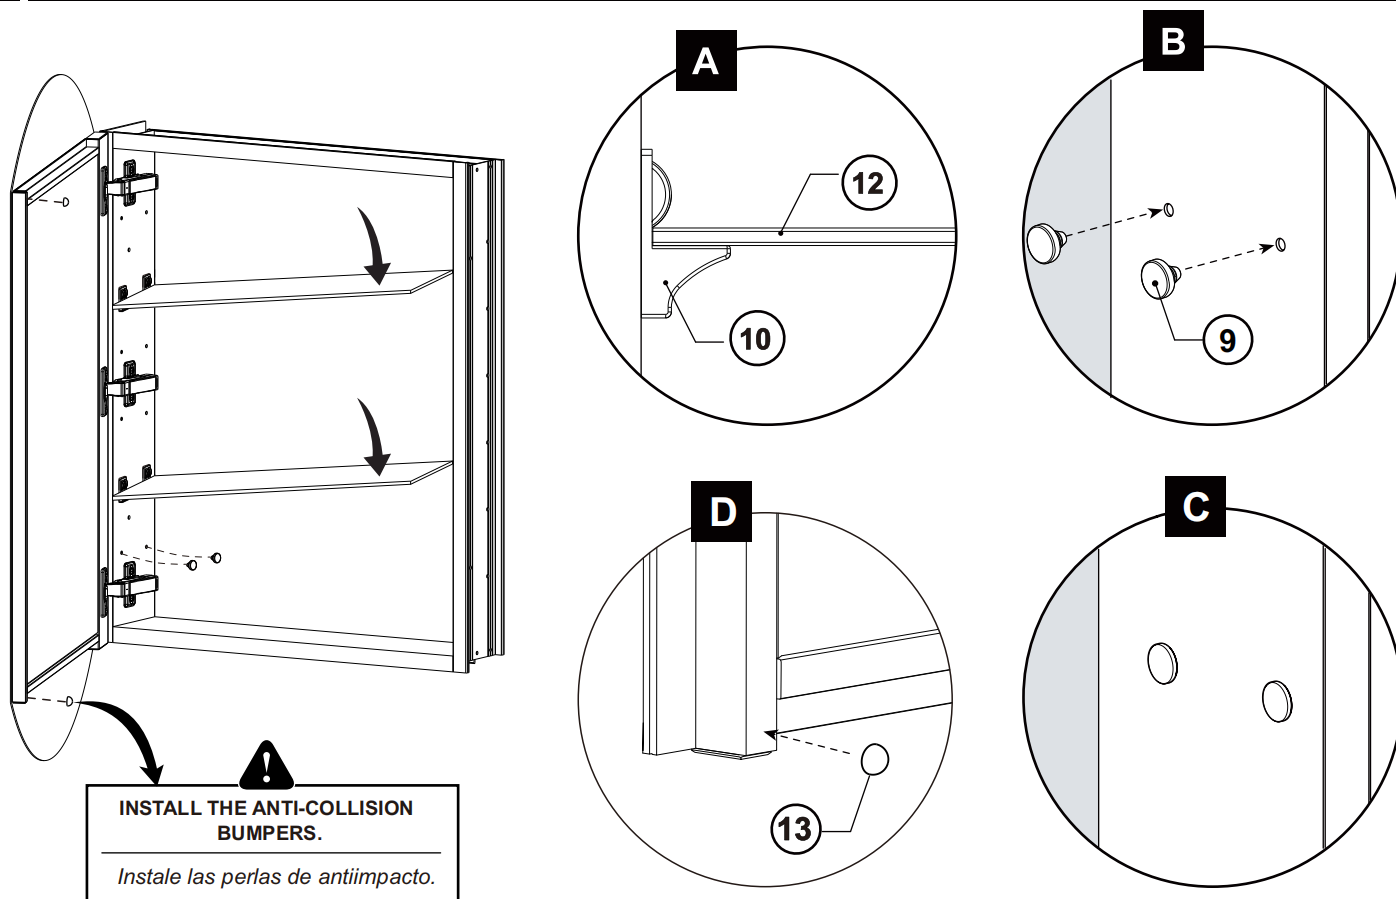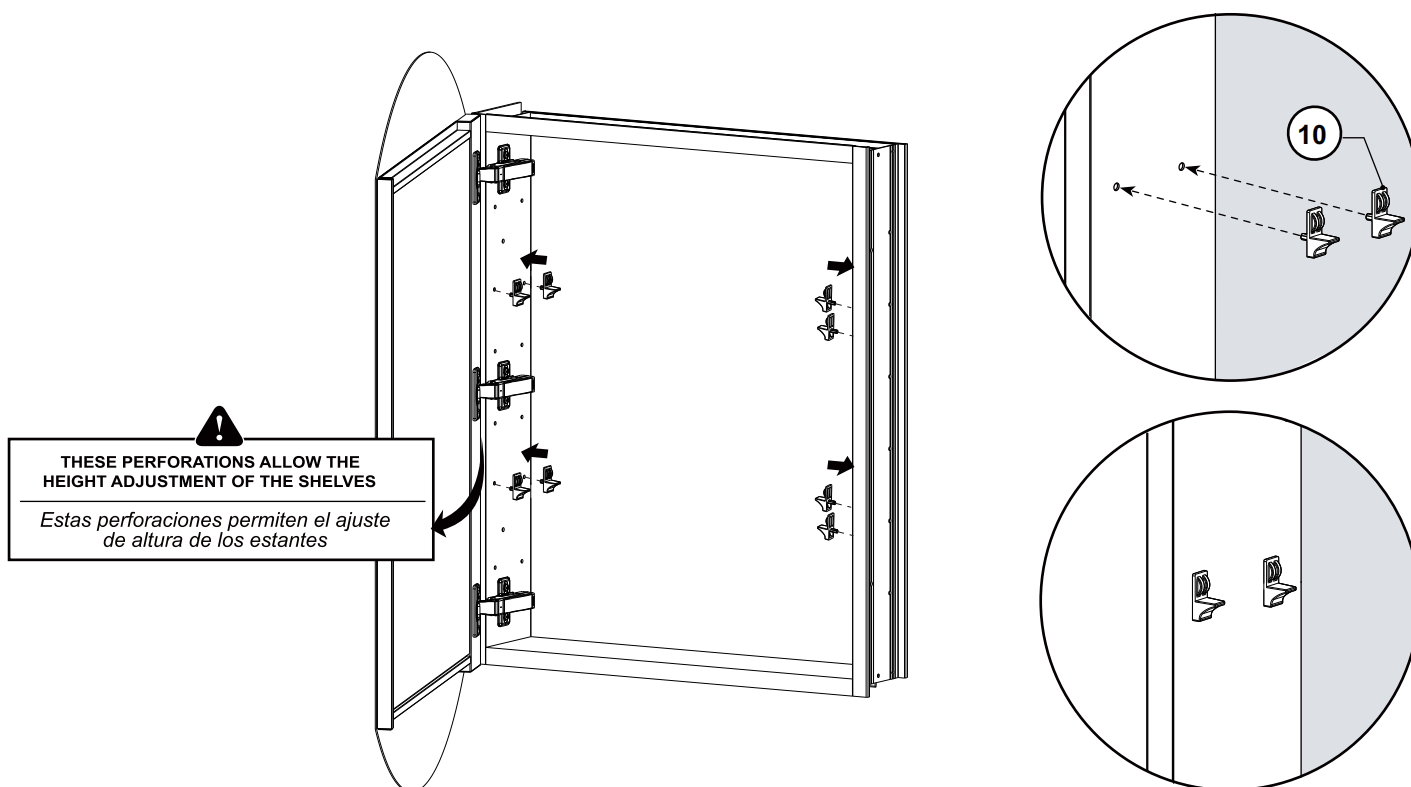

A ADJUST THE GAP BETWEEN DOOR AND CABINET / AJUSTER L'ESPACE ENTRE LA PORTE ET LE CABINET

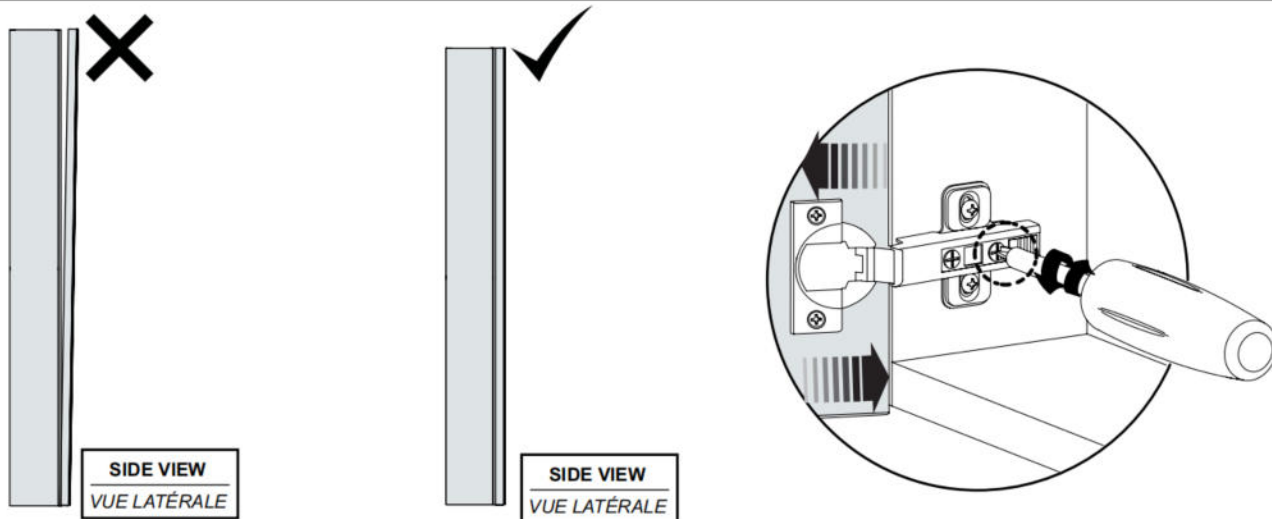

B ADJUST THE GAP BETWEEN DOORS / AJUSTER L'ESPACE ENTRE LES PORTES

