
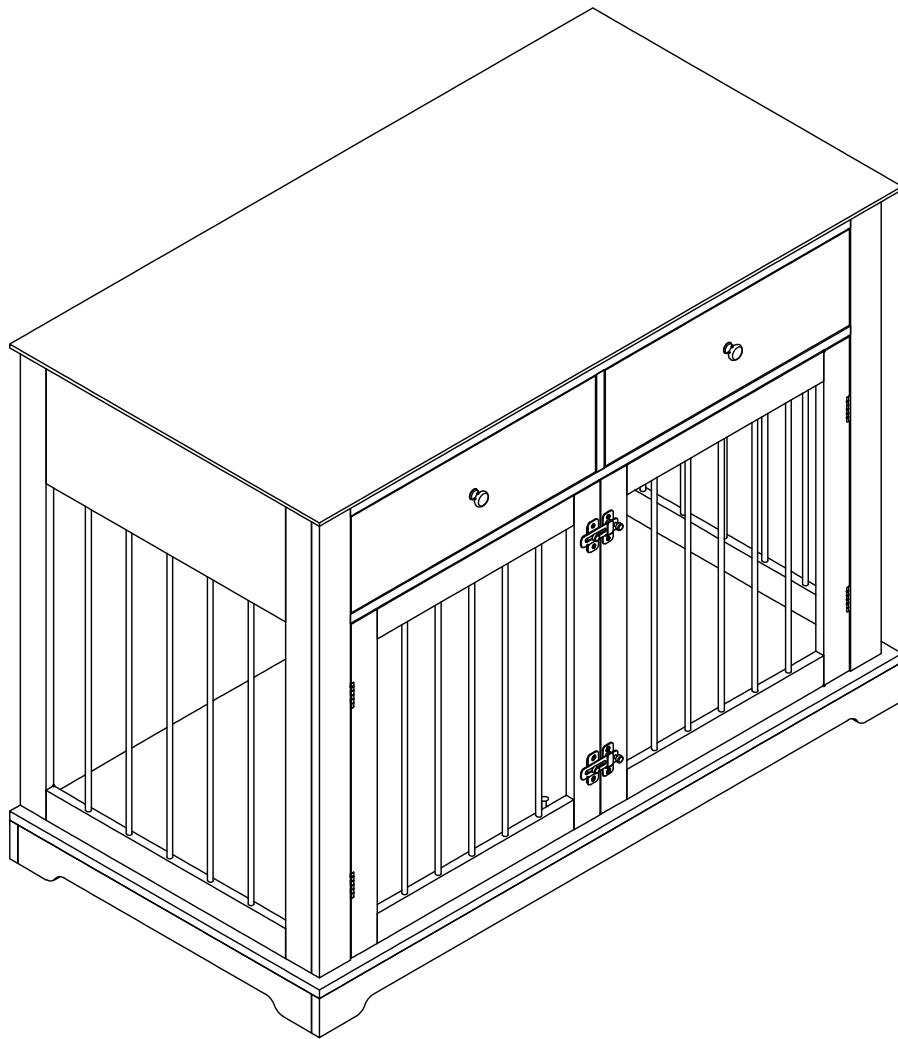



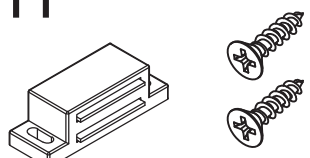

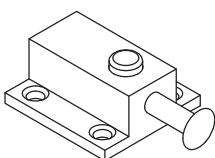
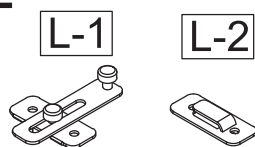
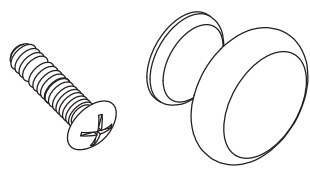














IMPORTANT INSTRUCTIONS AND OPERATING MANUAL

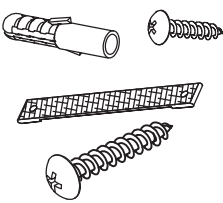






Parts list

A  52PCS	B  52PCS	C  20PCS	D  34PCS
E  70PCS	F  3PCS	G  10PCS	H  1SET
J  4PCS	K  2PCS	L  2SET	M  2SET
CL Packing by pearl cotton, don't discard by mistake.  2PCS	CR Packing by pearl cotton, don't discard by mistake.  2PCS	DL  2PCS	DR  2PCS
N  2SET			


Parts list

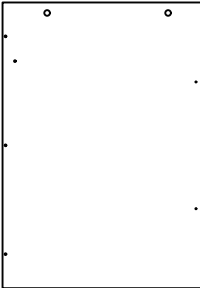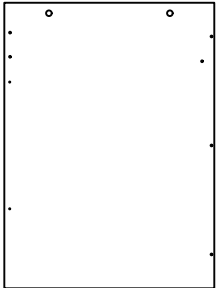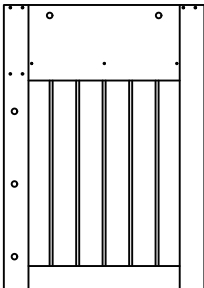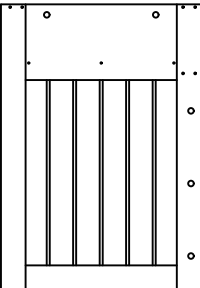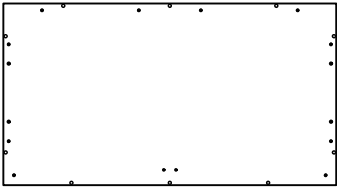① 	② 	③ 
④ 	⑤ 	⑥ 
⑦ 	⑧ 	⑨  x 2
⑩ 	⑪ 	⑫ 
⑬ 	⑭ 	⑮  x 2

Parts list

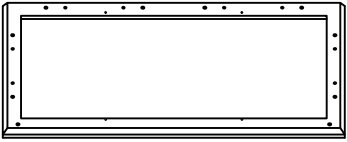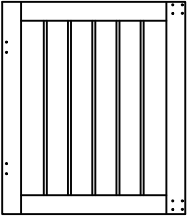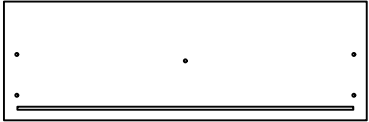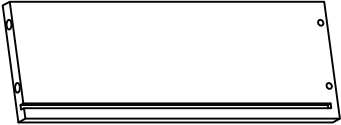

16 	17 	18  x 2
19  x 2	20  x 2	21  x 2
22  x 2		

Parts list

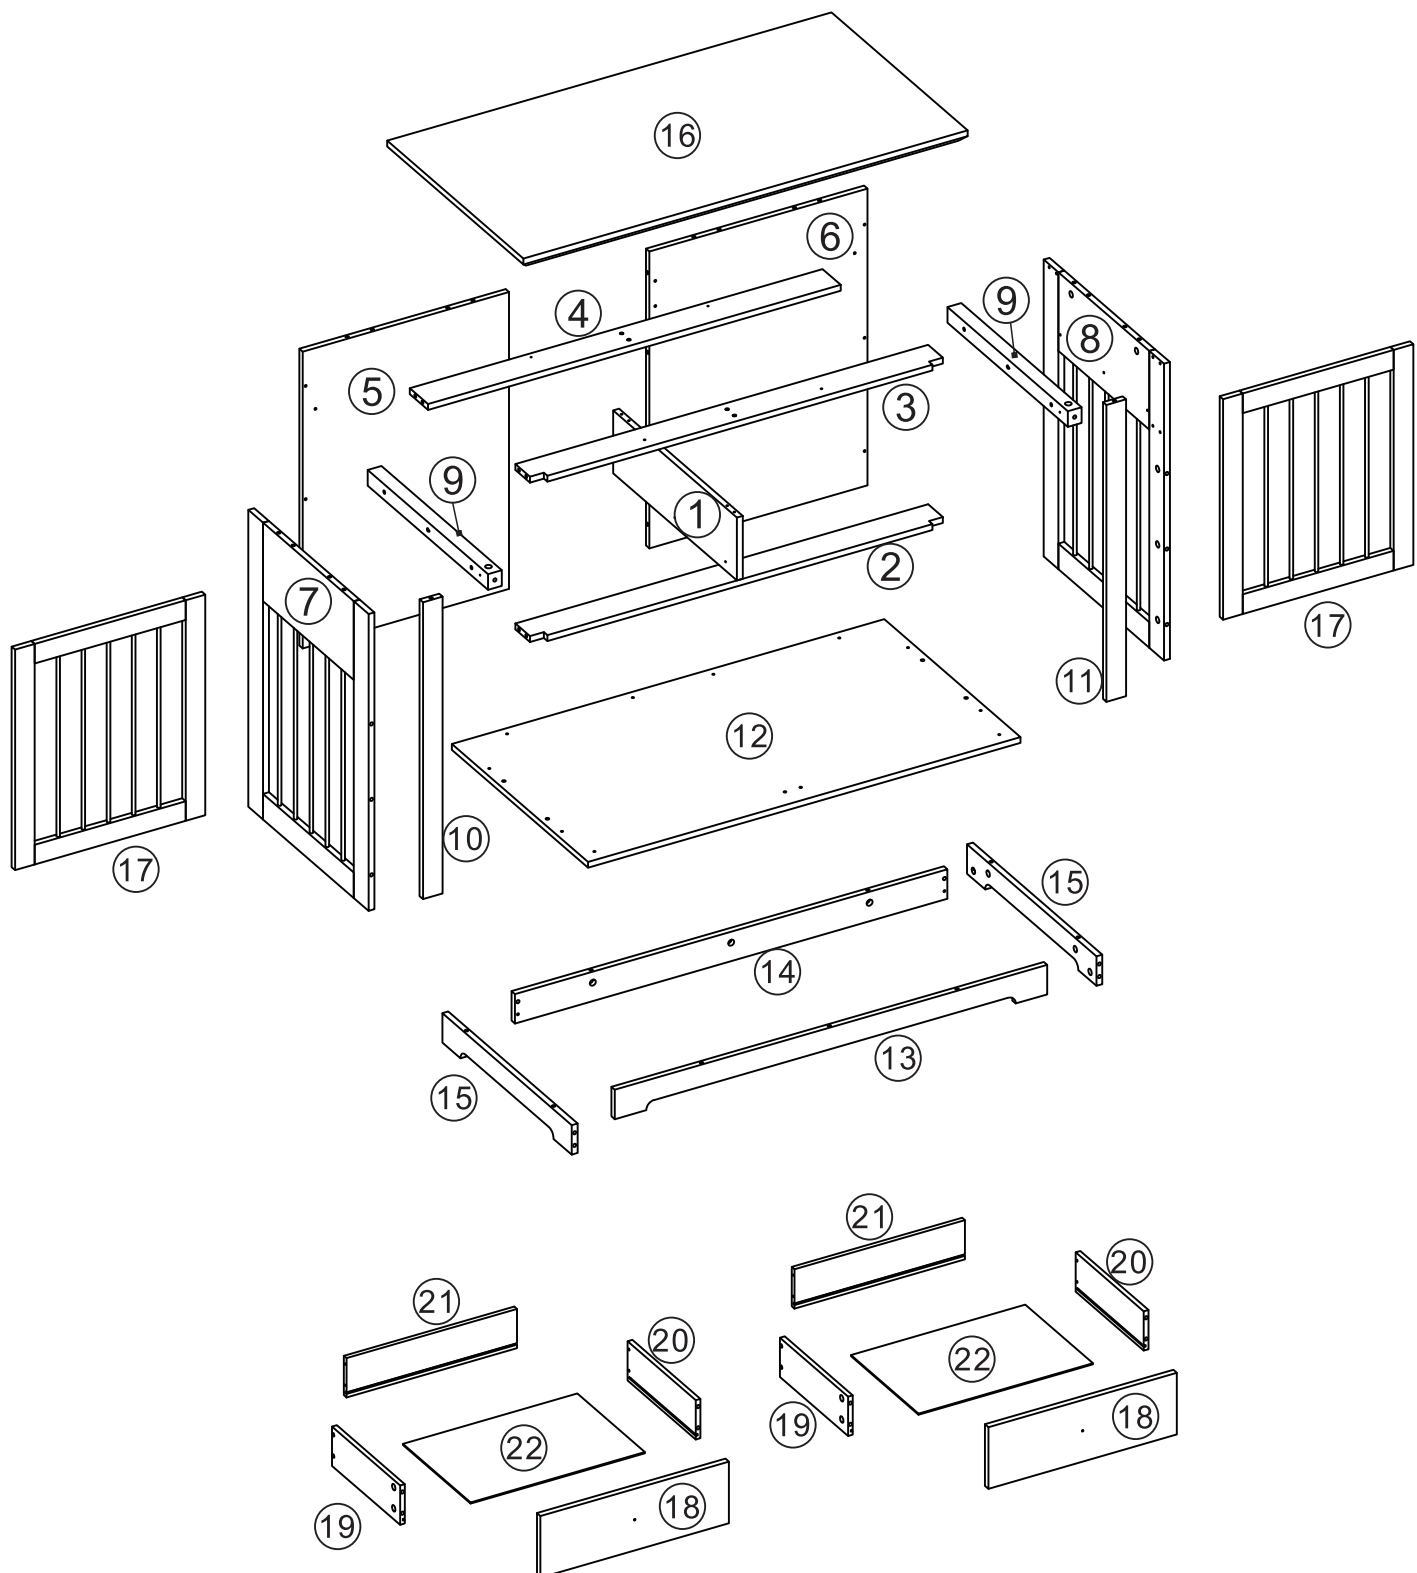

Installation steps



STEP 1

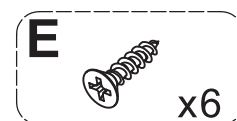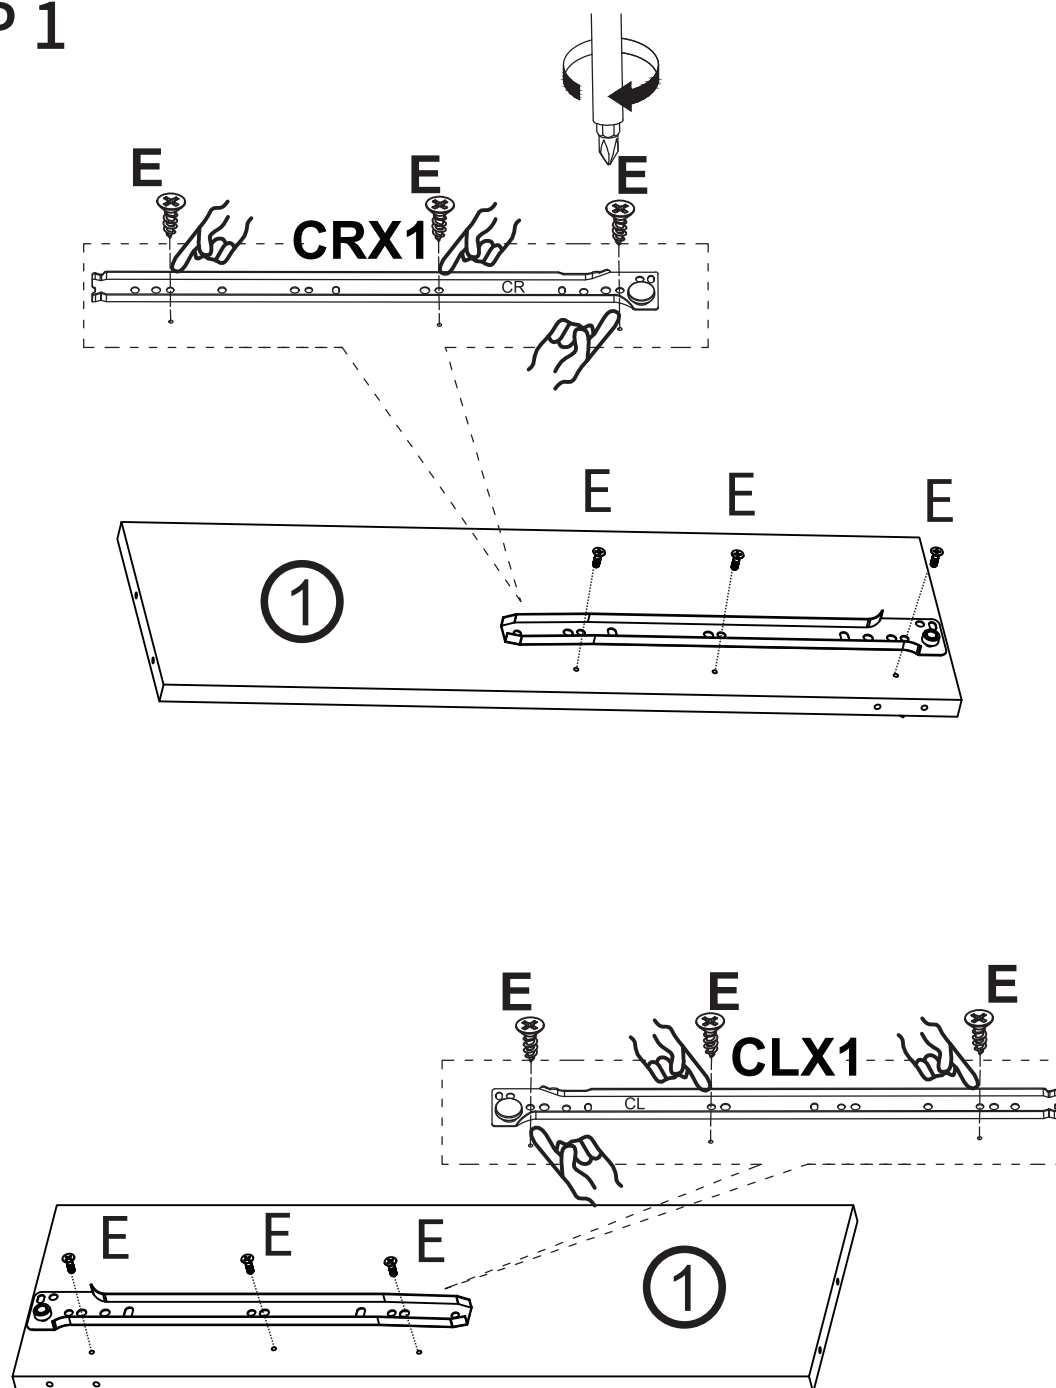

Installation steps






STEP 2

Please note that the holes in the circled area should be oriented as shown in the illustration.

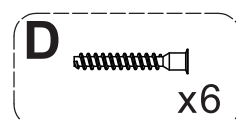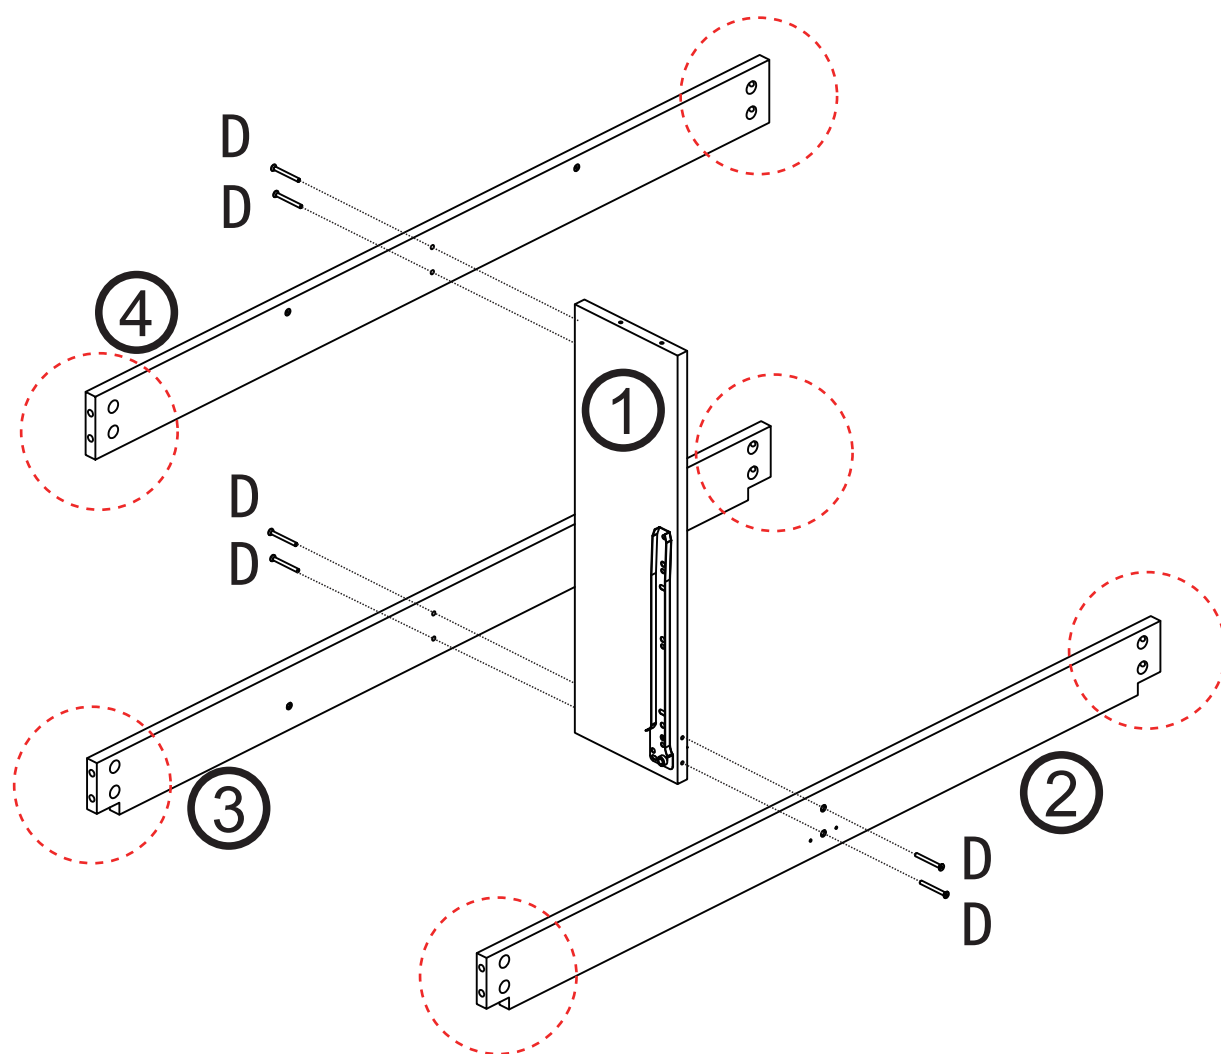




Installation steps

STEP 3

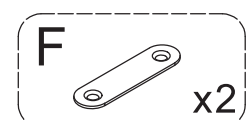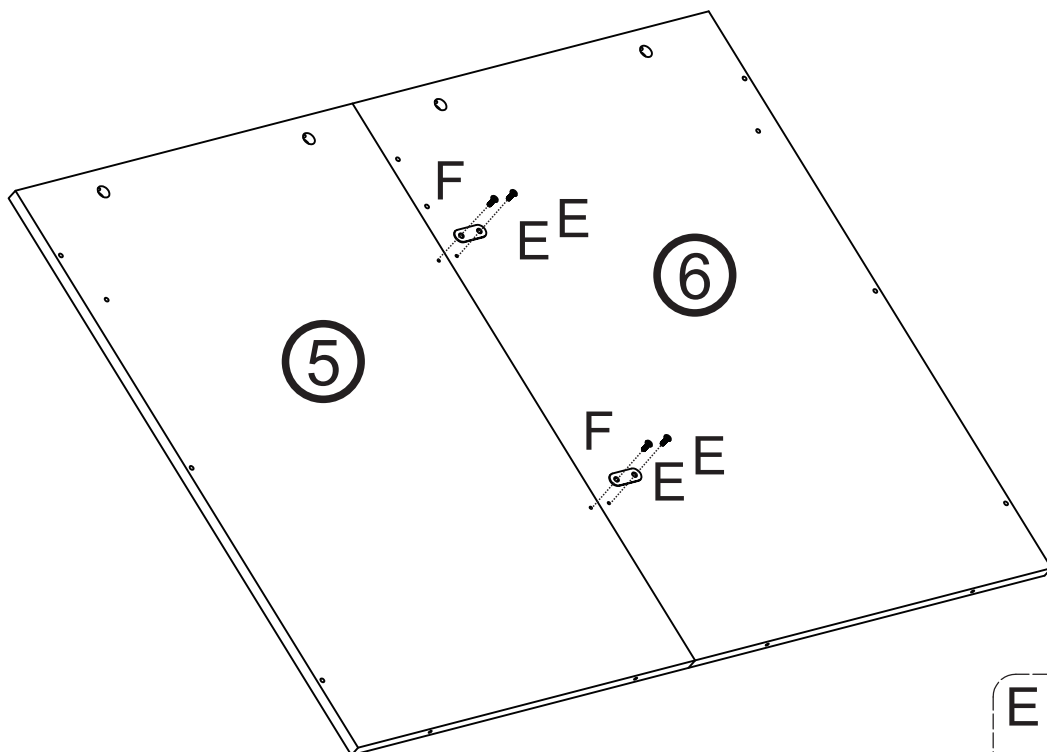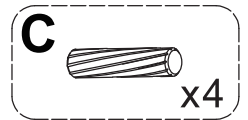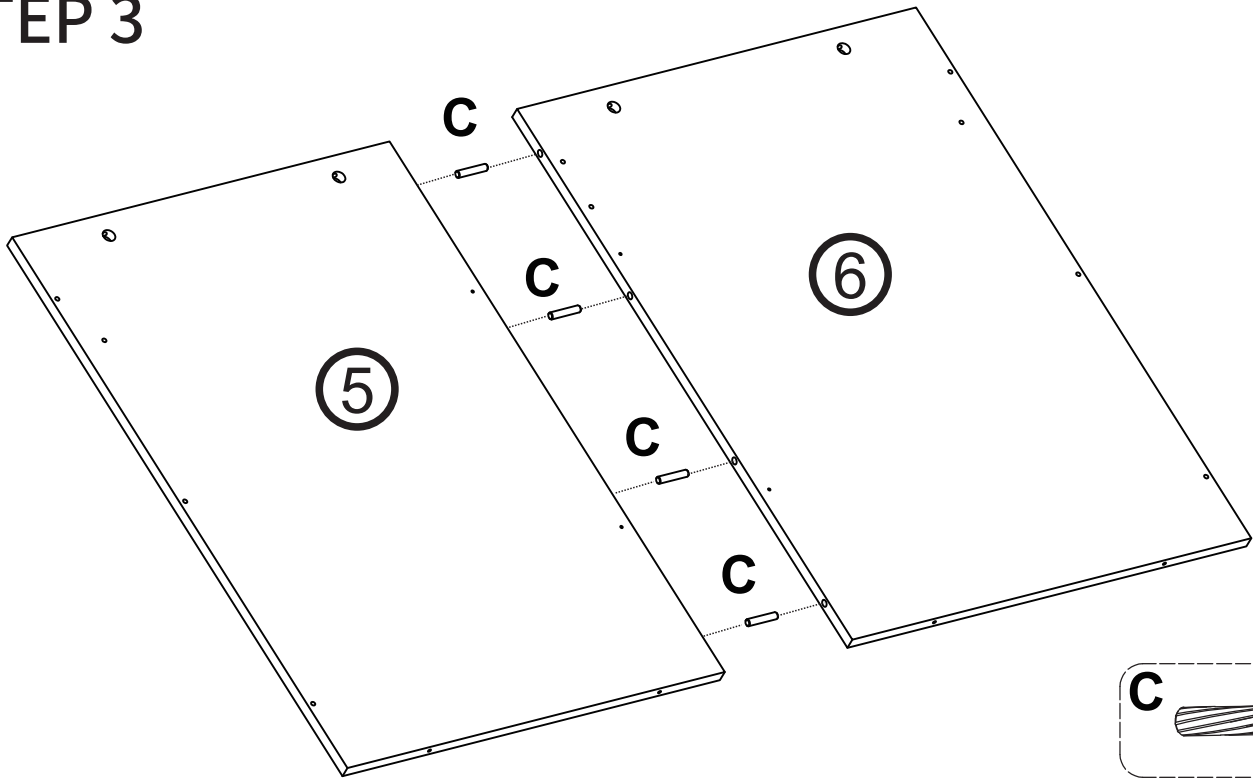

Installation steps


STEP 4

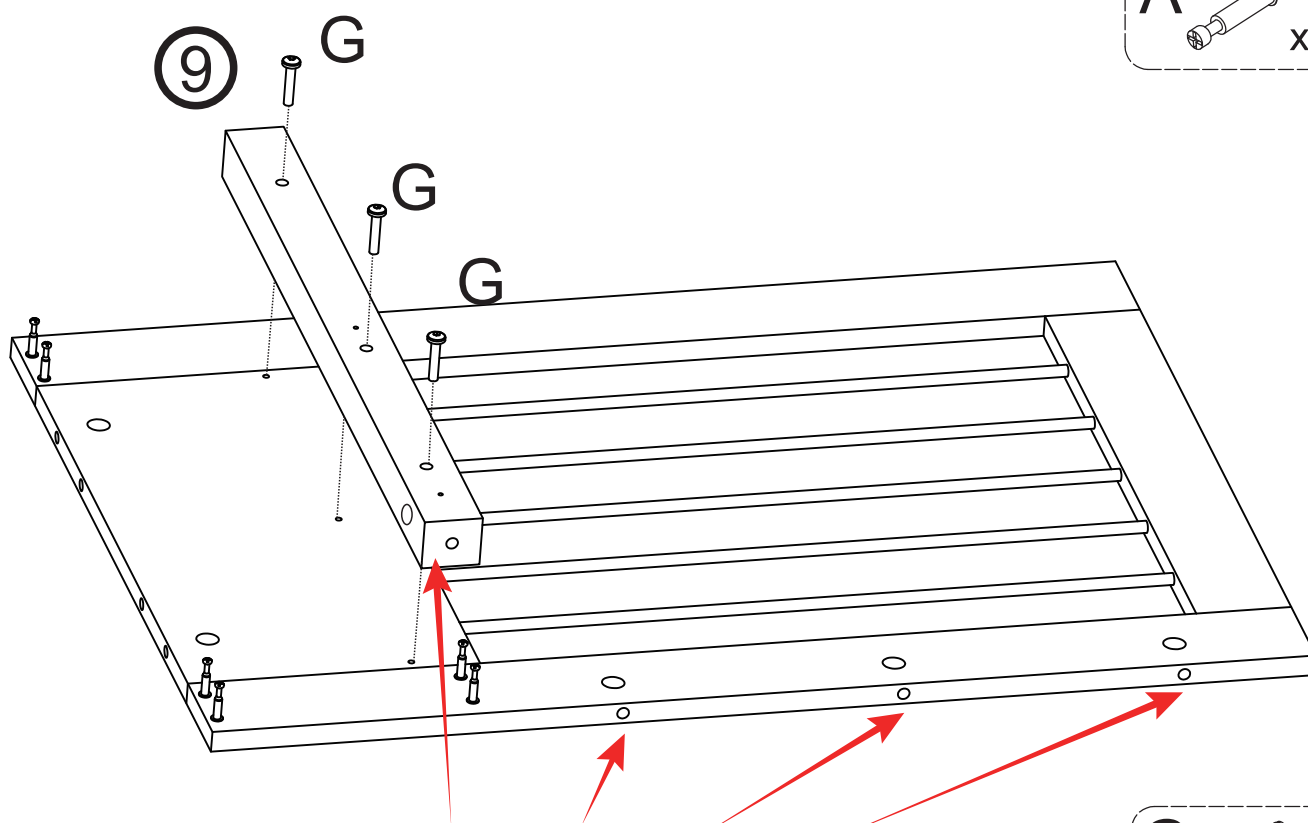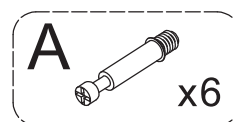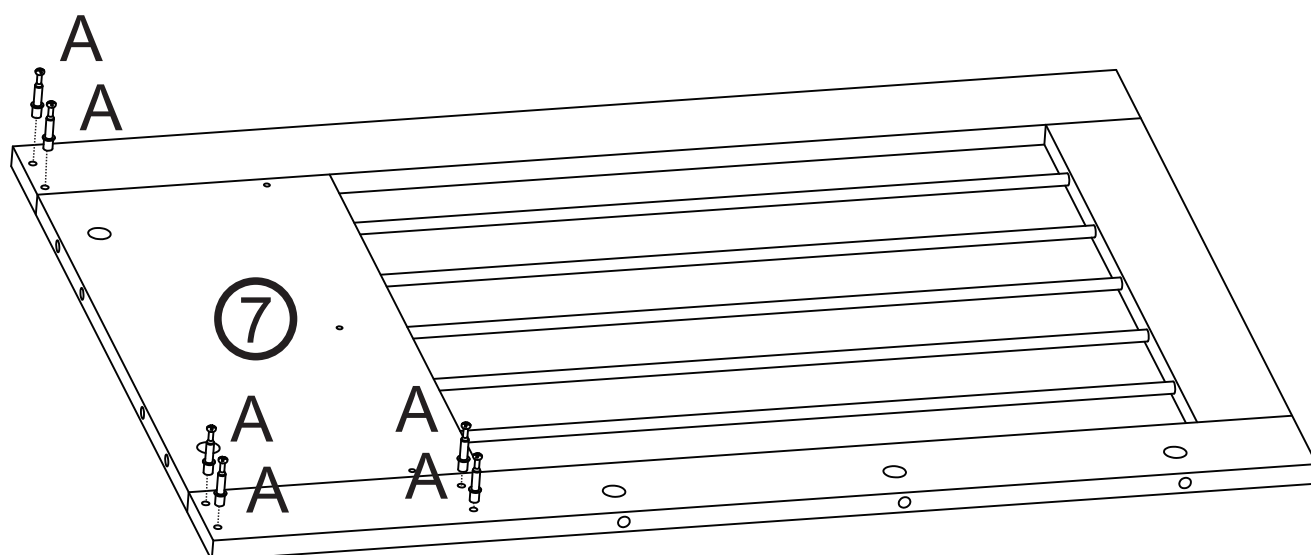

Please note that the hole indicated on part 9 should be on the same side as the hole indicated on part 7.

Installation steps

STEP 5

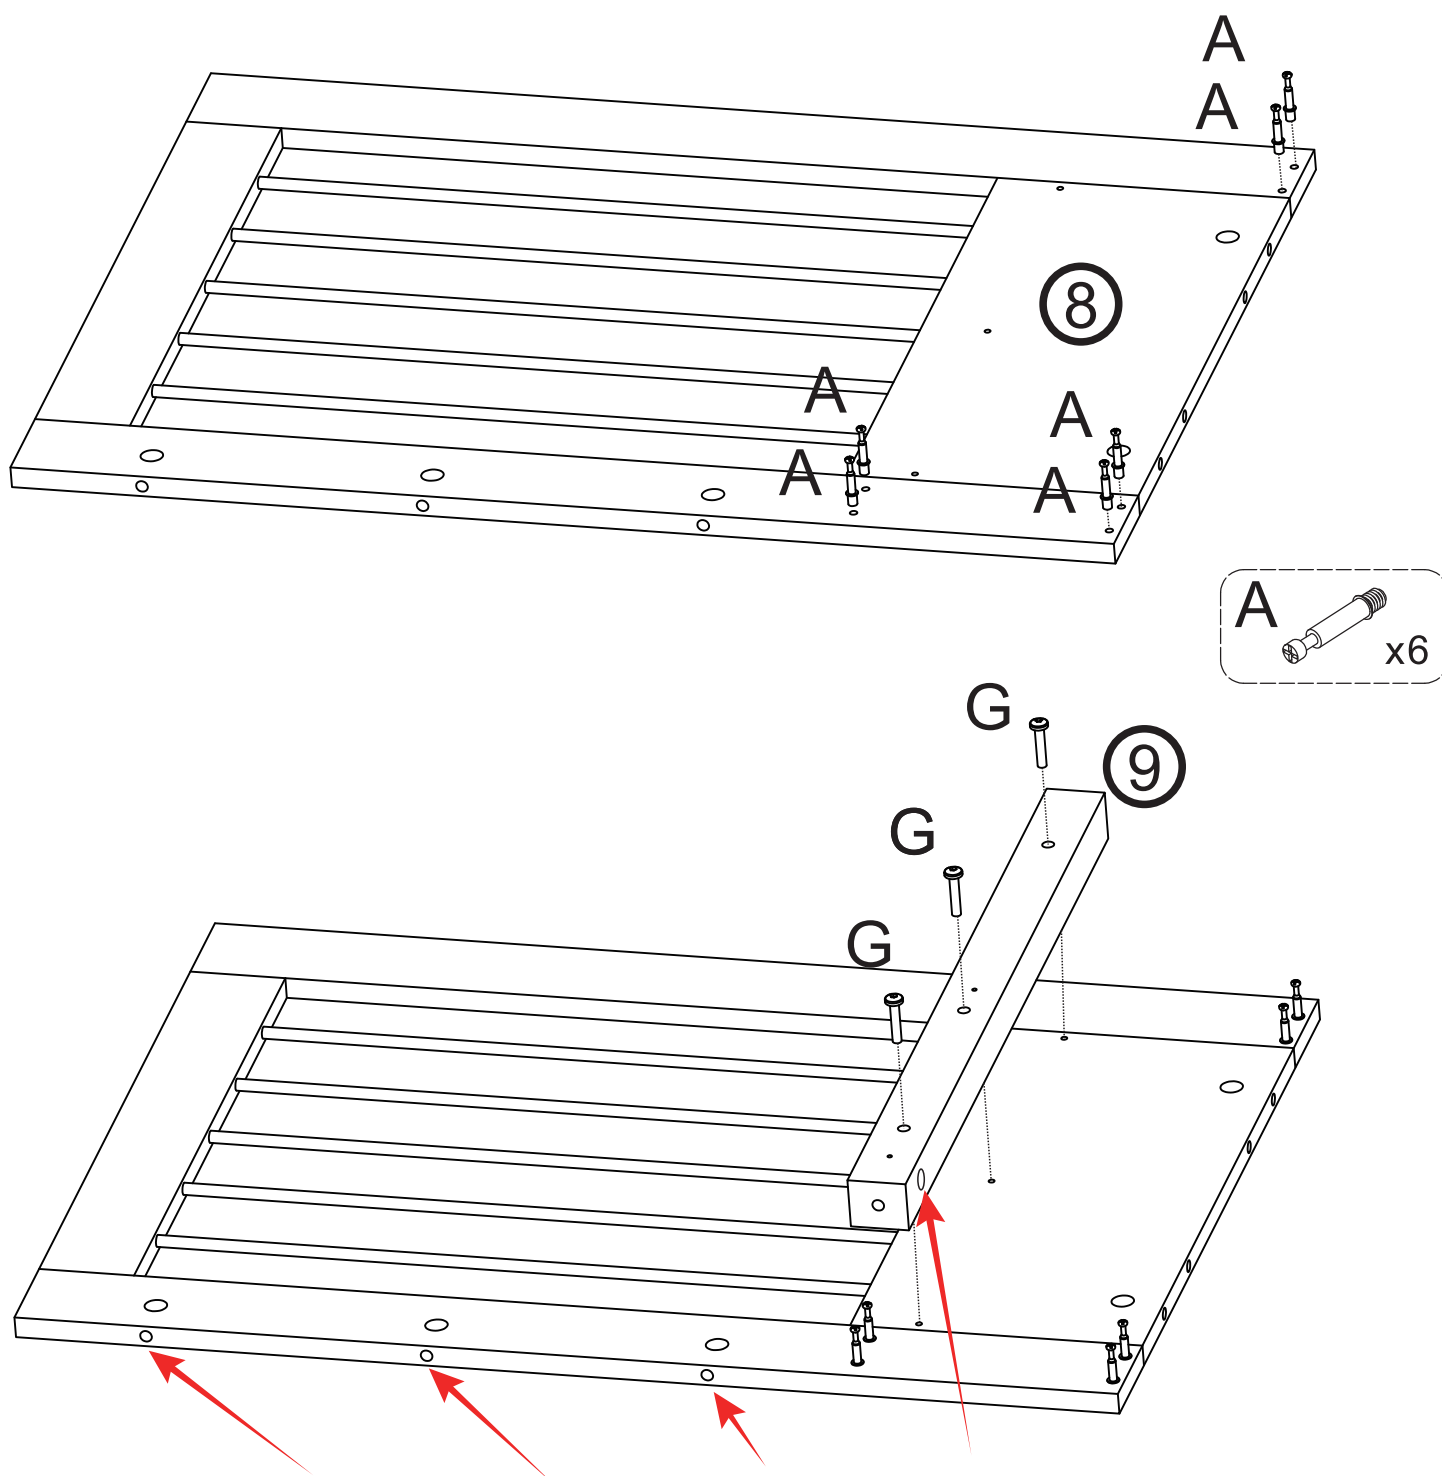


Please note that the hole indicated on part 9 should be on the same side as the hole indicated on part 8.



Installation steps



STEP 6

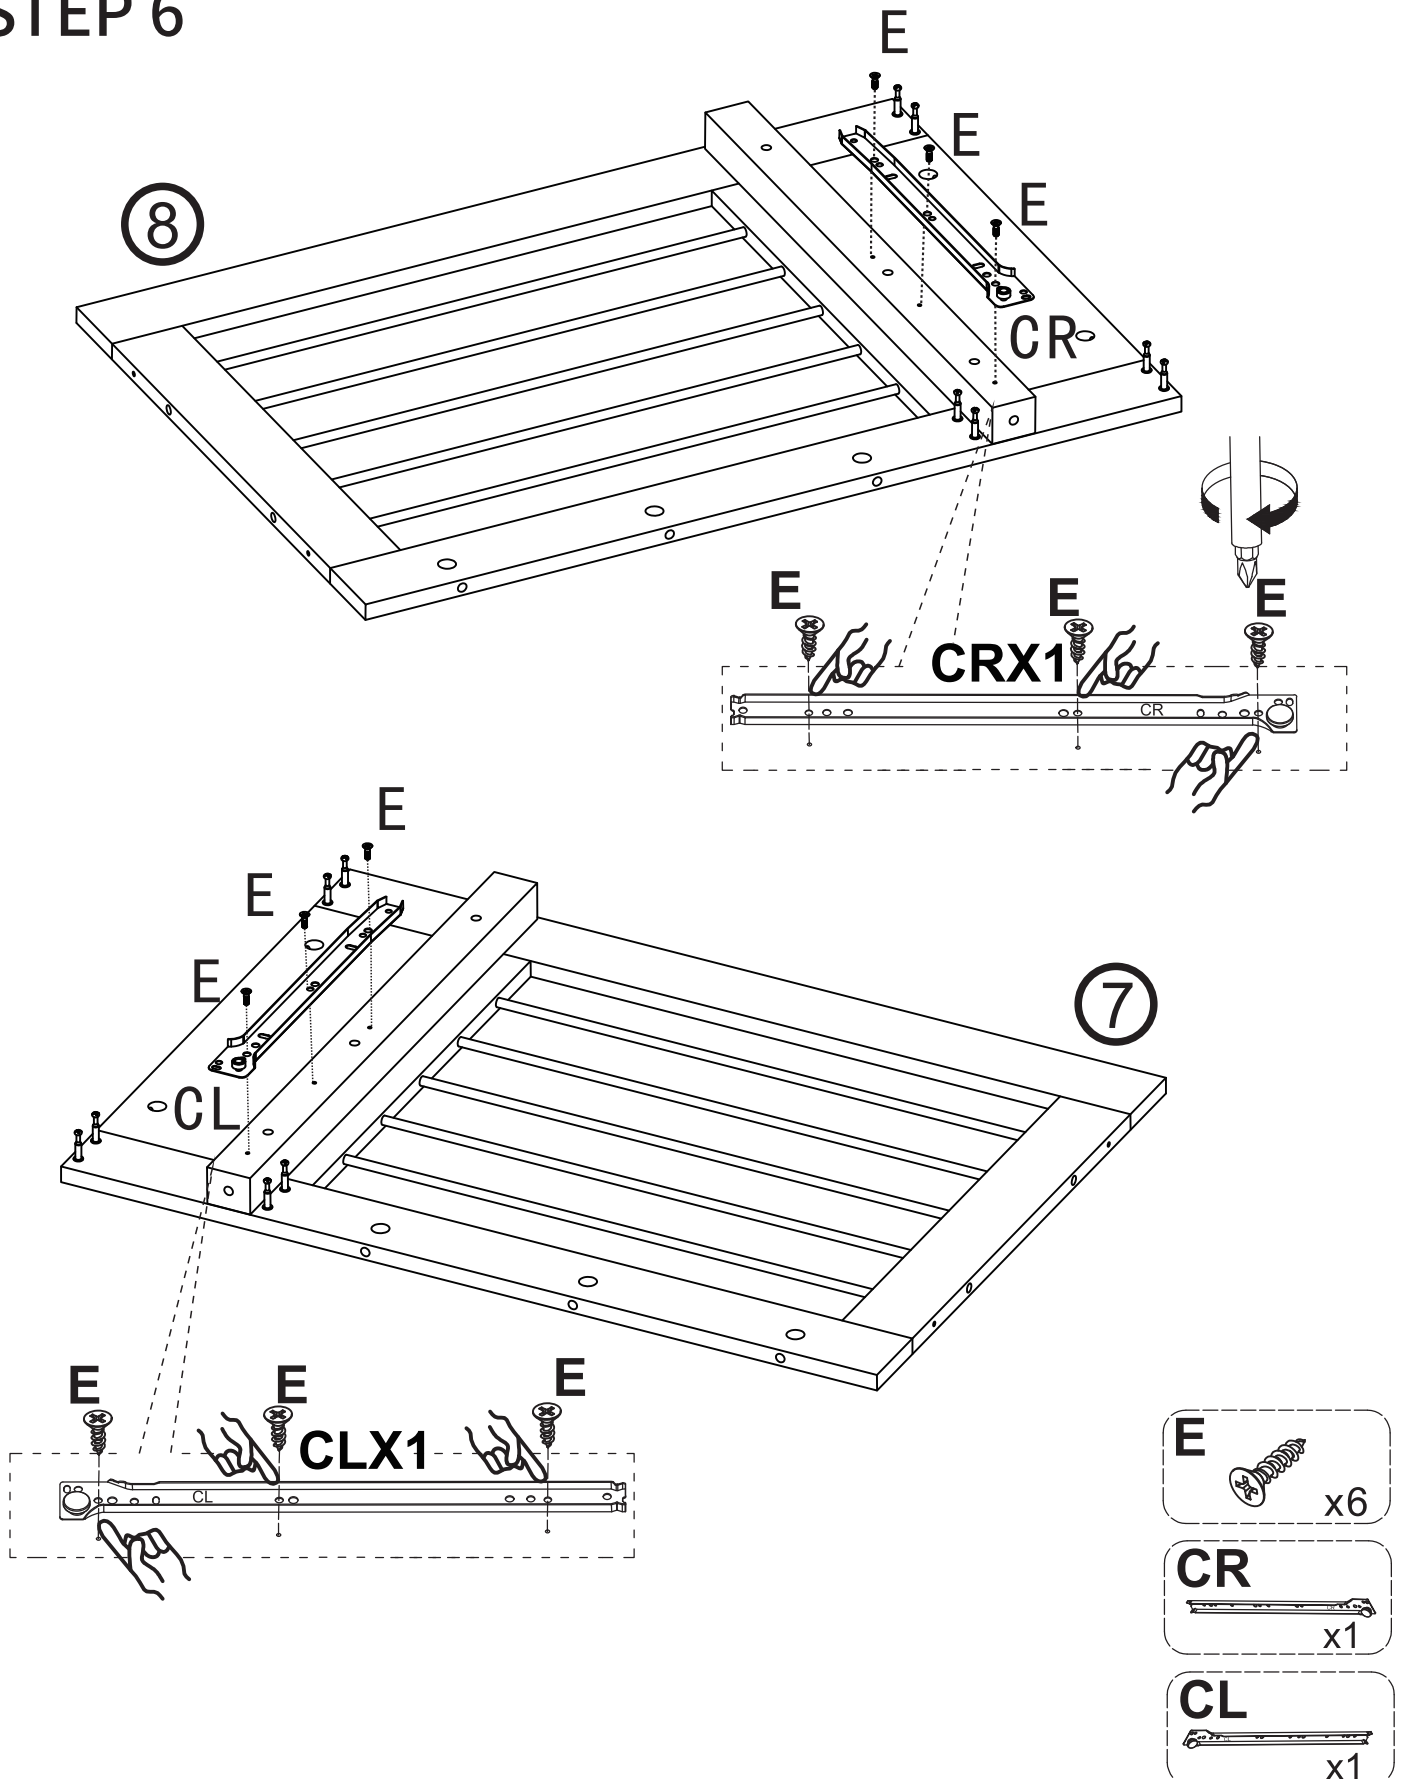

Installation steps



STEP 7

The side with the magnet should face outward.

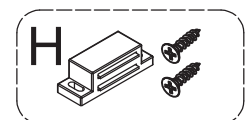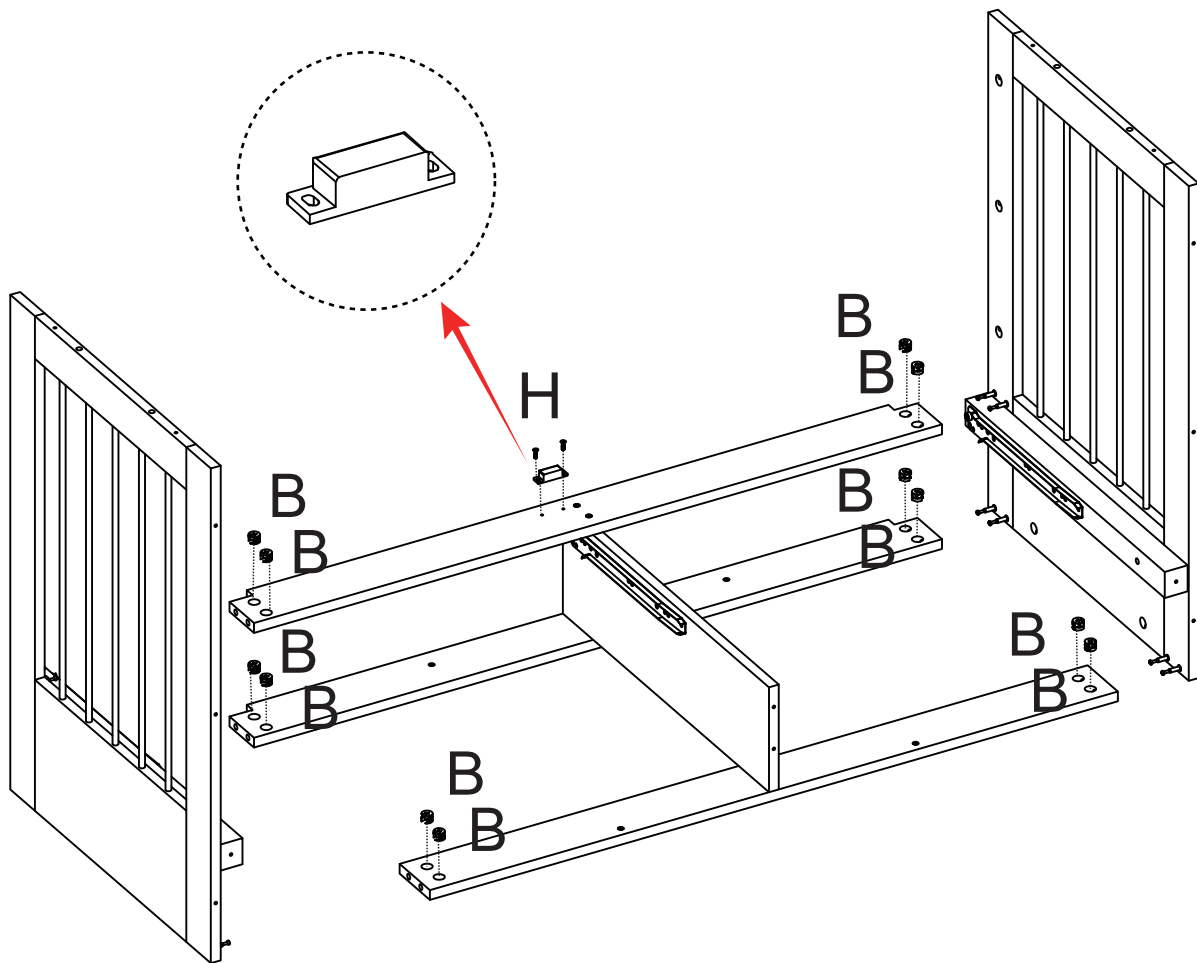




Installation steps

STEP 8

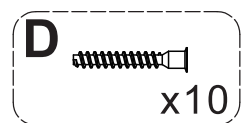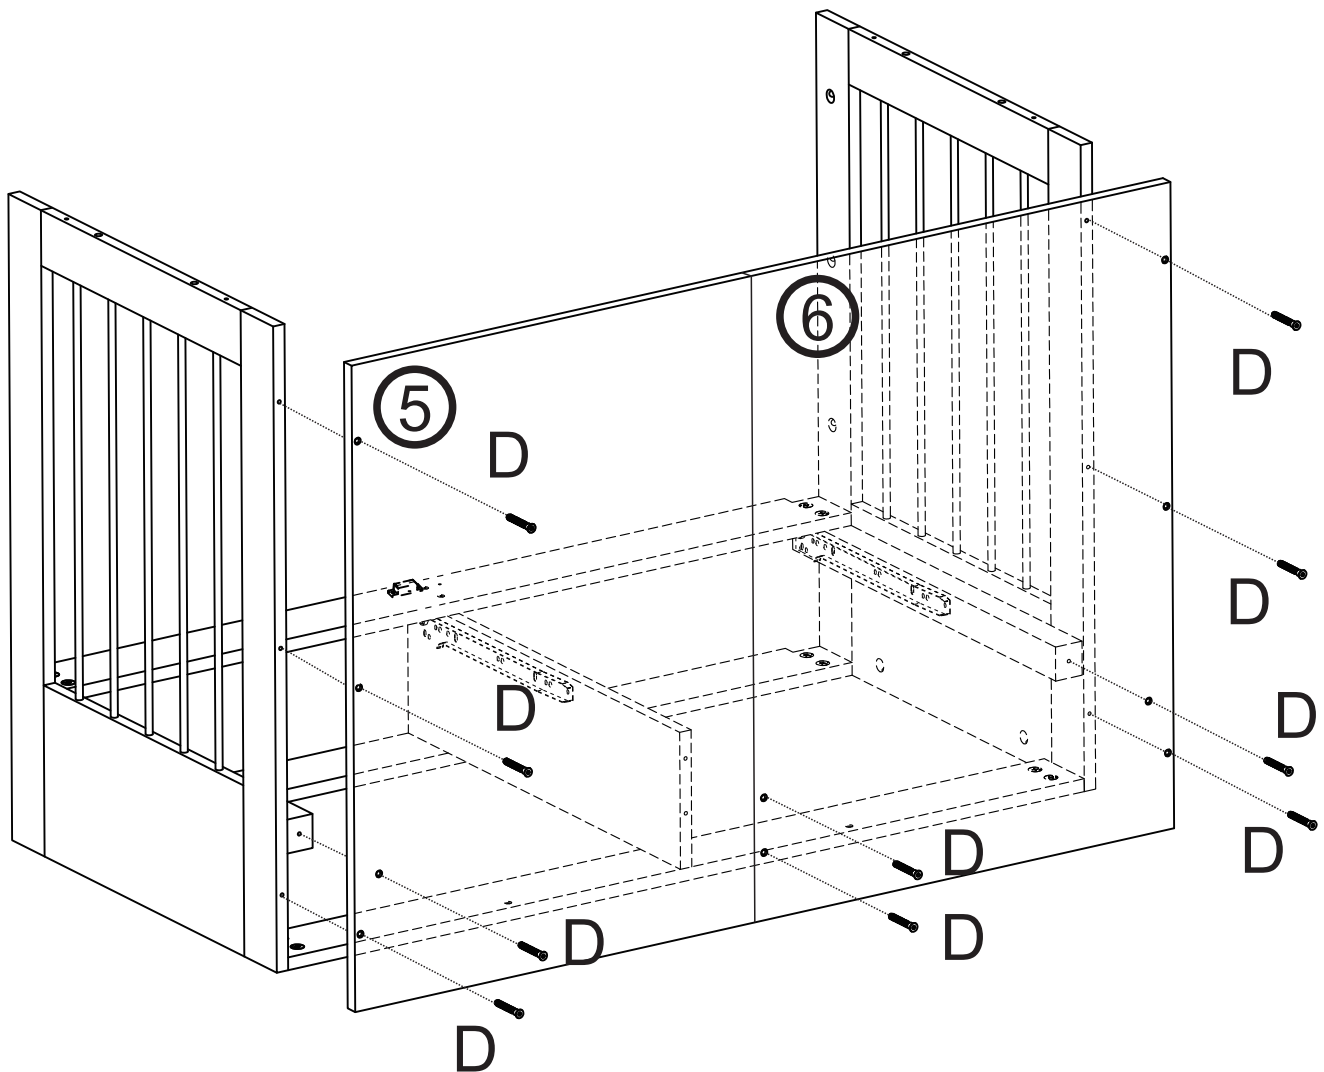


Installation steps

STEP 9

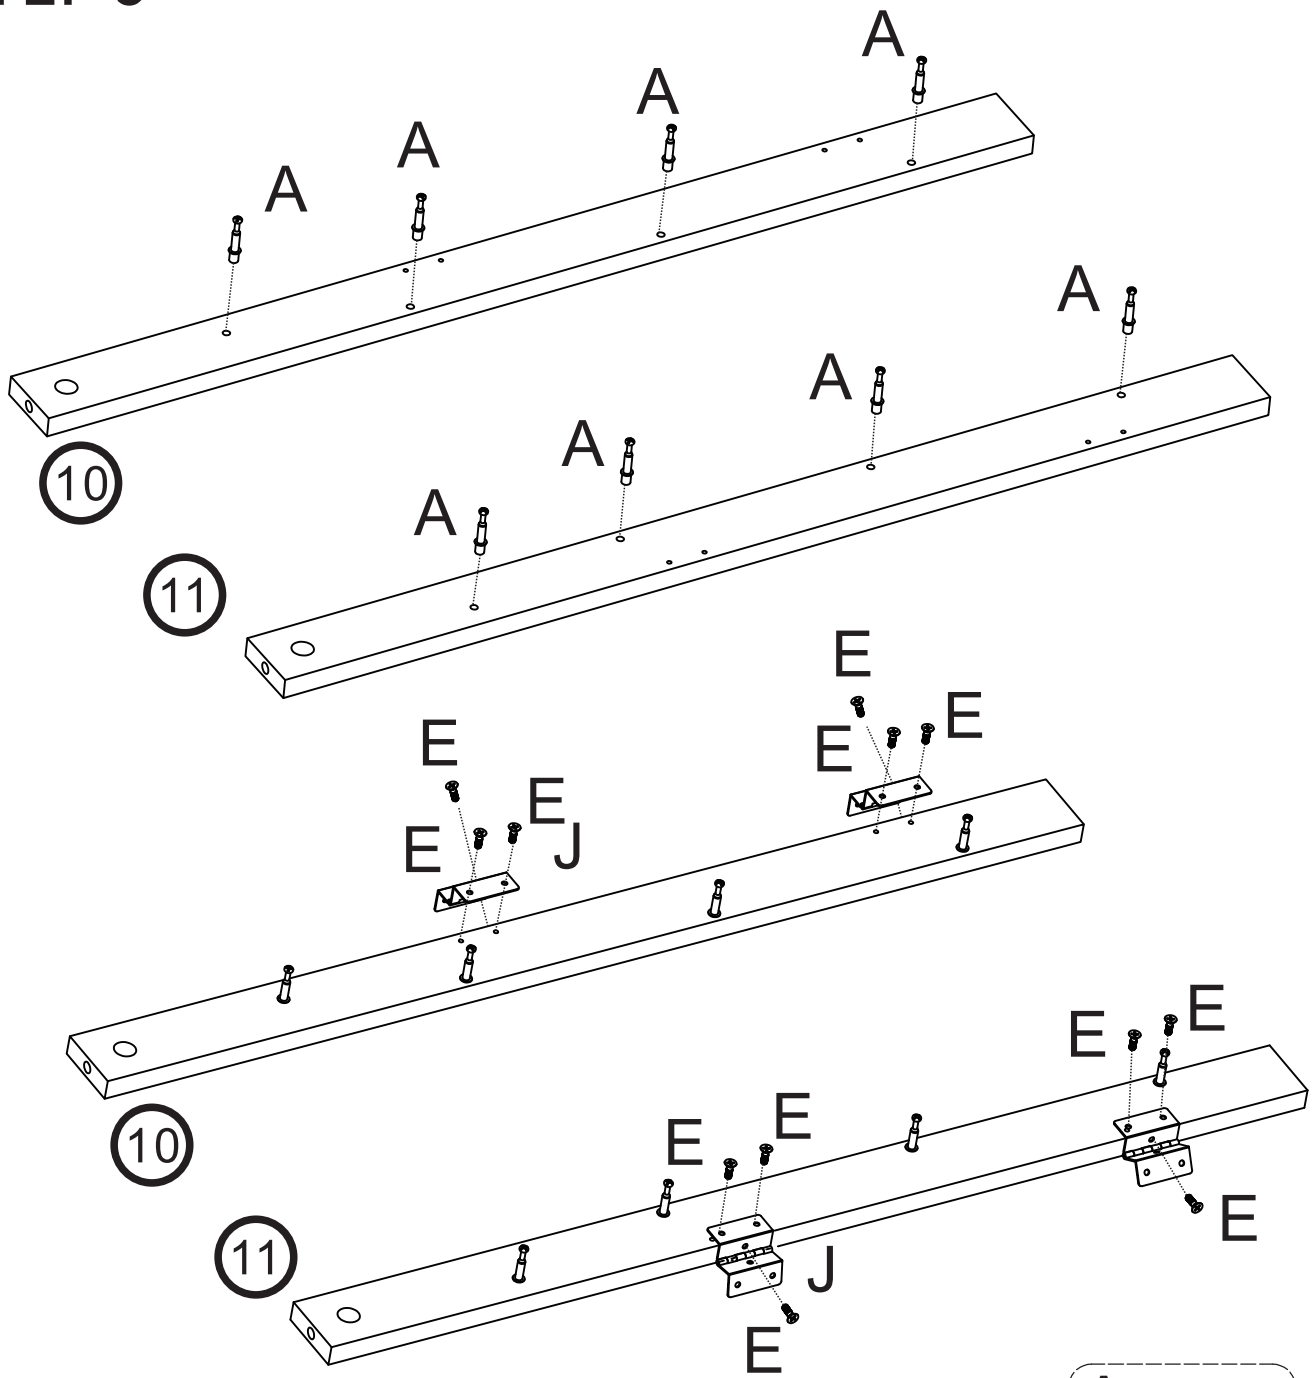

Installation steps

STEP 10

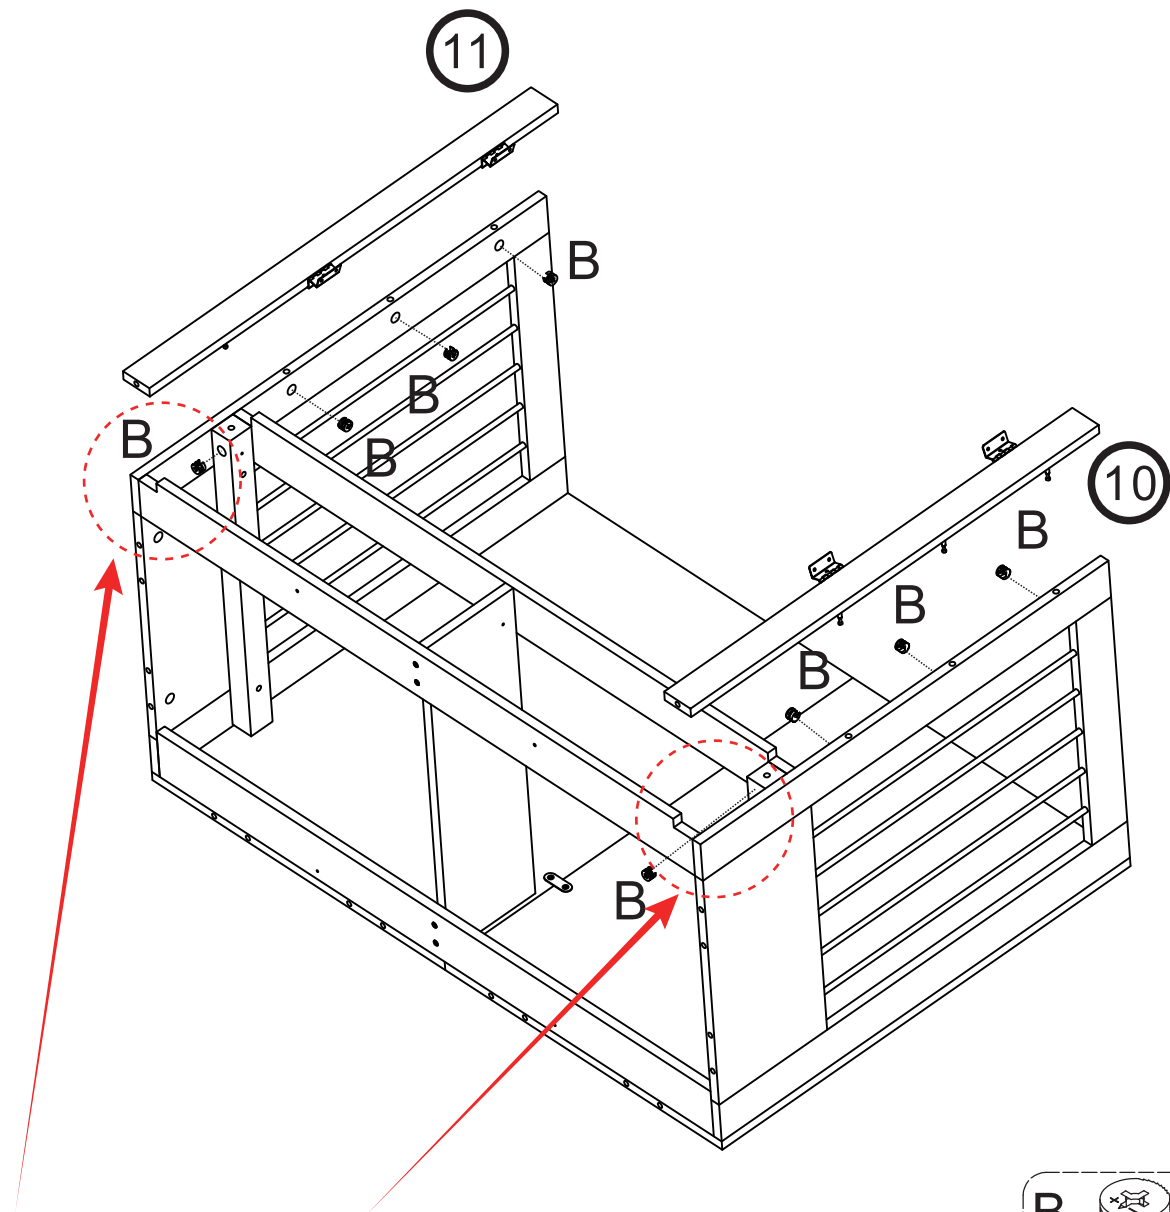



Do not omit the bottom screw B.



Installation steps



STEP 11

First install the wooden dowel C, then cover it with board No. 12. This step is recommended to be done by two people together.

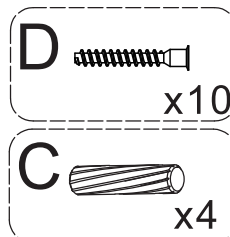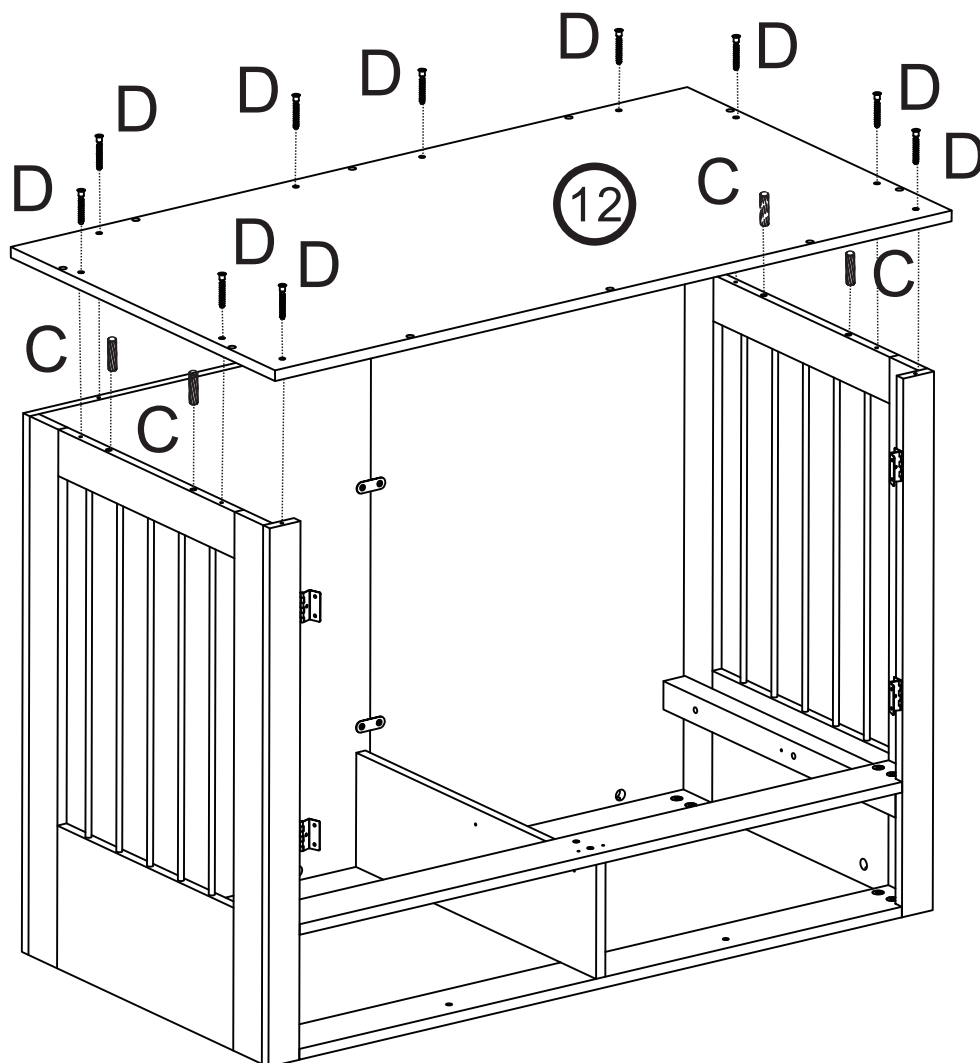


Installation steps

STEP 12


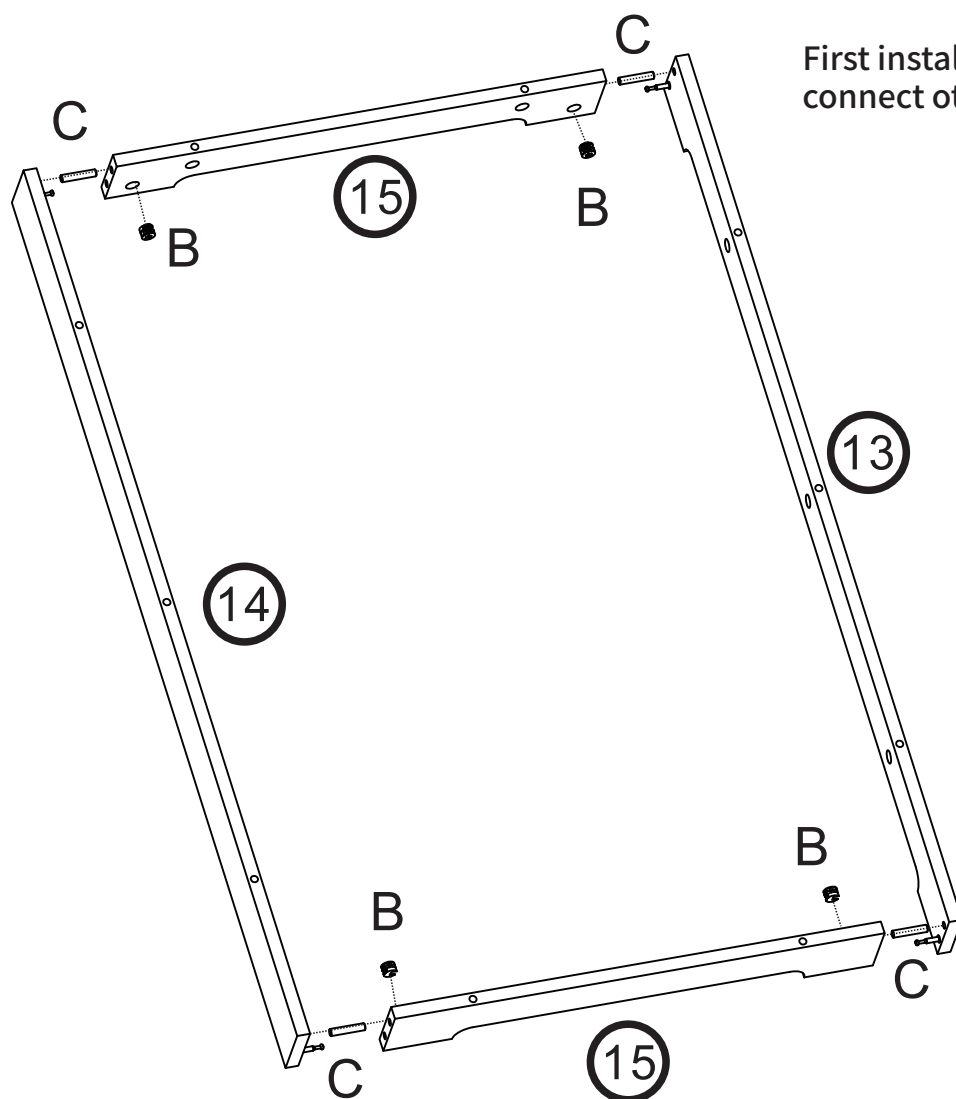
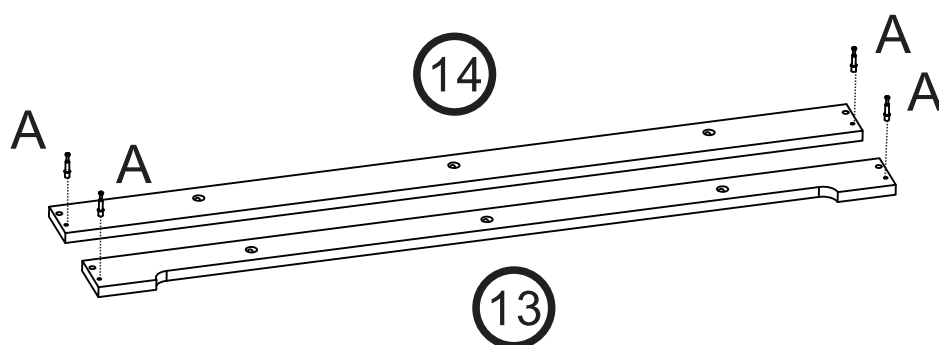


First install the wooden dowel C, then connect other parts.

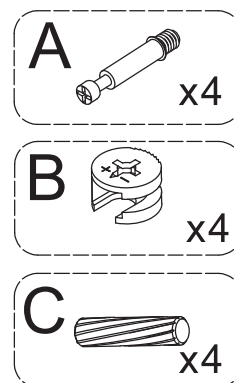


Installation steps

STEP 13

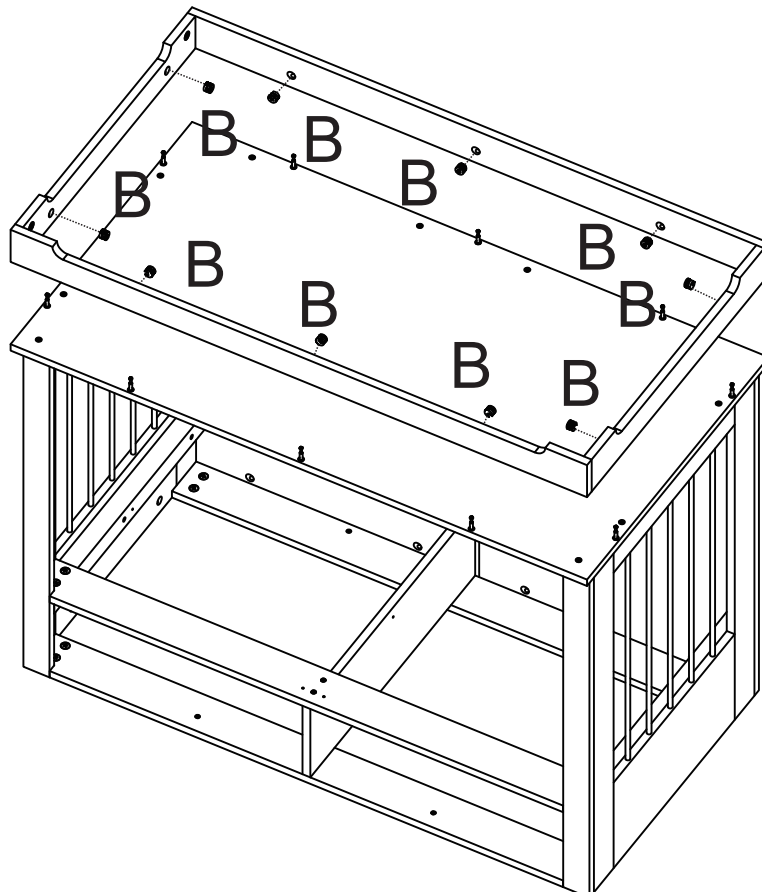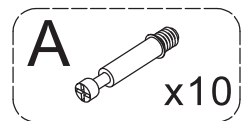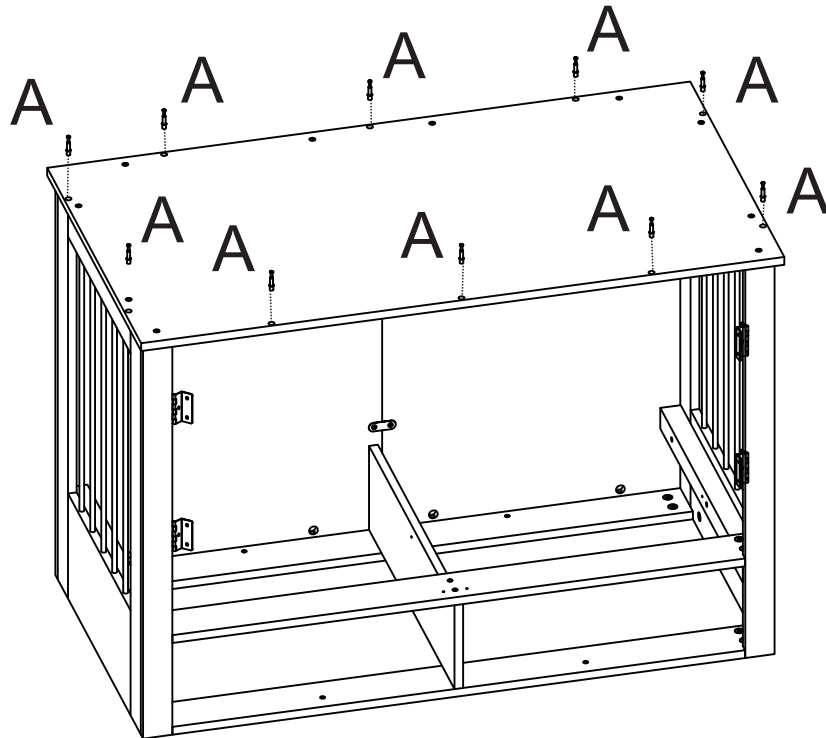







Installation steps

STEP 14

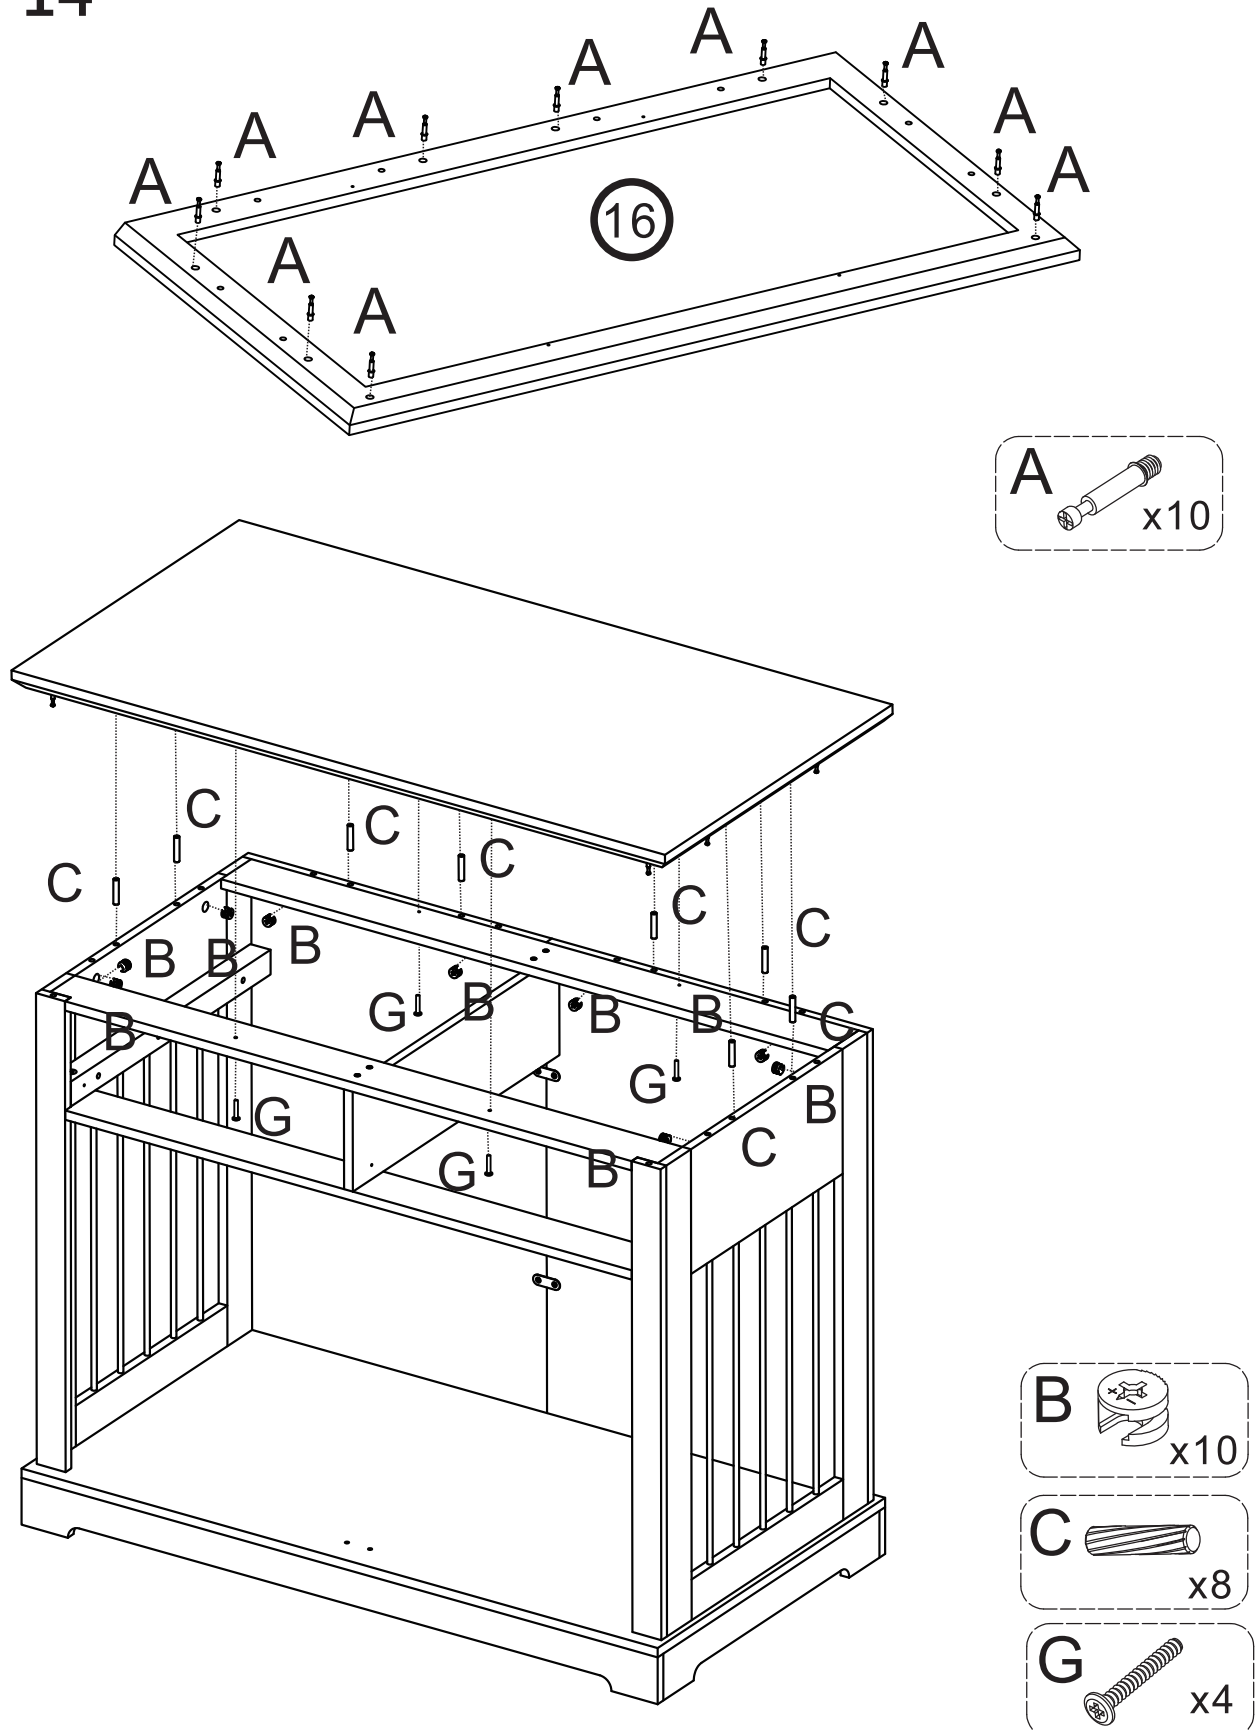




Installation steps

STEP 15

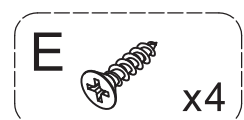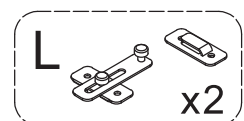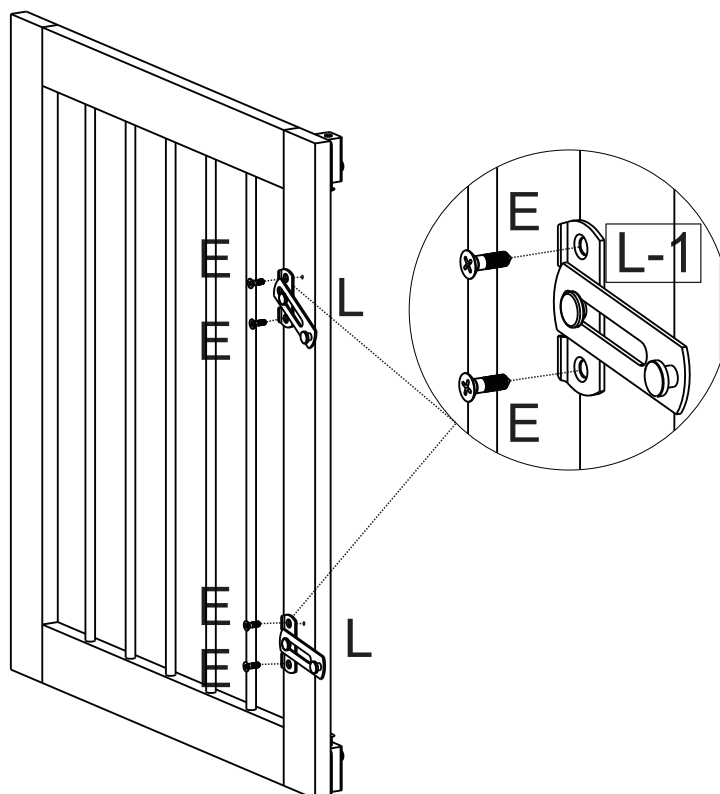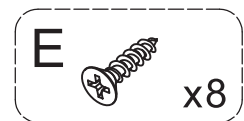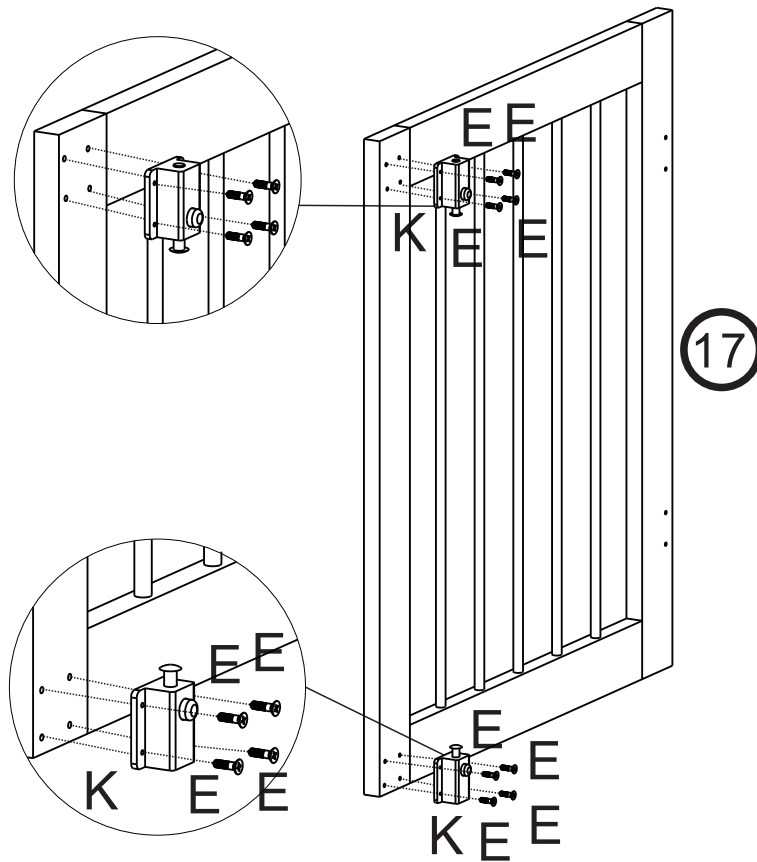

Installation steps



STEP 16

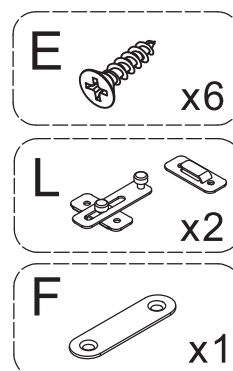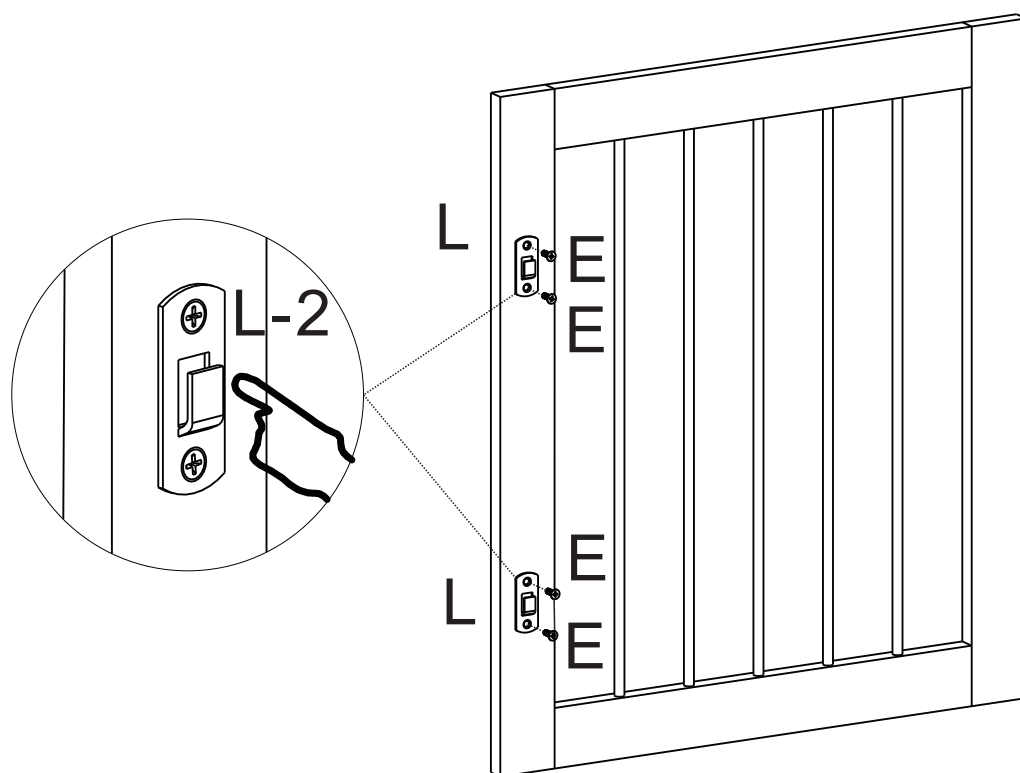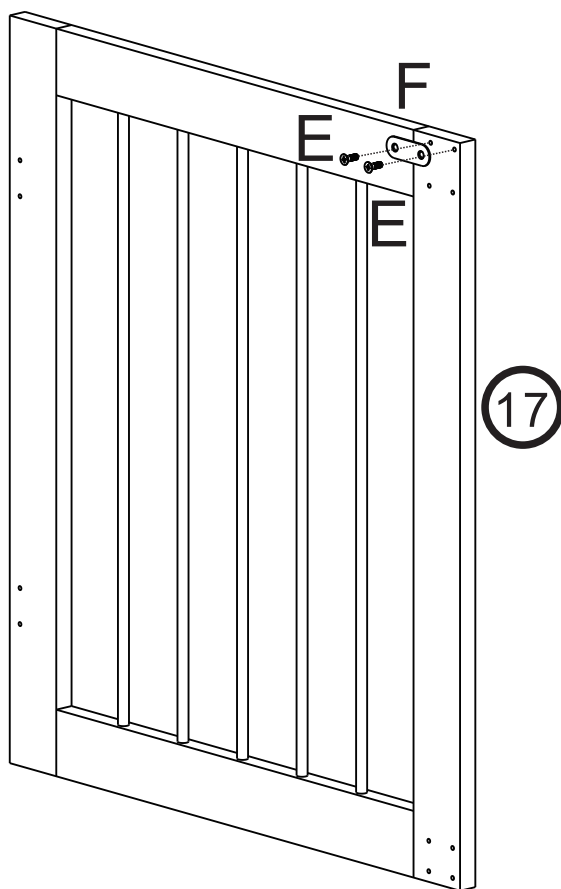

Installation steps



STEP 17

It is recommended to be installed by two people together.

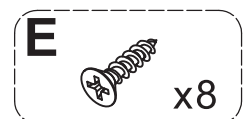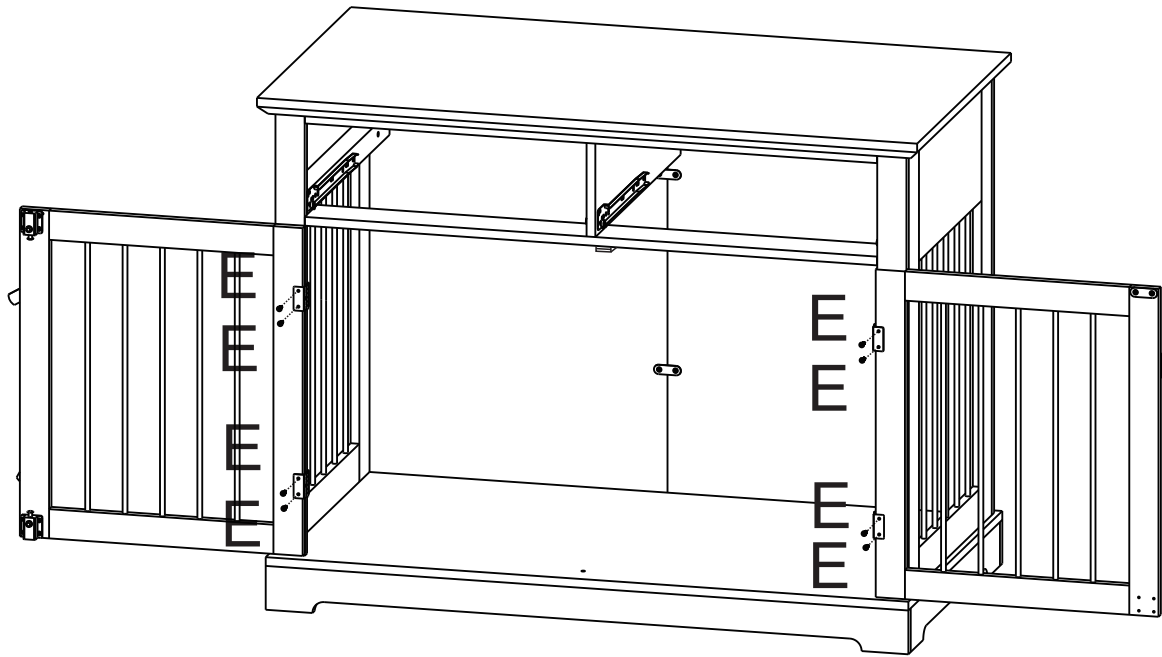

Installation steps




STEP 18

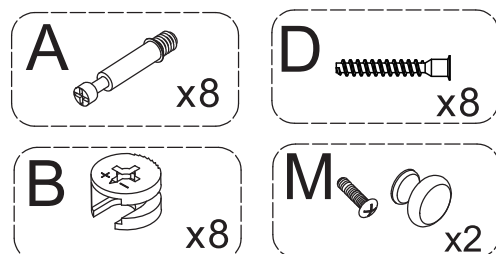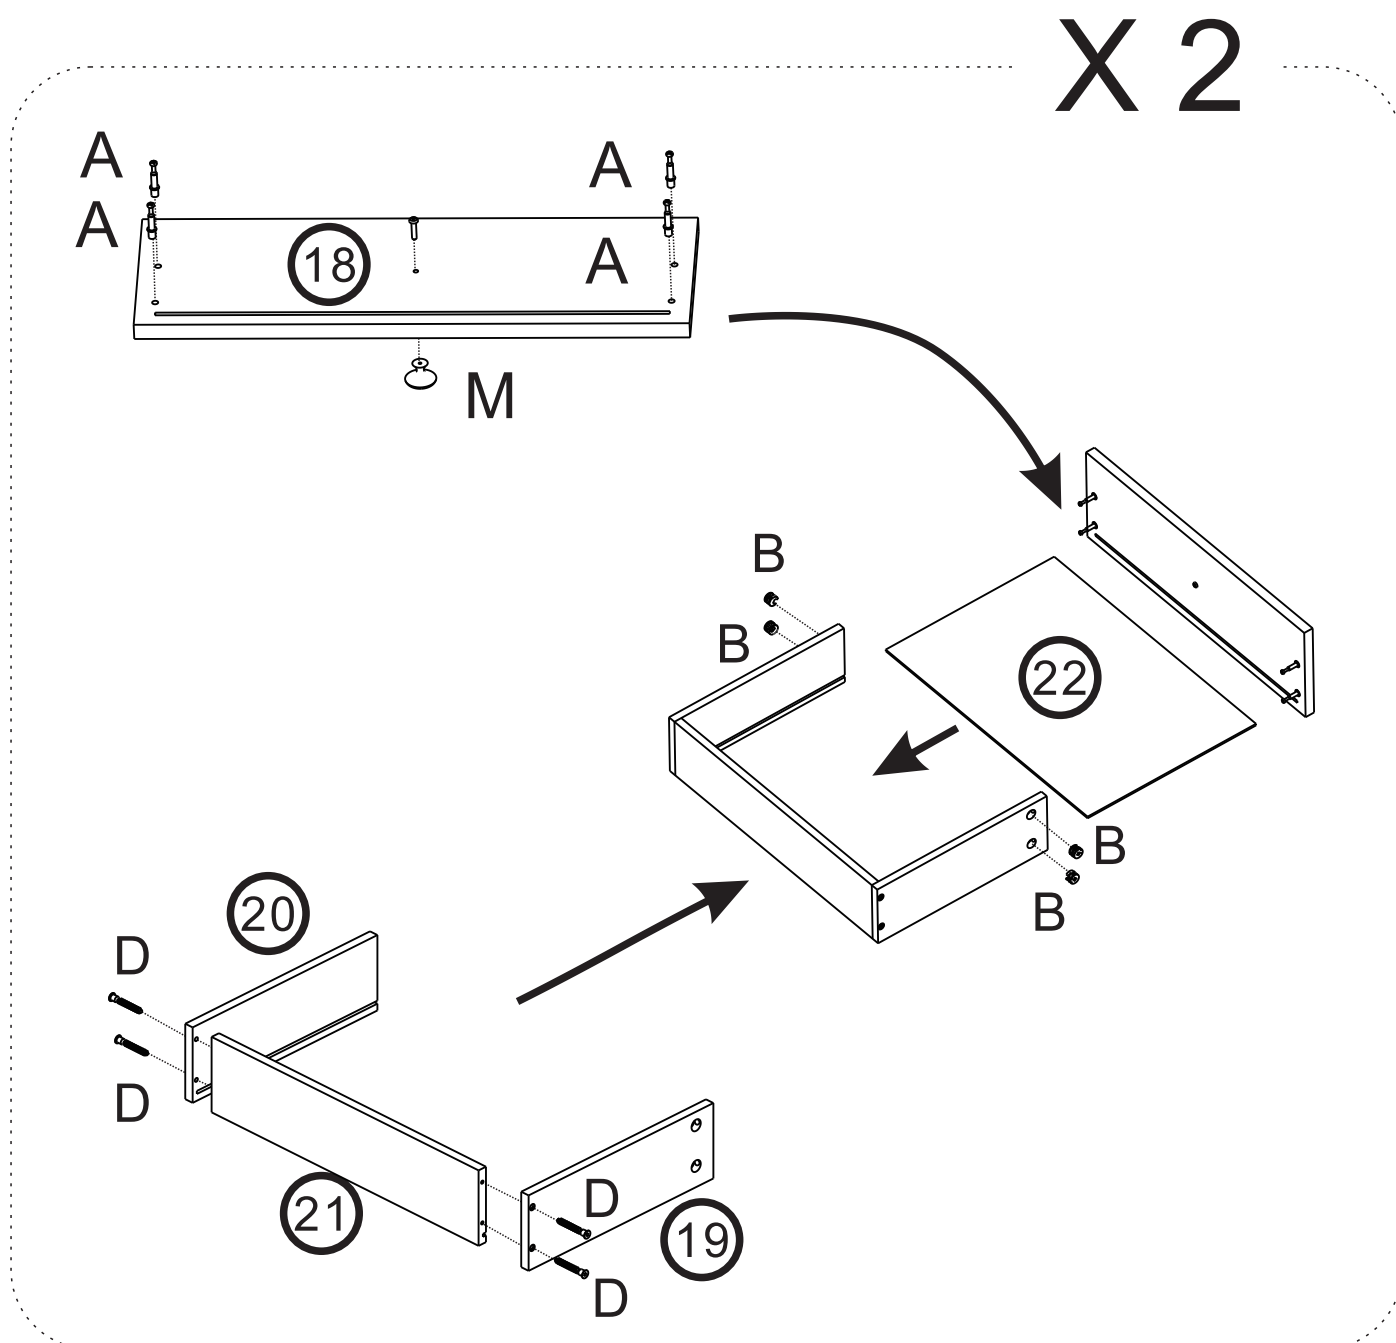

Installation steps

STEP 19



X 2

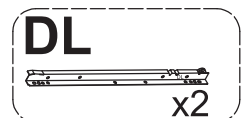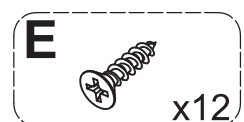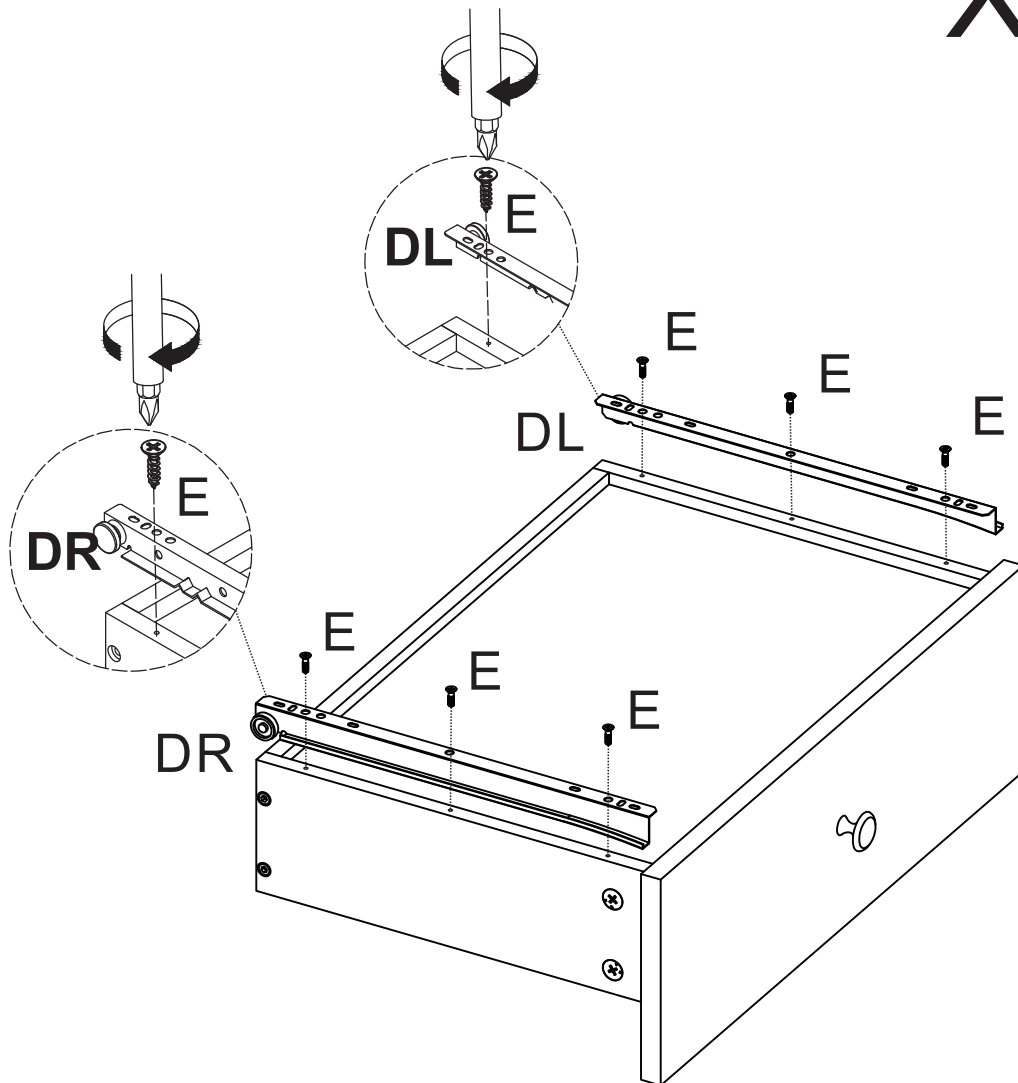

Installation steps

STEP 20


If the drawer feels stuck during push/pull, carefully check whether any screws on the drawer slide rails are protruding.

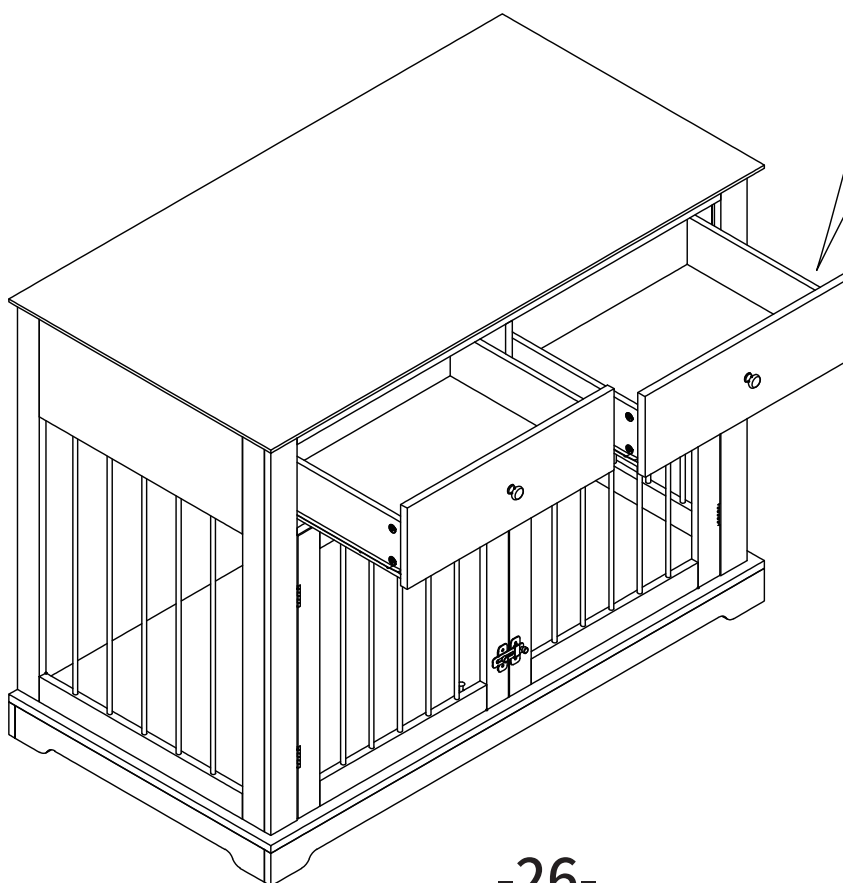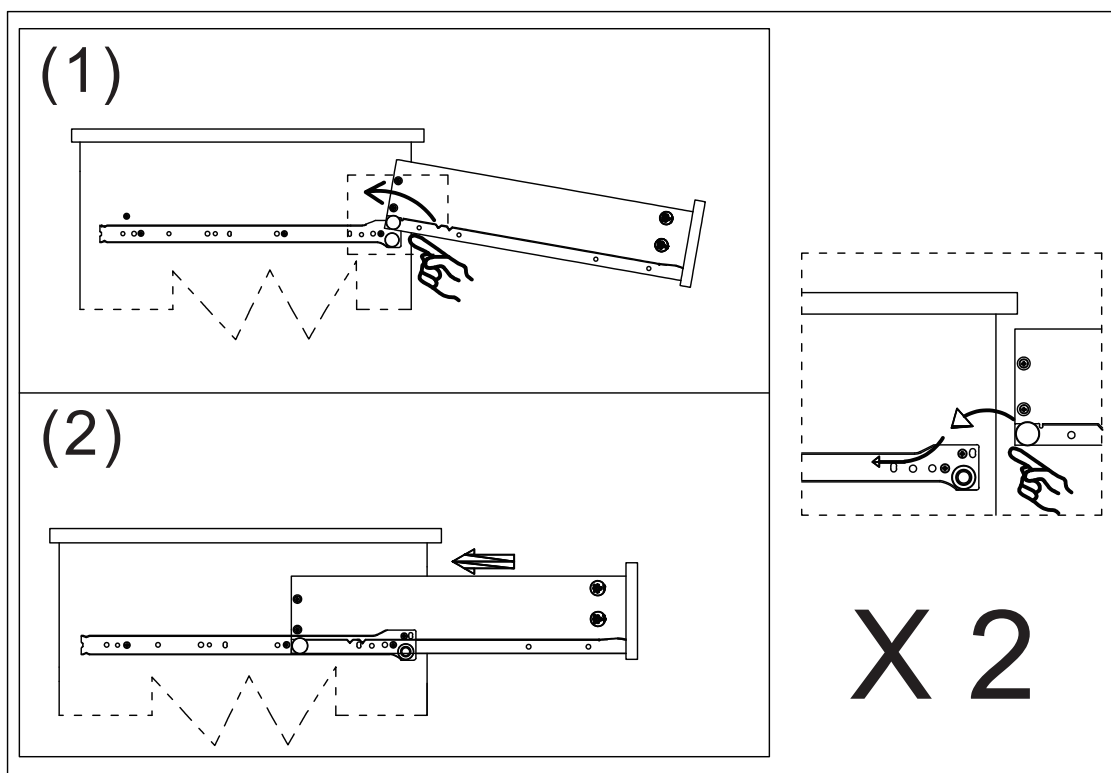

Installation steps



STEP 21

Component N is an anti-tip device. Whether to install it can be determined based on actual needs.

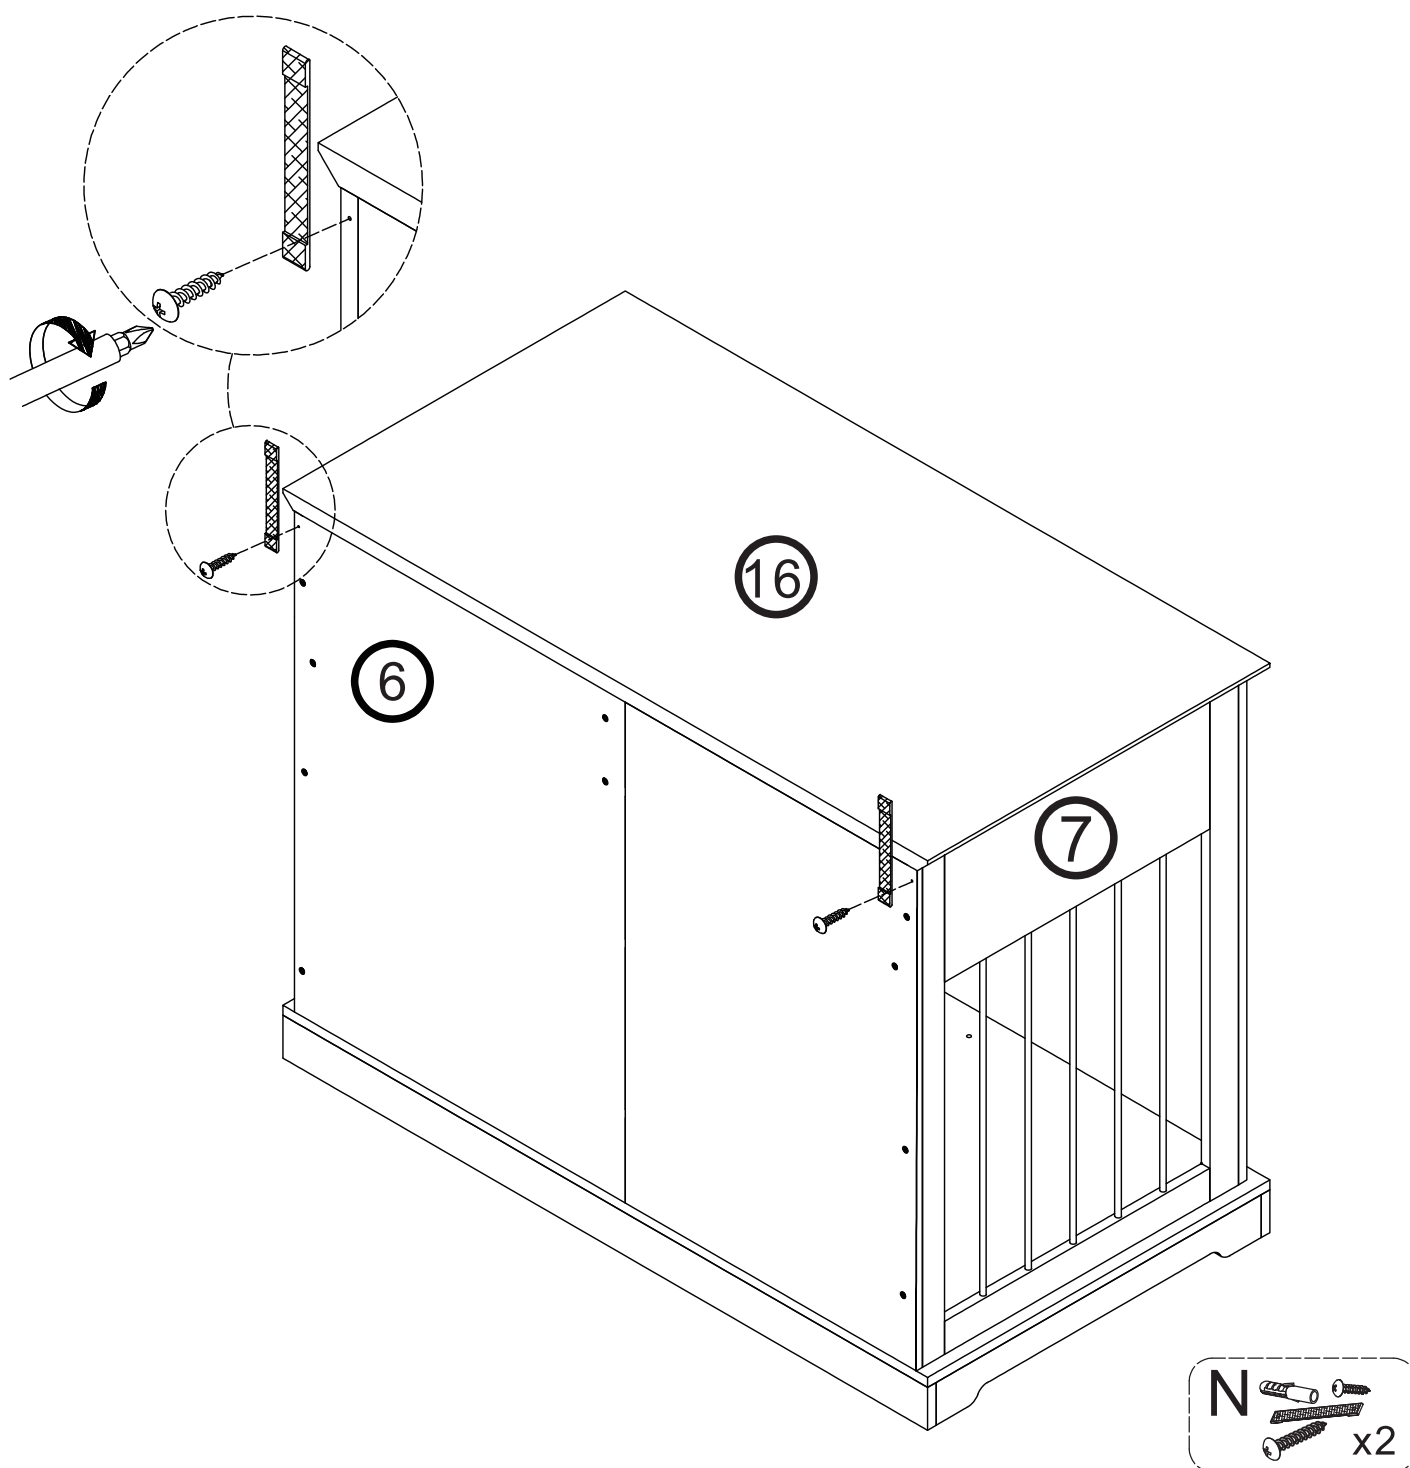

Installation steps

STEP 22

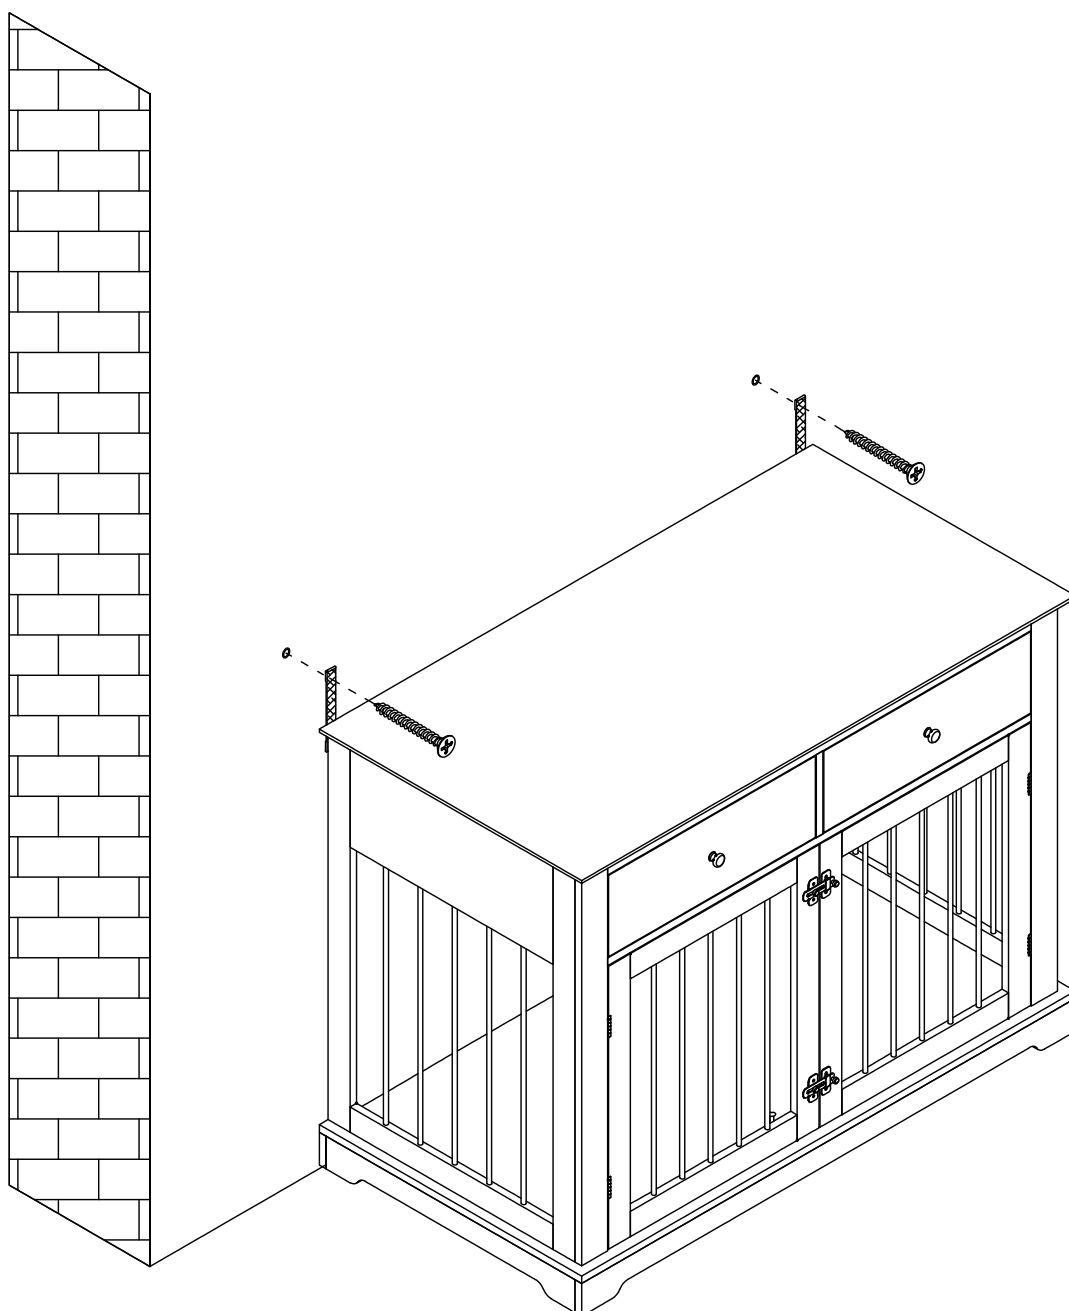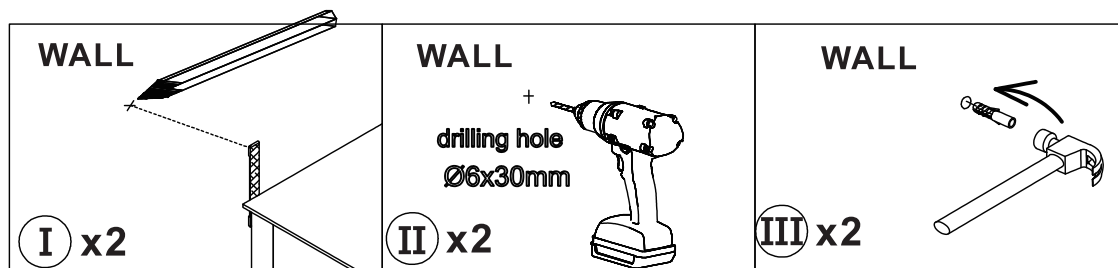

Installation steps

