

Universal Headboard/Footboard Brackets

Contains Two (2) Brackets and Hardware


IMPORTANT NOTE:

Carefully remove all the parts from the carton. Arrange on a flat surface and verify you have all of the following parts and hardware.


TOOLS REQUIRED:

Phillips Screwdriver
Pliers

PART LIST

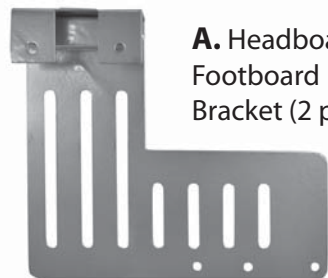

A. Headboard/
Footboard
Bracket (2 pcs)

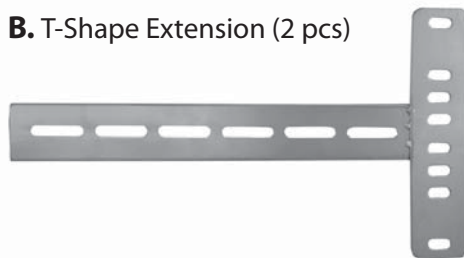

B. T-Shape Extension (2 pcs)



C. Support Bar (2 pcs)

HARDWARE LIST



D. 1 3/4" Bolt
(4 pcs)



E. Washer
(8 pcs)



F. Wing Nut
(4 pcs)



G. 1" Bolt
(4 pcs)




H. 1/2" Bolt
(8 pcs)



I. Nut
(8 pcs)


ASSEMBLY INSTRUCTIONS

STEP 1

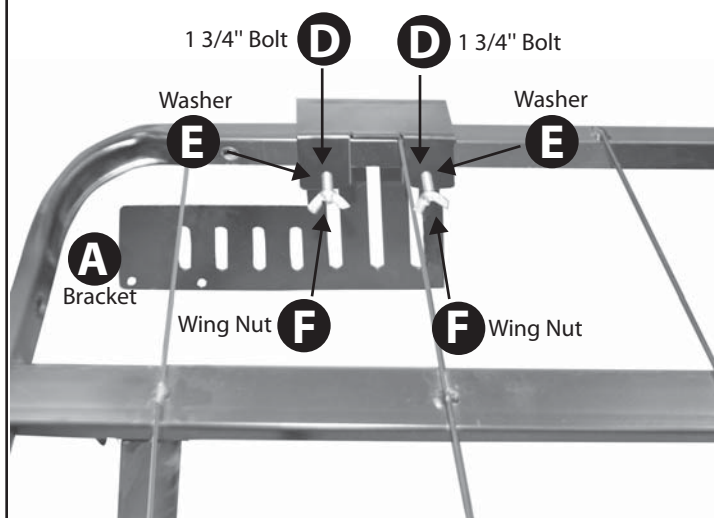

Attach one *Headboard/Footboard Bracket (A)* to the corner of your platform bed frame using two *1 3/4" Bolts (D)* and two *Washers (E)*. Secure the Bracket in place with two *Wing Nuts (F)*.

STEP 2

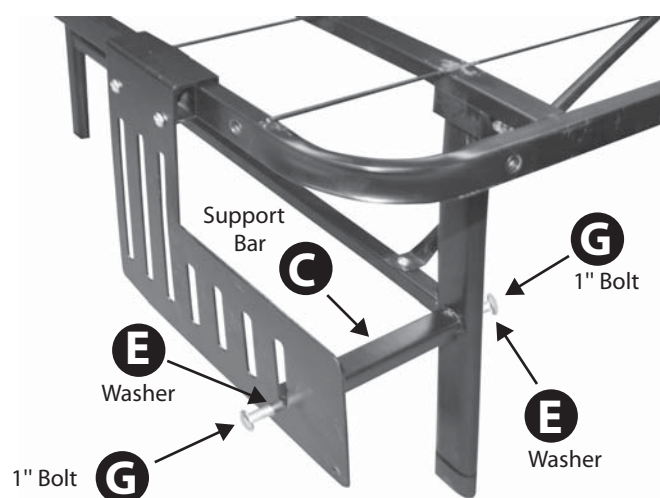


Attach one side of *Support Bar (C)* to the leg of your platform bed frame and the other side to the *Bracket* using two *1" Bolts (G)* and two *Washers (E)*. Secure tightly using a Phillips Screwdriver.

(Continued on back)


ASSEMBLY INSTRUCTIONS (CONTINUED)

STEP 3

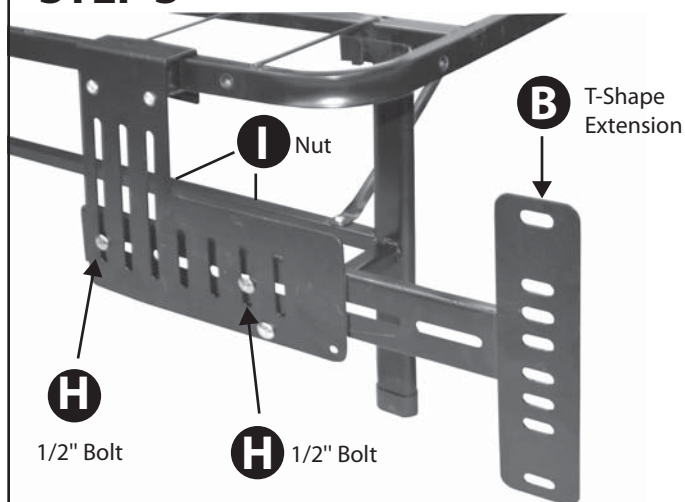

Attach one *T-Shape Extension* (B) to the *Headboard/Footboard Bracket* (A) using two *1/2" Bolts* (H) and two *Nuts* (I). Do not tighten at this time.

STEP 4

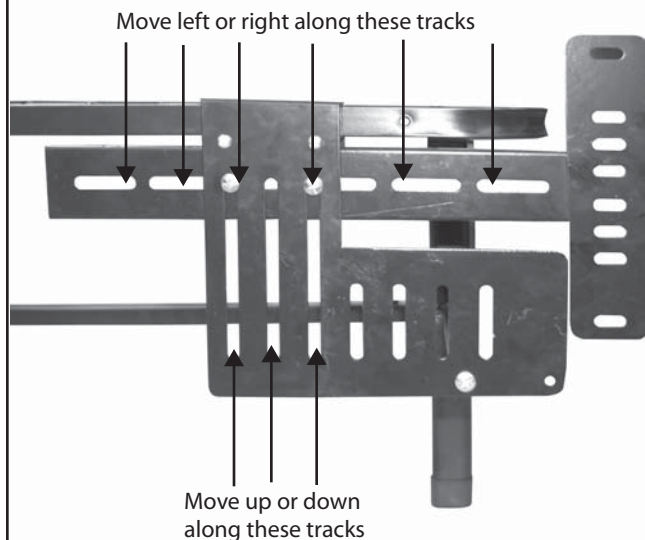


The *T-Shape Extension* (B) is able to adjust up or down and left or right in order to accommodate virtually any headboard or footboard. Fully tighten bolts using Pliers and Phillips Screwdriver when you have adjusted to your desired position. Extra *1/2" Bolts* (H) and *Nuts* (I) are provided in order to ensure the Extension remains secure.

STEP 5

Repeat steps 1-4 on the opposite side of the platform bed frame.

STEP 6

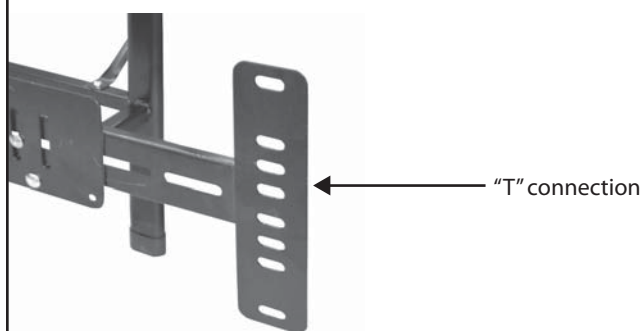

Connect the "T" portion of the Extension Bar to your headboard or footboard. (Use the hardware provided with your headboard and/or footboard. Hardware not included with brackets)



Scan the QR code on your smart phone or device, or enter the link below to watch a complete video of the easy installation of the Premier Platform Frame Headboard/Footboard Brackets.

<http://www.youtube.com/watch?v=-HF-nJjKE6E&feature=g-upl>