



## General installation instructions

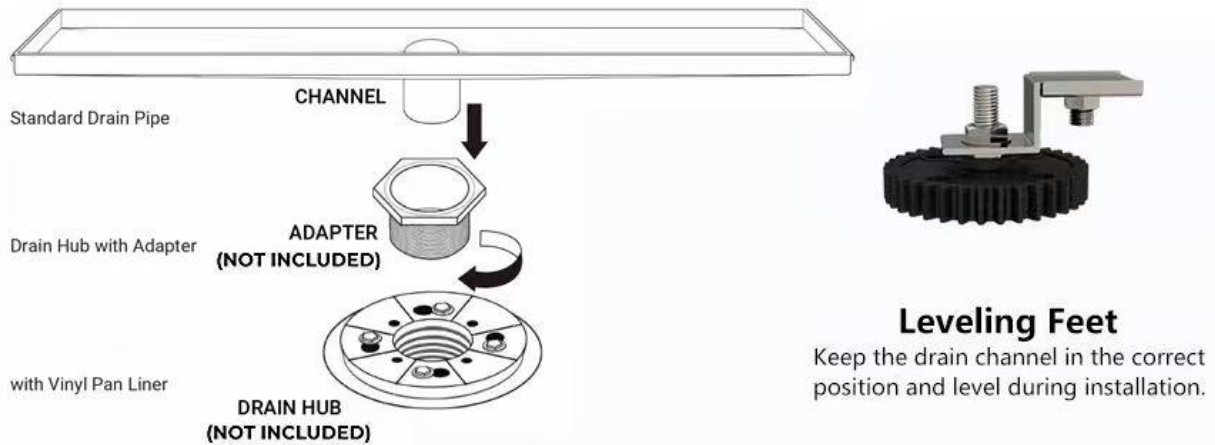

Connect the drain base to the outlet pipe (not included).  
Build up a sloped mortar layer, terminating flush with the drain base.

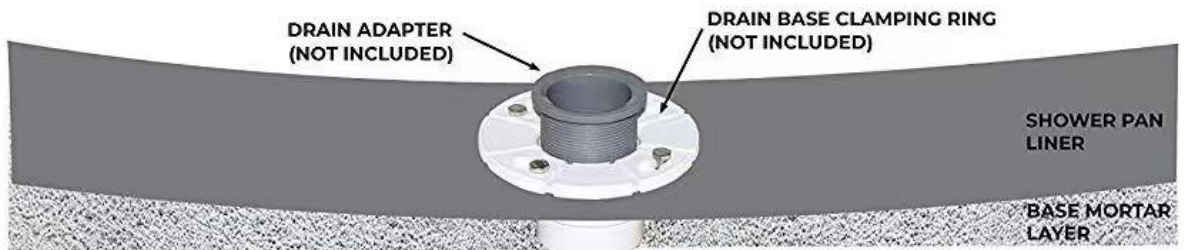

Install the waterproofing and secure it to the drainage base.  
Attach the linear drain adapter to the drain base.



Insert the linear drain in to the adapter opening, and position as desired.  
Pack the final mortar layer, sloping towards the linear drain channel edges.  
Some pea gravel placed around the weep holes is advisable to prevent blockage.  
Screed off the excess mortar, allowing for the final tile thickness.