


Uni-Green Stainless Steel Niche Install Instruction




STEP 1

Determine the location of the niche between two vertical studs and mark the 2x4 inches accordingly with the help of a spirit level. Add horizontal blocking pieces to support the top and bottom of the niche.

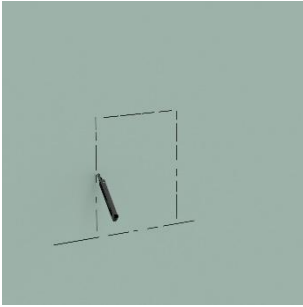

STEP 2


Cut an opening in the backer board to the exact inside size of the niche, and install it around the niche.

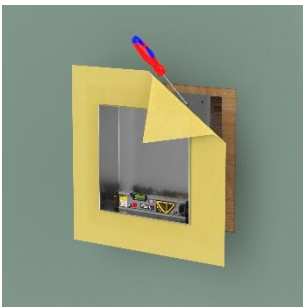

STEP 3


Before installation apply a thin bead of polyurethane sealant just on the inside of the mounting flange just the outside of the screw holes.

Fix the niche to the opening using screws. Be careful not to over tighten the screw.

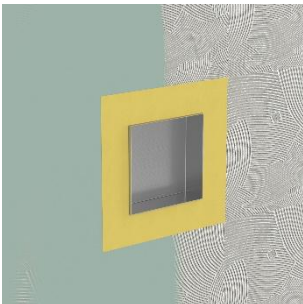

STEP 4

Apply thin-set mortar to the tile board and place the waterproof membrane that we glued on shower niche embed in the mortar.

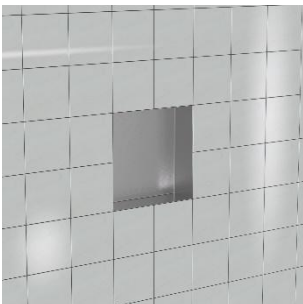

STEP 5

Apply the mortar and install surrounding tiles, make sure the tiles match the edges of niche.