


Assembly Instructions

Please keep for future reference

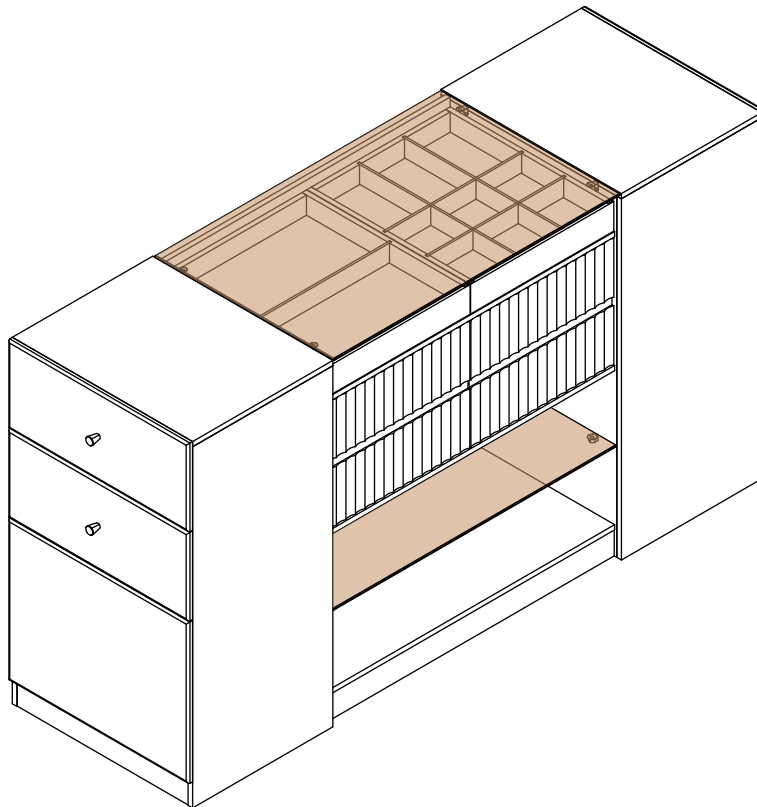

Dimensions

Width-60.4inch

Depth-18.8inch

Height-33.3inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose














Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type


Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



(A)  Cam Bolt x 63	(B)  Cam lock x 63	(C)  6*30mm Dowel x 101	(D)  4*30mm Screw x 48
(E)  3.5*12mm Screw x 100	(F)  Hold hands x 4	(G)  4*16mm Screw x 4	(H)  380mm running x 4
(I)  Layer bracket x 4	(J)  26mm hinge x 4	(K)  26mm hinge x 4	(L)  3*25mm Screw x 8
(M)  Catapult x 2	(N)  Fisheye x 4	(O)  Foot pad x 12	(P)  Layer bracket x 4
(Q)  Screwdriver x 1	(R)  Tilting prevention x 2	(CR)  Runner 300mm x 4	(CL)  Runner 300mm x 4
(DR)  Runner 300mm x 4	(DL)  Runner 300mm x 4		

Tools required

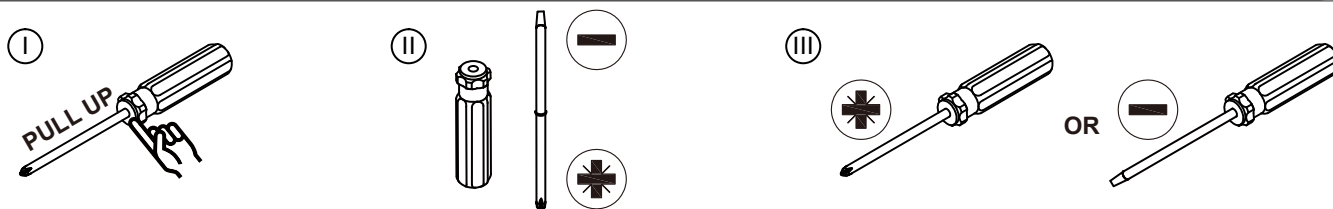

Screwdrivers can be converted to Phillips and Slotted.

Ruler - Use this ruler to help correctly identify the screws



The screws length is measured from the head to the point (35mm screw shown).


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

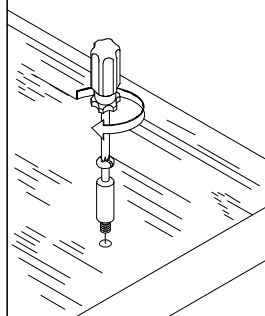

Step 2

Push the male camlock into the entry hole.

2

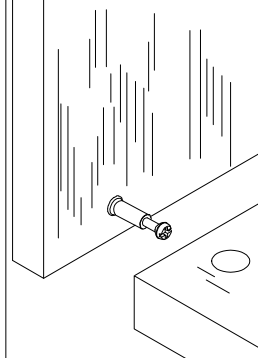


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

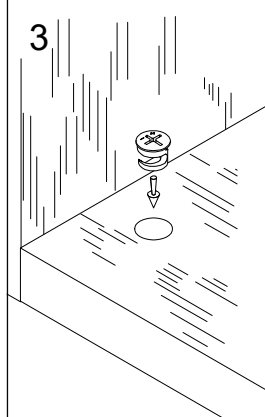


Step 4

Turn the female camlock clockwise with a screwdriver.




You should feel a click when the camlock is locked in place.

The joint is now secure.

4

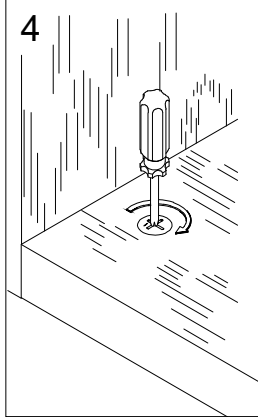

Assembly Instructions

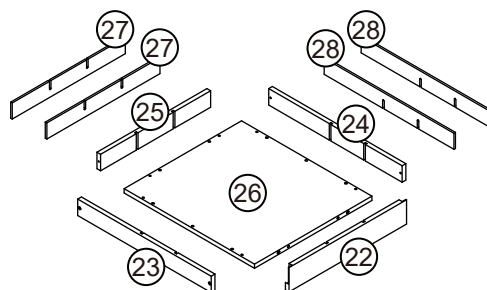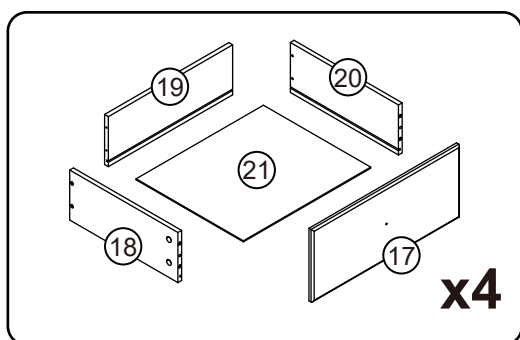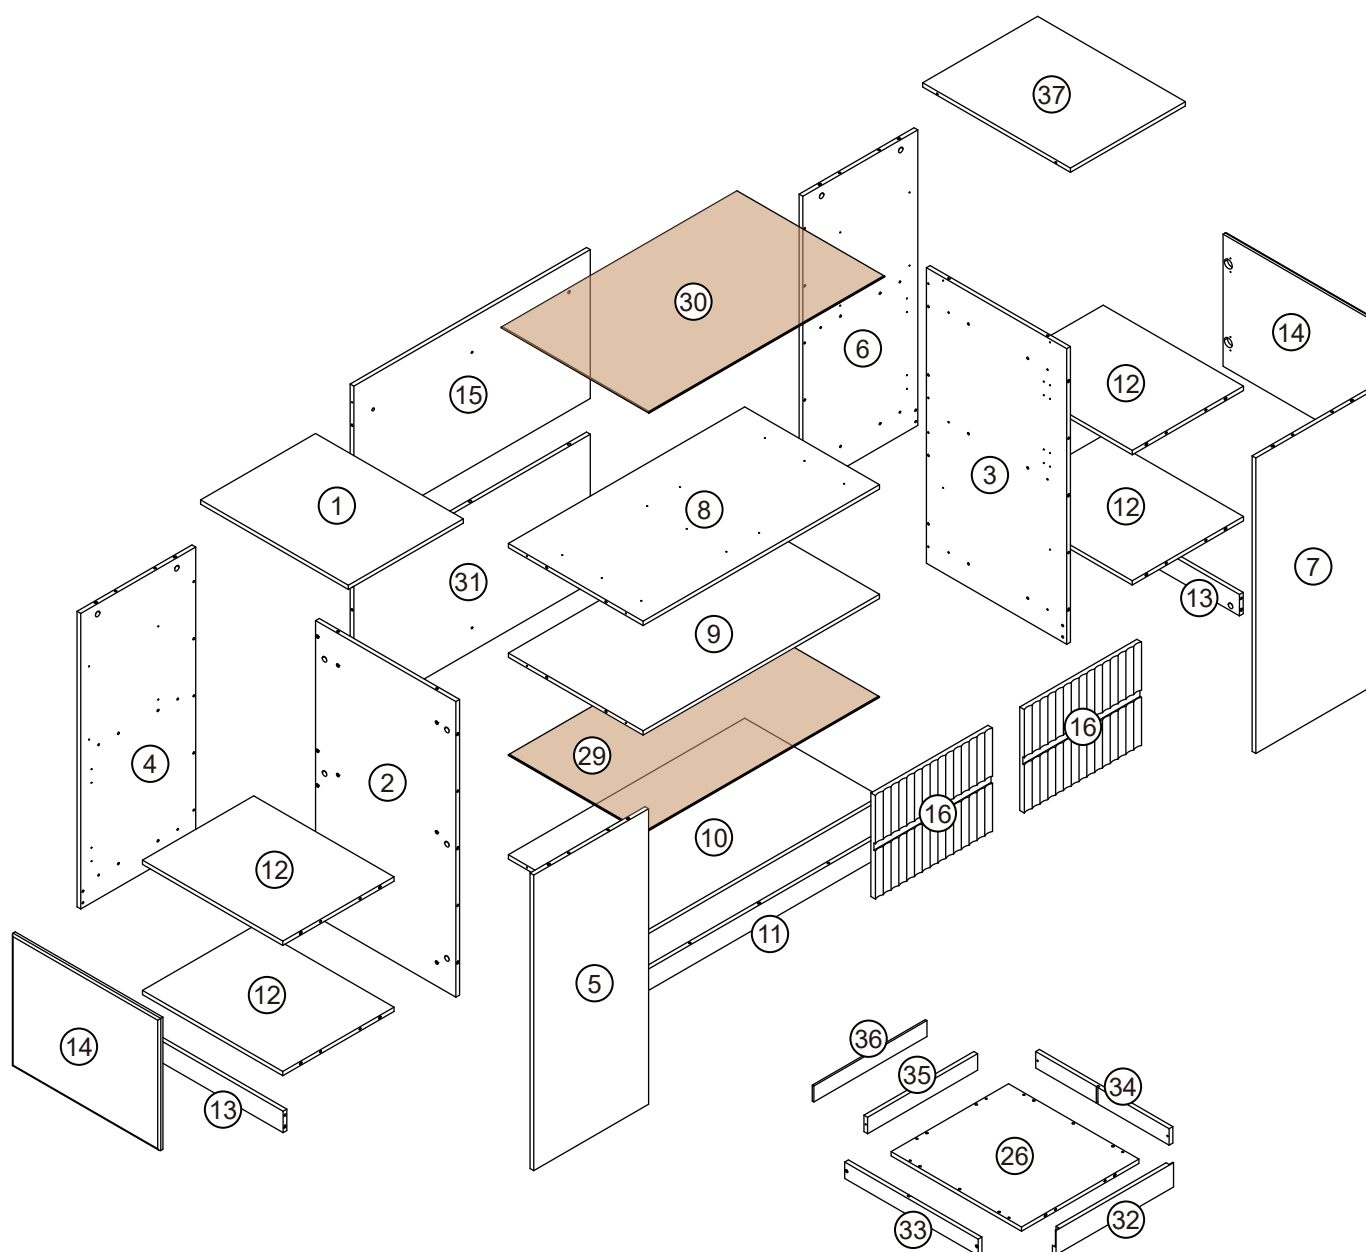


2 3 4 5 6 7 8 9 10 11 15 29 30 31


1 12 13 14 16 17 18 19 20 21 22 23 24 25 26 27 28 32 33 34 35 36 37

Assembly Instructions

Step 1

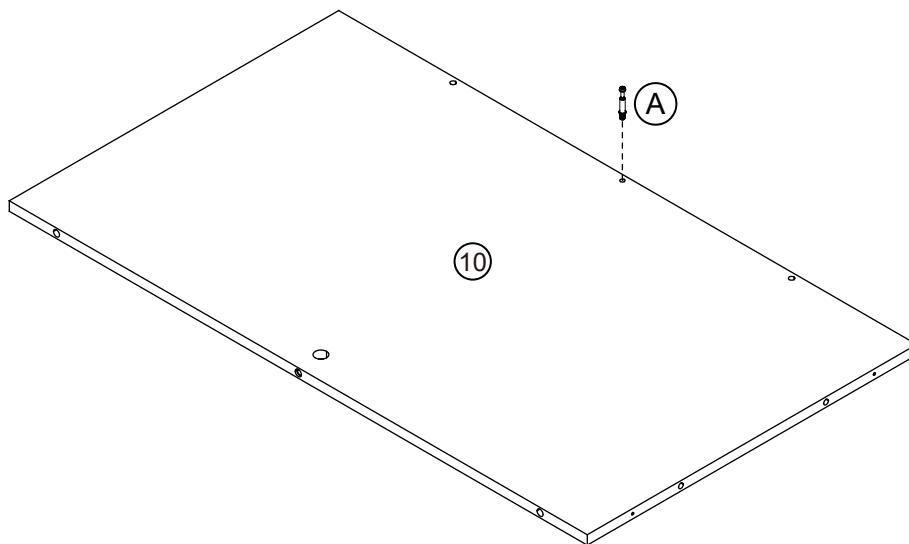


(A)



Cam Bolt x 1

Step 2

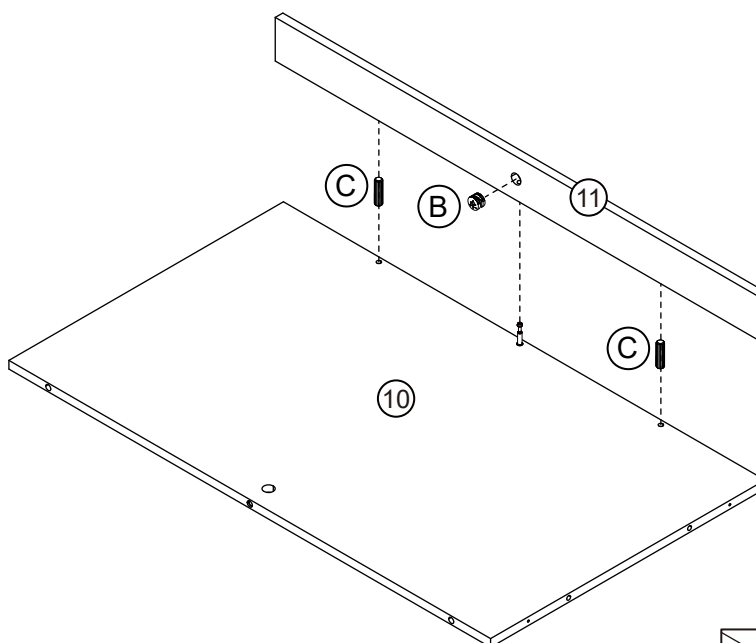

(B)





Cam lock x 1


(C)






6*30mm Dowel x 2

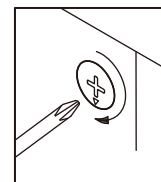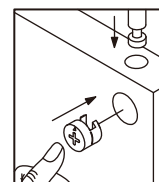

Step 3

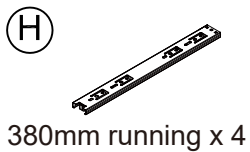


Step 4

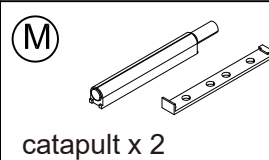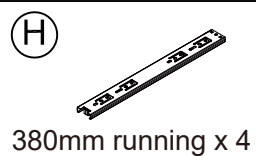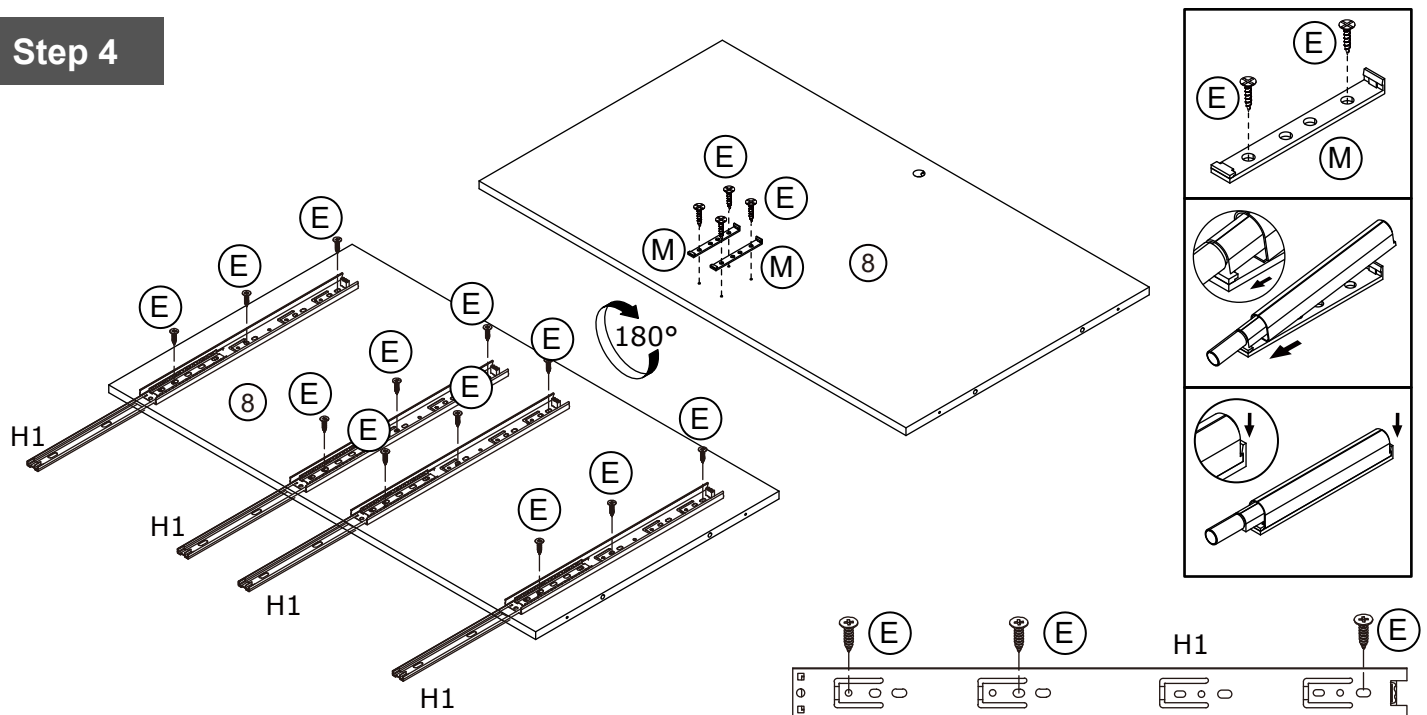


Assembly Instructions

Step 5

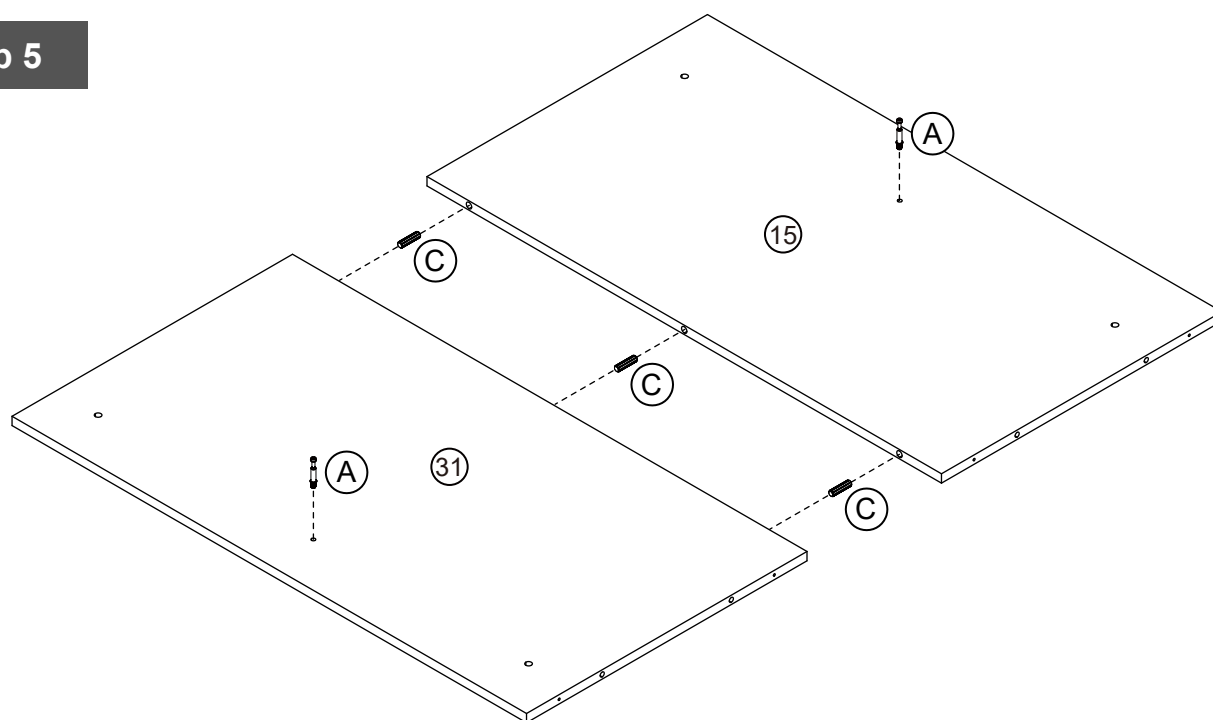

(A)




Cam Bolt x 2

(C)



6*30mm Dowel x 3

Step 6

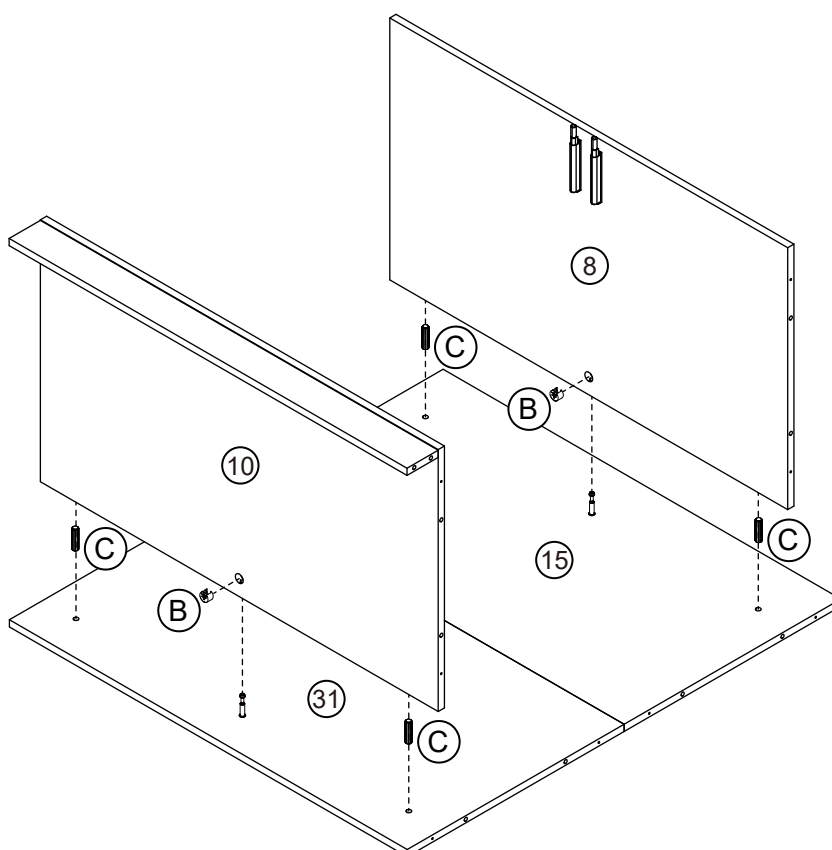

(B)



Cam lock x 2


(C)



6*30mm Dowel x 4

Assembly Instructions

Step 7

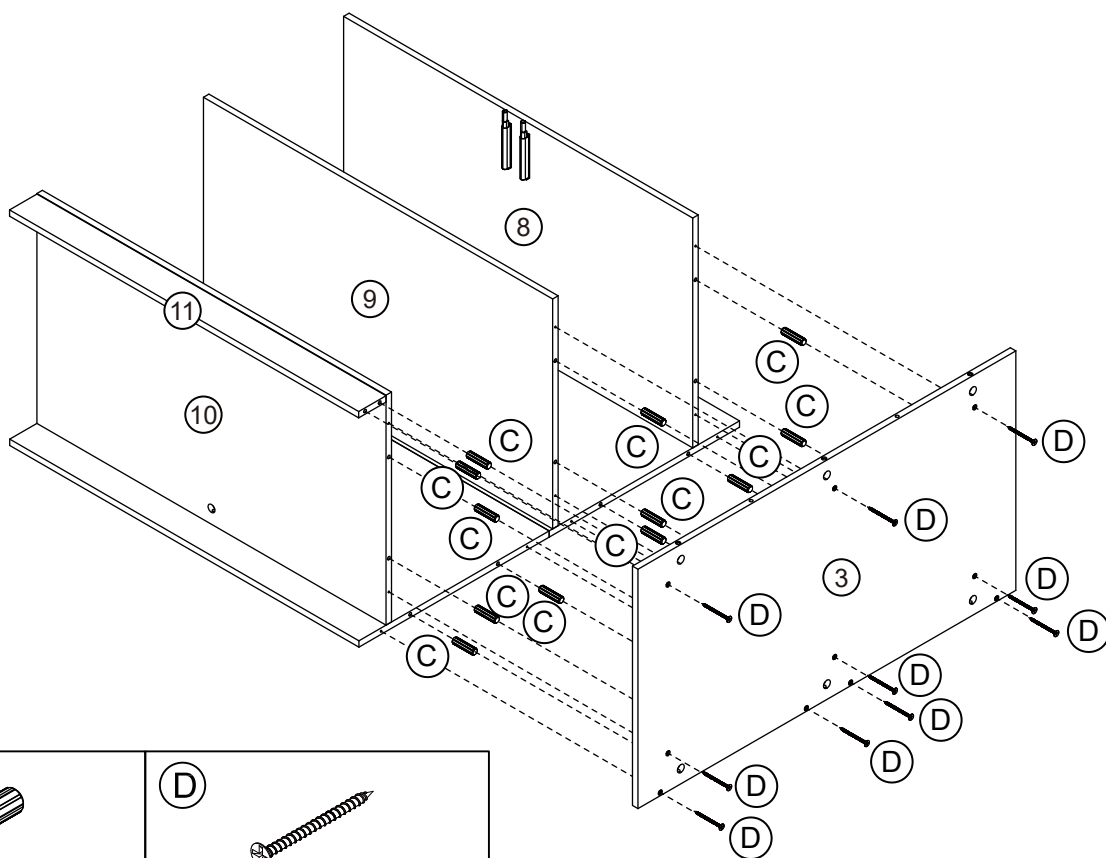

(C)




6*30mm Dowel x 12

(D)



4*30mm Screw x 10

Step 8

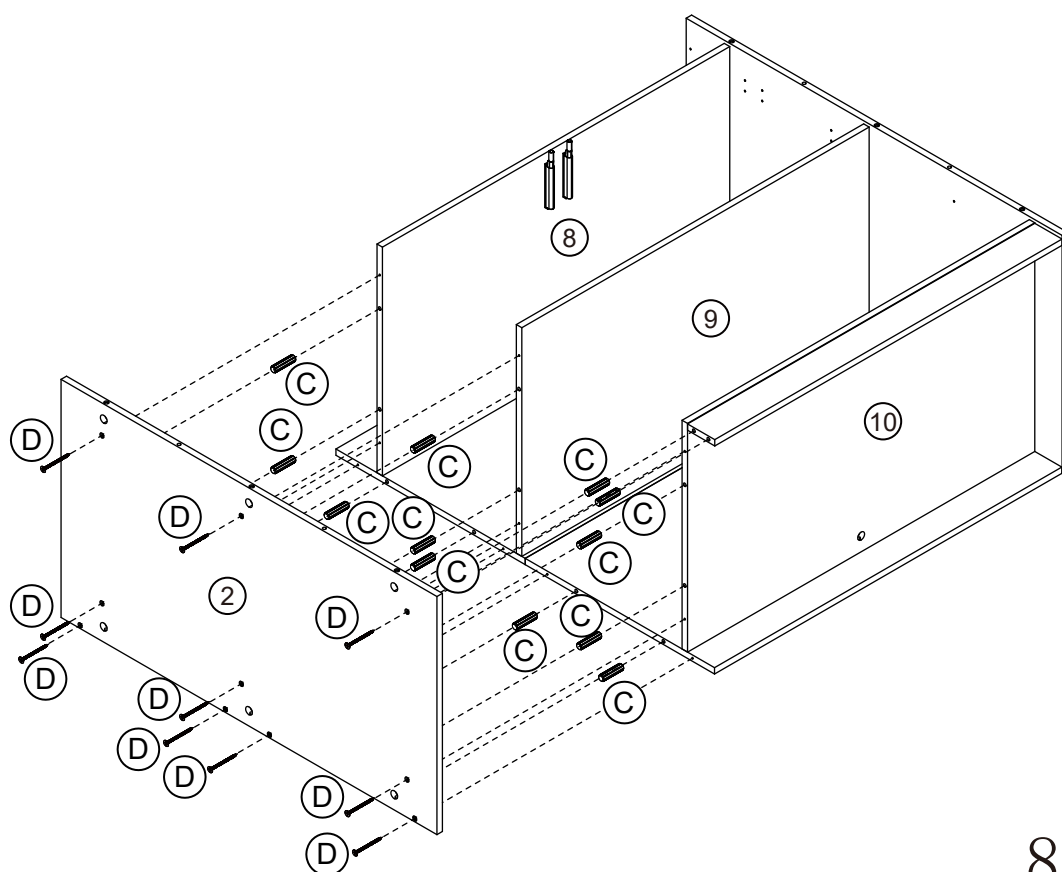

(C)



6*30mm Dowel x 12


(D)




4*30mm Screw x 10


Assembly Instructions



Step 9

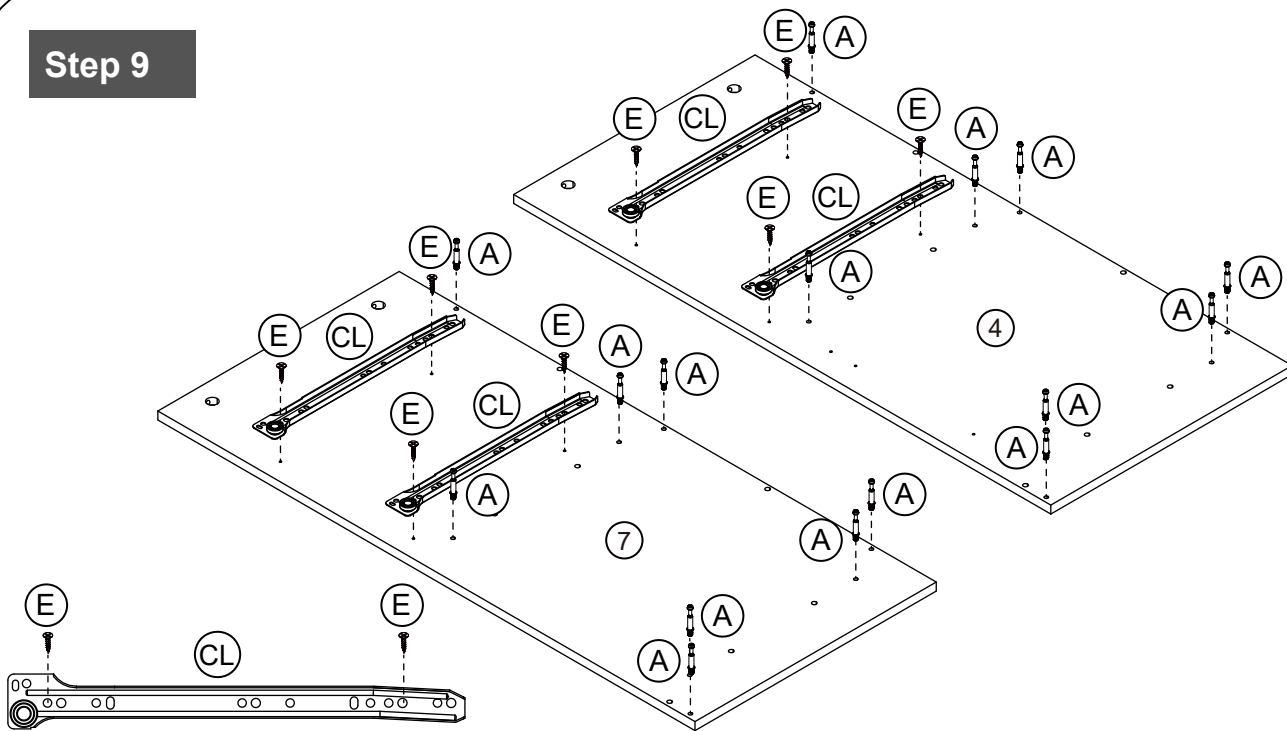

 Cam Bolt x 16	 3.5*12mm Screw x 8	 Runner 300mm x 4
--	---	--


Step 10

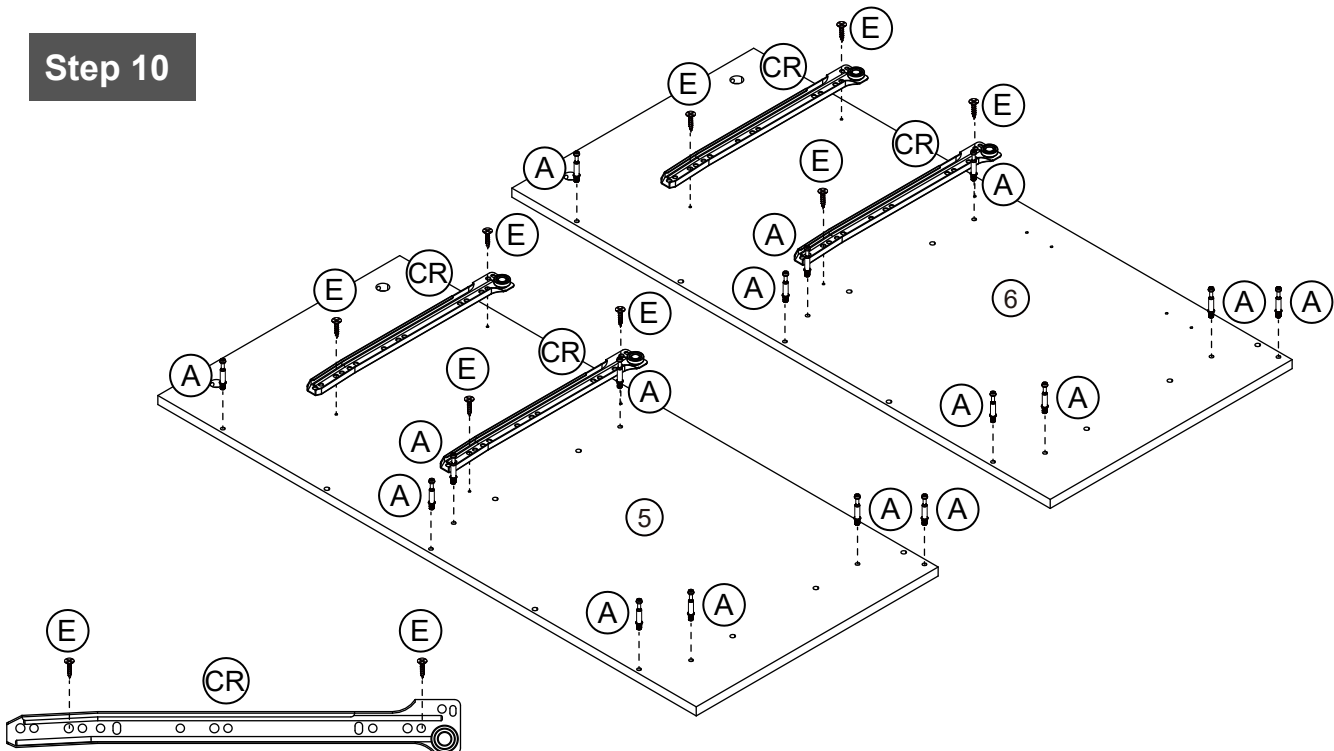

 Cam Bolt x 16	 3.5*12mm Screw x 8	 Runner 300mm x 4
--	---	--

Assembly Instructions

Step 11

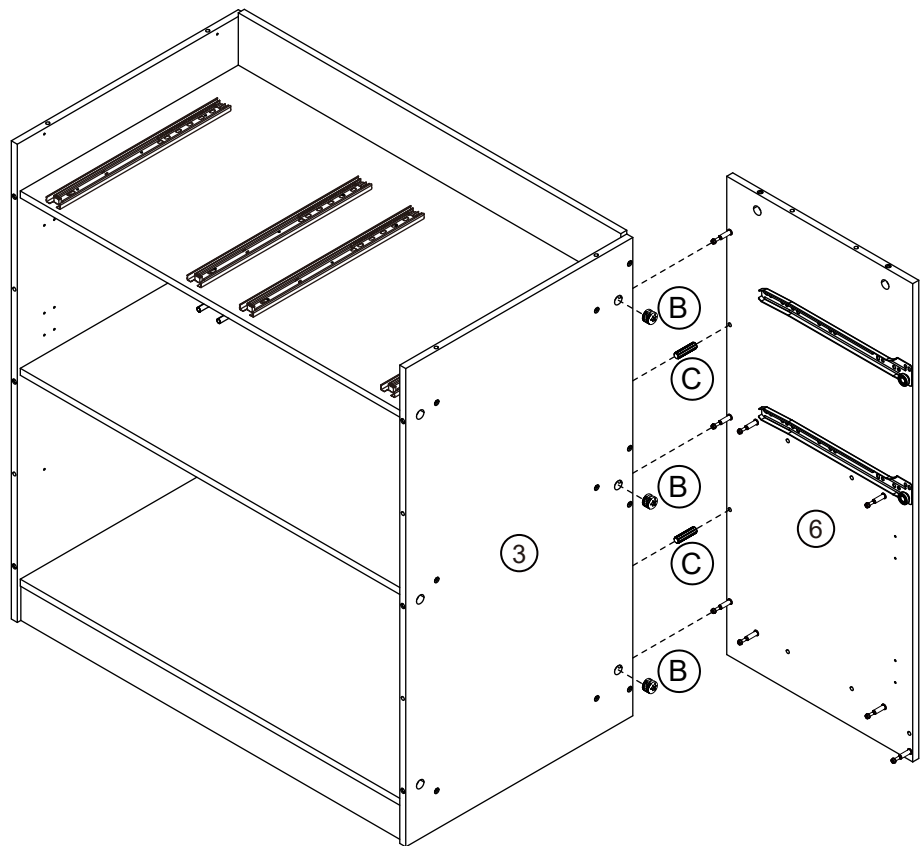

(B)




Cam lock x 3

(C)



6*30mm Dowel x 2

Step 12

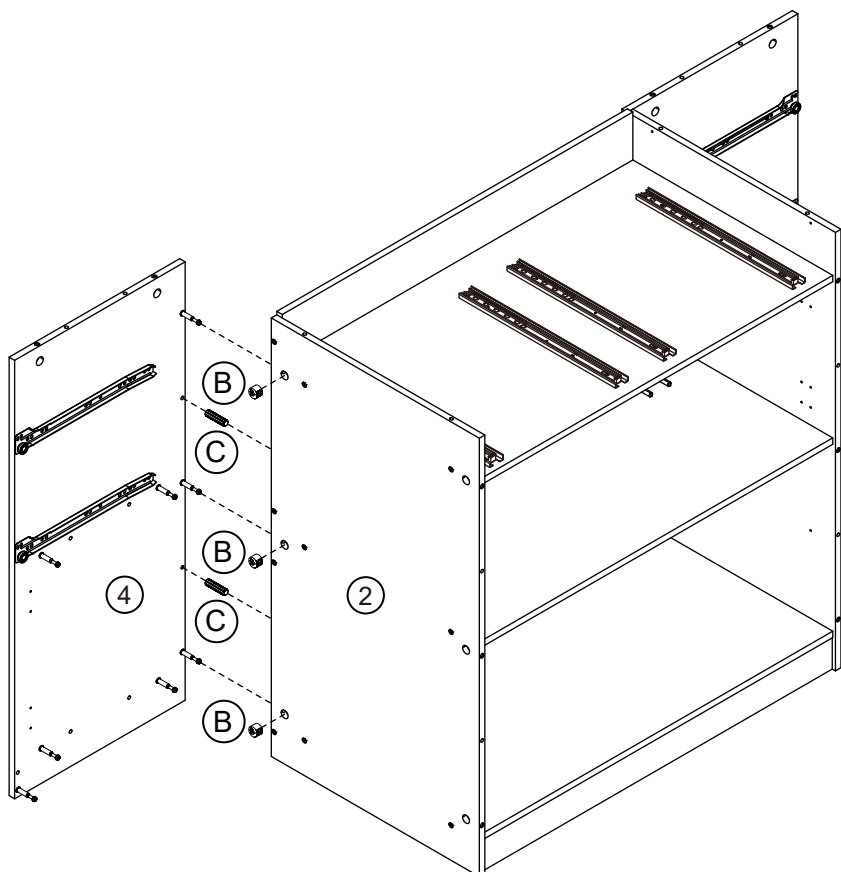

(B)



Cam lock x 3


(C)



6*30mm Dowel x 2

Assembly Instructions

Step 13

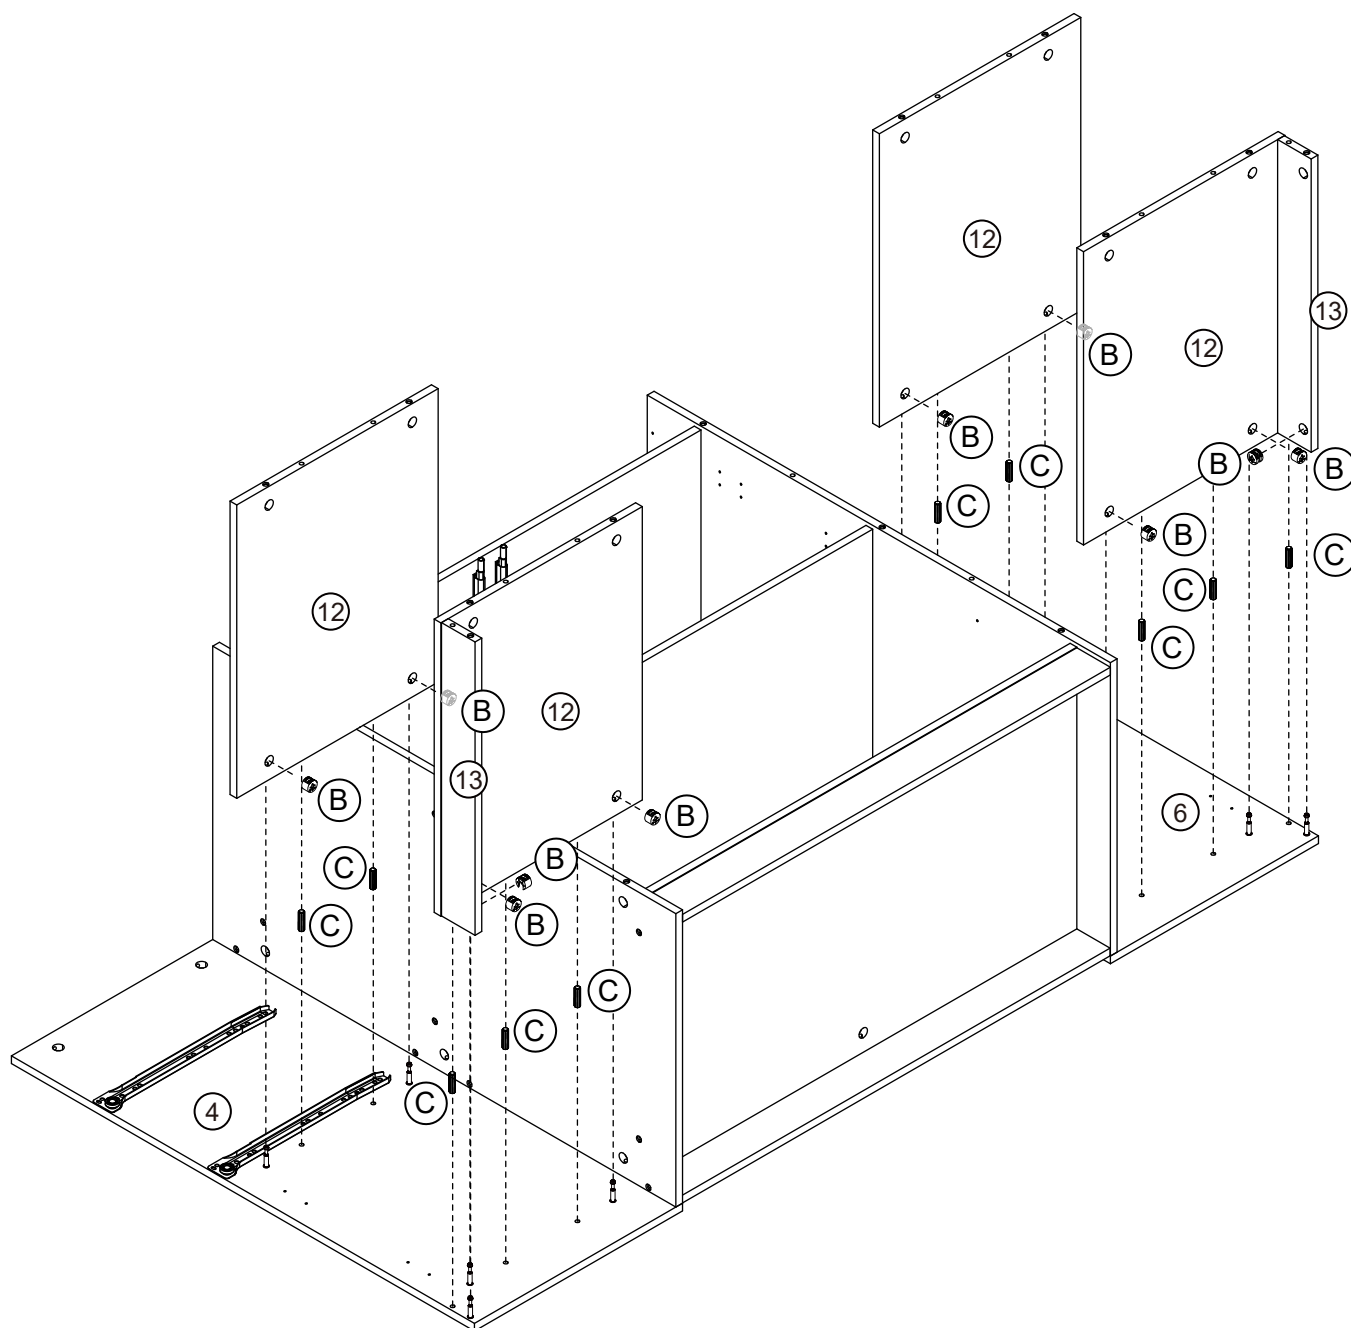

(B)



Cam lock x 10


(C)



6*30mm Dowel x 10

Assembly Instructions

Step 14

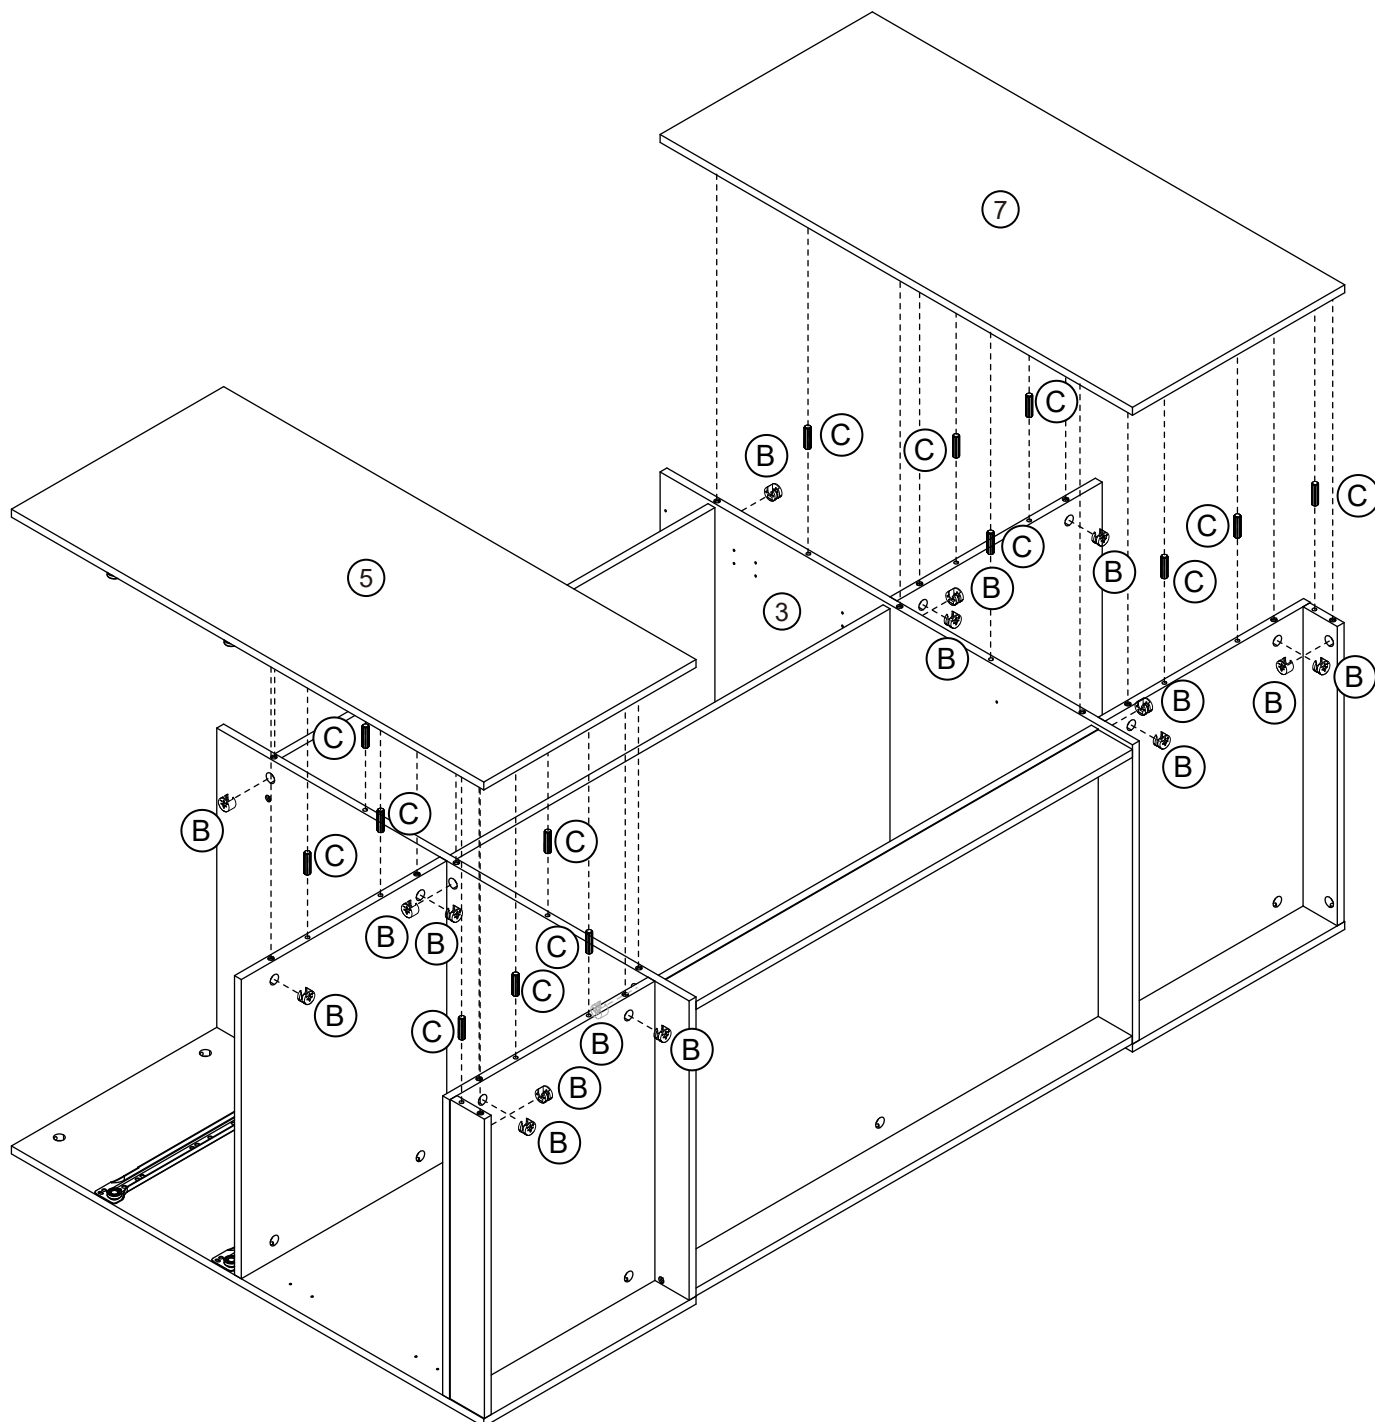

(B)



Cam lock x 16


(C)




6*30mm Dowel x 14

Assembly Instructions

Step 15

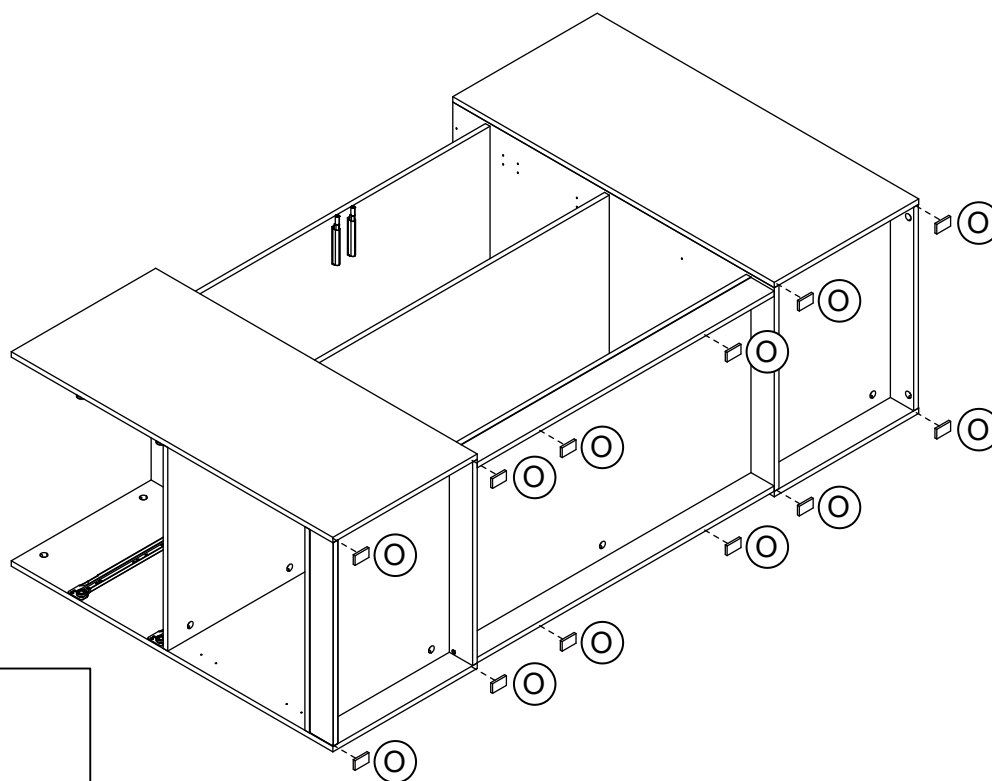


O




Foot pad x 12


I




II



Step 16

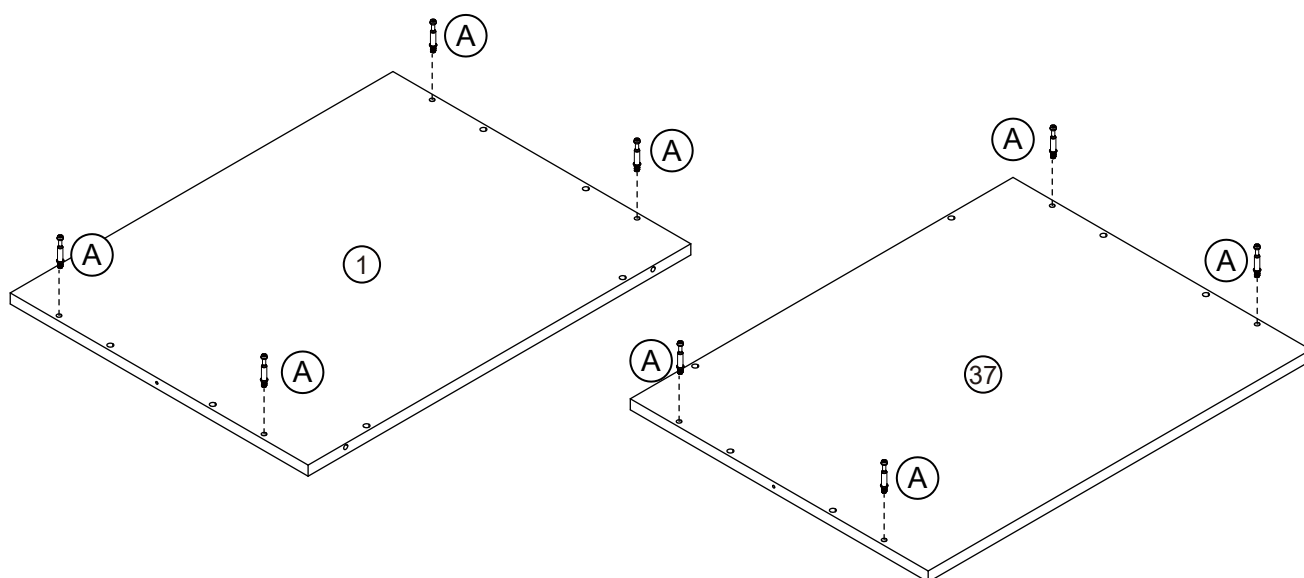


A



Cam Bolt x 8

Assembly Instructions

Step 17

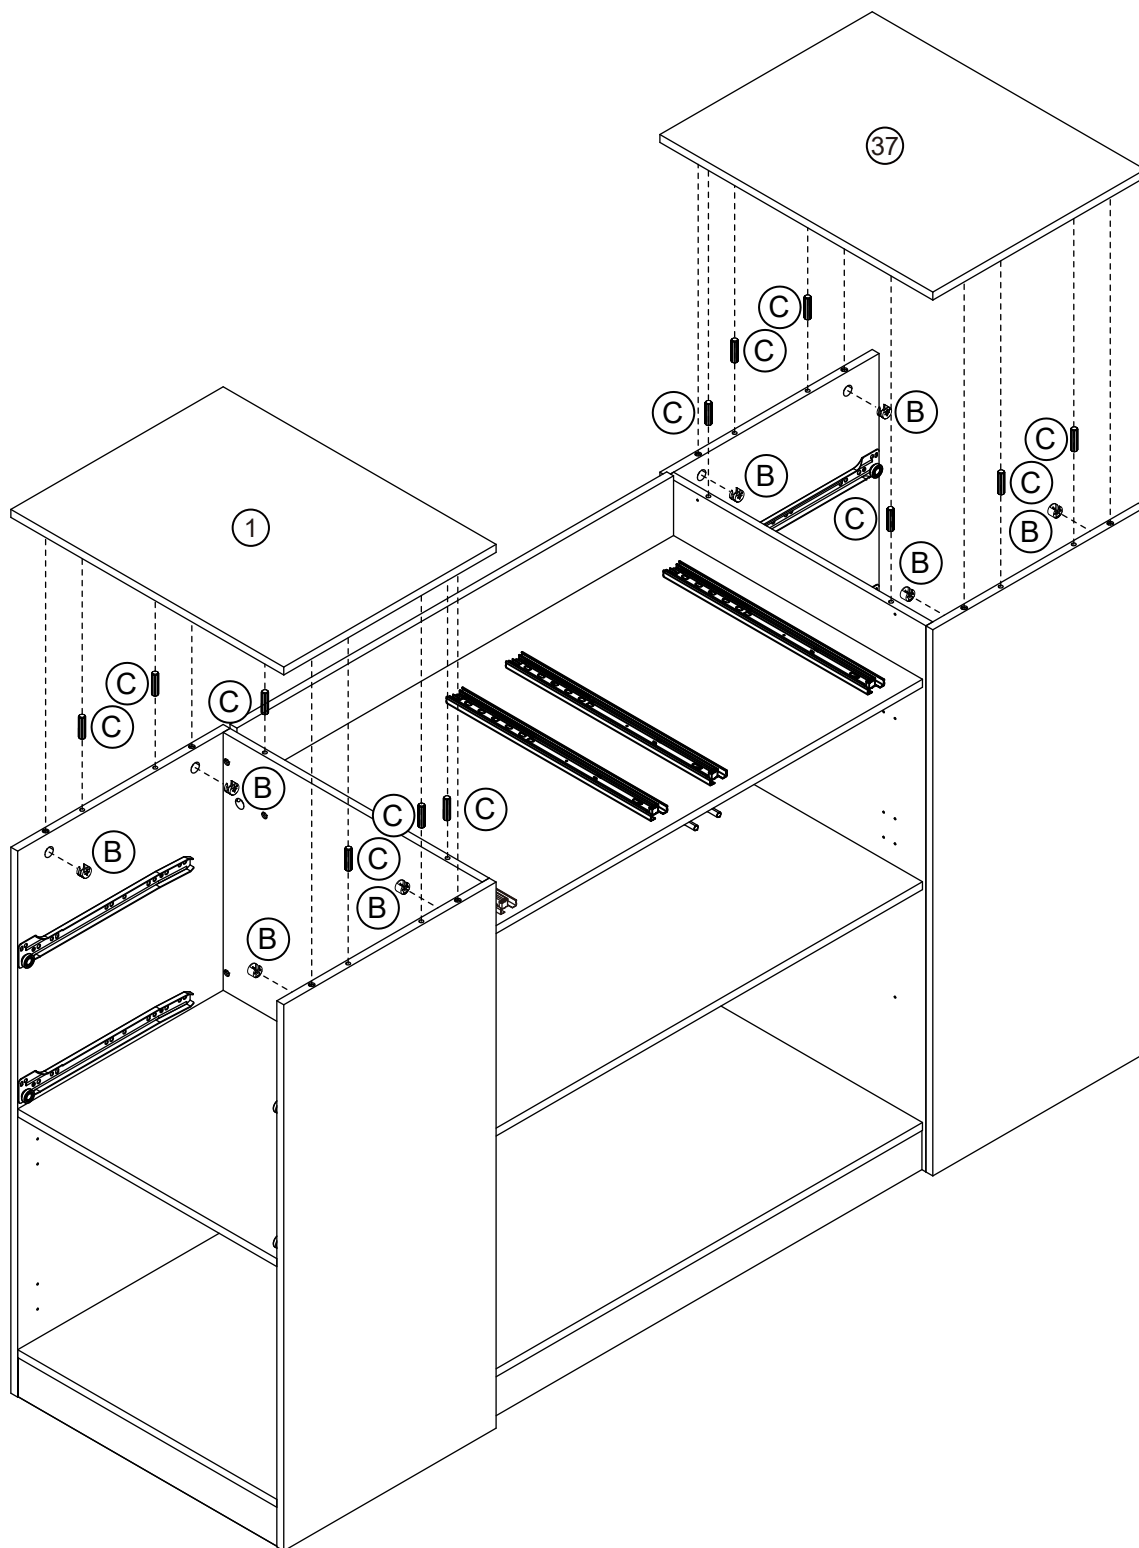

(B)



Cam lock x 8


(C)



6*30mm Dowel x 12

Assembly Instructions

Step 18

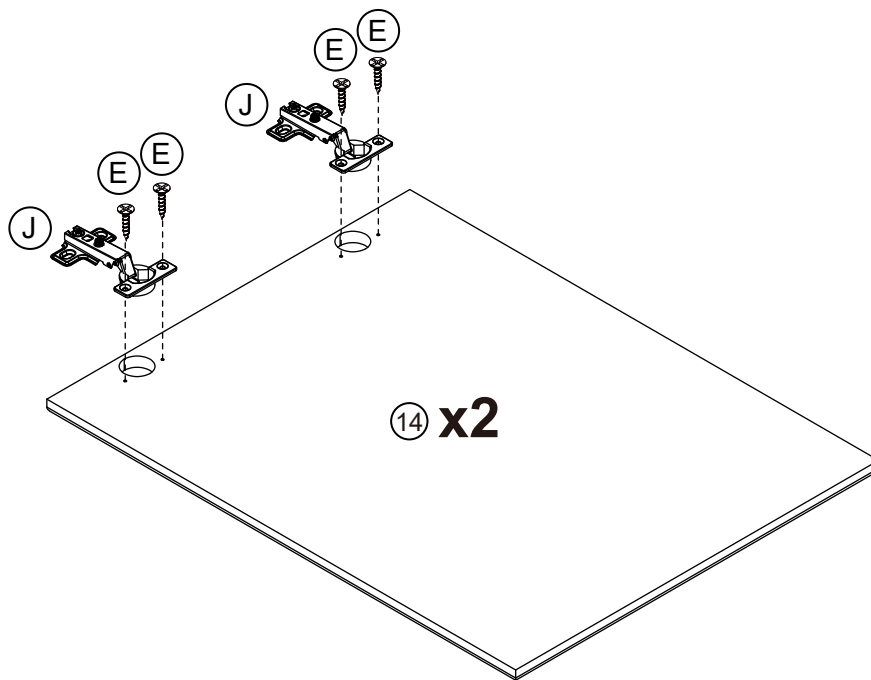


(E)




3.5*12mm Screw x 8

(J)



26mm hinge x 4

Step 19

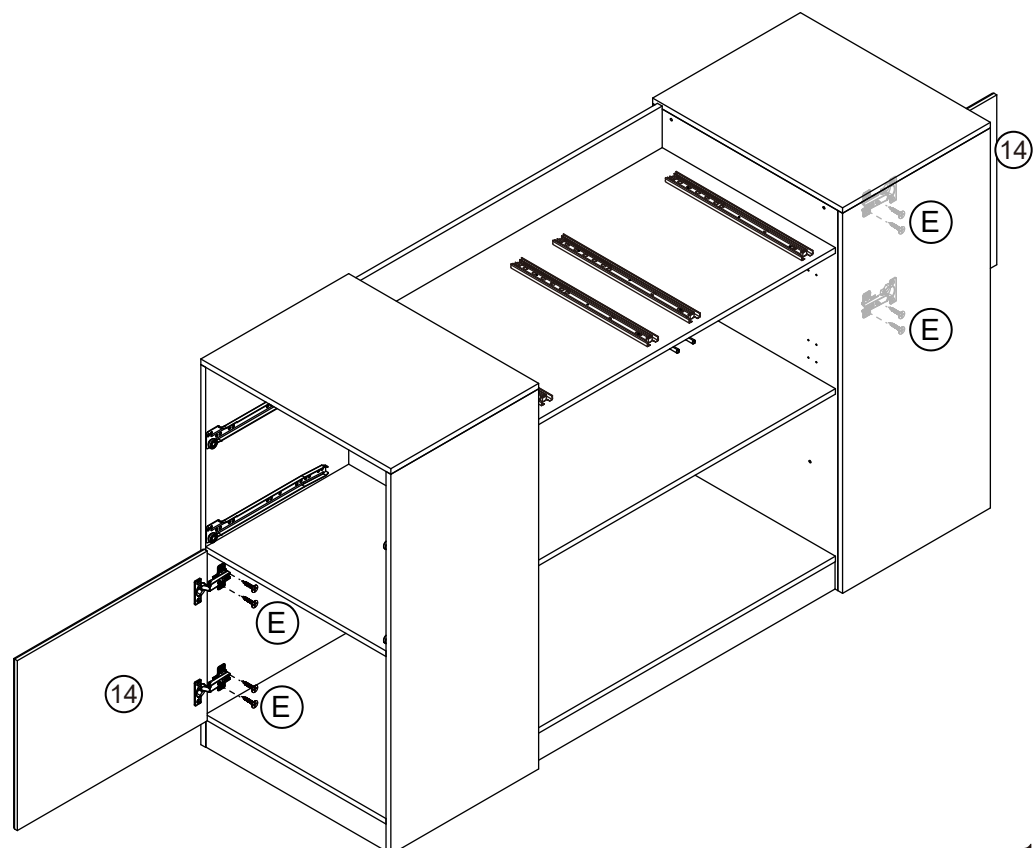


(E)



3.5*12mm Screw x 8

Assembly Instructions

Step 20

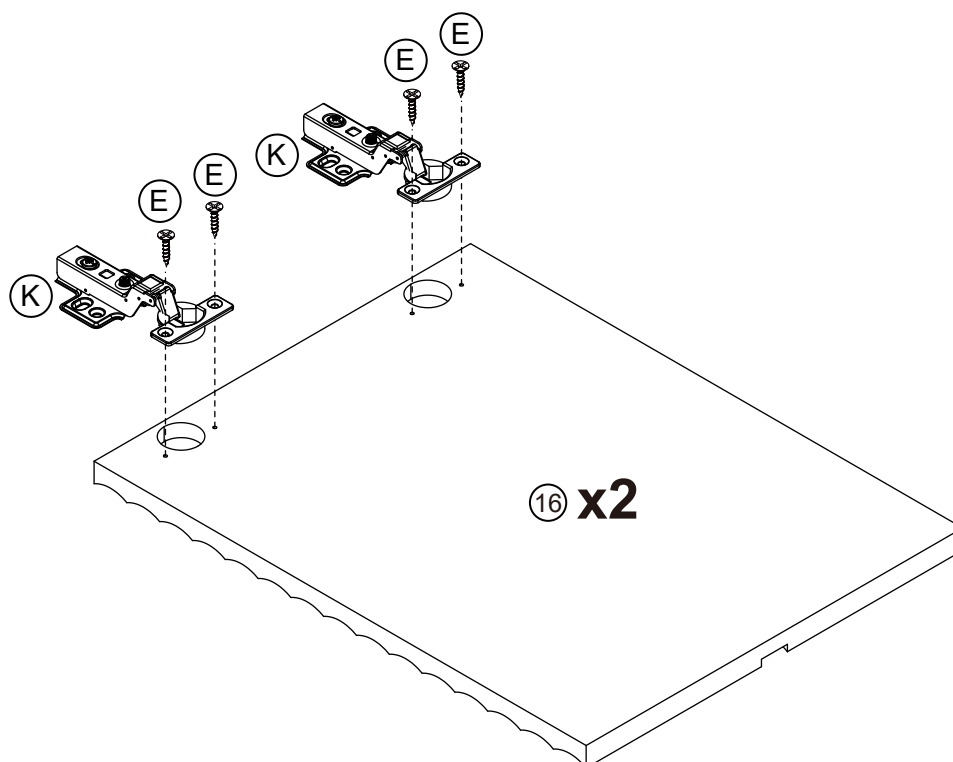


(E)




3.5*12mm Screw x 8

(K)



26mm hinge x 4

Step 21

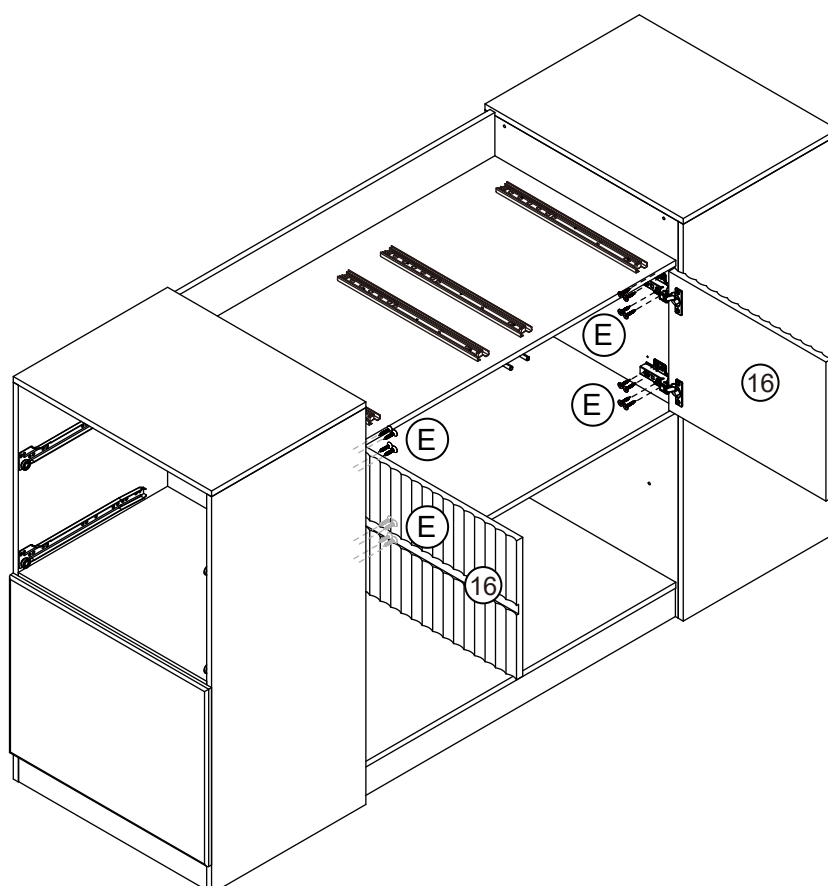


(E)



3.5*12mm Screw x 16

Assembly Instructions

Step 22

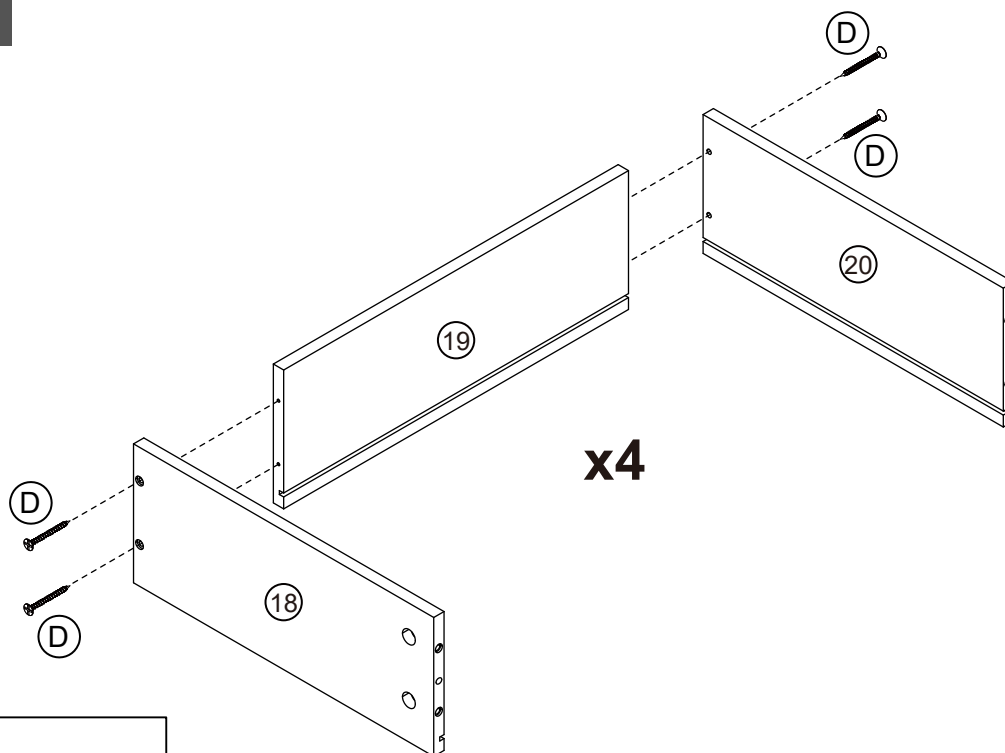


(D)




4*30mm Screw x 16

Step 23

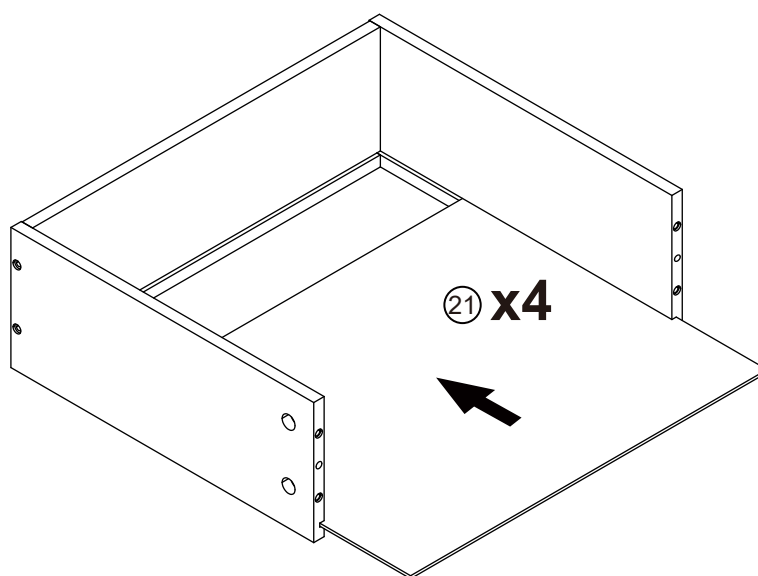


Assembly Instructions

Step 24

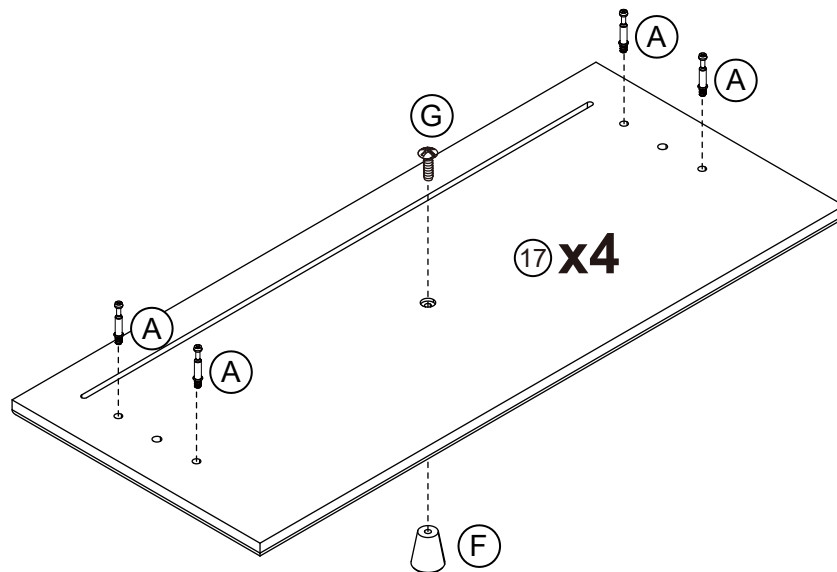

(A)



Cam Bolt x 16

(F)




Hold hands x 4

(G)



4*16mm Screw x 4

Step 25

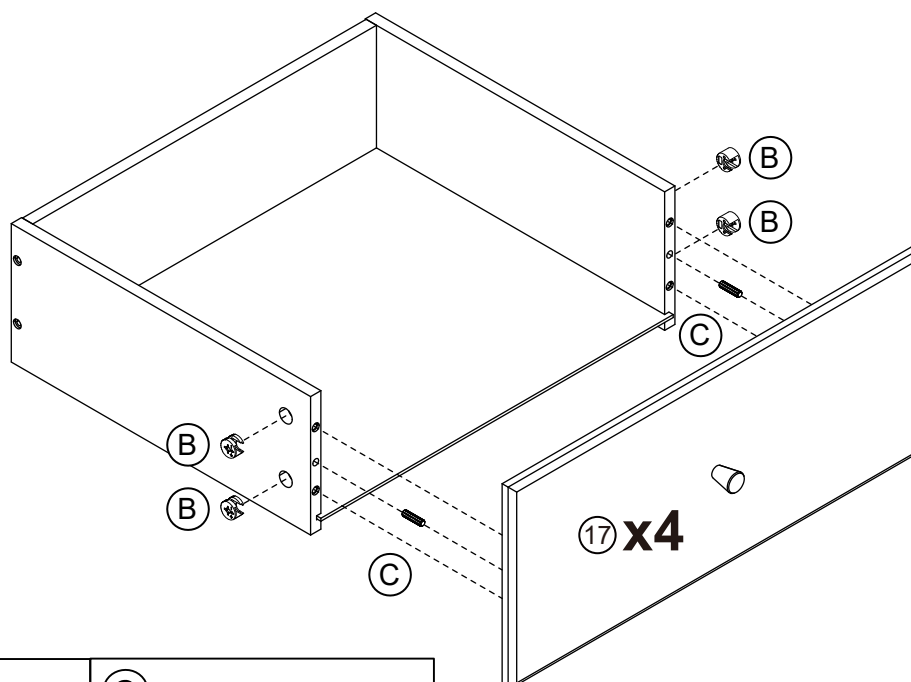

(B)



Cam lock x 16


(C)



6*30mm Dowel x 8

Assembly Instructions

Step 26

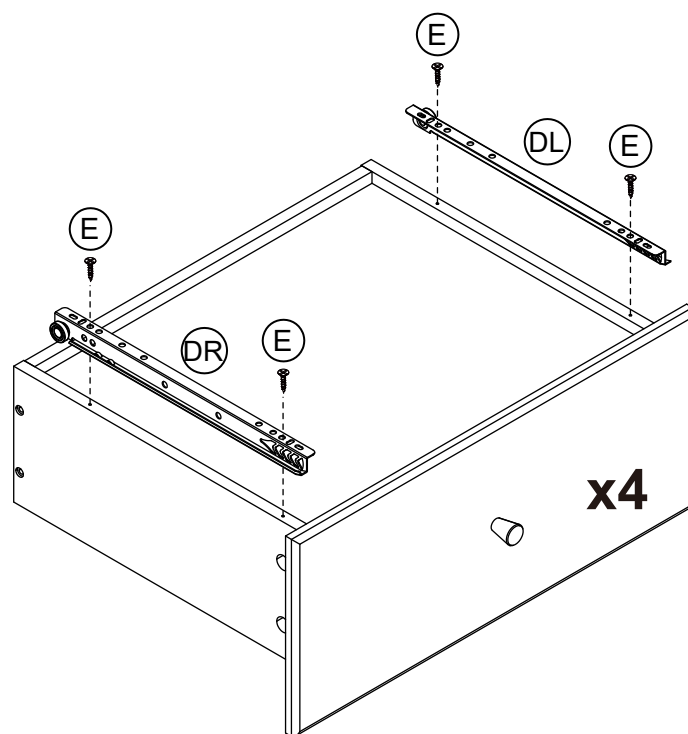


(E)




3.5*12mm Screw x 16

(DR)




Runner 300mm x 4

(DL)




Runner 300mm x 4

Step 27

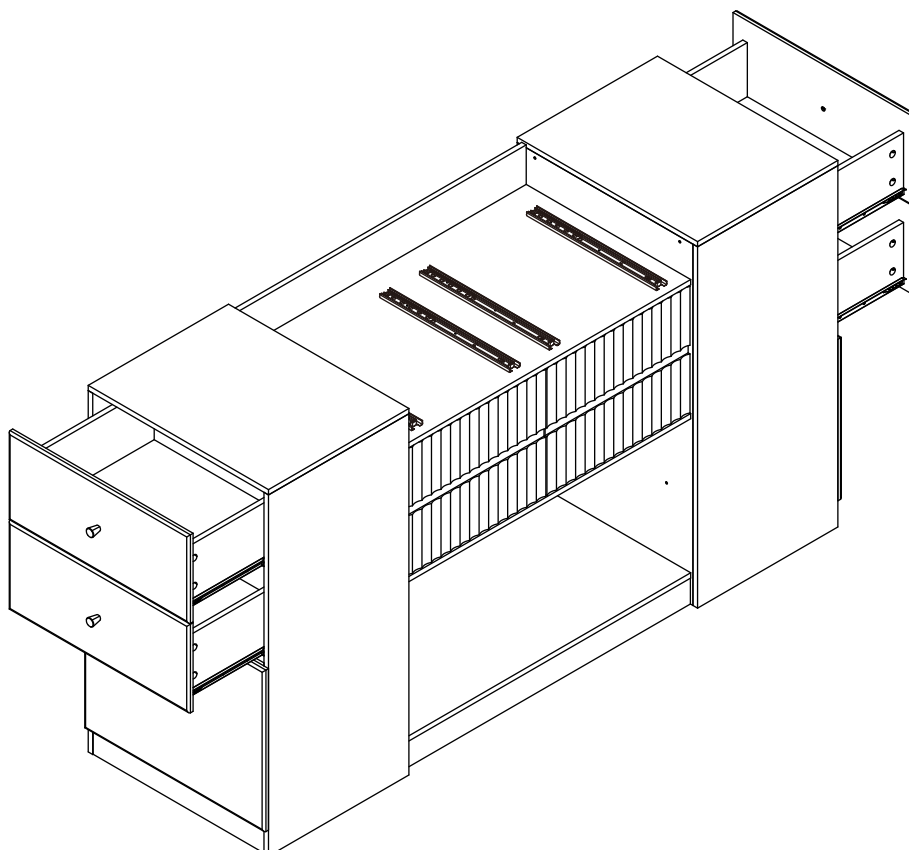


Assembly Instructions

Step 28

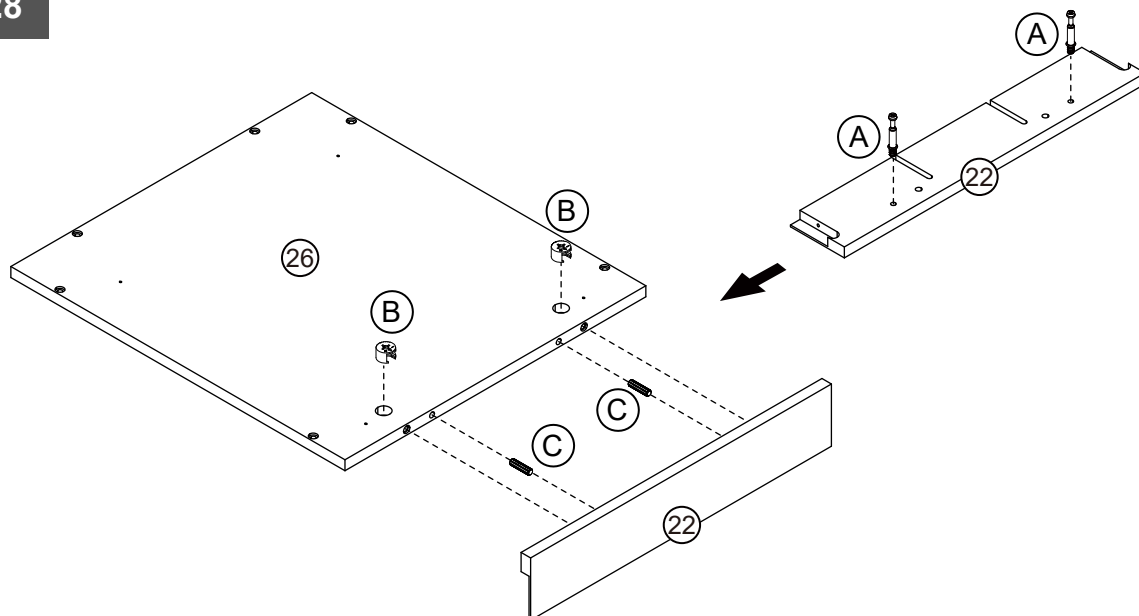

(A)



Cam Bolt x 2

(B)




Cam lock x 2

(C)




6*30mm Dowel x 2

Step 29

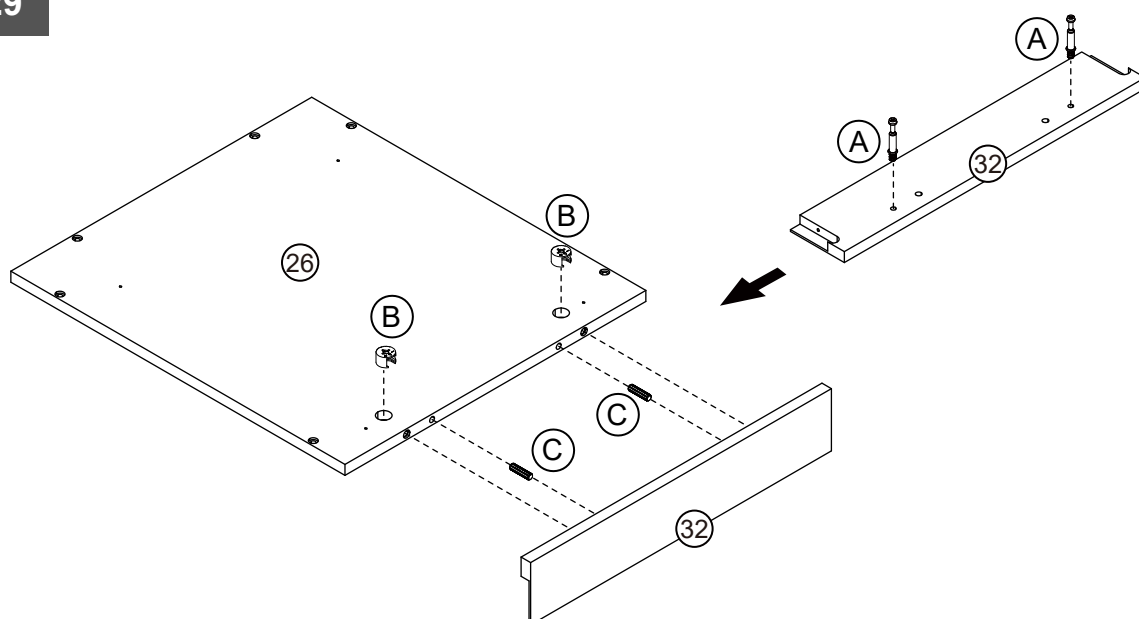

(A)



Cam Bolt x 2

(B)



Cam lock x 2


(C)



6*30mm Dowel x 2

Assembly Instructions

Step 30

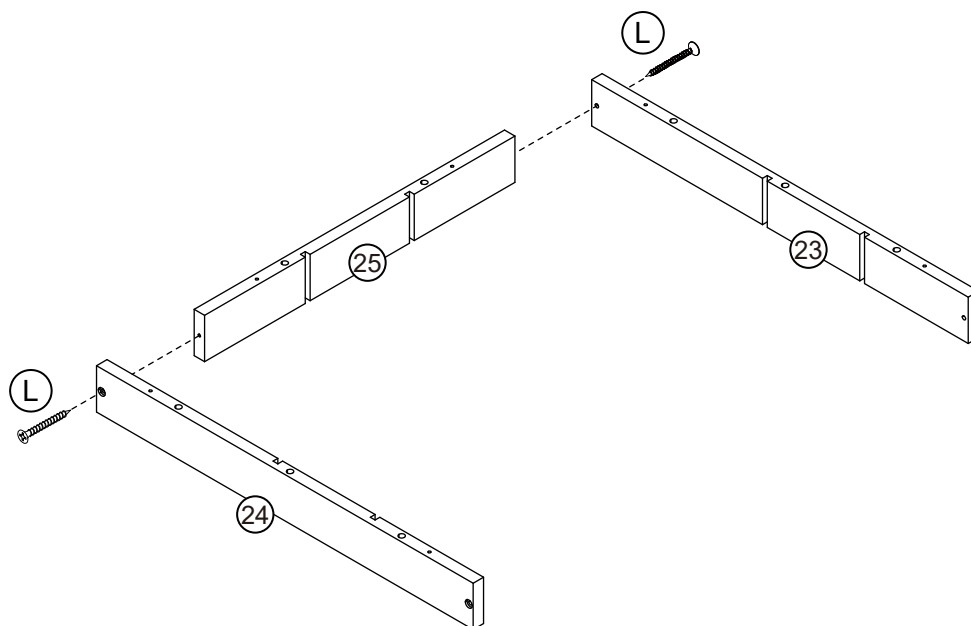


(L)




3*25mm Screw x 2

Step 31

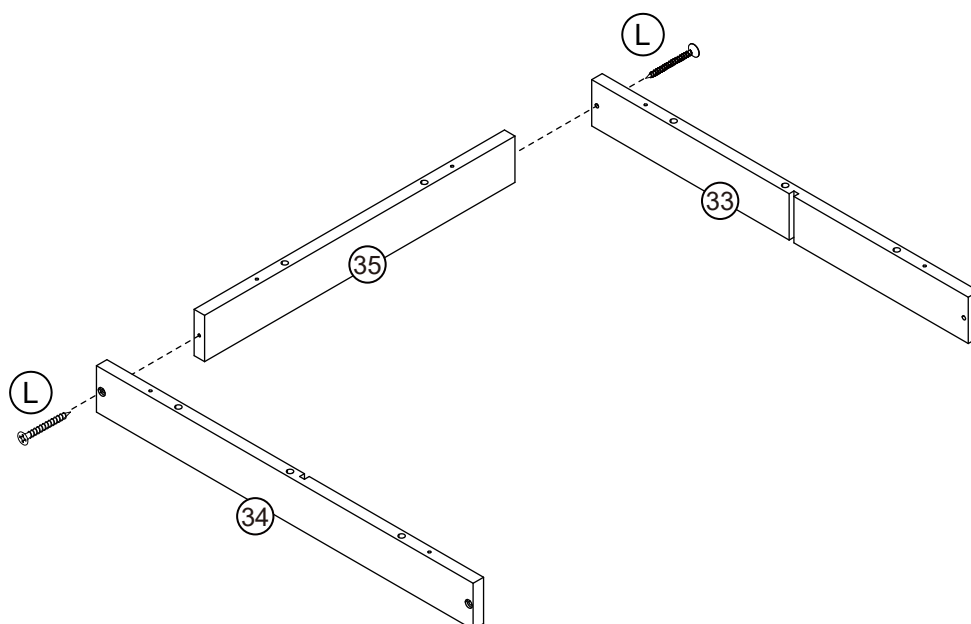


(L)



3*25mm Screw x 2

Assembly Instructions

Step 32

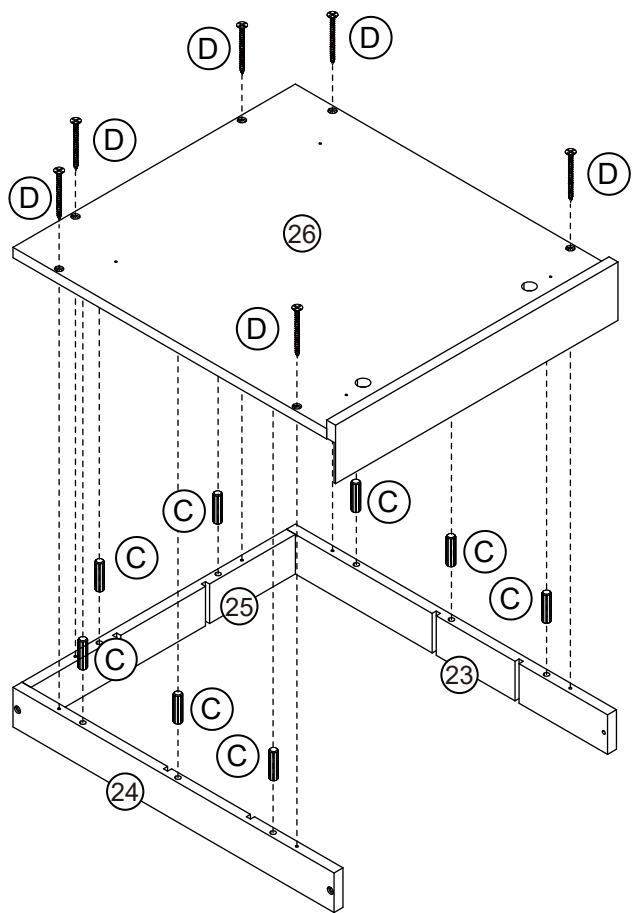

(C)




6*30mm Dowel x 8

(D)



4*30mm Screw x 6

Step 33

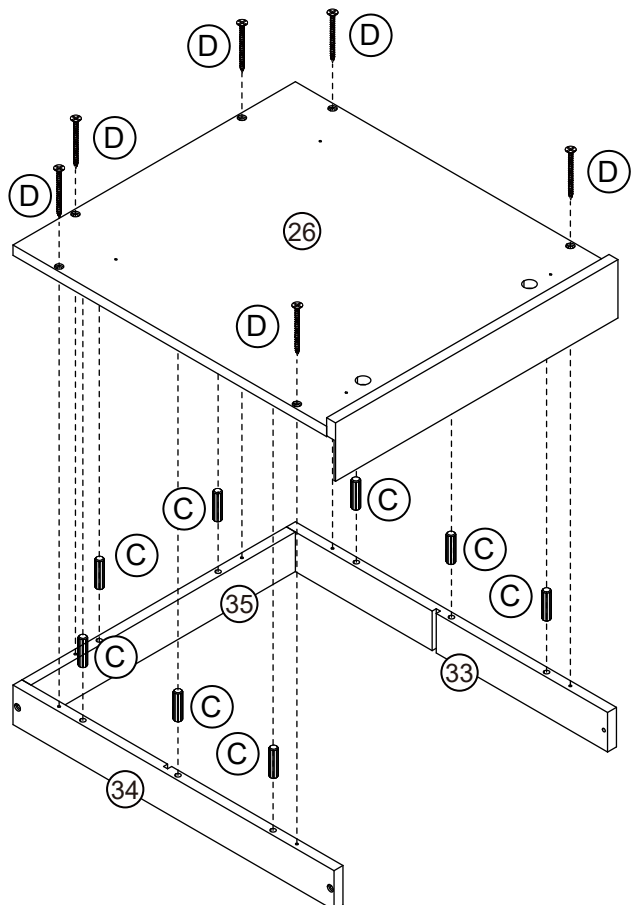

(C)



6*30mm Dowel x 8


(D)



4*30mm Screw x 6

Assembly Instructions

Step 34

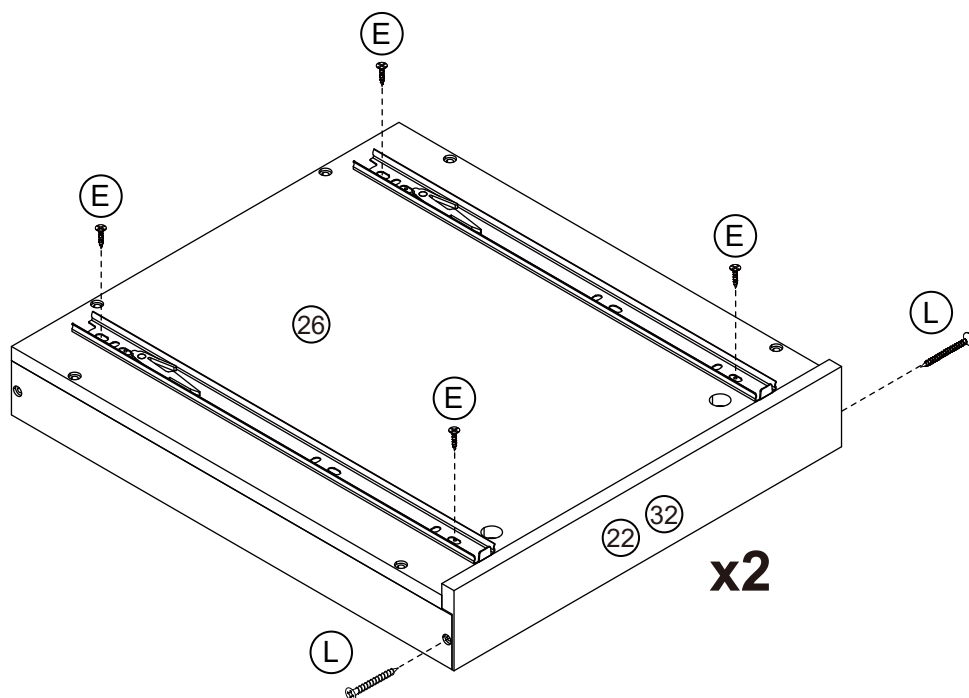

(E)





3.5*12mm Screw x 8

(L)




3*25mm Screw x 4

Step 35

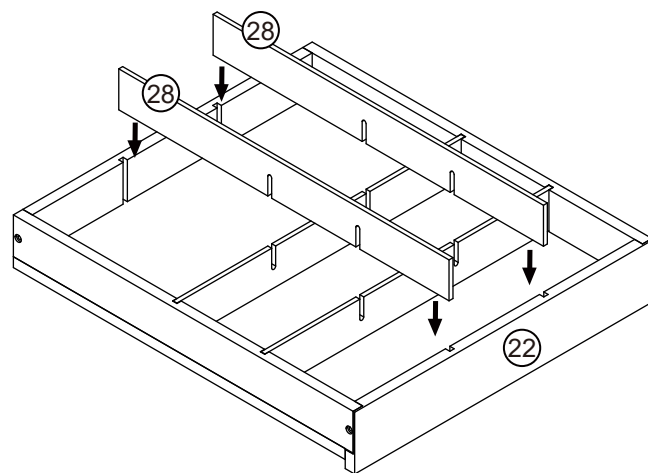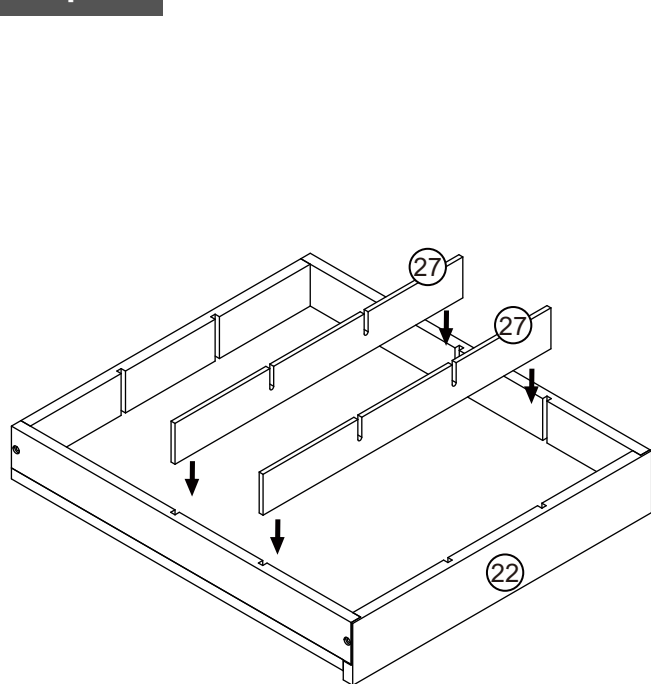


Assembly Instructions

Step 36

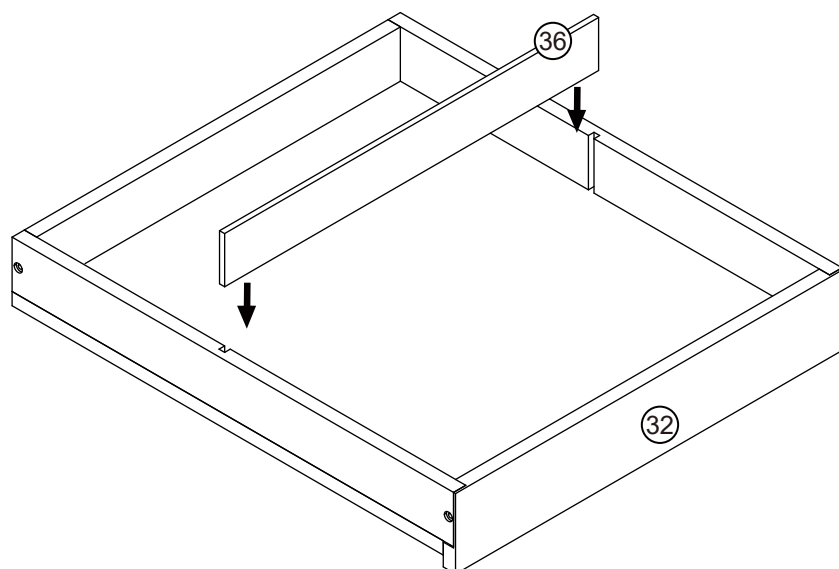

Step 37

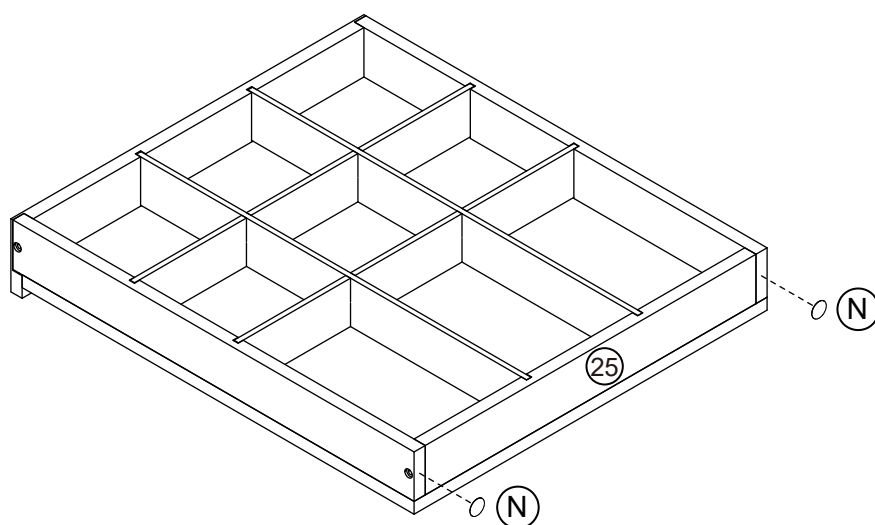



(N)






fisheye x 2

Assembly Instructions

Step 38

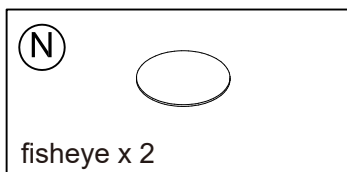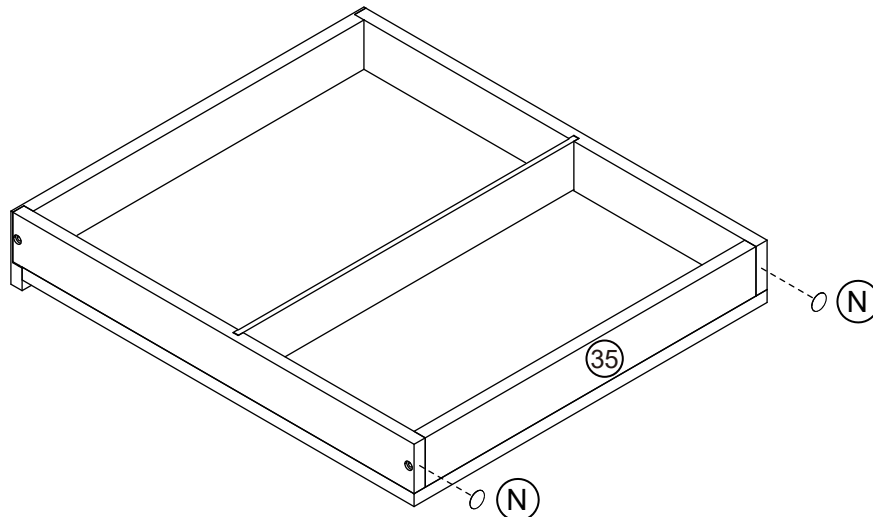


Step 39

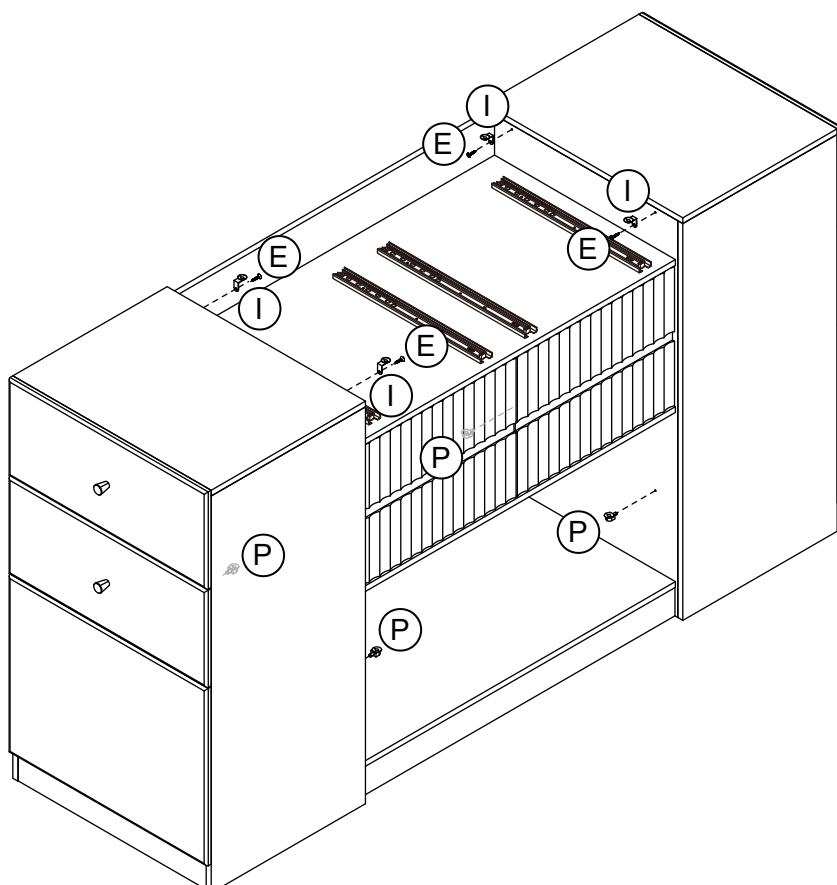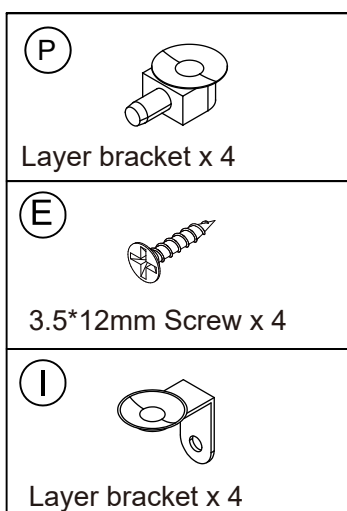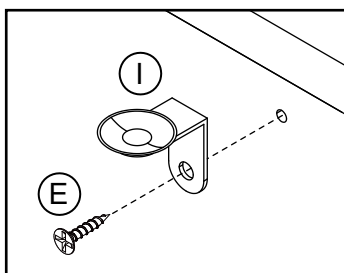


Assembly Instructions

Step 40





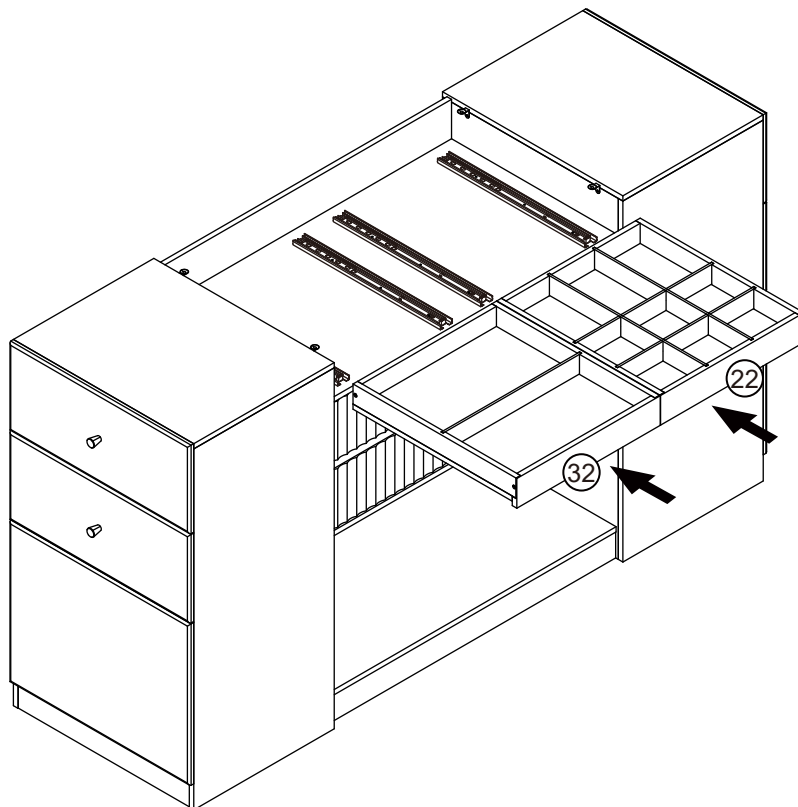


Step 41

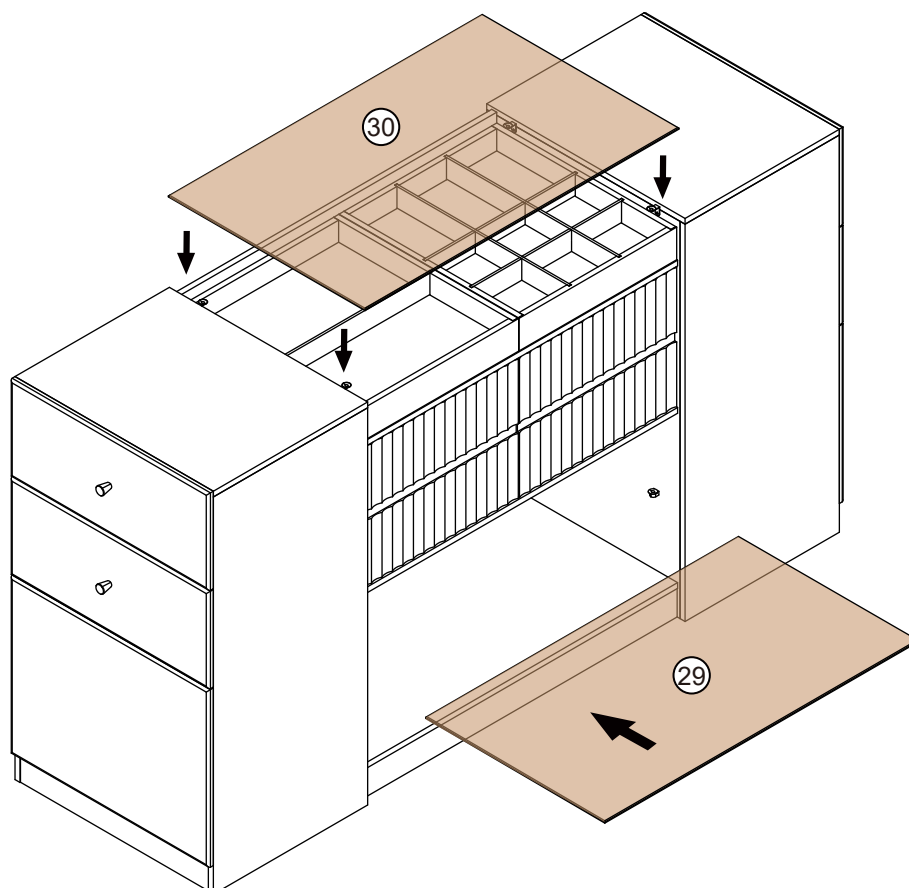

Assembly Instructions

Step 42

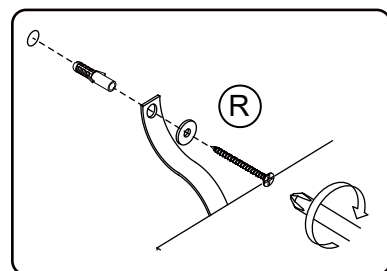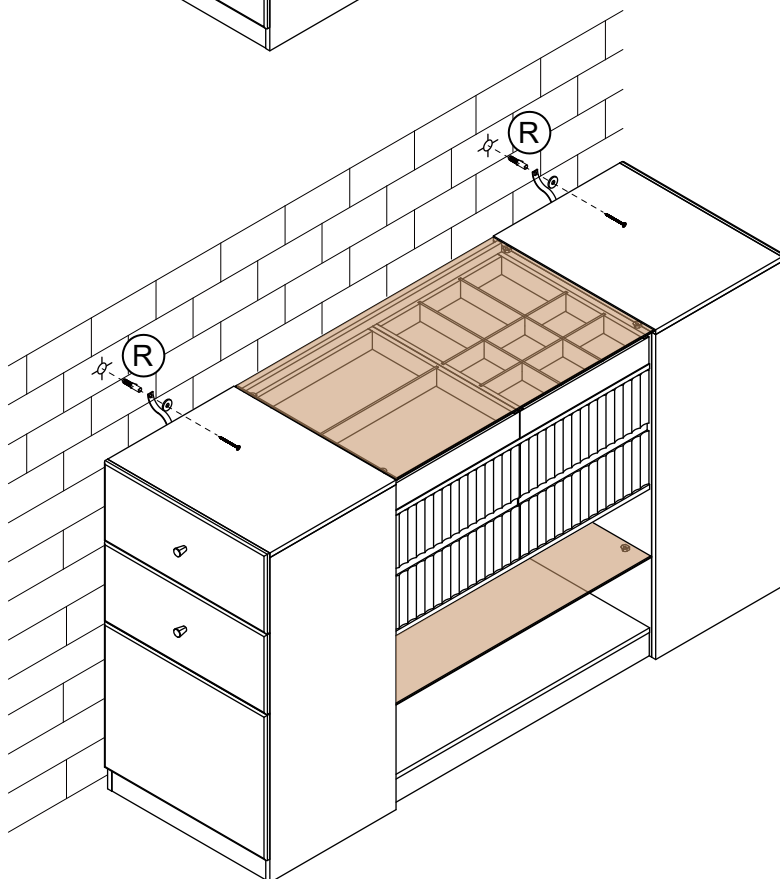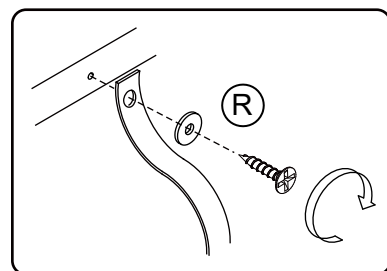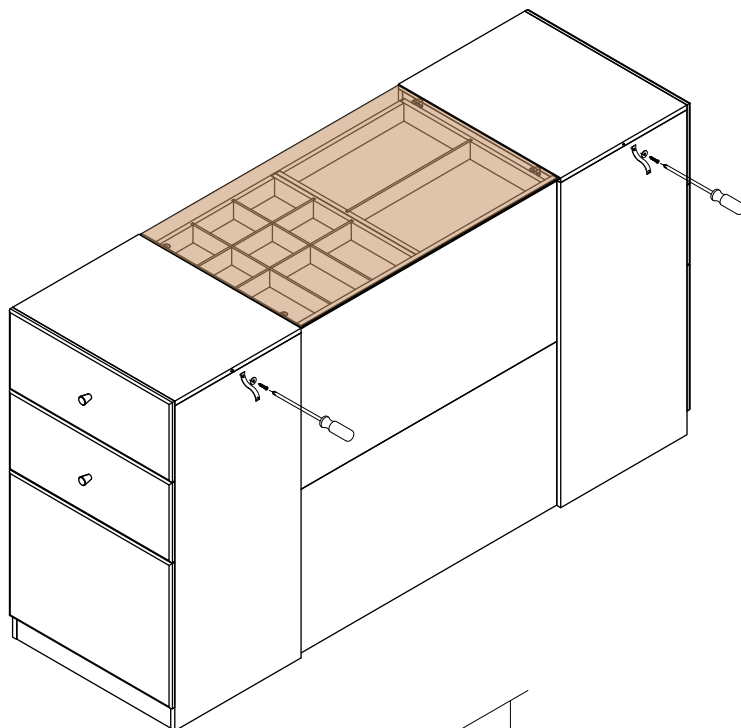

Tilting prevention x 2