

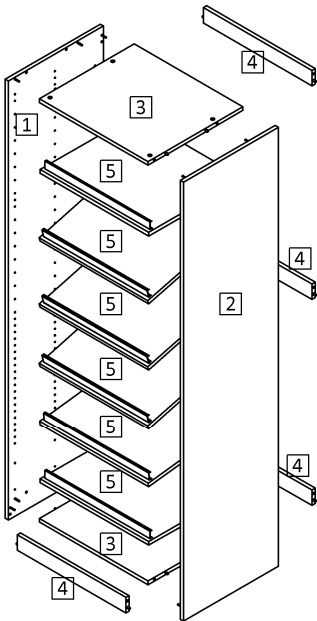


ASSEMBLY INSTRUCTIONS:
1- PLEASE READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING ASSEMBLY;
2- THE ASSEMBLY MUST BE EXECUTED ON A FLAT AND CLEAN SURFACE;
3- FOR CLEANING PLEASE USE A WATER SEMI WET CLEAN CLOTH FOLLOWING BY A DRY CLEAN CLOTH;
4- DO NOT USE ABRASIVES SOLUTIONS;



ASSEMBLY INSTRUCTIONS
BOX 04

| PART LIST | | |
|-------------|-----|------------------|
| PART NUMBER | Qty | DESCRIPTION: |
| 1 | 1 | LEFT SIDE PANEL |
| 2 | 1 | RIGHT SIDE PANEL |
| 3 | 2 | BOTTOM/TOP PANEL |
| 4 | 4 | FRAME |
| 5 | 6 | SHOE RACK |


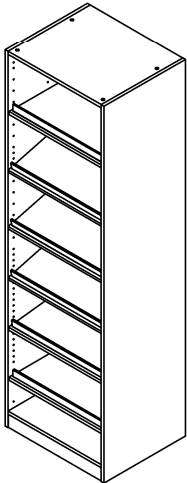


| HARDWARE | 08 | 16 | 16 | 16 | 06 | 06 | 06 | 10 |
|----------|---------------|-----------------|----------|---------------------|--------------------|-------------------|--------------|--------------------|
| | | | | | | | | |
| | SHELF SUPPORT | CAM LOCK SCREWS | CAM LOCK | DOWEL 5/16 X 1 3/16 | SCREW 5/32 X 2 3/4 | SCREW 1/4 X 2 3/4 | PLASTIC PLUG | SCREW 9/64 X 1 1/4 |

PREPARATION OF BOTTON/TOP PANELS

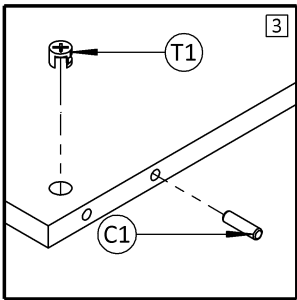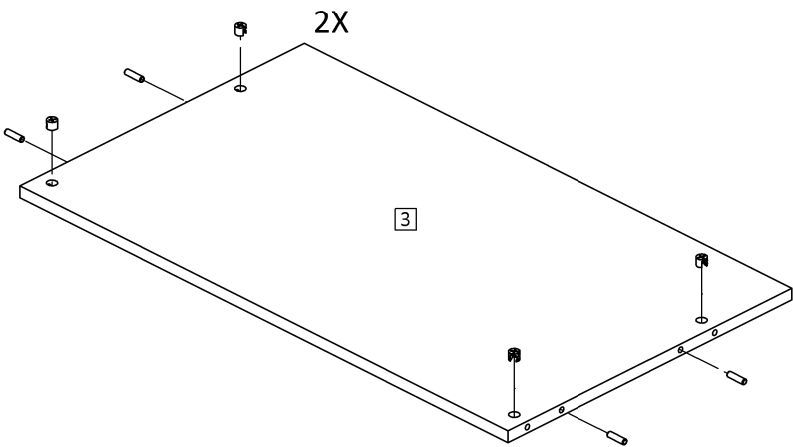


STEP 02
PREPARATION OF THE SIDE PANELS

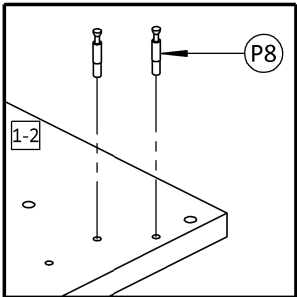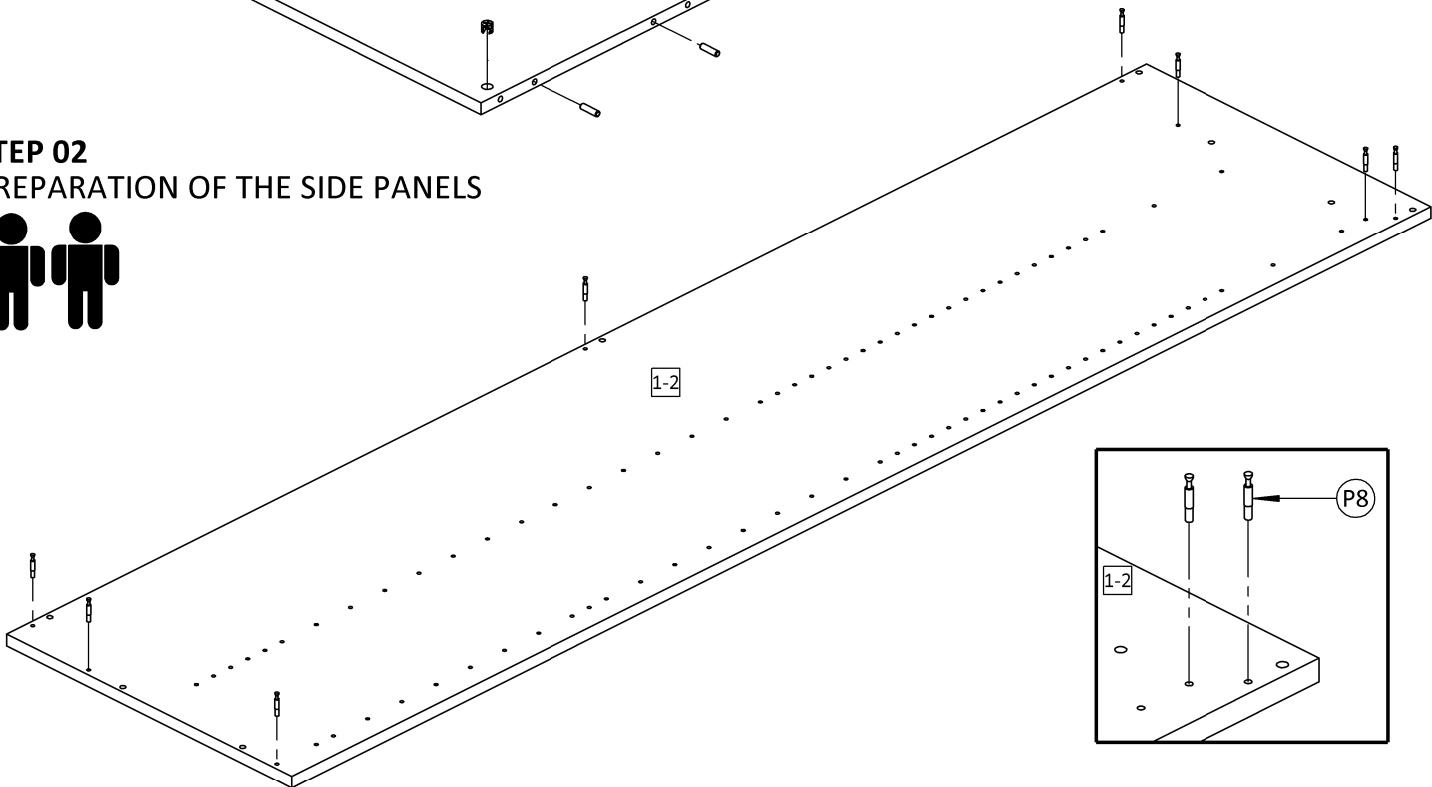


STEP 03
PREPARATION OF THE FRAMES

ASSEMBLY INSTRUCTIONS
BOX 04



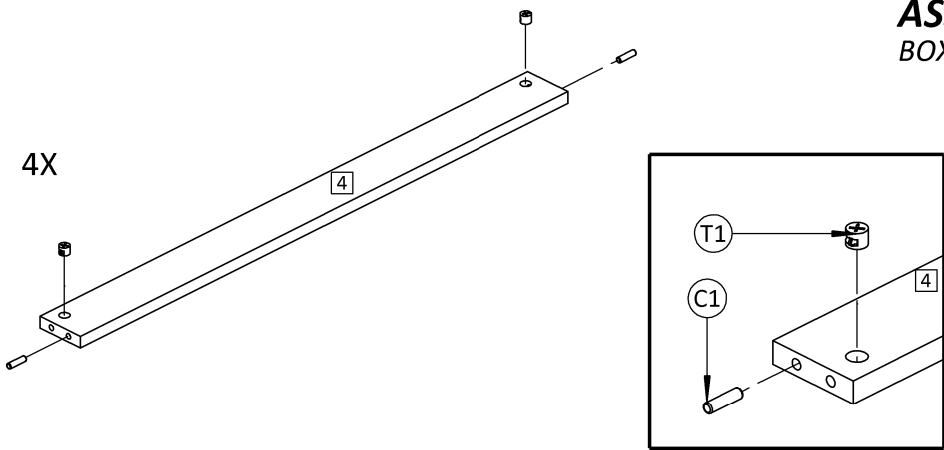


STEP 04
LEFT, TOP, BOTTOM PANELS AND FRAMES ASSEMBLY

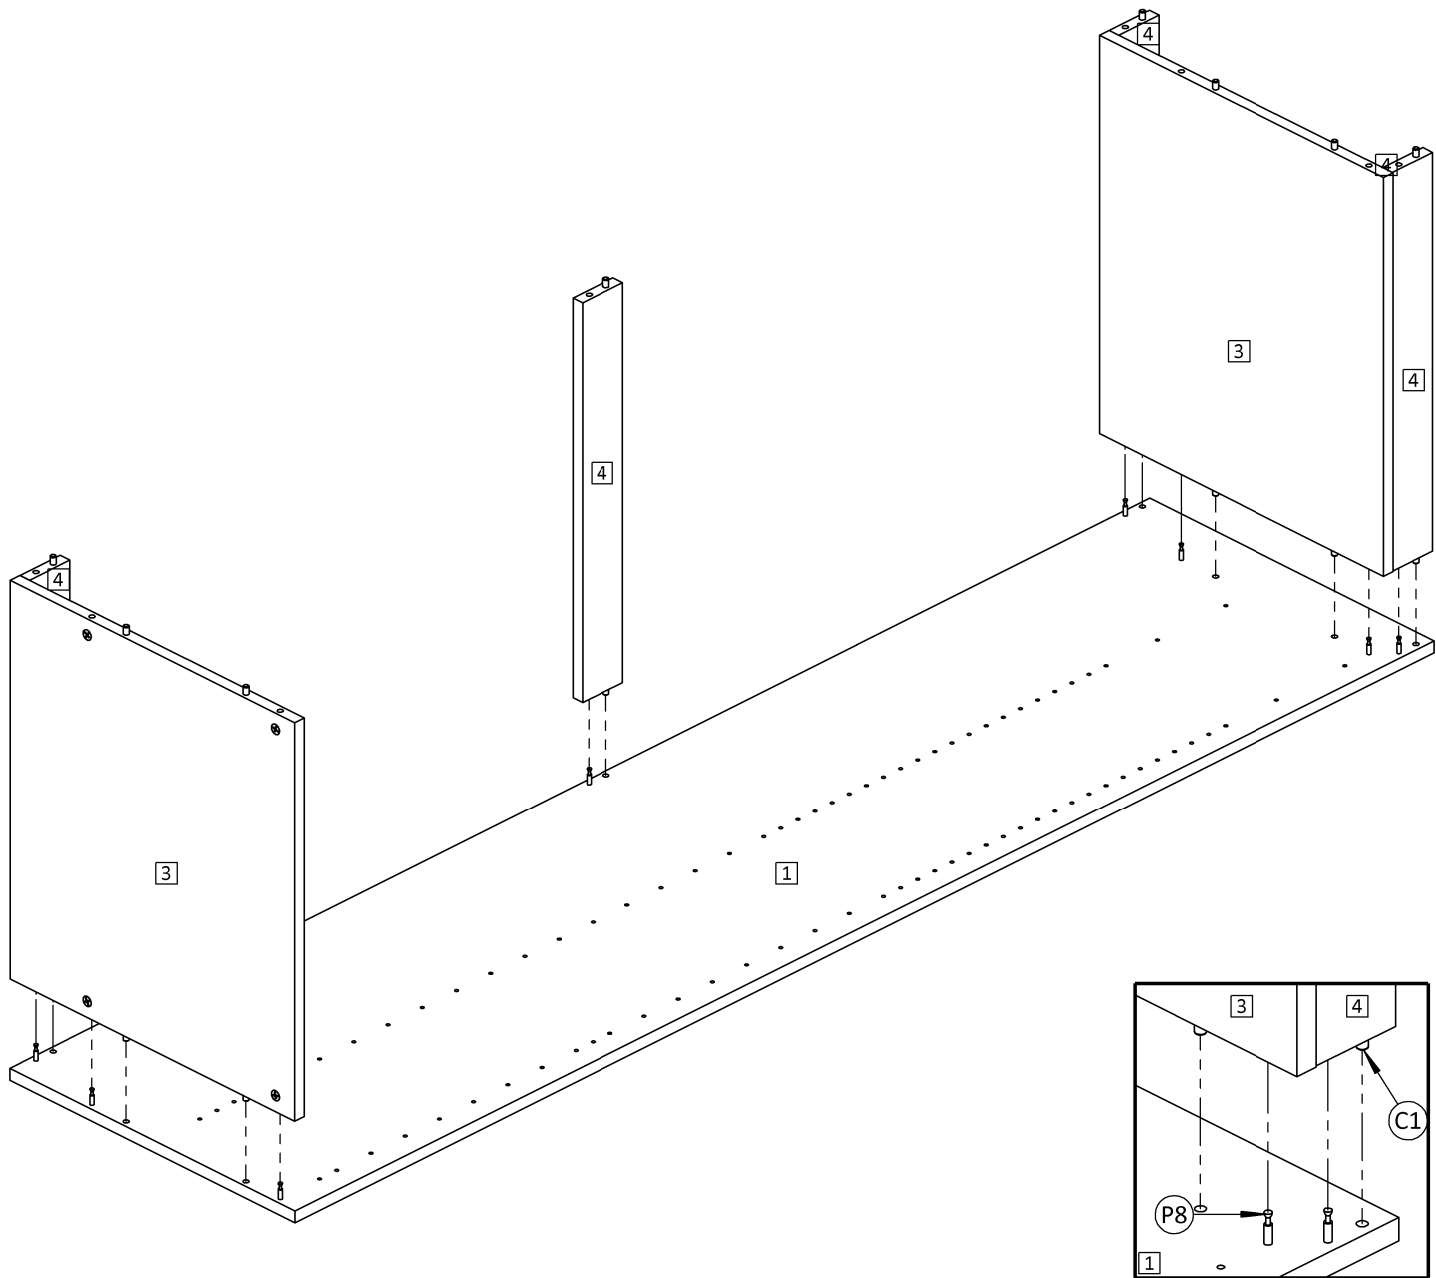

STEP 05
RIGHT SIDE PANEL ASSEMBLY

ASSEMBLY INSTRUCTIONS
BOX 04

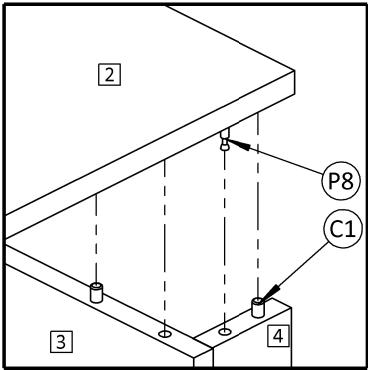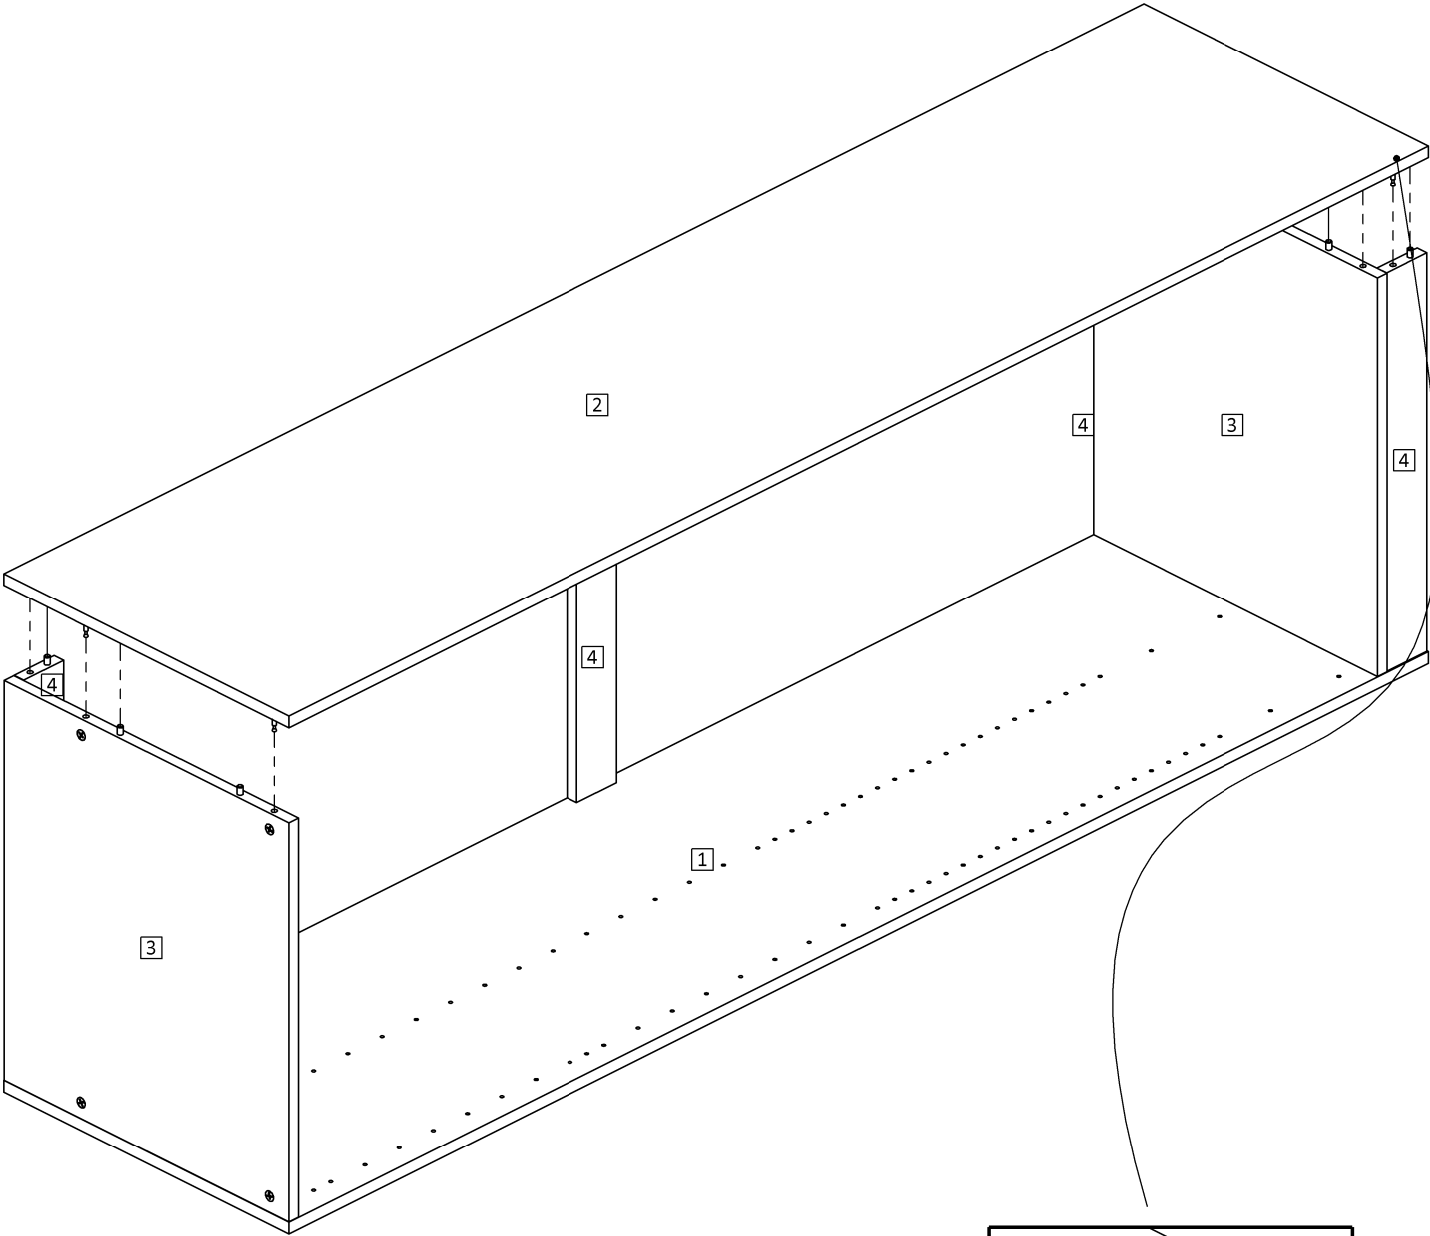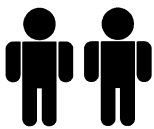



STEP 06
FIXING THE CABINET ON THE WALL





IT IS REQUIRED TO FIX
THE CABINETS ON THE WALL
RISK OF FALL!

ASSEMBLY INSTRUCTIONS
BOX 04

DRILL THE WALL
USING A DRILLER
IN ORDER TO
INSERT THE PLUG

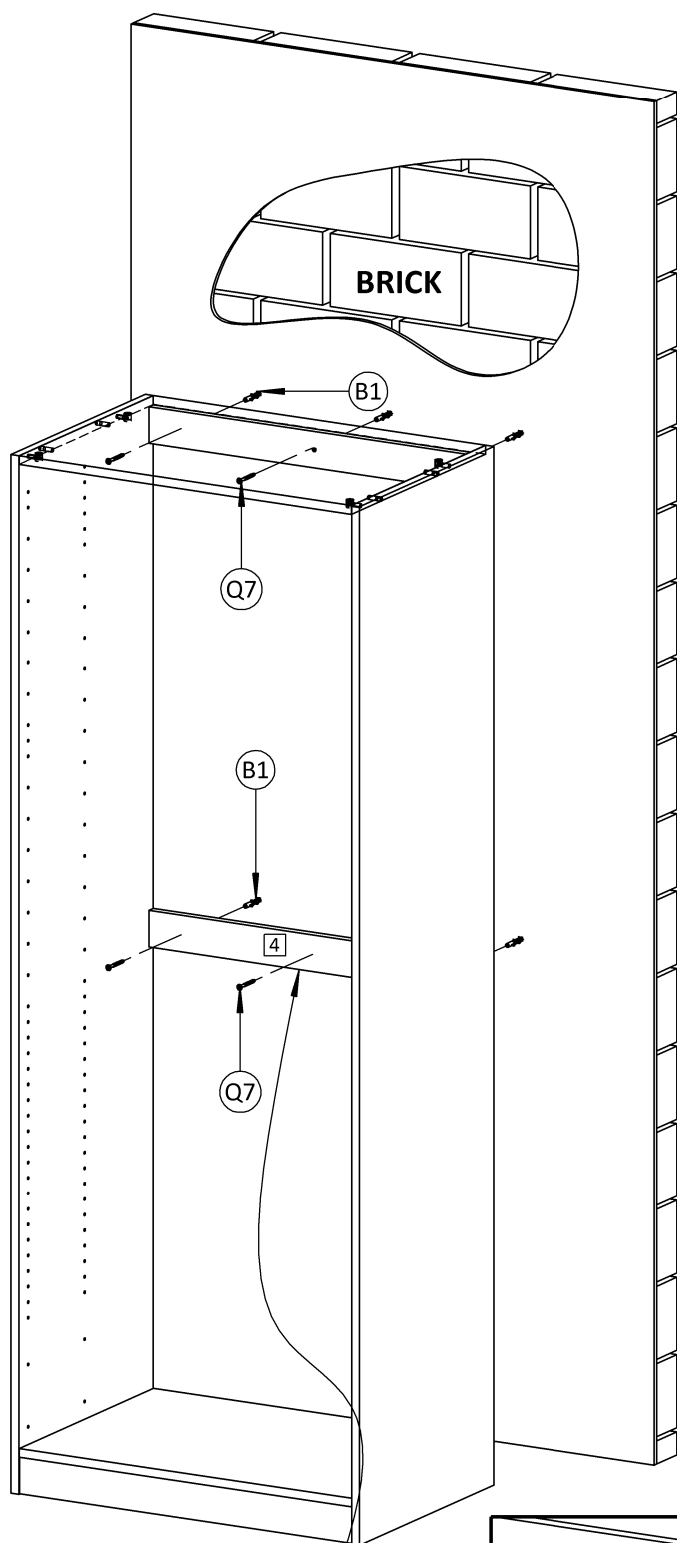



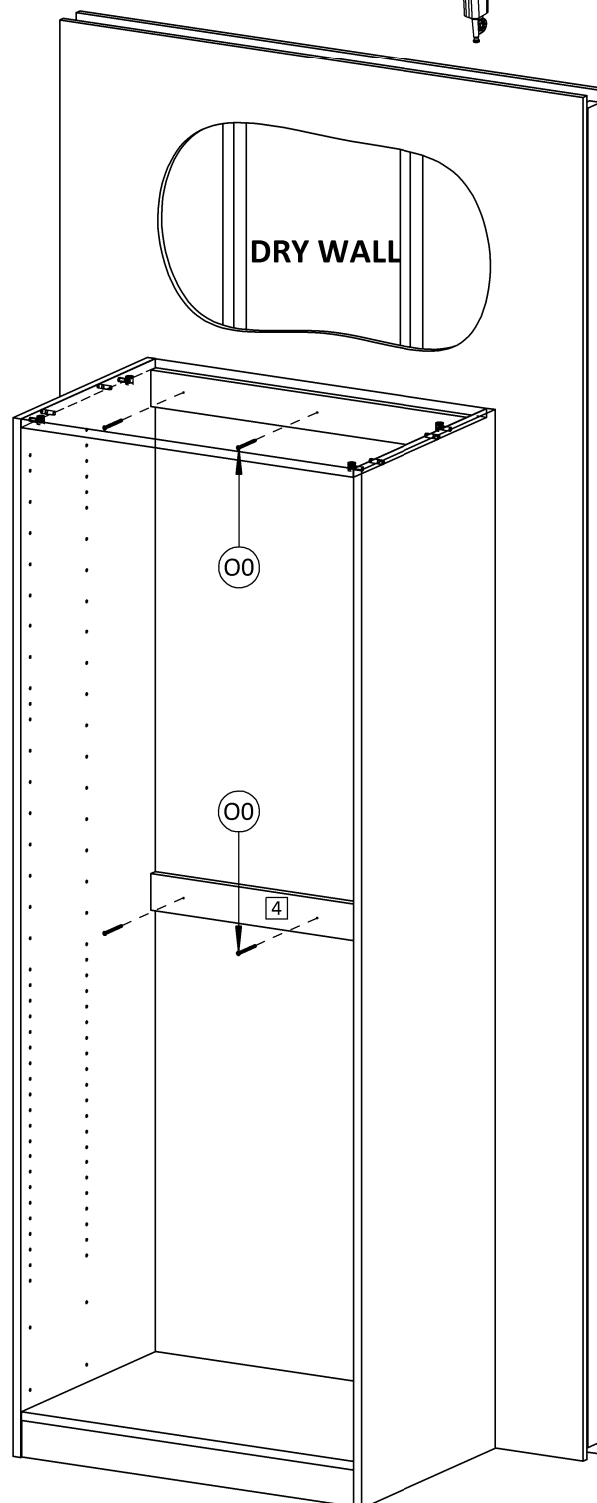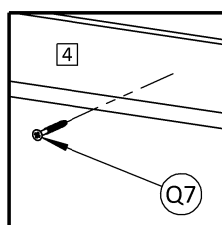

SCREW IN THE CENTER
OF THE FRAME




**THE CABINET MUST ALWAYS BE
SUPPORTED ON THE GROUND**

ASSEMBLY INSTRUCTIONS
BOX 04


FIXING THE SHOE RACK INSIDE THE CABINET

| | | | | | | | | |
|----------------------------------|--------------------|---|---------------|---|---------------|---|---------------------|---|
| FIXING SHOE RACK HARDWARES | 18 |  | 12 |  | 12 |  | 12 |  |
| | SCREW 5/32 X 35/64 | | SHELF SUPPORT | | SHOE RACK PIN | | SCREW 15/64 X 33/64 | |


STEP 07
FIX THE SHOE RACK SUPPORTS
ON THE SIDE PANNELS

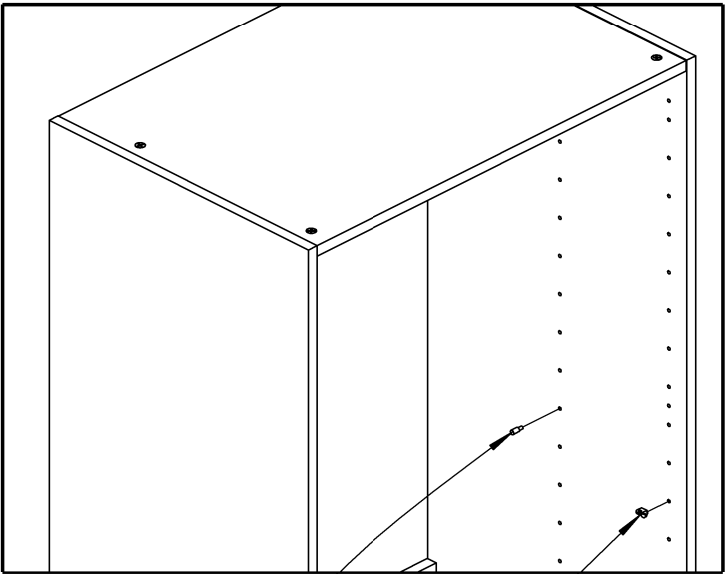



BACK

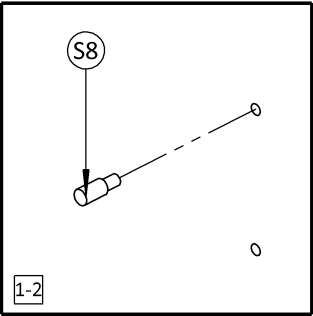


FRONTAL

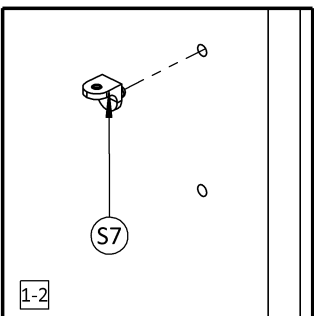

THE BACK PIN CAN BE FIXED UP 1,2" OR 2,5"
IN RELATION TO THE FRONTAL SUPPORT

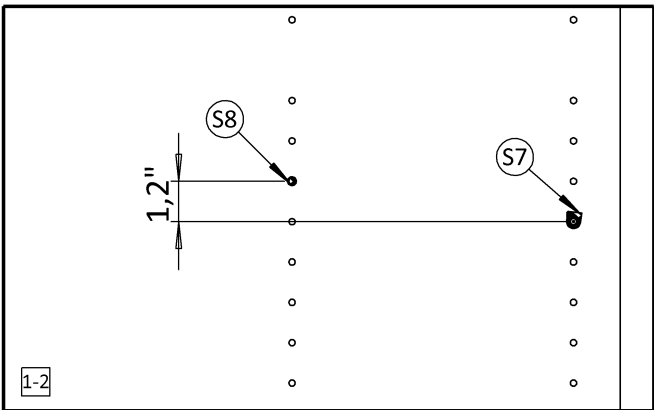
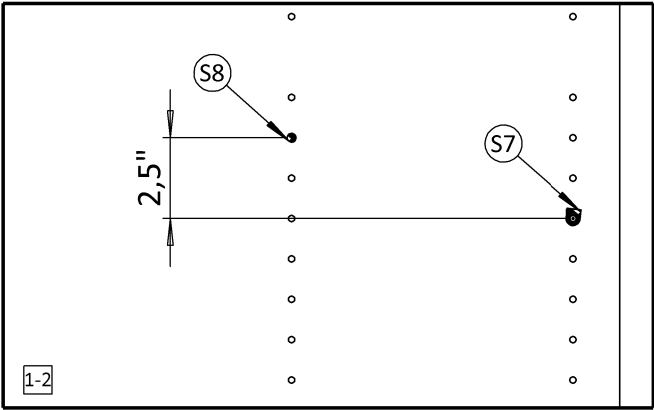


STEP 08
SHOE RACKINSIDE ASSEMBLY

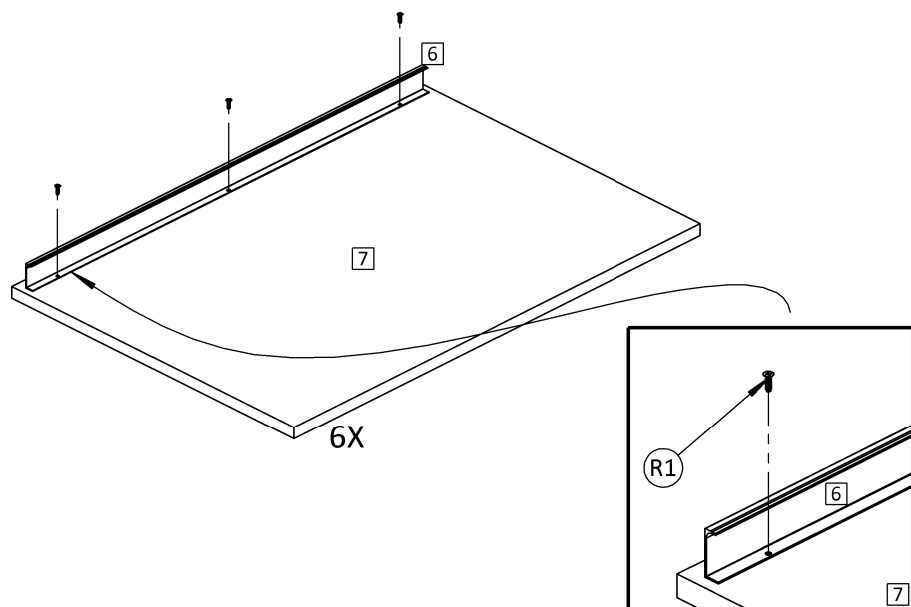


ASSEMBLY INSTRUCTIONS
BOX 04

STEP 08
FIX SHOE RACKINSIDE THE CABINET

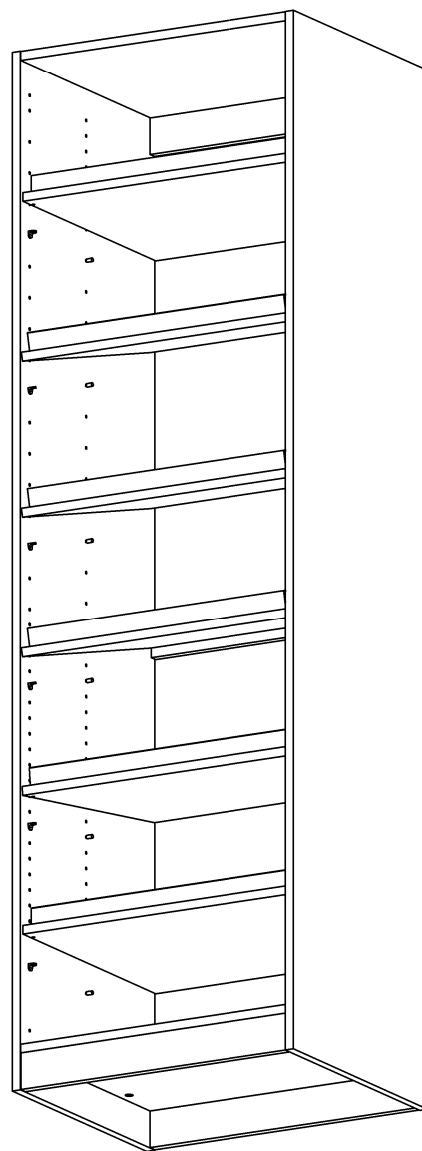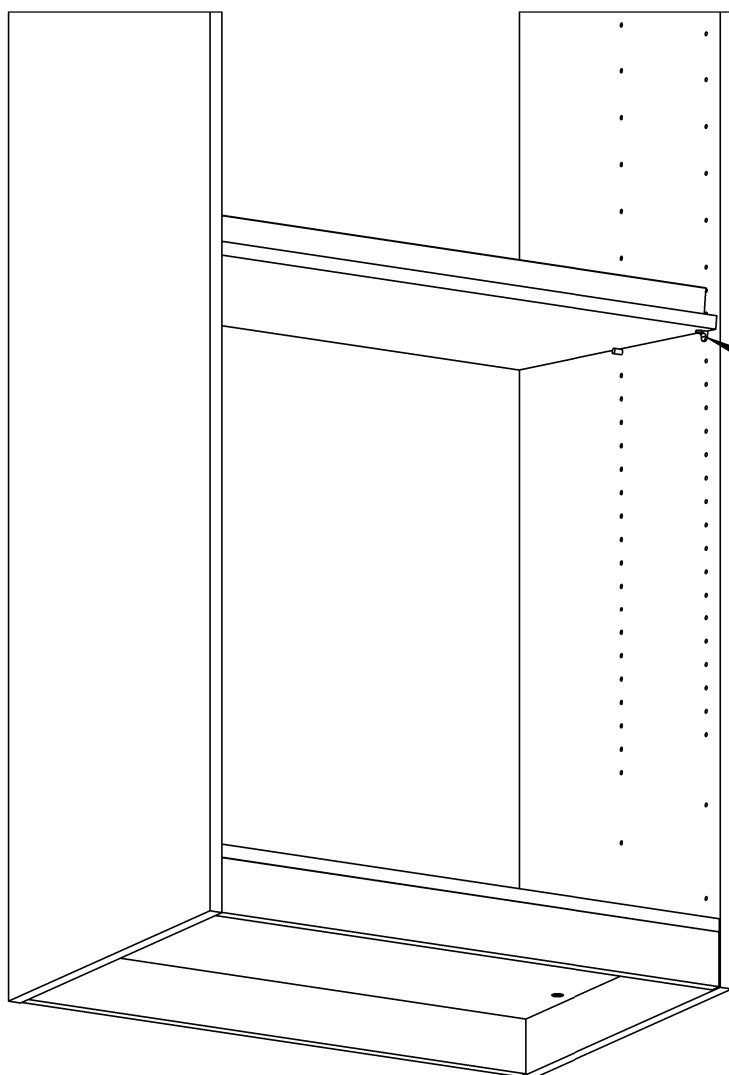

FIX THE SHOE RACK SUPPORTS
ON THE SIDE PANNELS

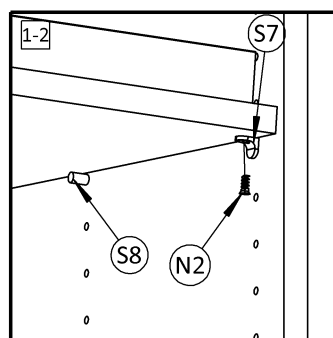

STEP 10
JOIN THE CABINETS

ASSEMBLY INSTRUCTIONS
BOX 04

