




Installation Diagram

Product Name: Full-Length Mirror

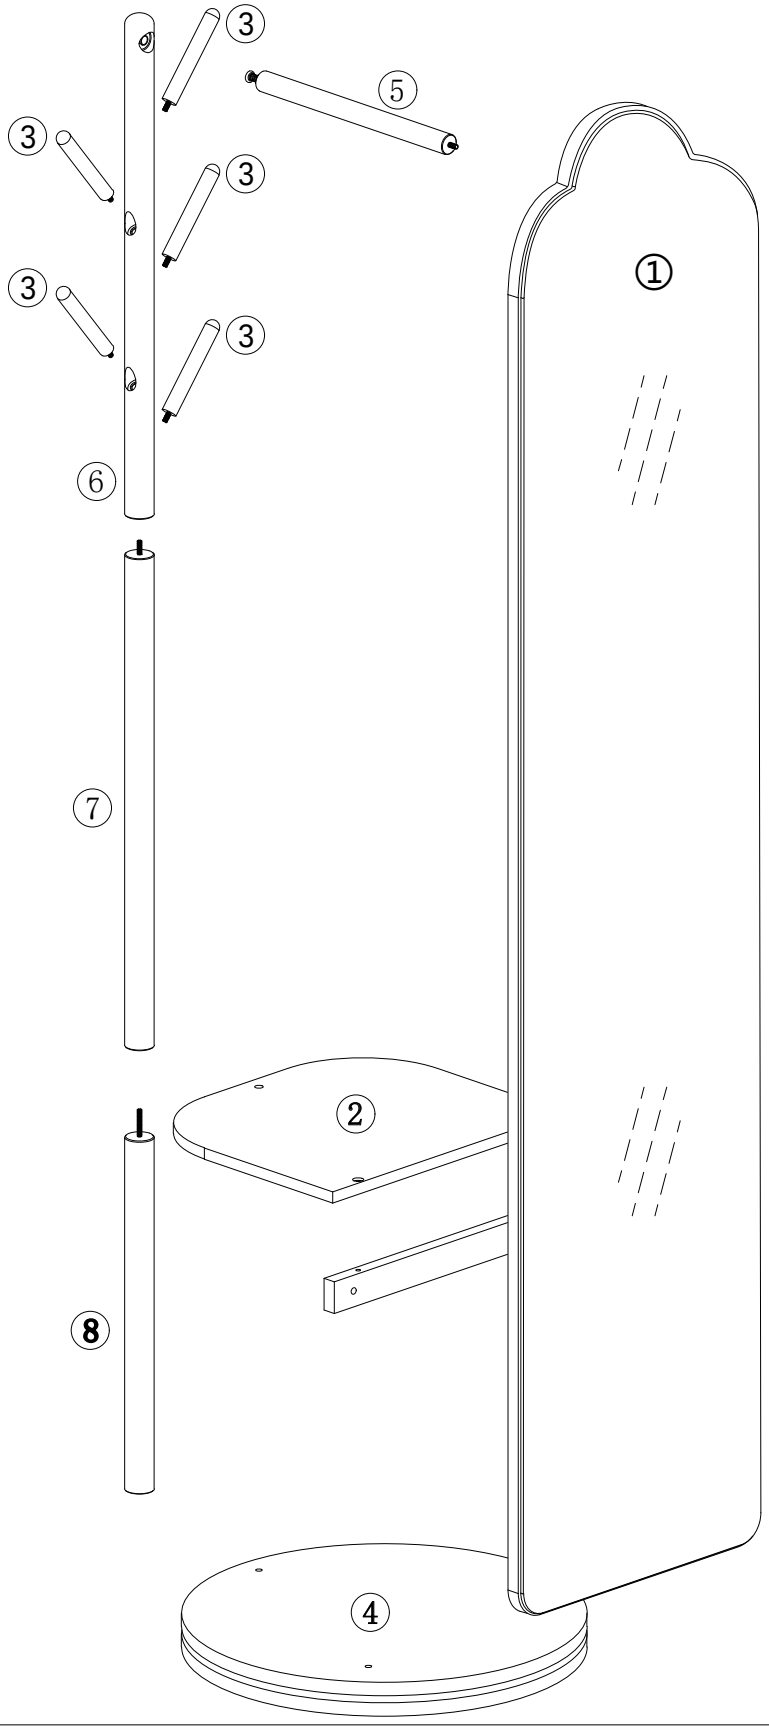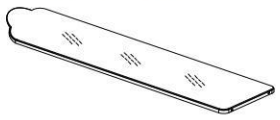





Product Name: Full-length Mirror

Parts List


① Mirror Back Panel  1643*350*81MM 1PC	② Shelf  340*340*17MM 1PC	③ Side Hook  Φ18*124MM 5PCS
④ Base  Φ450*37MM 1PC	⑤ Hanging Rod  Φ25*313MM 1PC	⑥ Upper Rear Post  Φ35*593MM 1PC
⑦ Middle Rear Post  Φ35*593MM 1PC	⑧ Lower Rear Post  Φ35*442MM 1PC	⑨ Non-woven pad  Ø30*3MM 4+1PCS

Hardware List

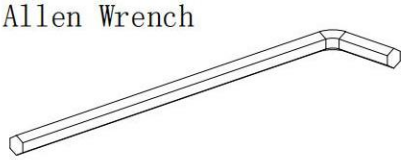
A Hex Socket Screw  M6*35MM 3+1PCS	B Hex Socket Screw  M8*35MM 1+1PCS	C Hex Socket Set Screw  #7*35mm 2+1PCS
D Allen Wrench  M4*100MM 1PCS	E Flat gasket  M6*Ø13MM 3+1PCS	F Flat gasket  M8*Ø16MM 1+1PCS
G Allen wrench  M5*100MM 1PC		


Note

Use the correct screws to avoid damaging the parts.

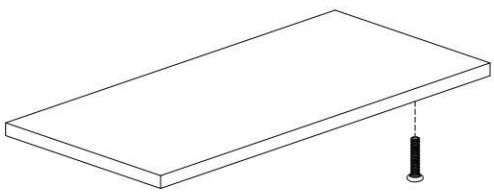

Example

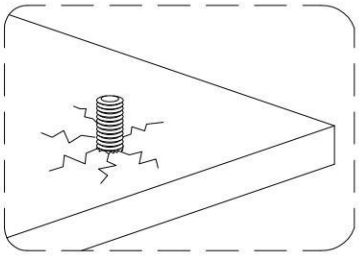


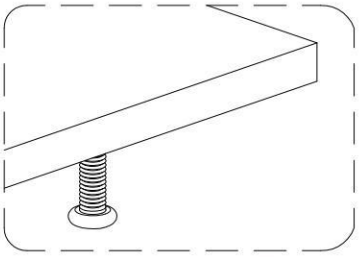

Incorrect: Using the wrong screws may cause the wood to split.
Correct: Use the correct screw size.

Product Name: Full-length Mirror


Step 1

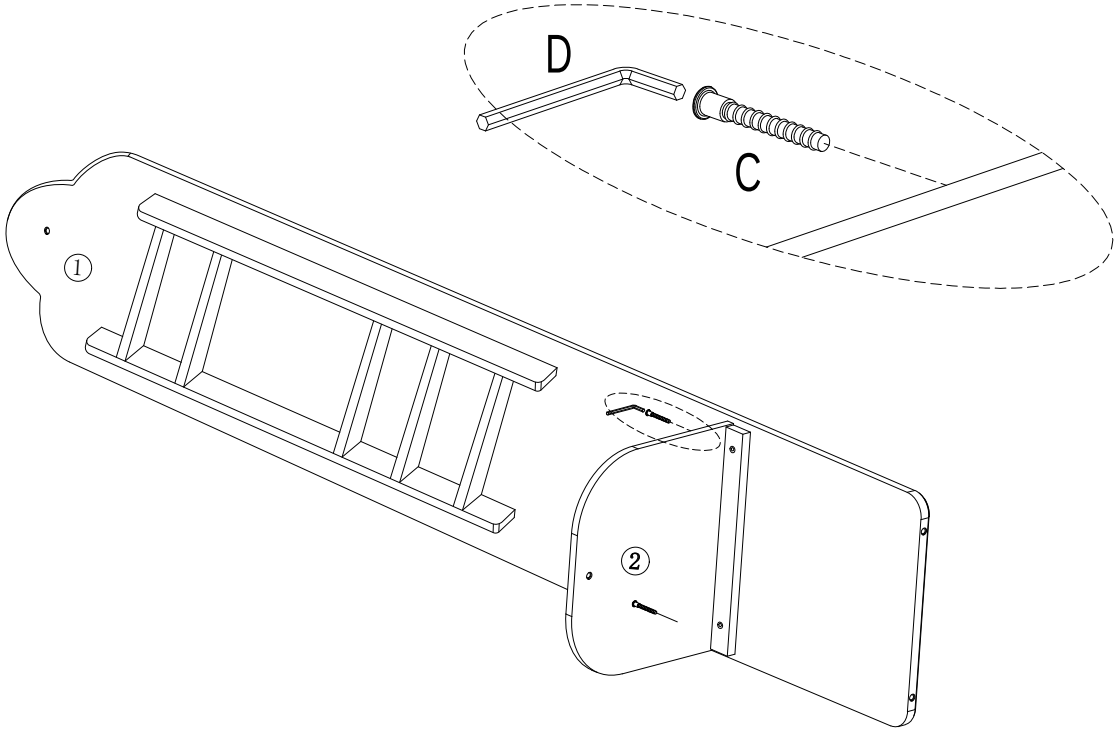

▸As shown, attach Part 2 to Part 1 using Screws C and Allen Wrench D.

C		X2
D		X1


Step 2

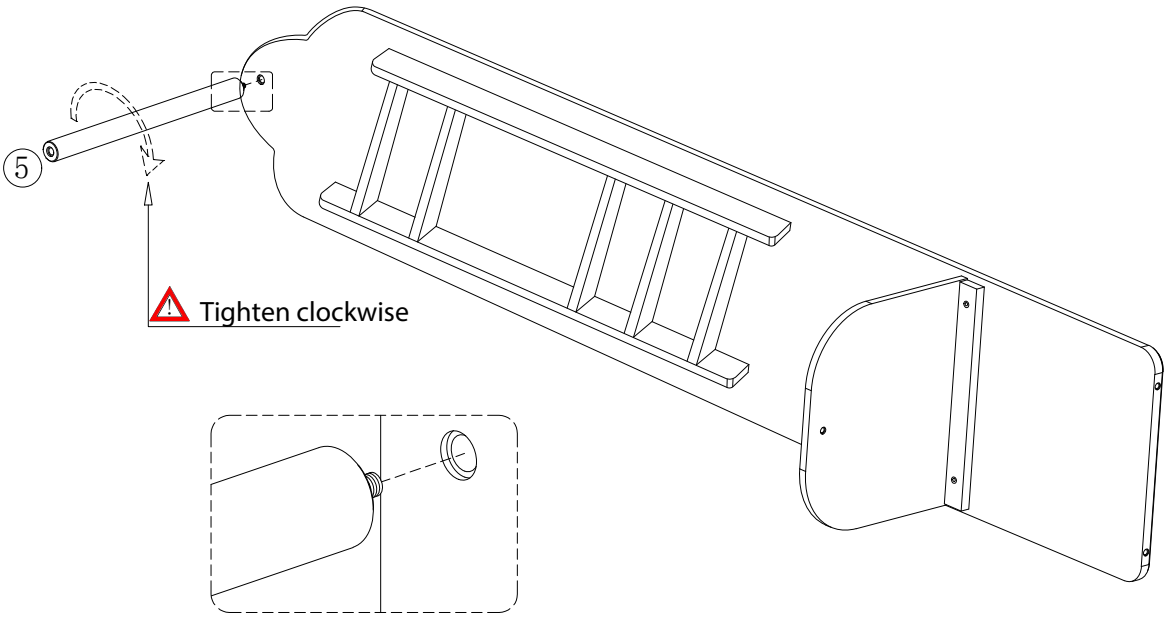

▸As shown, install Part 5 onto Part 1 at the indicated position and rotate clockwise to tighten.


Product Name: Full-length Mirror

Step 3

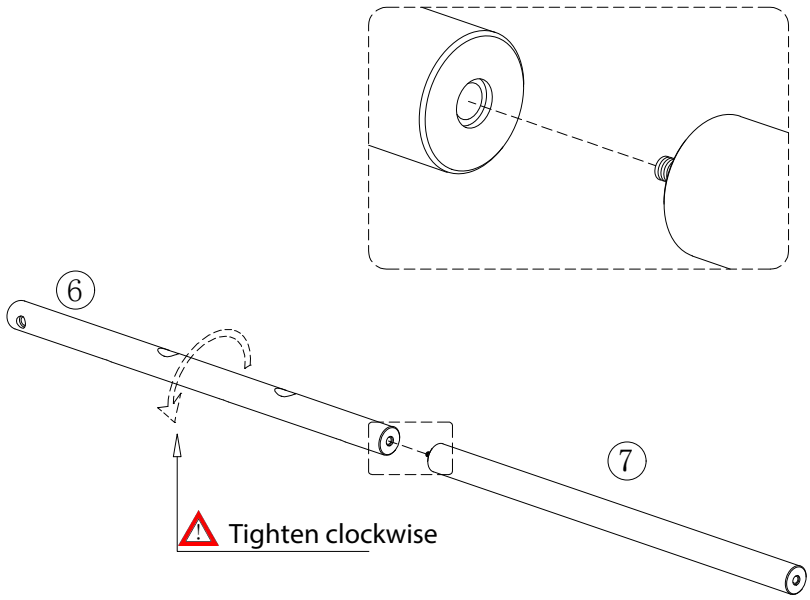

▸Connect Part 6 to Part 7 as shown. Rotate clockwise to tighten.

Step 4

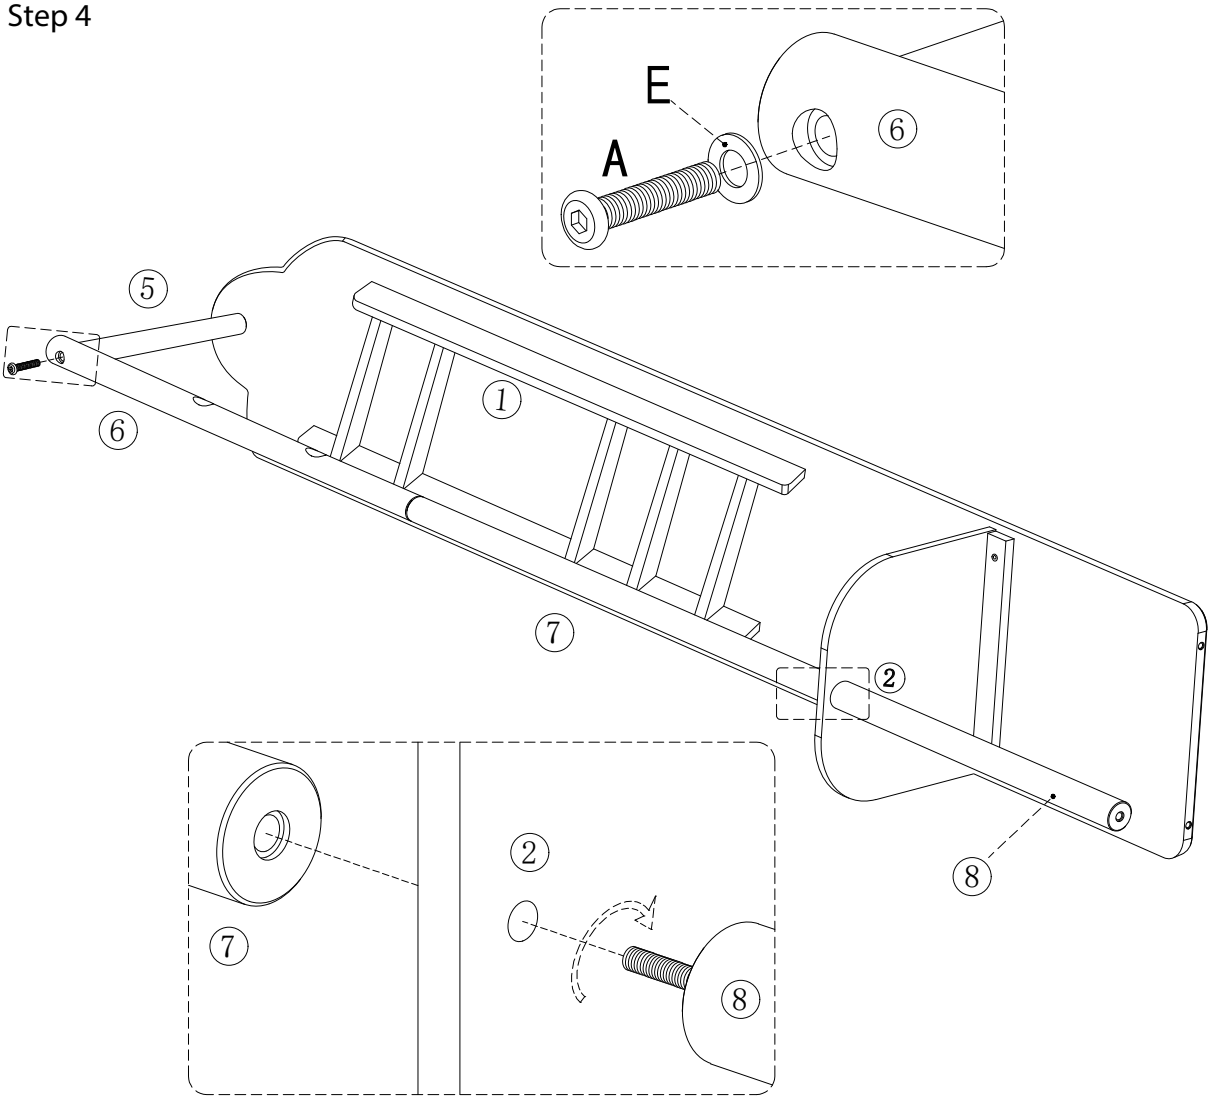


▸Attach the assembly from Step 3 to the assembly from Step 2 using Screw A, Flat Gasket E, and Allen Wrench D. Insert the connector at the top of Part 8 through Part 2, then tighten it into Part 7.


A		X1
E		X1
D		X1


Step 5

▸As shown, insert Screws A and Flat Gasket E through the holes in Part 4 and fasten Part 4 to Part 1. Tighten with Allen Wrench D.

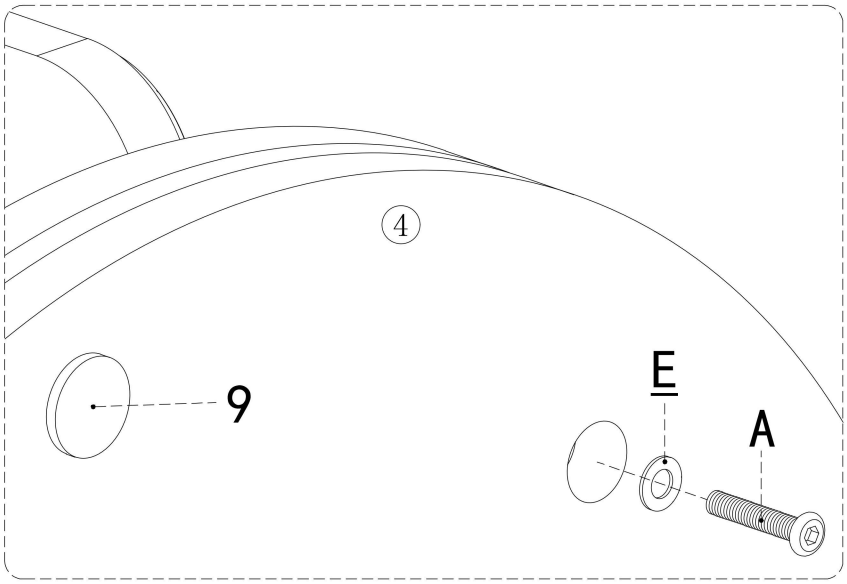

As shown, attach the 9 pads evenly to the underside of Part 4.

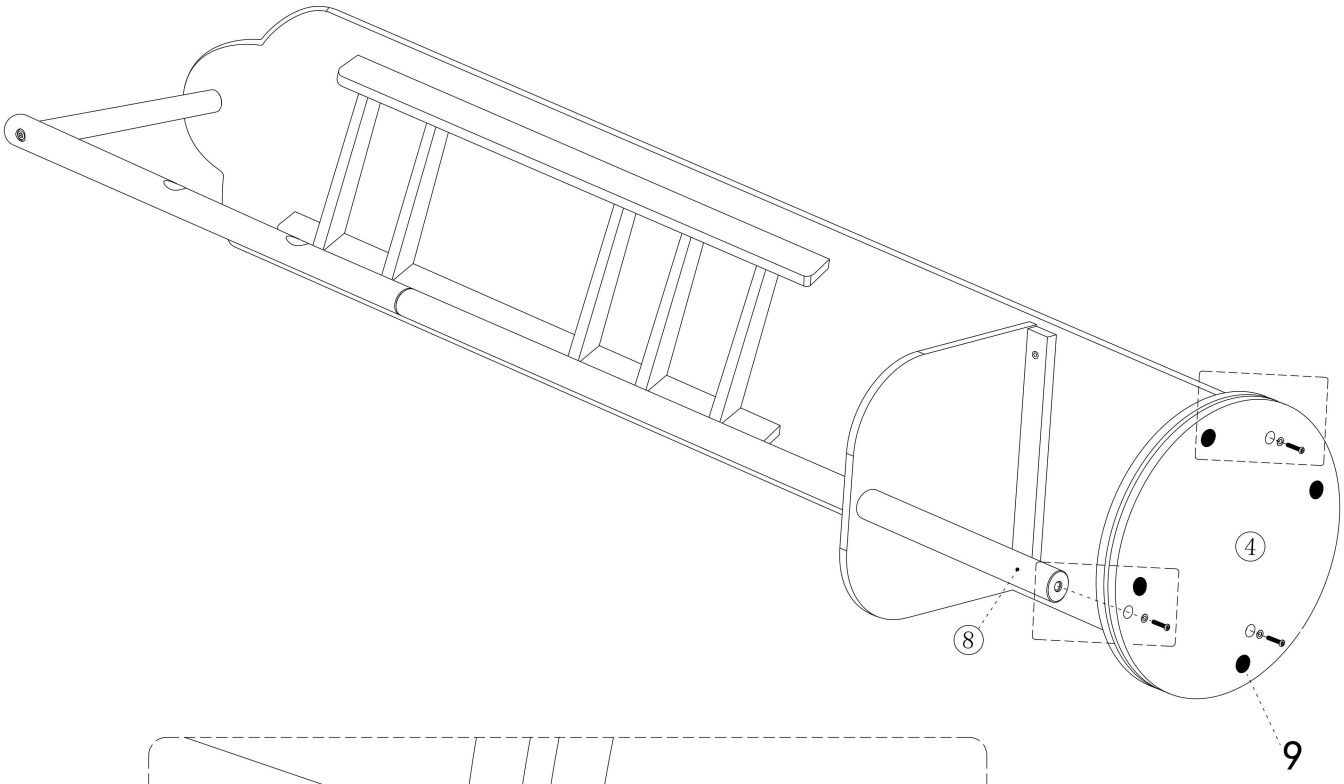


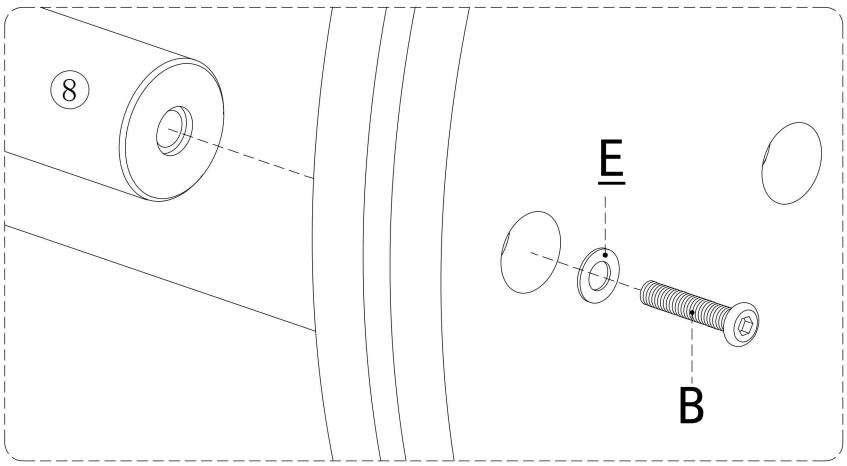

As shown, insert B/F through the hole in Part 4 and fasten Part 4 to Part 8. Tighten with Allen Wrench G.

A	X2
E	X2
D	X1
B	X1
F	X1
G	X1
9	X4

Step 6

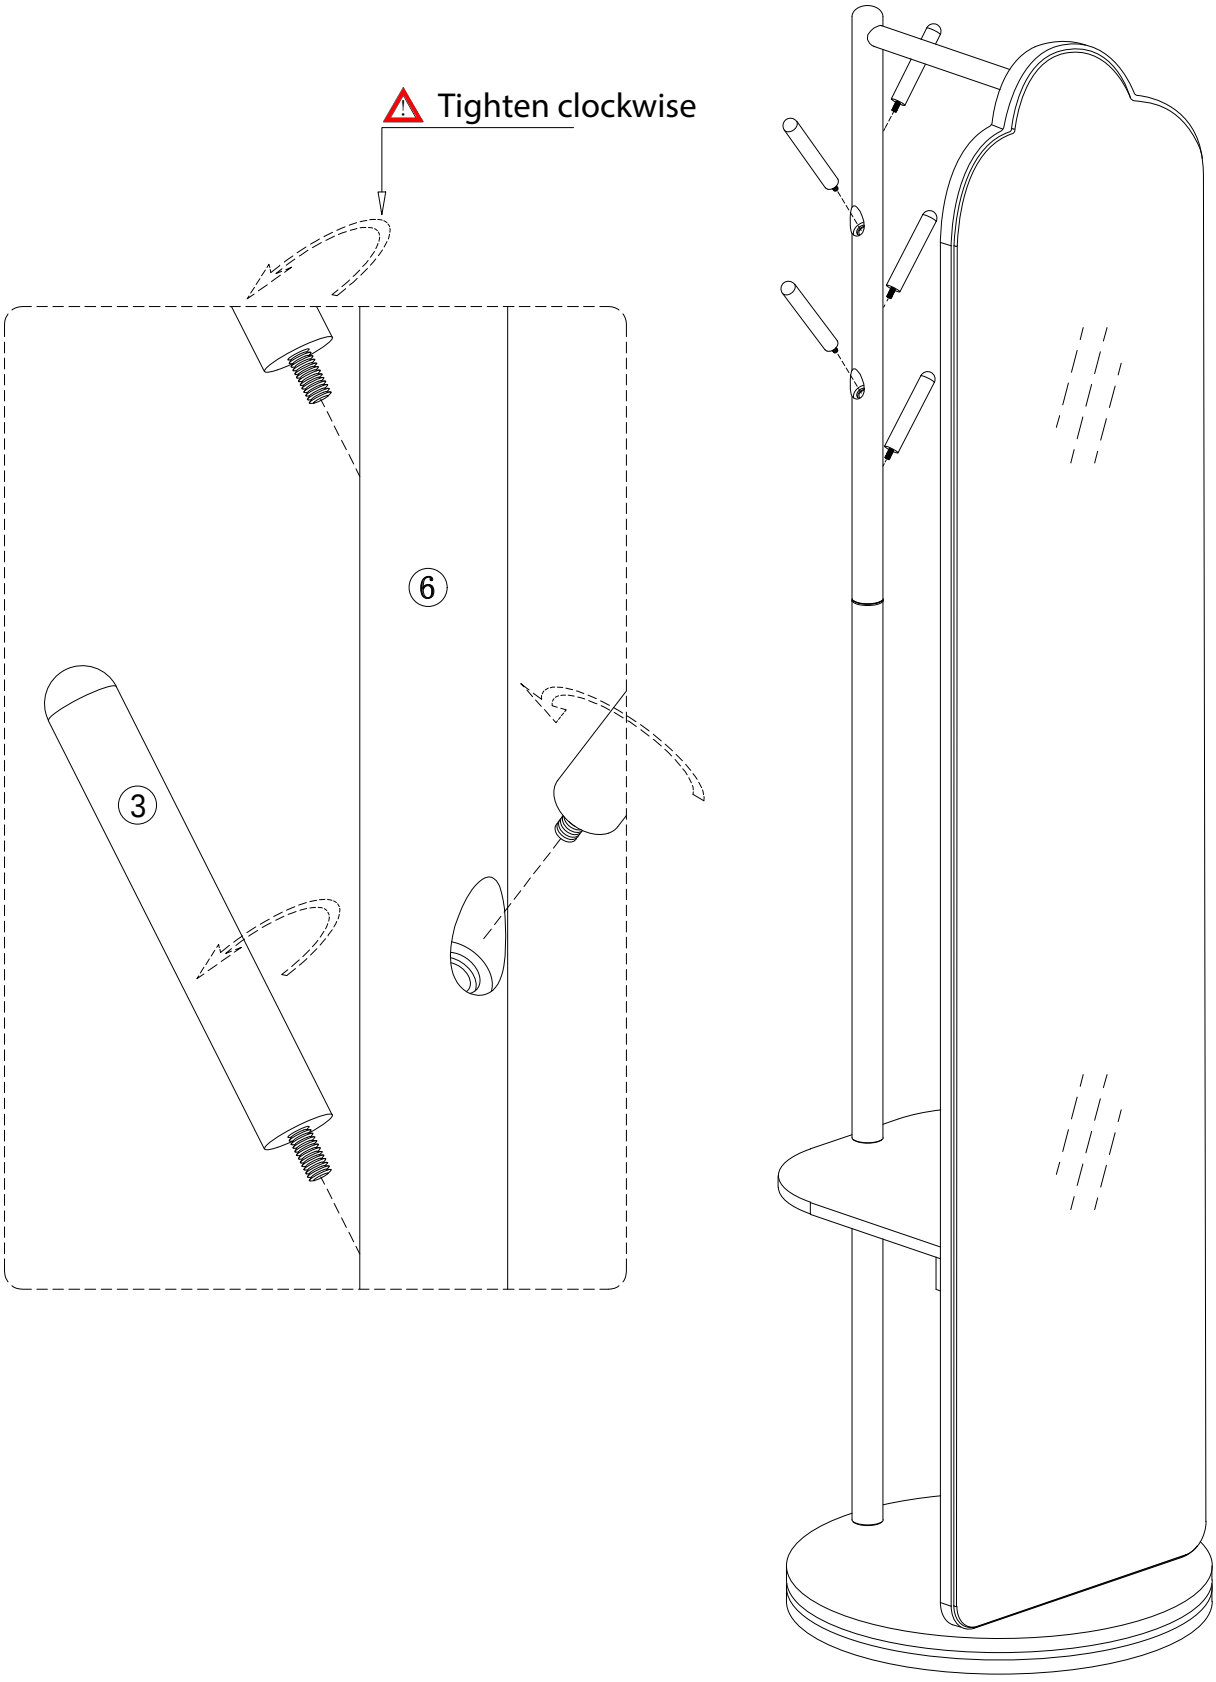

▸As shown, screw the five Part 3 hooks into Part 6 at the indicated positions. Assembly is complete.