


# Assembly Instructions — Bar and Café Tables

## Tools Required:

3/4" Socket / Wrench

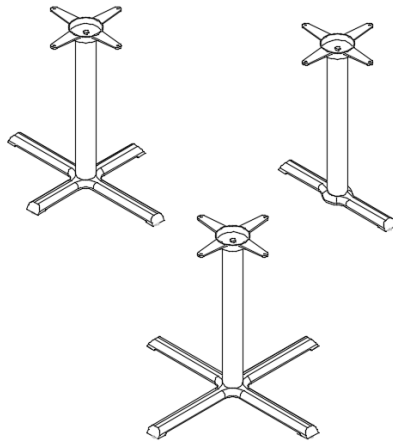


## Step 1

Place Table Top upside down


## Step 2

Insert Tie Rod through Spider and Column.

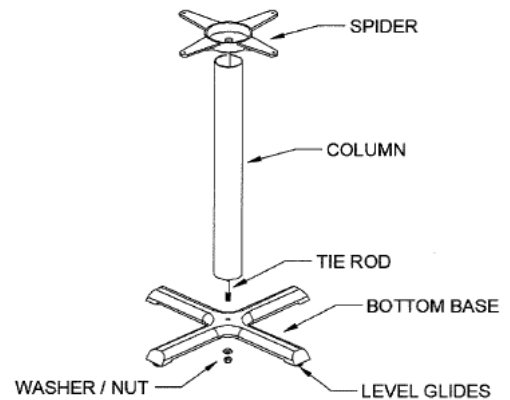

## Step 3

Place Spider / Tie Rod / Column on a hard surface upside down with threaded end of Tie Rod in the upright position as shown. Place Base on top of Column with Tie Rod inserted through Base.

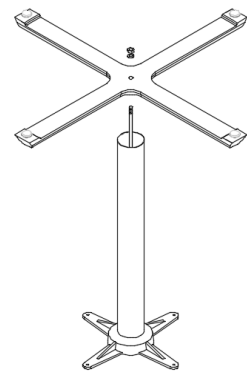

## Step 4

Install Washer / Nut. Center all components and tighten securely.

## Step 5

Attach assembled base to the underside of the table top using the Screws provided.



**SCAN ME**—For Assembly Video