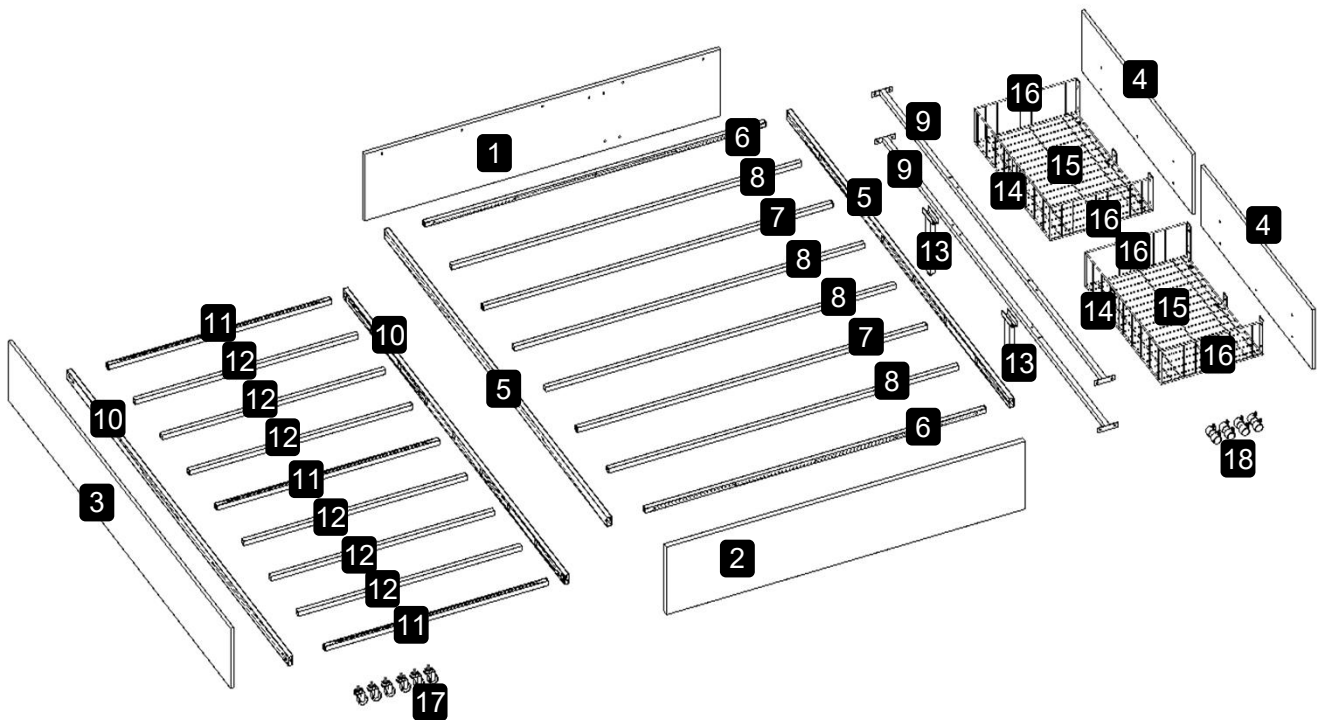
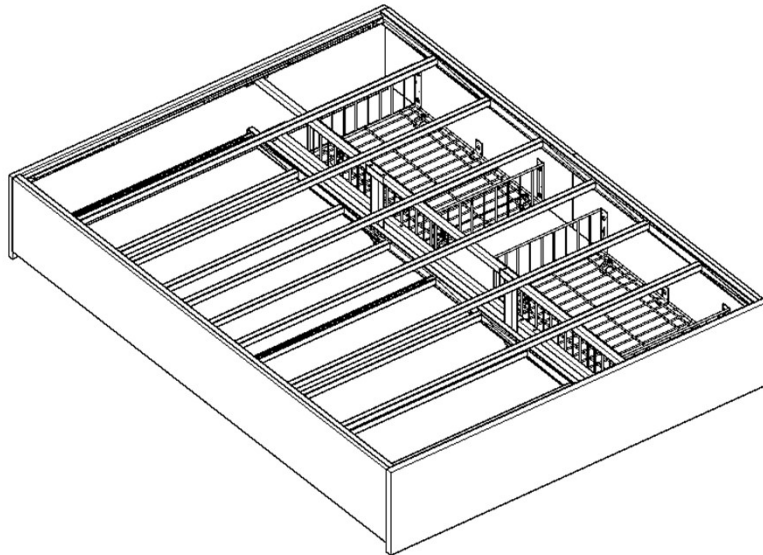


ASSEMBLY INSTRUCTION

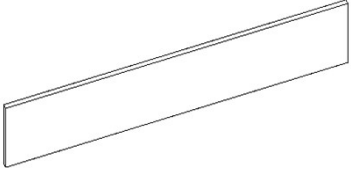
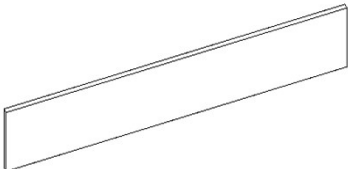
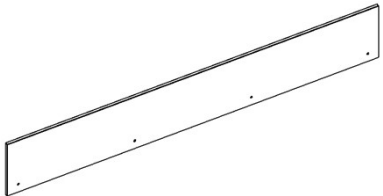
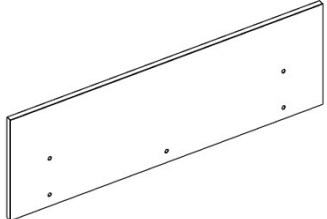
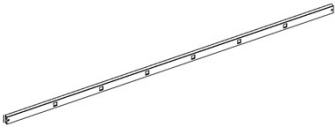
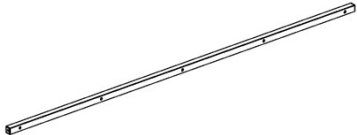
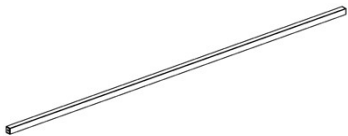
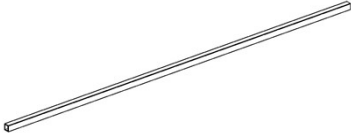
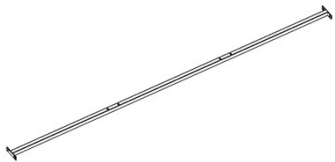
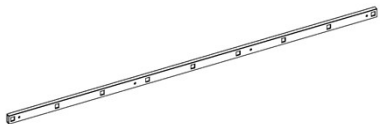
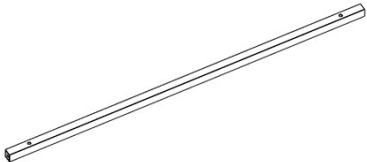
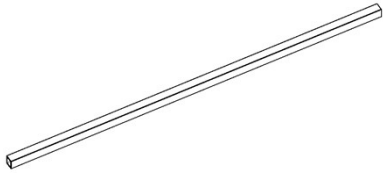


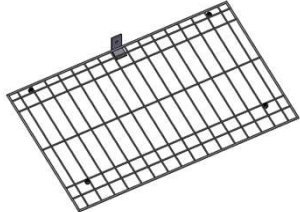
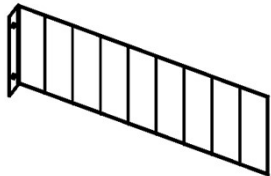
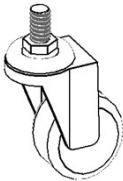
W1580119385 / W1580119386

TIPS



1. This bed fit standard queen mattress 80" L x 60" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.



Part List



1  Headboard x1	2  Footboard x1	3  Panel x1
4  Panels x2	5  Metal Slat Frame x2	6  Metal Slat Frame x2
7  Bed Board x2	8  Bed Board x4	9  Support Frame x2
10  Movable Bed Frame x2	11  Movable Bed Board x3	12  Movable Bed Board x6
13  Support Leg x2	14  Side Net x2	15  Drawers Bottom Net x2
16  Drawers Side Net x4	17  Caster x6	18  Caster x8

Hardware List


A  Bolts(M6X10mm) X10	B  Bolts(M6X20mm) X18	C  Bolts(M6X30mm) X22
D  Nut(M6) X4	E  Spanner X1	F  Allen Key X1
G  Clasp X22	H  Felt Mat X6	

Step1

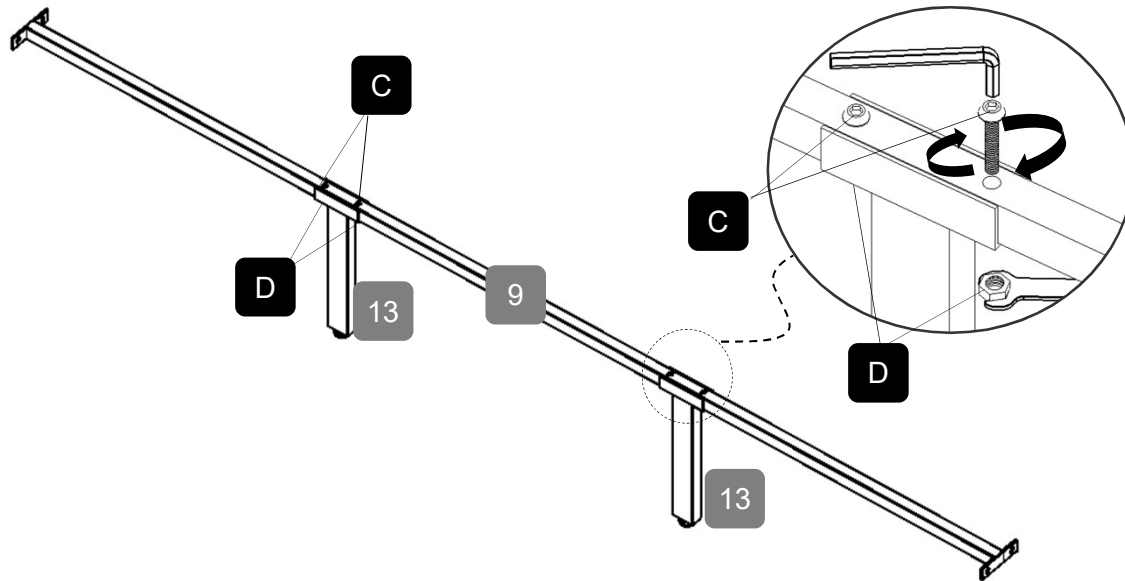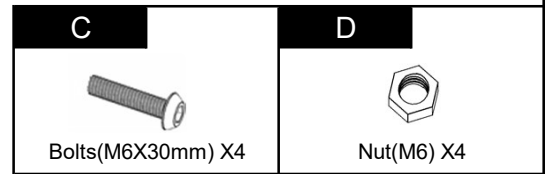Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.




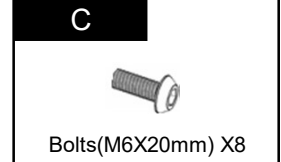Step2





The position of the movable bed can be installed according to individual needs

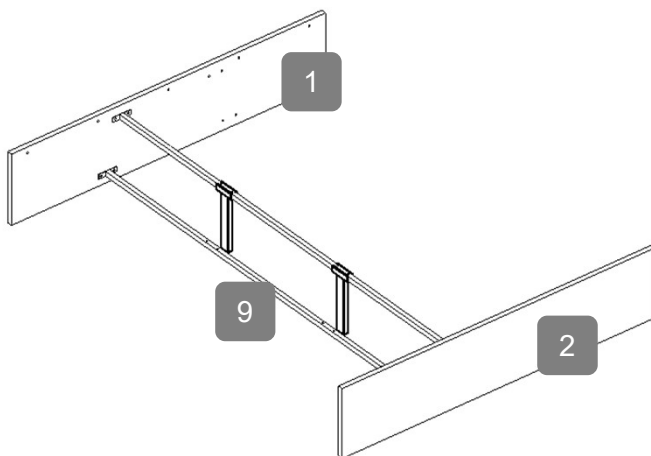The movable bed is on the right



The movable bed is on the left

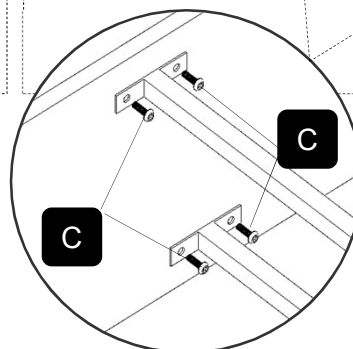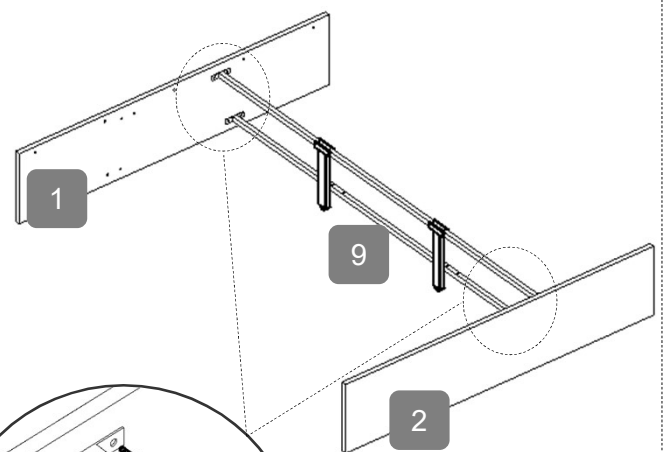


Subsequent installation instructions use the movable bed on the left as an example

Step3

C



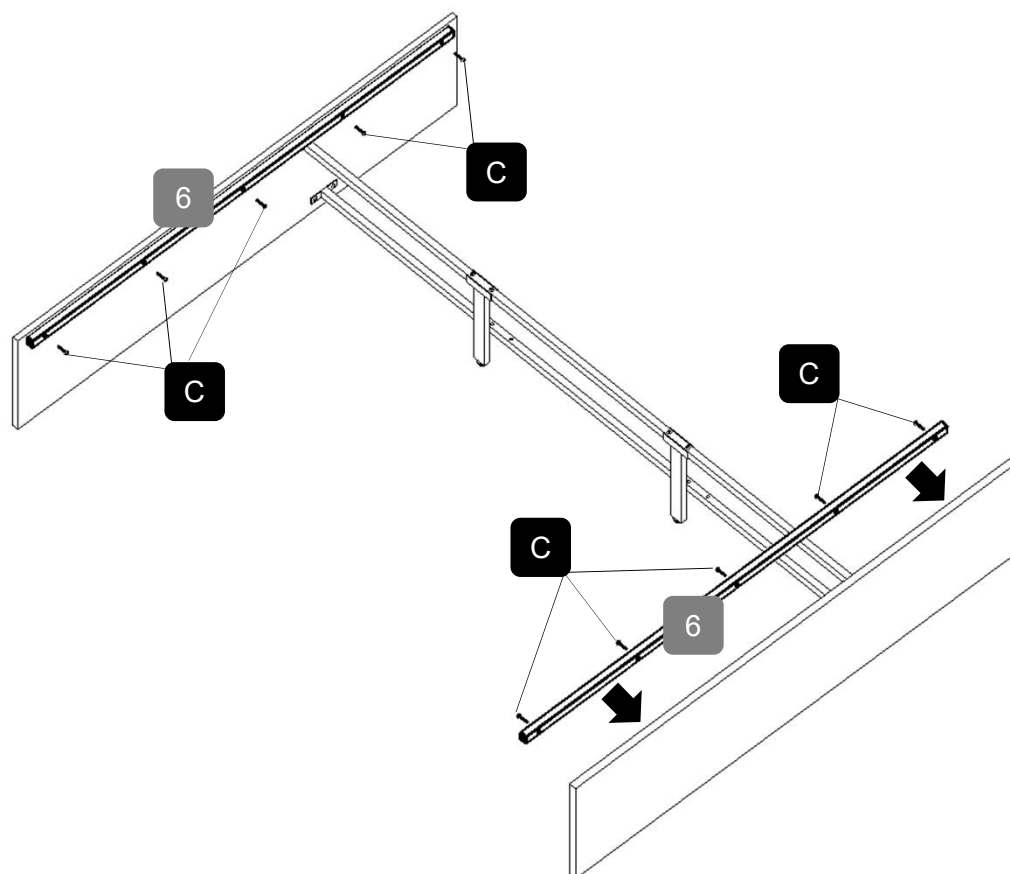Bolts(M6X30mm) X10



Step4

B



Bolts(M6X20mm) X2

C

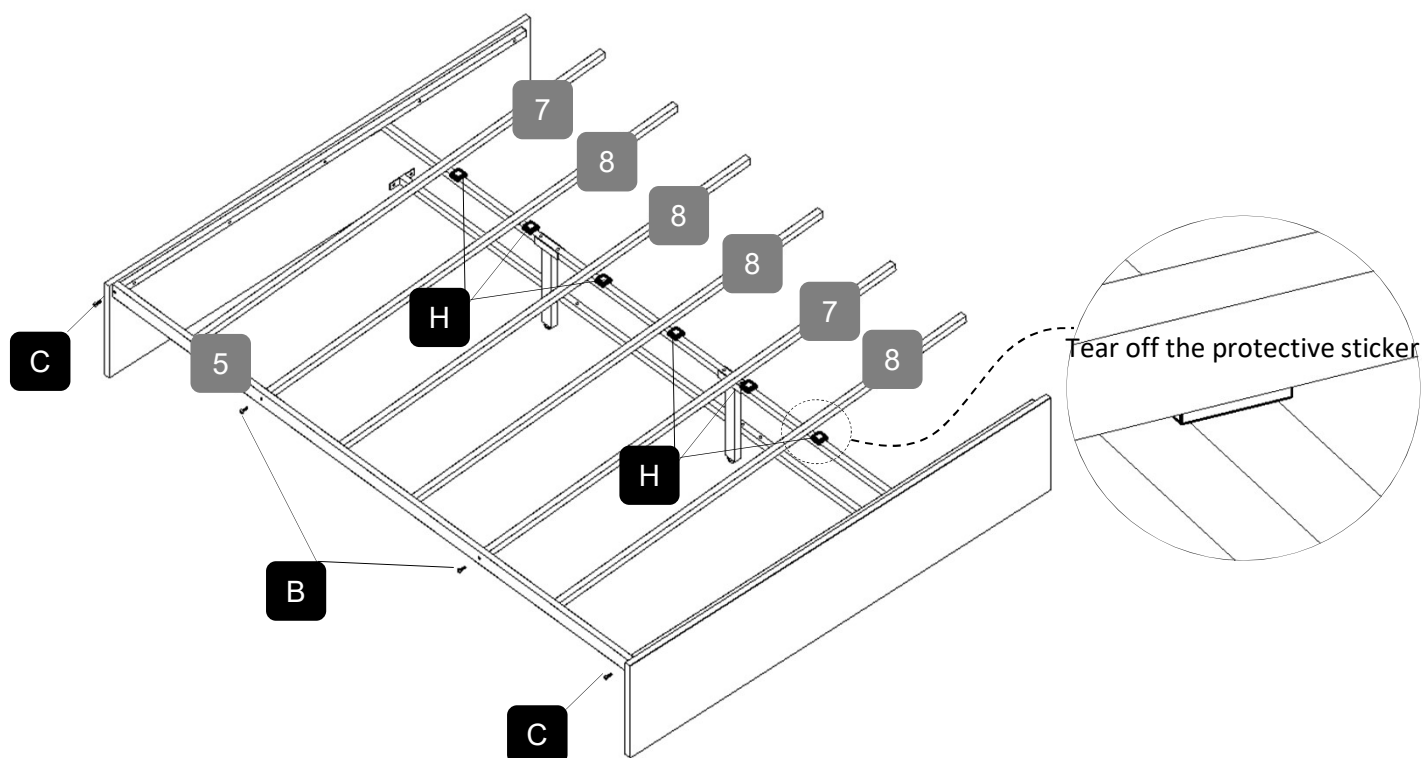


Bolts(M6X30mm) X2

H



Felt Mat X6




Step5

B

Bolts(M6X20mm) X2

C

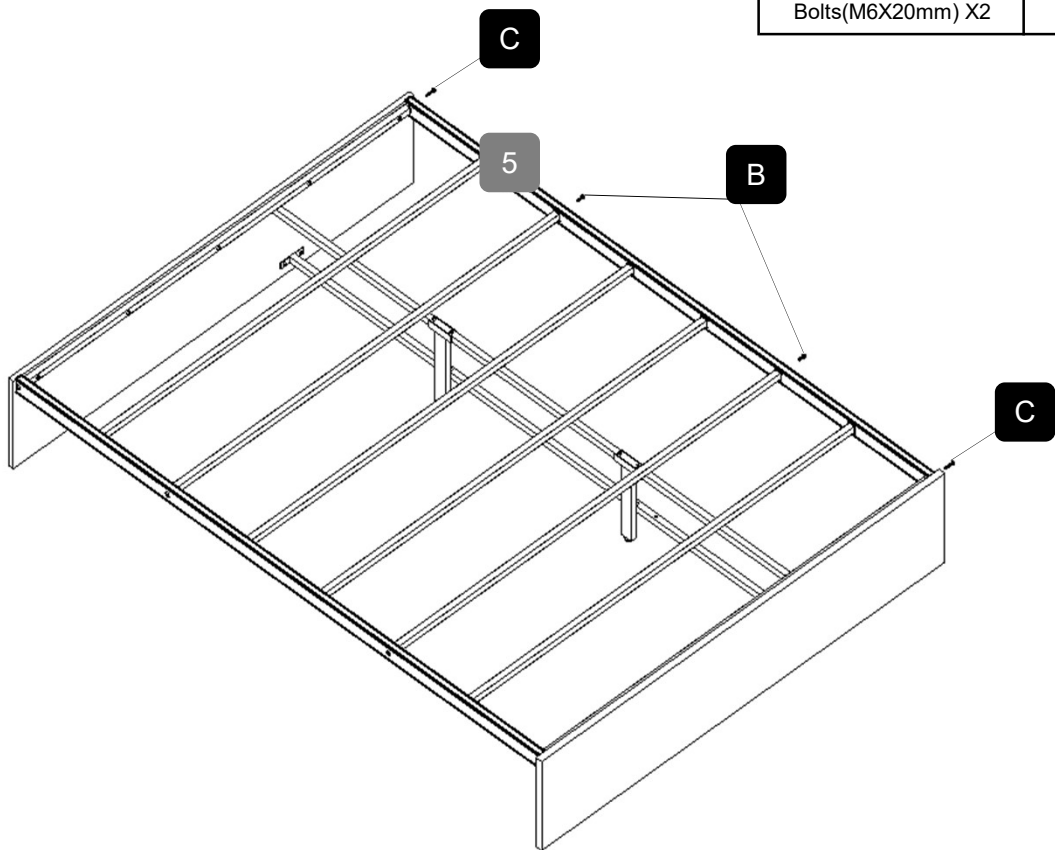
Bolts(M6X30mm) X2



Step6

B

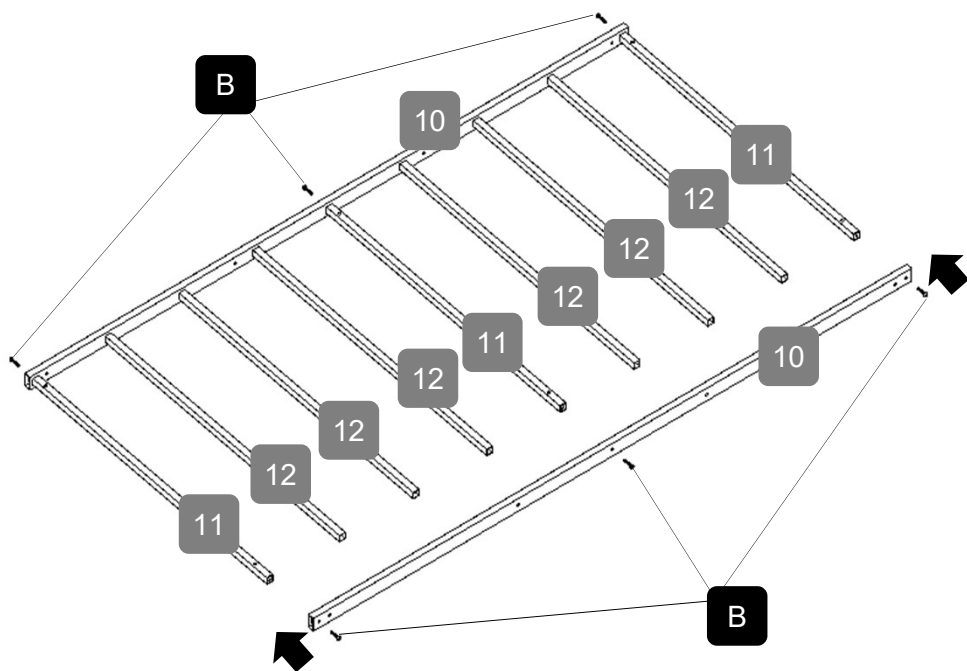Bolts(M6X20mm) X6




Step7


C



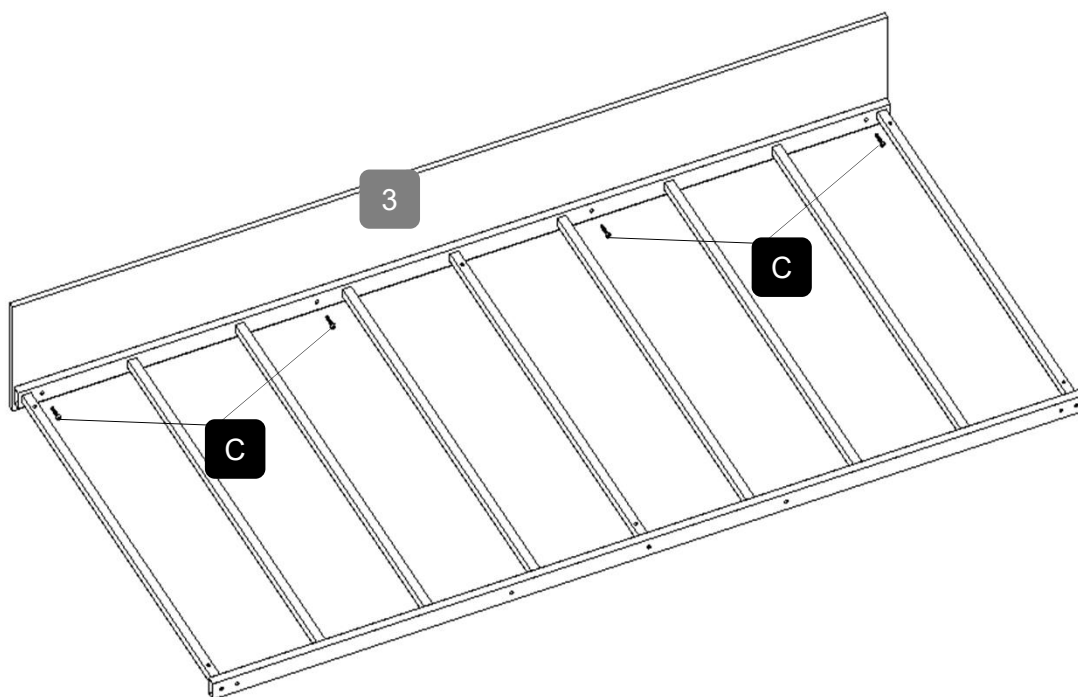
Bolts(M6X30mm) X4



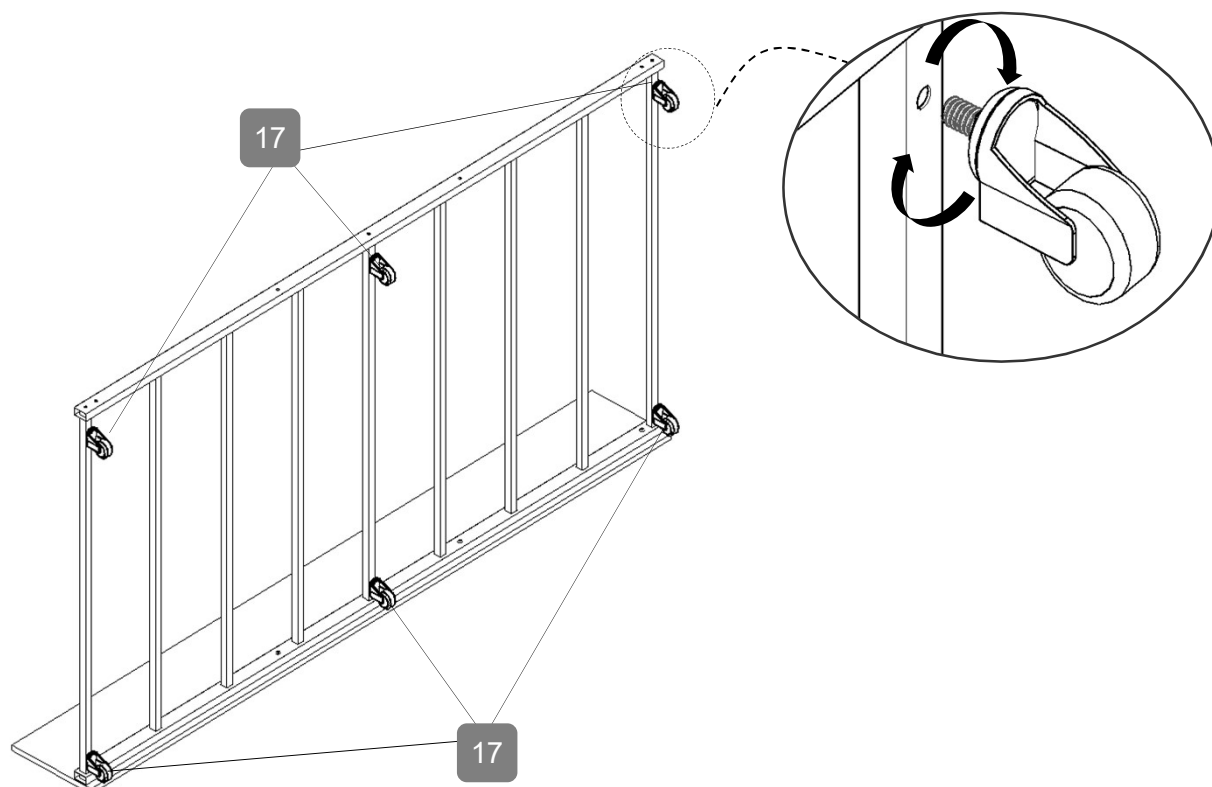
Step8



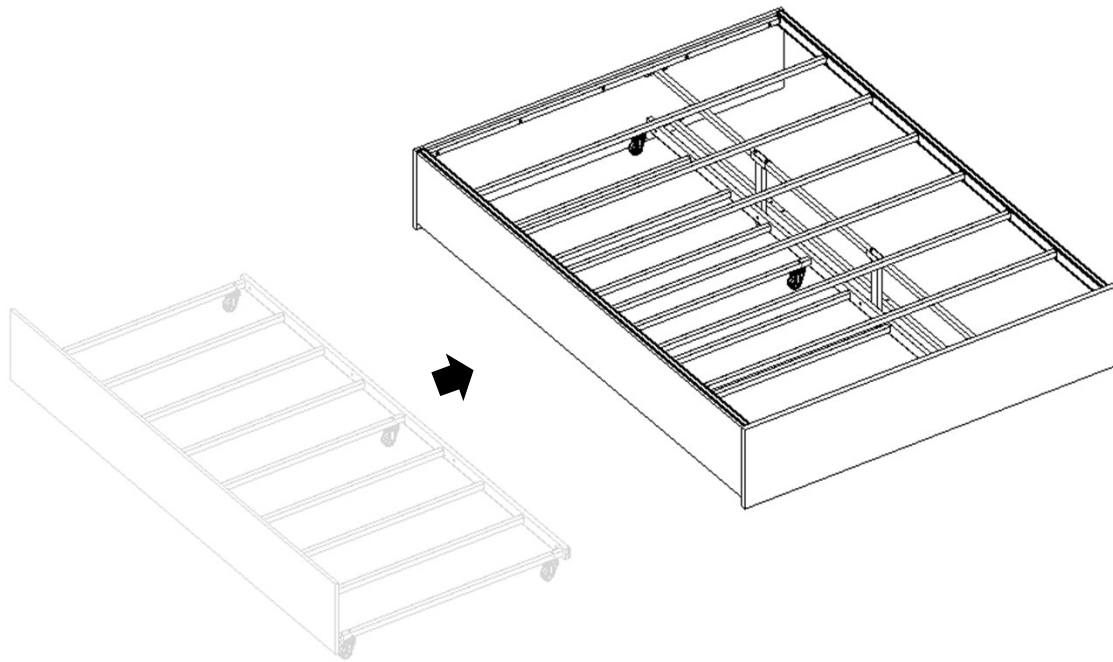
Step9



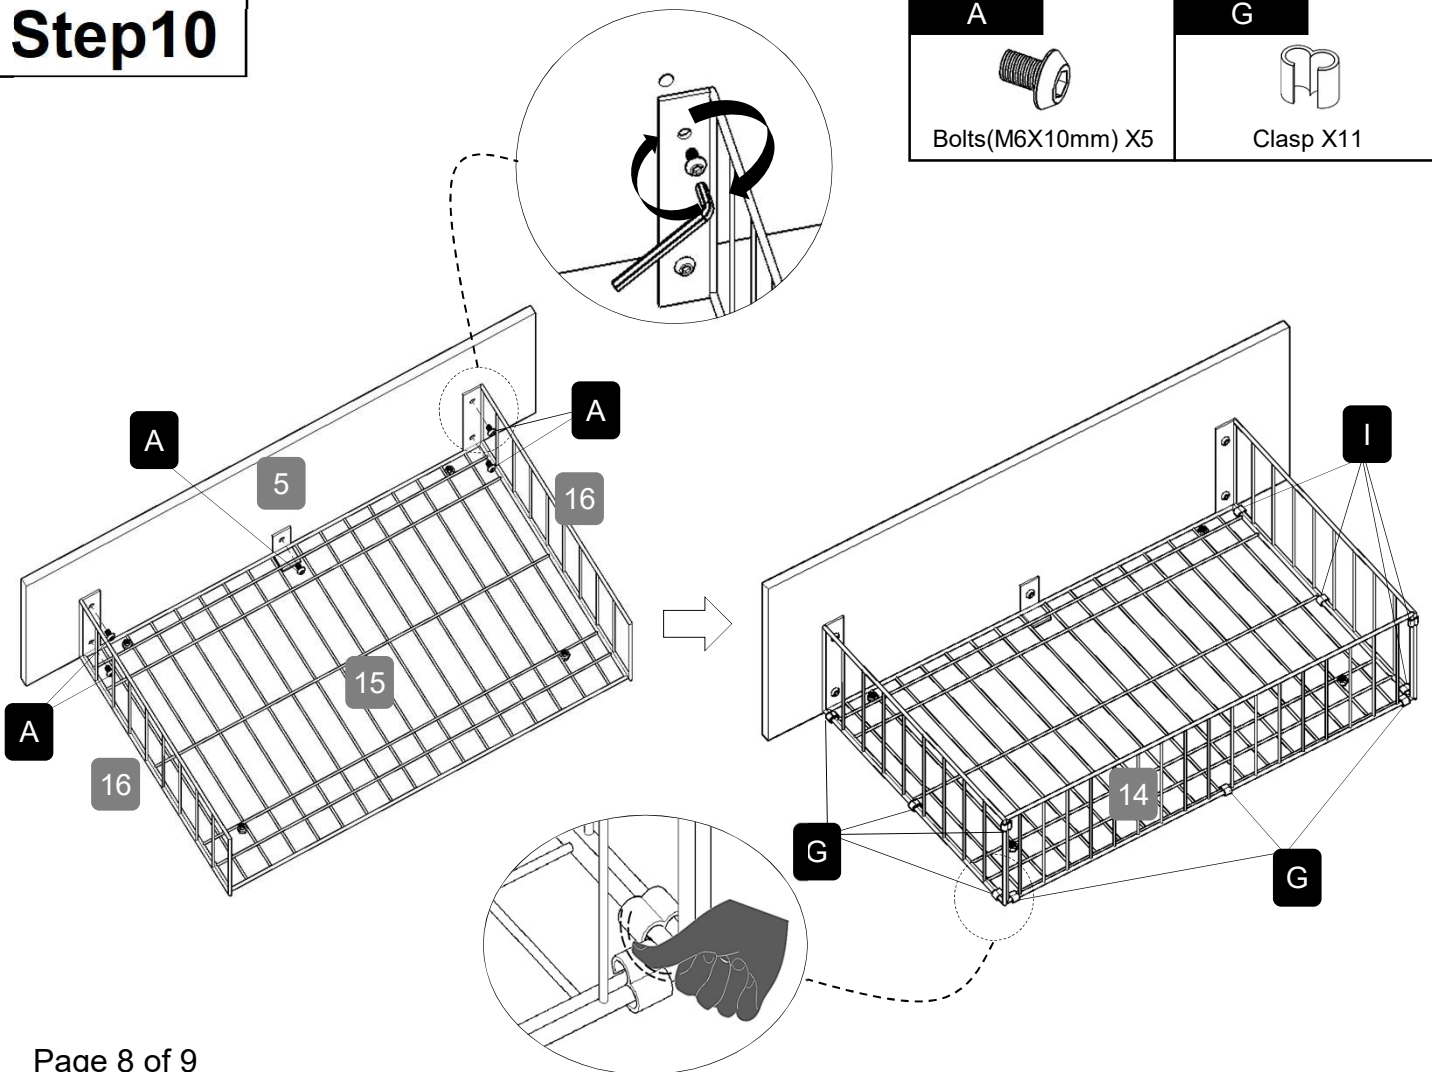Step10



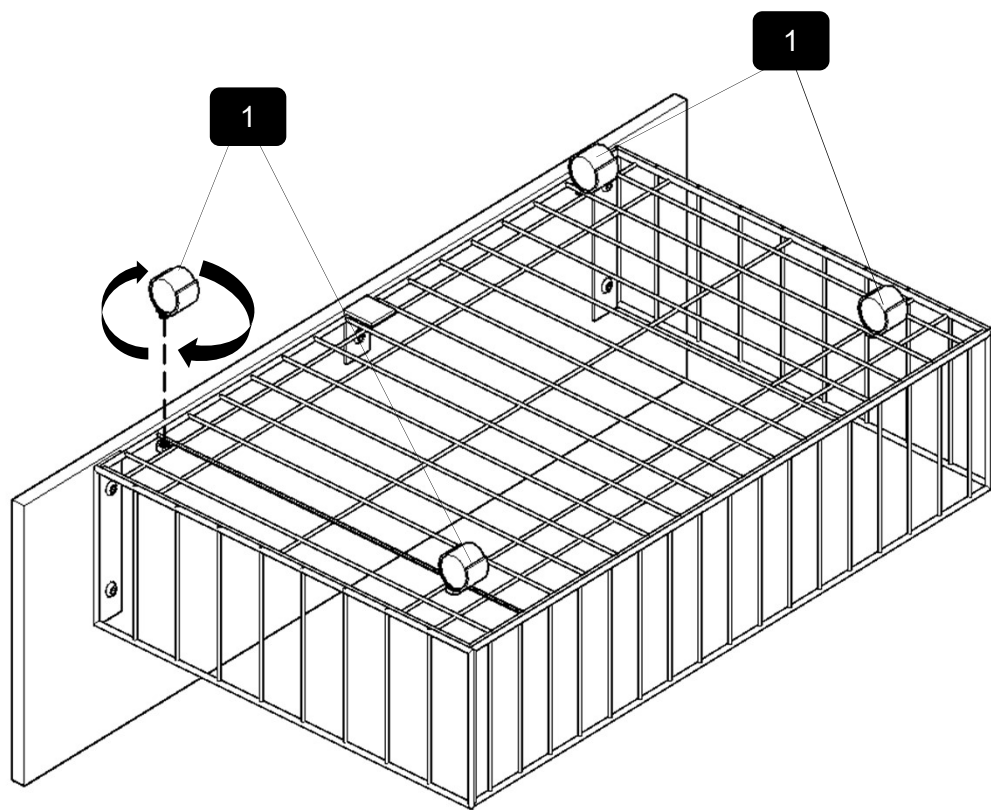Step11



Step12

