





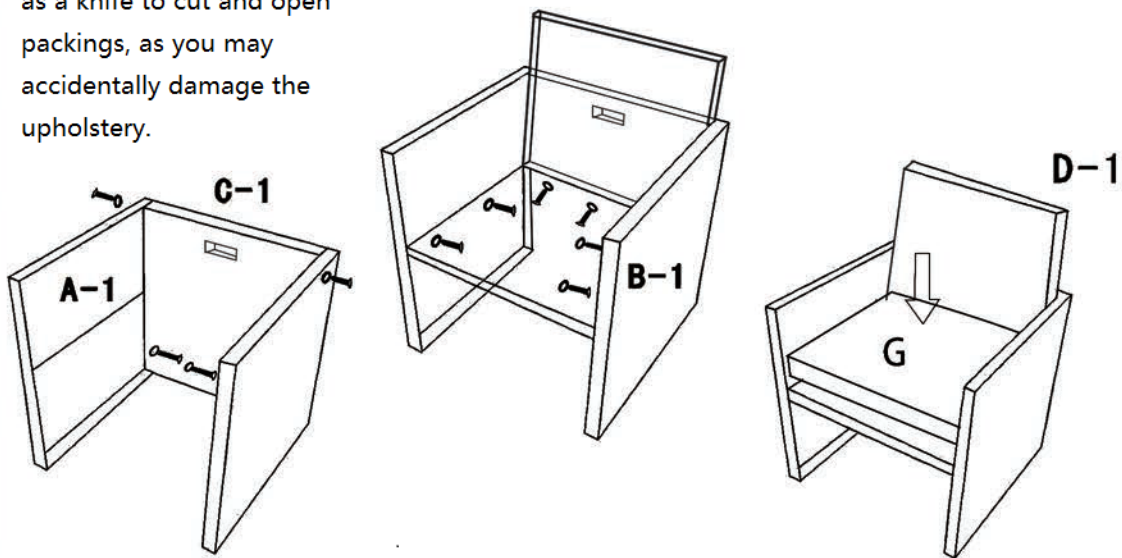











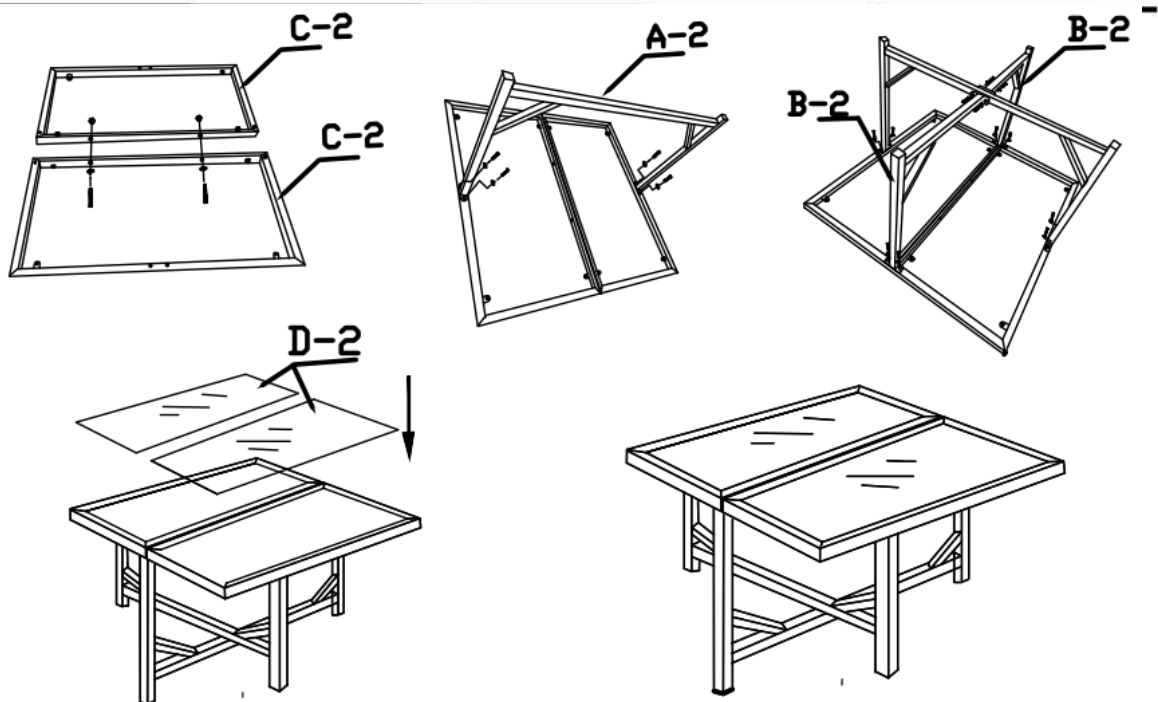
A-1		1PCS
B-1		1PCS
C-1		1PCS
D-1		1PCS
F		M6*40 10 pcs
G		1PCS







Avoid using sharp objects such as a knife to cut and open packings, as you may accidentally damage the upholstery.



Do not fully tighten bolts until assembly is complete.

A-2		1PC
B-2		2PCS
C-2		2PCS
D-2		2PCS
F		M6*15 12PCS
G		1PC
H		M6*45 2PCS
N		M6 2PCS
M		M6 1PC



A-3		1pc
B-3		2pcs
C-3		1pc
F		M6*40 4pcs
G		1pc
I		M6*15 4pcs

