


260520

Assembly Instruction

BED144A-90S

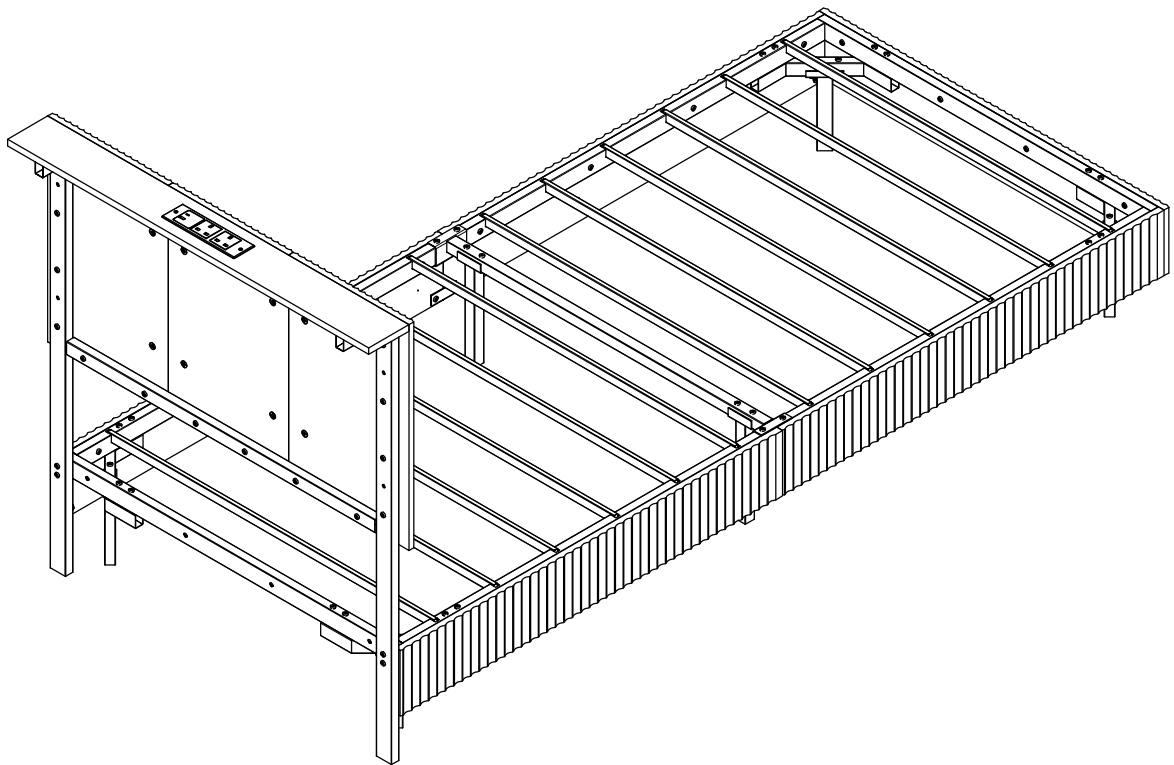

General Guidelines

Please read the following instructions carefully and use the product accordingly.

Please keep this manual and hand it over when you transfer the product.

This summary may not include every detail of all variations and considered steps. Please contact us if further information or assistance is needed.

Notes

The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.

Avoid long-term exposure to humid environments to prevent mildew.

Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.

Do not place any hot objects on the surface of the product.

If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.

Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.

Do not stand or sit on the wooden boards.

Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.

Match each part and fitting based on the part number in the manual.

If a part does not match the fitting, please check the manual for clarification.

During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.

Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.

If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.

Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.

Place the item on level, solid ground during use.


Warnings

During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled. Children should not climb or play on the product to avoid tipping over and causing serious injury.


To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.

Do not shake or move the product violently during use to avoid tipping over.


Part list

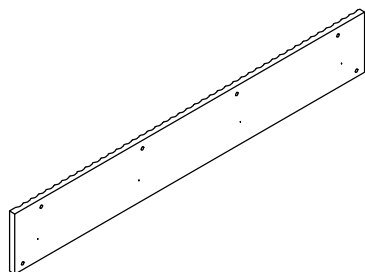


①X4

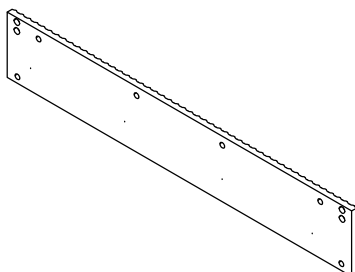


②X1

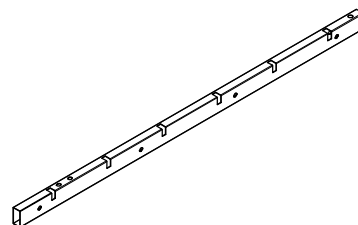


③X2

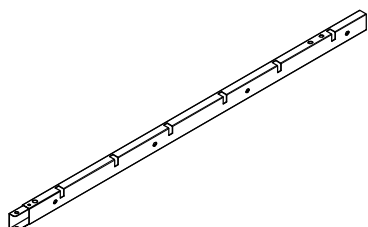


④X2

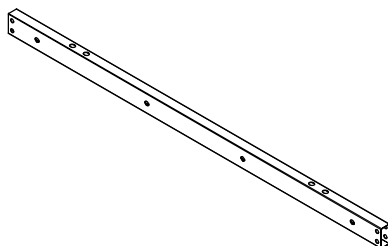


⑤X2

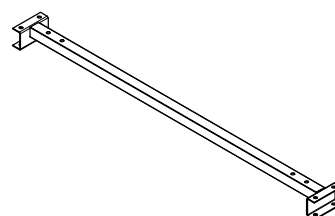


⑥X1




⑦X4




⑧X2




⑨X4

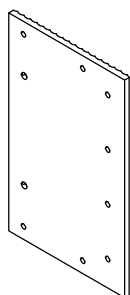

⑩X2

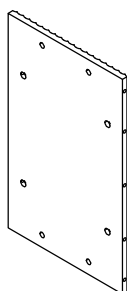


⑪X1

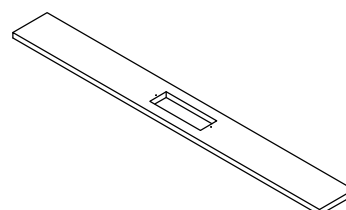


⑫X1


Part list

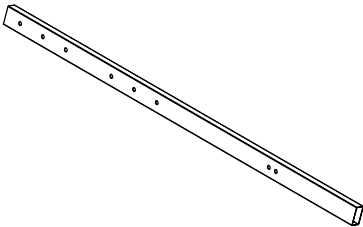


13 X2

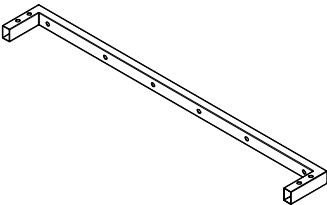

14 X1

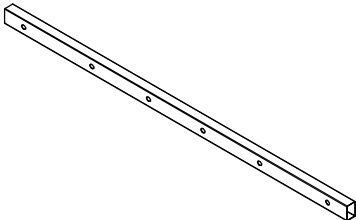


15 X1

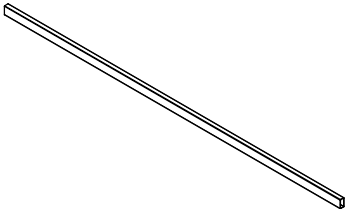


16 X12

Hardware list

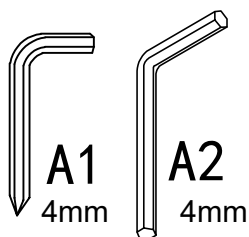

(A) X1




(B) X4+1

Not for wood




(C) X12+2

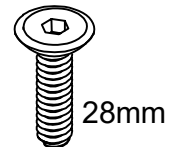


(D) X36+3



(E) X12+2

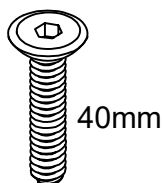


(F) X4+1

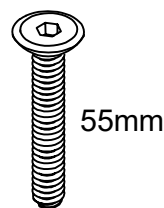


(G) X28+2




(H) X4



(I) X2

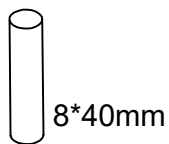

(J) X6+1

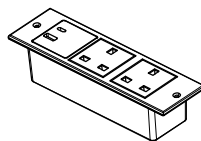


(K) X1





(L) X2



Remote control X1




Please remove the plastic film here before using the remote control.

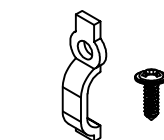

(N) X20+6




(O) X8+1

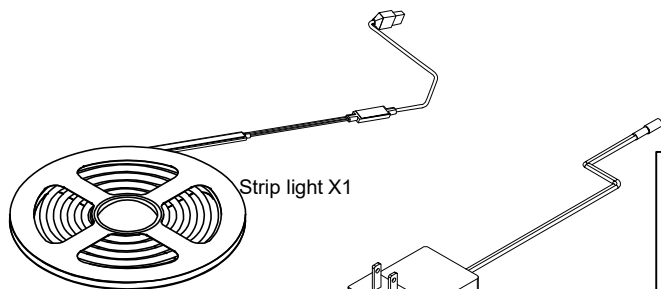

(M) X1



Plug X1

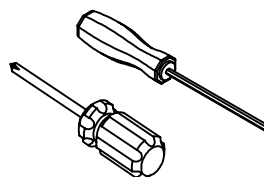


(Q) X1




(P) X4+1

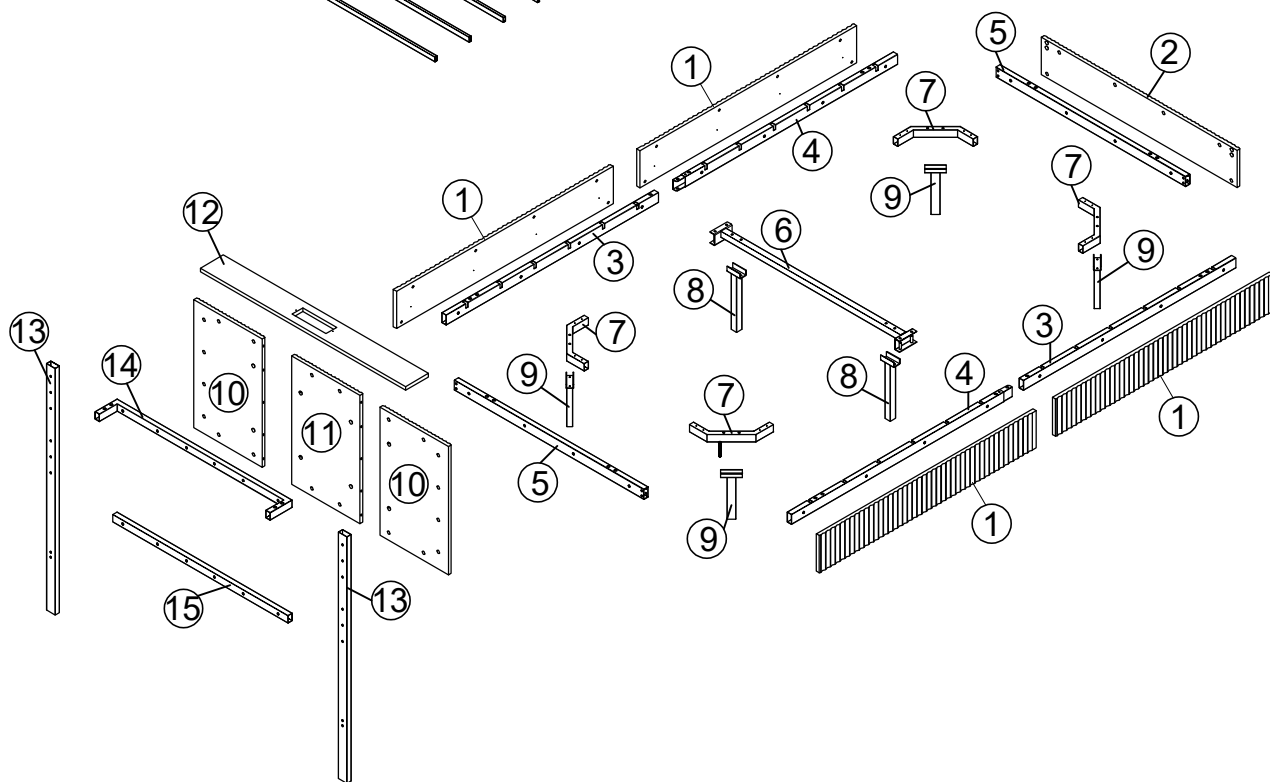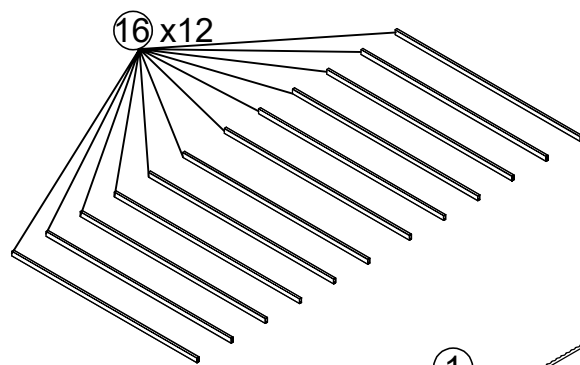



1

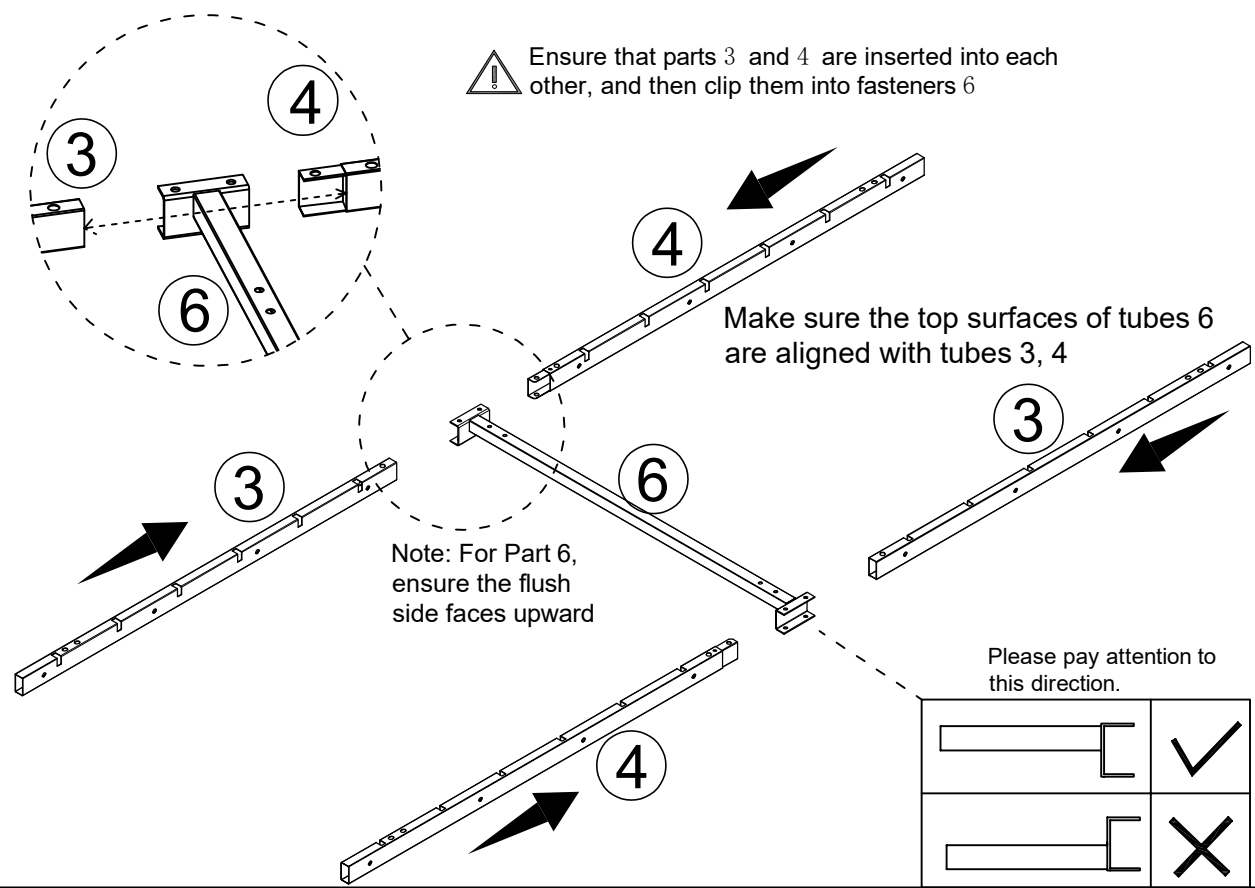


2

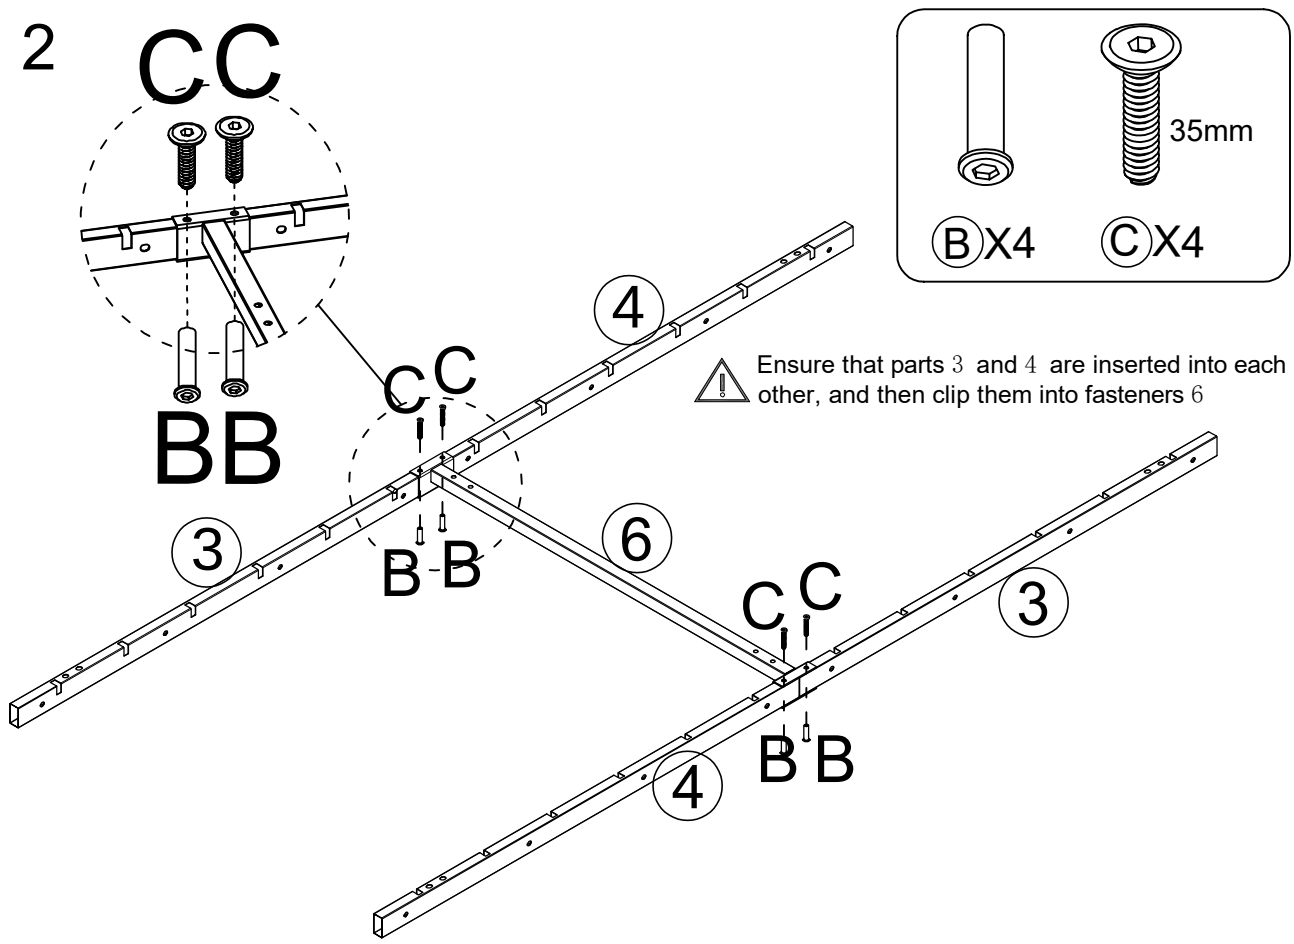


3

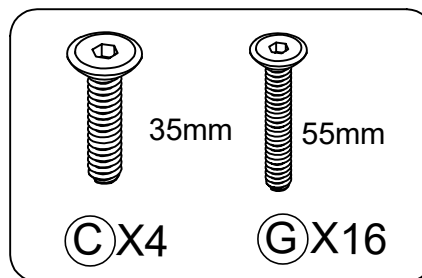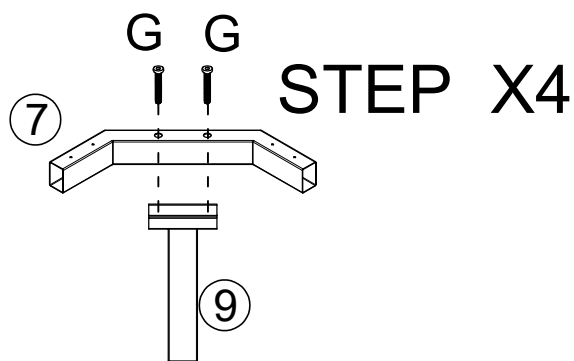


After installing Part 7 and Part 9, then mount them onto the bed frame.

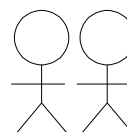

Caution: Install with two people !
hold and assemble together.

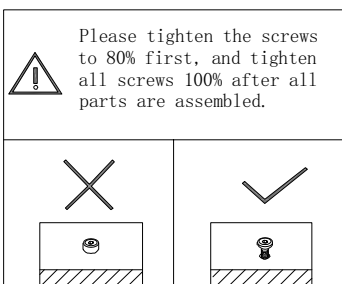



Align the edge of Diagonal Bar No.7 flush with the bed frame edge to prevent protrusion; any protrusion will cause difficulty in fitting the wooden board in subsequent installation.

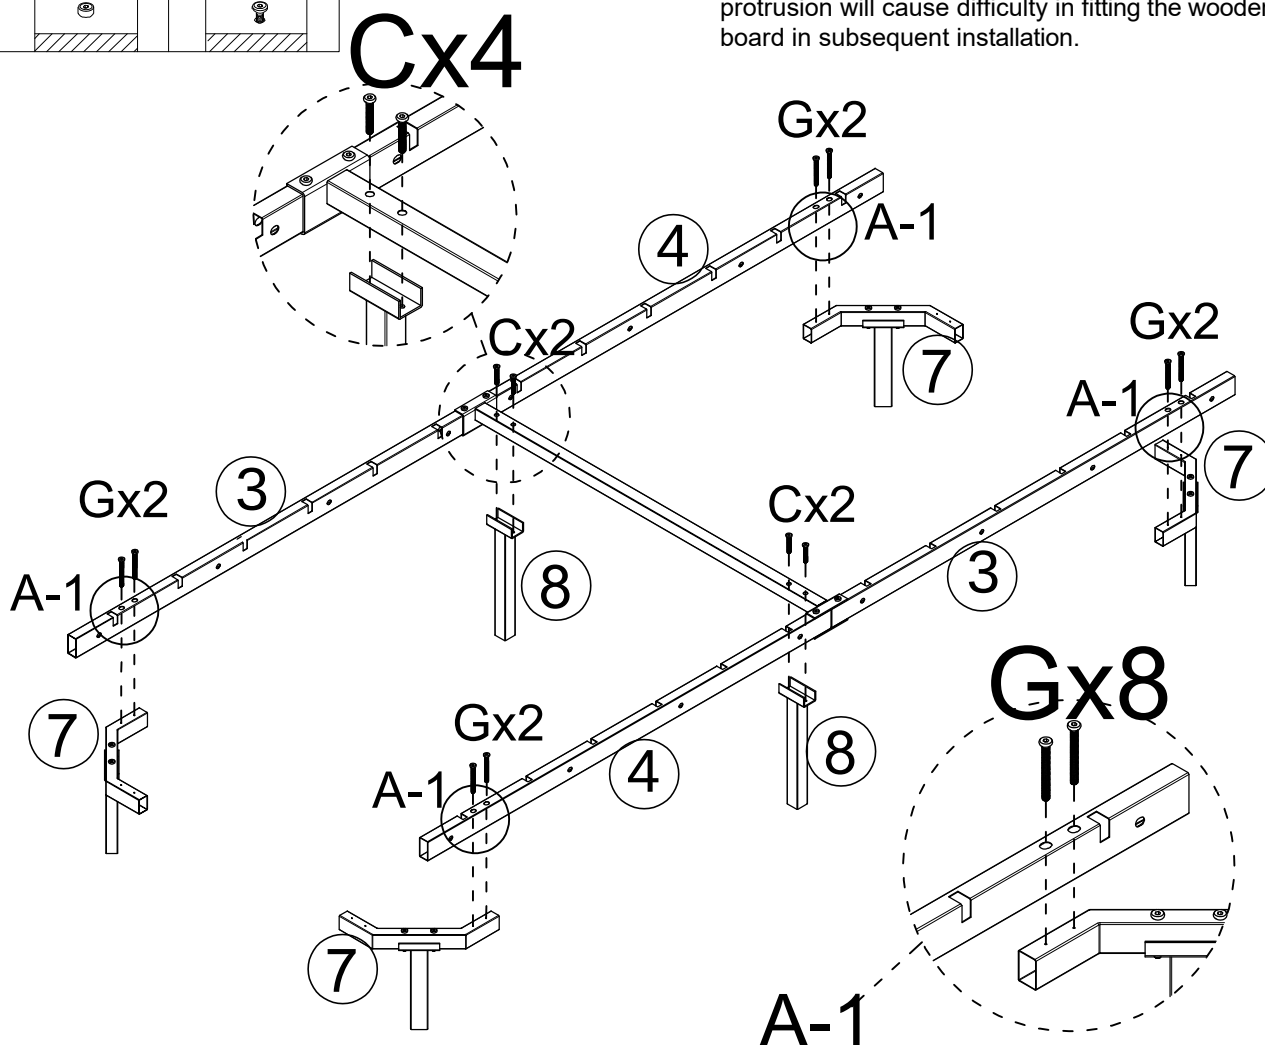


4

Note: For Part 5, ensure the flat side faces upward and the side with holes faces downward.

Gx8

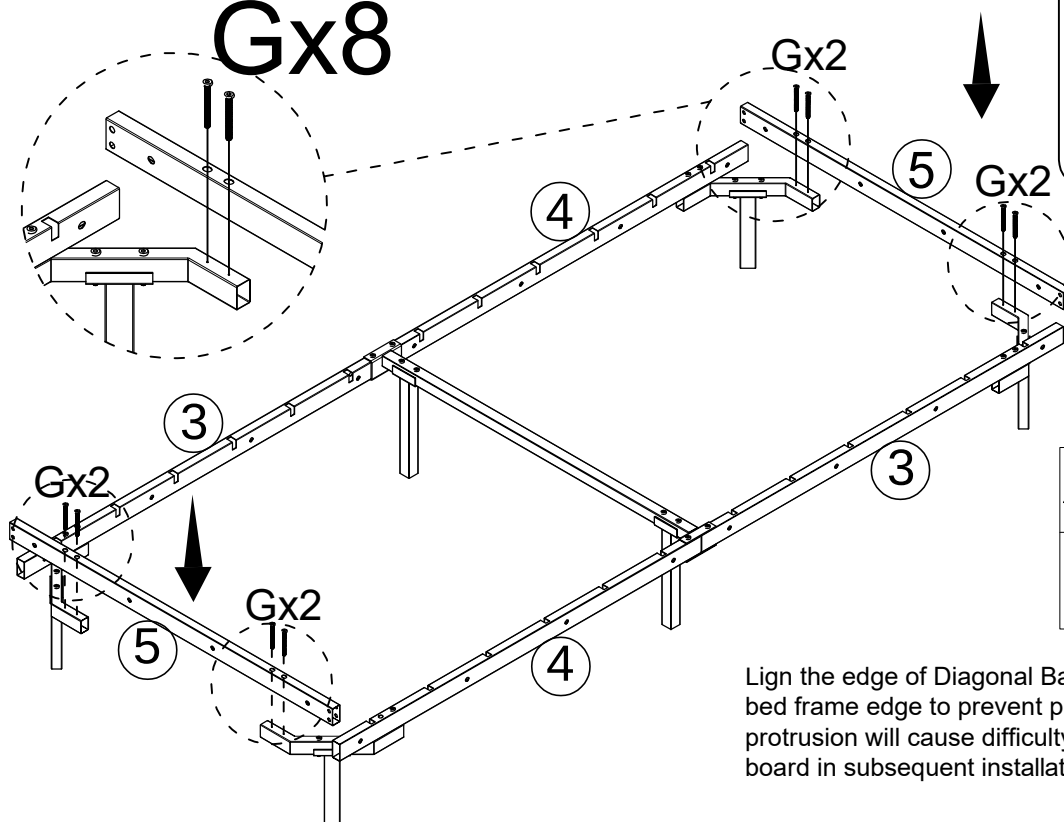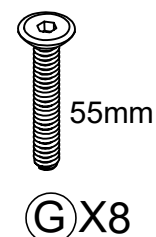



⚠ Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.

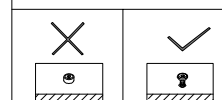

Align the edge of Diagonal Bar No.7 flush with the bed frame edge to prevent protrusion; any protrusion will cause difficulty in fitting the wooden board in subsequent installation.

5

ALL screws are tightened 100%

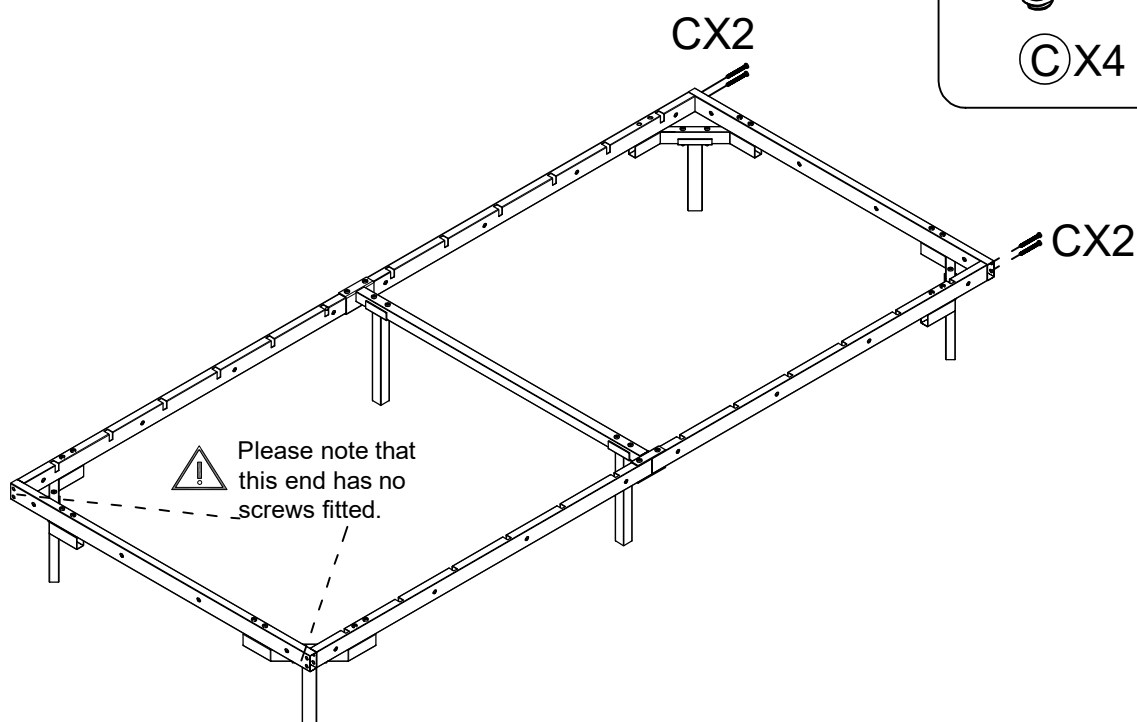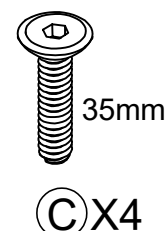


6

1. Take out foam from the package and lay it flat on the ground.
2. Take out the six wooden boards one by one (numbered 1, 2).
3. For better installation, please use this Q accessory screwdriver to lock the N accessory, locking it 50%.
4. After completing the above steps, continue with step 7 of the instruction manual until step 11 locks the N part to 100%.




Reminder: Pay attention to safety during installation and do not get your hands injured by screws.

Please lay it flat on the foam to avoid damage to the wavy shape of the board




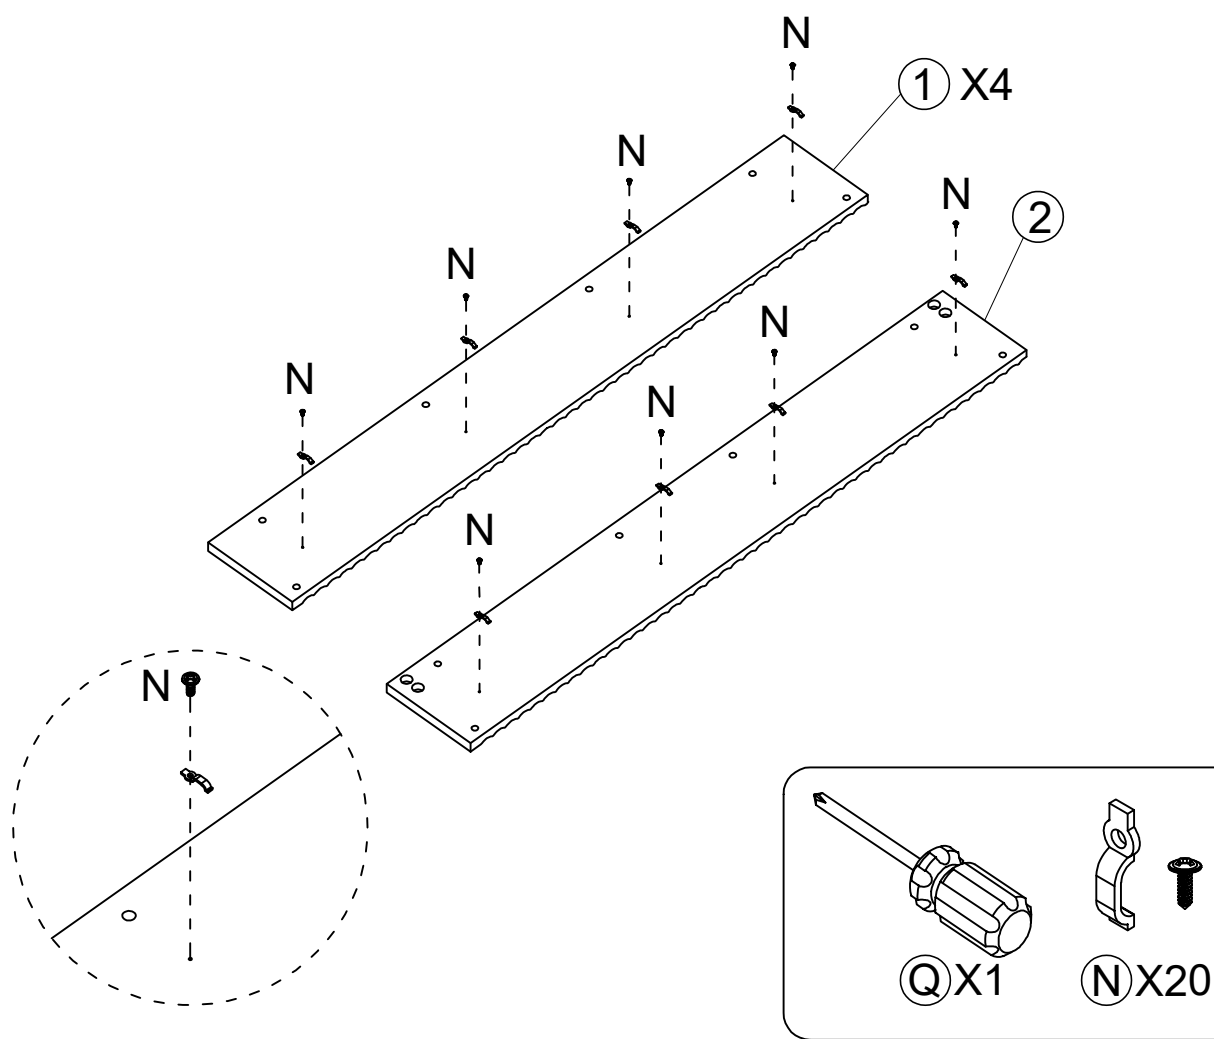


7

Pay attention to the hole position at the enlarged area to ensure alignment with the screw.


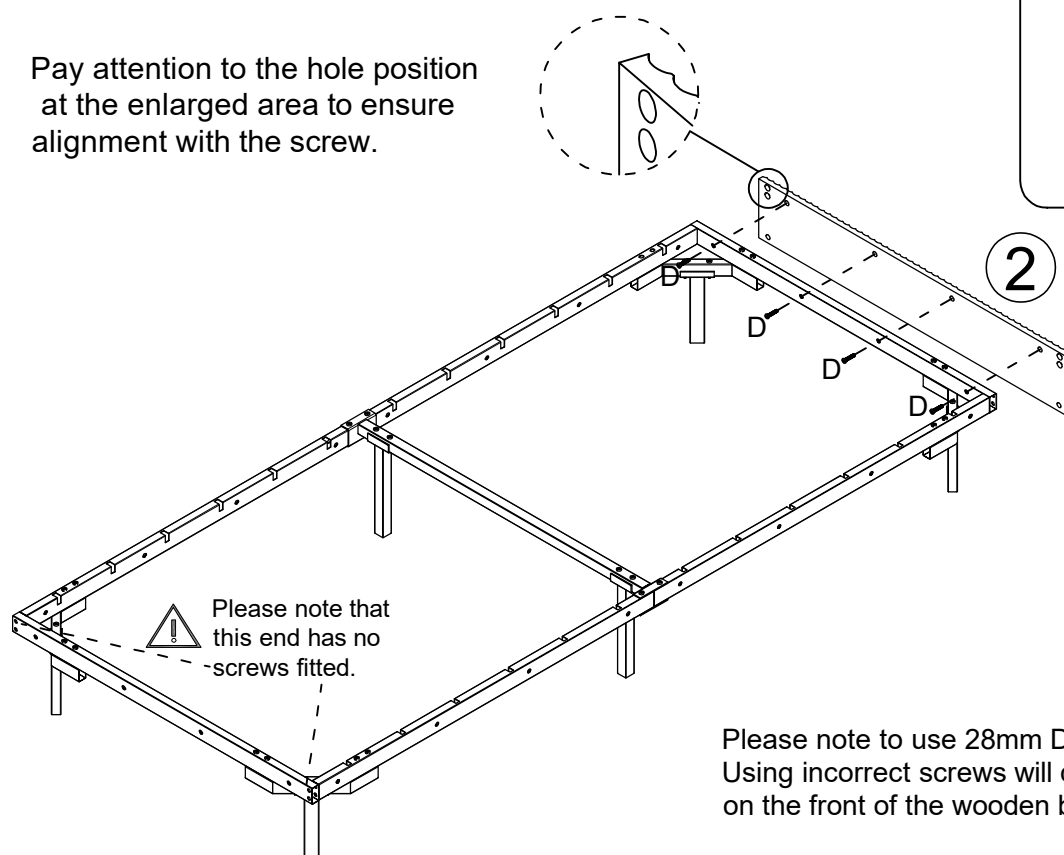


8

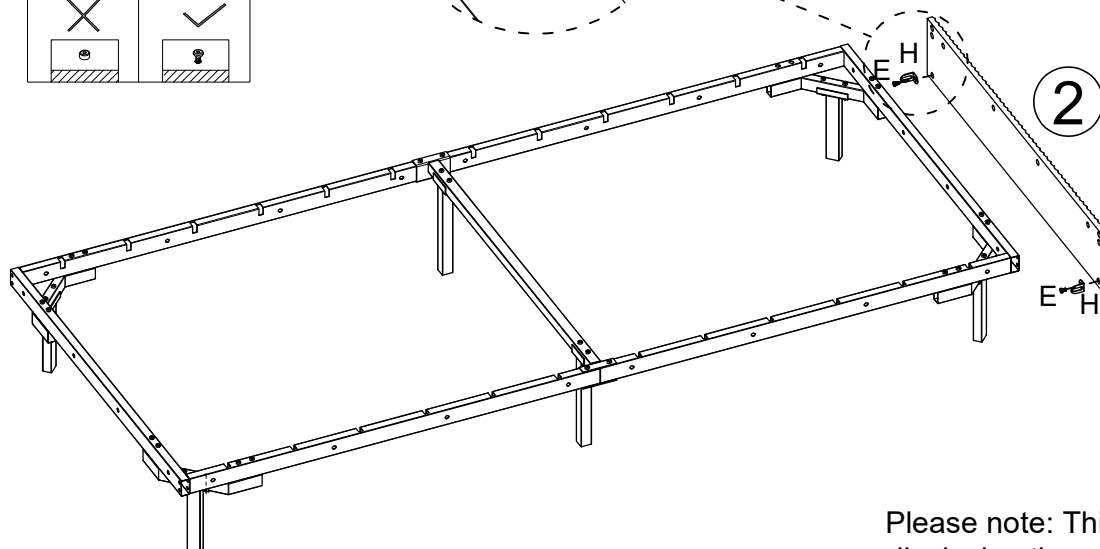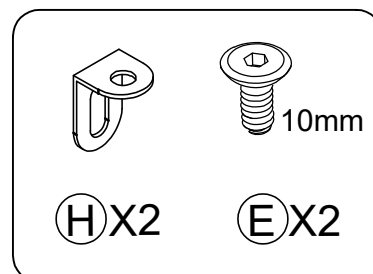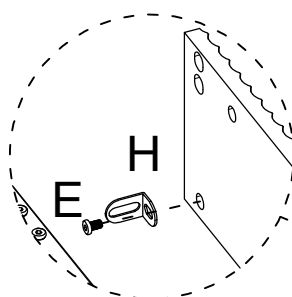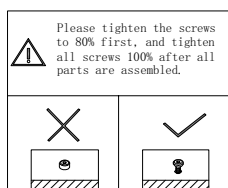


Please note: This is only for displaying the corresponding connector hole positions

If the wooden board is difficult to install,
fasten the screws in Step 9 to 80% tightness first.

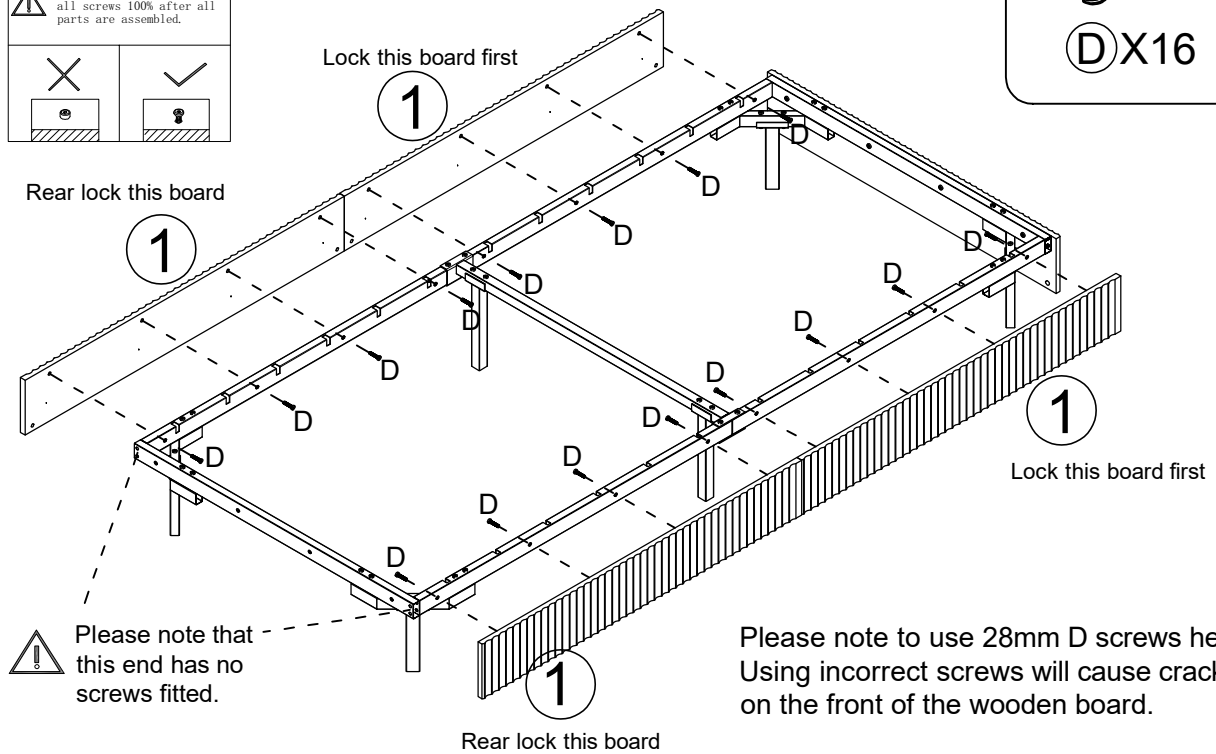


Please note to use 28mm D screws here.
Using incorrect screws will cause cracks
on the front of the wooden board.

Rear lock this board

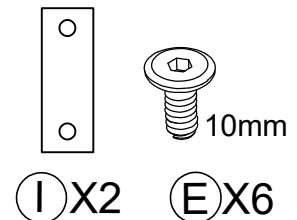


ALL screws are tightened 100%

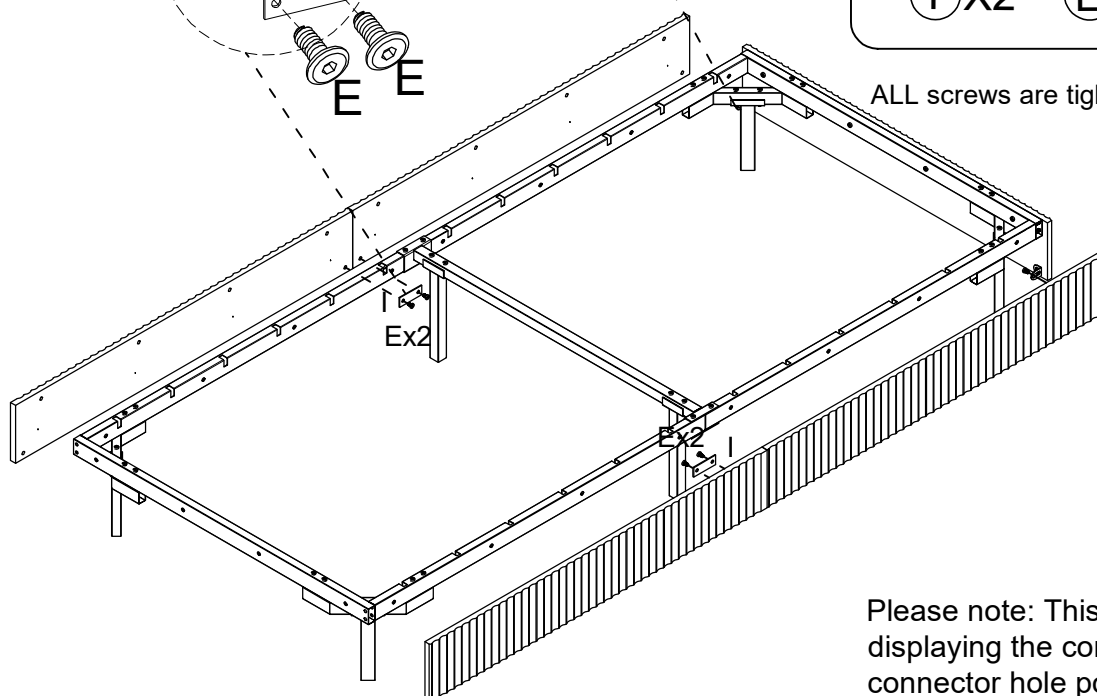


Please note: This is only for displaying the corresponding connector hole positions

11

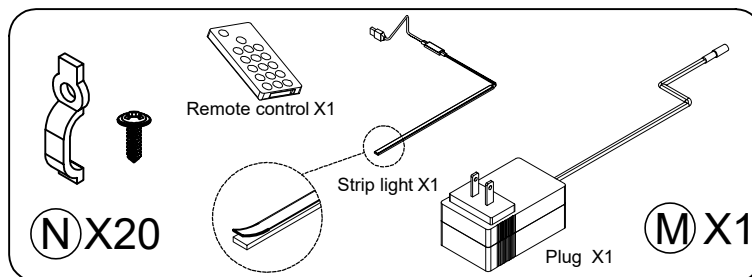


Connect the external power supply

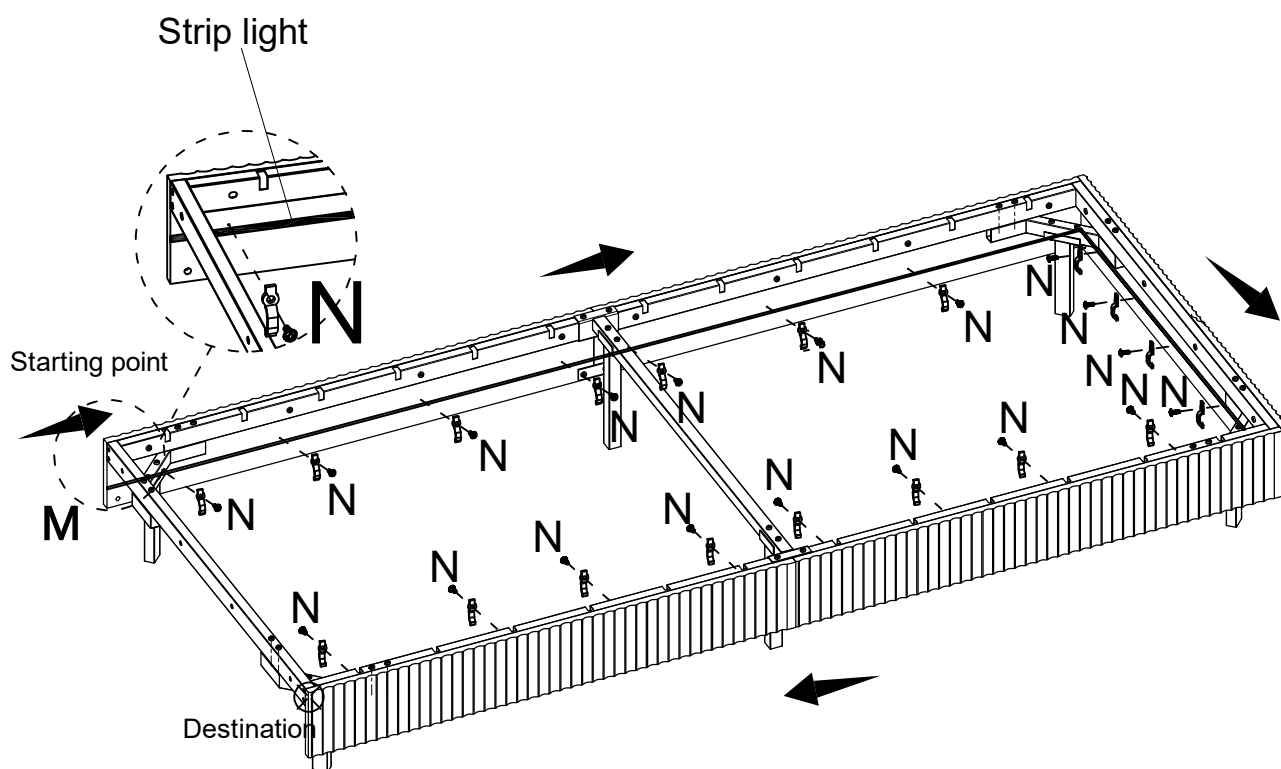


12



Please place the backboard flat on the ground and keep it level up and down, then tighten the screws

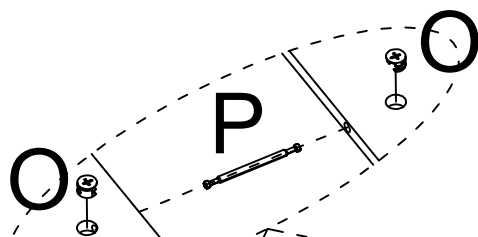

WARNING!!! After locking Component O in place, Component P may shift sideways. If such shifting occurs and the component cannot be locked, make adjustments accordingly.

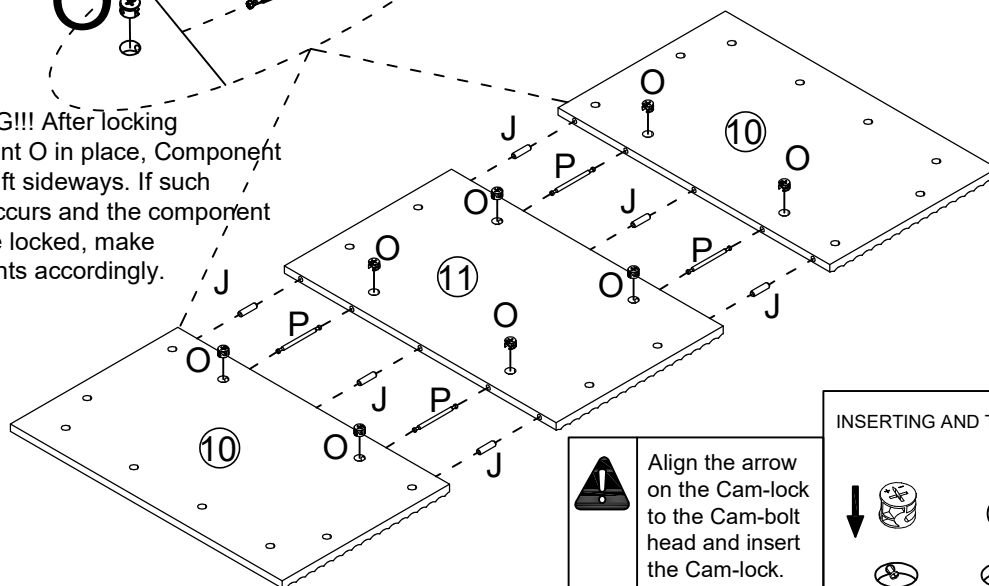

○X8



○P X4



○J X6

8*40mm



Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

INSERTING AND TIGHTENING CAM-BOLT



Insert Cam-lock with arrow align to Cam-bolt head





CORRECT



WRONG

13

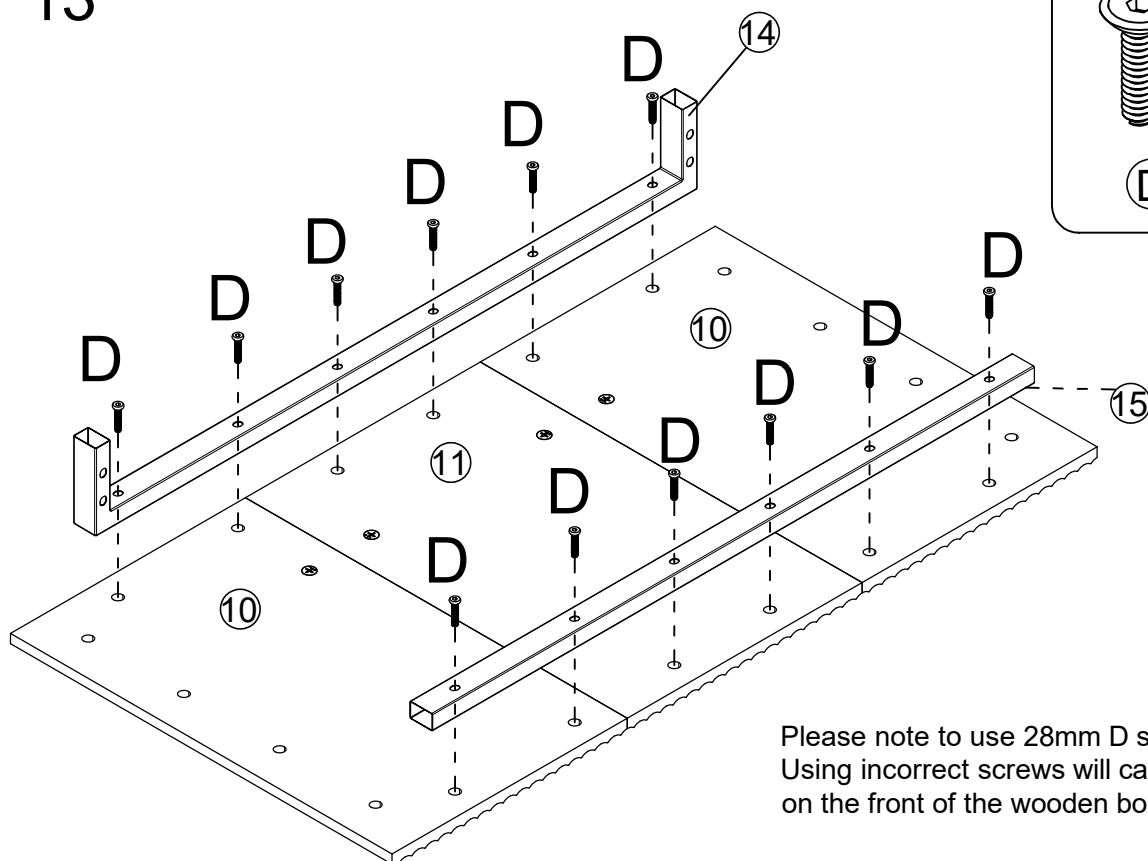


28mm

○D X12

Please note to use 28mm D screws here. Using incorrect screws will cause cracks on the front of the wooden board.

14

Pay attention to aligning the hole positions

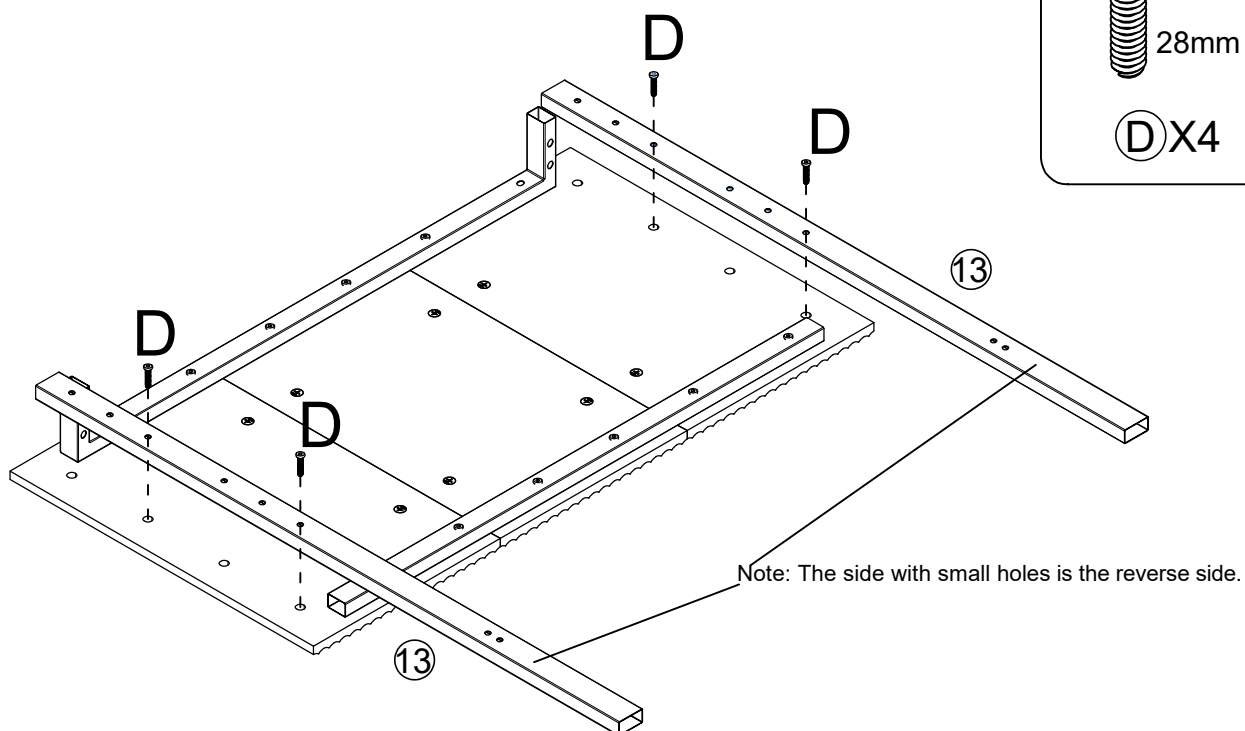



Please note to use 28mm D screws here. Using incorrect screws will cause cracks on the front of the wooden board.



The holes without screws are used to adjust the height of the wooden board, and can be adjusted by locking screws into different holes

15



Pay attention to aligning the hole positions

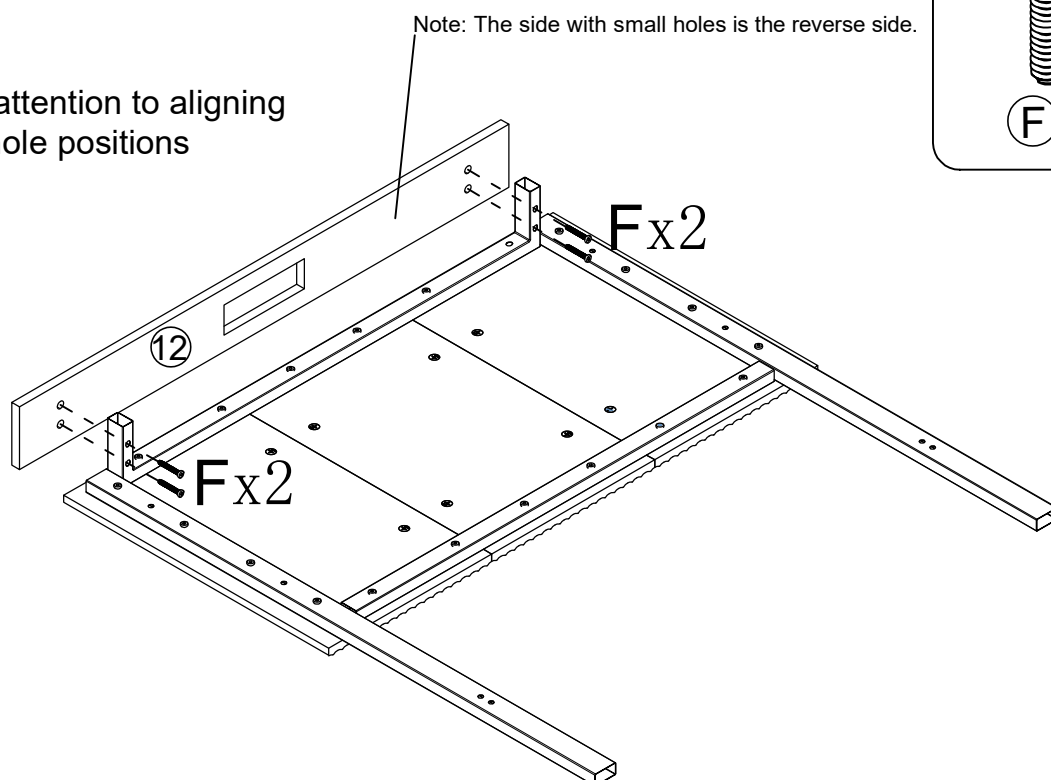

40mm



F X4

16

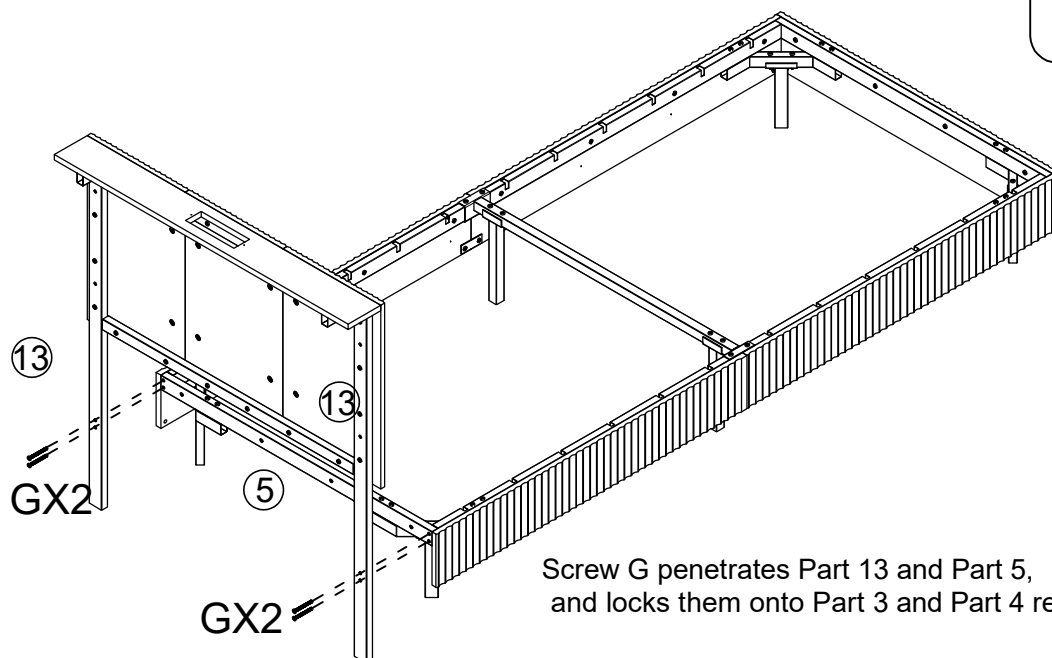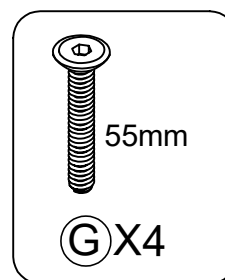


Screw G penetrates Part 13 and Part 5, and locks them onto Part 3 and Part 4 respectively.

17

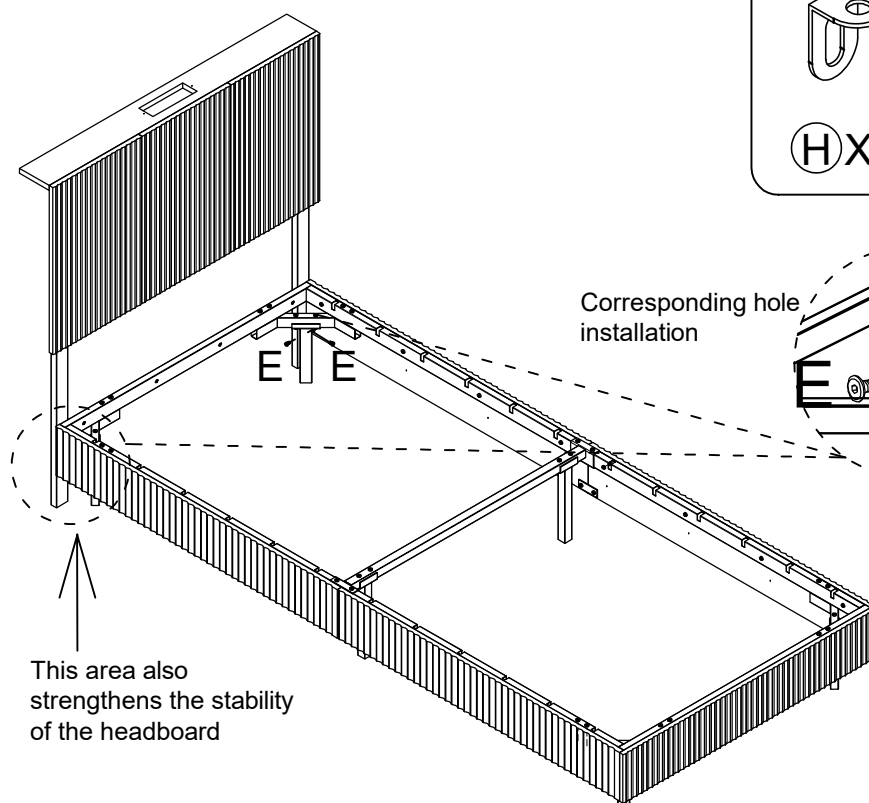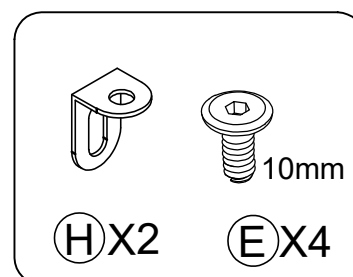


This area also strengthens the stability of the headboard

18

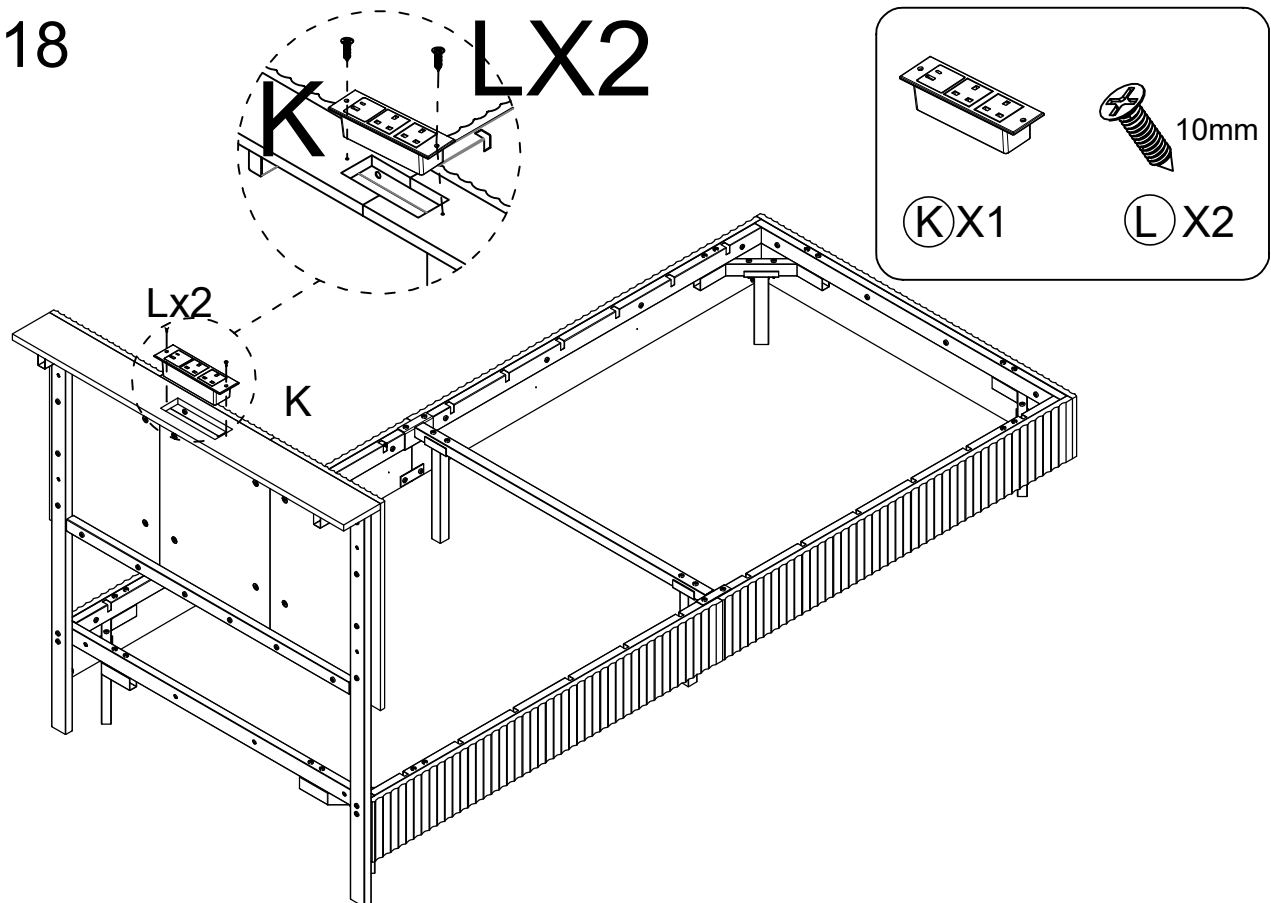

19

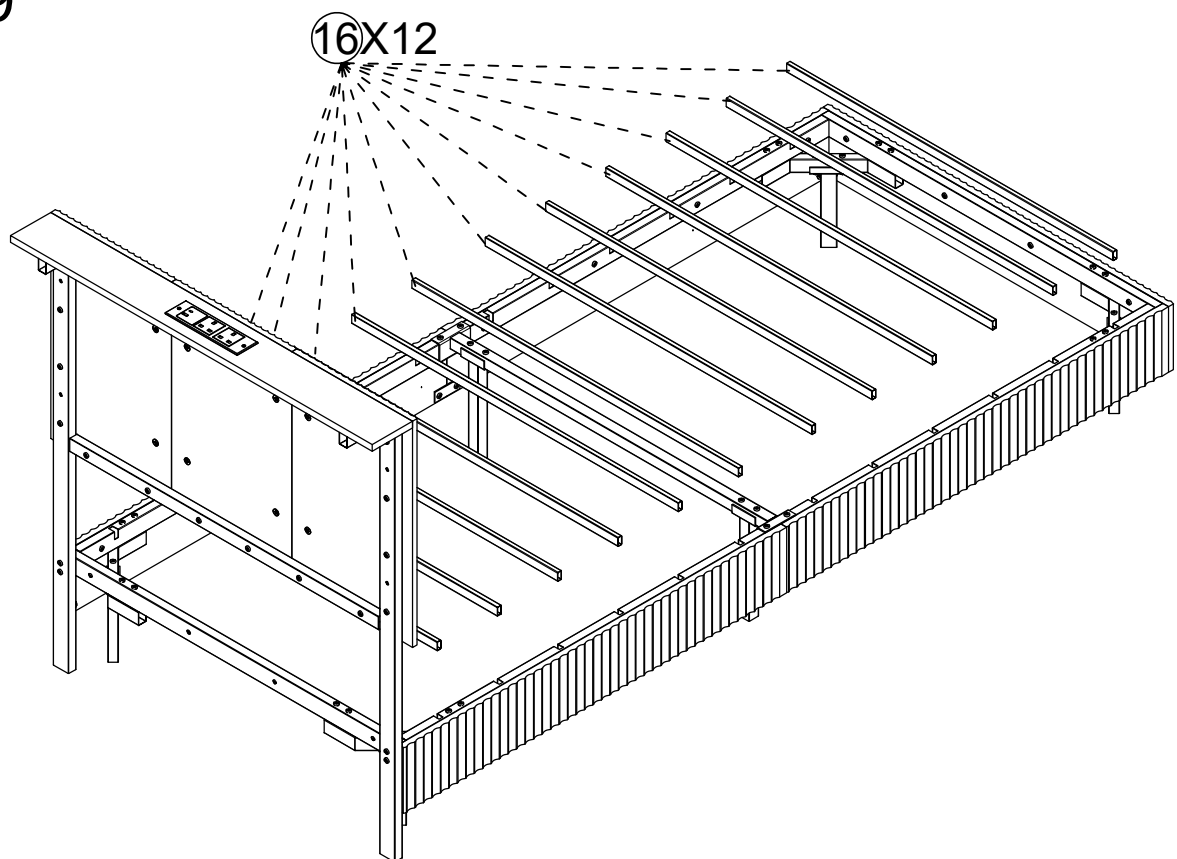

Complete Assembly

