



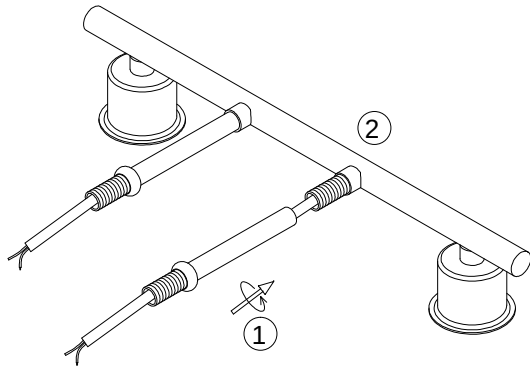


1.Let the wire go through the tube ①, turn to fasten it to the fixture ②.

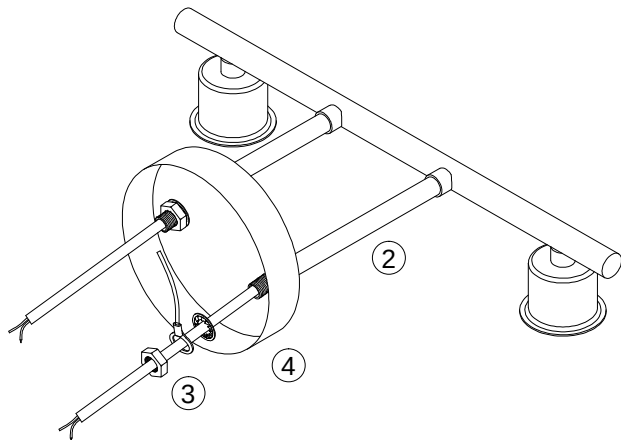

2.Install the fixture to the canopy ④ with lock nut and teeth lock washer ③ (note the earth wire should be between lock nut and teeth lock washer).

Please read carefully before installation!!!

Note : Please make sure that the electricity is powered off during installation !
Only a professional electrician should install this kind of product !

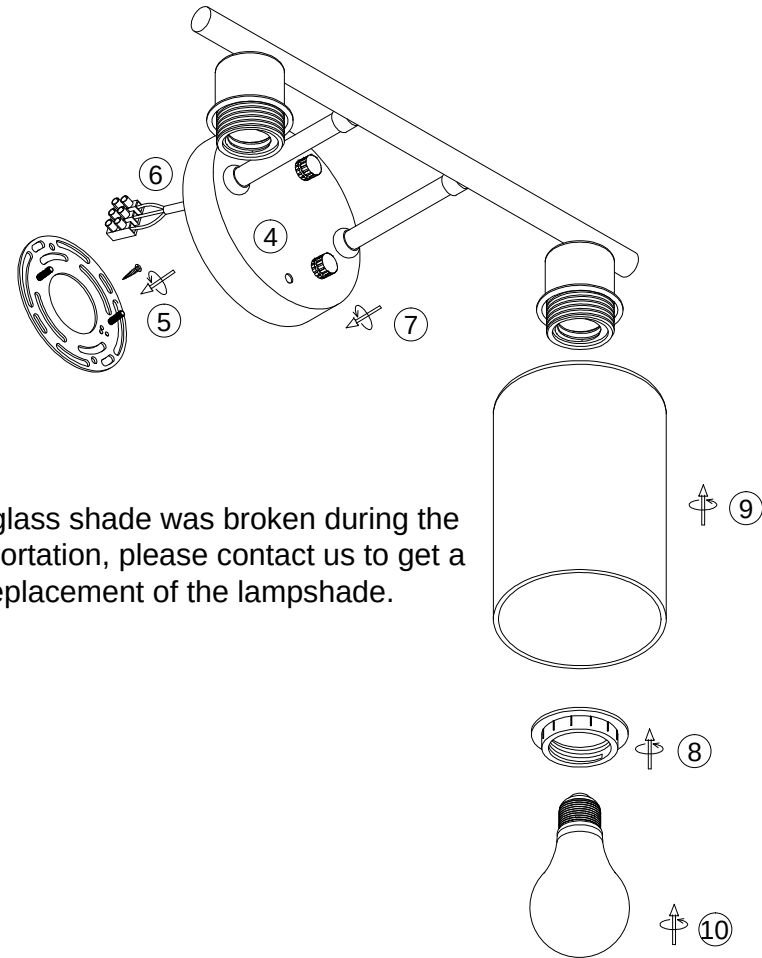

If the glass shade was broken during the transportation, please contact us to get a free replacement of the lampshade.

3.Install the bracket to the junction box with screw.

4.Connect the wire with connector ⑥ to your home line.

5.Install the fixture on the bracket with cap nut ⑦.

6.Install the lampshades ⑨ with ring ⑧, after that install the bulbs ⑩