

ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726



PARTS LIST

- | | |
|---------------------|-------|
| ① LEFT POST | 1 PC |
| ② RIGHT POST | 1 PC |
| ③ TOP / BOTTOM RAIL | 2 PCS |
| ④ HEADBOARD PANEL | 1 PC |
| ⑤ SPACER BLOCK | 2 PCS |

Instructions apply for bed sizes
QUEEN > KING

HARDWARE

- | | |
|---|--|
| ① Wood dowel 10 X 30mm - 4 pcs
Spare - 1pc | ⑤ Wood button - 4 pcs
Spare - 1pc |
| ② JCB M6 X 70mm - 4 pcs
Spare - 1 pc | ⑥ Allen wrench M4 - 1pc
Spare - 1pc |
| ③ Barrel Nut M6 - 4 pcs | |
| ④ JCB M6 X 40mm - 2 pcs
Spare - 1 pc | |





HARDWARE FOR METAL BED FRAME

- | | |
|--|---------------------------------------|
| ⑦ JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc | ⑧ Flat washer - 4 pcs
Spare - 1 pc |
| ⑨ Split washer - 4 pcs
Spare - 1 pc | |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Attach spacer block (5) to left and right post (1)(2), using wood dowel (A) and JCB (D). Tighten with the Allen wrench (F).

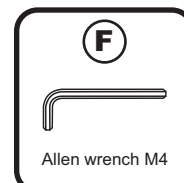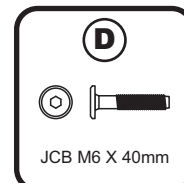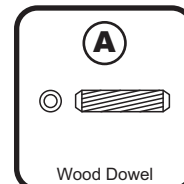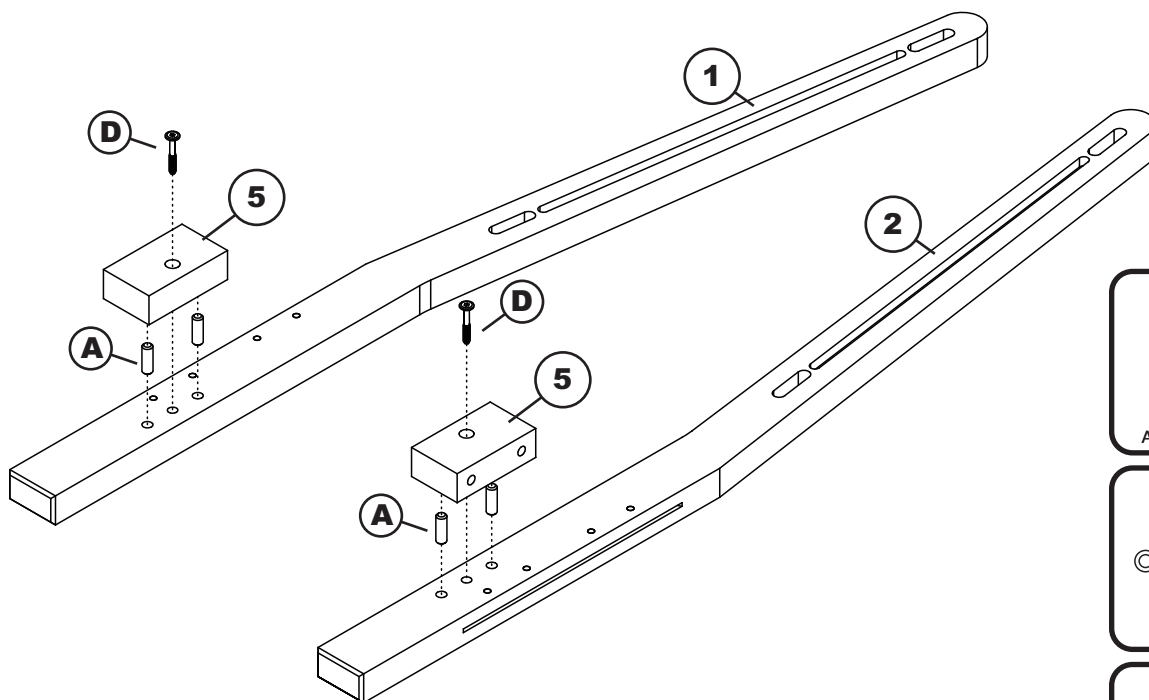


PO:

CODE	ITEM	ITEM
HB-CNV	R-29984X	R-29985X


Step 2

Attach top / bottom rail (3) to the right post (2) as shown below. Using JCB (B) and barrel nut (C) tighten with Allen wrench (F). Guide the headboard panel (4) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the post before fitting the left post (1).

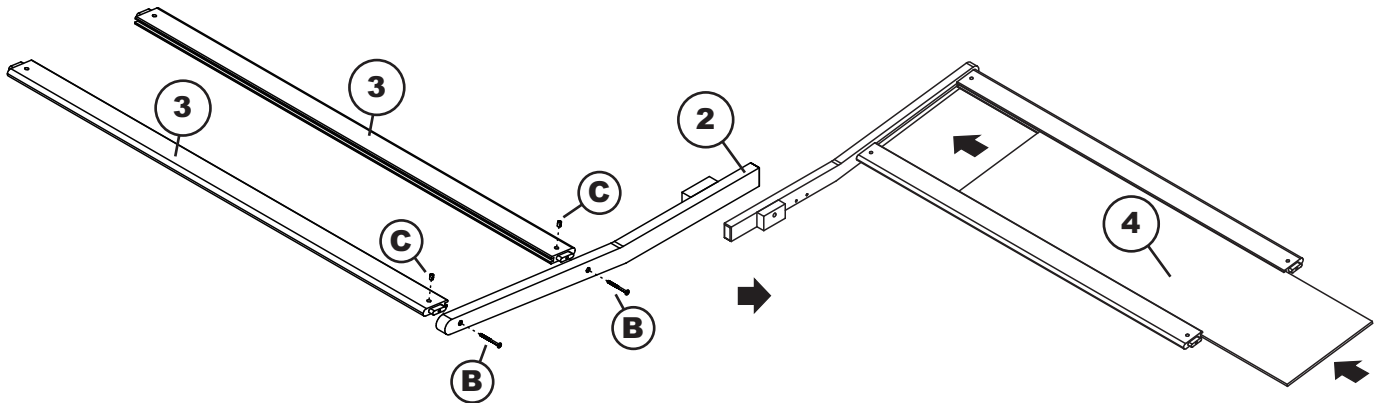


Step 3

Attach left post (1) to the headboard assembly as shown below. Using JCB (B) and barrel nut (C) tighten with Allen wrench (F).

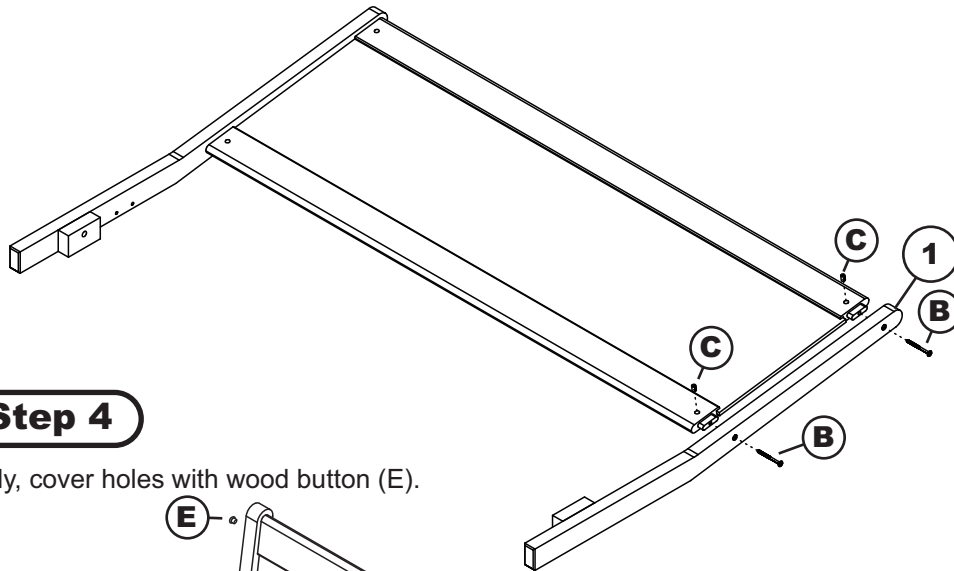


Step 4

Lastly, cover holes with wood button (E).

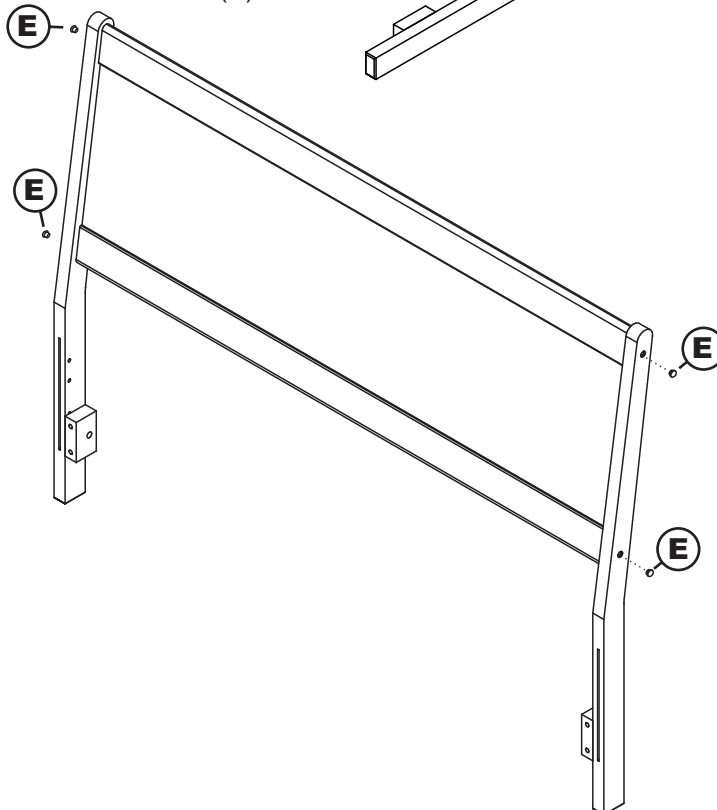

Adult assembly

(B)



JCB M6 X 70mm

(C)



Barrel Nut

(E)



Wood button

(F)



Allen wrench M4

ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.







Instructions apply for bed sizes
TWIN > FULL > QUEEN > KING



Metal bed frames are sold separately from wood headboards. The hardware shown on this page is supplied with your wood headboard for attaching the bed frame to the headboard. The metal bed frame is supplied with its own assembly instructions and hardware.

Step 1

Attach the headboard assembly to the metal frame using JCB (G), flat washer (H), and split washer (I) then tighten with Allen wrench (F), as shown below.

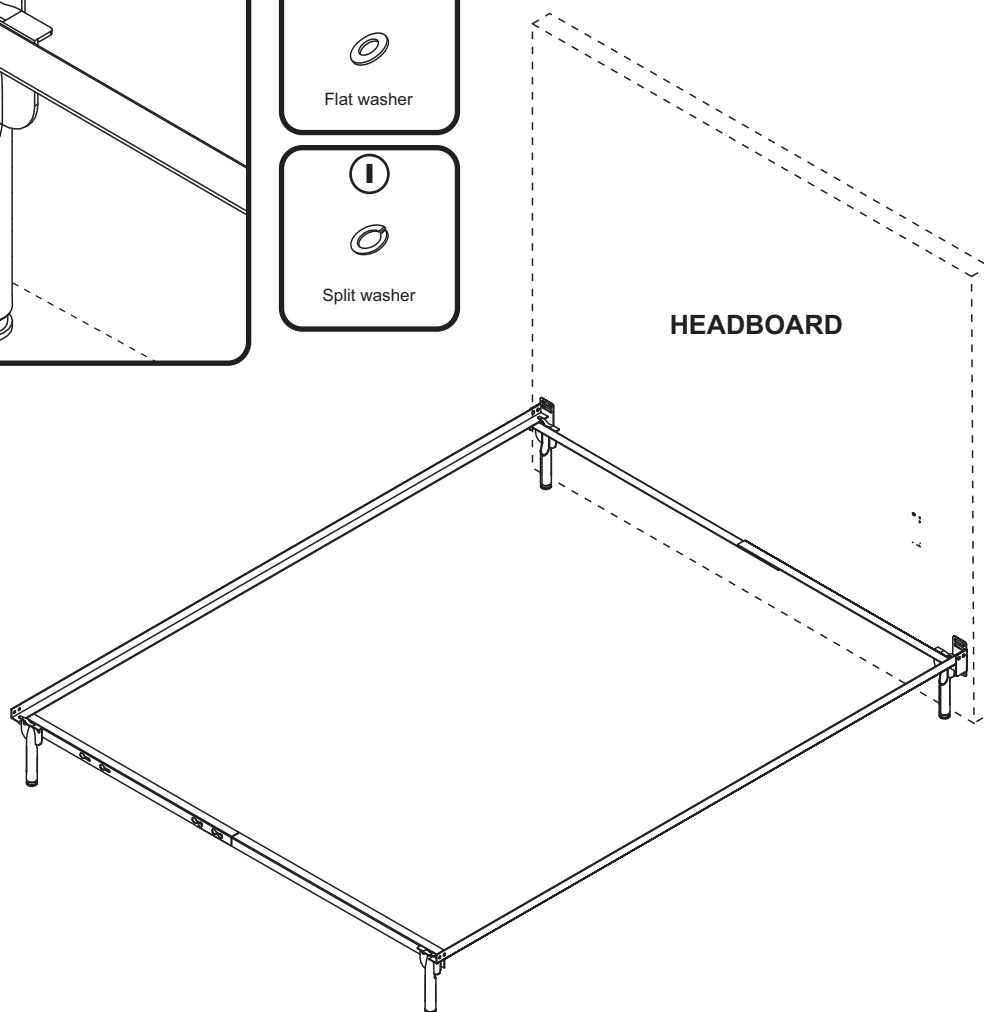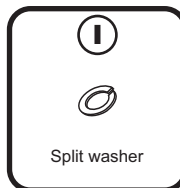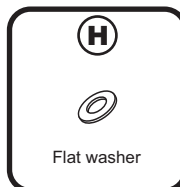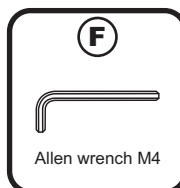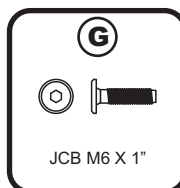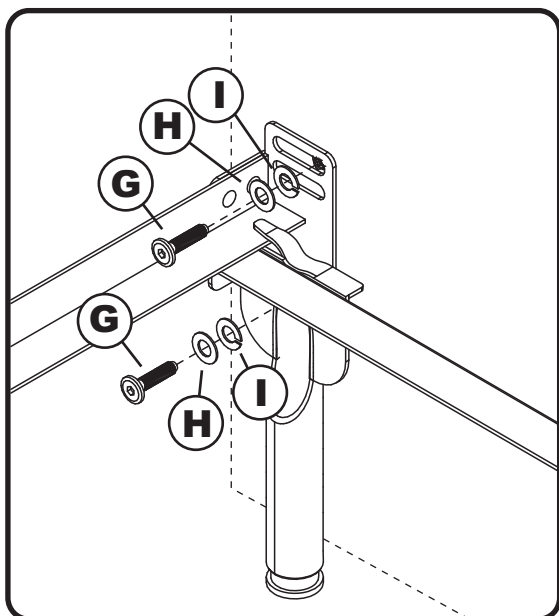

Congratulations!

Your bed is now ready for use.

To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

QUEEN, KING

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact [afifurnishings at customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



PARTS LIST

- | | | |
|---|------------------------|--------------|
| ① | LEFT LEG | 1 PC |
| ② | RIGHT LEG | 1 PC |
| ③ | TOP/BOTTOM RAIL | 2 PCS |
| ④ | FB PANEL | 1 PC |
| ⑤ | LEFT SIDE RAIL | 1 PC |
| ⑥ | RIGHT SIDE RAIL | 1 PC |
| ⑦ | SLAT KIT | 2 SET |
| ⑧ | SUPPORT RAIL | 2 PCS |
| ⑨ | SUPPORT LEG | 4 PCS |

HARDWARE

- | | | | |
|---|--------------------------------|---|-----------------------|
| ① | JCB M6 X 80mm (3 1/8") - 8 pcs | ② | Cap nut - 6 pcs |
| ③ | Barrel nut - 8 pcs | ④ | Split washer - 4 pcs |
| ⑤ | Wood screw (1 1/4") - 12 pcs | ⑥ | Spare - 1 pc |
| ⑦ | Spare - 1 pc | ⑧ | JCB M8 X 40mm - 4 pcs |
| ⑨ | Wood button - 8 pcs | ⑩ | Flat washer - 4 pcs |
| ⑪ | Spare - 1 pc | ⑫ | Spare - 1 pc |
| ⑬ | JCB M6 X 30mm (1 1/4") - 6 pcs | ⑭ | Allen wrench M5 - 1pc |
| ⑮ | Spare - 1 pc | ⑯ | Allen wrench M4 - 1pc |
| | | ⑰ | Spare - 1pc |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1


Attach right leg (2) to top/bottom rail (3), using JCB (A) and barrel nut (B). Tighten with the Allen wrench M4(K).

Step 2

Guide the FB panel (4) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the leg before fitting the left leg (1).

Step 3

Attach left leg (1) to the footboard assemblies as shown bellow. Using JCB (A) and barrel nut (B). Tighten with allen wrench M4(K).

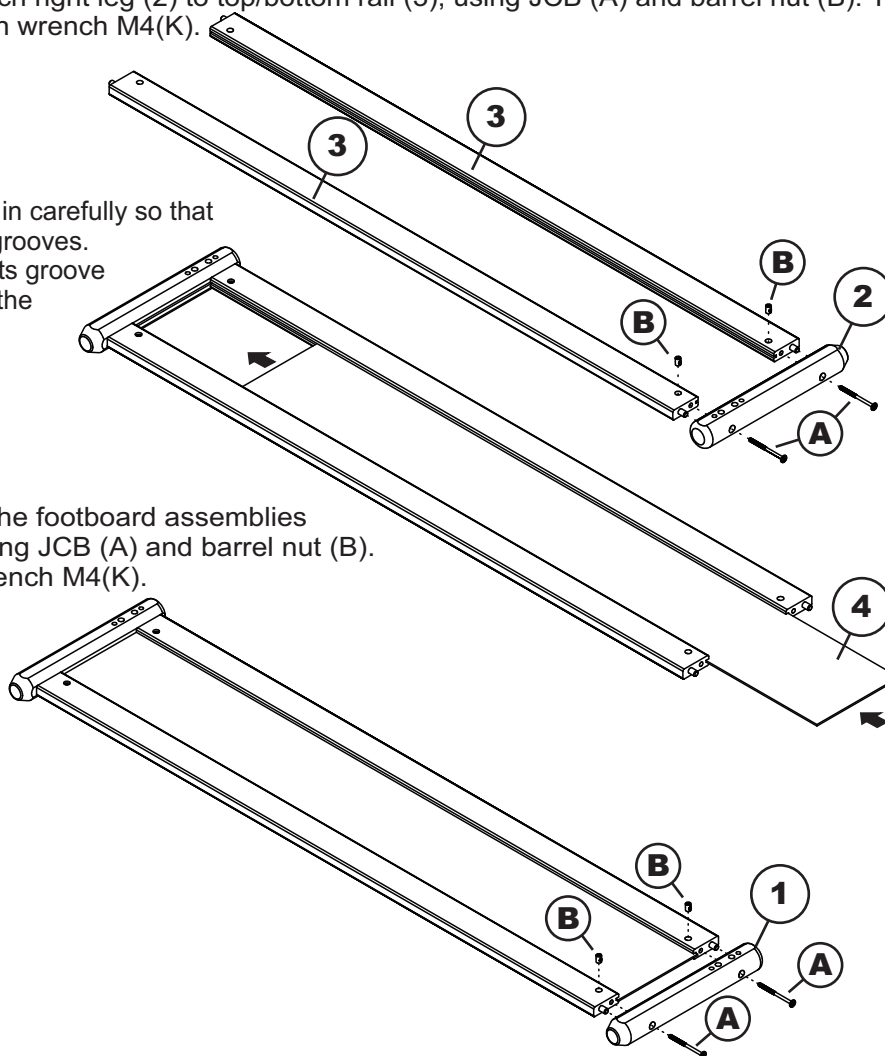

Adult assembly

①



JCB M6 X 80mm

②



Barrel nut

③



Allen wrench M4

PO:

CODE

FR-BRC-STP


ITEM

R-20334X R-20335X

QUEEN, KING


Step 4

Attach left & right side rails (5)(6) to the footboard as shown below. Using JCB (A) and barrel nut (B) tighten with Allen wrench M4 (K).

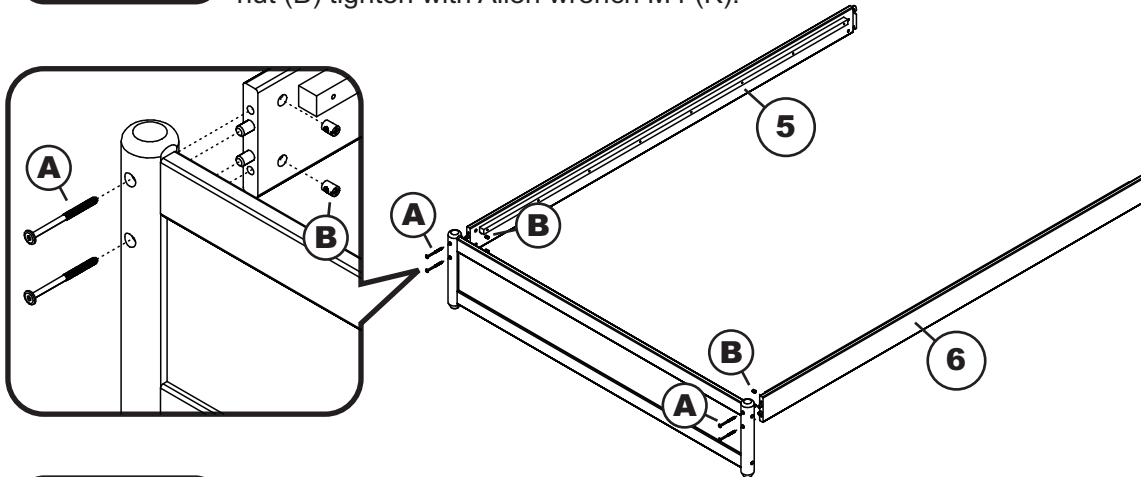

Adult assembly

A



JCB M6 X 80mm

B



Barrel nut

E



JCB M6 X 30mm

F



Cap nut

G



JCB M8 X 40mm

H I



Split / Flat washer

J



Allen wrench M5


K



Allen wrench M4


Step 5

Attach the side rails to the headboard as shown using the bed hooks and middle set of pins on headboard.

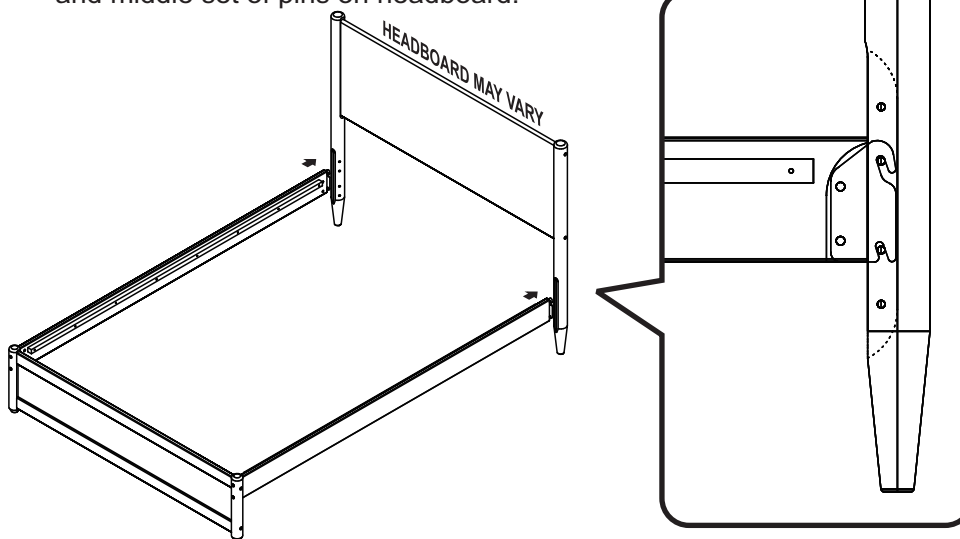



Step 6

Attach support legs (9) to support rail (8) as shown below using JCB M8 X 40mm (G) split and flat washer (H)(I) tighten with Allen wrench M5 (J). Repeat the other.

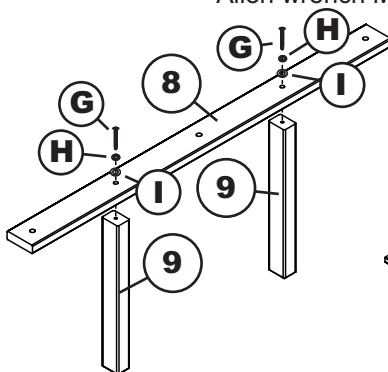

Step 7

Attach slat support (8) to the slat kit (7) as shown below using JCB M6 X 30mm (E) and cap nut (F). Tighten with Allen wrench M4 (K). Repeat the other.

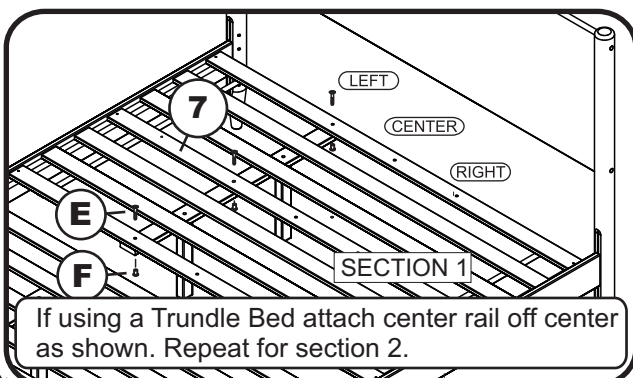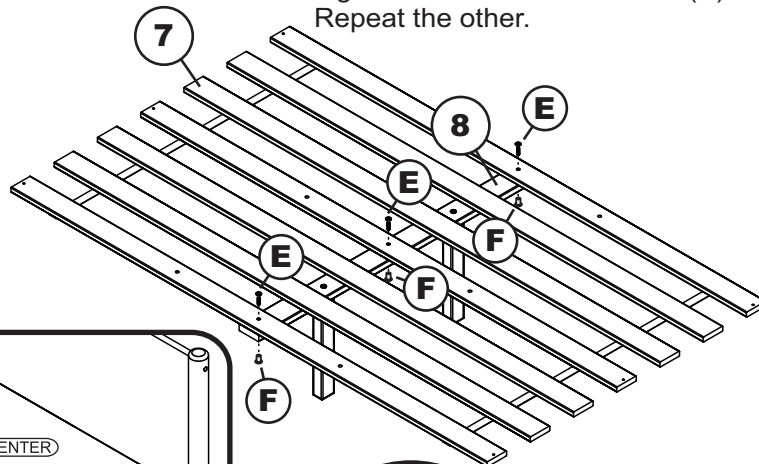


If using a Trundle Bed attach center rail off center as shown. Repeat for section 2.

QUEEN, KING




Step 8

Attach slat kit (7) onto the bed. Using wood screw (C) tighten with Phillips head screwdriver. (Customer supplied)

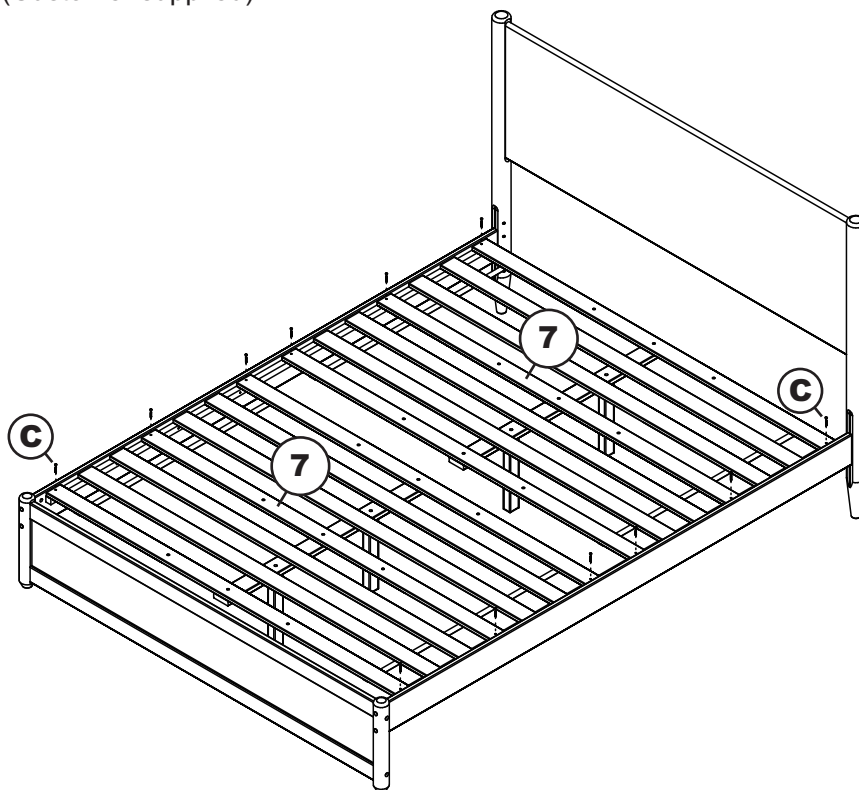

Step 9

Lastly, cover holes with wood button (D).

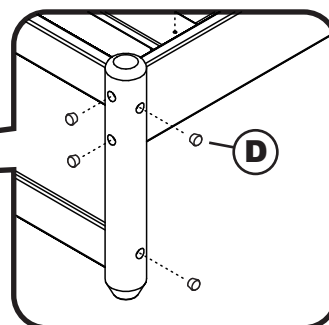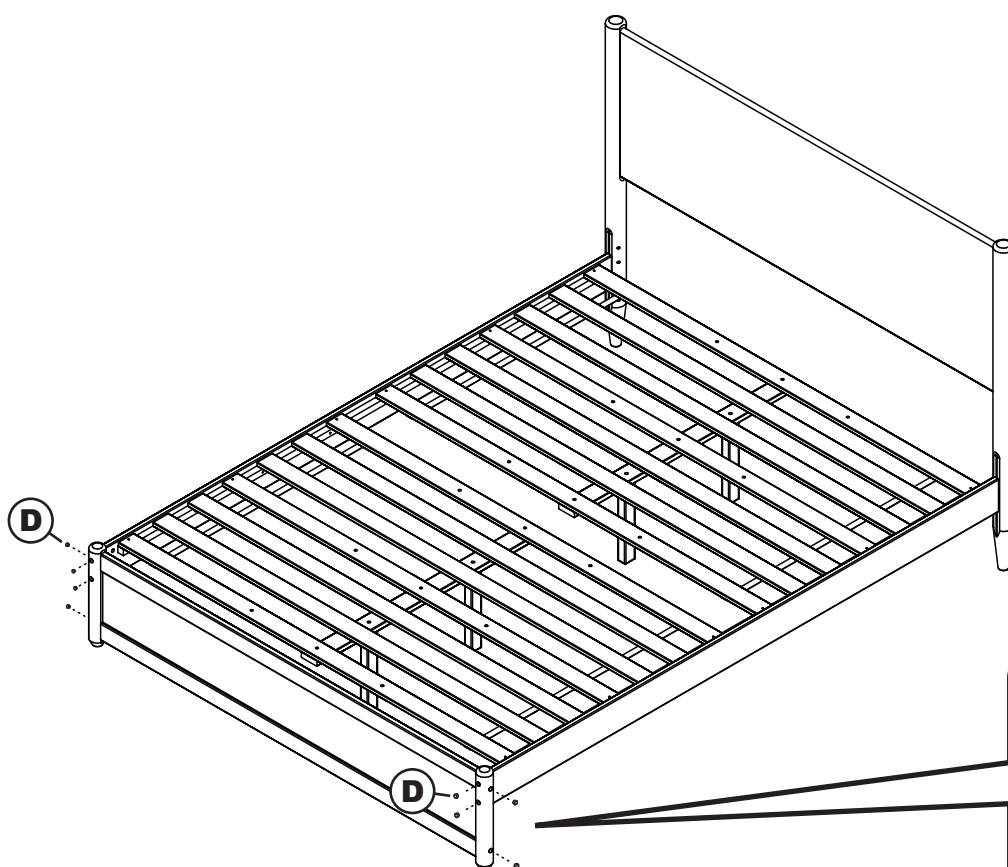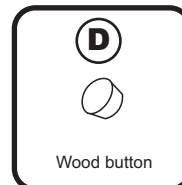

Congratulations!



Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.

ASSEMBLY INSTRUCTIONS

Before assembling your bed drawer, please read through these instructions carefully, familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

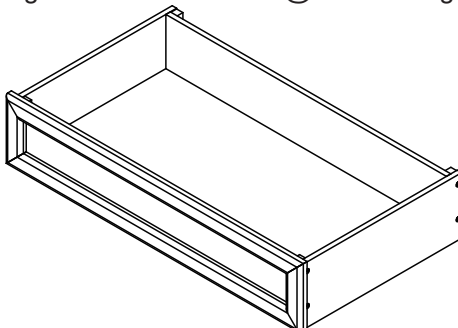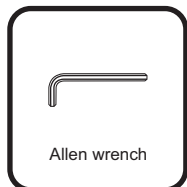

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

HARDWARE





(A) JCB M6 X 30mm - 16 pcs
Spare - 1 pc



(B) Allen wrench - 1 pcs
Spare - 1 pc




PARTS LIST

(01)	HARDWARE	1 BOX
(02)	DRAWER FACE	2 PCS
(03)	DRAWER SIDE	4 PCS
(04)	DRAWER BACK	2 PCS
(05)	DRAWER BOTTOM	2 PCS

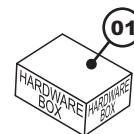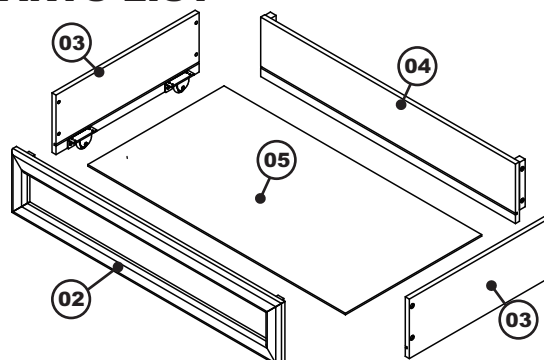

Step 1

Lay the drawer face (02) on smooth, flat surface so the drawer bottom (05) groove is facing upwards. Attach the drawer sides (03) to drawer face (02) using JCB M6 X 30mm (A). Align groove inside drawer side with groove in drawer face. Tighten with Allen wrench (B).

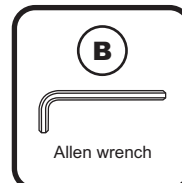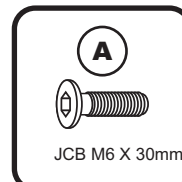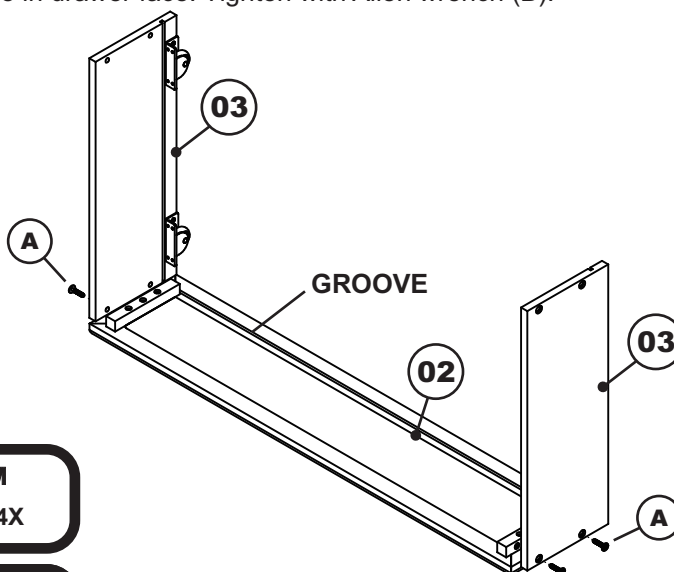


CODE	ITEM	ITEM
ST-DR2-MCM	E-7113X	E-7114X

PO :

Step 2

Guide the drawer bottom (05) in carefully so that it won't jump out of its grooves. Be sure it fits fully into its groove at the bottom (in the drawer face) before fitting the drawer back.

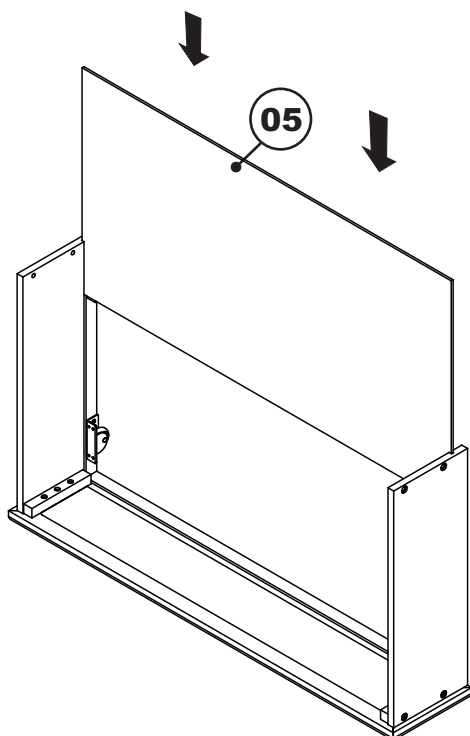


Step 3


Attach drawer back (04) to bed drawer assembly as shown. Use JCB M6 X 30mm (A). Tighten with Allen wrench (B).




Adult assembly

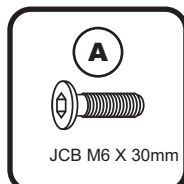

JCB M6 X 30mm

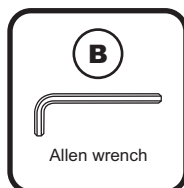

Allen wrench

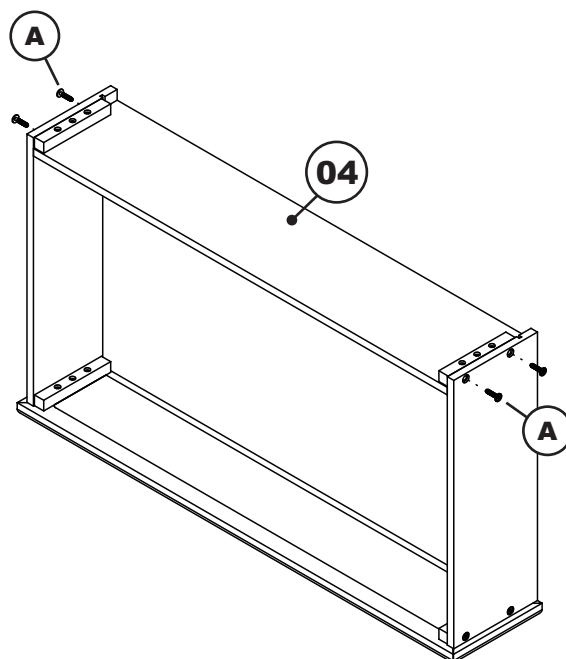


Step 4

Lastly, insert bed drawer to the bed as shown below.



Adult assembly

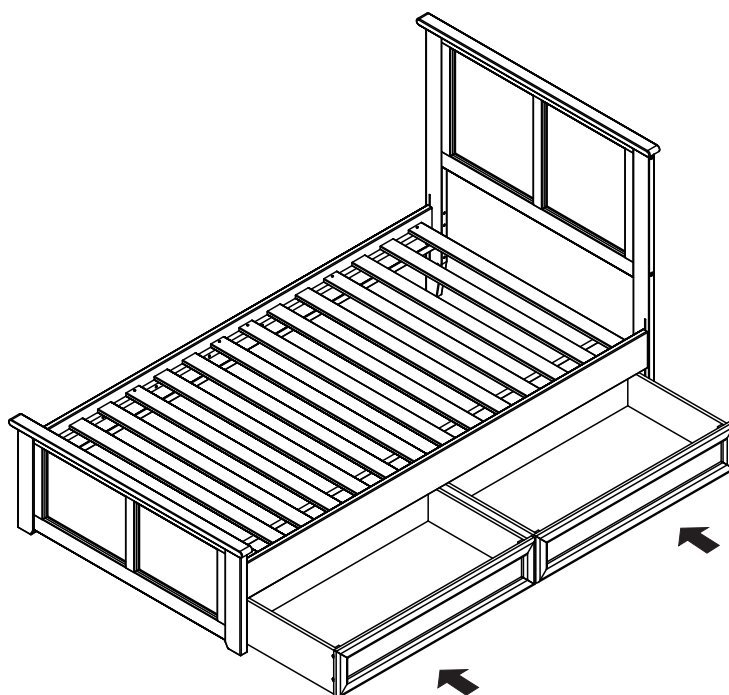

Congratulations!

Your bed drawer is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.