







Illustration of Installation

Name: End Table

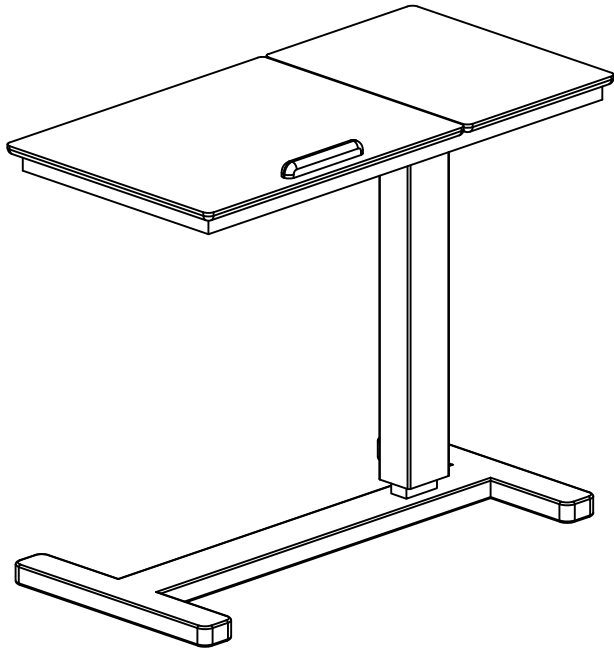





Caution: (Installed) in the parts table and hardware table means that it has been installed in the finished product, and is not in the hardware bag!!!



List of Parts

No.	Name	Graph	Size	Amount
1	Panel		800*400*40MM	1
2	Lifting Hardware		620*150*80MM	1
3	Base		770*380*30MM	1
4	Support Bracket (Installed)		470*150*5MM	1
5	Stopper		150*20*20MM	1

List of Hardware

No.	Name	Graph	Size	Amount
A	Bevel head hexagon socket screws		M6*15MM	5
B	Bevel head hexagon socket screws		M8*45MM	5
C	Hexagon socket head screw		M6*12MM	3
D	Hexagon wrench		4*21*58MM	1
E	Hexagon wrench		5*32*83MM	1
F	Magnetic contact (Installed)		45*16*12MM	1

This product has passed the wood inspection and paint inspection in full compliance with the national quality inspection standards. After passing the factory, it will be released from the factory and sold after confirming that the packaging is intact. For better service, please feel free to give us your opinions on after-sales service.

Name:	Wood Furniture
Qualification:	Pass
Grade:	Class 1

Standard:

GB/T 3324
GB/ 18584

Required
Workers



Inspector

QC 02

Name: End Table

Step 1:

Figure 1:



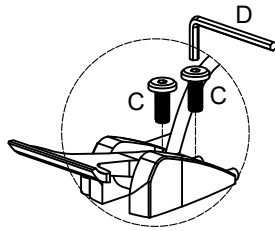


Figure 2:

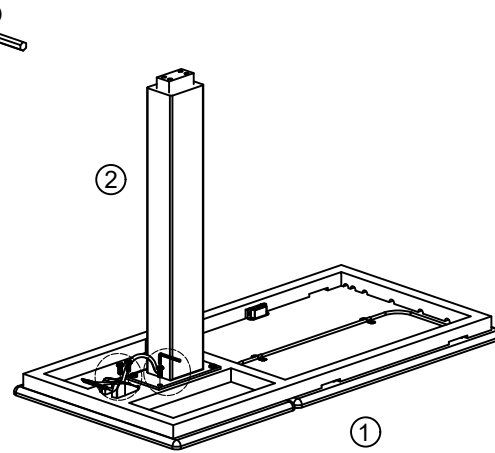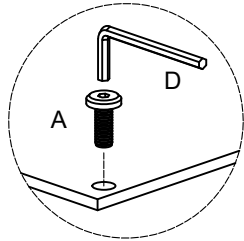


Caution: After unpacking, check the correct number of accessories against the instructions.

As shown in Figure 1, align the controller of accessory No. 2 with the hole on the back of accessory No. 1 and connect it with hardware C/D.


As shown in Figure 2, align the square column of accessory No. 2 with the hole on the back of accessory No. 1 and connect it with hardware A/D.

Step 2:

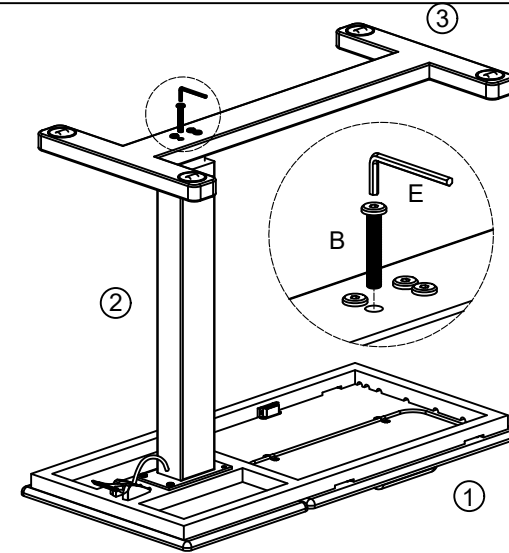


As shown in the figure, align accessory No. 3 with the hole of the square column of accessory No. 2, and then connect it with hardware B/E.

Step 3:

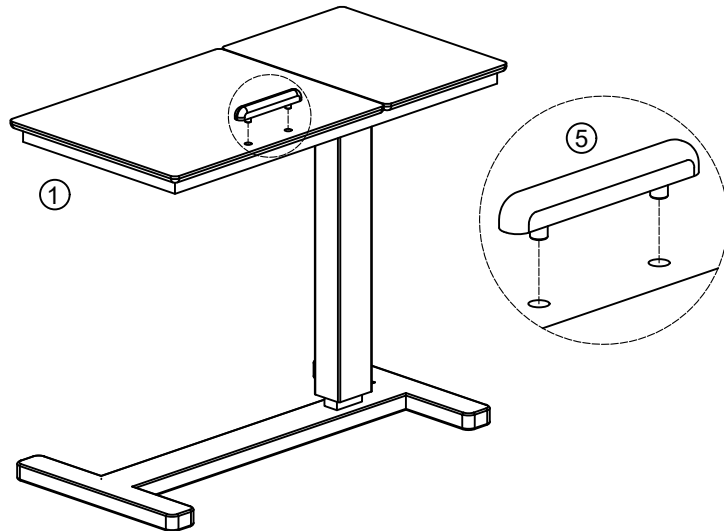

As shown in the picture, carefully turn over the assembled parts. Align accessory No. 5 with the hole of accessory No. 1 and install it.

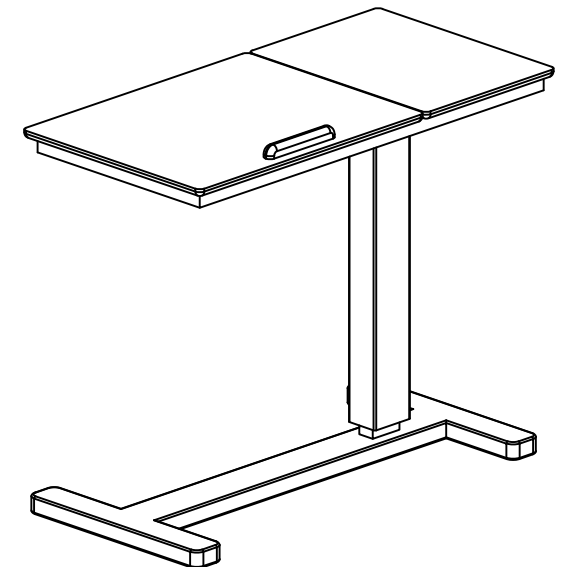

Assembly complete.