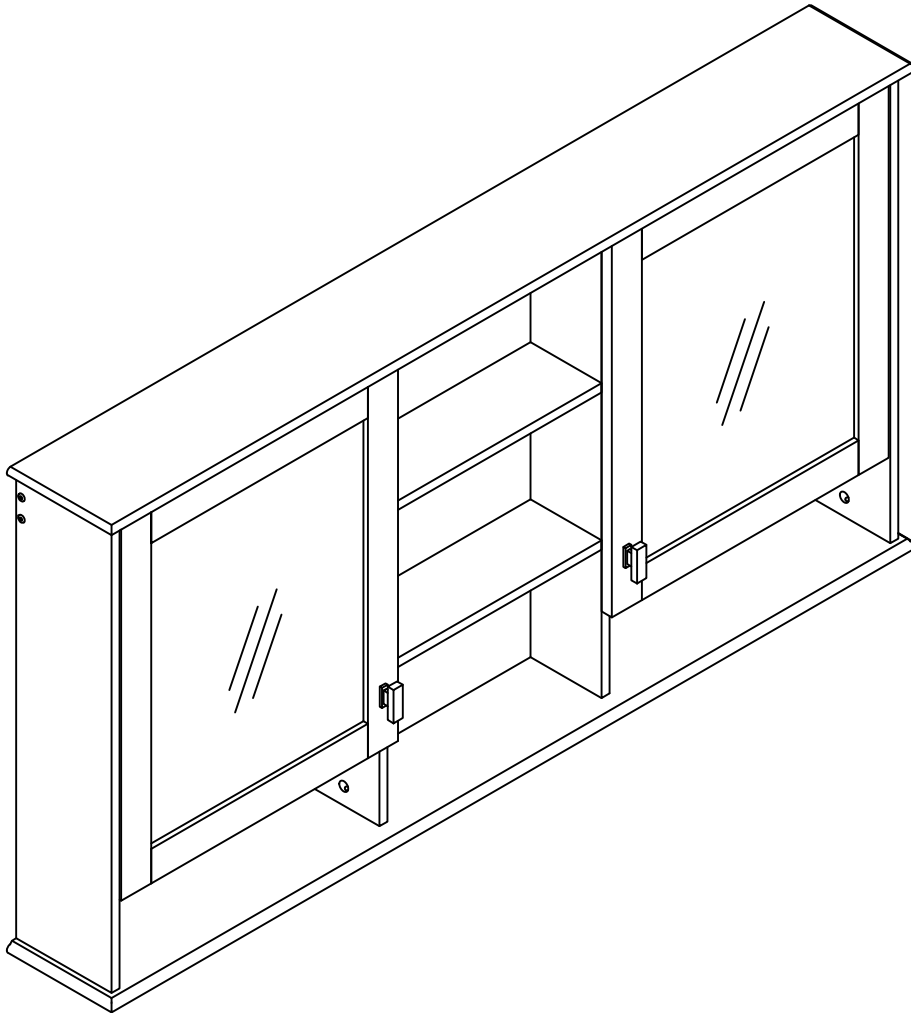


ASSEMBLY INSTRUCTIONS

55 INCH MIRROR CABINET

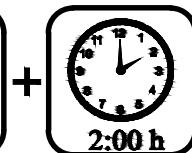
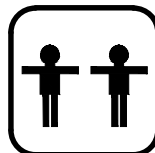
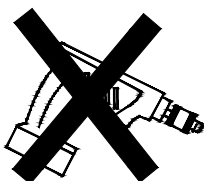


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.



Tools Required




(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

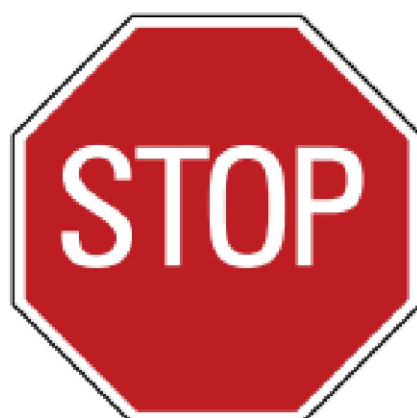PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.

Before Installation






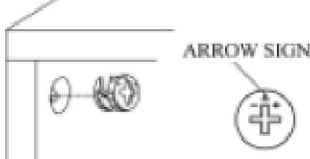
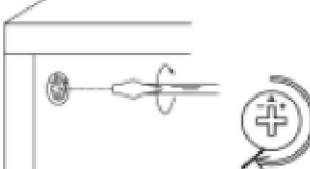
Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- . We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- . Please do not over tighten screws or bolts until the assembly is completed.
- . Keep children and animal away from the work area, small parts could choke if swallowed.
- . Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Cam Lock Assembly Instructions











		Insert Cam Bolt into hole as shown in diagram A.	
		Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.	
		Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

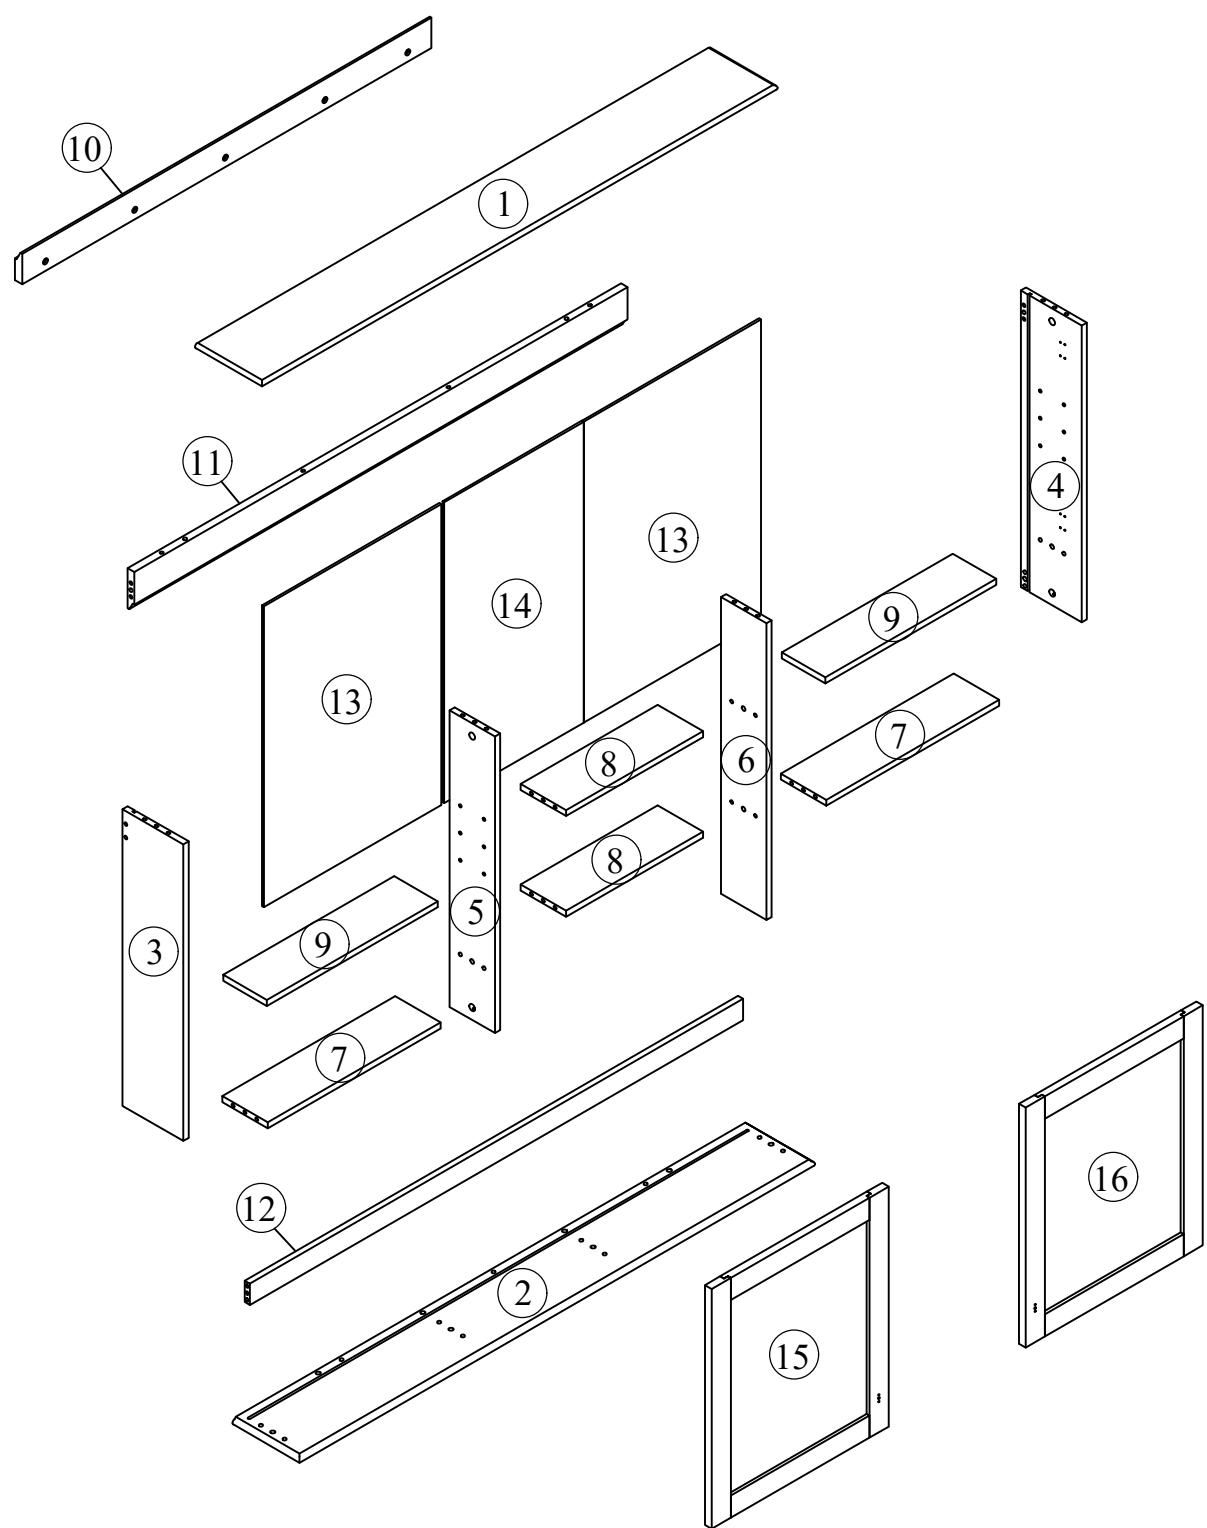Detail View - CABINET







Identifying the Hardware-Identify the hardware using the illustrations below.

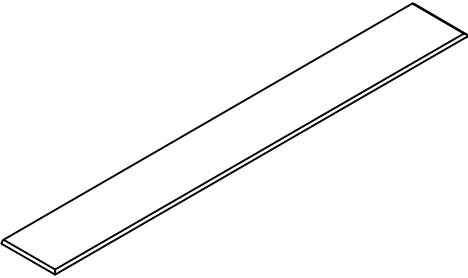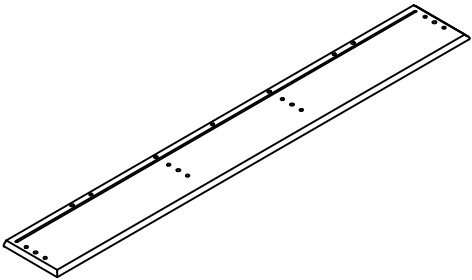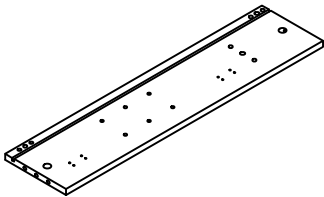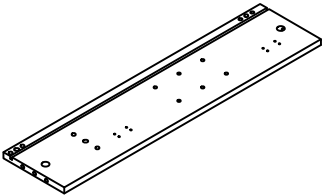
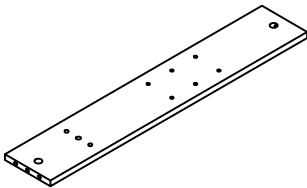
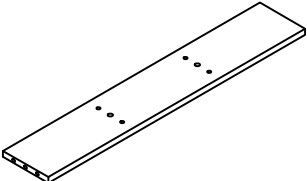
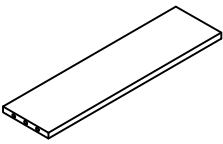
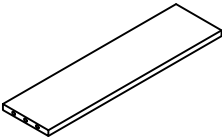
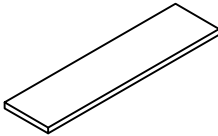
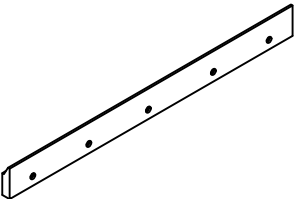
Part List - N710P401339

1	 Top Panel - 1pc	2	 Bottom Panel - 1pc
3	 Side Panel (L) - 1pc	4	 Side Panel (R) - 1pc
5	 Mid Panel (L) - 1pc	6	 Mid Panel (R) - 1pc
7	 Panel Side - 2pcs	8	 Panel Mid - 2pcs
9	 Side Adjustable Shelf - 2pcs	10	 Connect Bar - 1pc

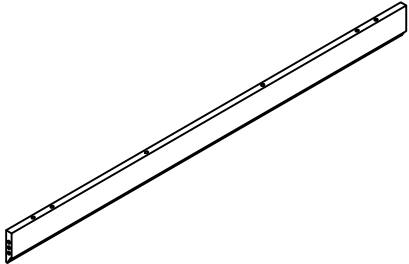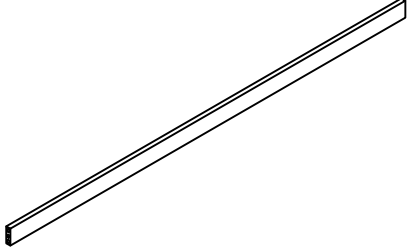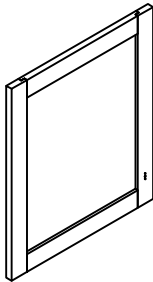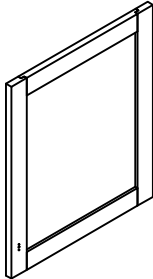Part List - N710P401339


11  Top Rear Bar - 1pc	12  Bottom Bar Rear - 1pc
13  Side Back Panel - 2pcs	14  Mid Back Panel - 1pc
15  Left Door - 1pc	16  Right Door - 1pc

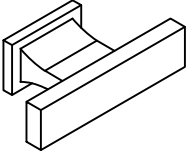Hardware List- N710P401339



A  ø6x35mm Three in one bolts (26pcs)	B  ø14.5x12mm Three in one lock (26pcs)	C  ø13x1/4"x50mm Hex-Head bolts - 4pcs
D  1/4"Xø10x13mm Horizontal-Hole bolts(4pcs)	E  ø10xø5x60mm Flat head screw (5pcs)	F  ø12x55mm Plastic stopper (5pcs)
G  Handle (2pcs)	H  ø5/32"x25mm Handle screw (2pcs)	I  Damping hinge (4pcs)
J  ø7xø3.5x12mm Flat head screw (24pcs)	K  Laminate pad (8pcs)	L  ø8x30mm Wood dowel (43pcs)
M  4mm Allen key - 1pc	N  ø7xø3.5x15mm Round head screw (4pcs)	

STEP: 1


A





26PCS

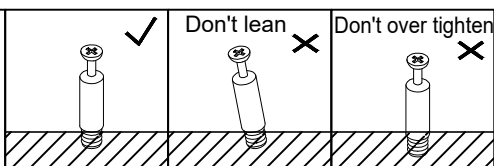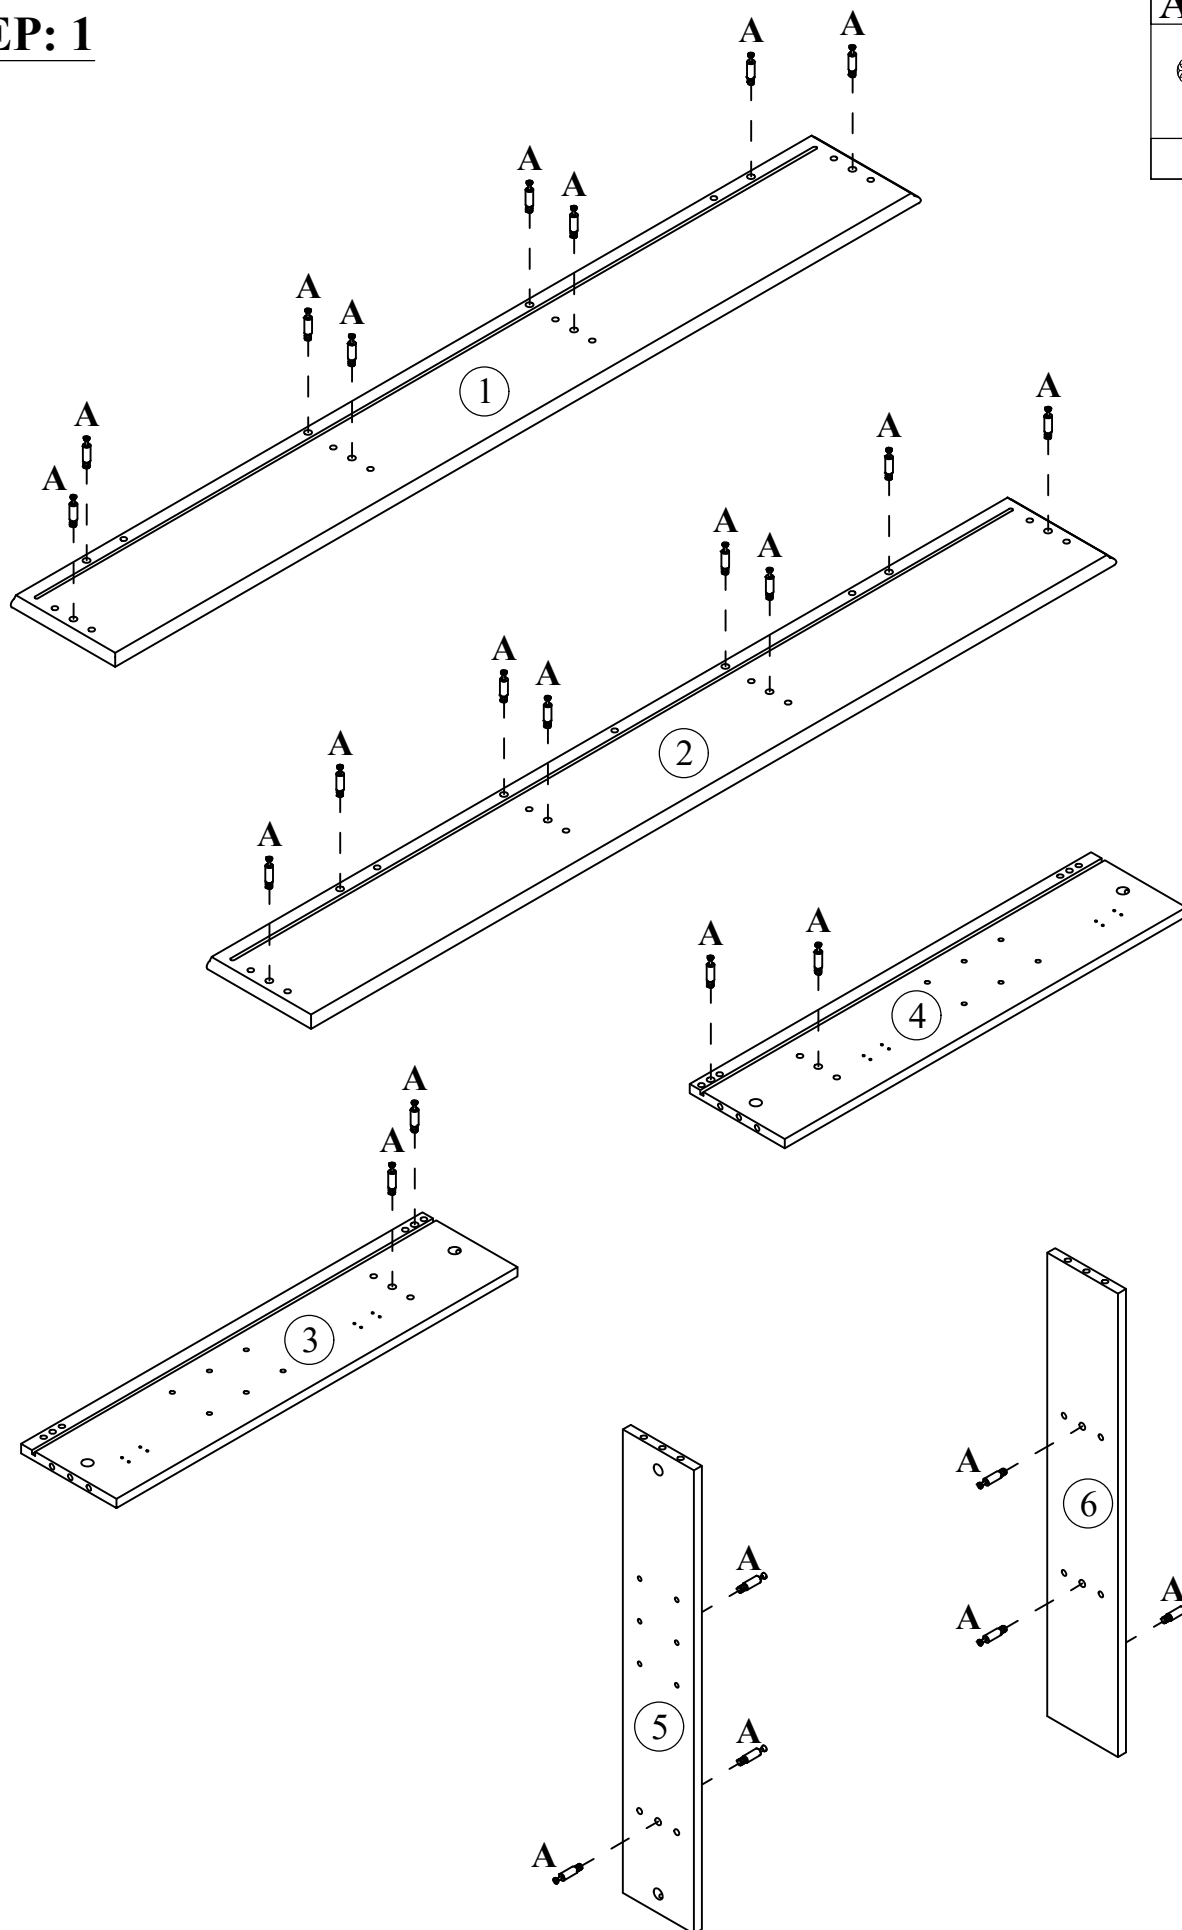



STEP: 2

B	L
	
4PCS	8PCS

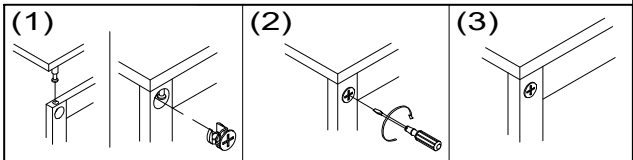
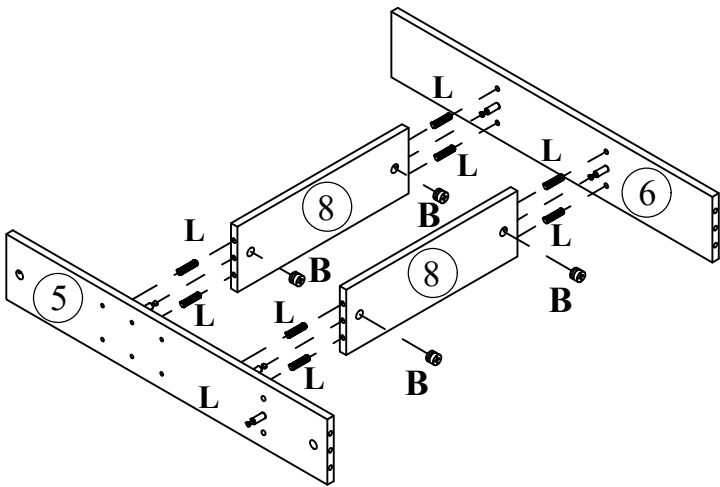




STEP: 3

B	L
	
2PCS	4PCS

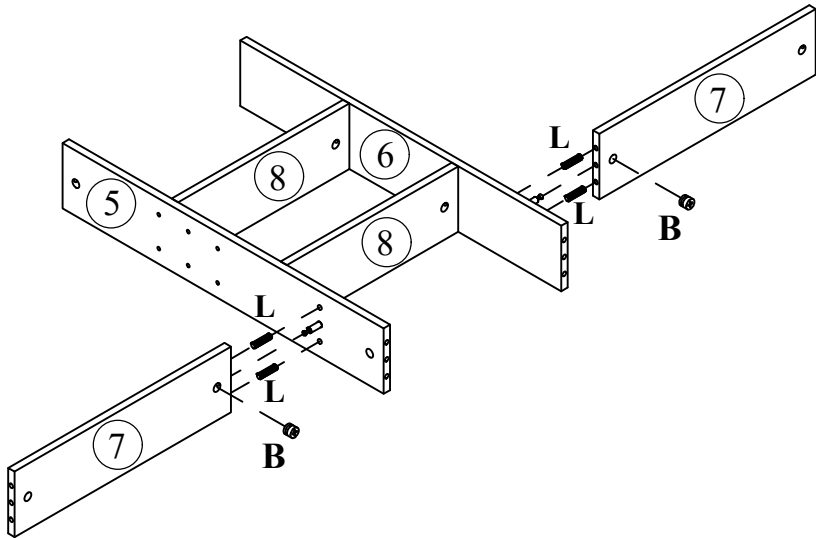



STEP: 4

B	L	C	D	M
				
2PCS	5PCS	2PCS	2PCS	1PC

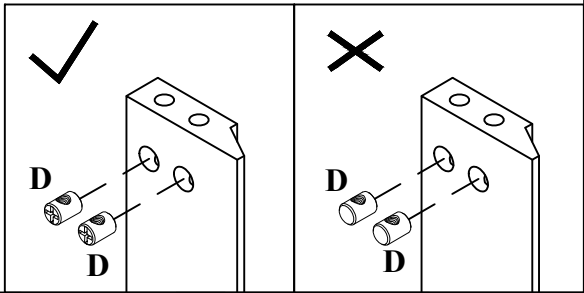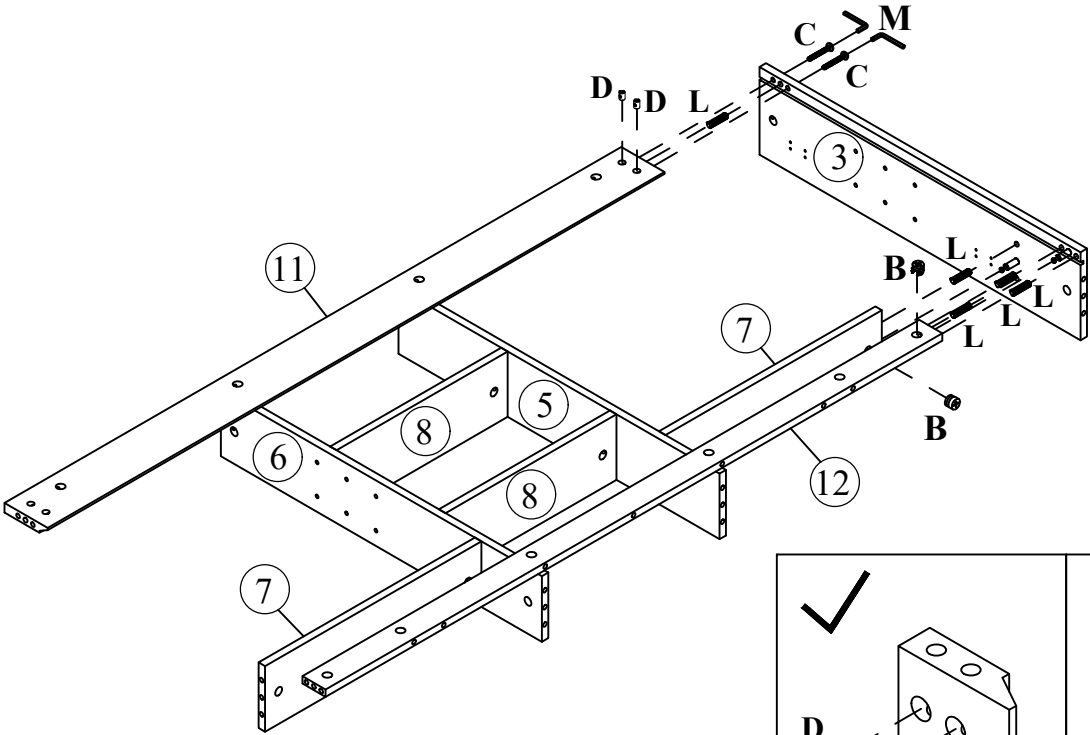



STEP: 5

B	L	C	D	M
				
2PCS	5PCS	2PCS	2PCS	1PC

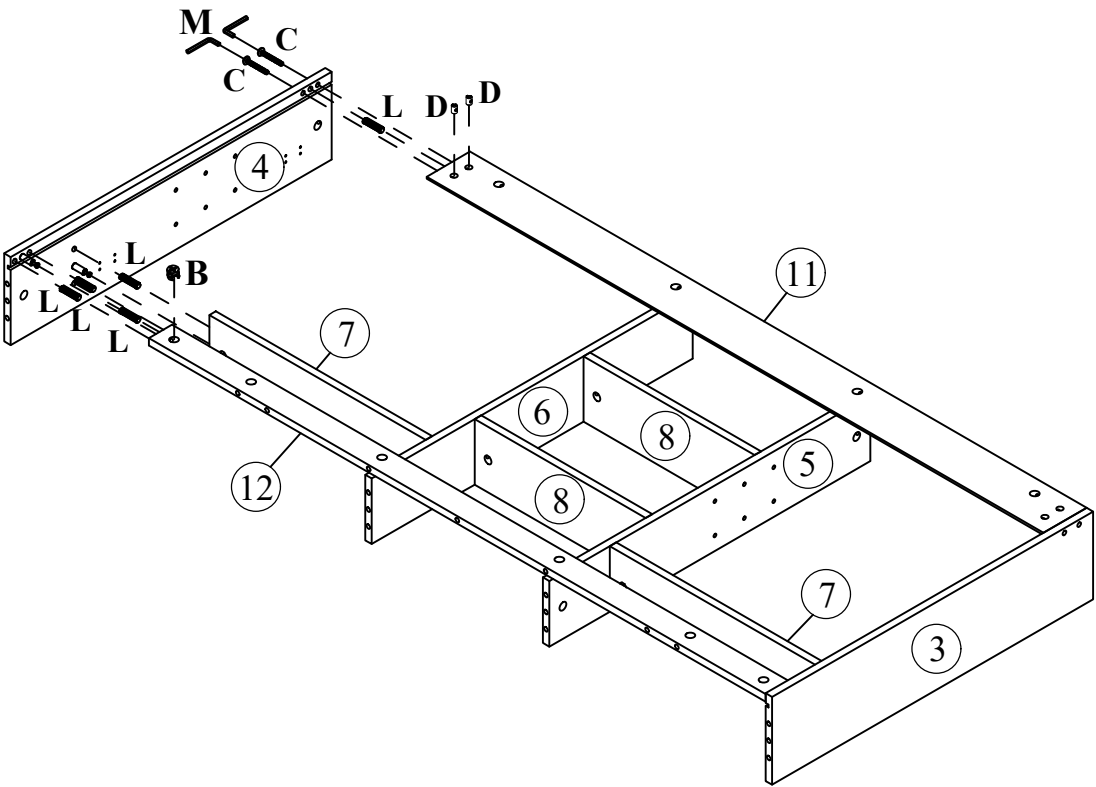


STEP: 6


B	L
	
8PCS	11PCS

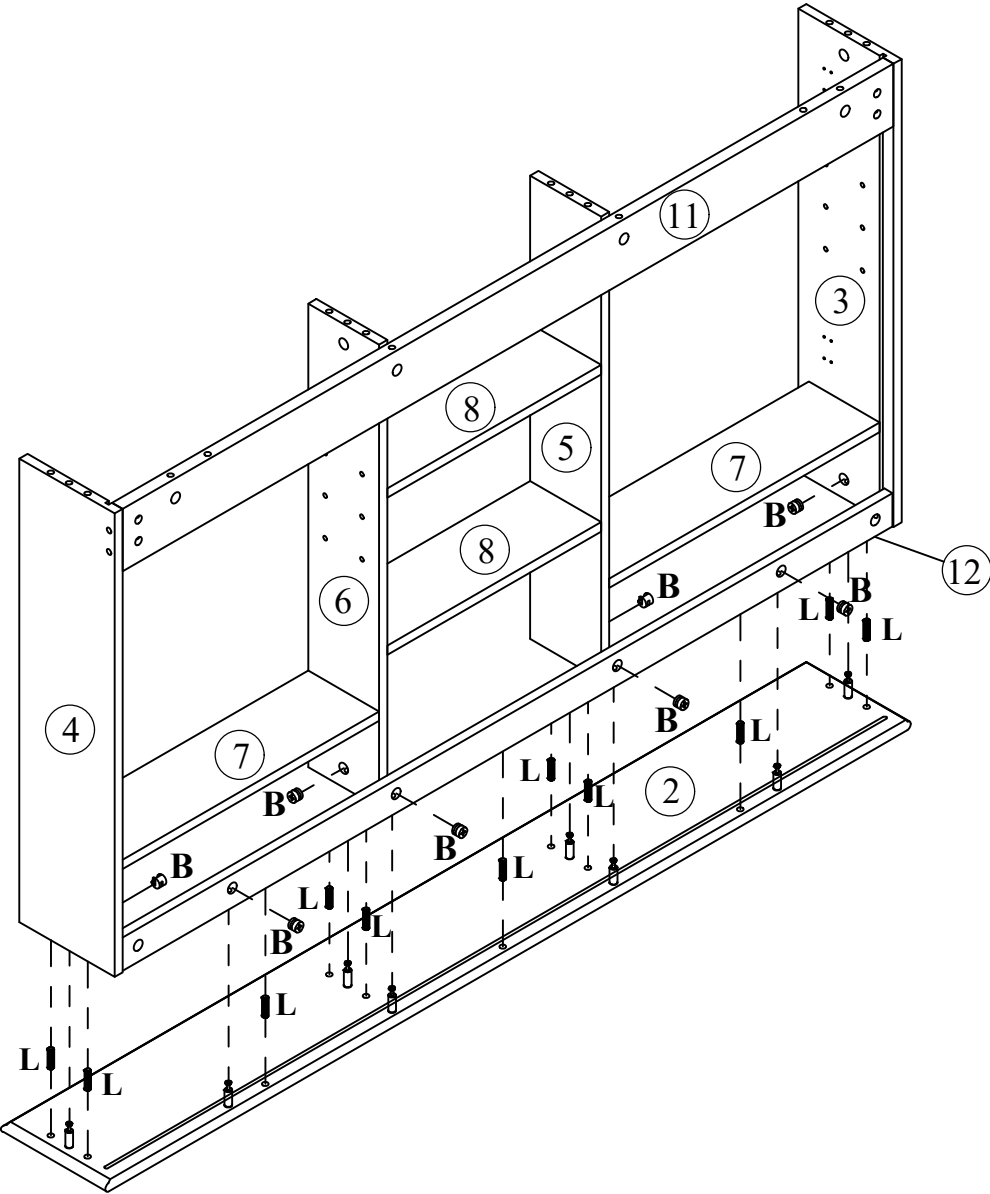

STEP: 7

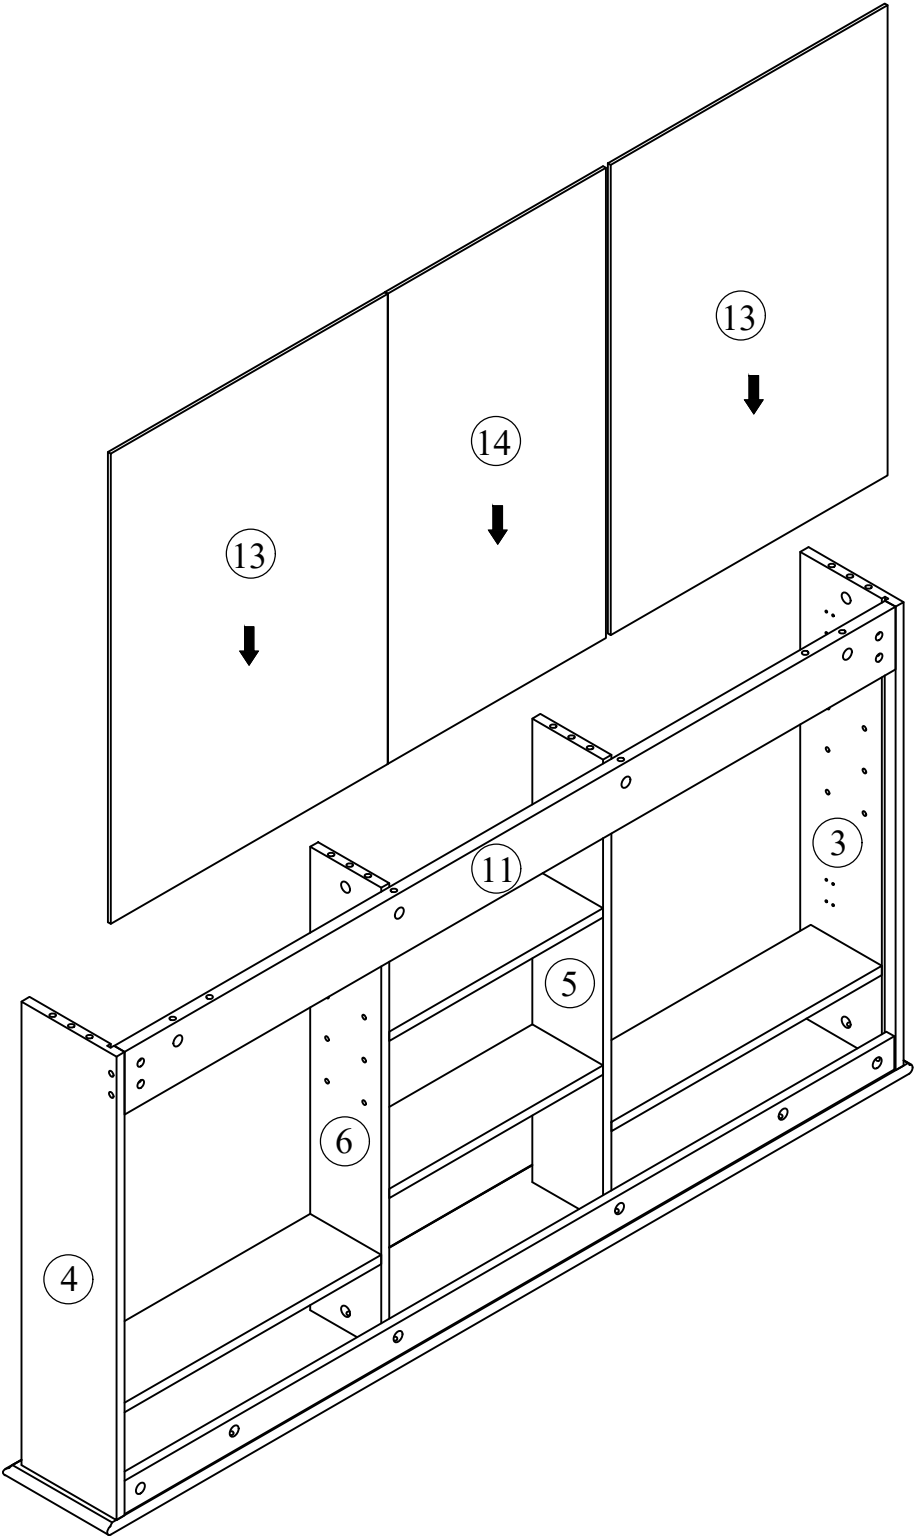


STEP: 8

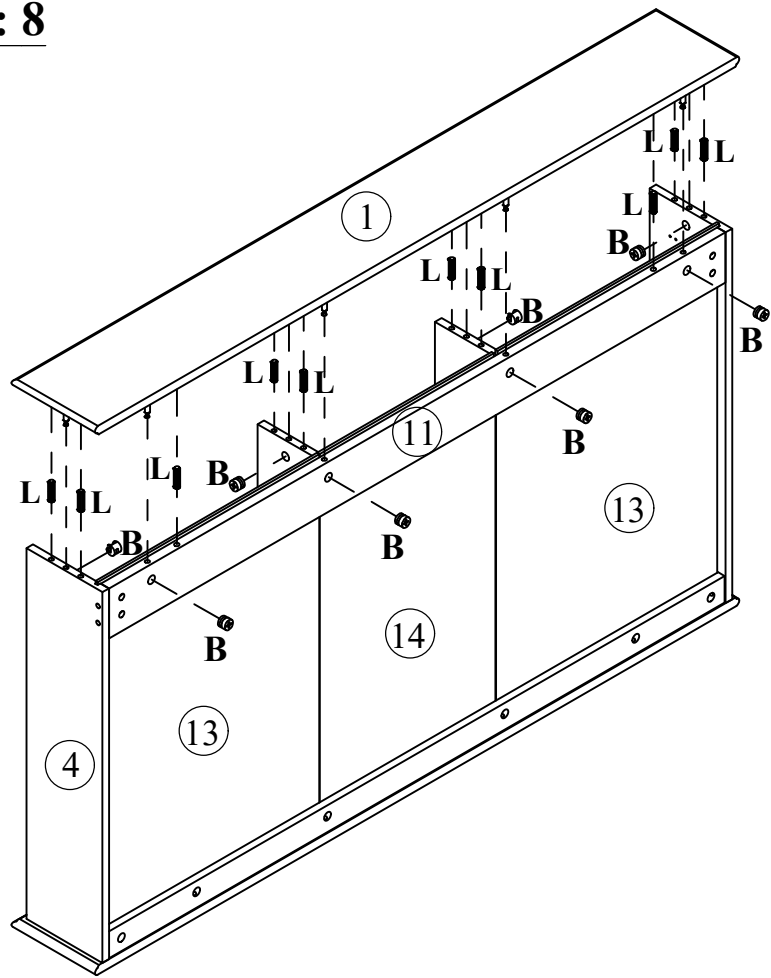

B		L	
8PCS		10PCS	


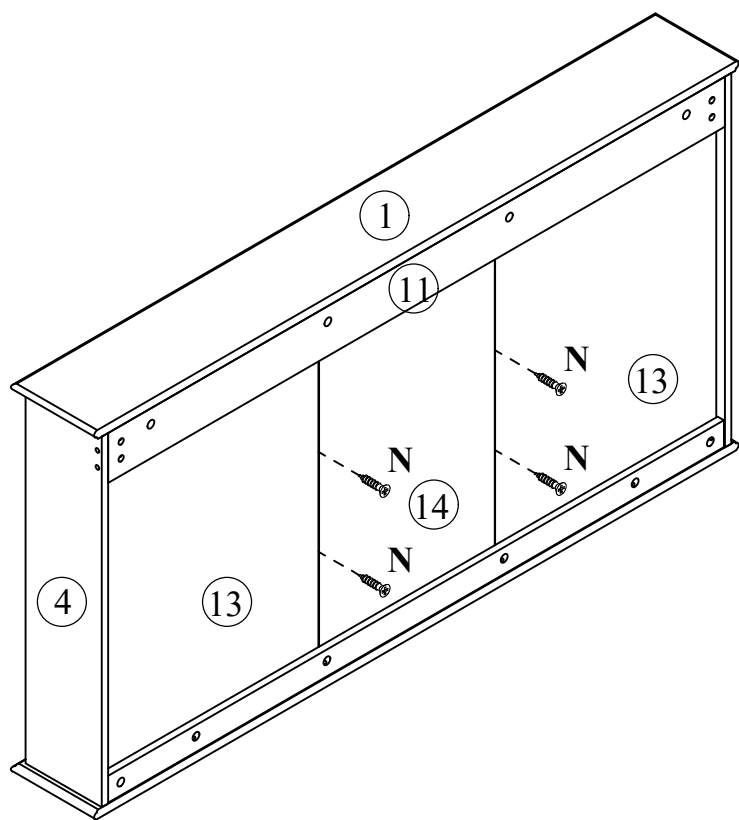
STEP: 9





N	
4PCS	



STEP: 10

I		J	
4PCS		8PCS	

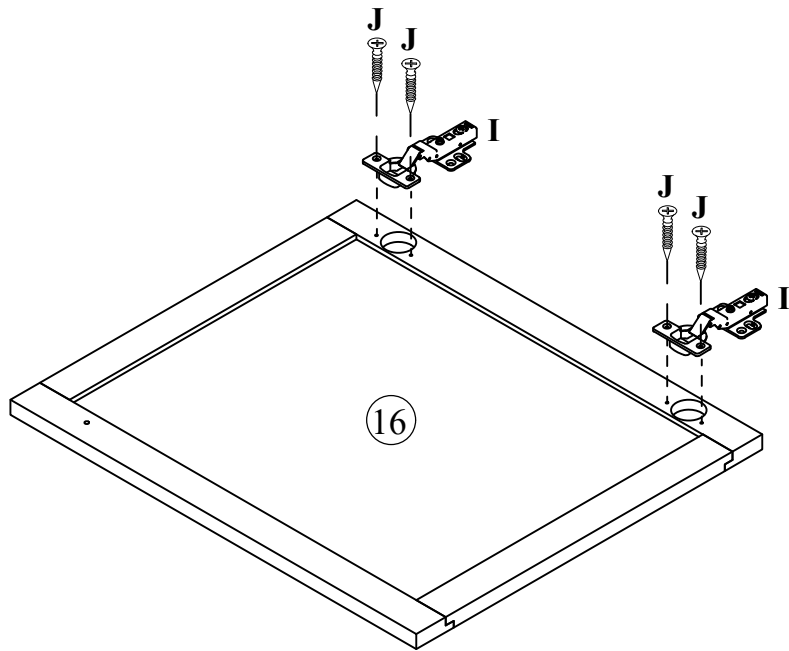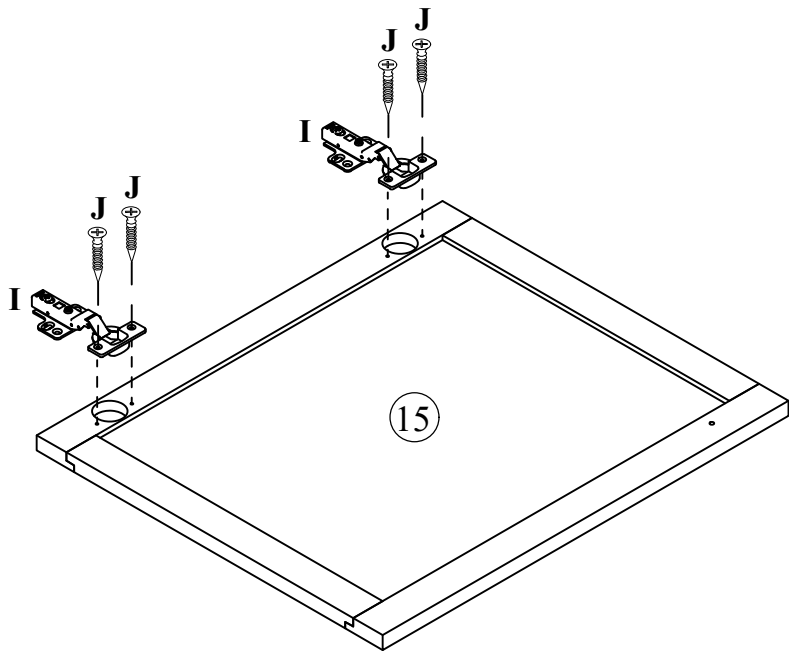


STEP: 11

G	H	J
		
2PCS	2PCS	16PCS

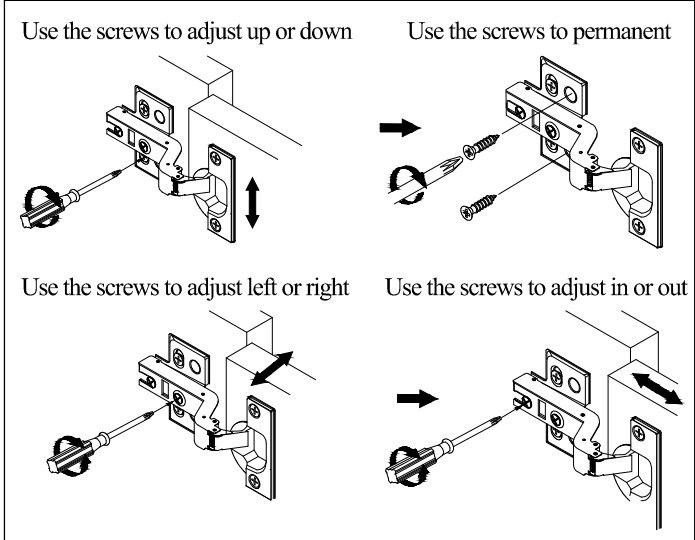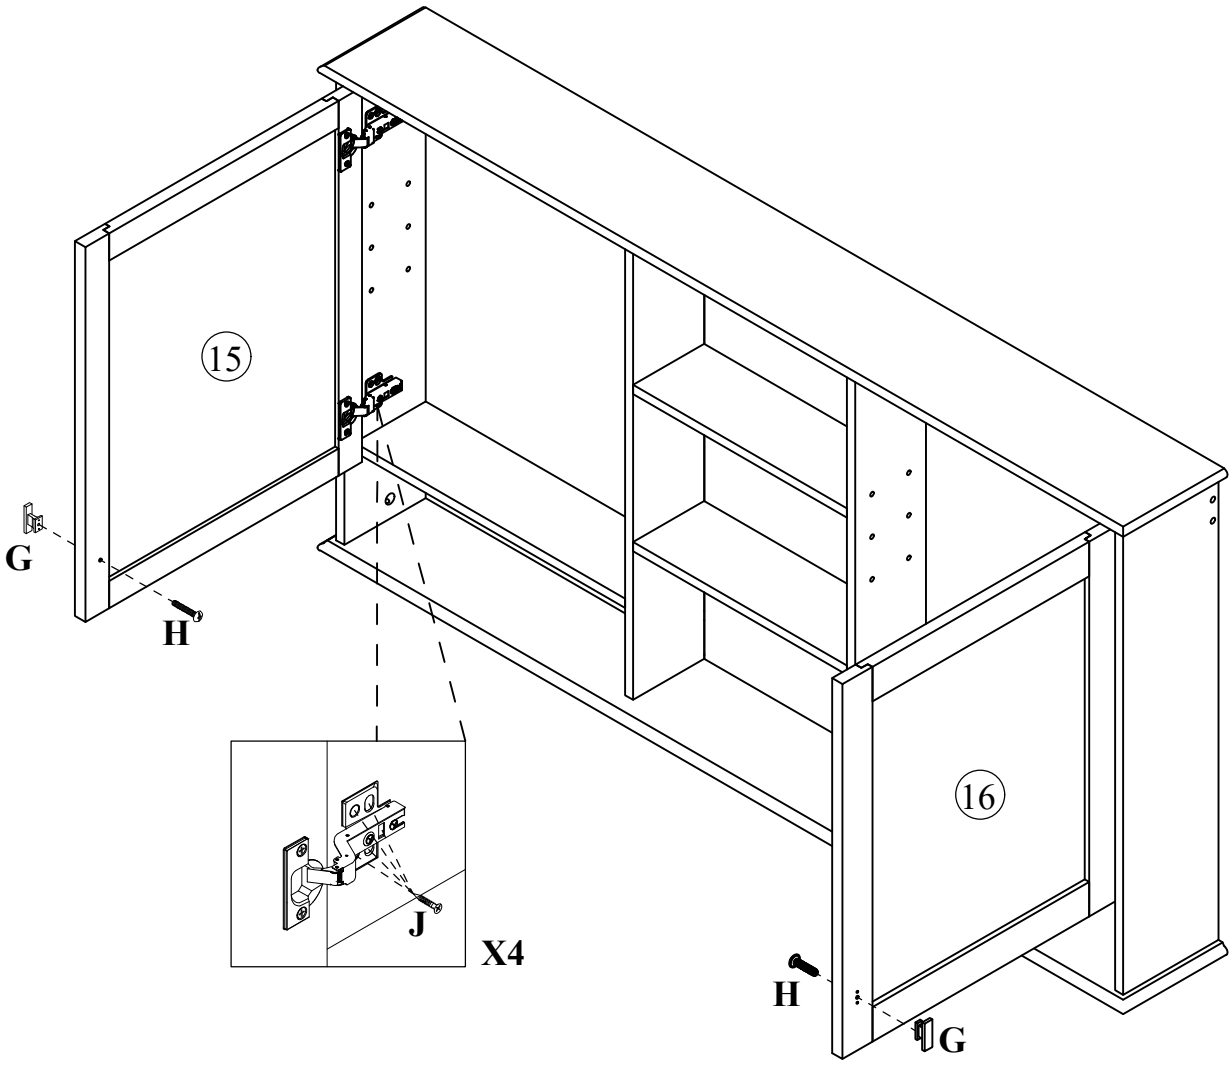


STEP: 12


K



8PCS

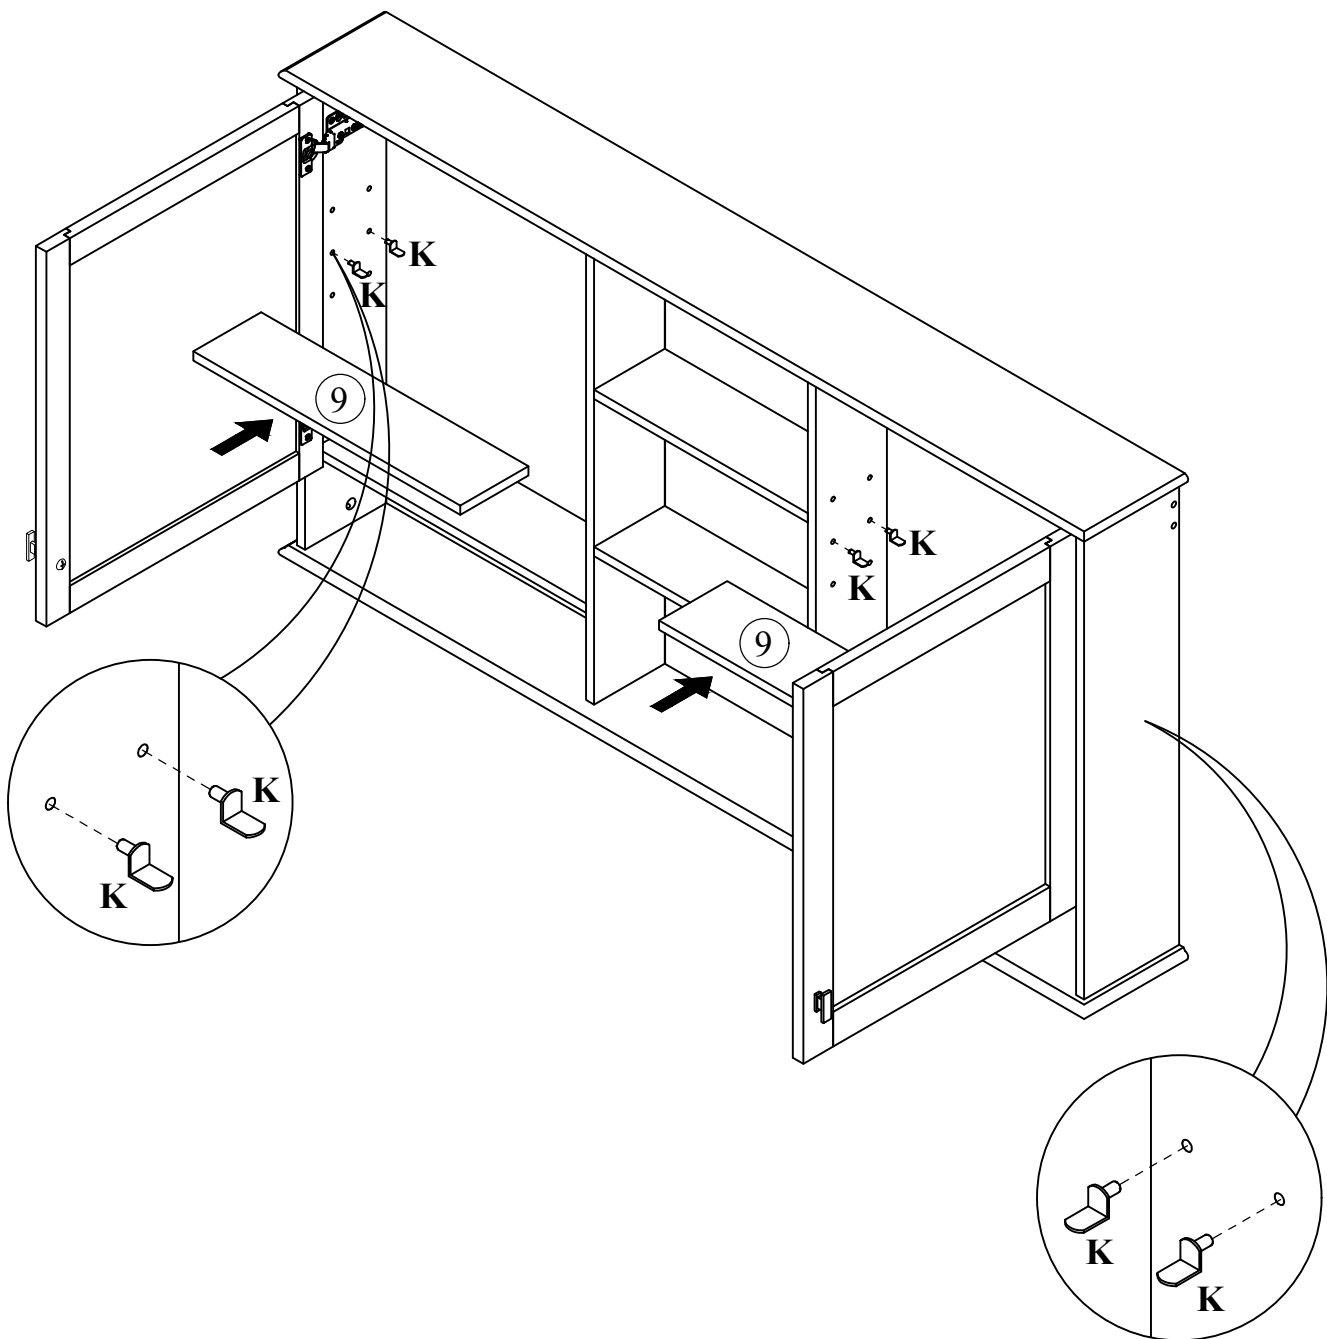


STEP: 13

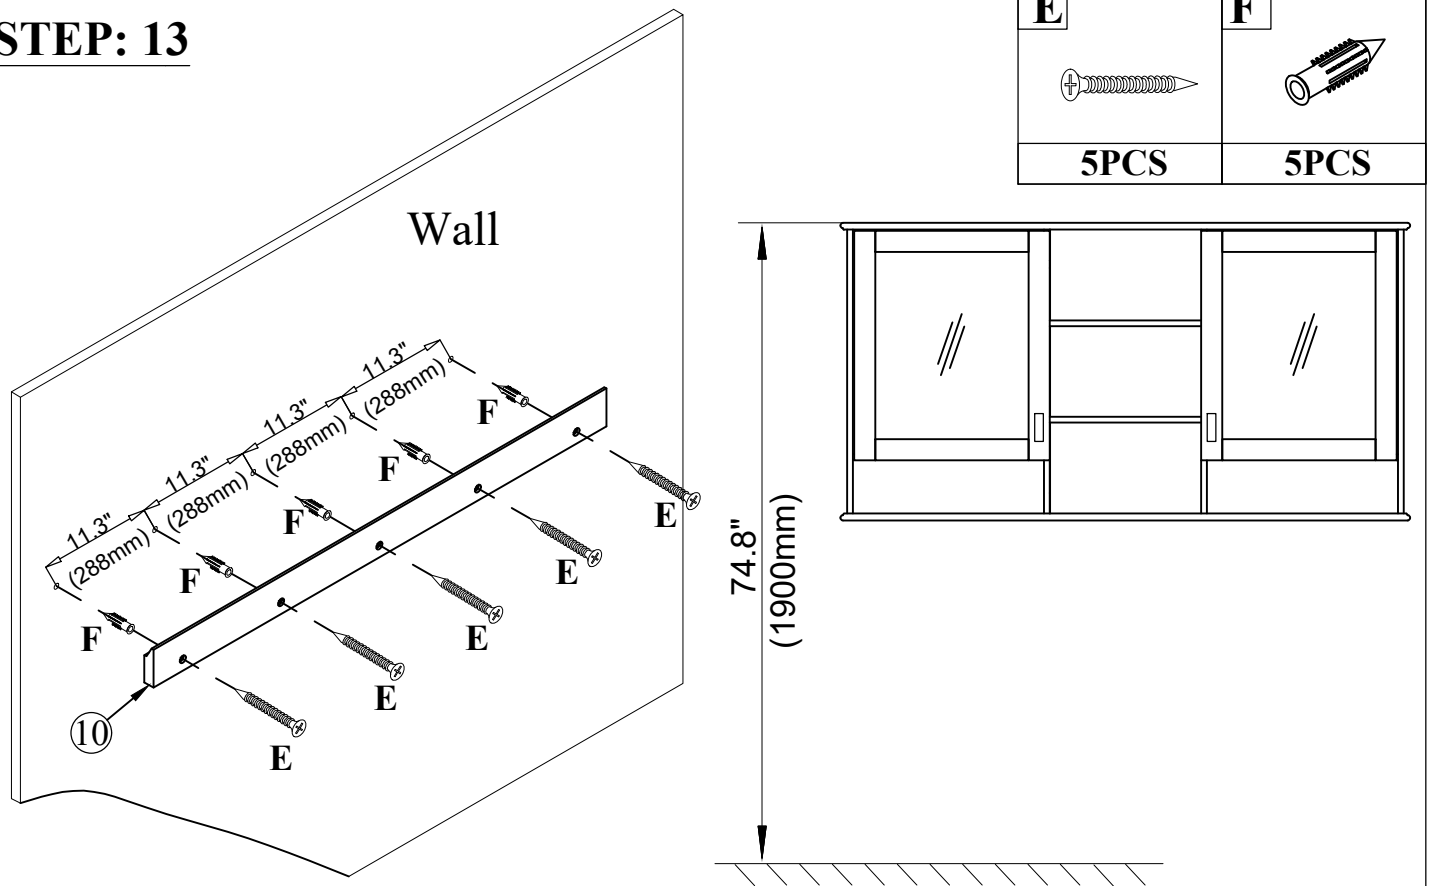

Draw the spacing between the walls and the No.10, punch holes in the wall, and fix the No.10 to the wall with screws.

Note: Appropriate distance from the top of cabinet to the ground is 74.8".

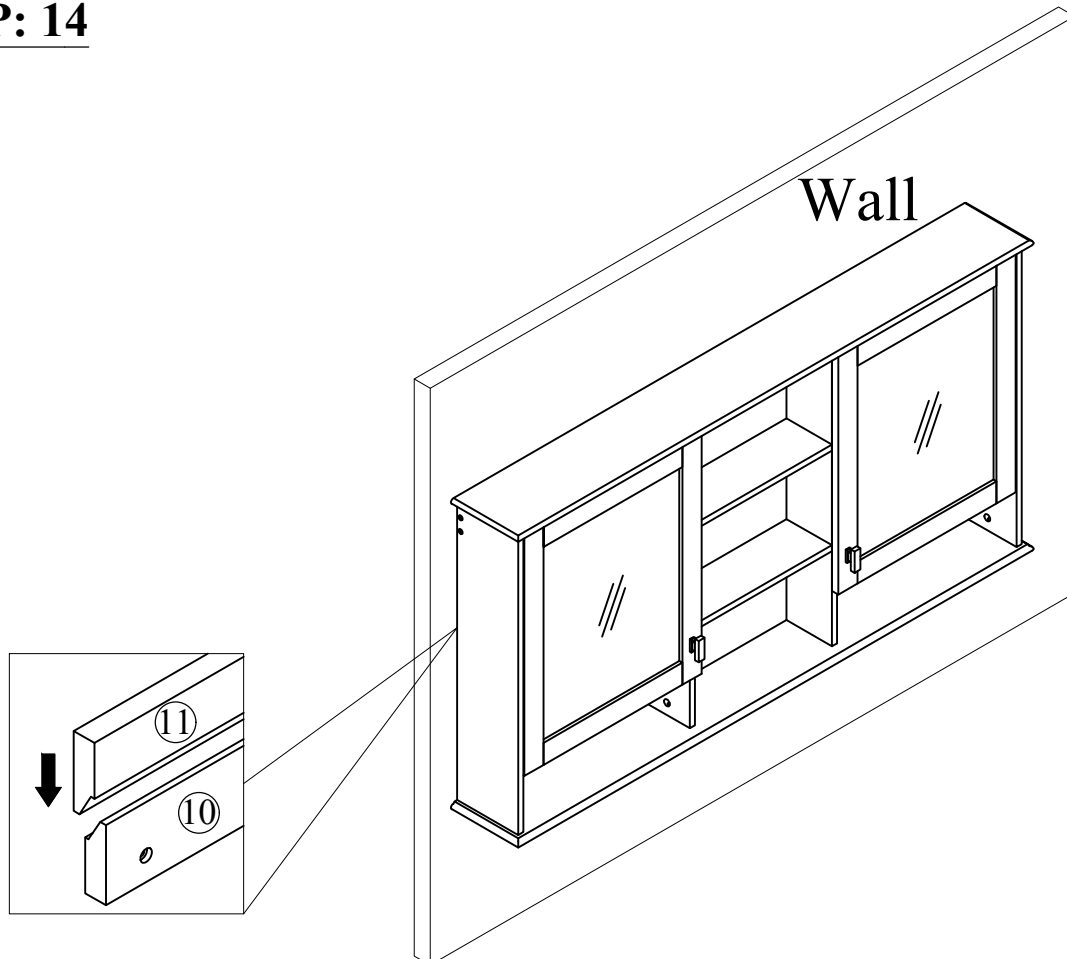STEP: 14



STEP: 15

