


Instruction Book

For specification: 1480cm(L)x37cm(W)x140cm(H)

ST-WHT8615-1PW instruction manual

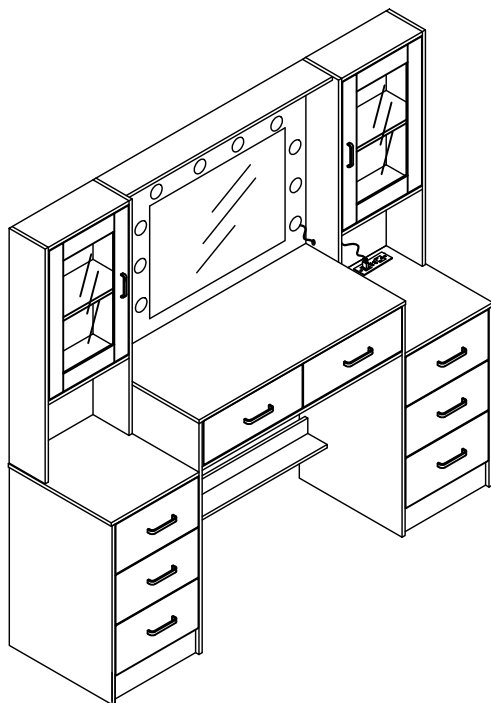

..\\fffff\\WHT8615PW\\08159772.png

Scan the QR code
to watch the
installation video.

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.If you have any question, please feel free to contact us by Mail:3109155238@qq.com

Foreword:

Thank you for choosing our product! We hope you have a good shopping experience!

We aim to provide a 100% satisfaction product and customer service. If the received product has missing parts or components, arrived damaged, dissatisfaction with the order, or has questions about the assemble, please do not hesitate to contact us. Our customer service will reply within 12 hours. Find us here: 3109155238@qq.com

Specifications:

Product name: Makeup Vanity Desk with Lights and Mirror

Model: ST-WHT-8615-1PW


Package Dimension: 34.6x26.7 x8.7in / 88*68*22 cm

Product Size: 58.3 x15.7 x55.1 in / 148 x 37×140 cm

Weight: 108lb/49KGS

ST-WHT8615-1PW Left cabinet


A, B, G, H, C, D installation guide

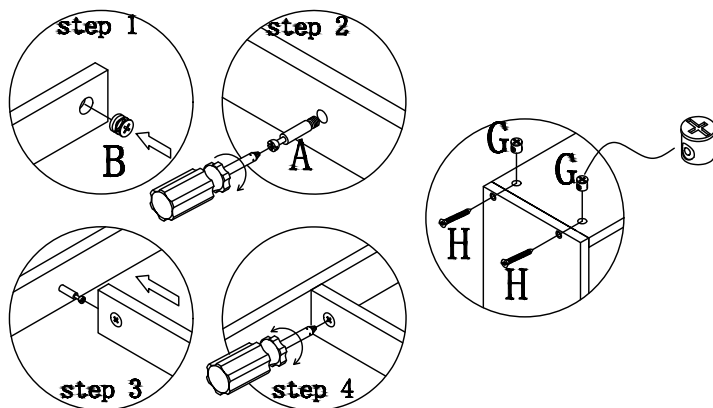



Accessories

 Three-in-one screw A*114	 Three-in-one nut B*114	 drawer Track CR*8	 drawer Track DR*8	 drawer Track CL*8	 drawer Track DL*8
 Small Screw D*98	 Handle E*10	 Handle Screw F*16	 Handle Screw F2*4	 Two-in-one screw H*10	 Two-in-one nut G*10
 Door hinges O*4	 Small Screw X*33	 Stool foot nail M*8	 usb power Q*1	 Bulb K*1	 screwdriver Z*1

ST-WHT8615-1PW

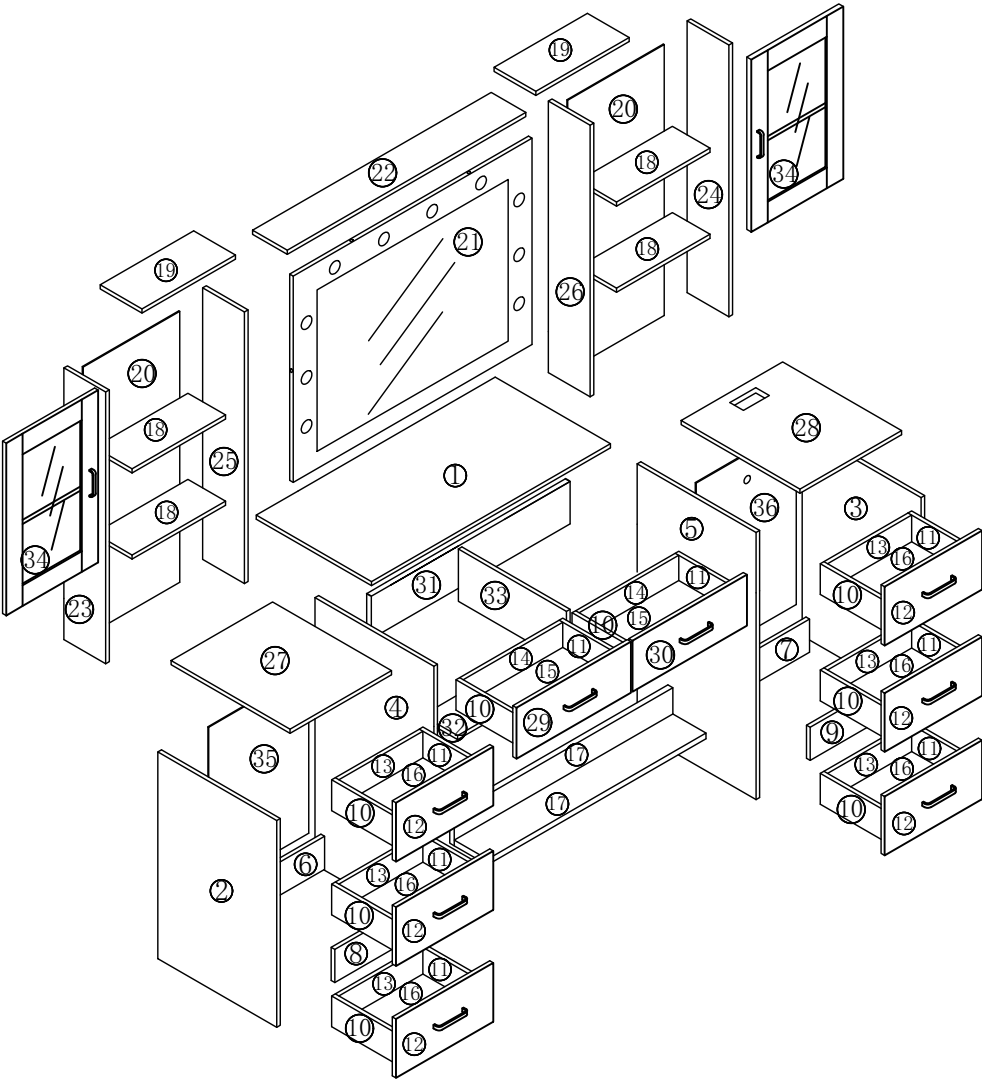

STEP 1

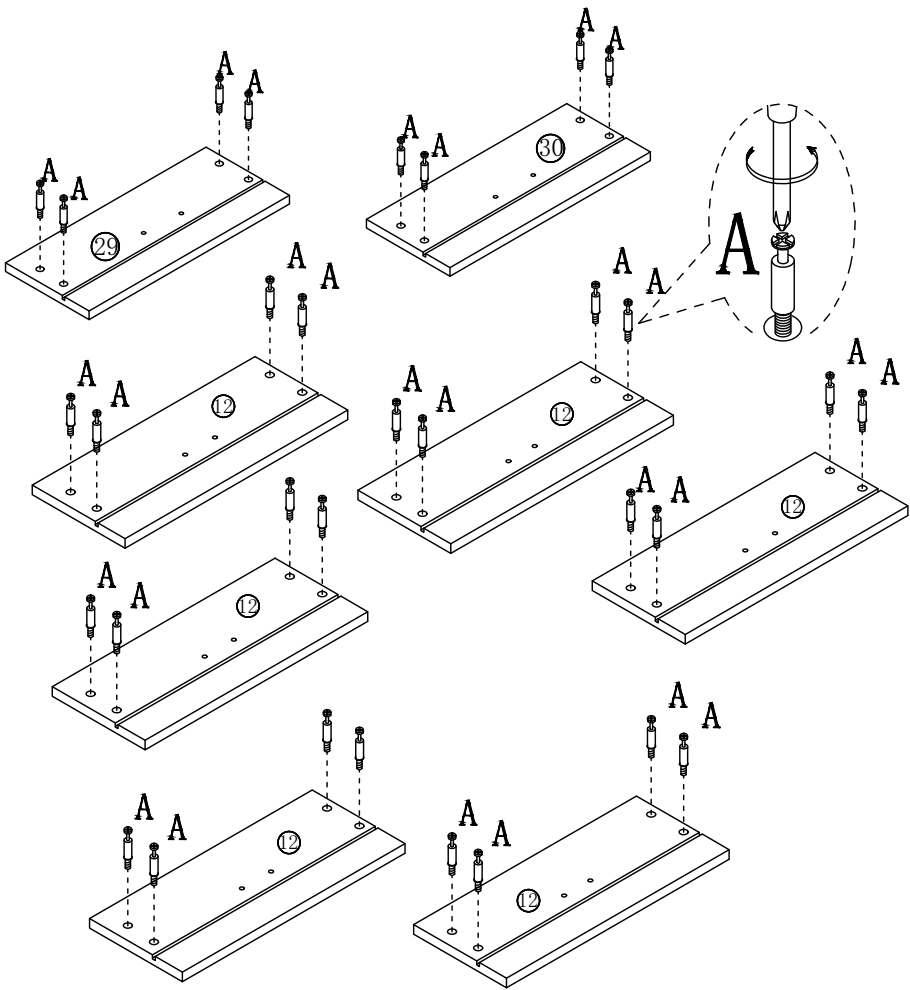


Guidelines for the use of 3-in-1 connecting rods:



The blue screw cap at the bottom of the 3-in-1 connecting rod is twist-able, and it can be twisted clockwise or counterclockwise to fit the size of the reserved holes in the wooden board.

When you use this 3-in-1 connecting rod, if you find that it can't be inserted into the reserved holes on the wooden board, just loosen the blue screw cap a bit until it fits into the holes of the board. Then use a screwdriver to tighten the screws. Note: If the bottom blue screw cap is not stretched apart by the three-in-one connecting rod in the reserved hole, the connected part will appear unstable .




STEP 2

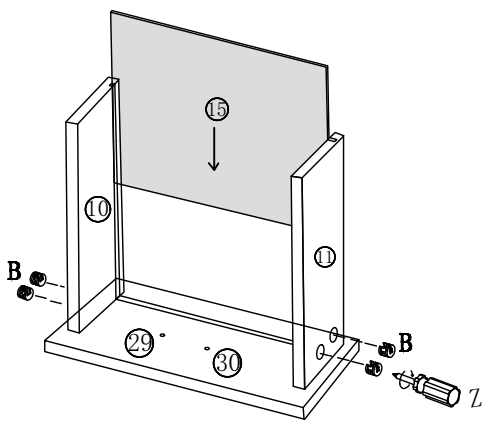

X2

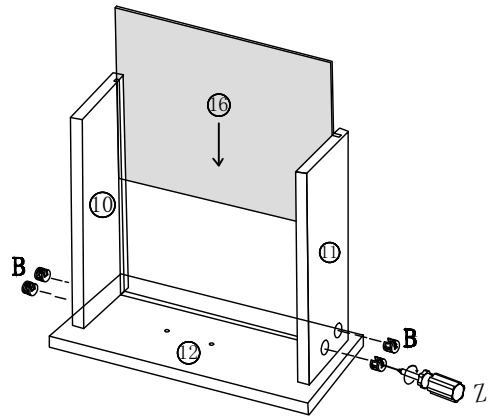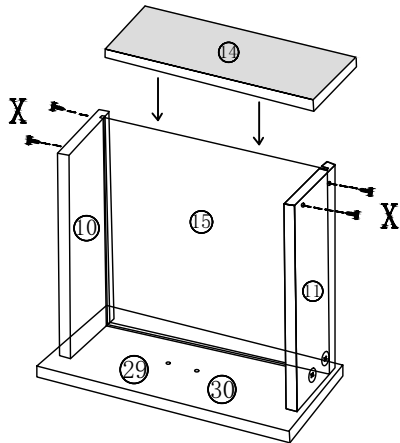


X6

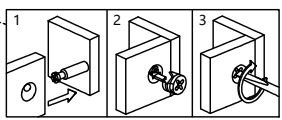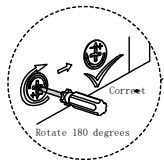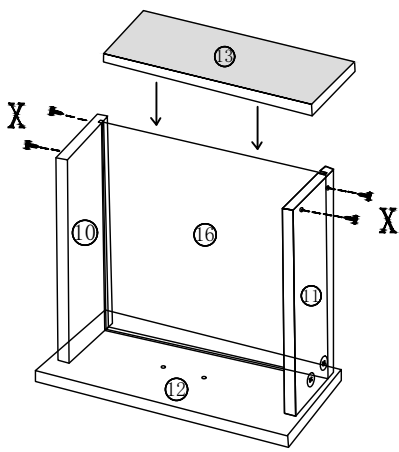


B	X
	
x32	x32


STEP 3

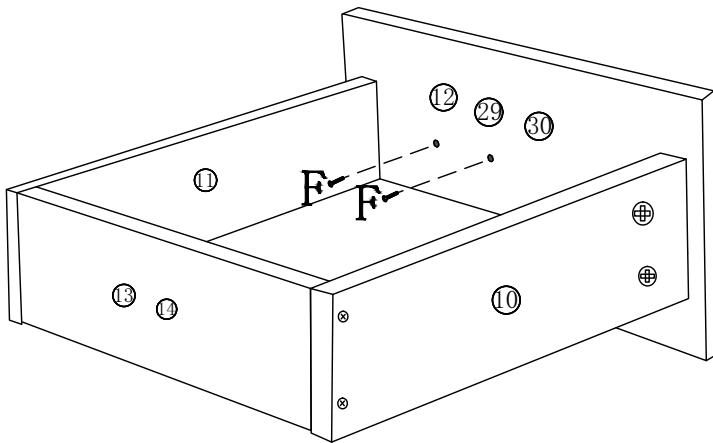


X8

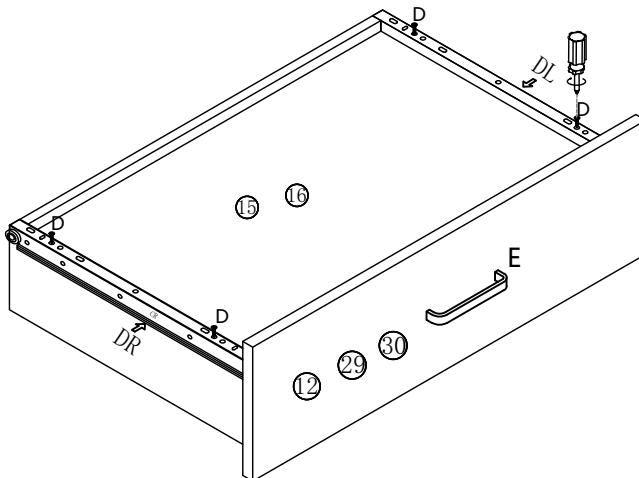

X8

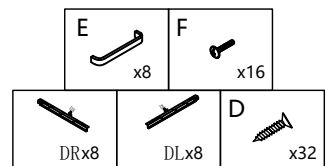







STEP 4

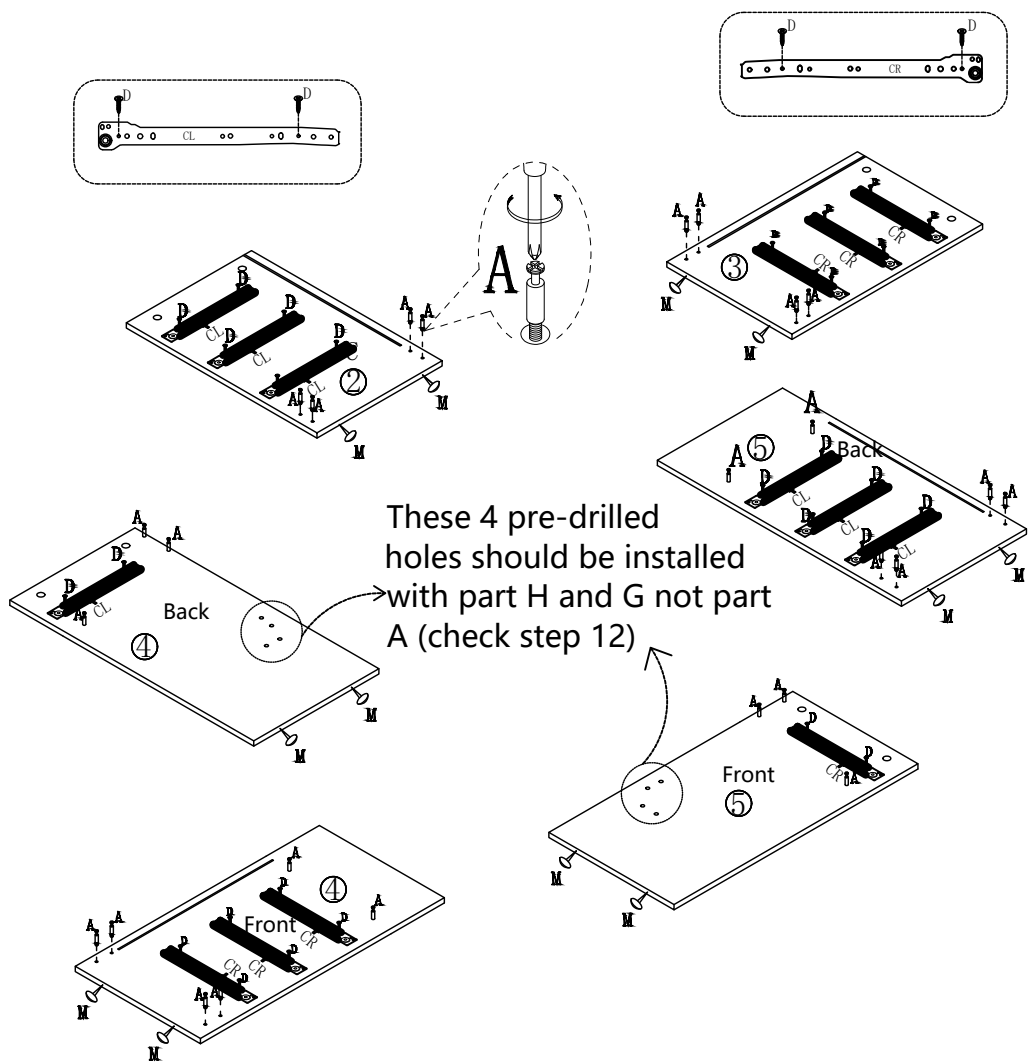





 A	 M
 CLx7	 CRx7
 D	 x8

STEP 5





Put it into the reserved holes and
tighten the screw

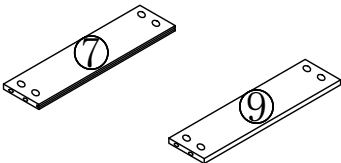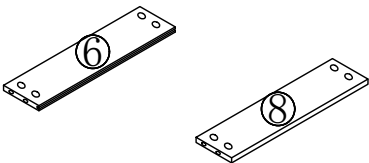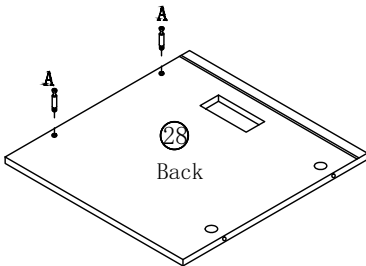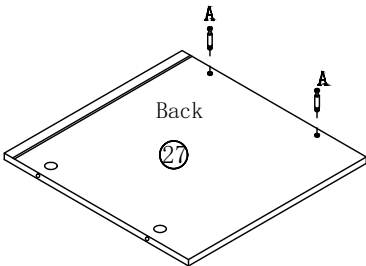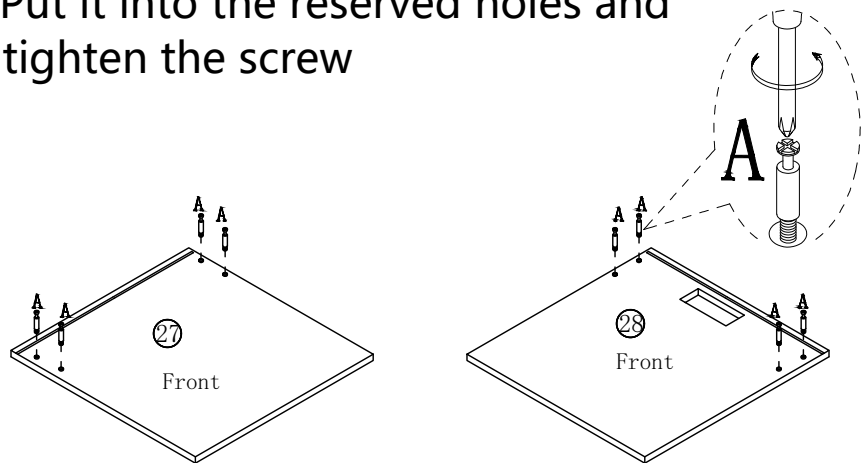




STEP 6

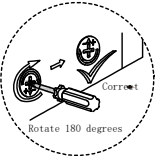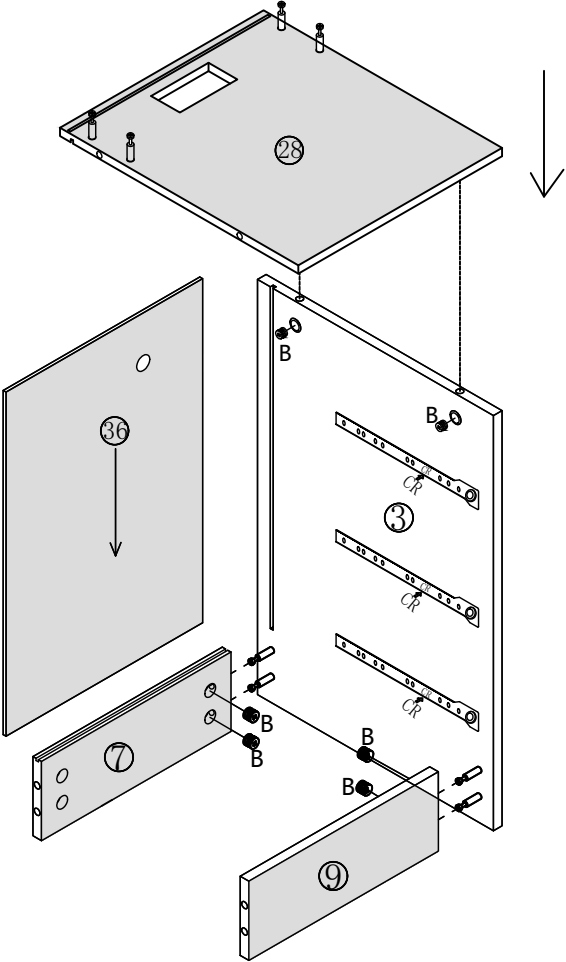





STEP 7

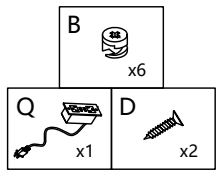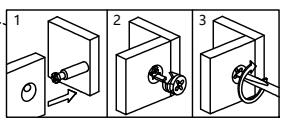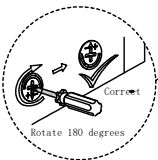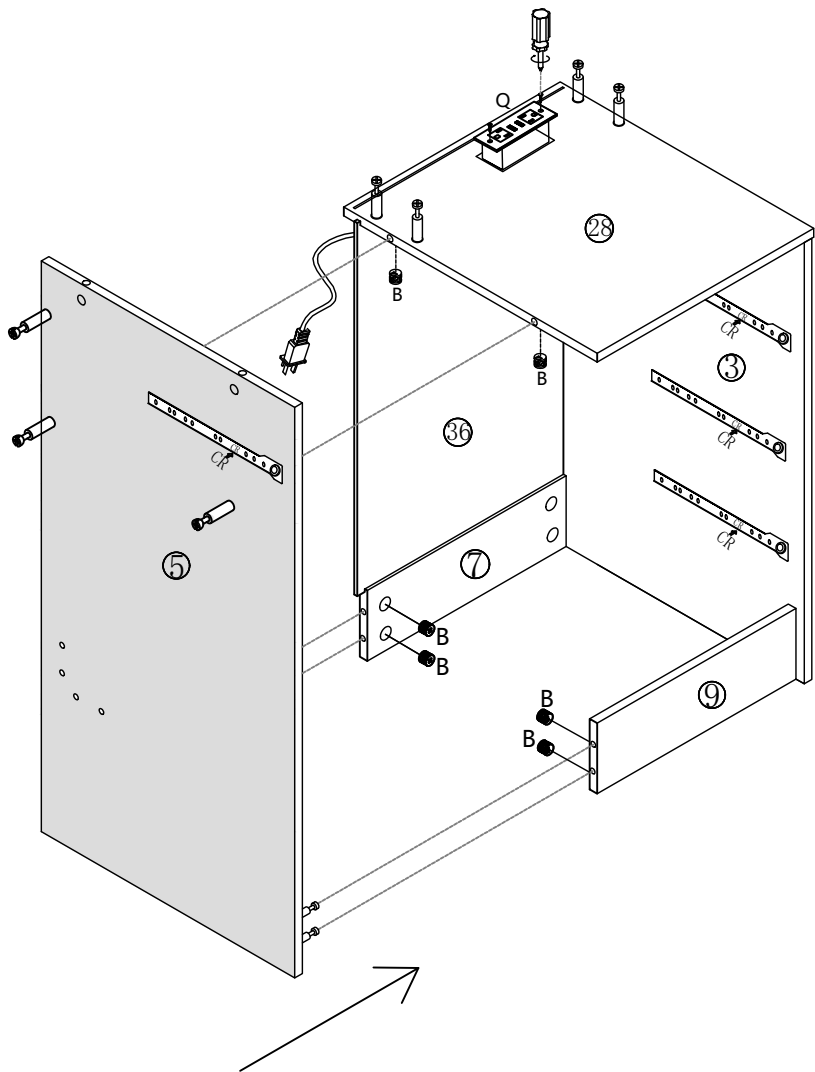



STEP 8

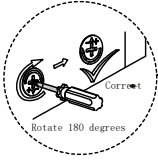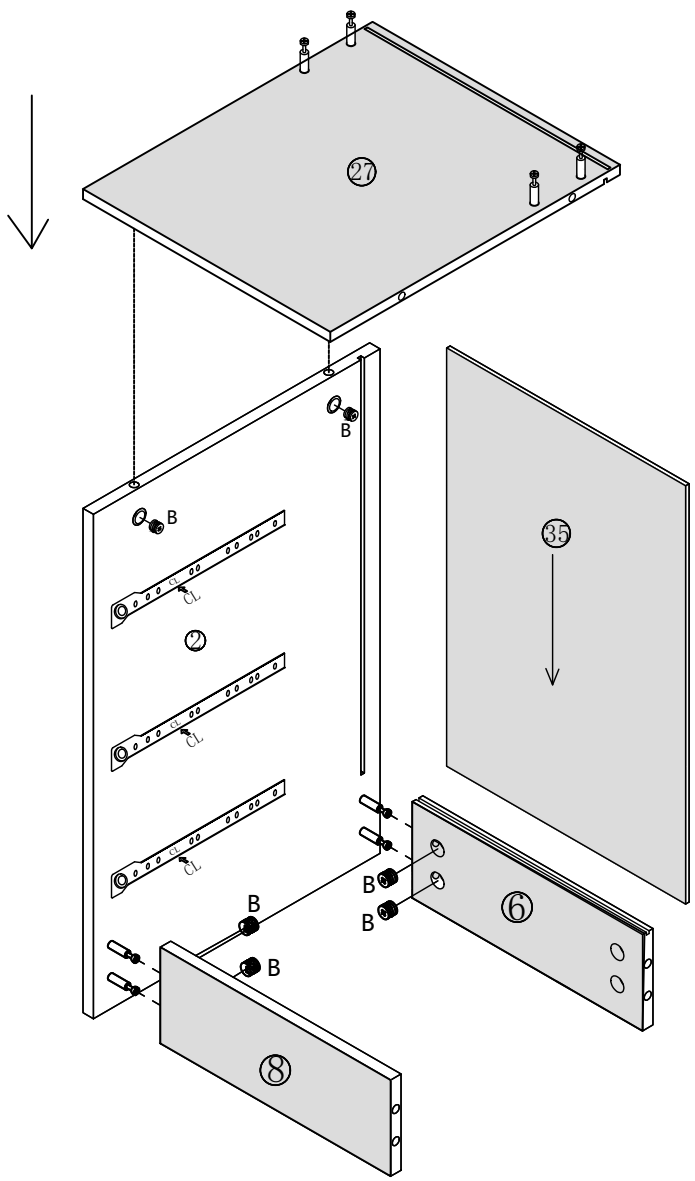


STEP 9

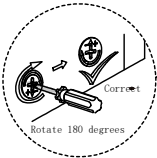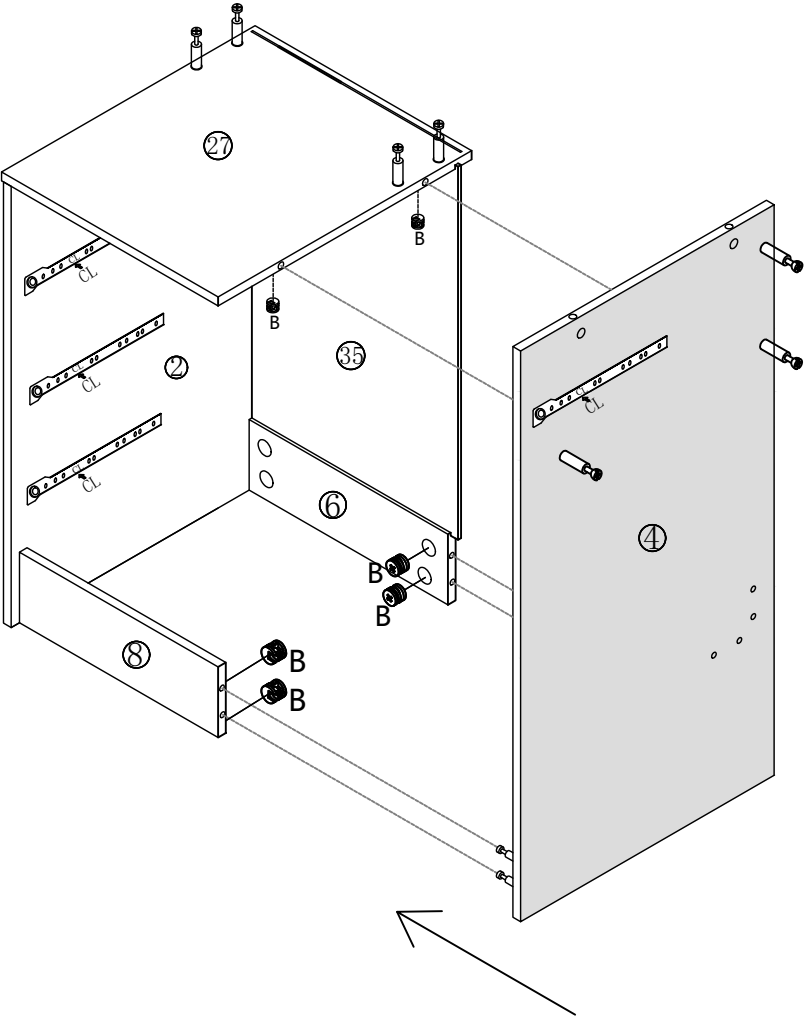




STEP 10

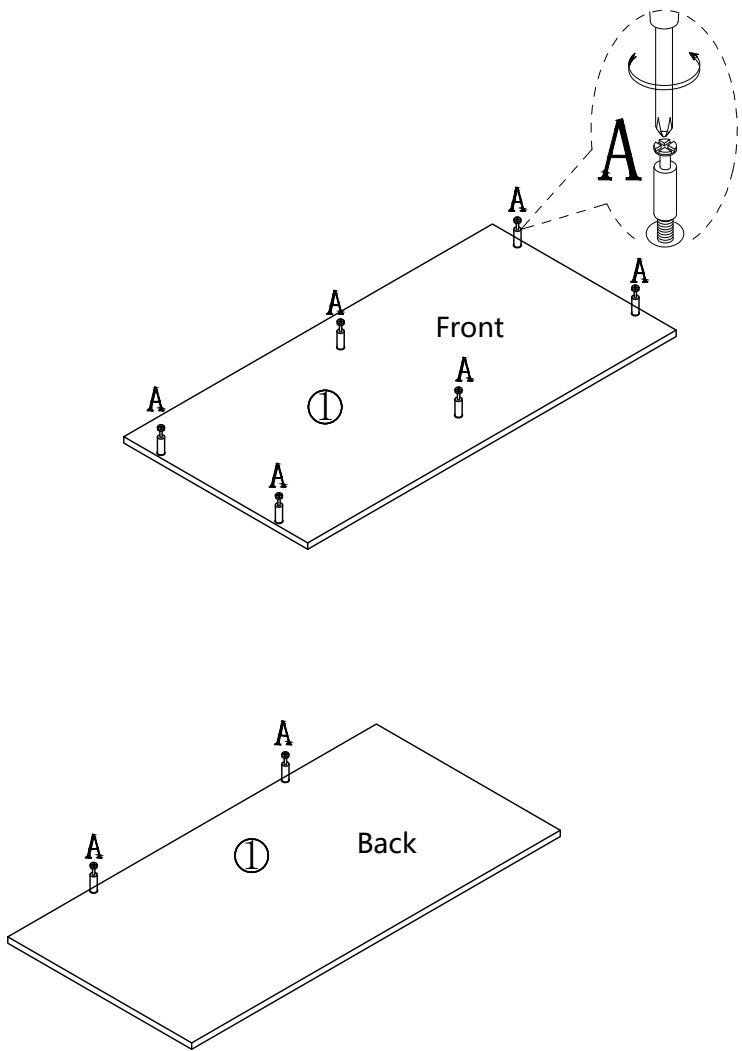

STEP 11





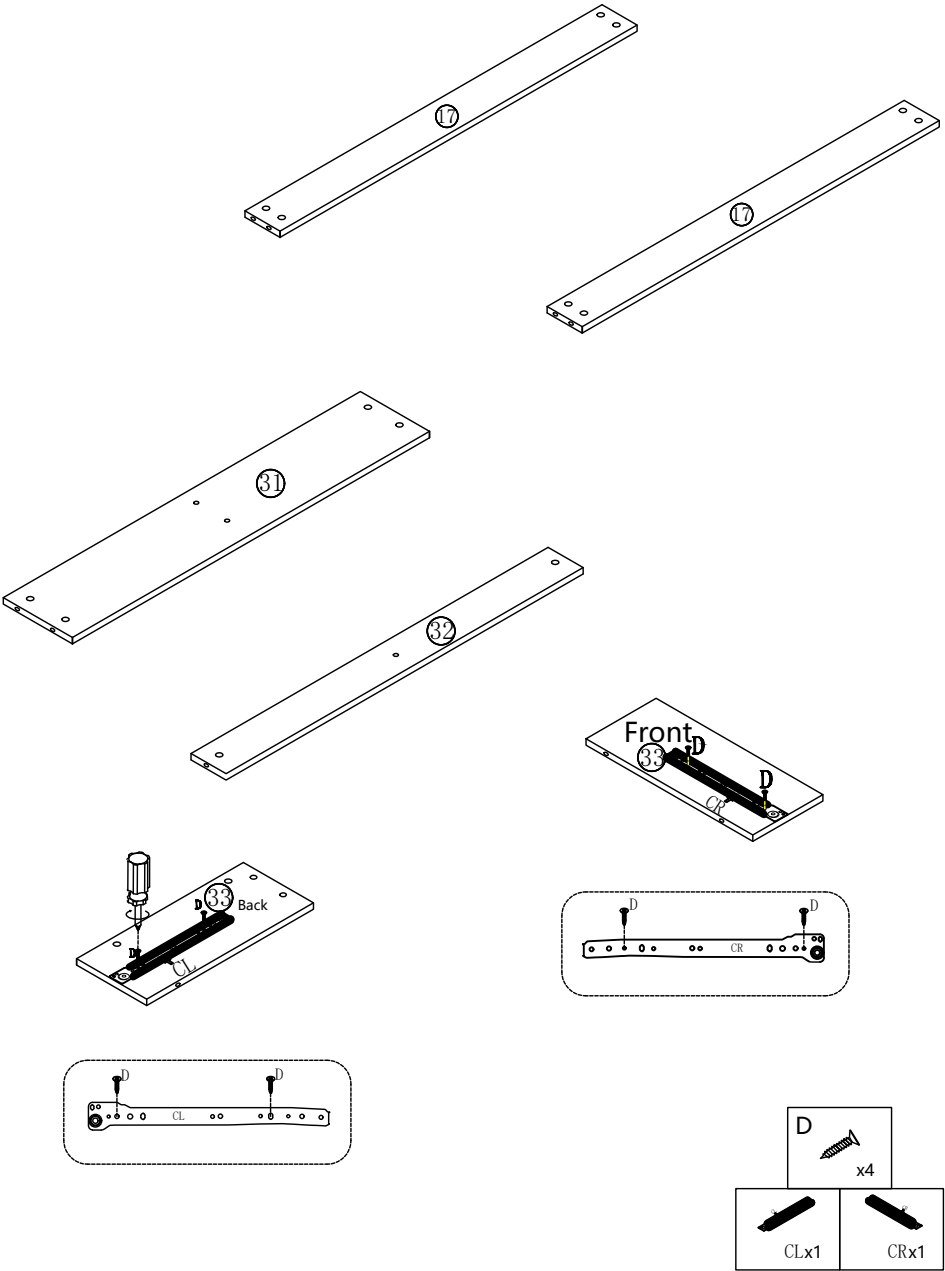


STEP 12

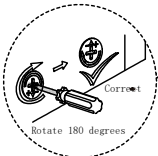
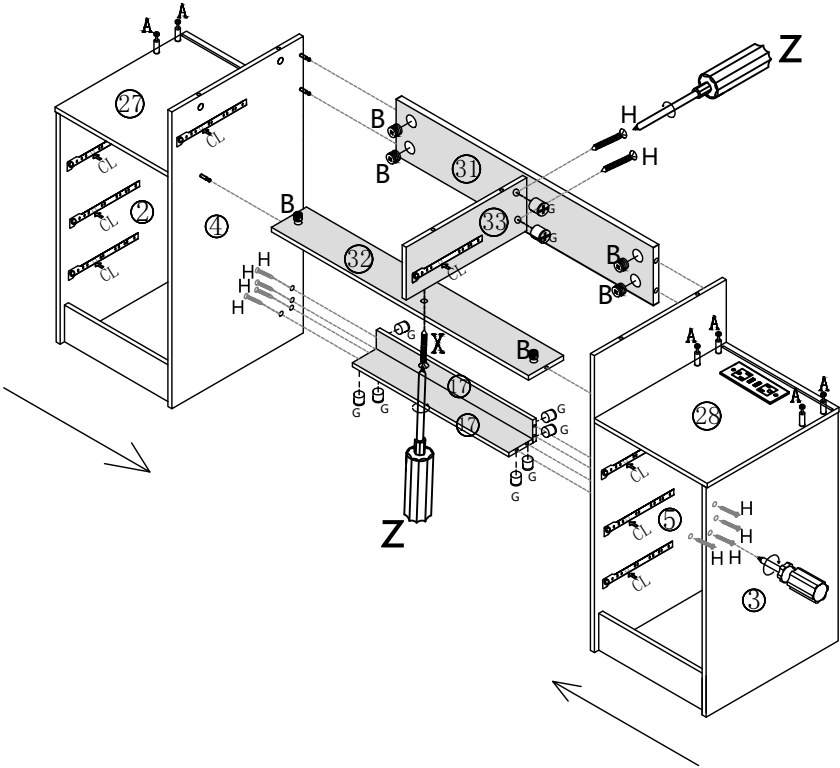


B	 x6	X	 x1
G	 x10	H	 x10


STEP 13

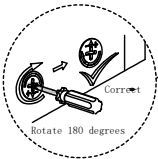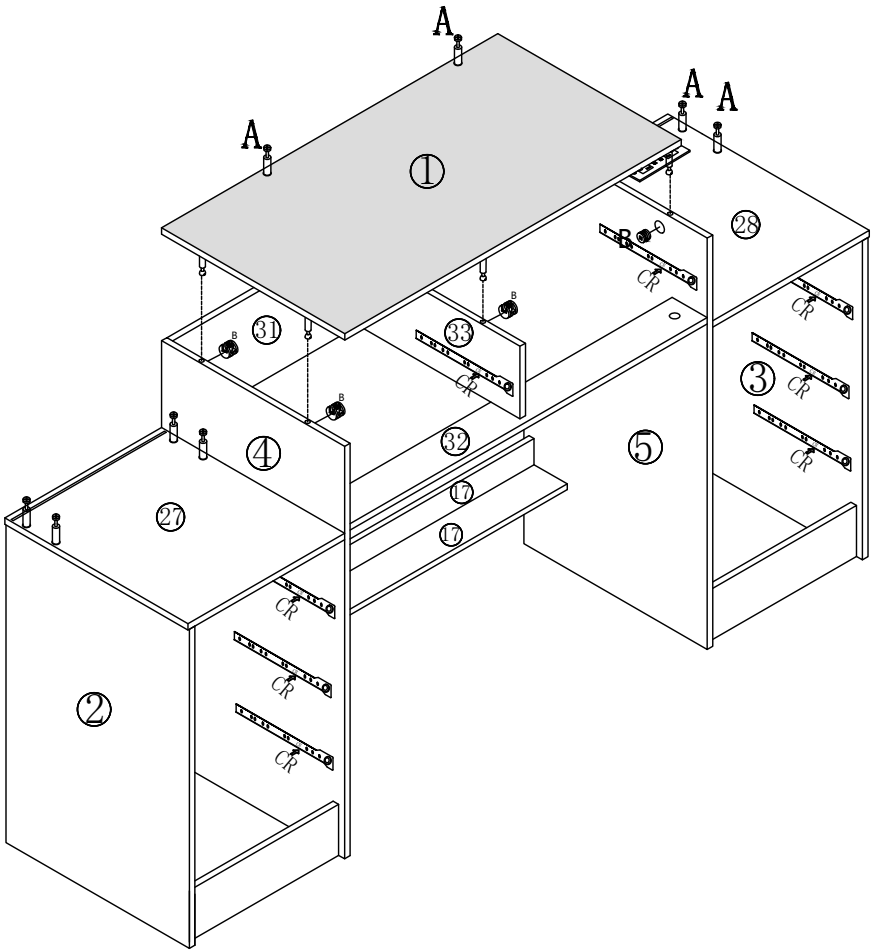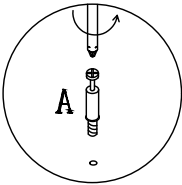



STEP 14

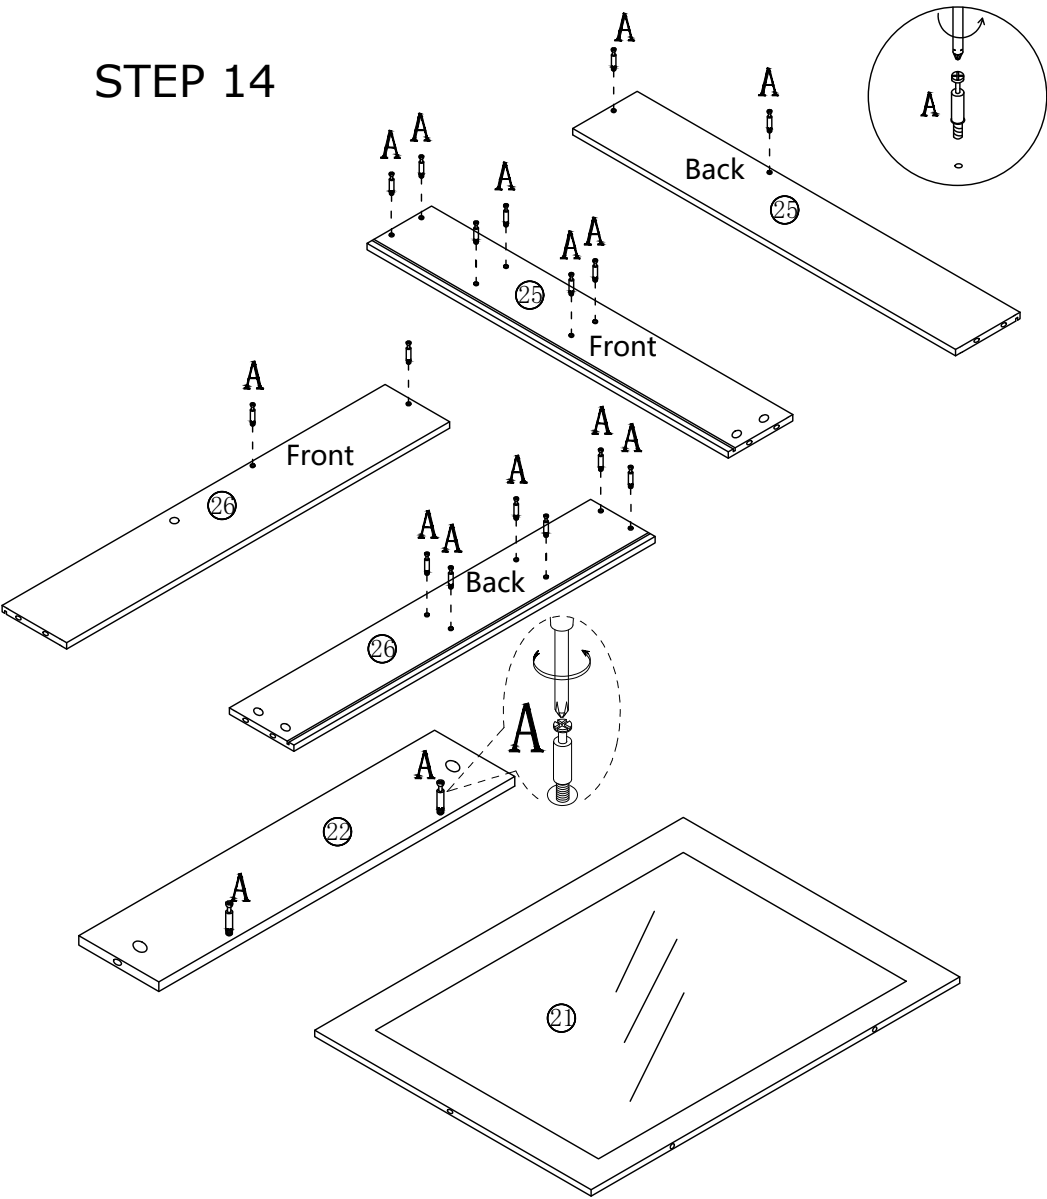



STEP 15

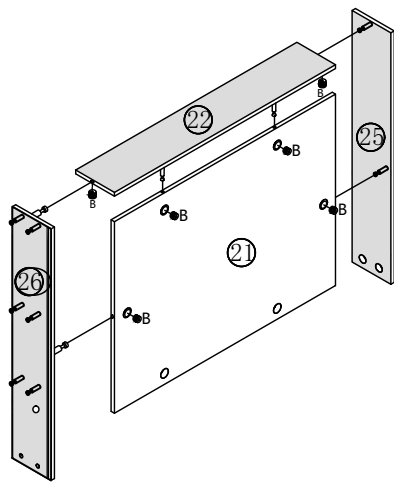




STEP 16

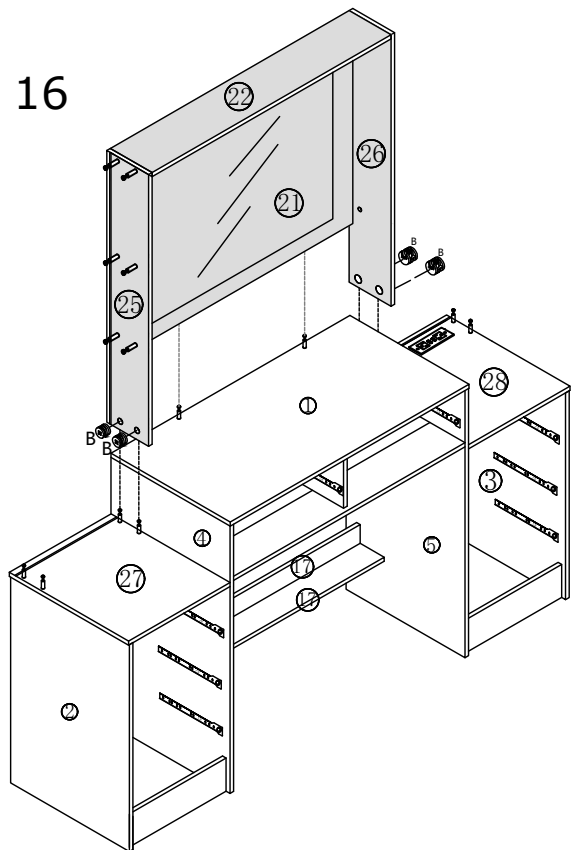


STEP 17

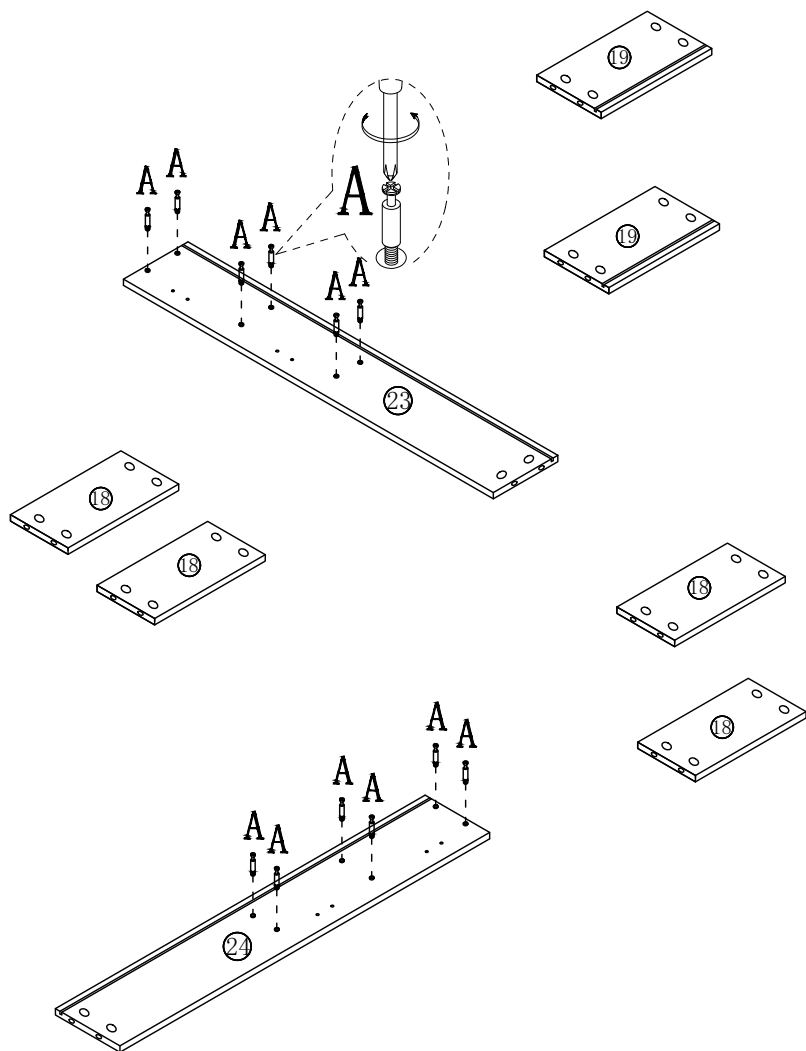




STEP 18

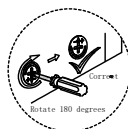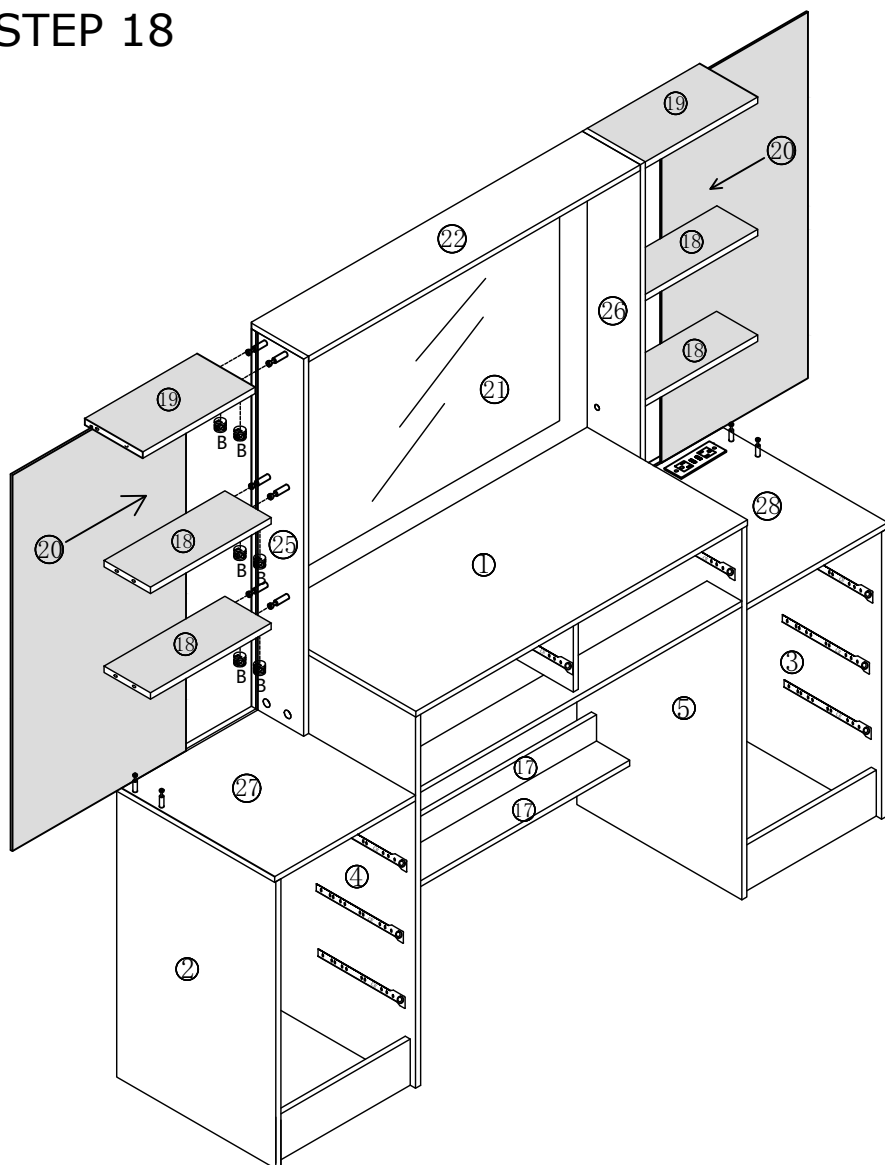

21



STEP 19

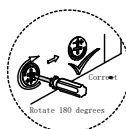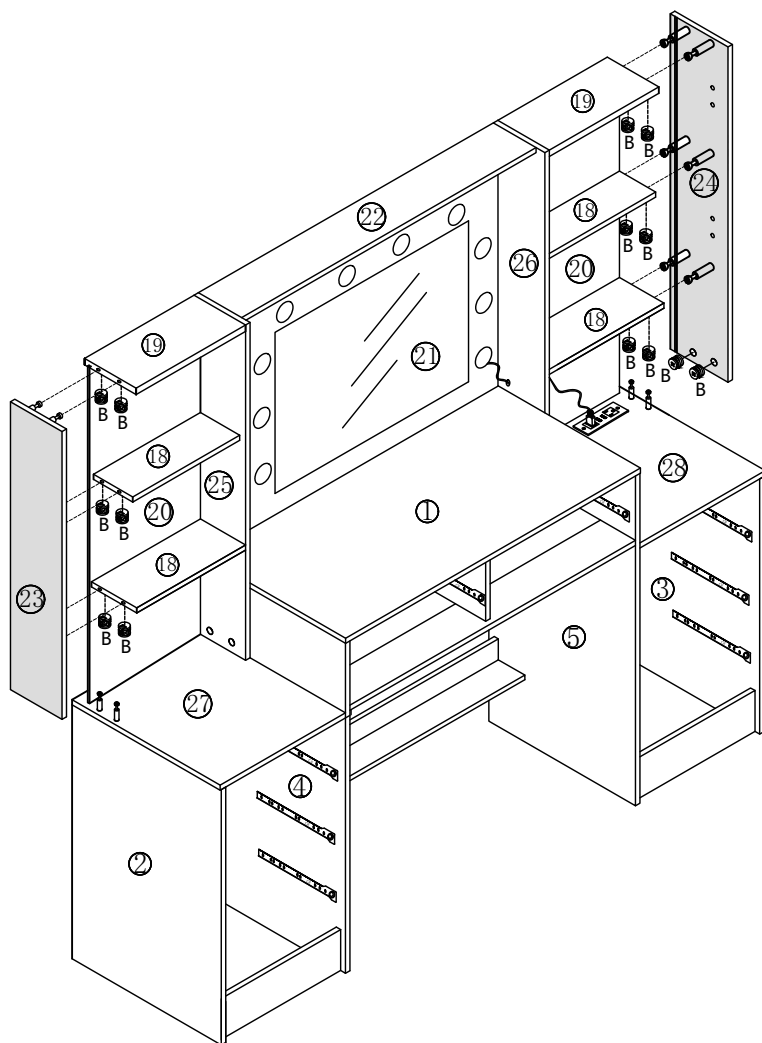

B	K
	
x16	x1

STEP 20

