






#2210

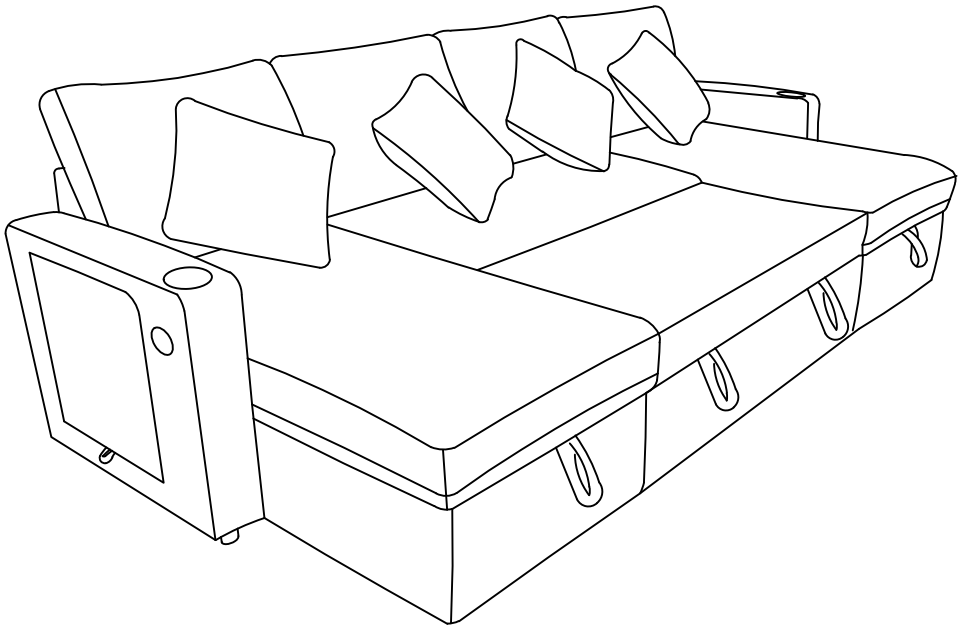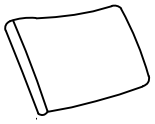


Scan the QR code to obtain the installation video


ASSEMBLY INSTRUCTION


A	B	C	D	E
 x1	 x1	 x1	 x1	 x2
F	**G**	**H**	**I**	**J**
 x2	 x1	 x2	 x4	 x4
K	**L**	**M**	**N**	**O**
 x16	 x4	 x16	 x1	 x1


STEP1:

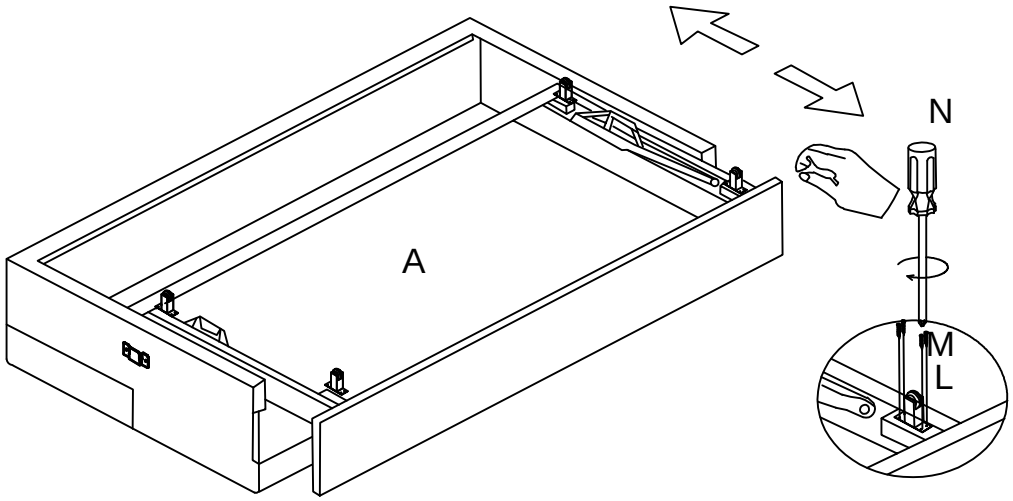


STEP2:

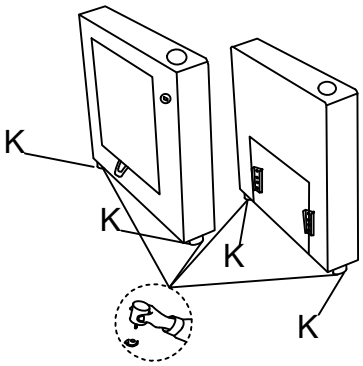


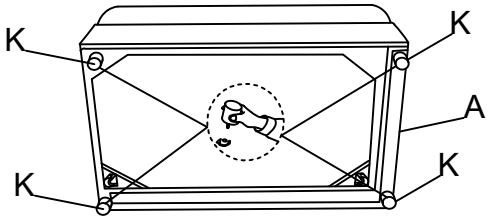

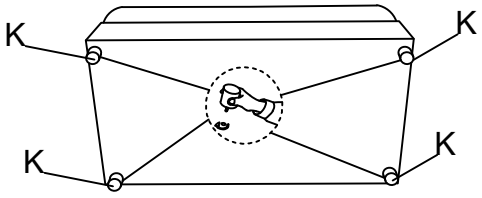

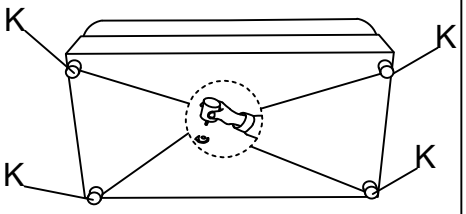



STEP3:

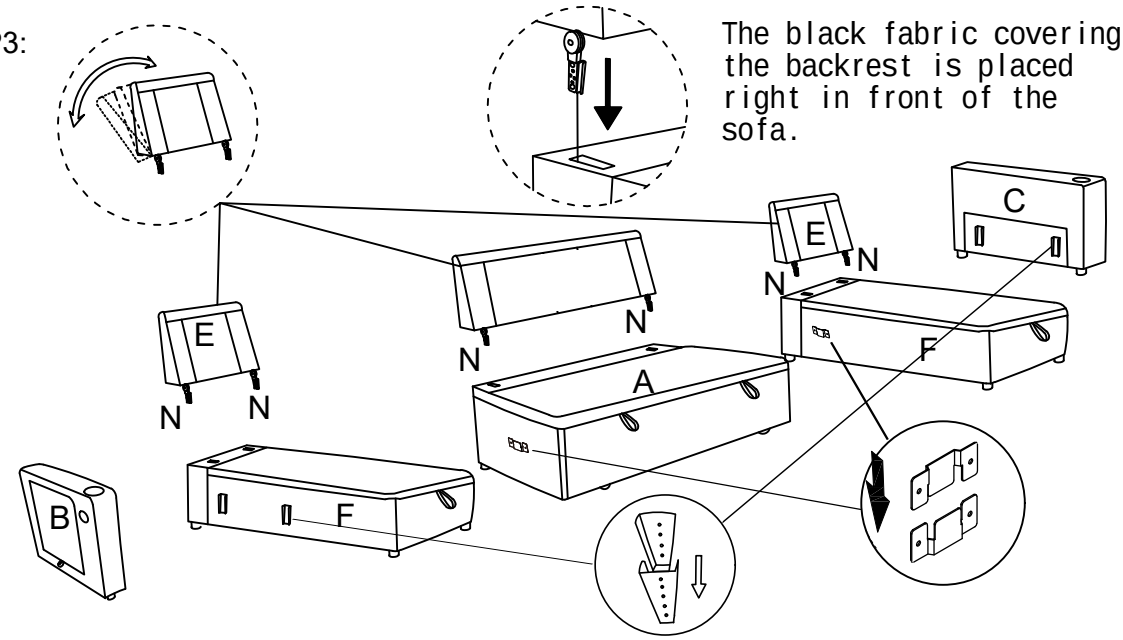


The black fabric covering the backrest is placed right in front of the sofa.


STEP4:

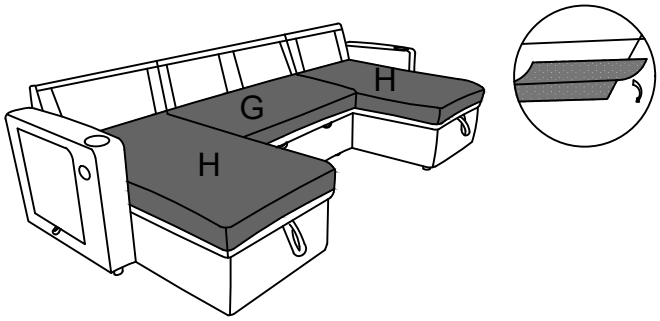

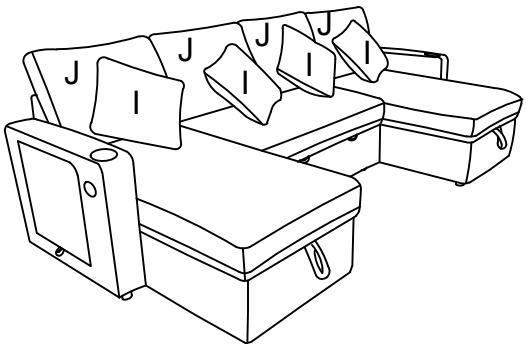


STEP5:

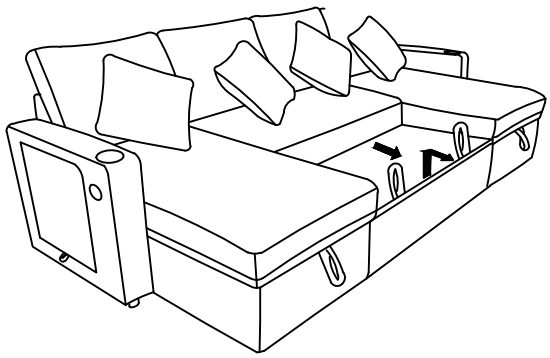


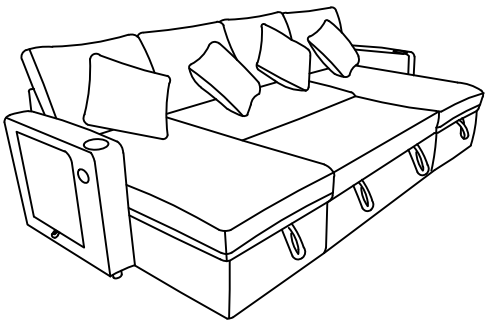

STEP6:

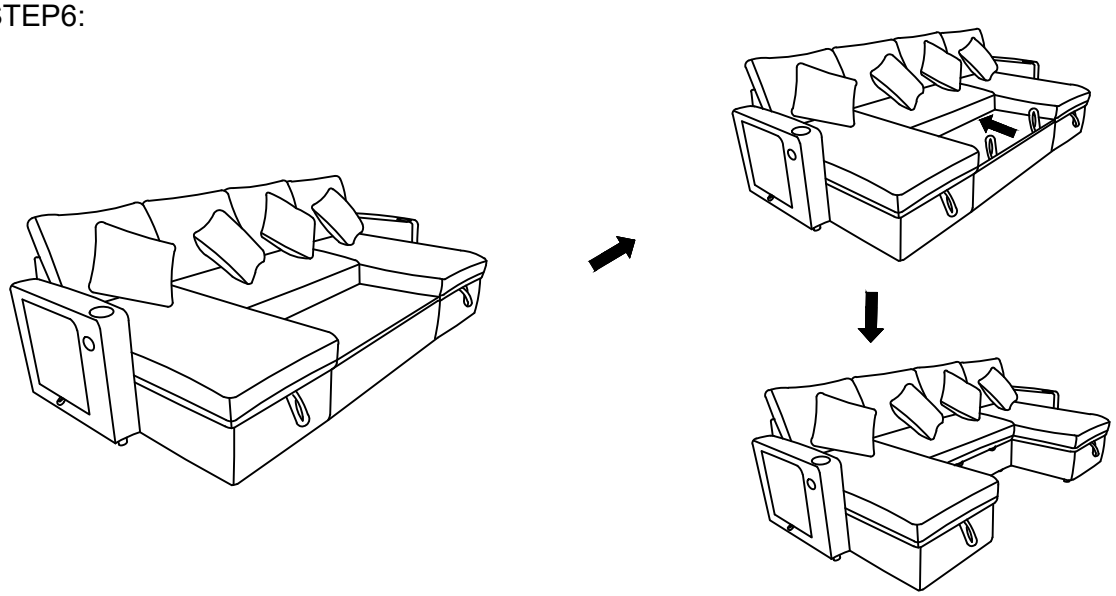

STEP7:

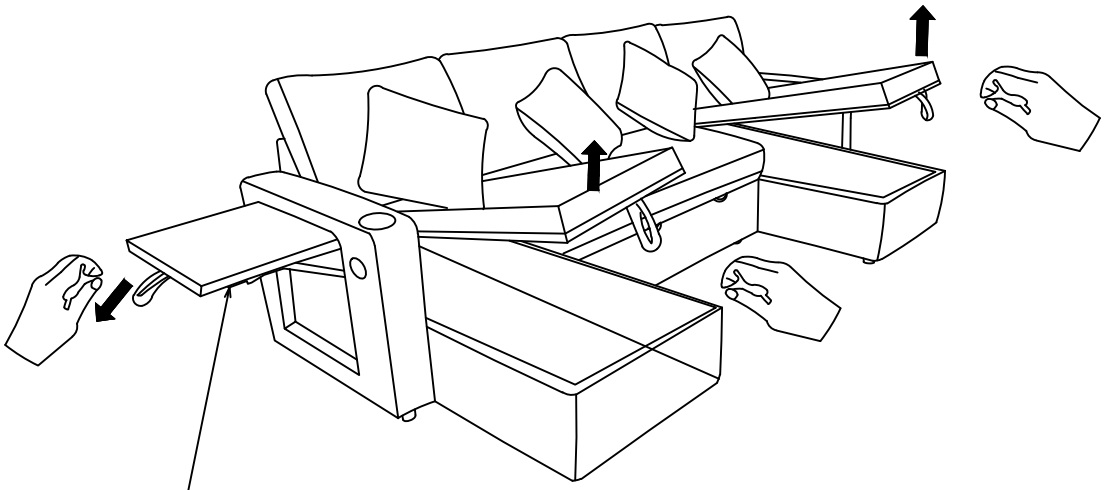

STEP8:

