

Parts List For Euro Bed

HEADBOARD CARTON

- (1) HEADBOARD PANEL-1
(13) WOOD SLATS-
(26 FOR FULL BED)
(28 FOR QUEEN / KING AND CAL KING)

FOOTBOARD CARTON


- (2) FOOTBOARD PANEL-1
(5) WOOD LEGS-4

SIDE RAIL CARTON

- (3) SIDE RAILS-2 (12) DOUBLE END PLASTIC CAPS-
(4) CENTER SUPPORT-1 (13 FOR FULL BED)
(8) SUPPORT LEG-2 # 370102 (14 FOR QUEEN / KING AND
CAL KING)
(14) SINGLE END PLASTIC CAPS-
(26 FOR FULL BED)
(28 FOR QUEEN / KING AND
CAL KING)

HARDWARE BAG FOR BED

- (8) PLASTIC WASHERS-4
(7) 8MM X 35MM ALLEN HEAD SCREW-8 (PRE-INSTALLED)
(9) 6MM X 40MM ALLEN HEAD SCREW-4
(10) 6MM HEX NUT-4
(11) 8MM X 25MM ALLEN HEAD SCREW-4 (PRE-INSTALLED)
(15) M8 ALLEN WRENCH-1
(16) M8 ALLEN WRENCH-1

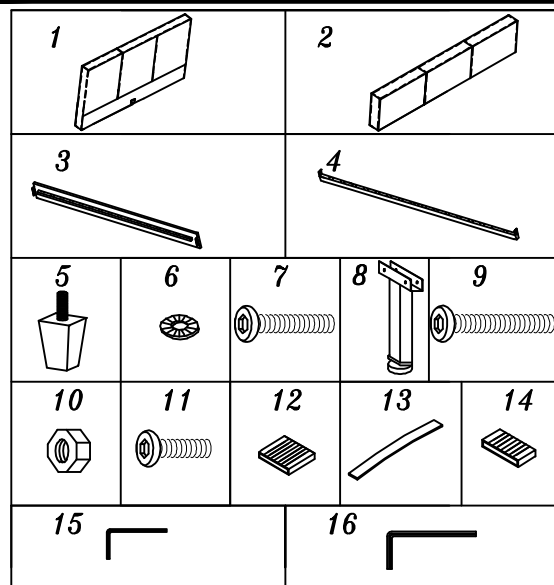

Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND COULD BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

- Step 1** • Place plastic washer (6) over screw on wood leg (5) and secure under headboard (1) and footboard panel (2). SEE FIGURE 1

- Step 2** • Secure side rails (3) to headboard panel (1). Use Allen wrench (16) to loosen screw (7) inserted in the headboard (1) panel 3 or 4 turns ; then insert metal bracket of side rail (3) over screws (7). SEE FIGURE 2

- Tighten screw (7) securely with Allen wrench (16).

- Repeat same steps on other side of the headboard and footboard panel (2).

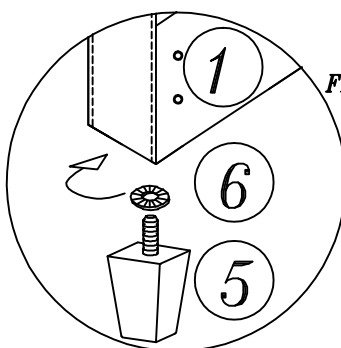


FIGURE 1

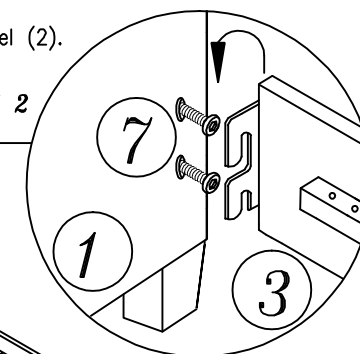


FIGURE 2

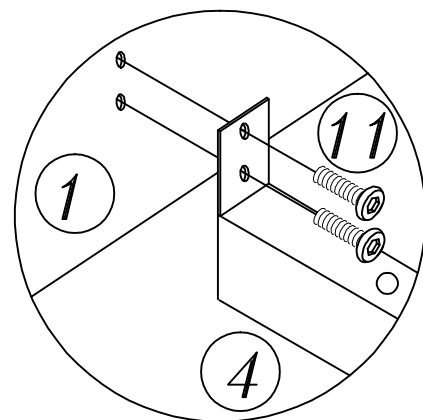


FIGURE 4

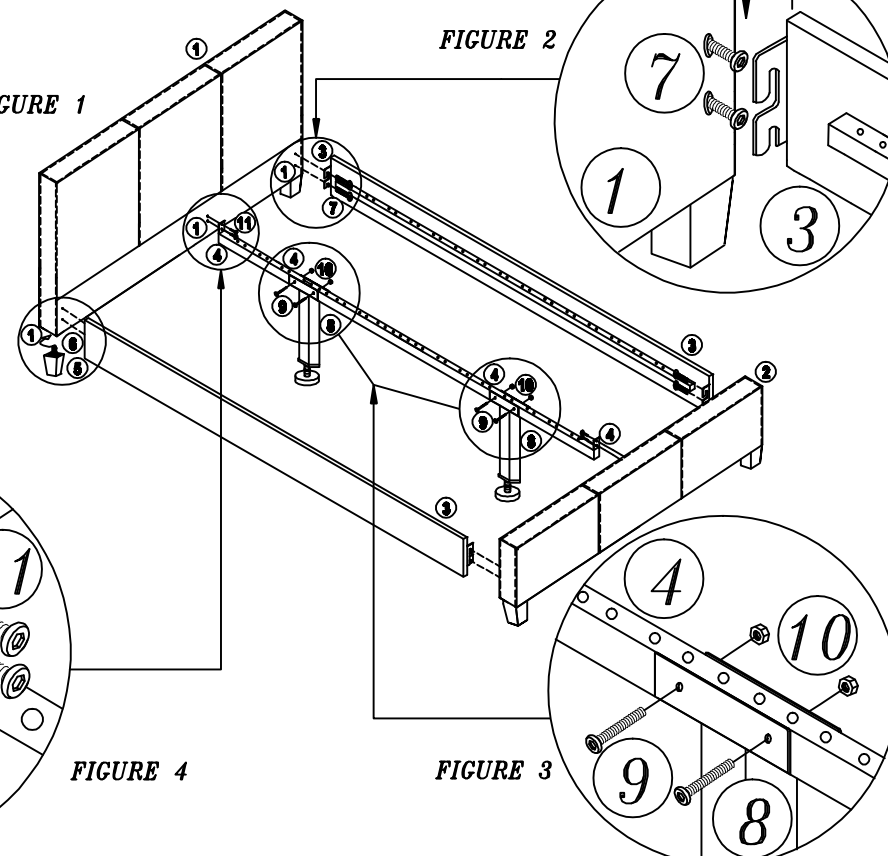


FIGURE 3

- Step 3** • Secure support leg (8) on center support rail (4).
• Align support leg (8) with holes on Center support rail (4) and secure with screw (9) and hex nut (10) use Allen wrench (15). SEE FIGURE 3