


Installation Instruction

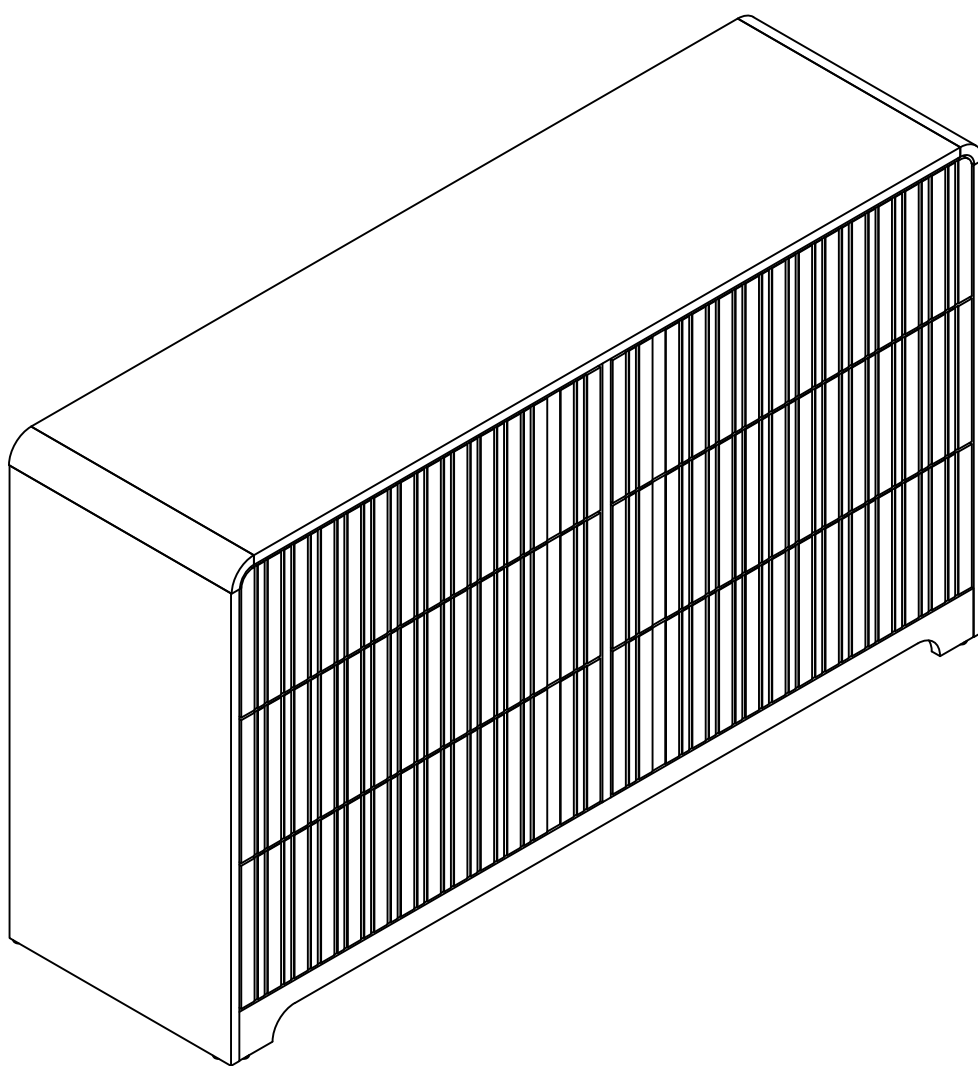

Assembling


Estimated time for assembly



45 : 00

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation



100

lbs table top

| 35


lbs per

What' included

Code Description	Qty
A Cam Bolt M6X35MM	67
B Cam Lock 15X10MM	67
C Wooden Dowel M8X30MM	16
D Screw M4X40MM	34
E Door Rebound Device Holder	6
F Door Rebound Device	6
G Metal connector	2
H Screw M3.0X14MM	78
I Adjustable plastic foot pads	1
J The back button	16
K Anchor	2
L MATS	6
N Self-adhesive hole sticker	67
CL Left mother extended orbit	6
CR Right mother extended orbit	6
DL Left public extension track	6
DR Right public extends track	6

The Hardwares


Ⓐ




Ⓑ




Ⓒ




Ⓓ




Ⓔ



Ⓕ




Ⓖ

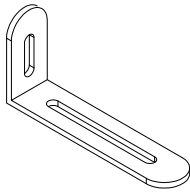


Ⓗ



Ⓘ



Ⓙ



Ⓚ




Ⓛ




Ⓝ



ⒸⓁ

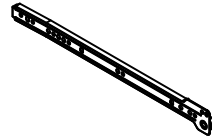


ⒸⓇ

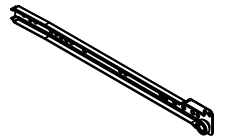

ⒹⓁ



ⒹⓇ

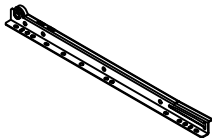


IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product. Do not use power tools.


Included Accessories









Code	Description	Qty
1	Cabinet Top	1
2	Drawer damper	4
3	Left Side Panel	1
4	Right Side Panel	1
5	Upper back plate	1
6	Drawer left panel	6
7	Drawer right side panel	6
8	The drawer bottom	6
9	After the drawer board	6
10	Upper left drawer panel	1
11	Upper right drawer panel	1
12	At the bottom of the drawer	6
13	Front Support Bar	1
14	After the gusset plates	1
15	Bottom drawer panel	4
16	Intermediate partition	1
17	below back plate	1
18	Arc connecting plate	2
19	After the gusset plates	1

The Accessoriess

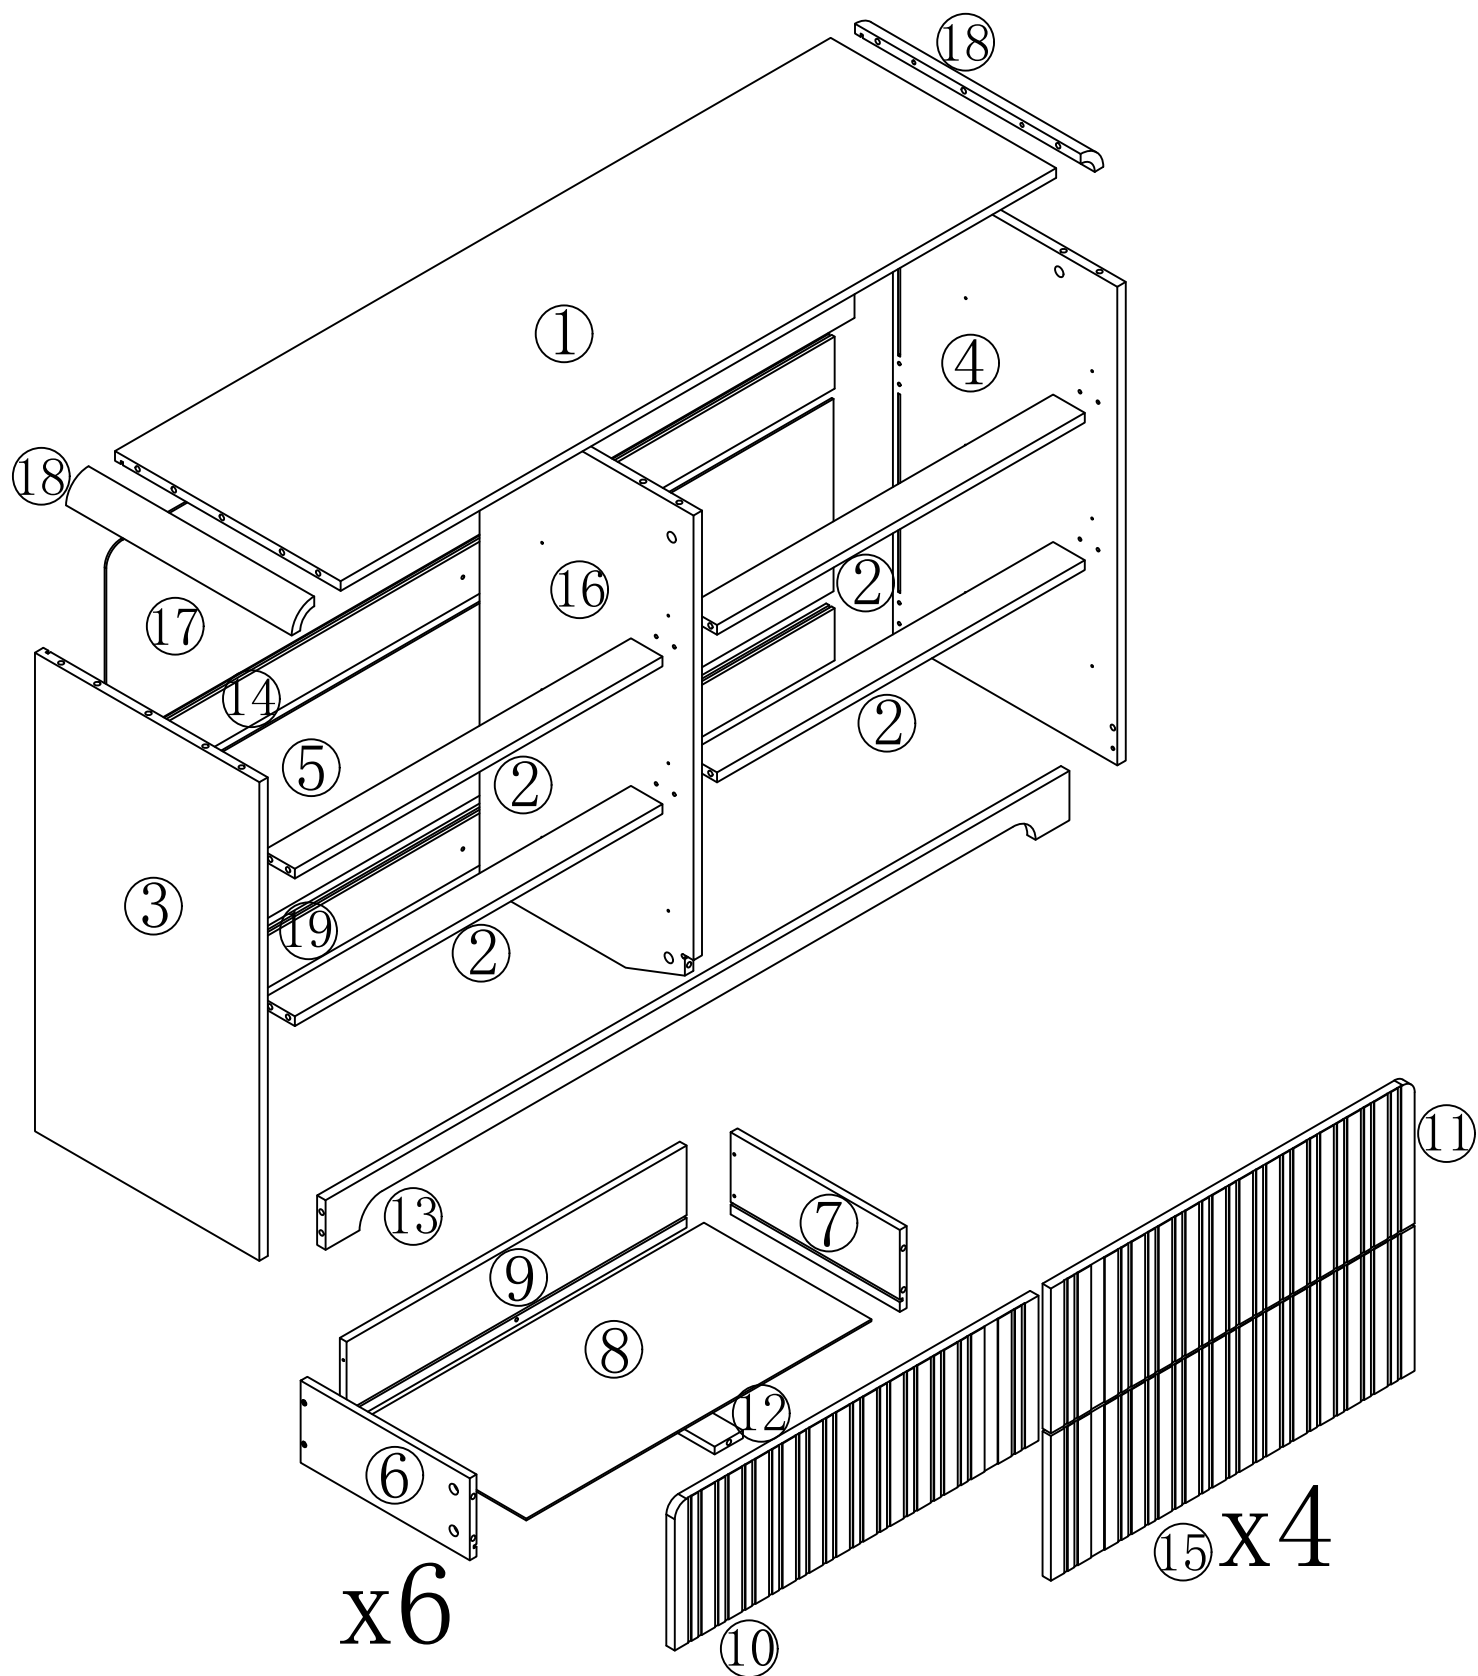


Step 1

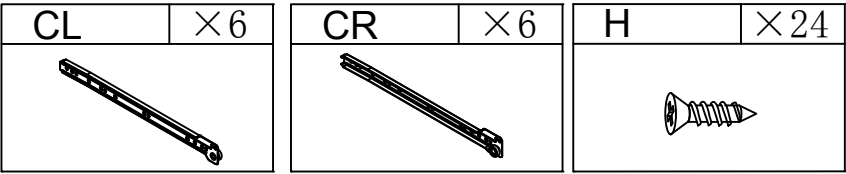CL	×6	CR	×6	H	×24
					

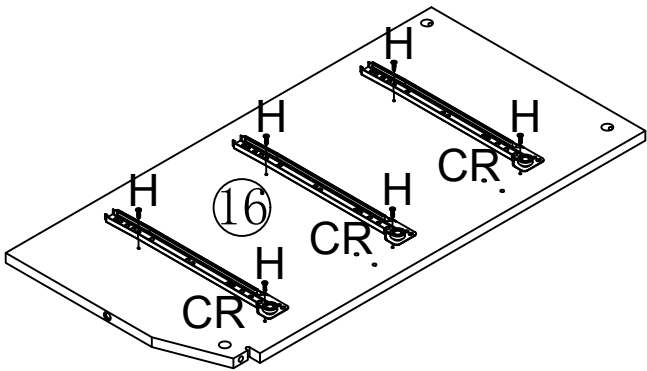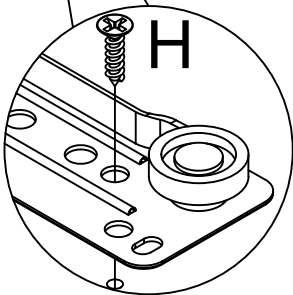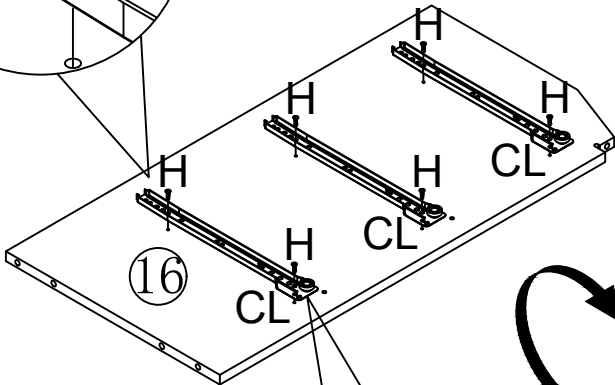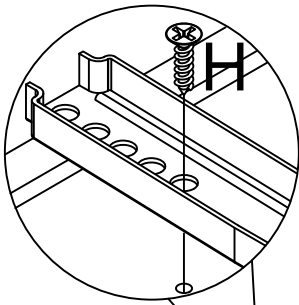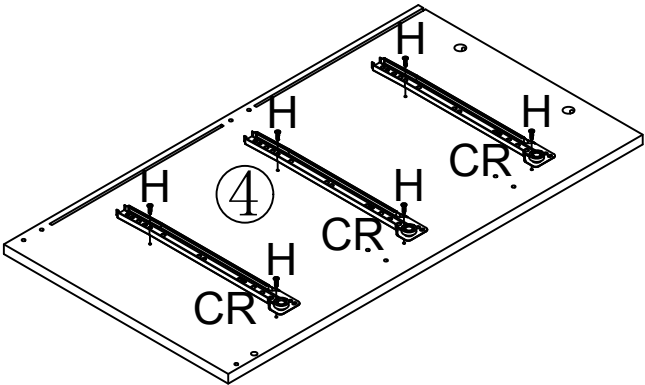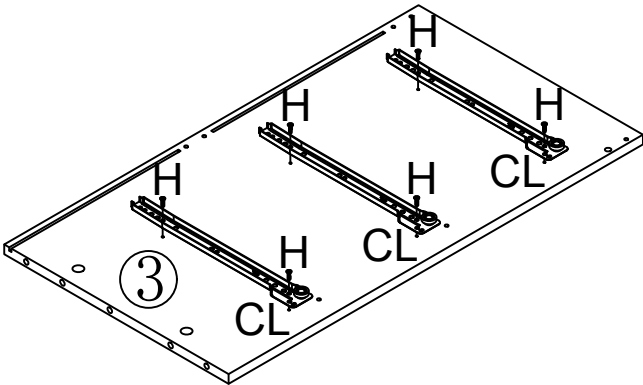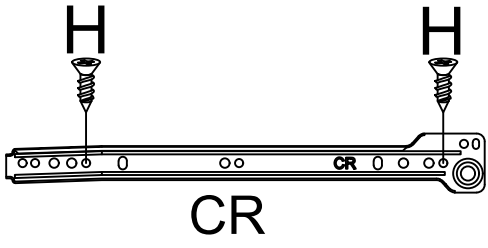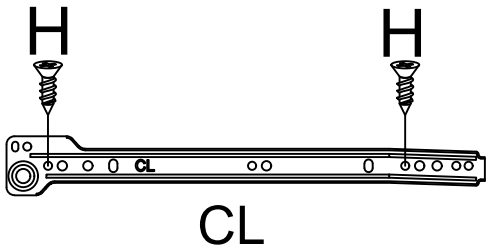



Step 2

L	×6
	

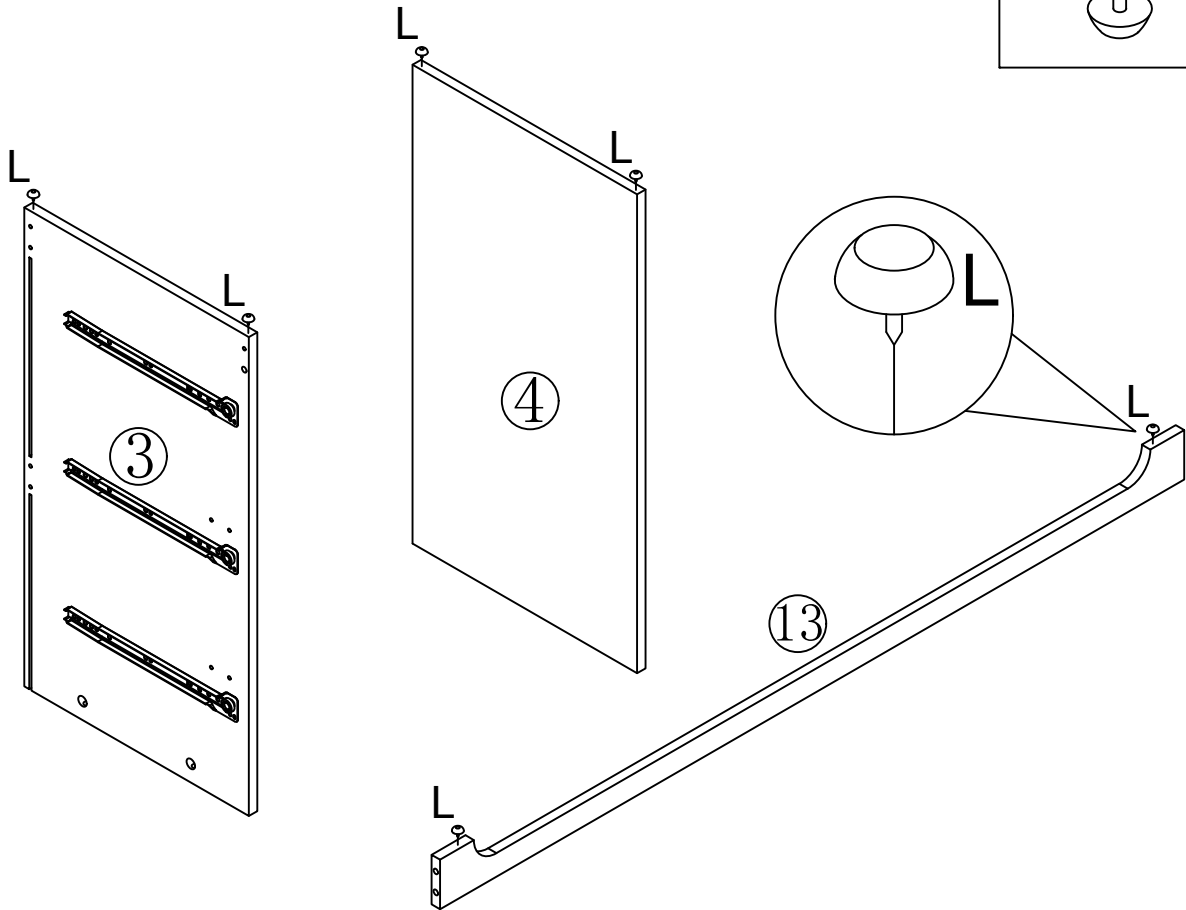


Step 3


A	×9
	

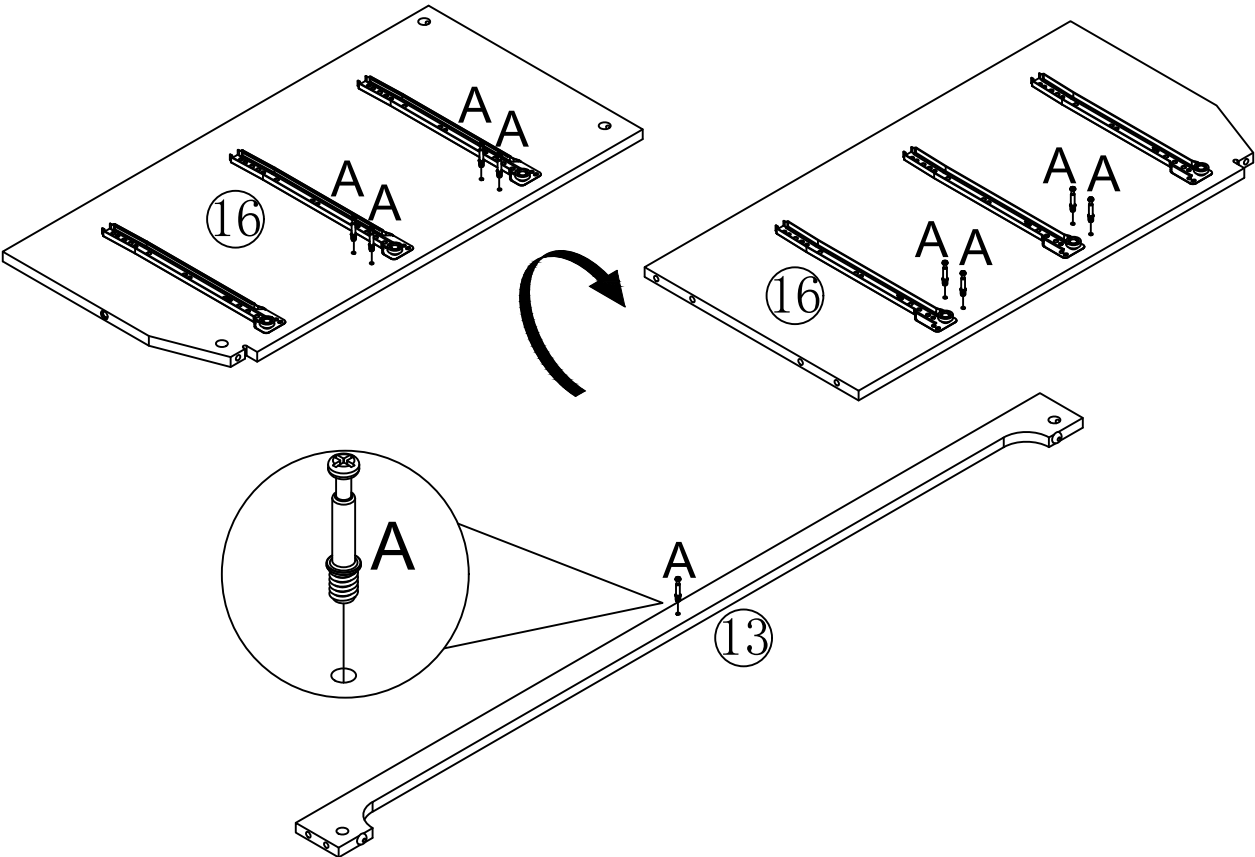


B	×1	I	×1	N	×1

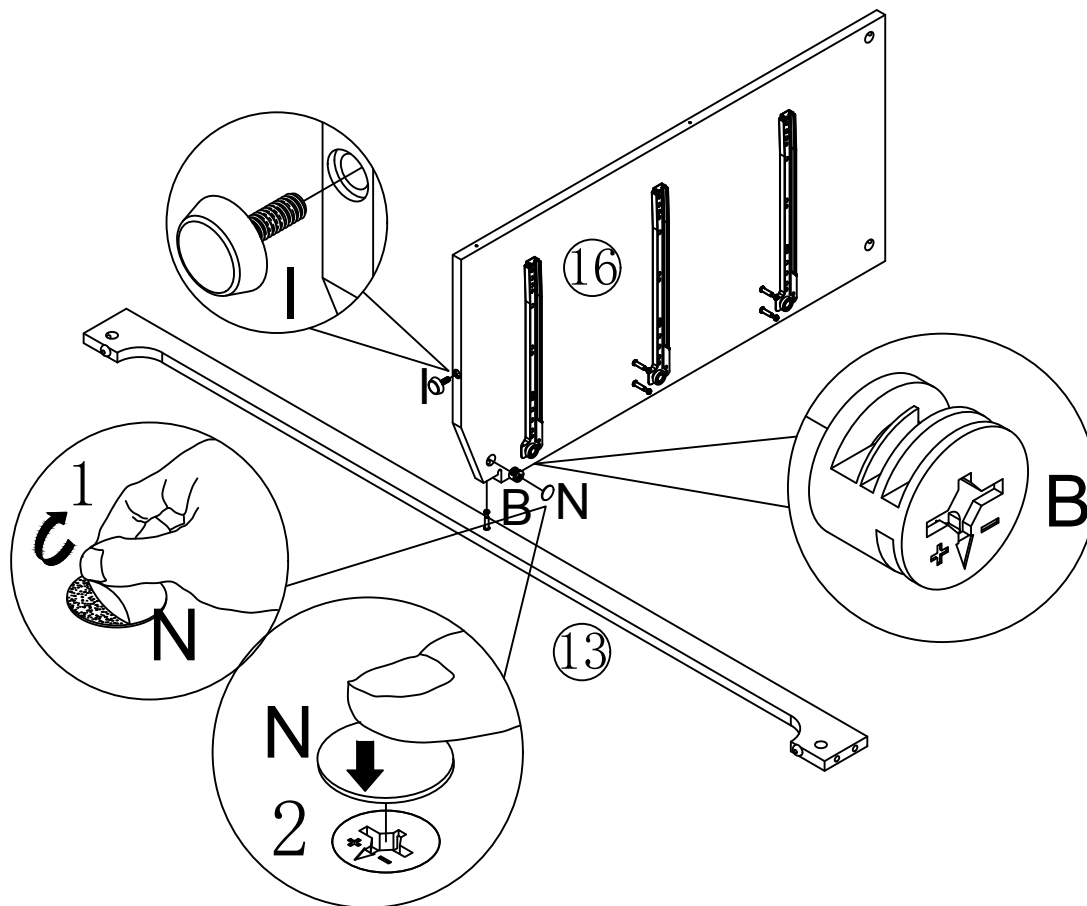


E	×6	F	×6	H	×12

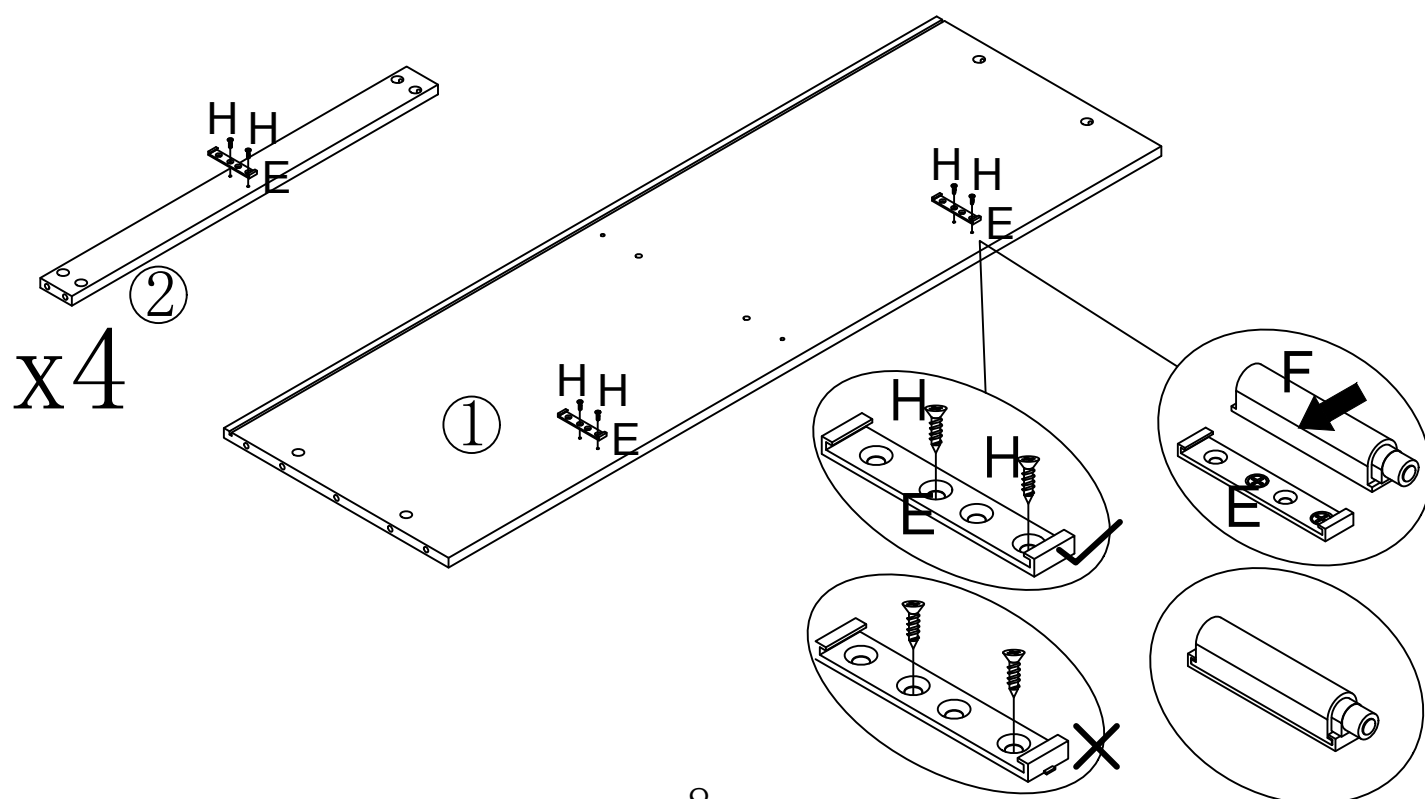


Step 6

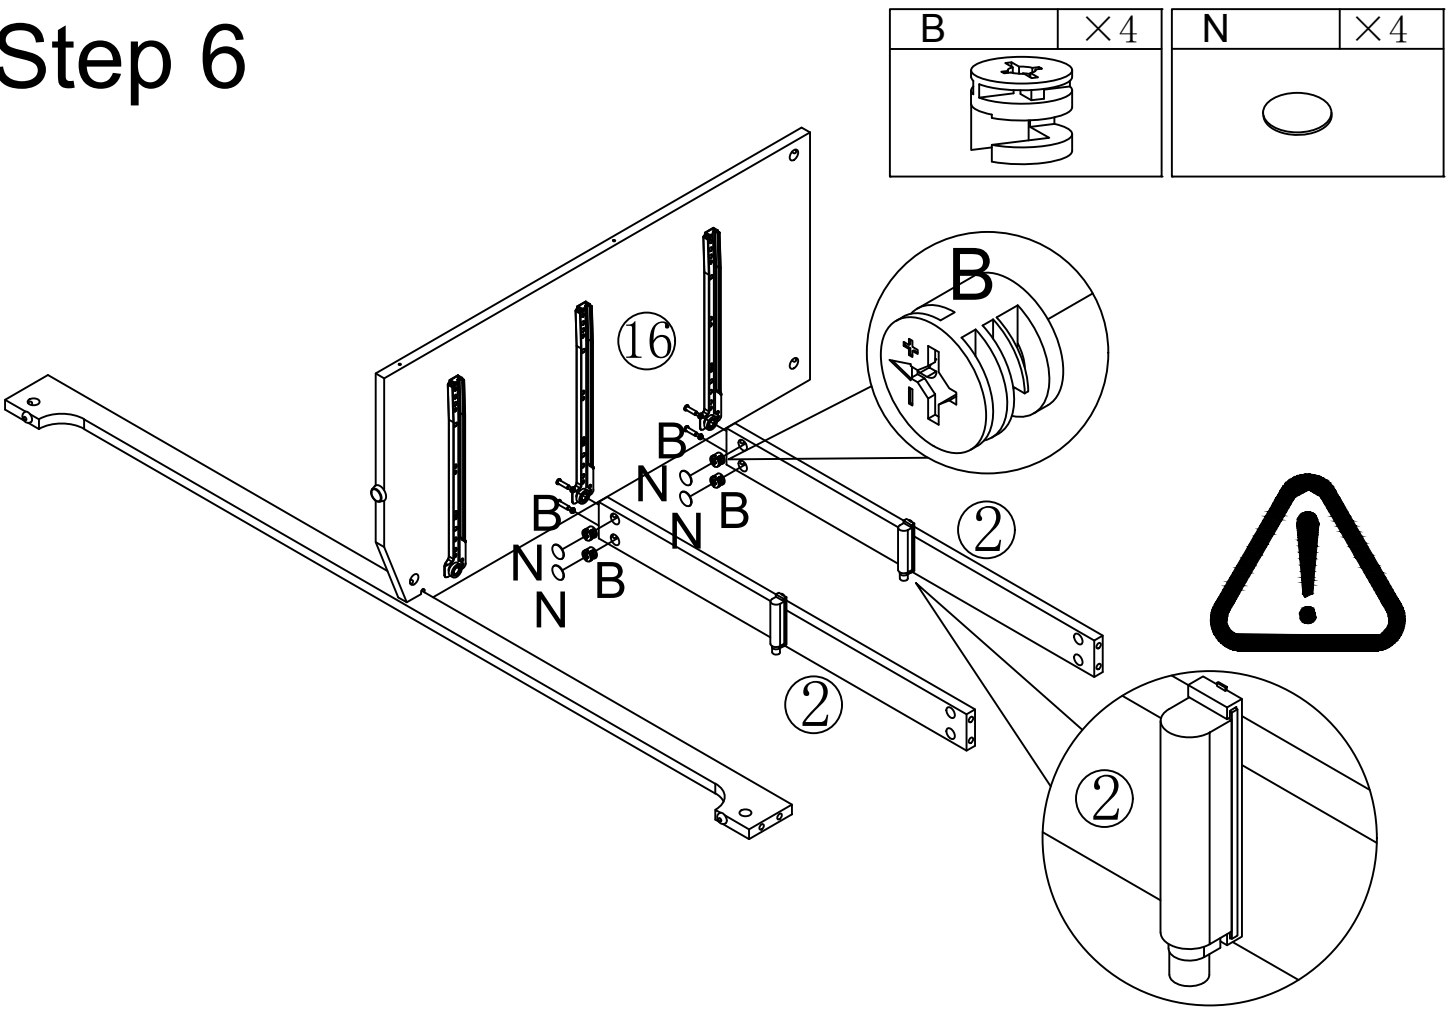


Step 7

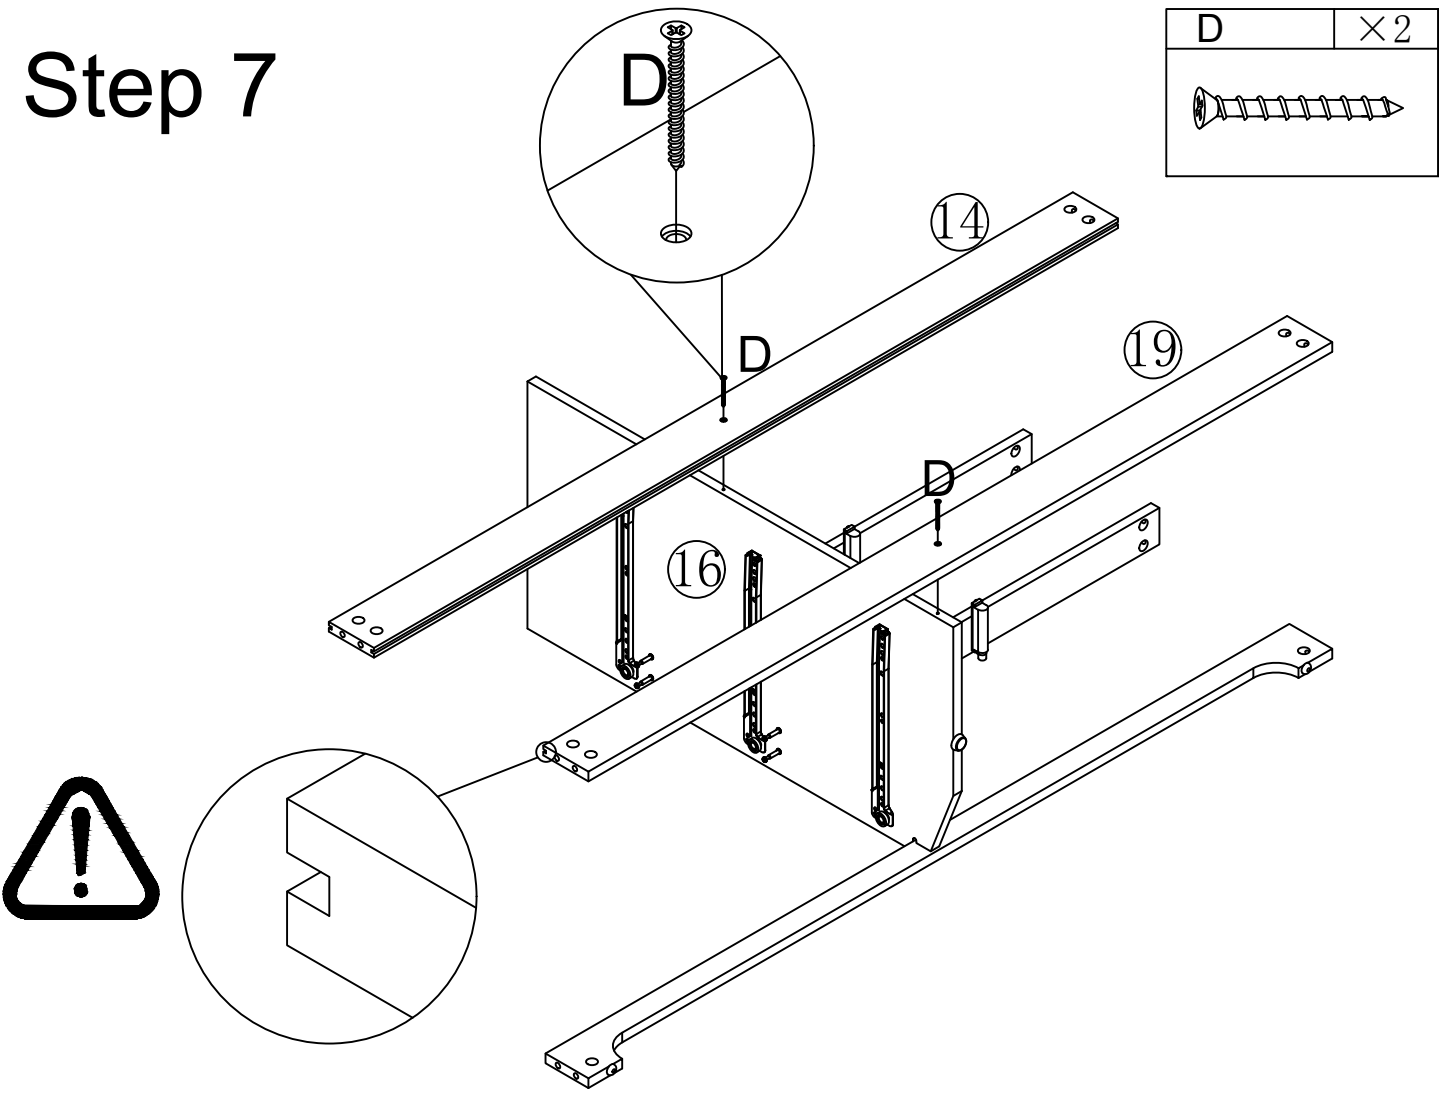


Step 8

A	×18
	

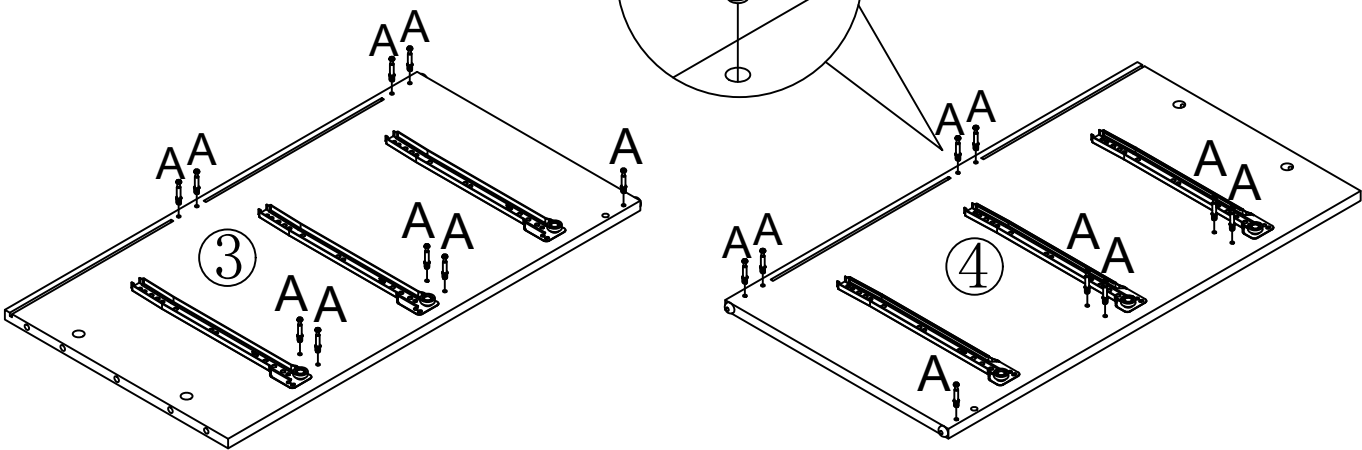


Step 9

B	×9	C	×1	N	×9
					

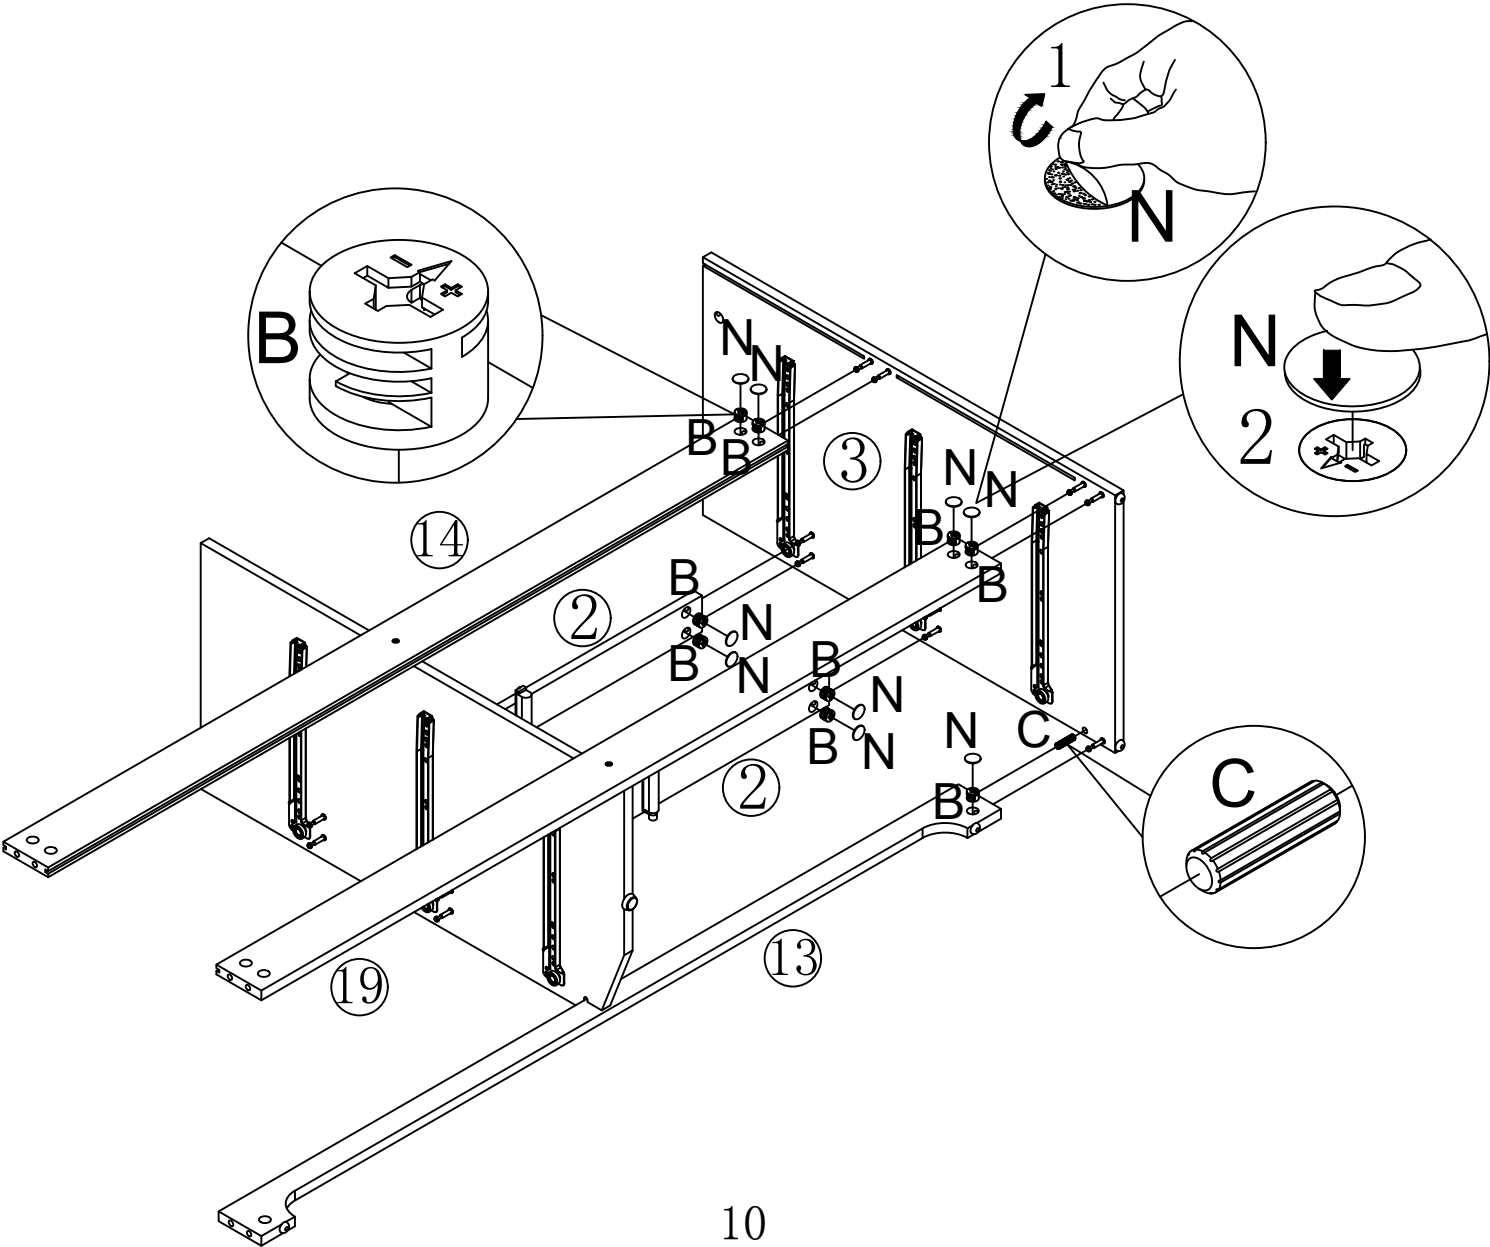


Step 10

B	×4	N	×4
			

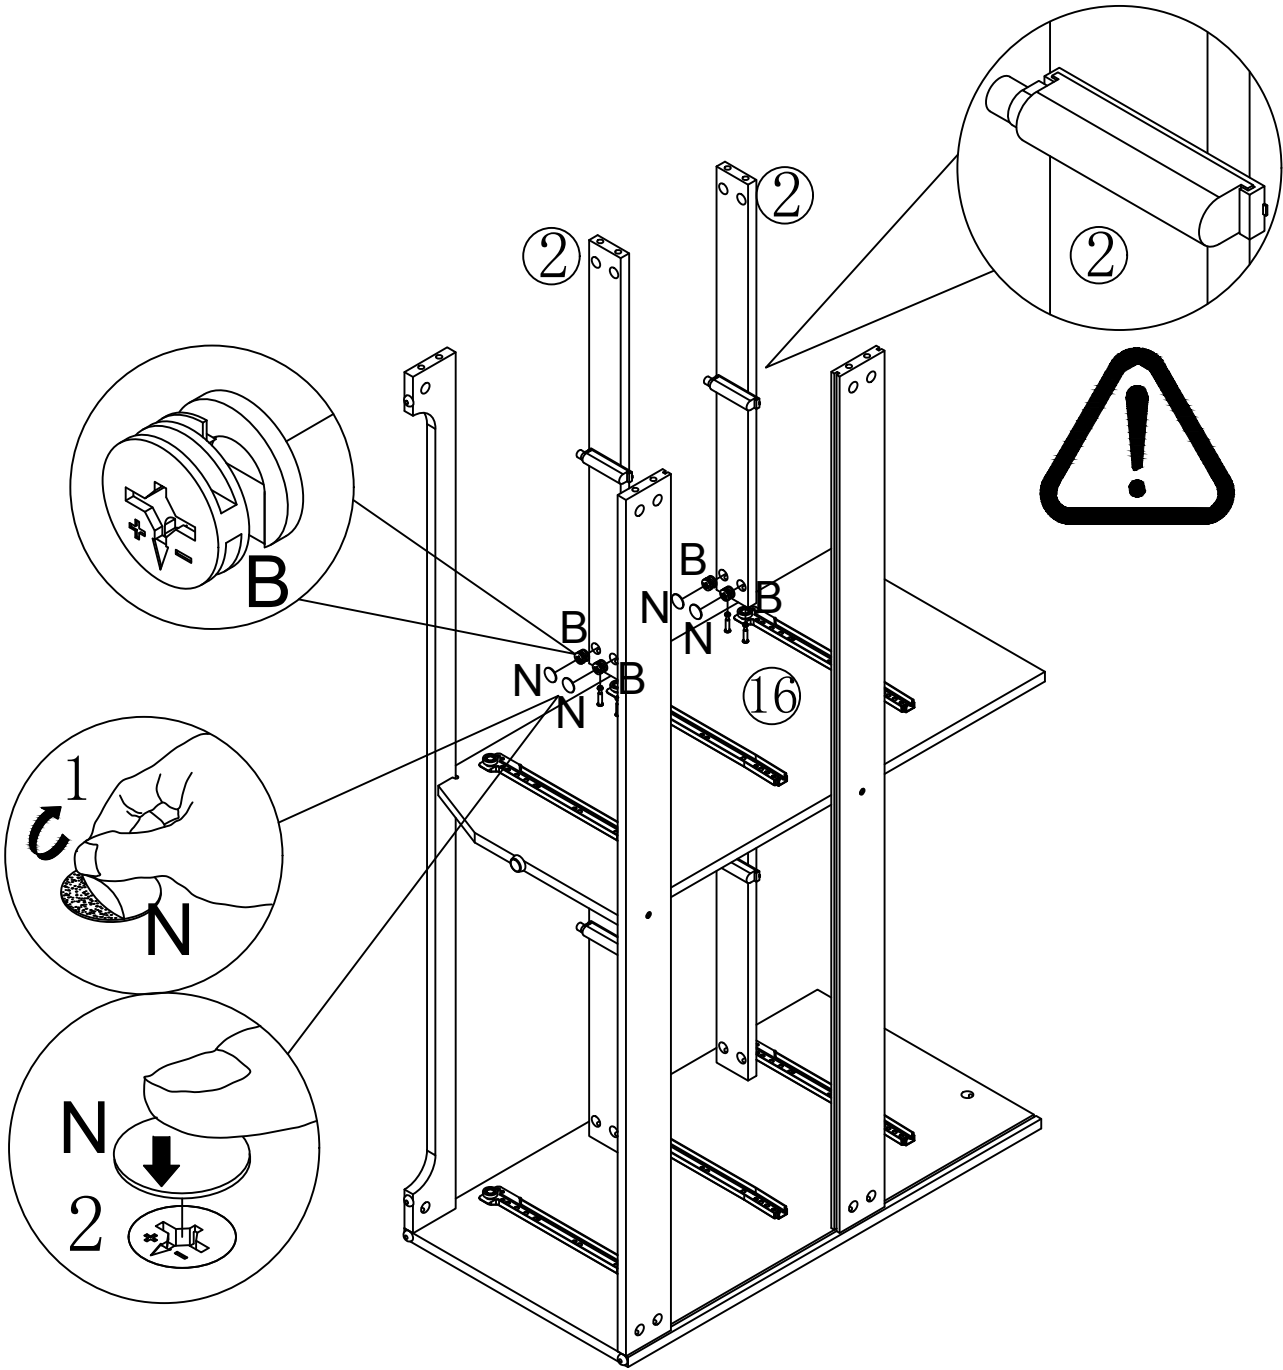


Step 11

C	×1
	

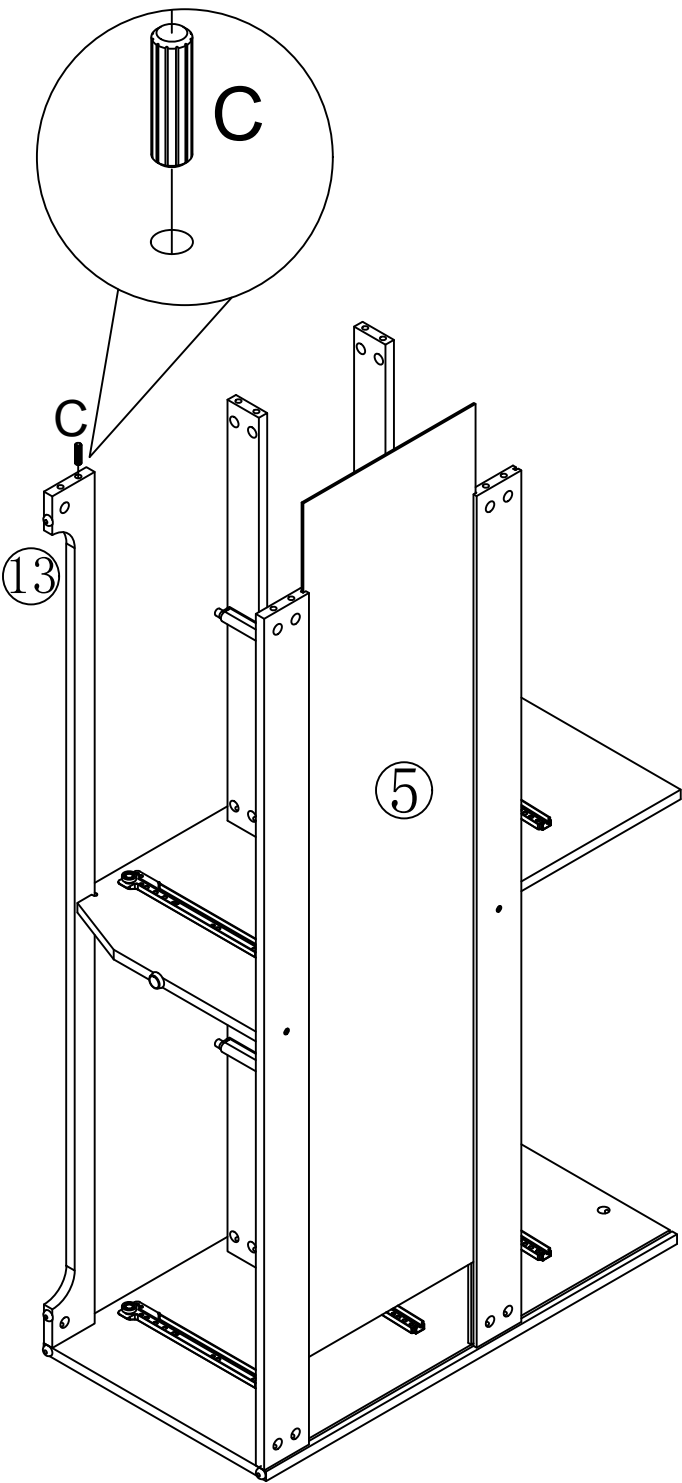


Step 12


B	×9	N	×9
			

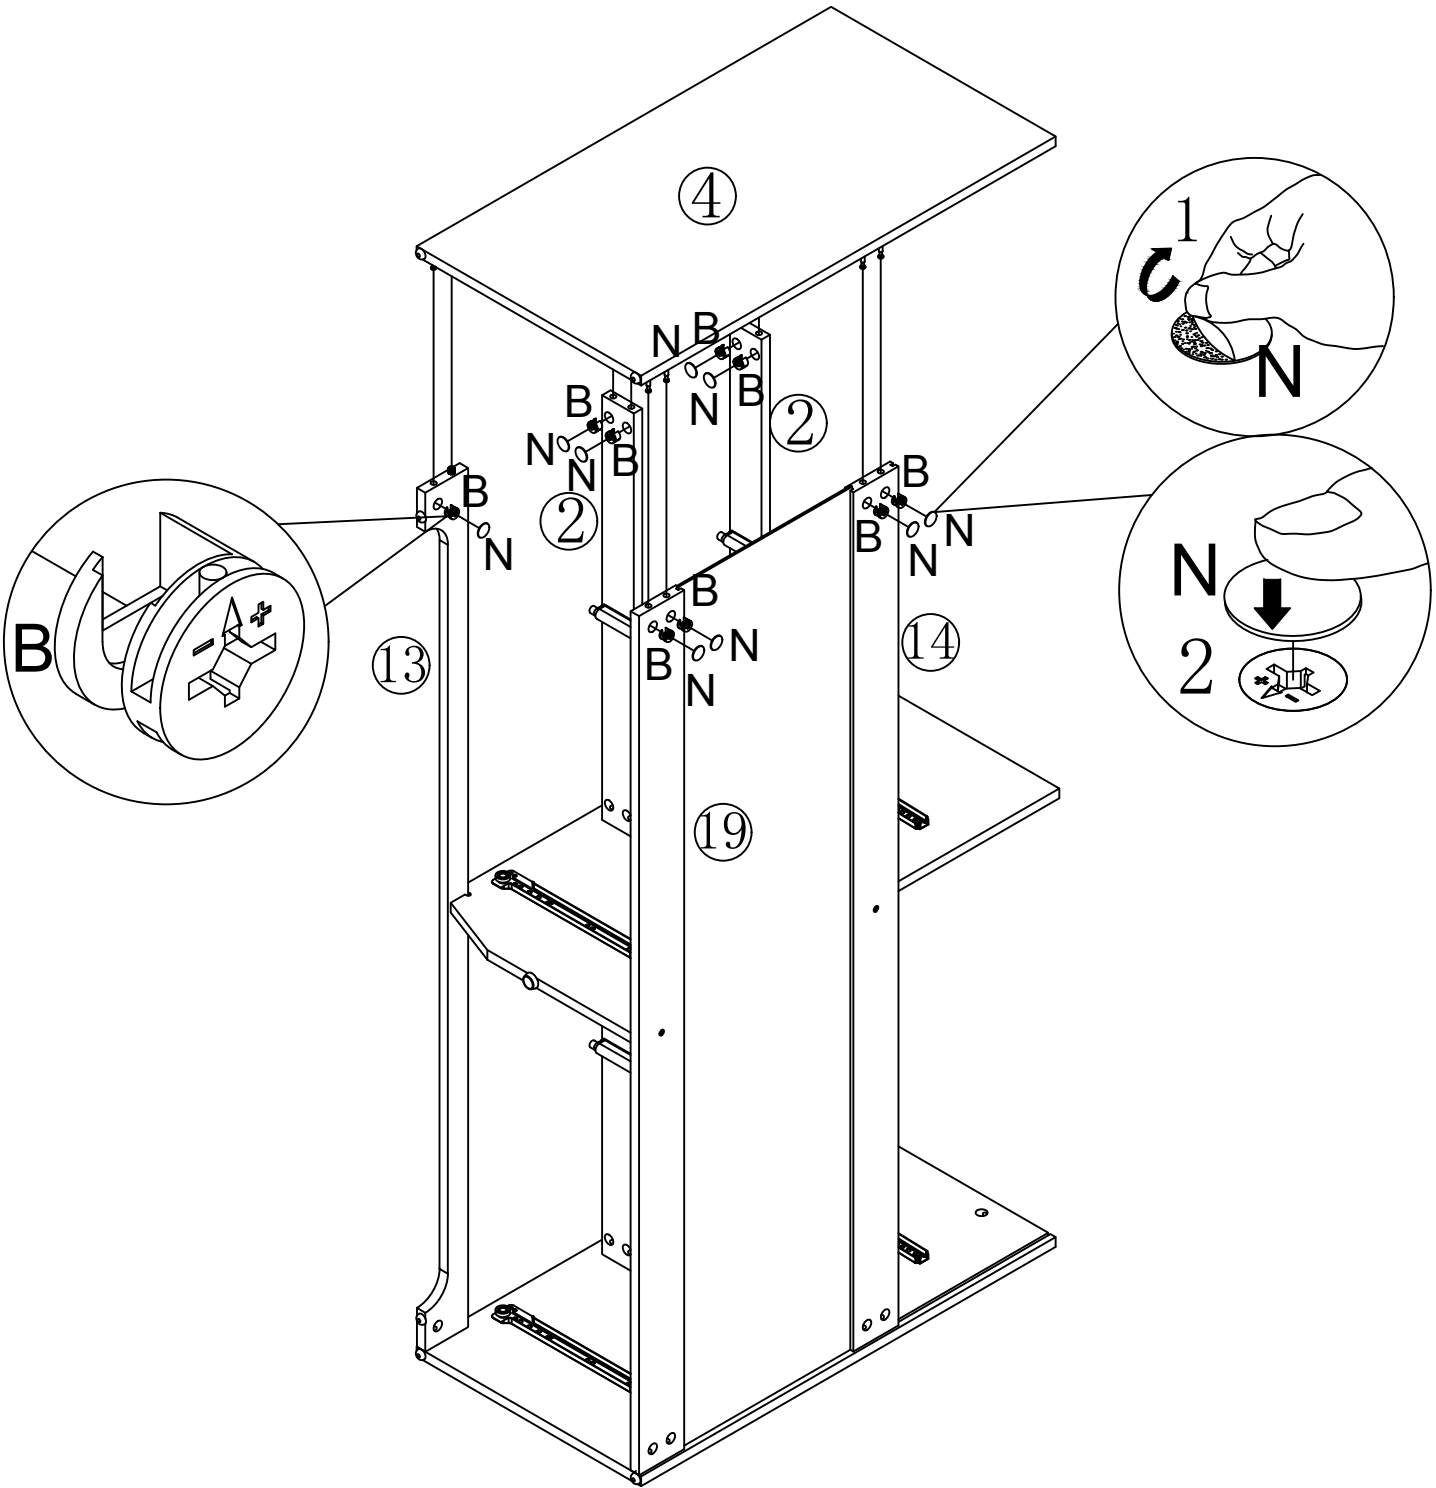

Step 13

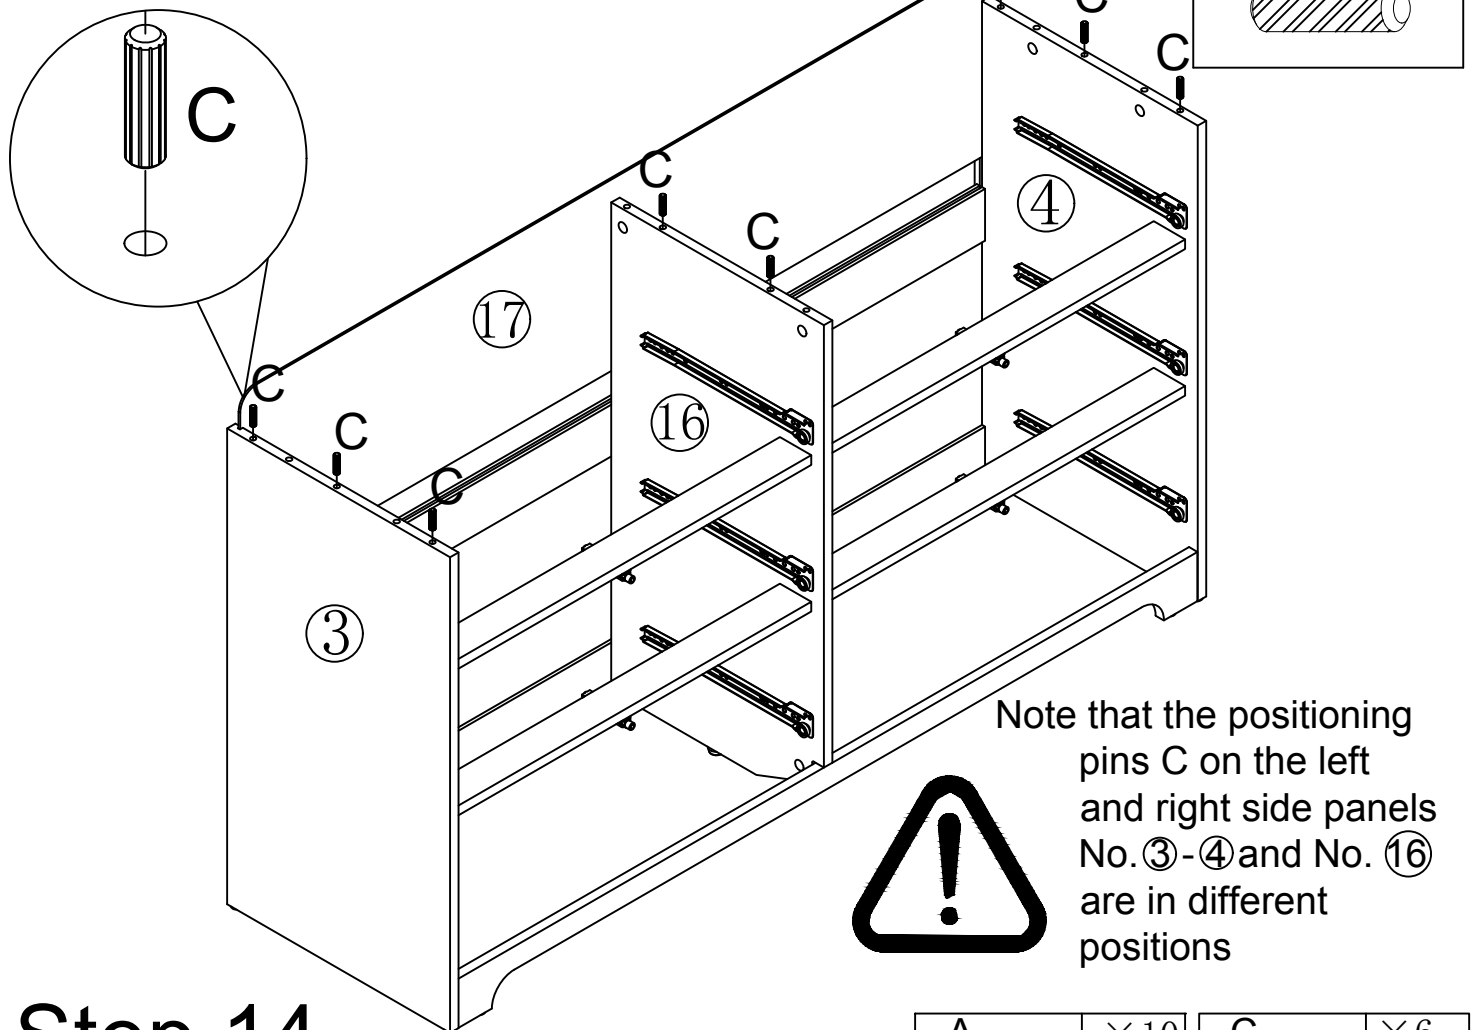


Step 14

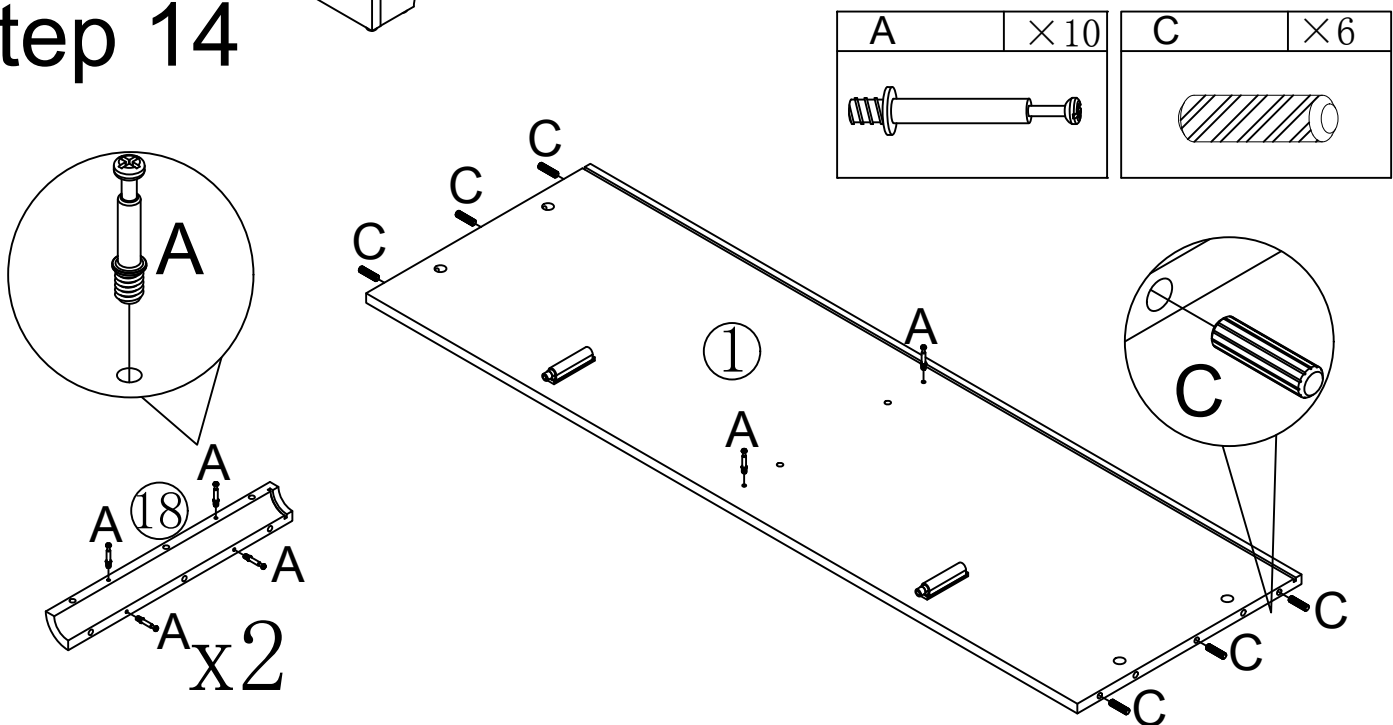


Note that when the No. ①⑧ connecting plate is equipped with R Angle lock hardware A, it should be locked straight, not crooked, not very tight, and the normal lock is flat



Step 15

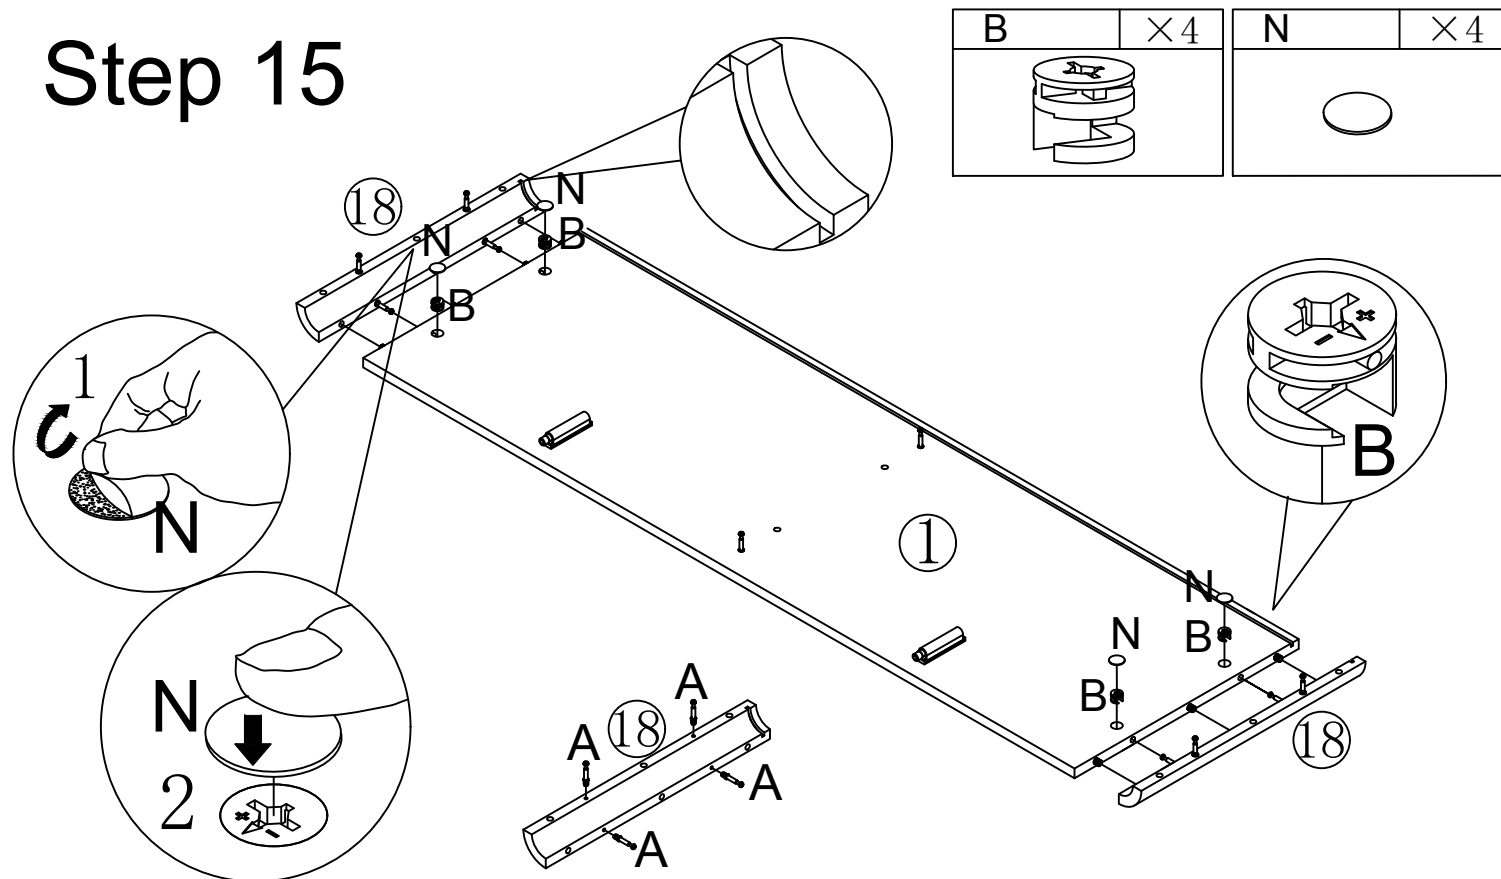








Step 16

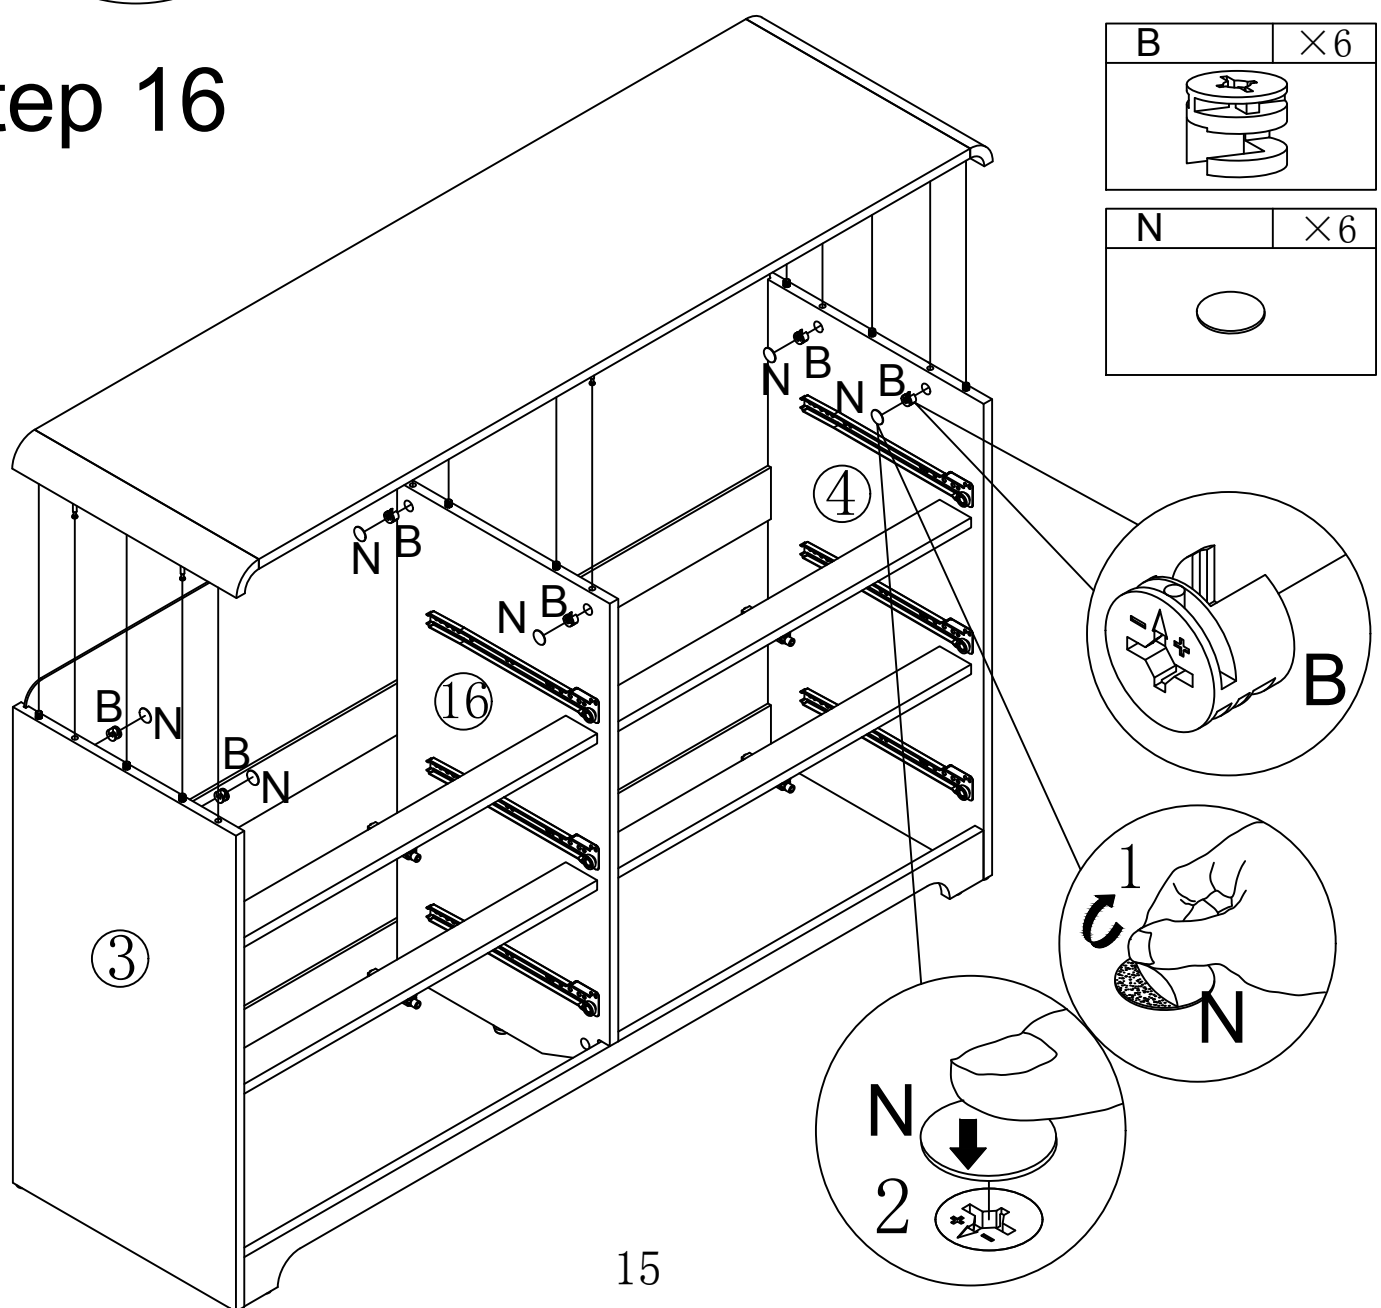




Step 17

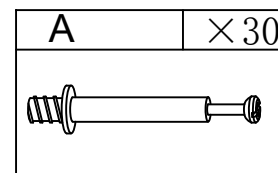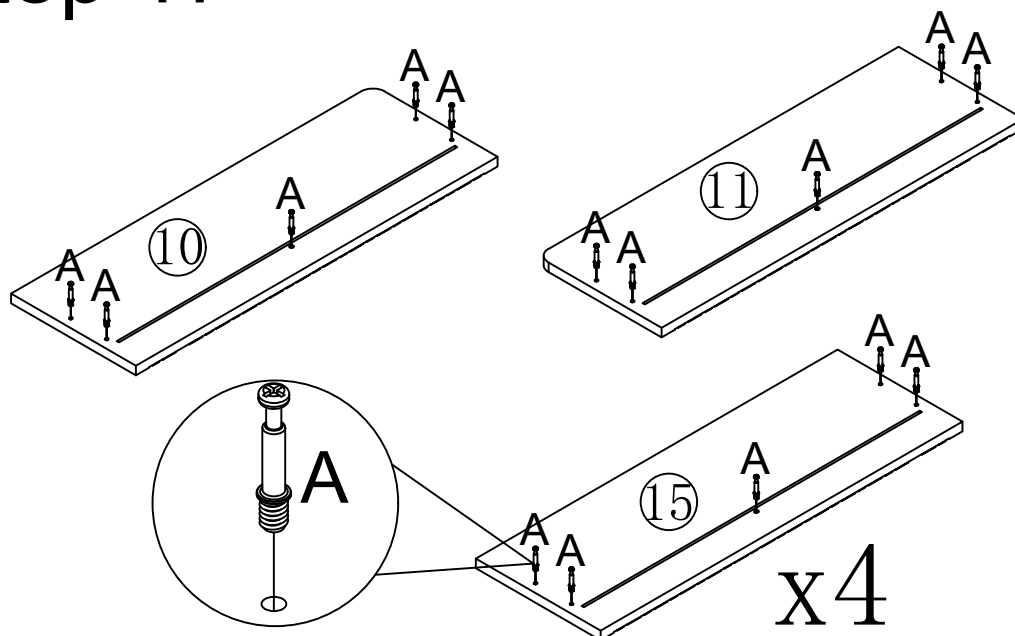





Step 18

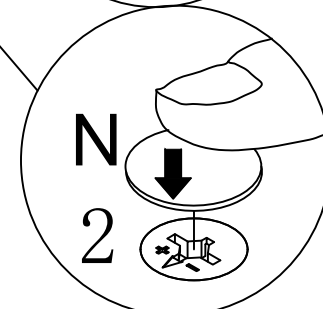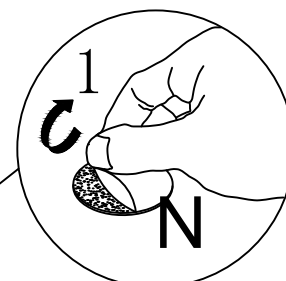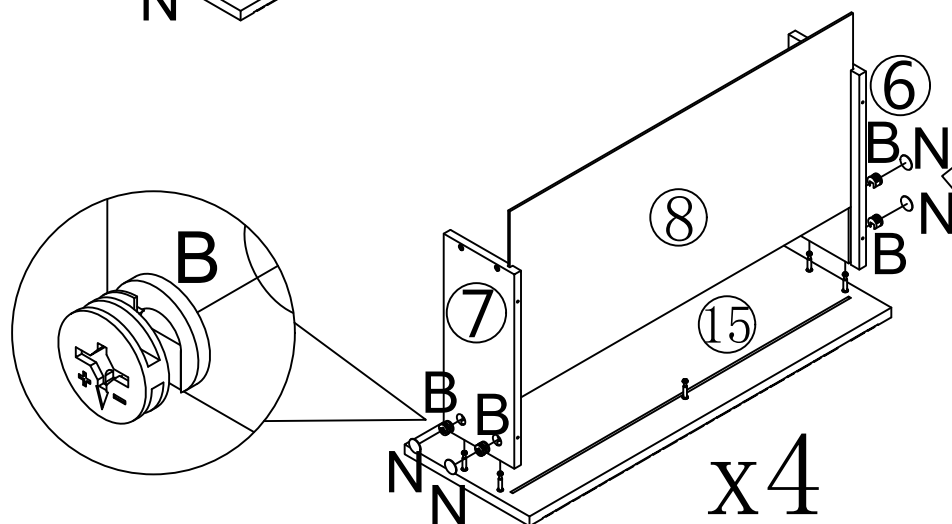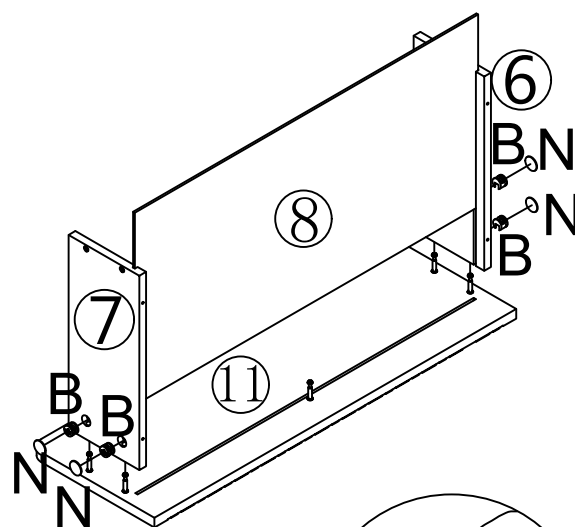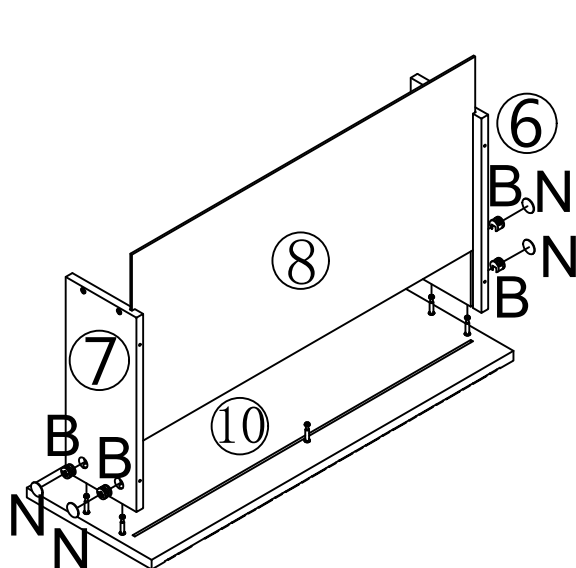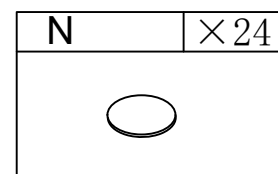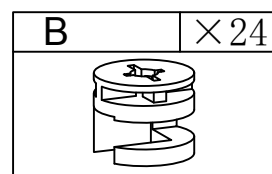

Step 19



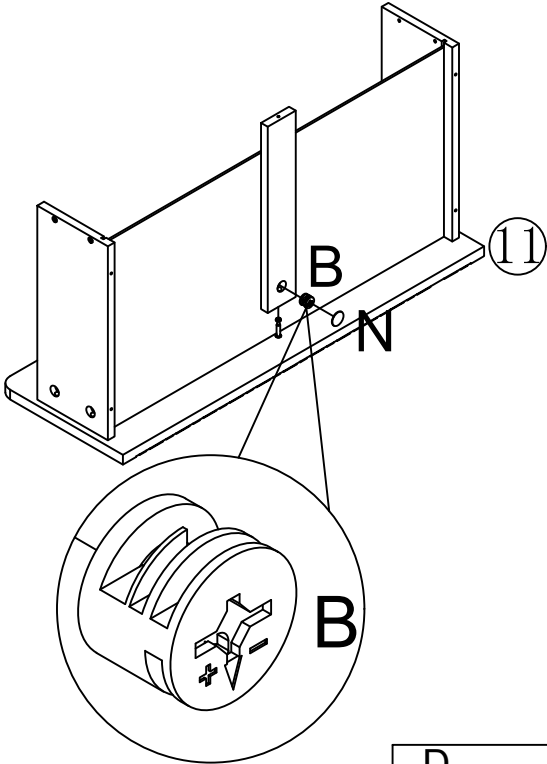
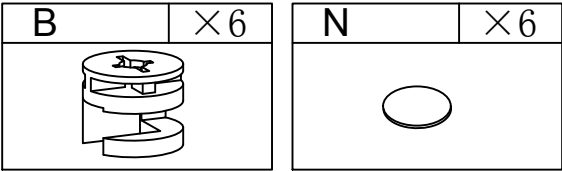
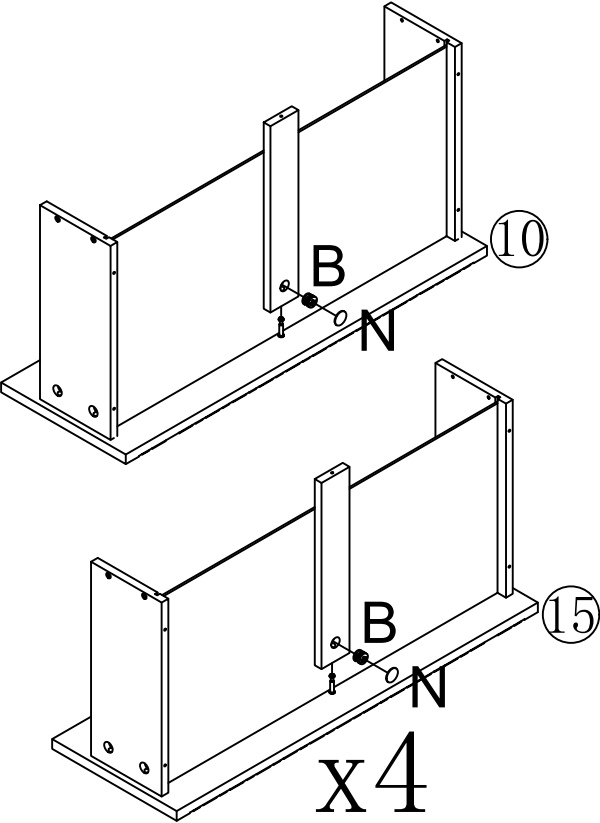


Step 20

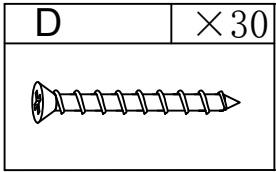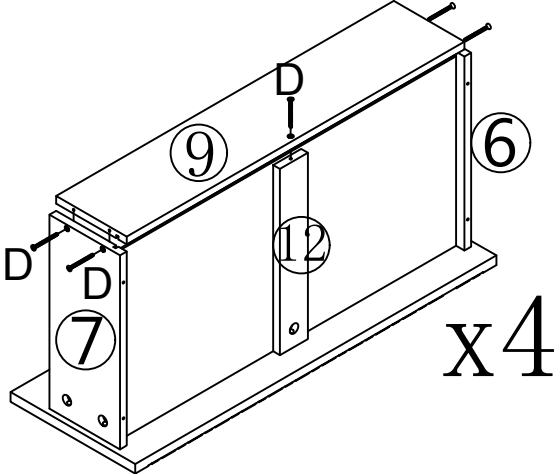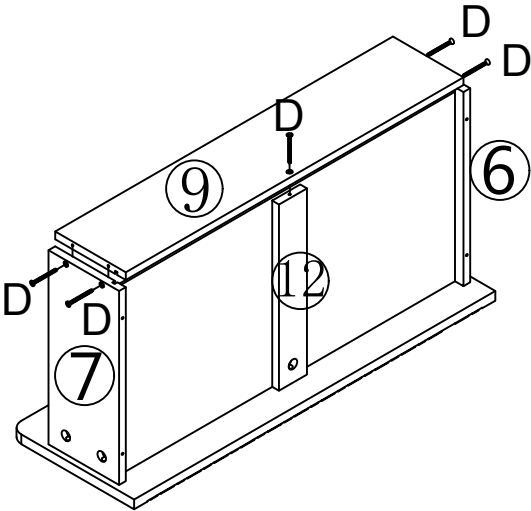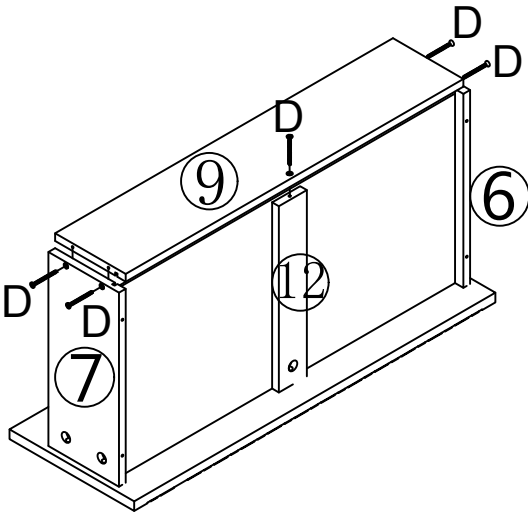


Step 21


DL	×6	DR	×6	H	×24

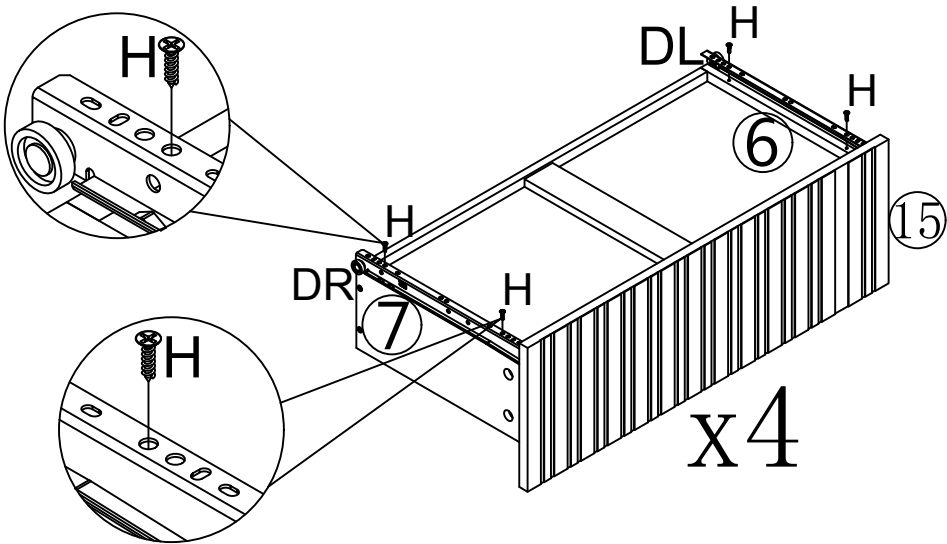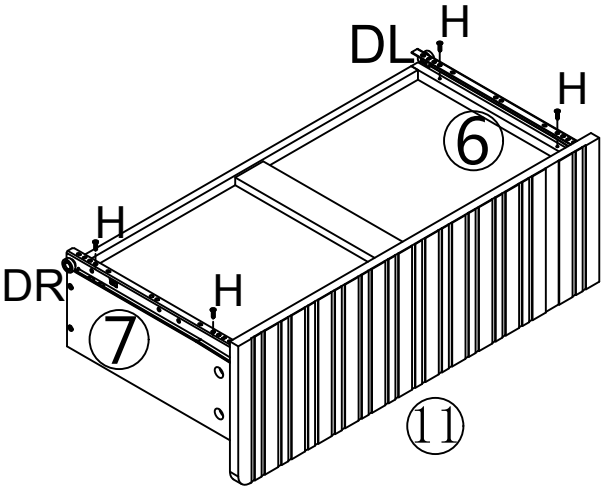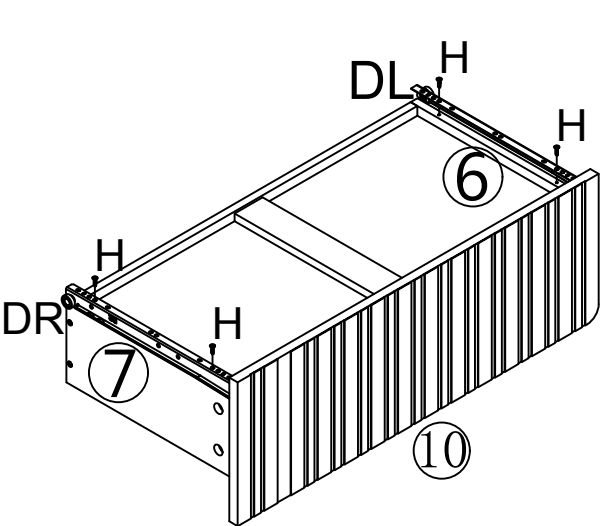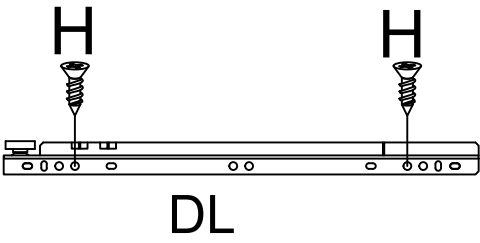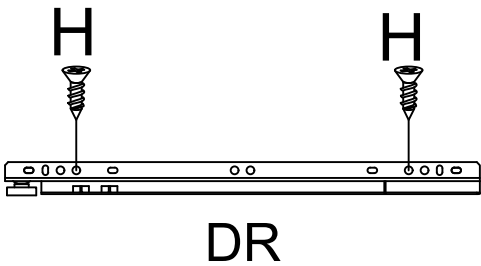


Step 22

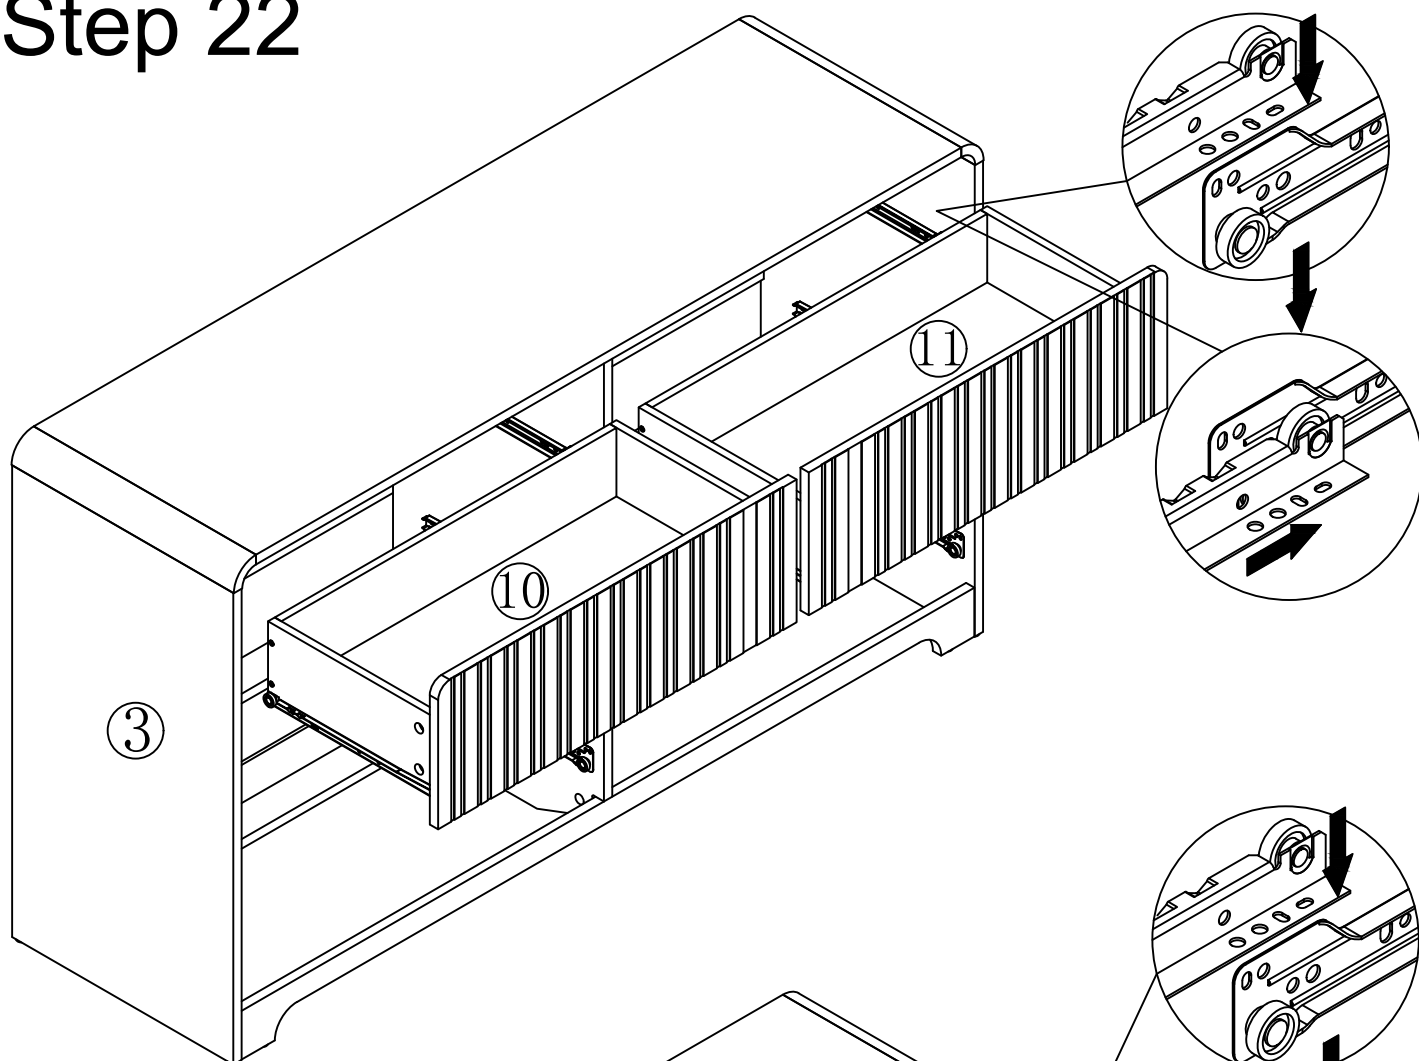


Step 23

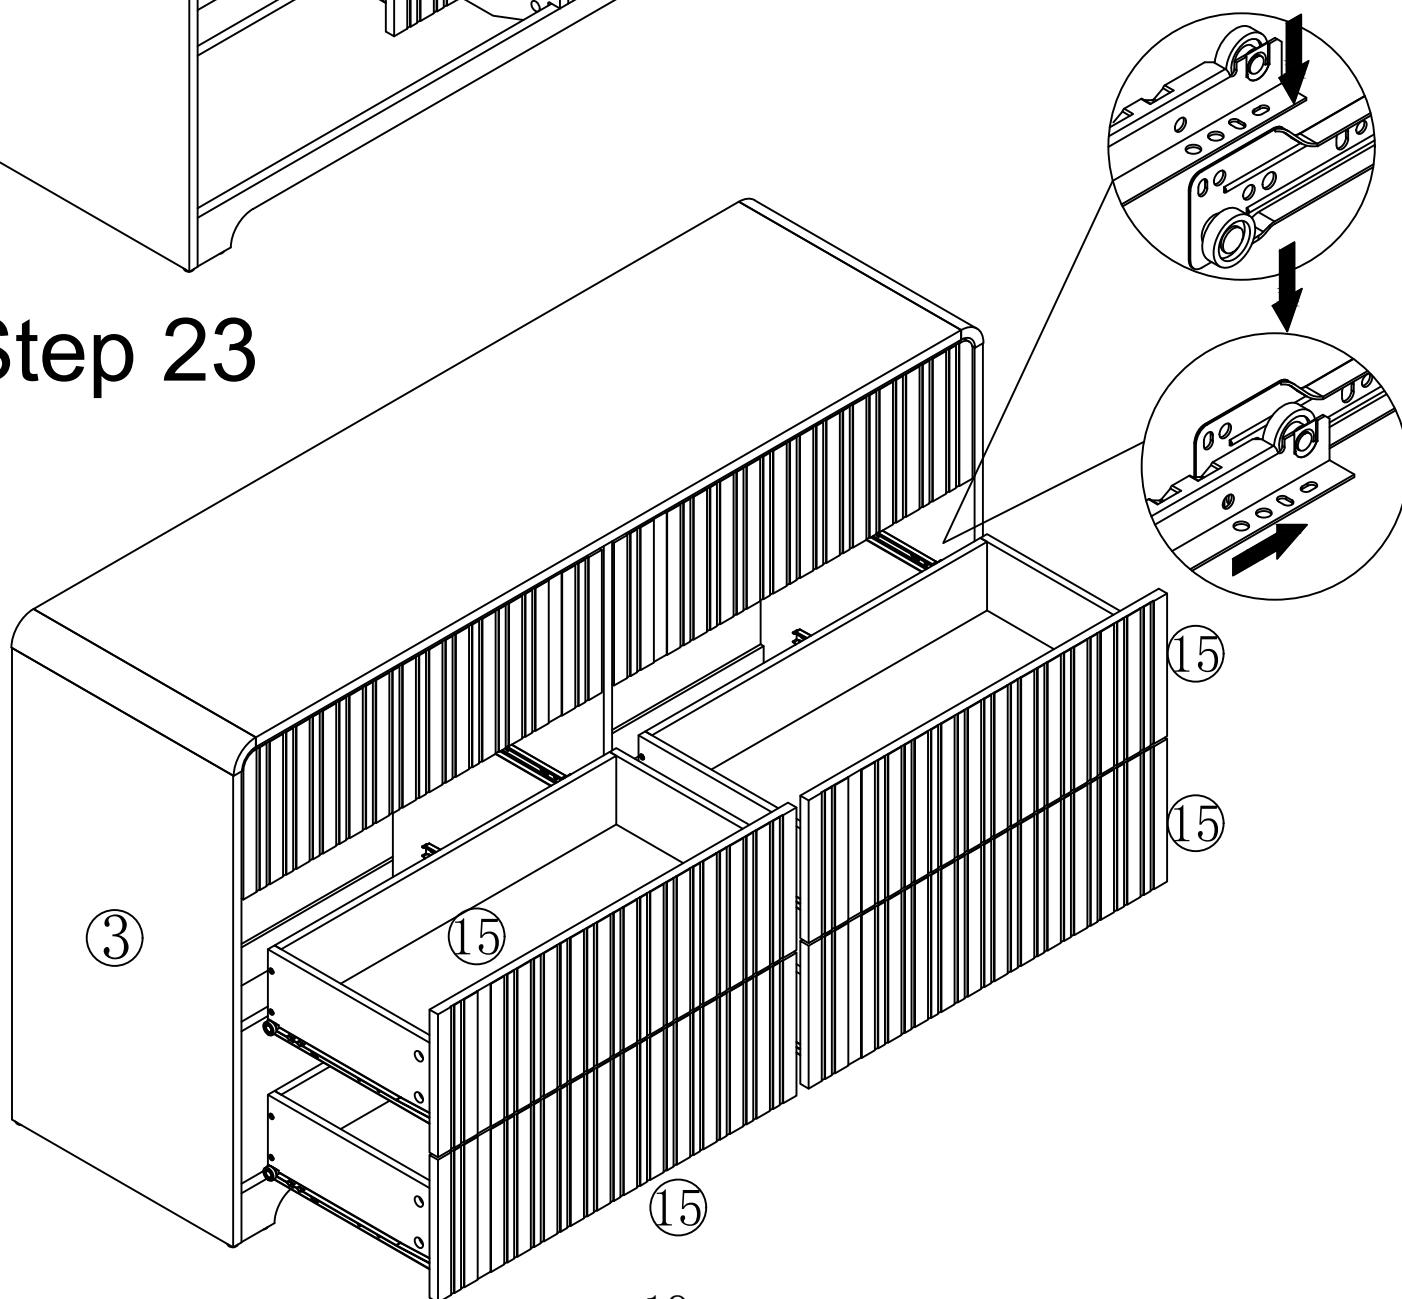




Step 24

H	×16	J	×16
			

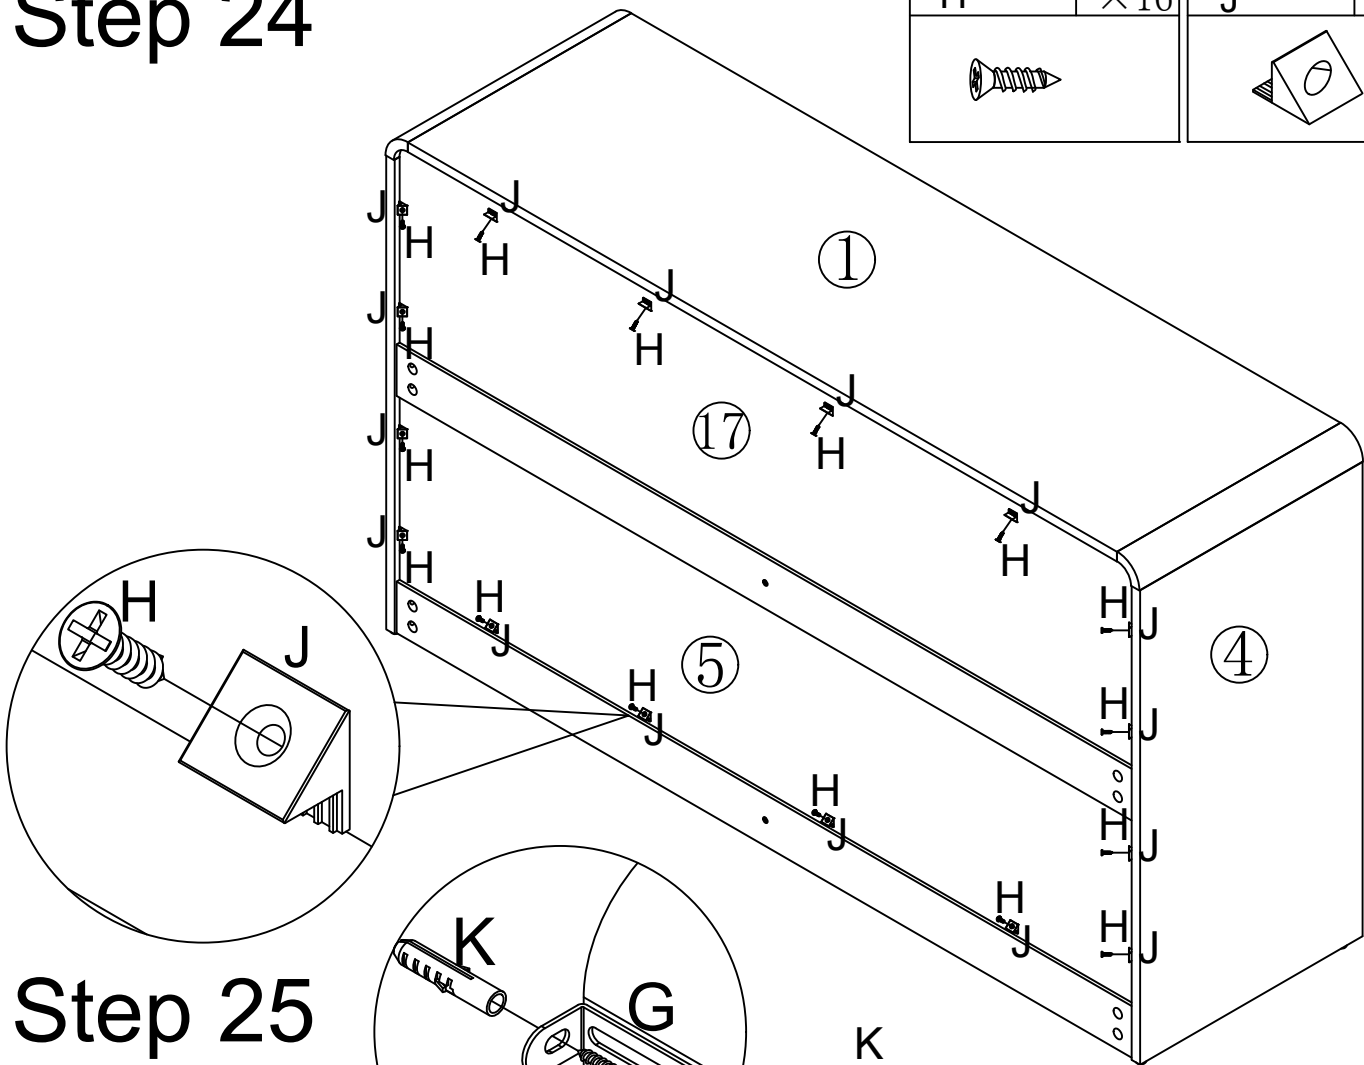


Step 25

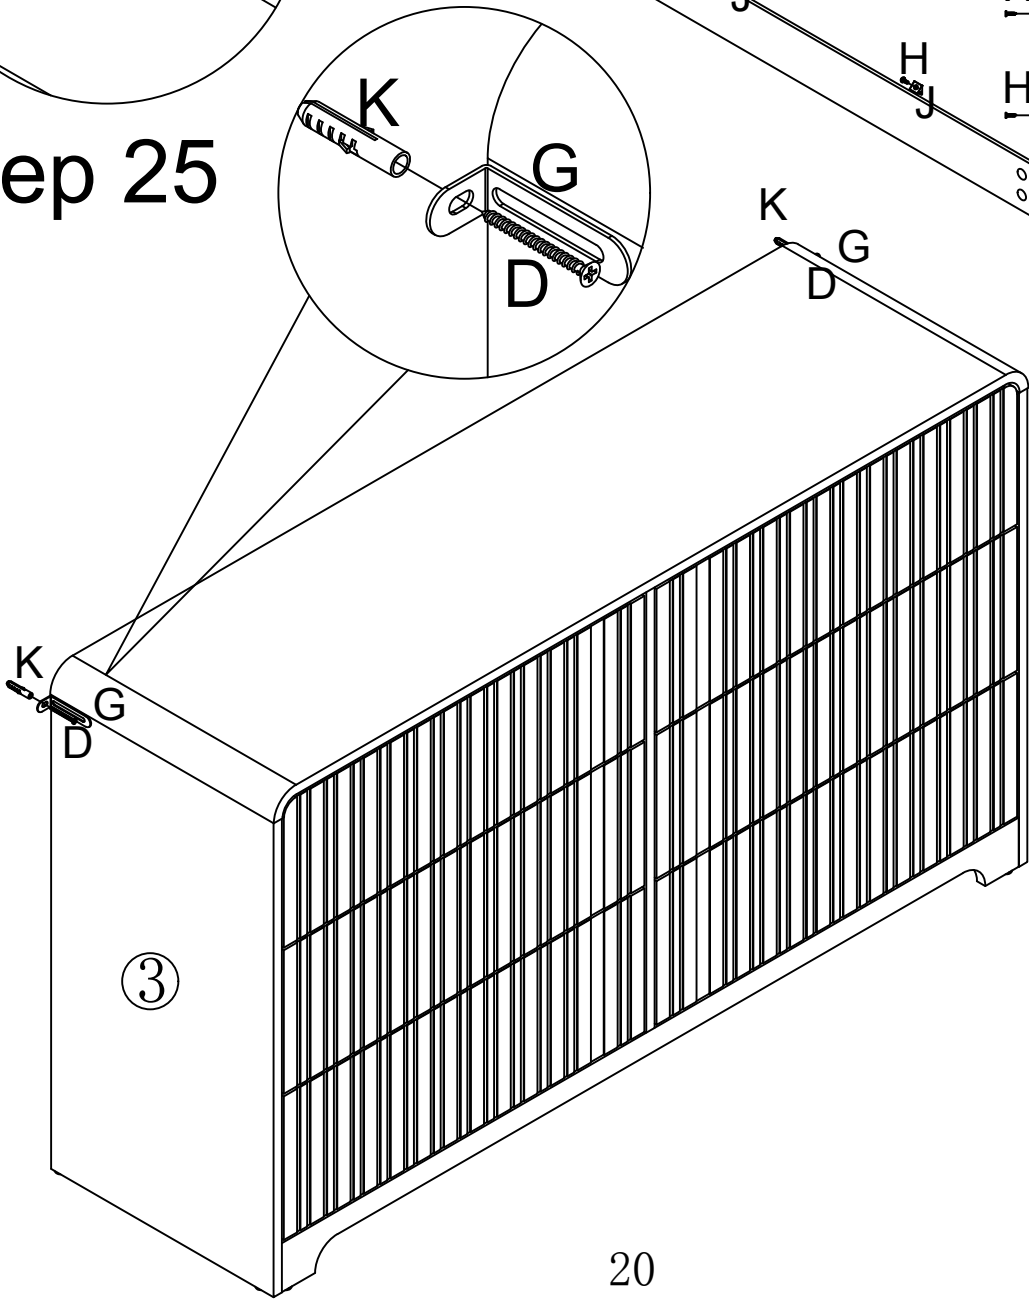


D	×2	G	×2	K	×2
					

Step 26

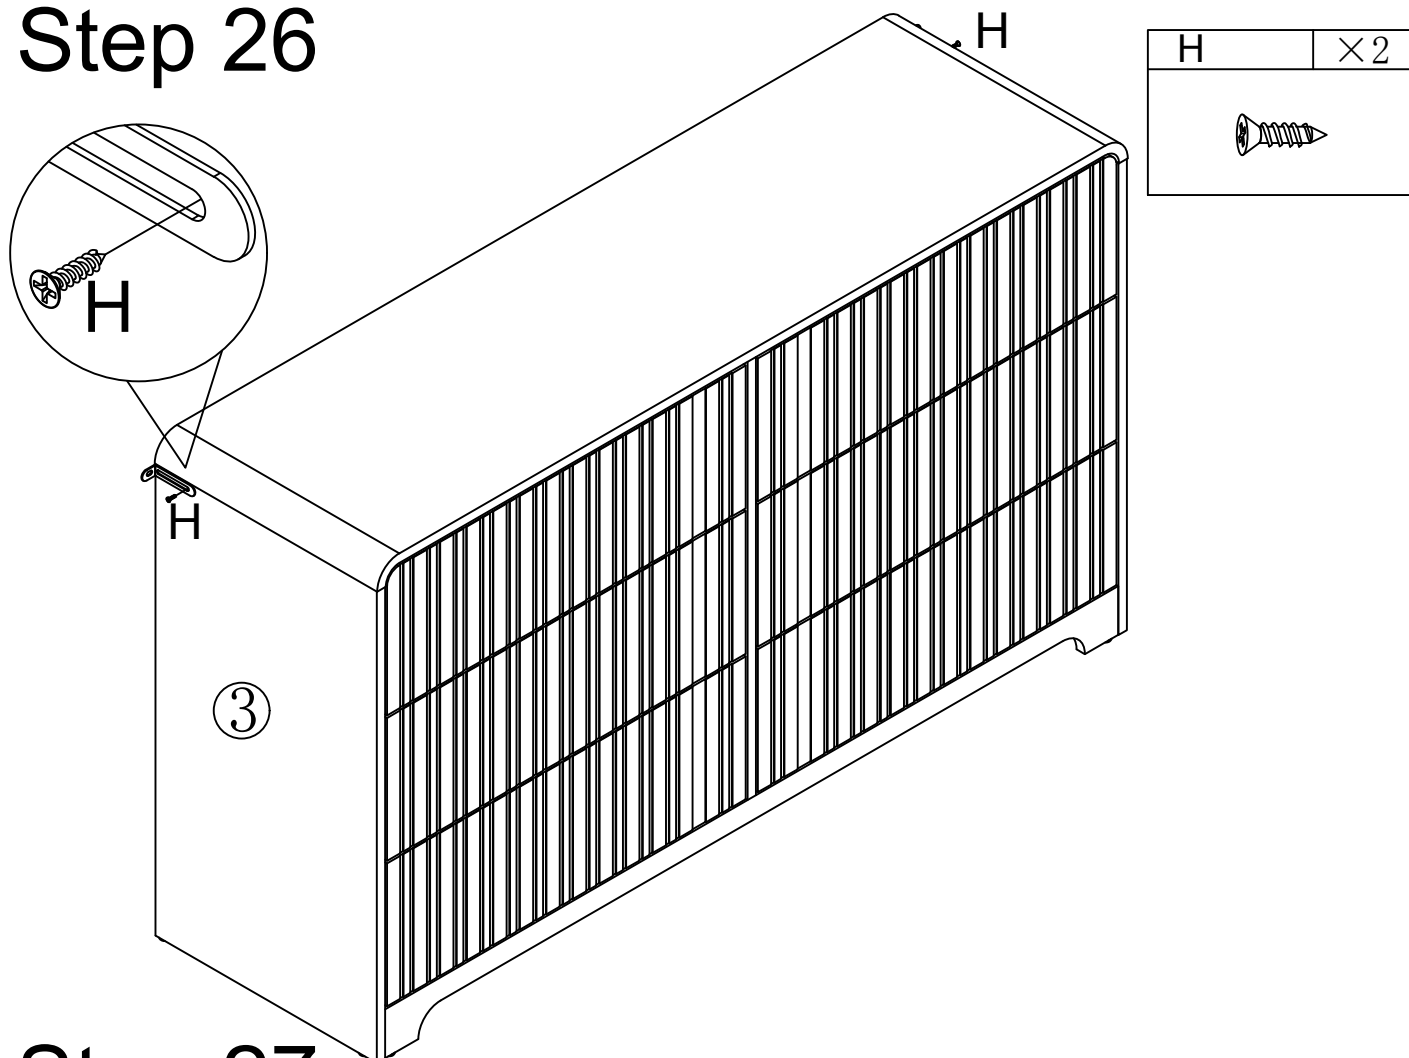

Step 27

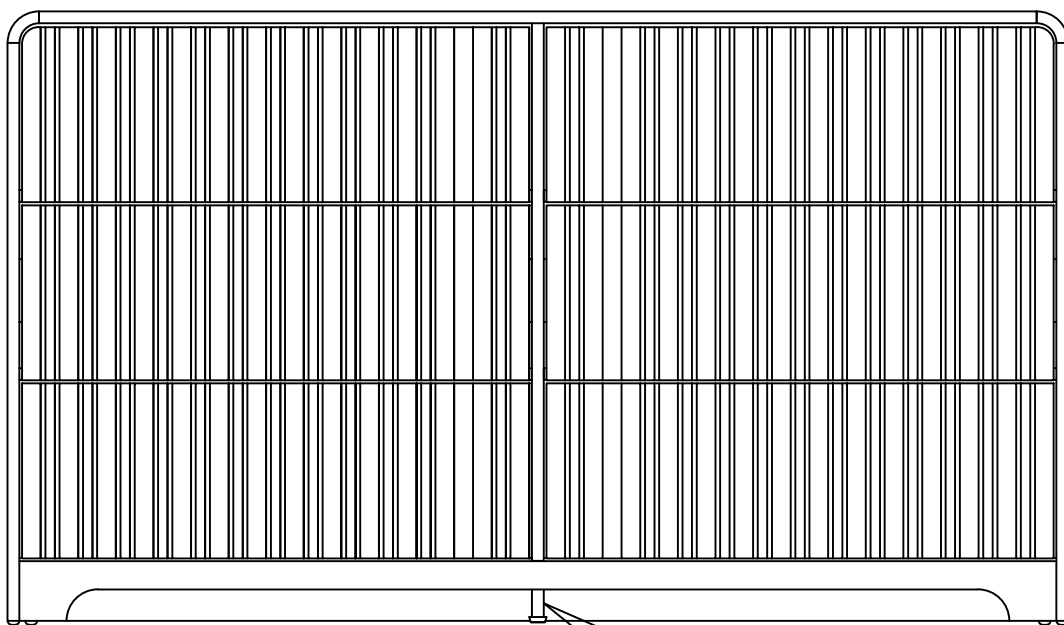

If the cabinet is not straight due to uneven bottom, adjust the plastic foot pads on board 16

