



Installation Instruction

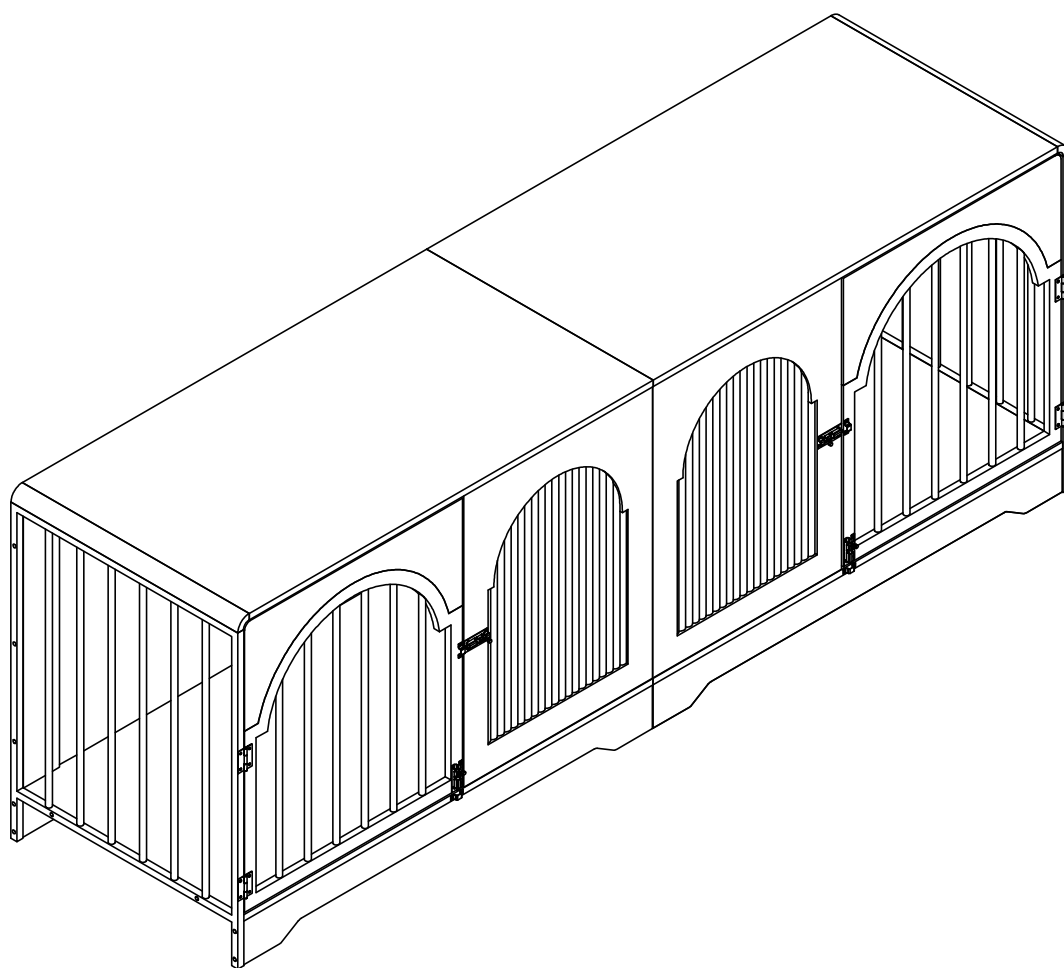


Assembling

What you need

- Use the packaging carton as a working surface to prevent product damage during assembly
- Phillips head screwdriver



Weight Limitation

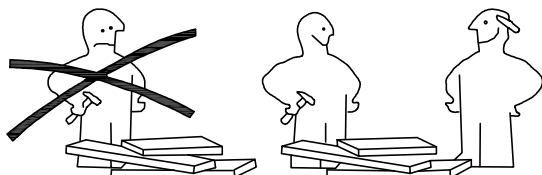


What' included

Code	Description	Qty
A	Cam Bolt M6X35MM	52
B	Cam Lock15X9MM	52
C	Wooden Dowel M8X30MM	48
D	Screw M4X40MM	14
E	Screw M7X50MM	18
F	Hole position sticker	52
G	The back button	8
H	Screw M6X24MM	12
I	Cross screw	2
J	Anchor	2
K	Screw M3.5X14MM	20
L	Wrench M4X90MM	1
M	Iron door lock	2
N	Iron guard plate	2
O	Hinge	4
P	Screw M3.5X14MM	14
Q	Cam Bolt M4X10MM	16
R	Nylon Strap	2
S	Phillips screwdriver	1
T	Reinforced iron sheet	2

The Hardwares


Ⓐ




Ⓑ



Ⓒ



Ⓓ




Ⓔ



Ⓕ



Ⓖ



Ⓗ



Ⓘ




Ⓙ




Ⓚ



Ⓛ



Ⓜ

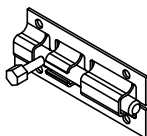

Ⓝ



Ⓞ




Ⓟ



Ⓠ




Ⓡ



Ⓢ



Ⓣ




IMPORTANT:

1. Do not tighten bolts / screws completely until all bolts / screws are lined up and inserted into holes.
2. Do not over tighten screws and bolts to avoid stripping
3. Please use hand tools to assemble this product, you can also use power tools (please use power tools carefully)

Included Accessories


Code	Description	Qty
1	Left panel	1
2	Right panel	1
3	Left base plate	1
4	Right base plate	1
5	Curved strip	2
6	Left Front support plate	1
7	Right Front support plate	1
8	Left back support plate	1
9	Right back support plate	1
10	Left Back support plate	1
11	Right Back support plate	1
12	Backboard	2
13	Support rods	2
14	Support rods	2
15	Left door	1
16	Right door	1
17	Iron frame	2
18	Middle iron frame	1

The Accessoriess

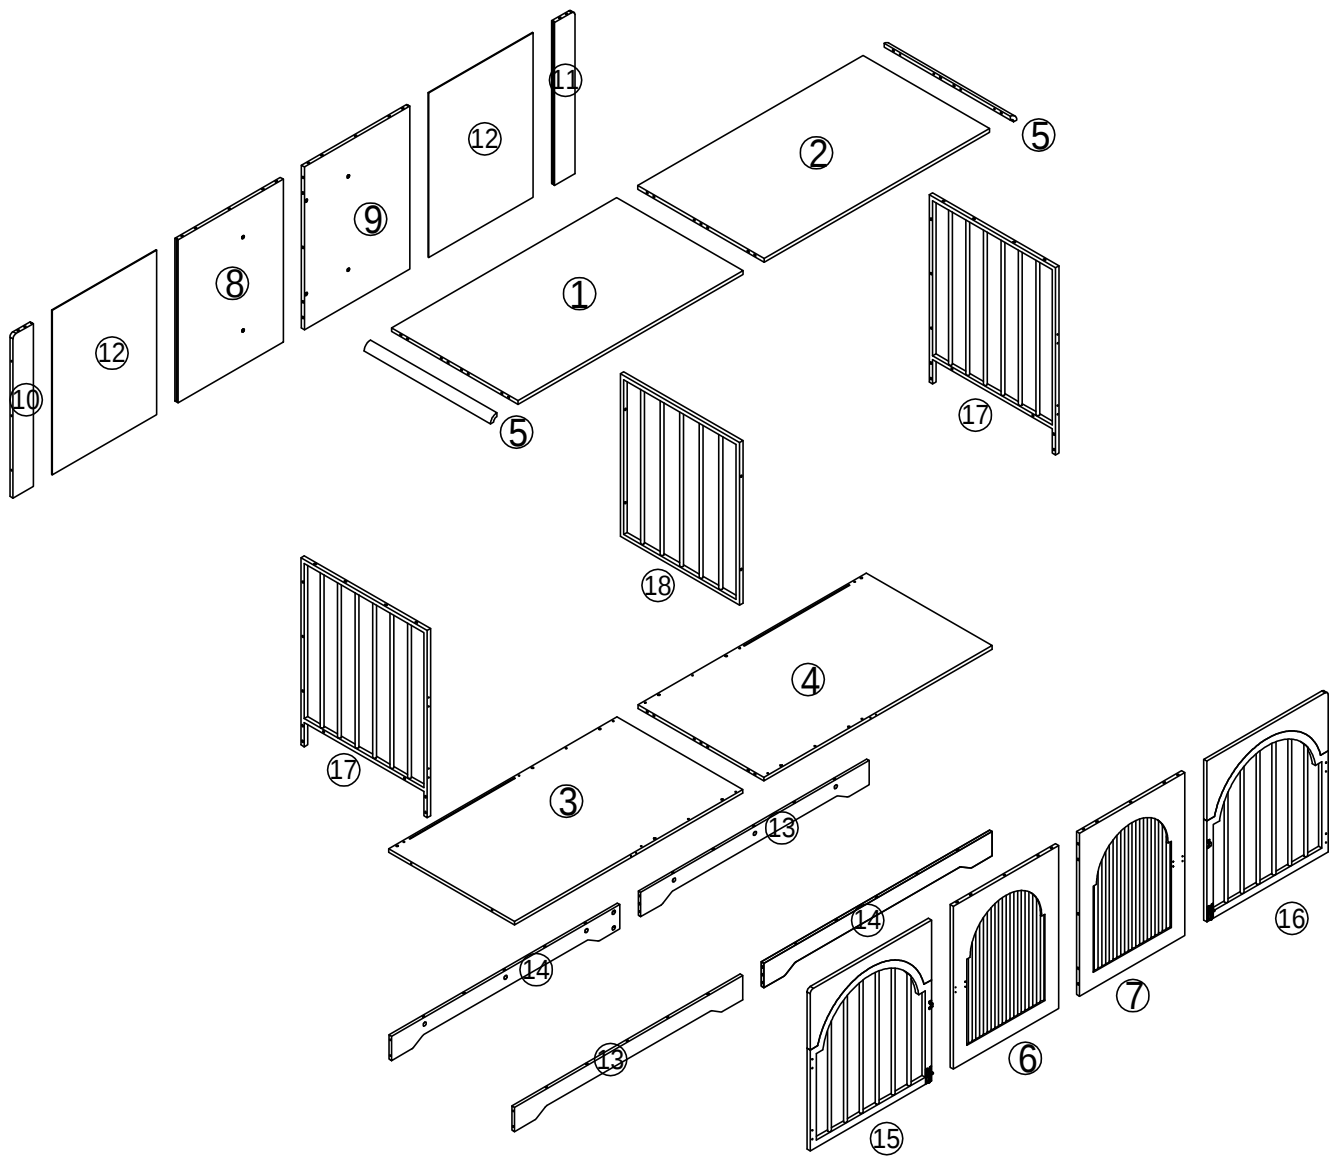


HARDWARE USAGE GUIDE

Hidden Cam Bolt/Cam Lock Usage Instructions

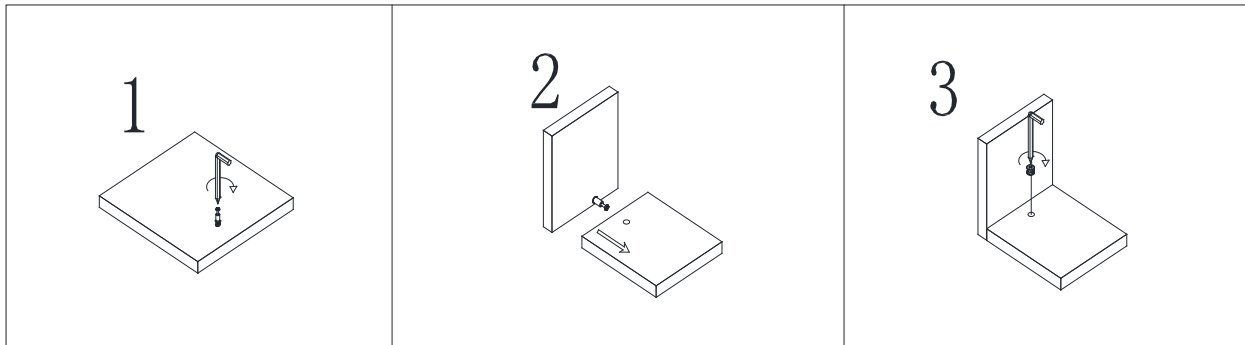


Step 1




Cam Bolt

Turn the Cam Bolt until the shoulder is firmly against the part.

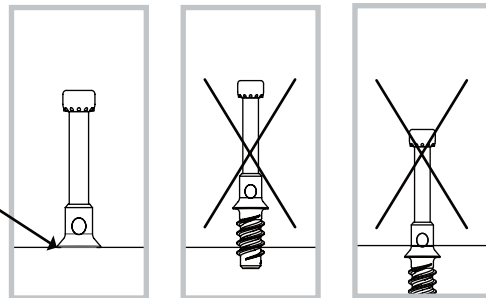


Step 2

Connect the two plates at 90 degrees.

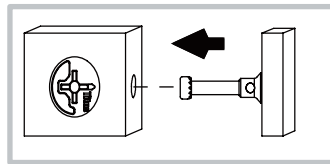


Step 3.1

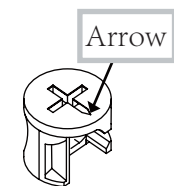


Cam Lock

Push the cam lock into the part. The arrow must point directly toward the hole on the board's edge (see diagram).

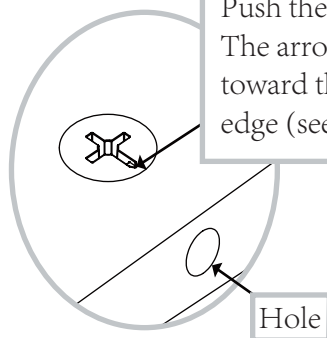


Step 3.2


Install the cam lock nut and fix it by rotation.

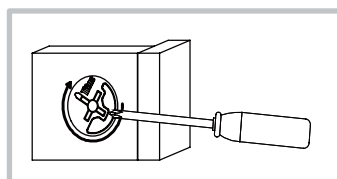


Step 1

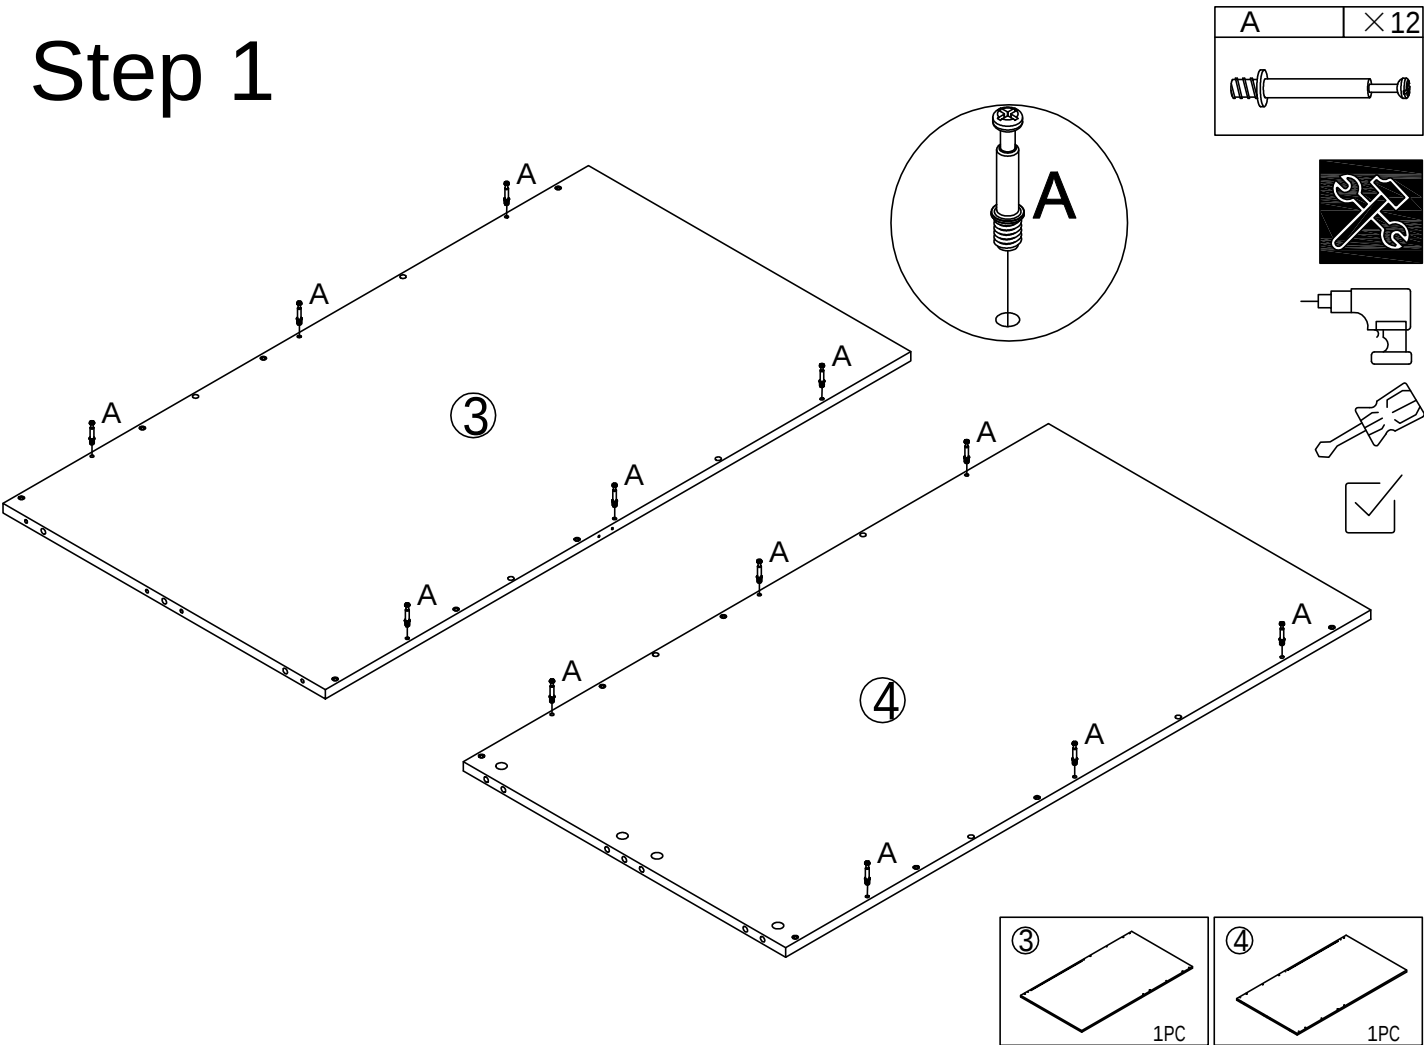


Step 2

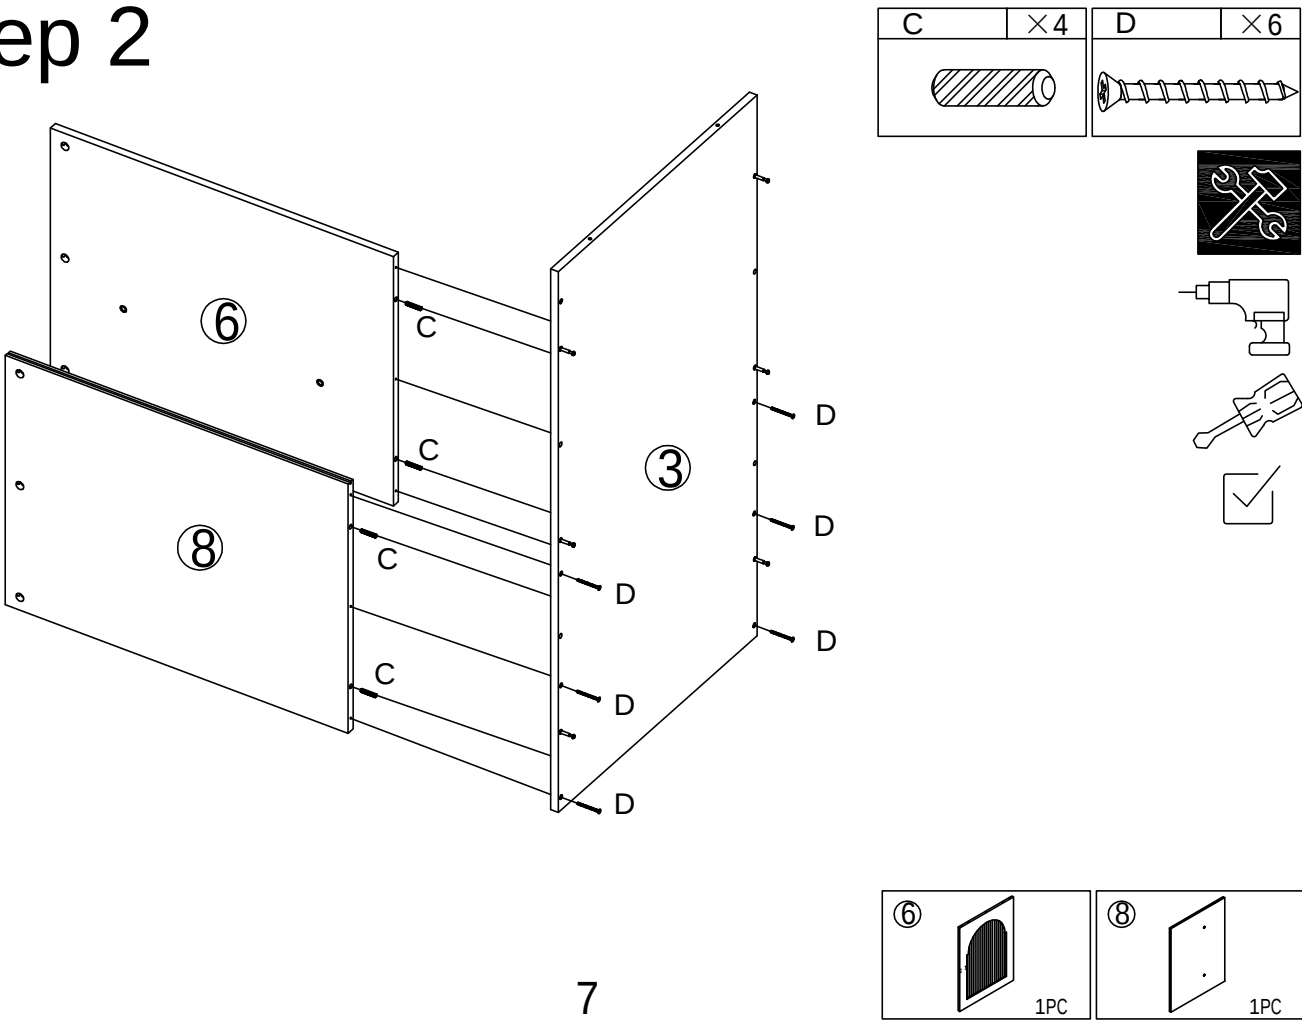


Step 3


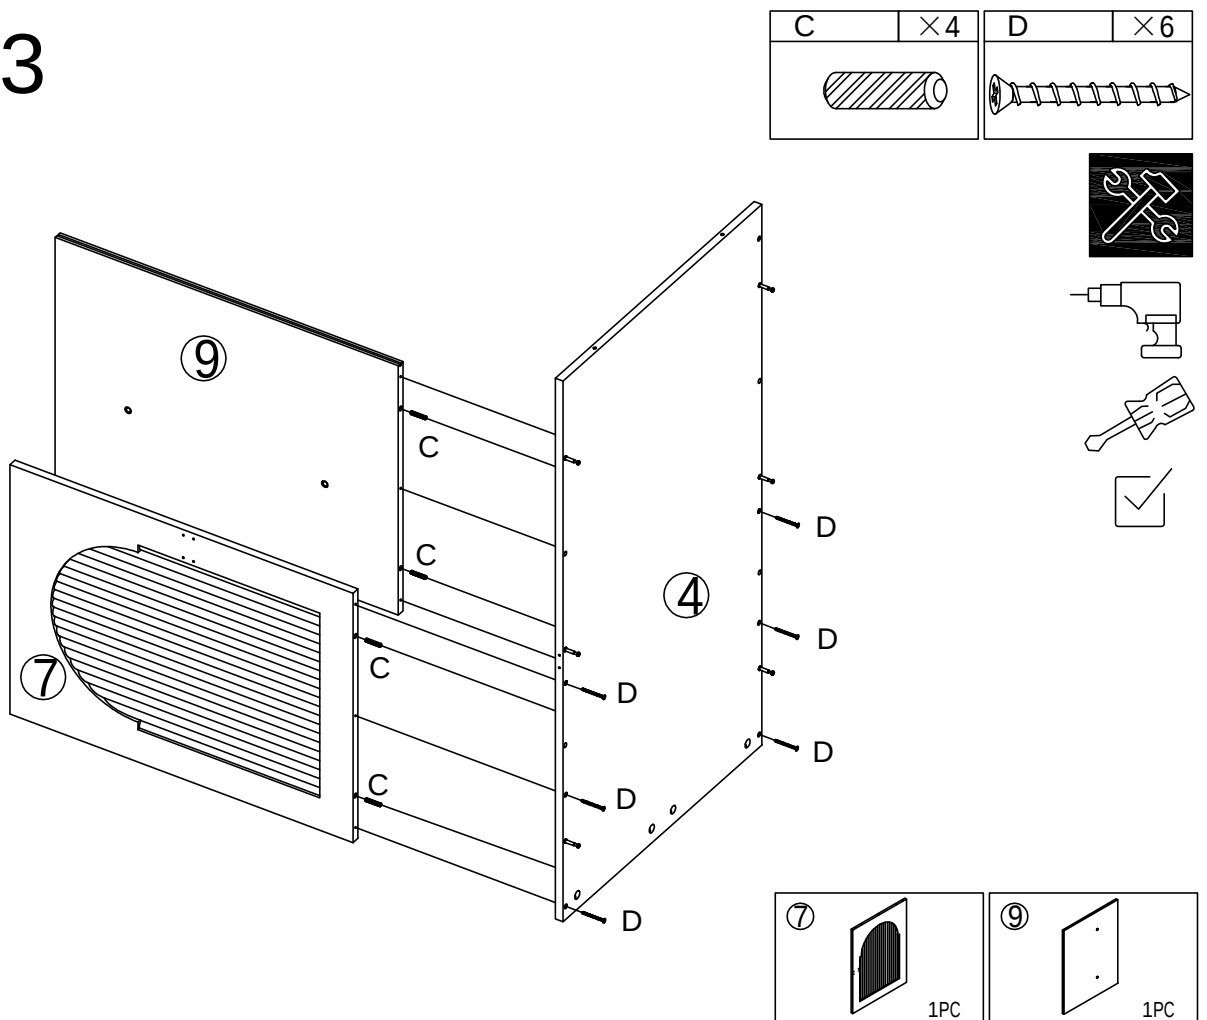




Step 4

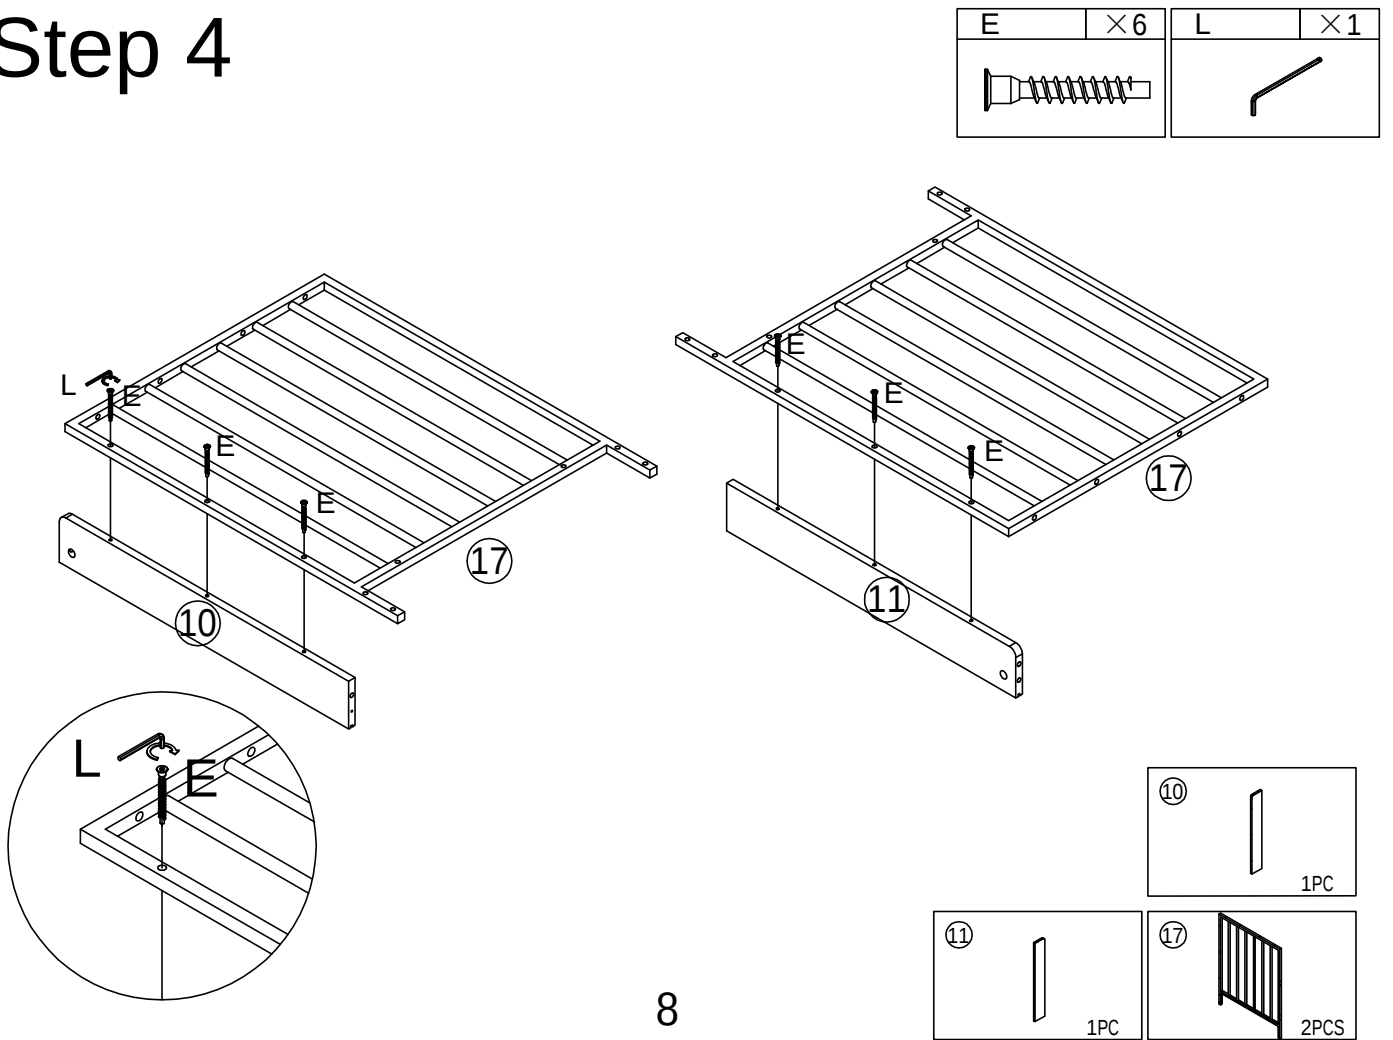


Step 5

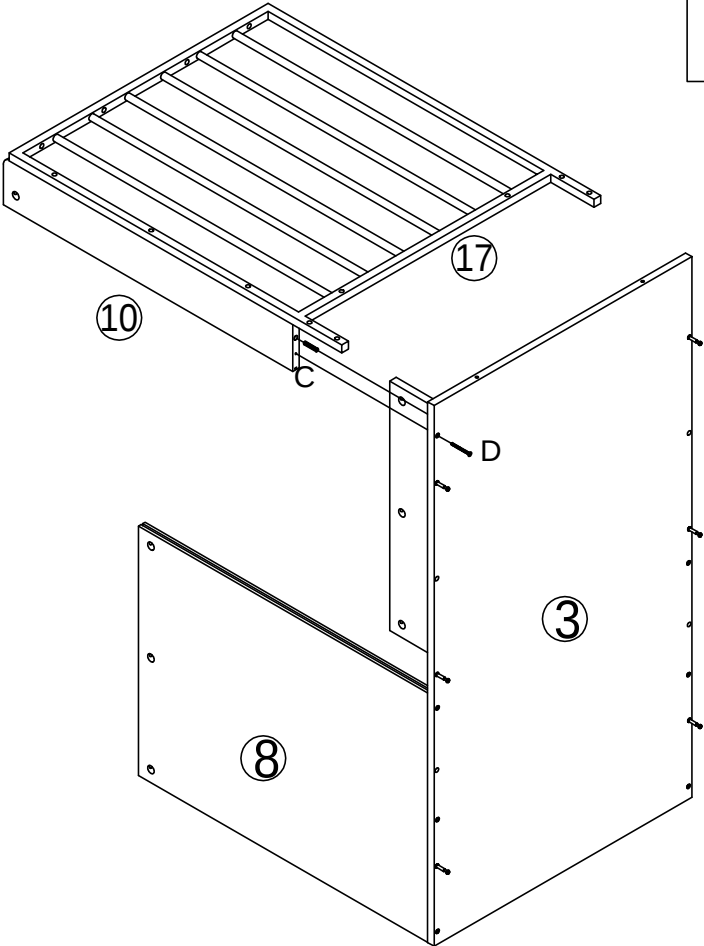



C	×1	D	×1
			





Step 6

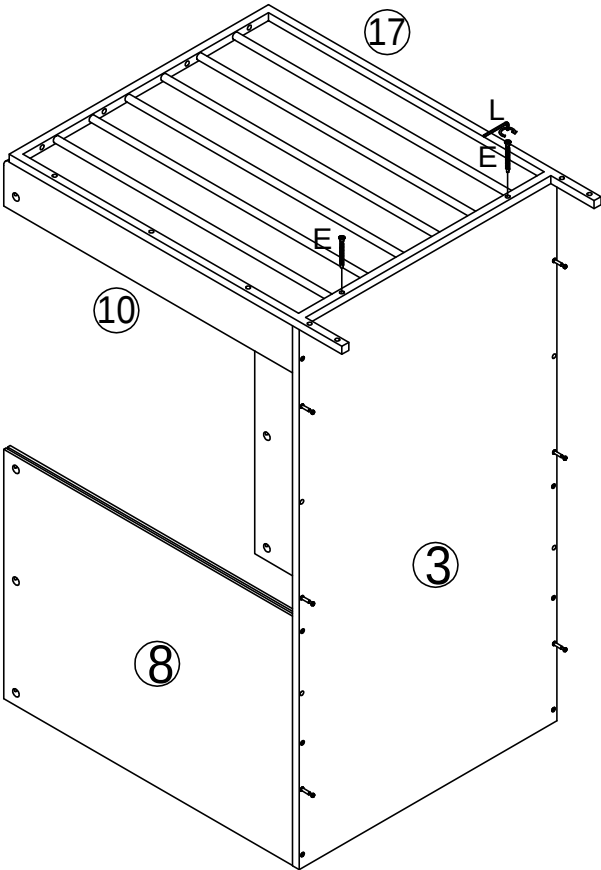



E	×2	L	×1
			

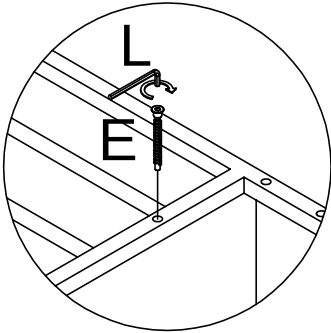



Step 7

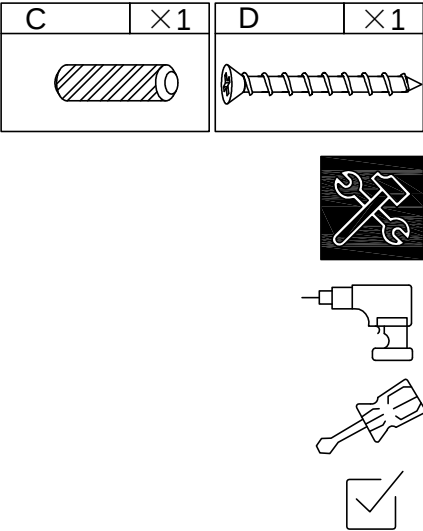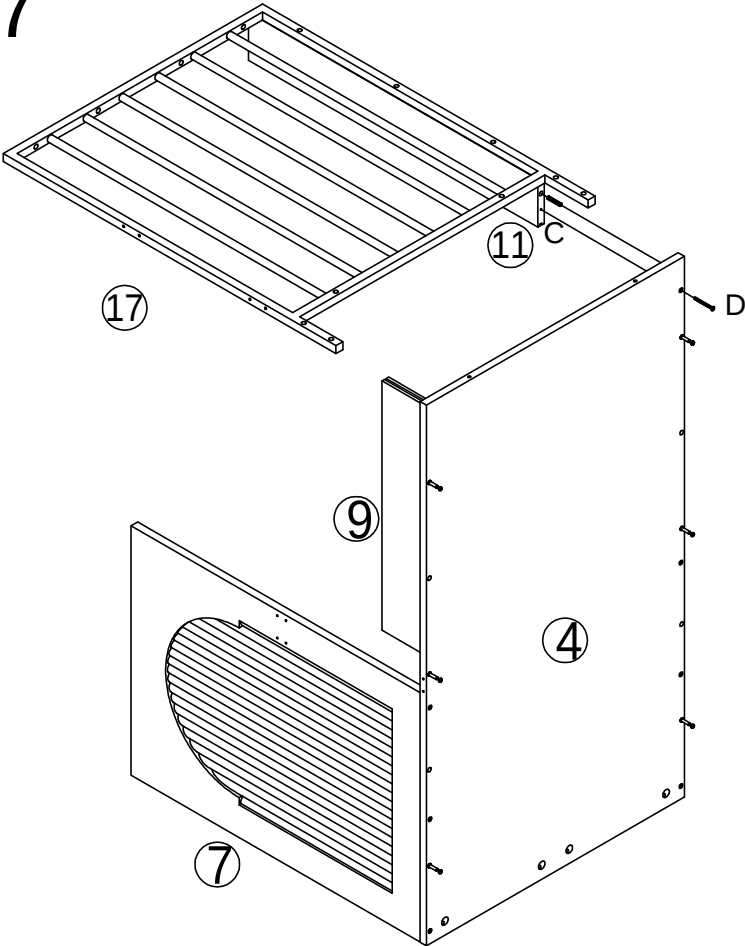



Step 8

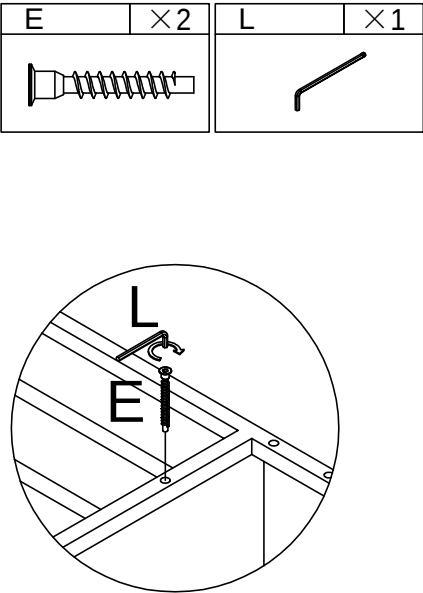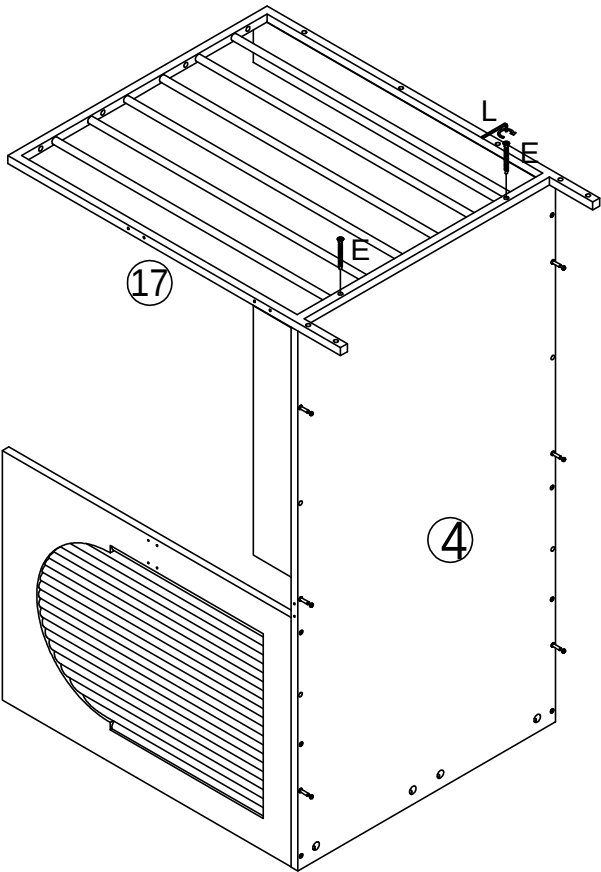



Step 9

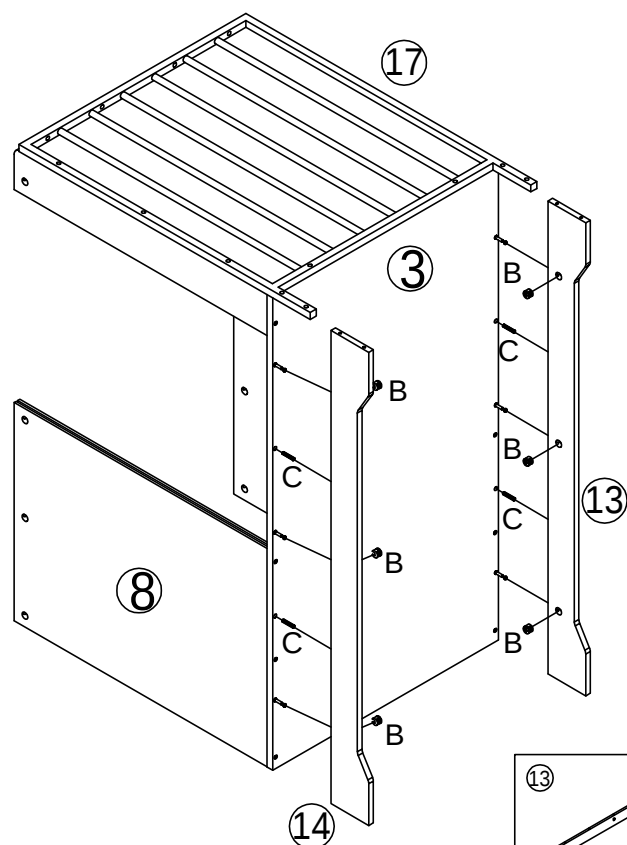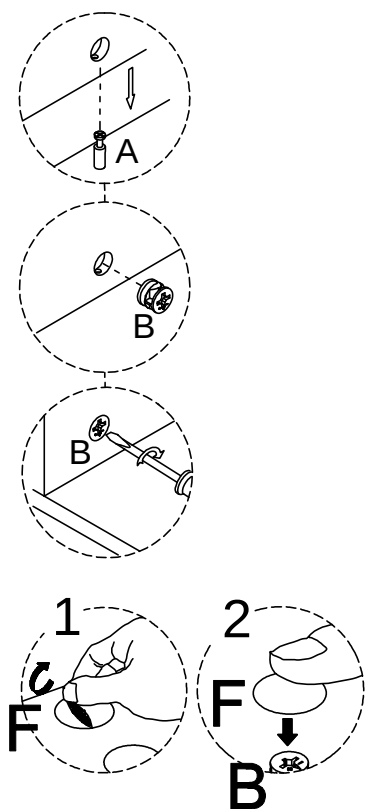



B	× 6
	
C	× 4
	
F	× 6
	

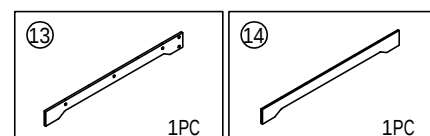


Step 10

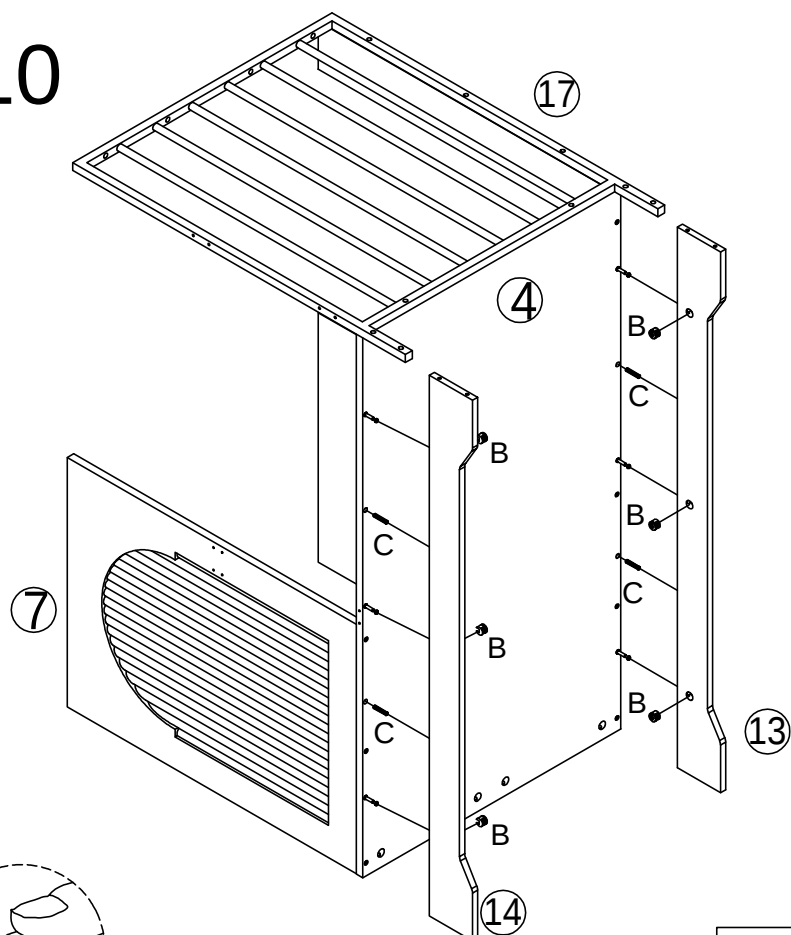
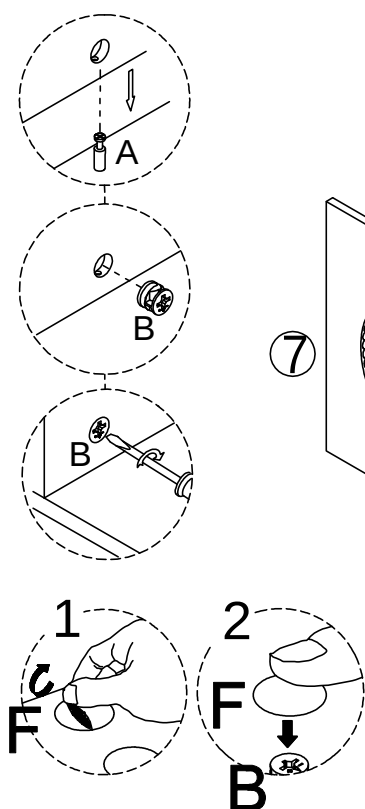


B	× 6
	
C	× 4
	
F	× 6
	

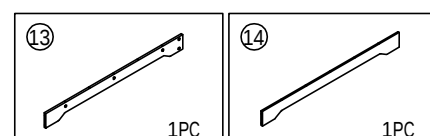




Step 11

E	×4	L	×1
			

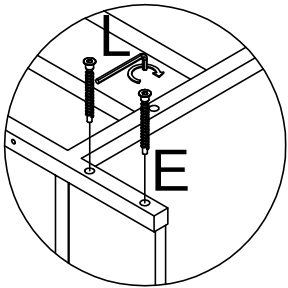
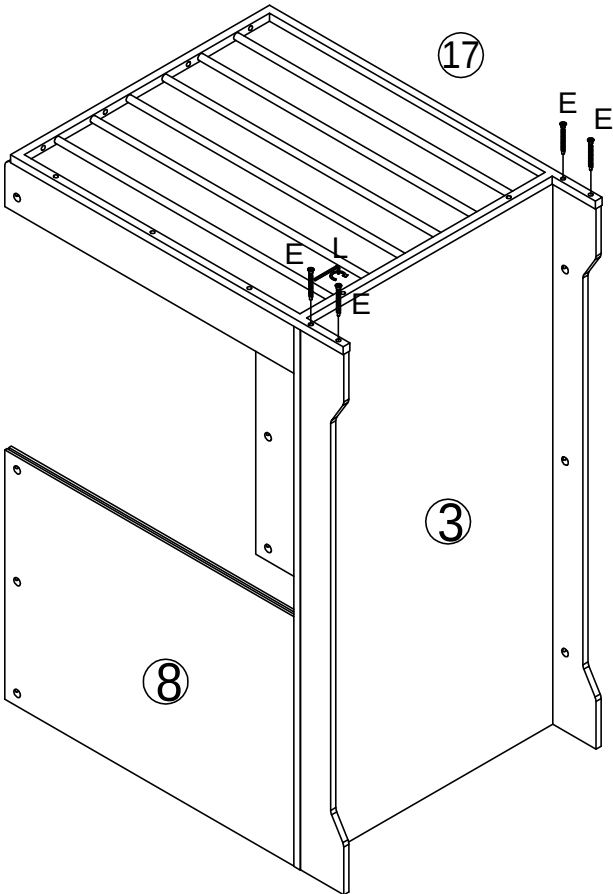





Step 12

E	×4	L	×1
			

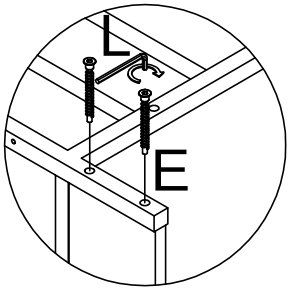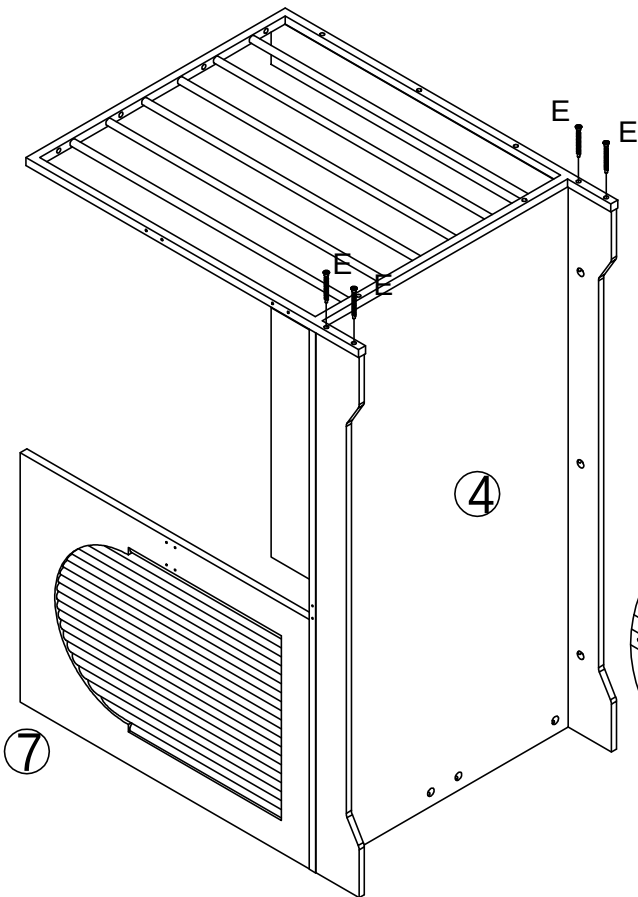





Step 13

A	×12	C	×9
			




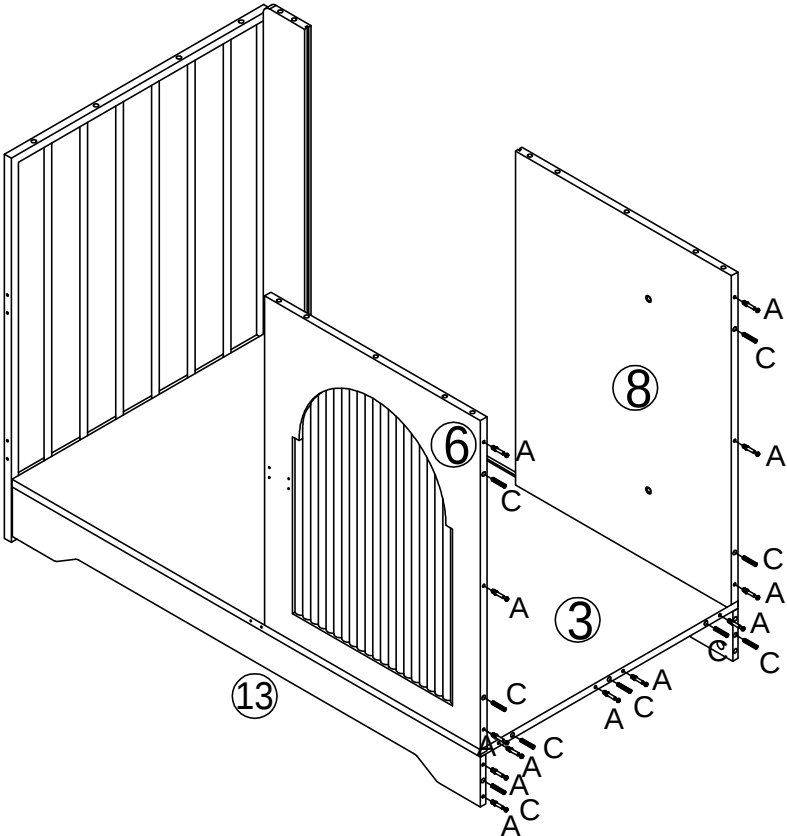


Step 14



A	×2
	

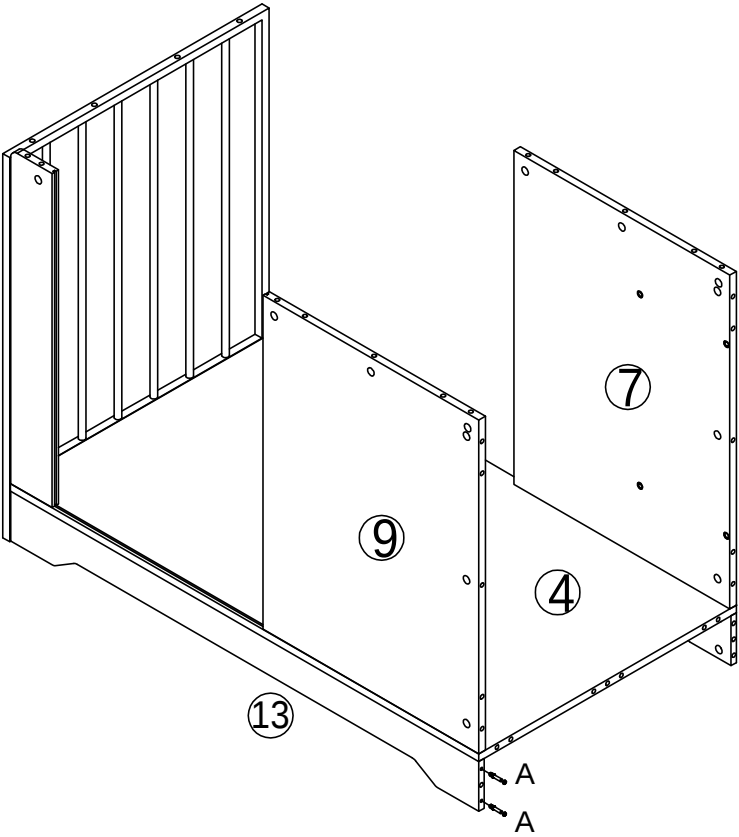


Step 15

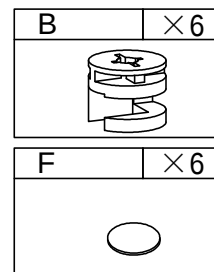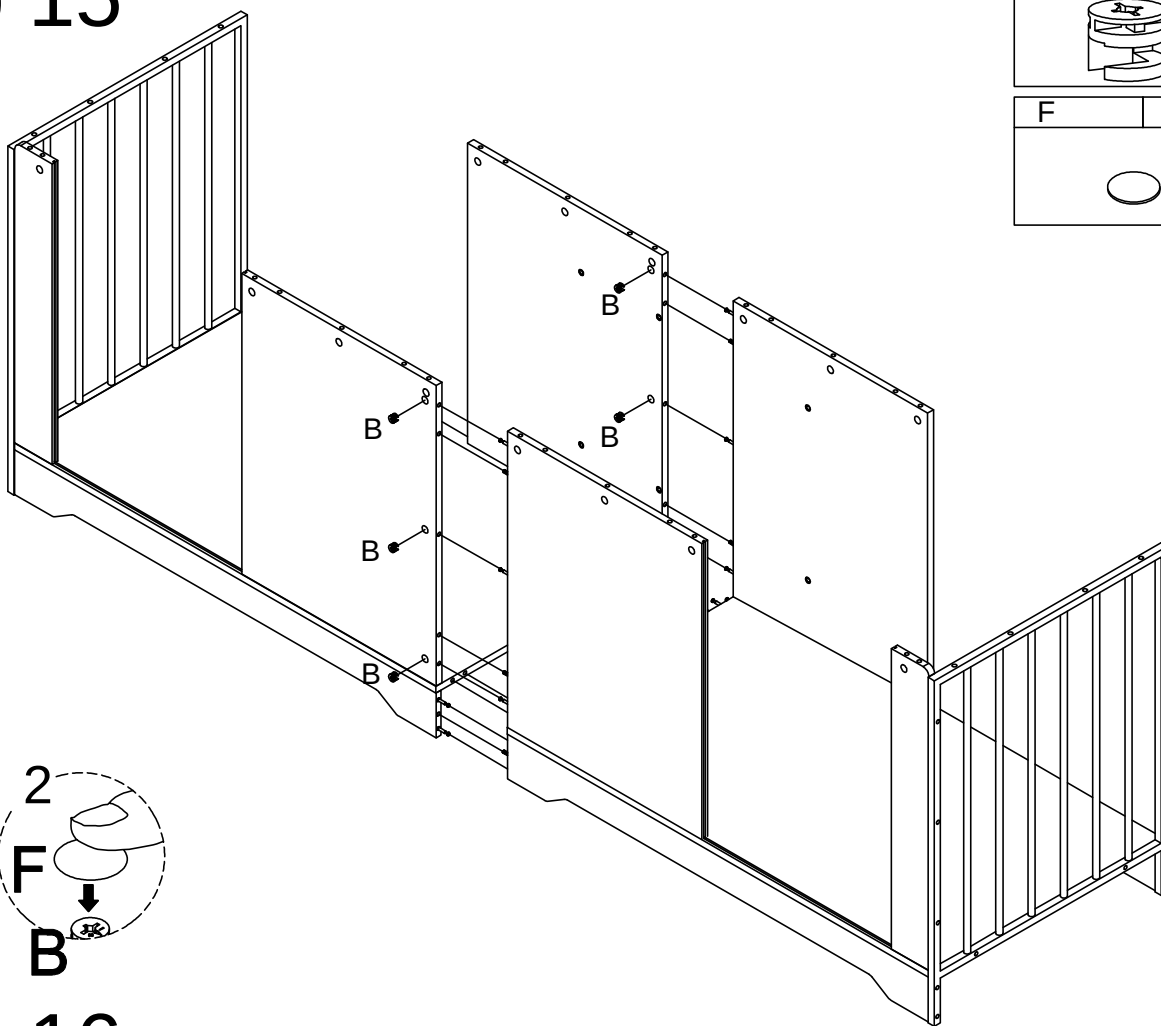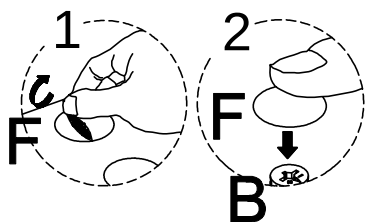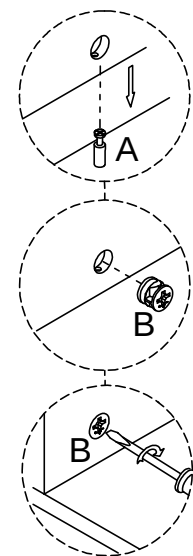


Step 16

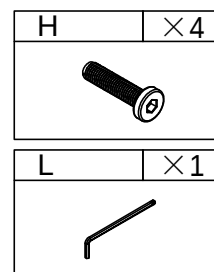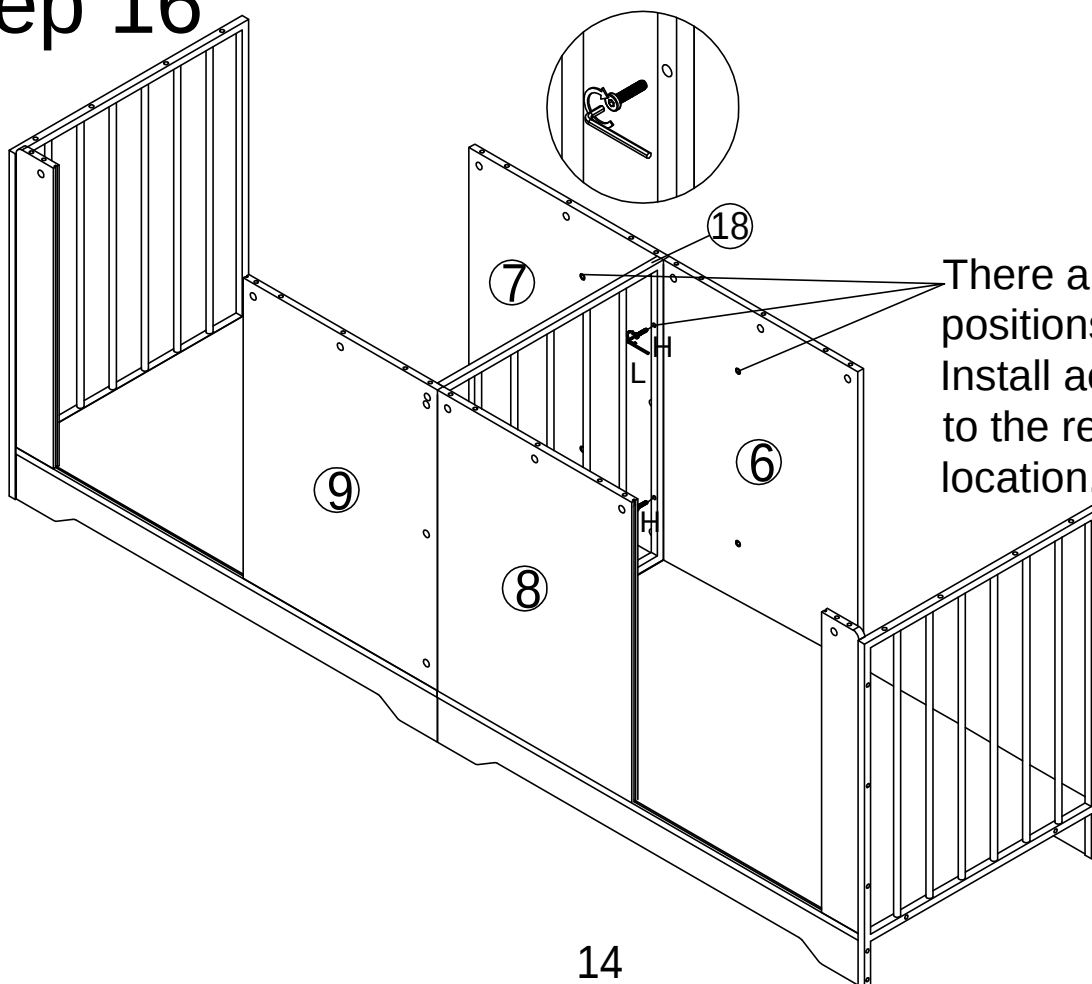


There are three positions here. Install according to the required location.

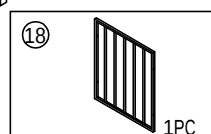


Step 17

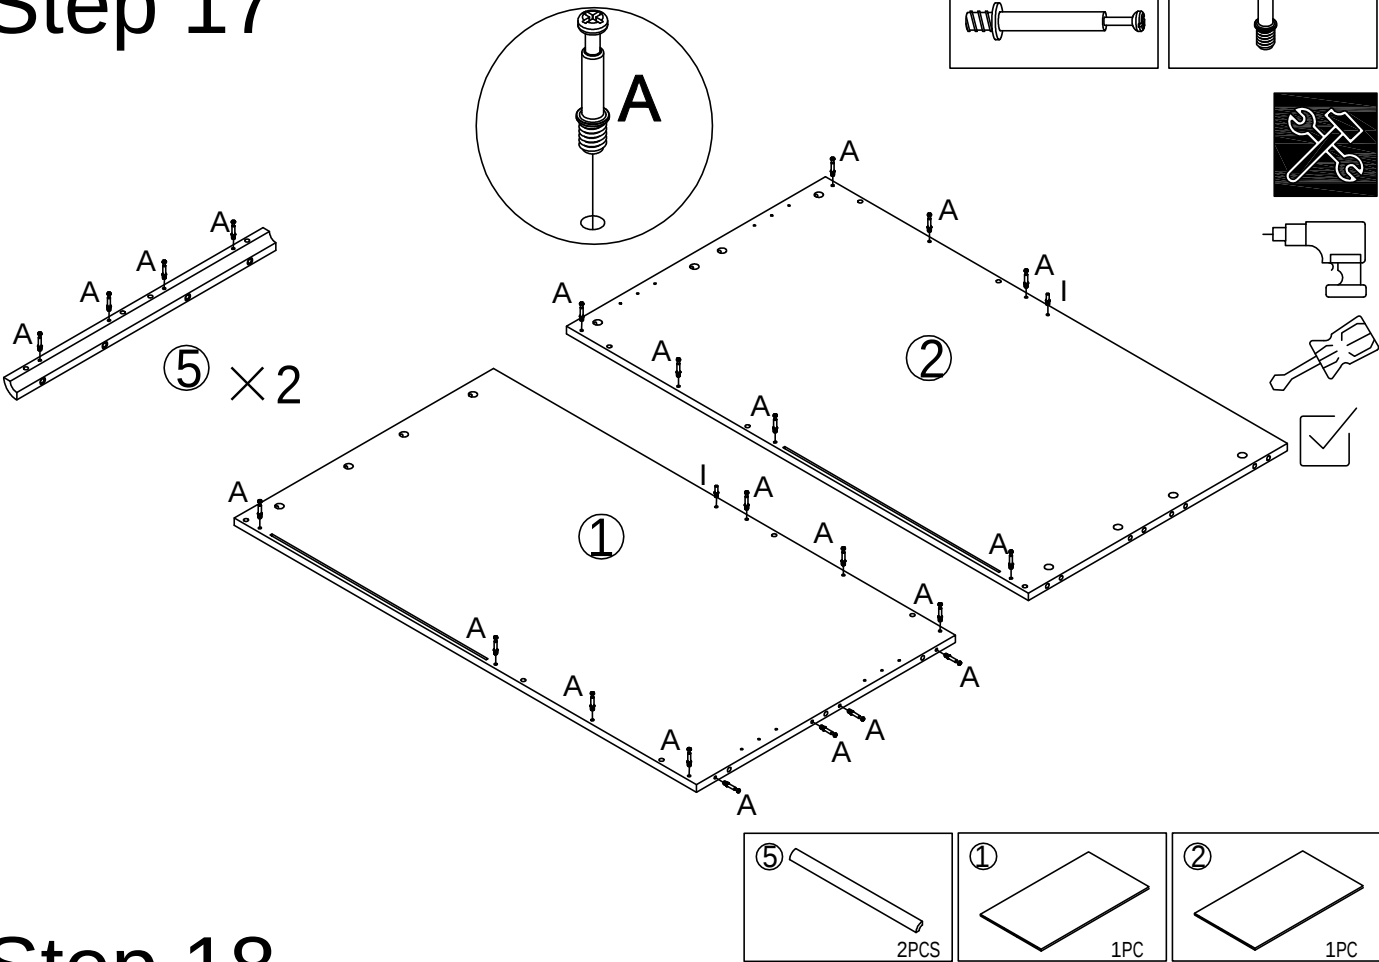


Step 18

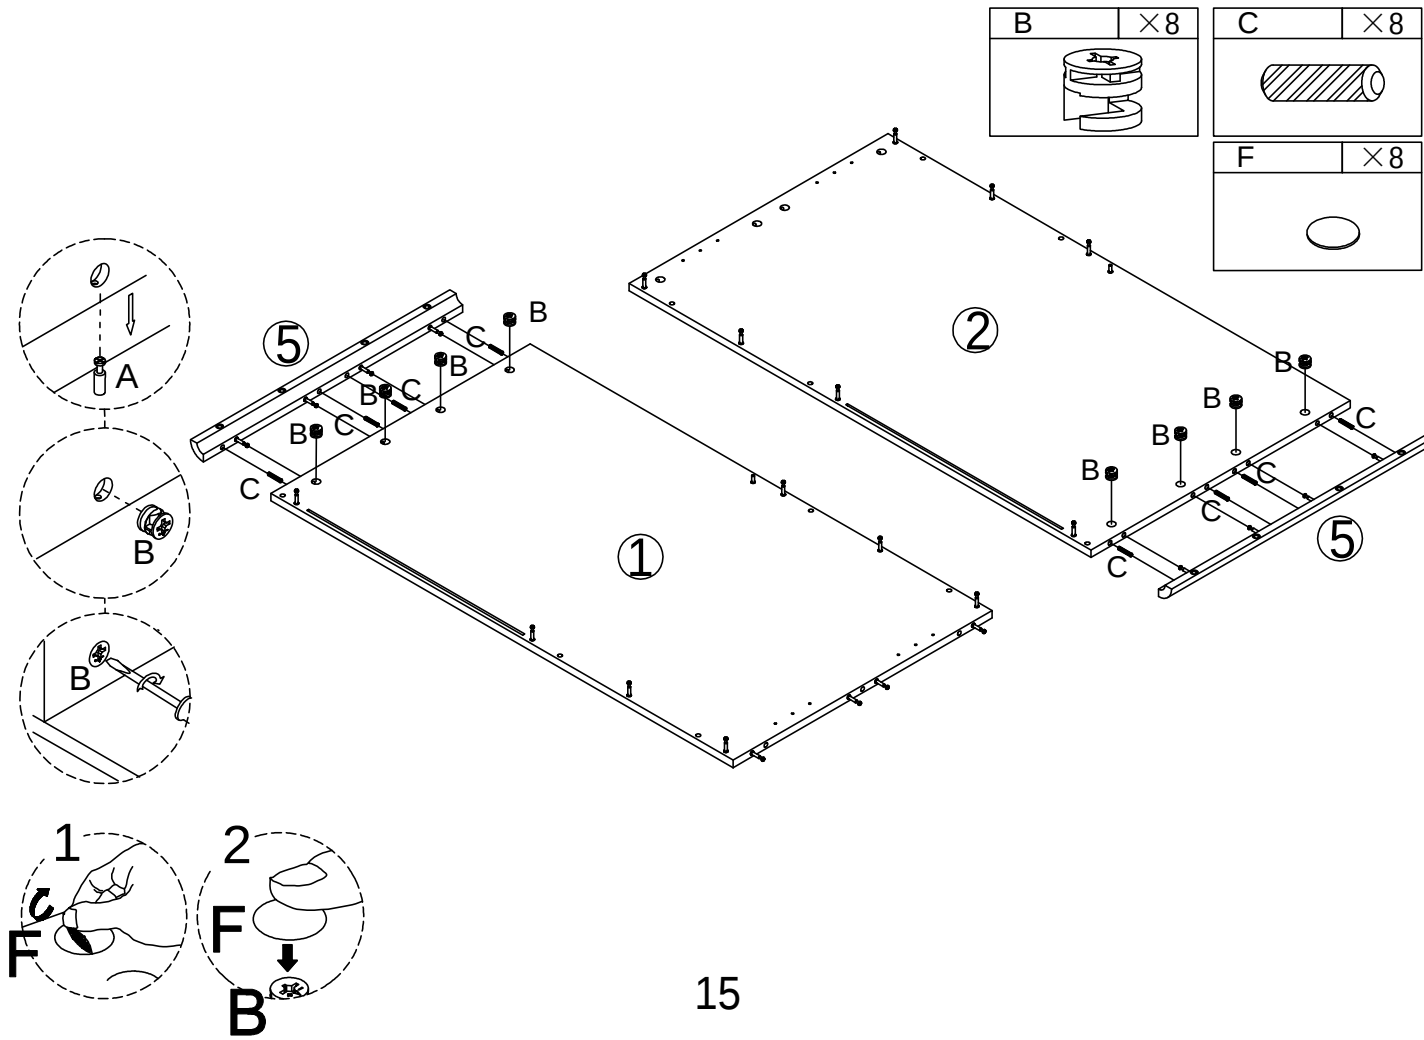


Step 19

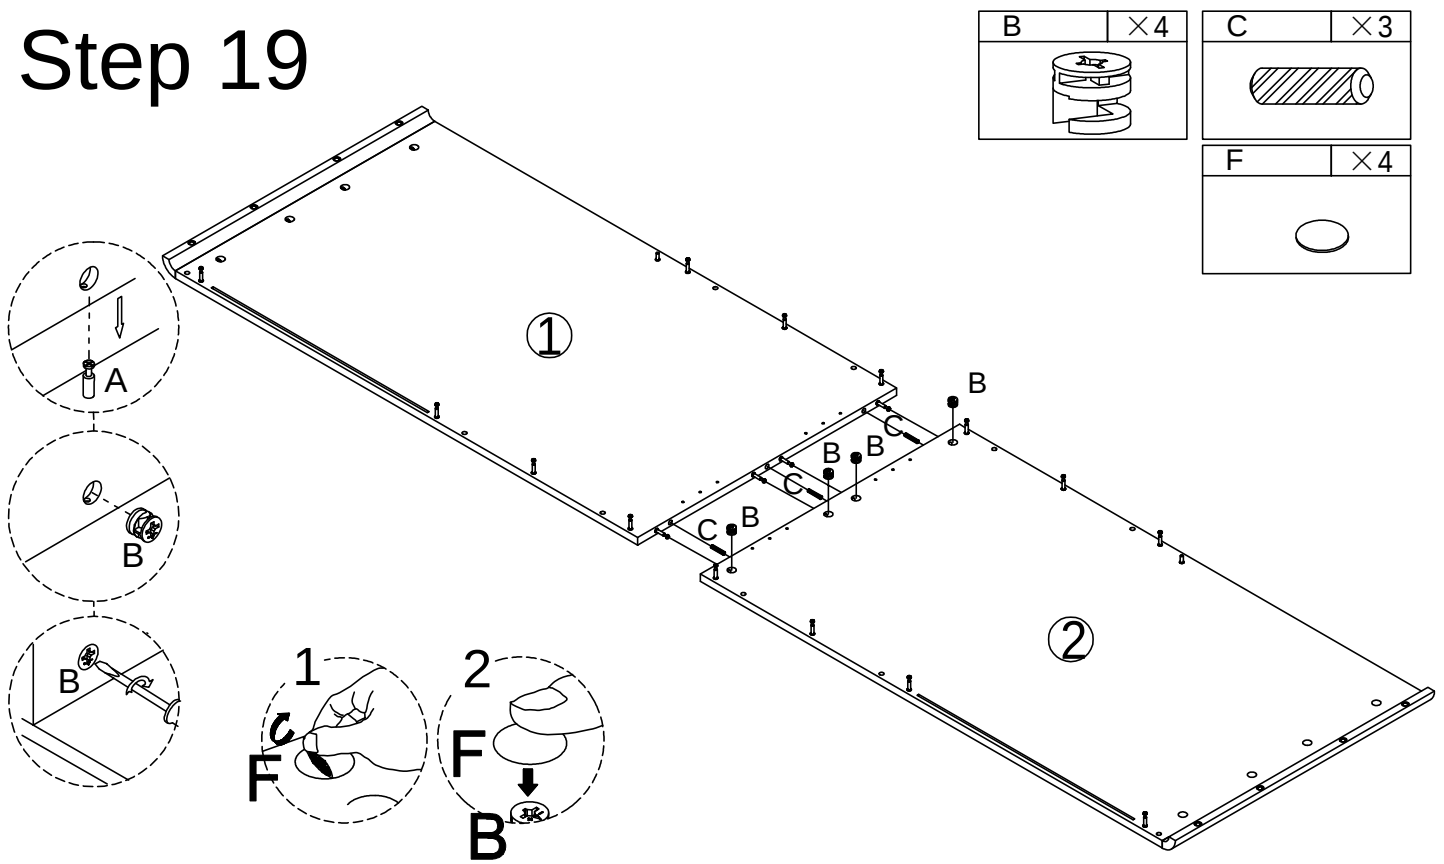



Step 20

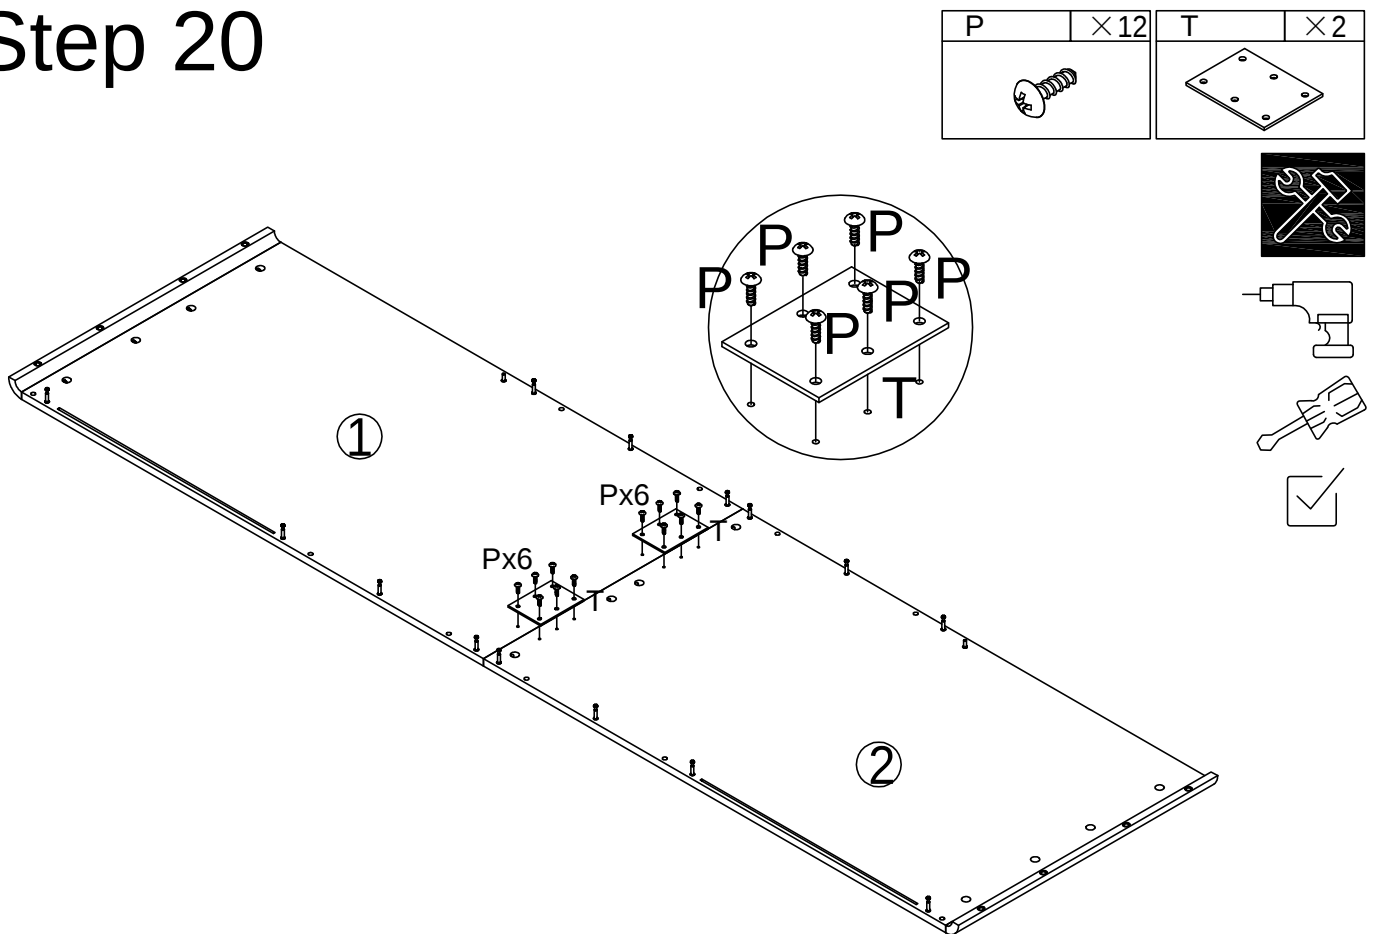

Step 21


C	×10
	

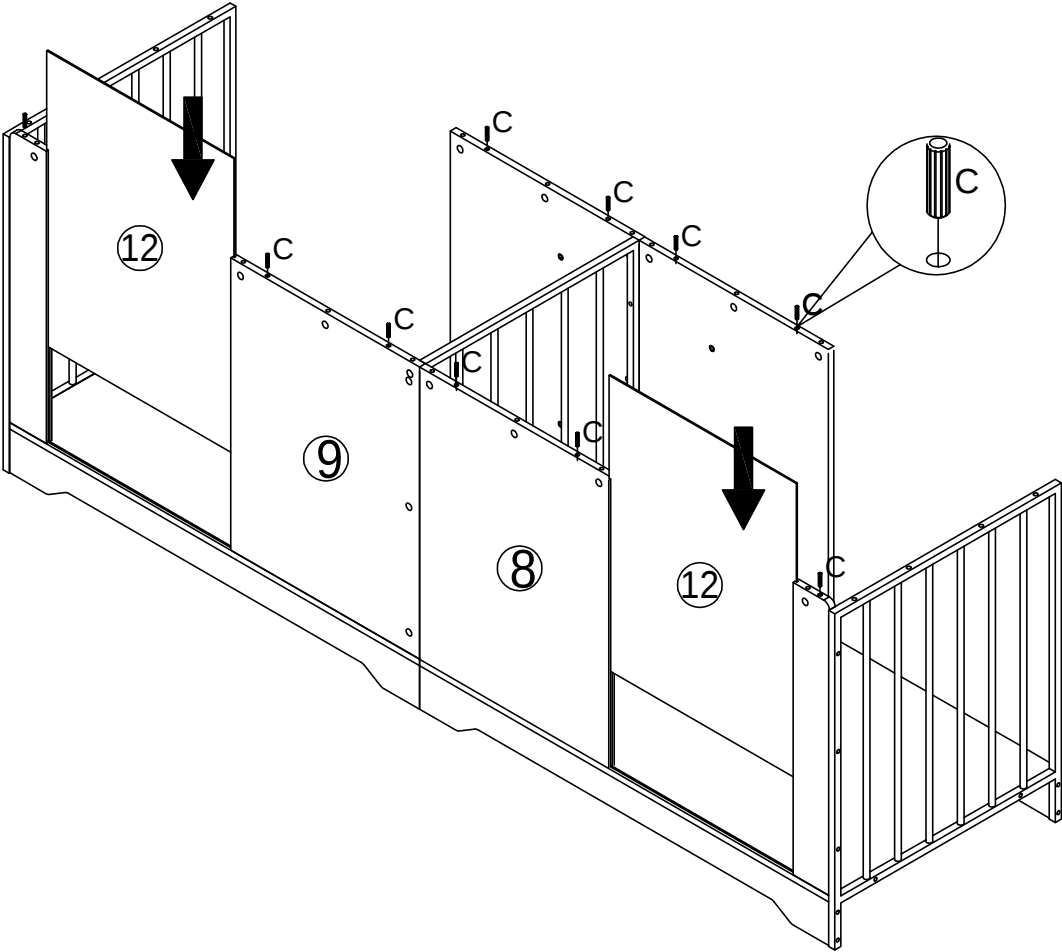

⑫	
2PCS	



Step 22

B	×14	F	×14
			


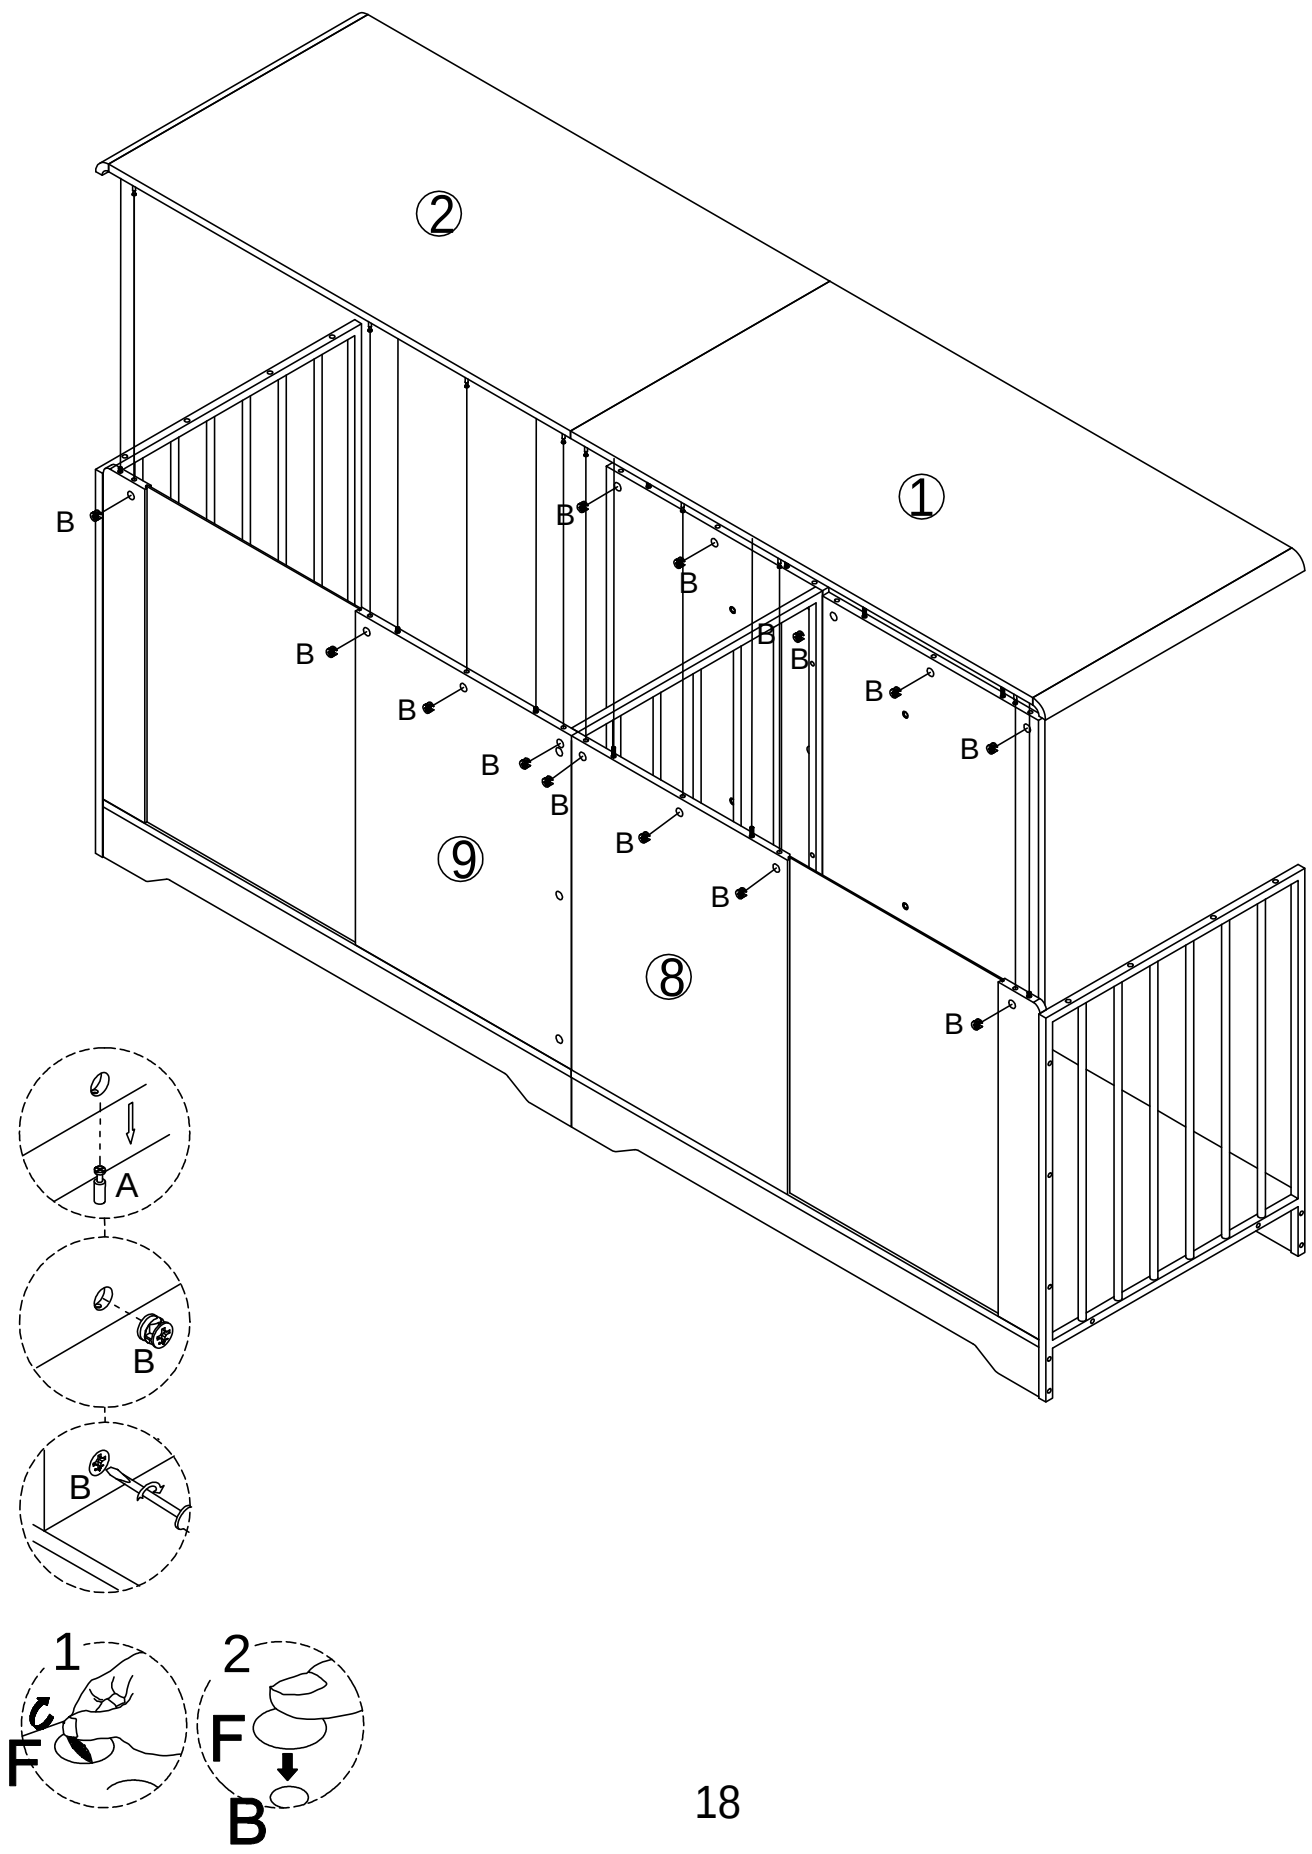





Step 23

H	×8
	
L	×1
	

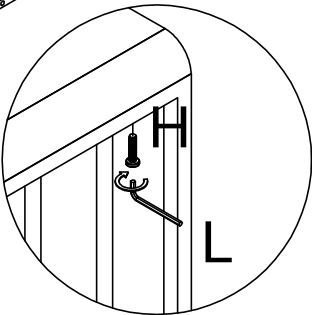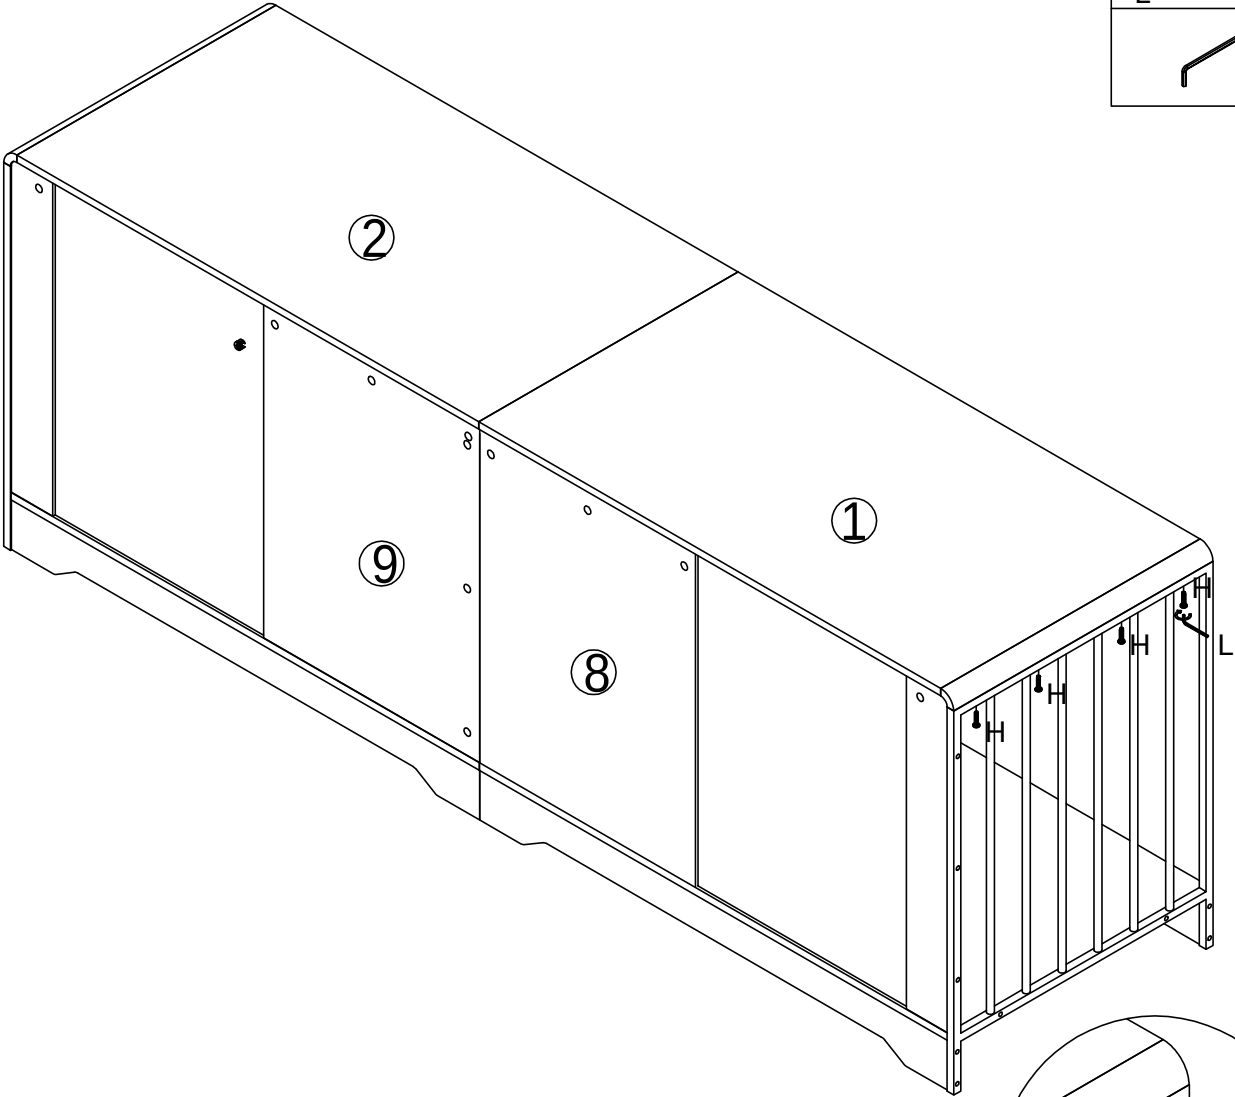


Step 24

G	×8	K	×8
			
P	×2	R	×2
			

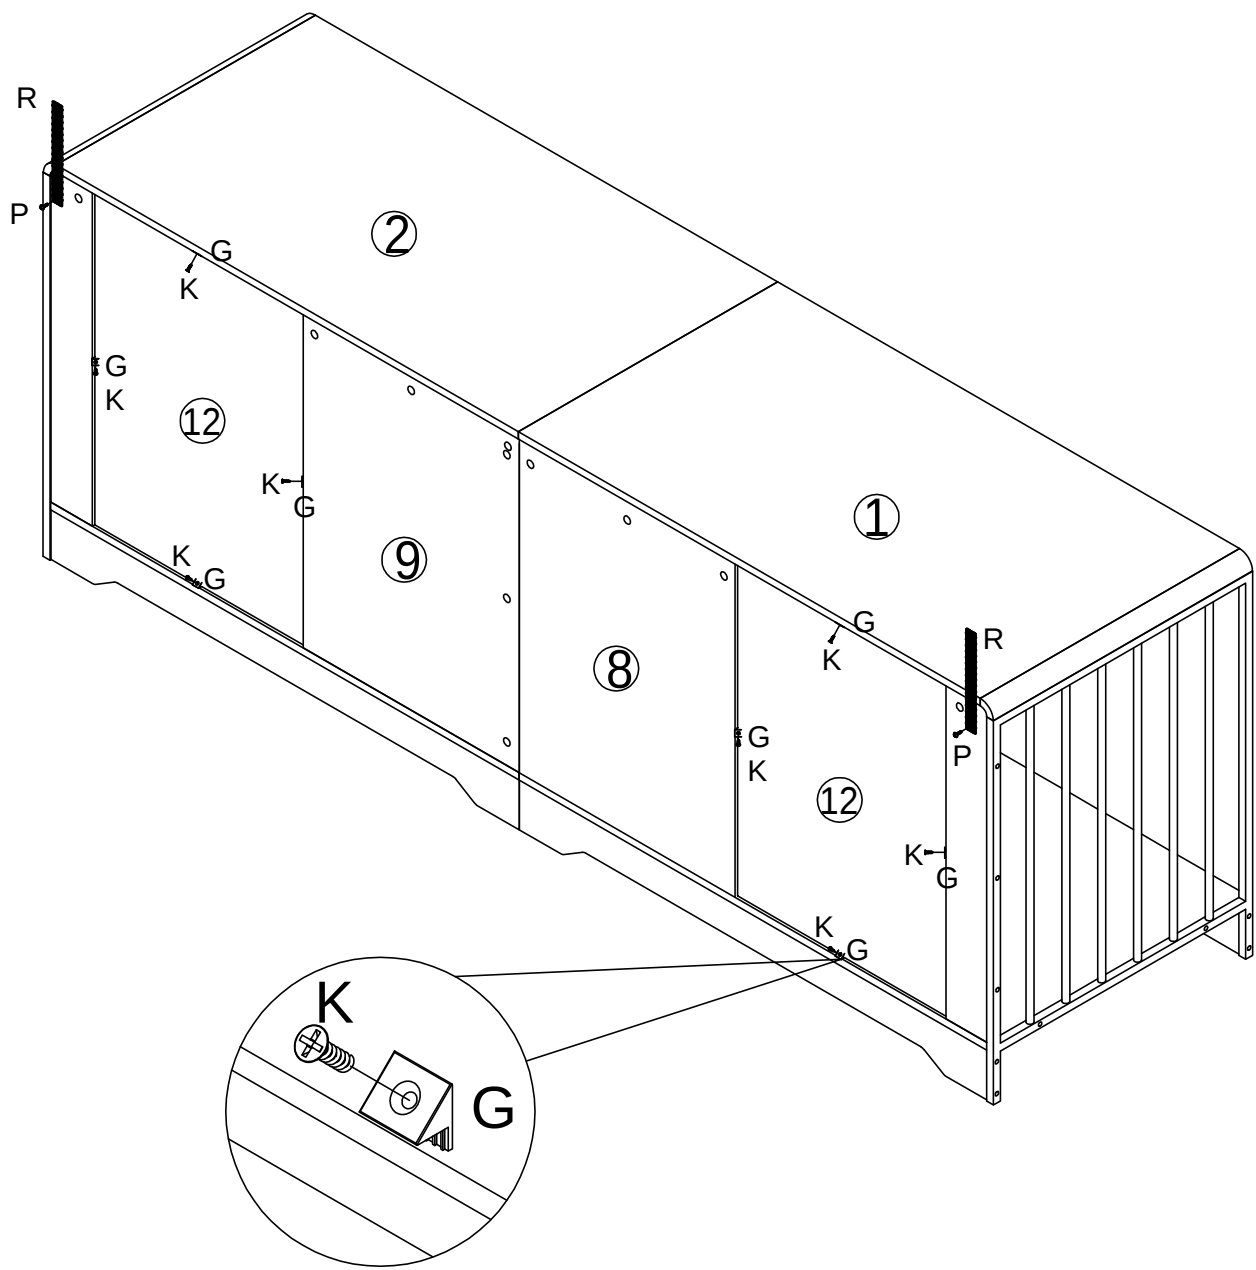





Step 25

B	×8	F	×8
			

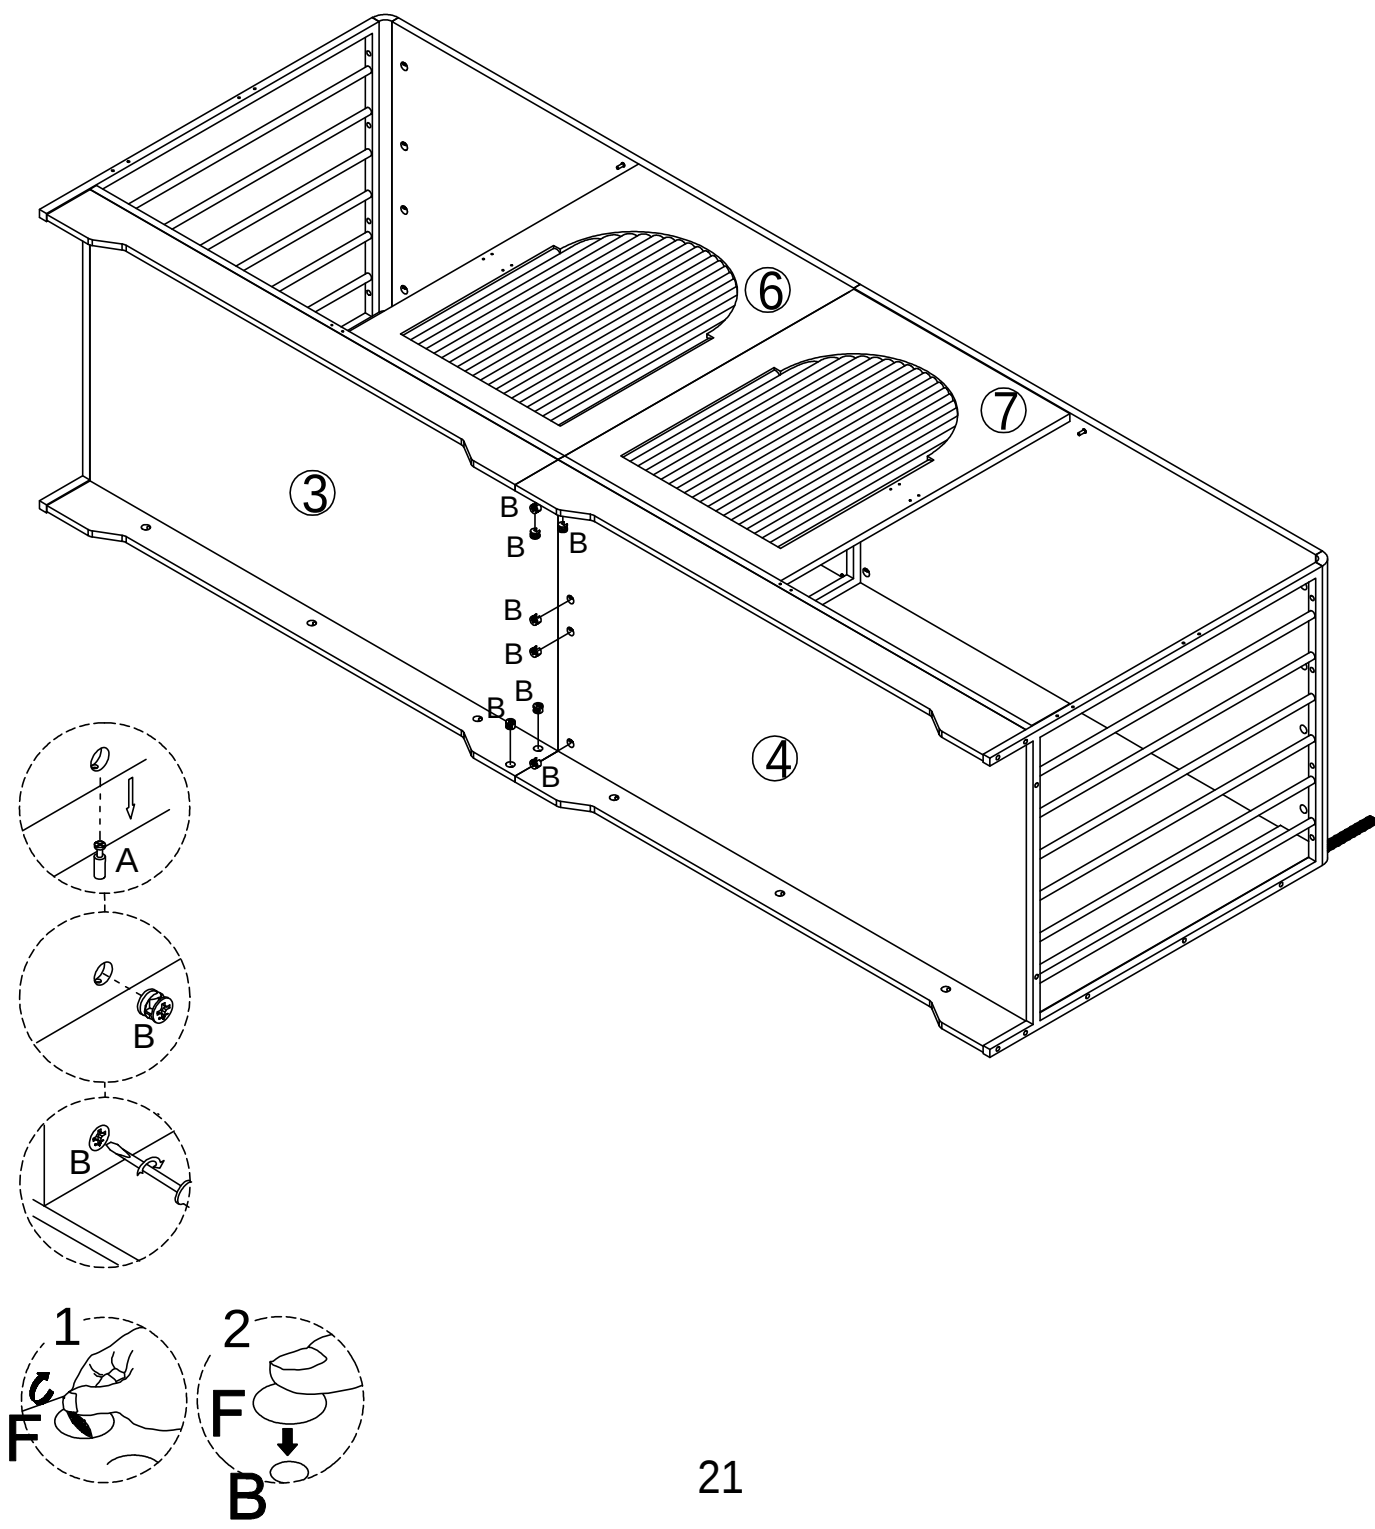






Step 26

K	×12
	
M	×2
	
N	×2
	

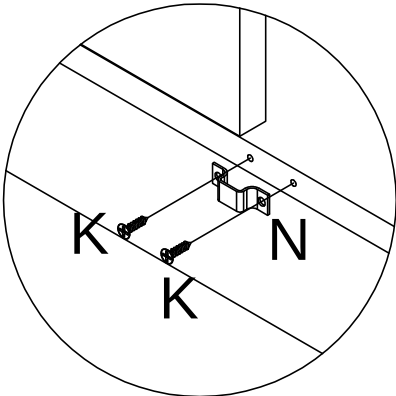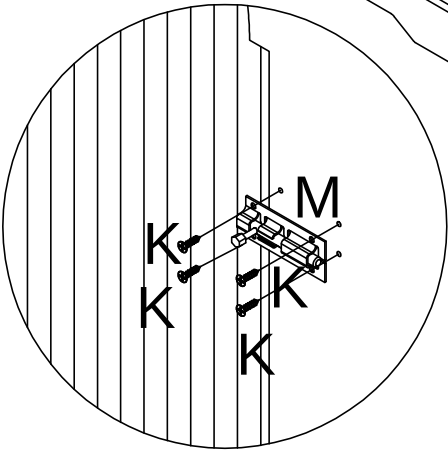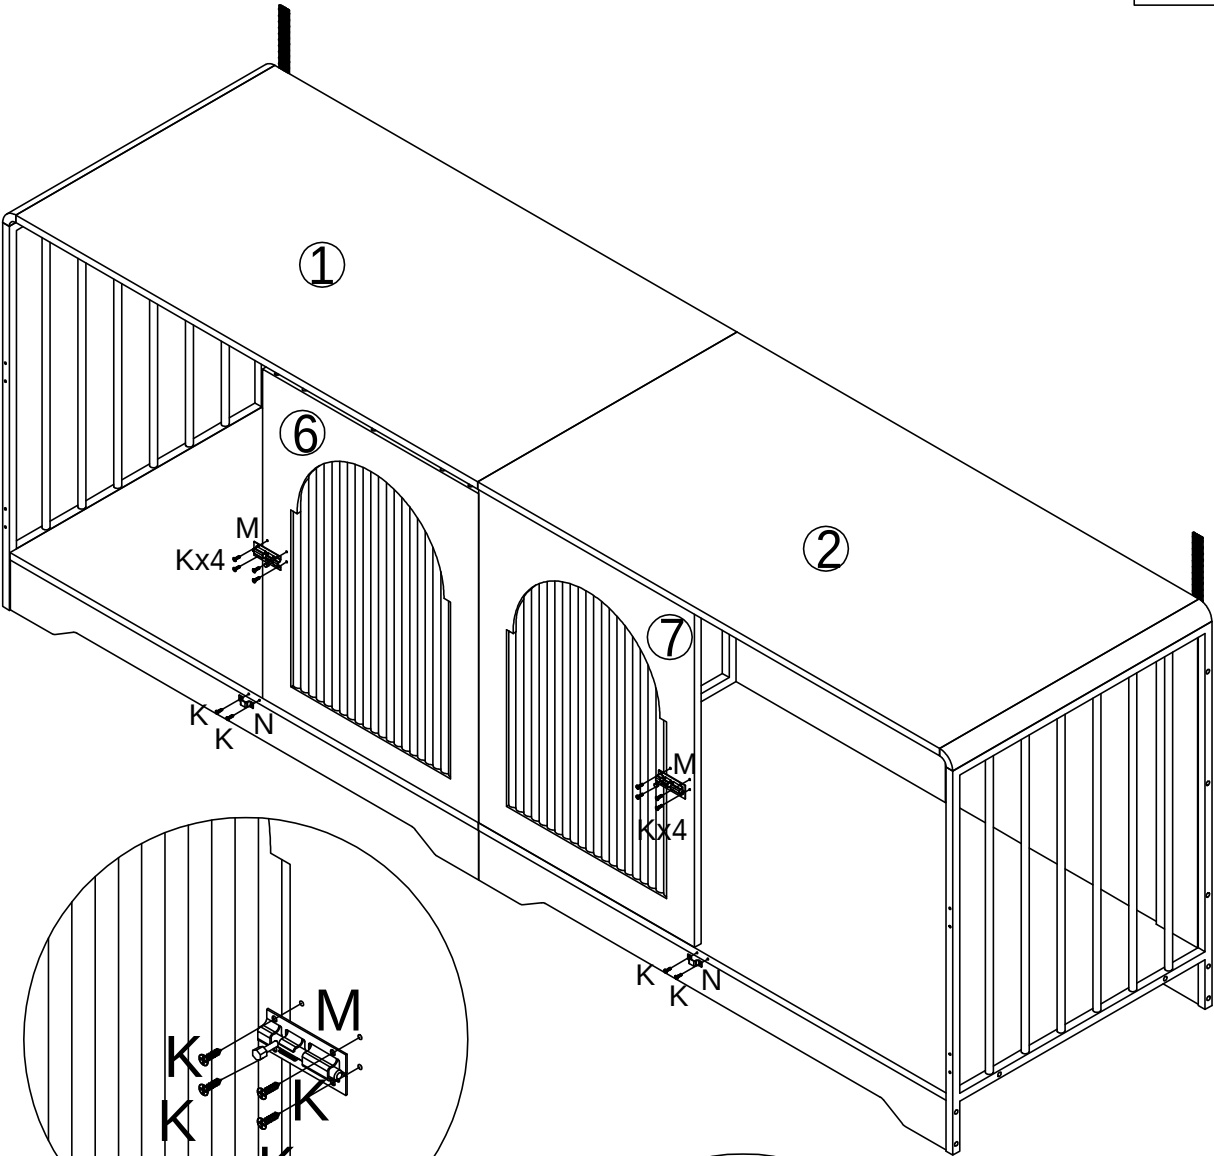



Step 27

Q	×8
	
O	×4
	

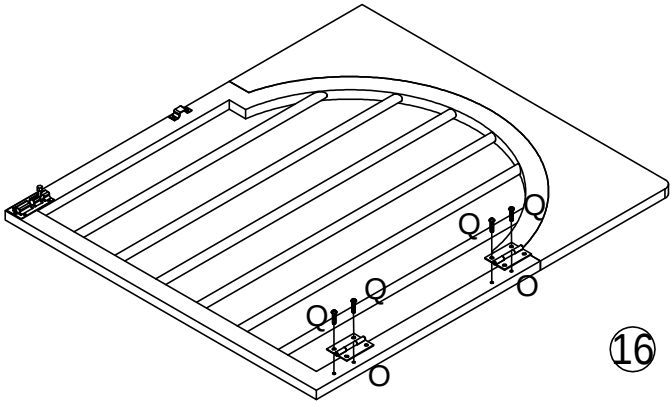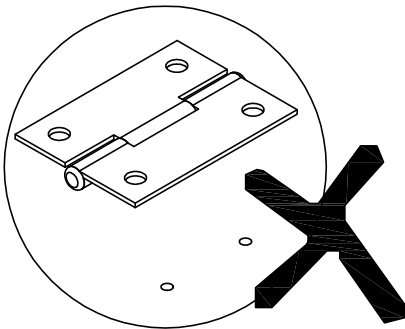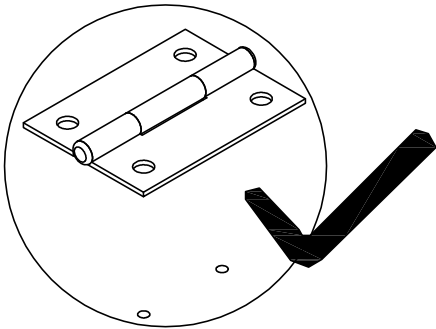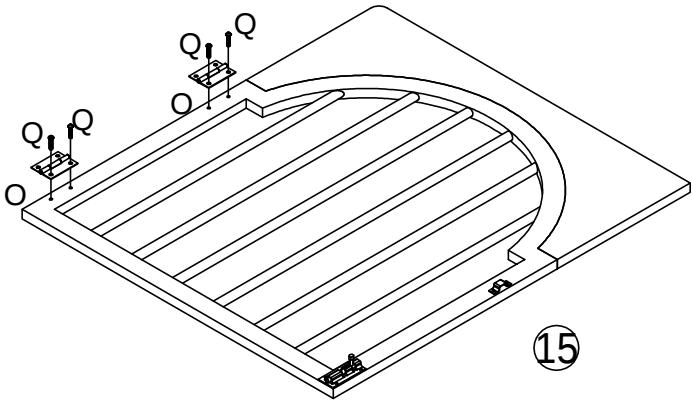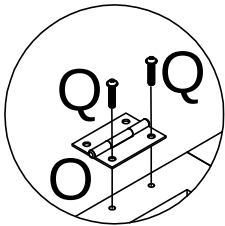

15		1PC	16		1PC
----	---	-----	----	---	-----

Step 28

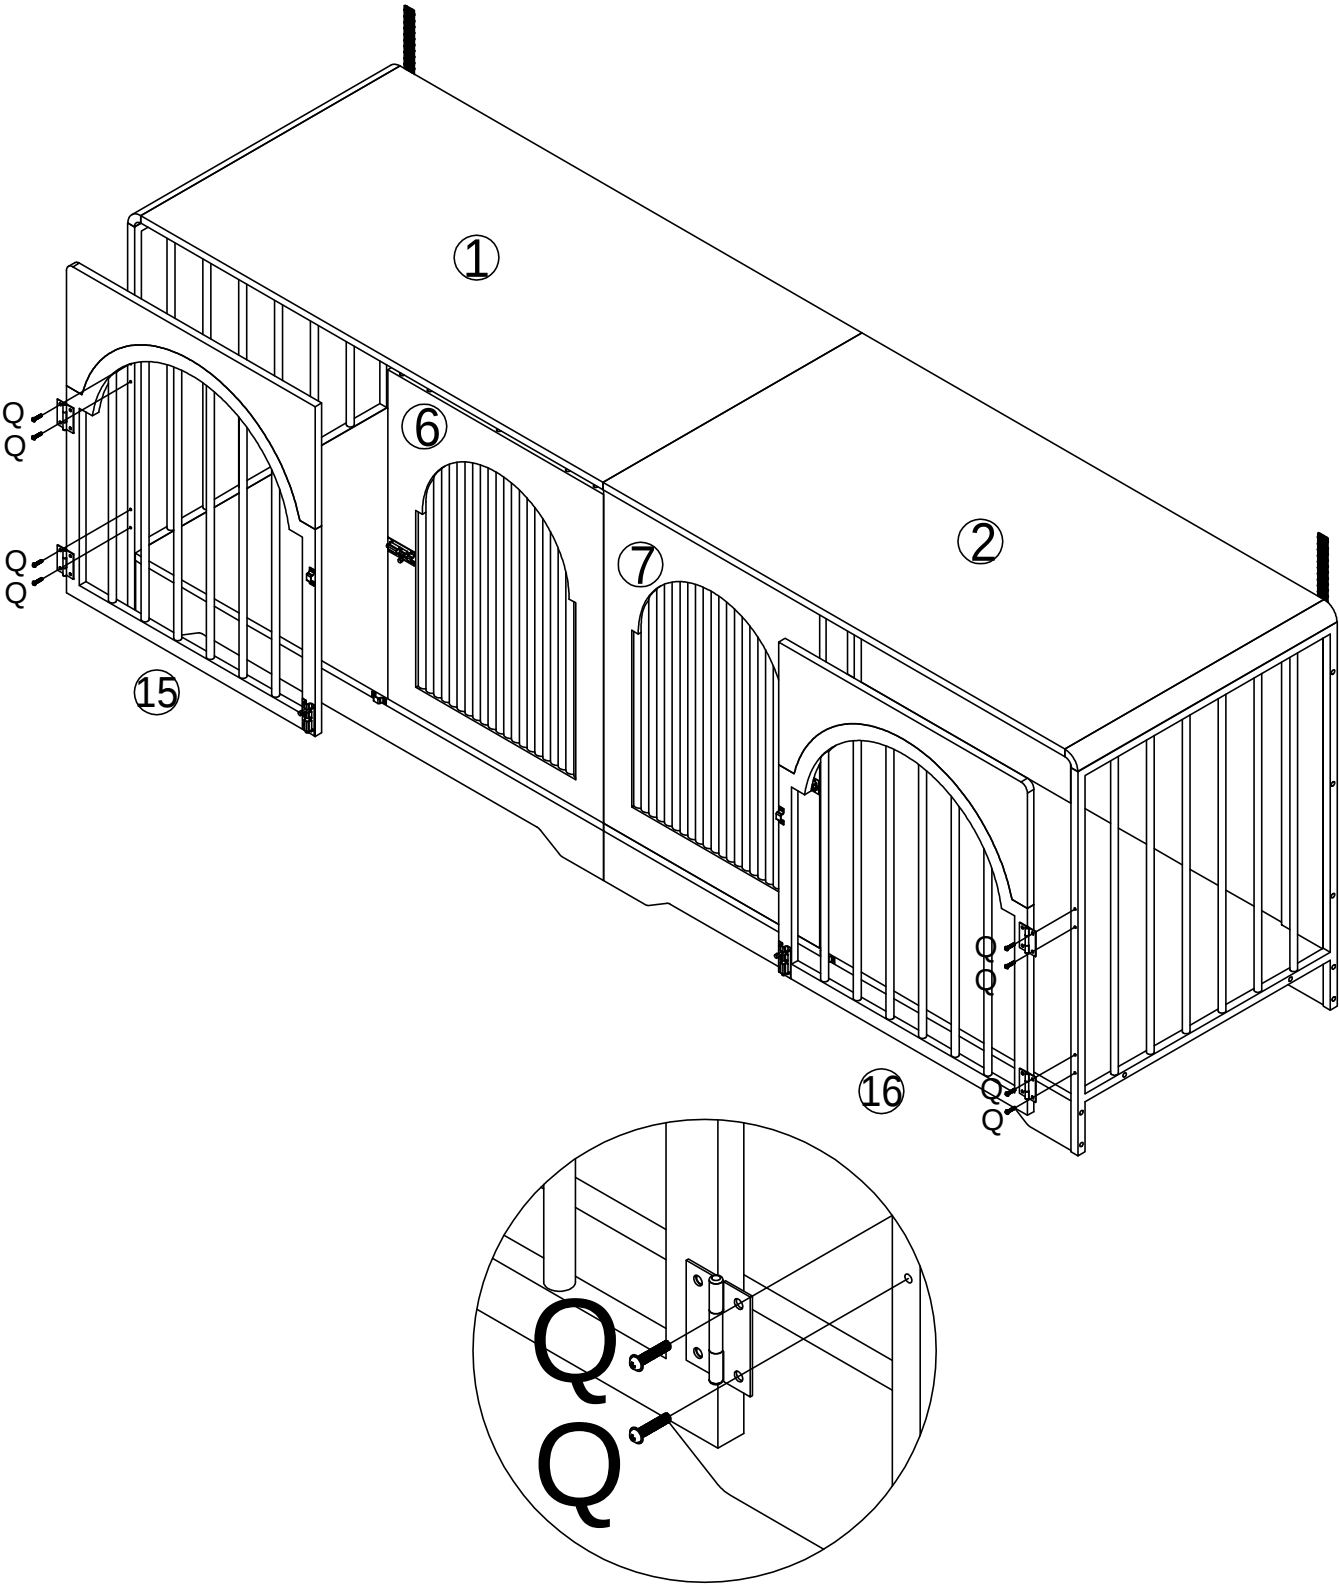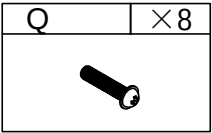

Step 29

D	×2	J	×2
