


# Assembly Instruction


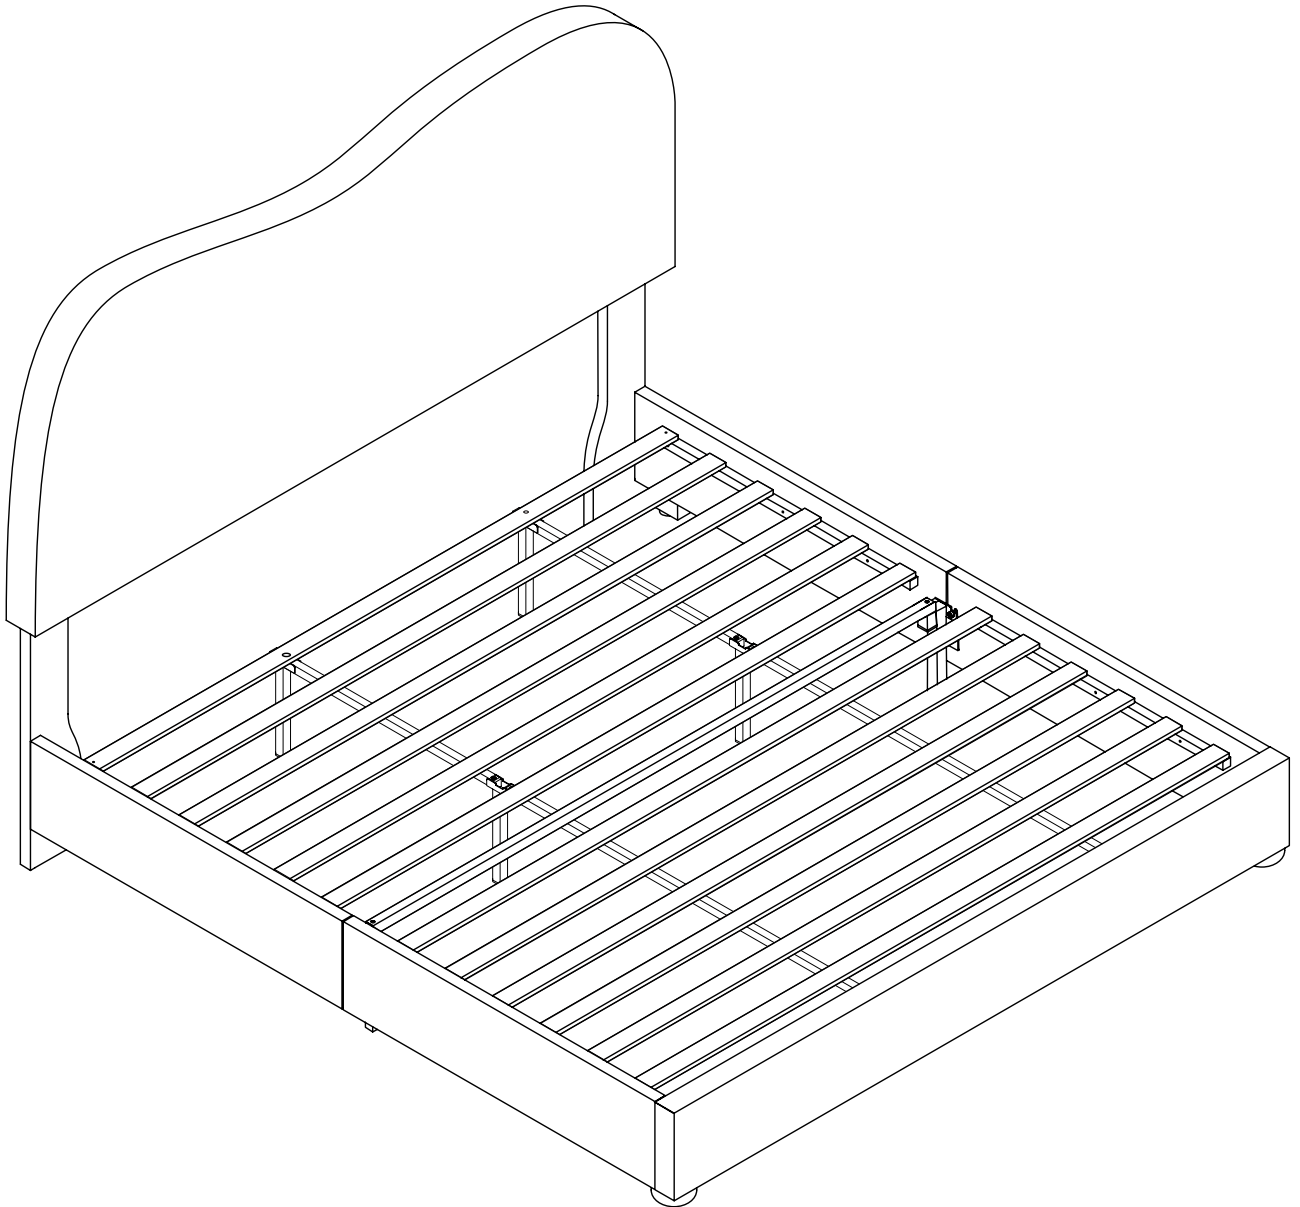


Please check that you have all the parts listed before you start assembling,if you do find that something is missing,do not continue assembly,please contact us immediately.

NOTE:Please do not completely tighten all the hardware until the entire assembly is complete!

# ! IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

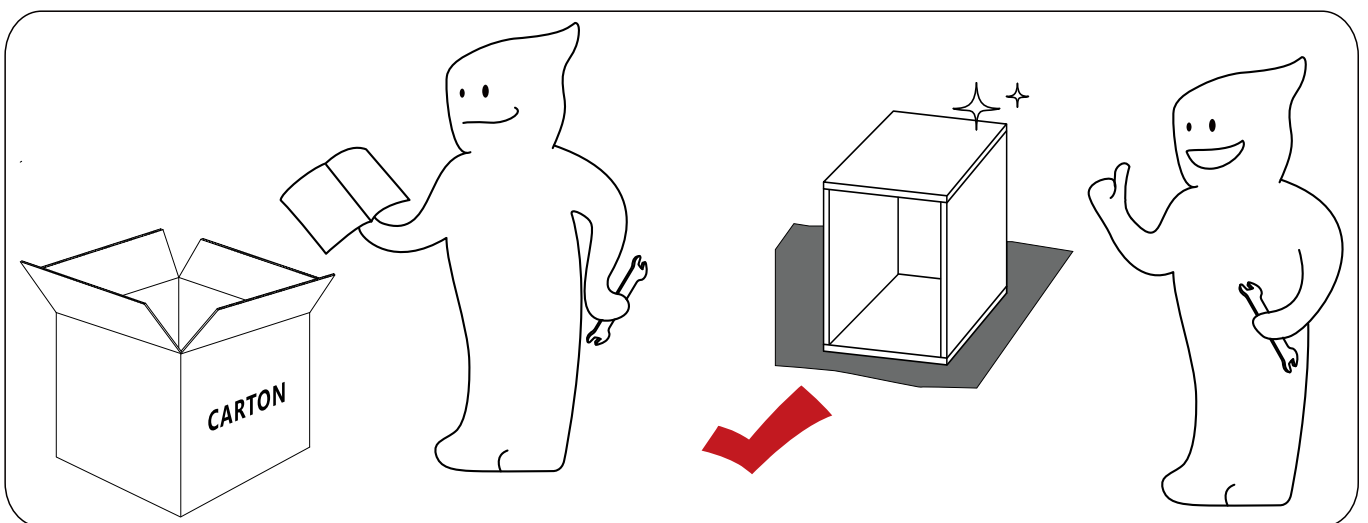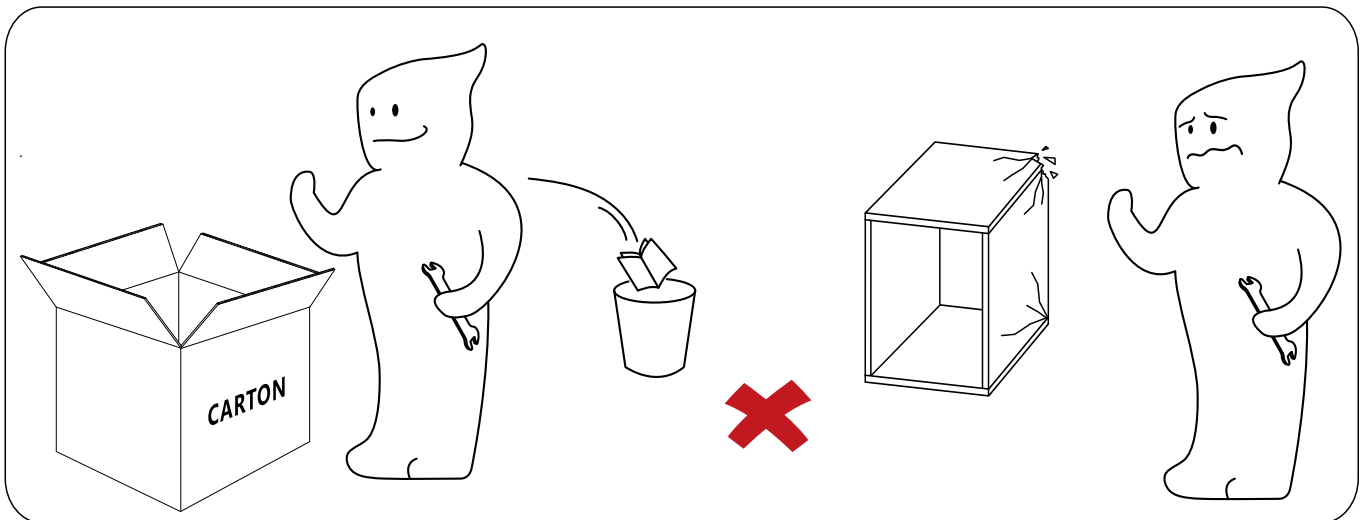


**Note:**






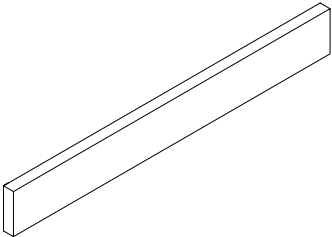
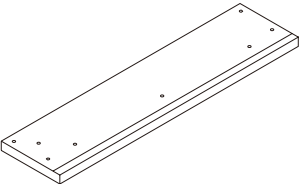
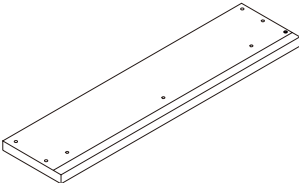
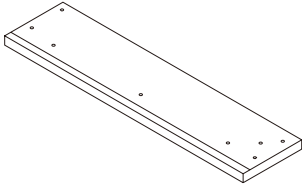
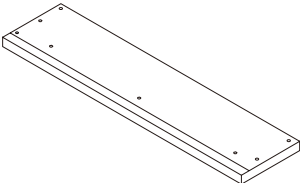
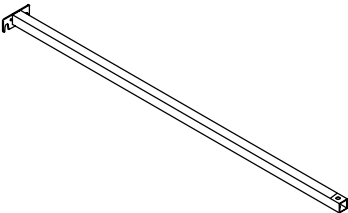
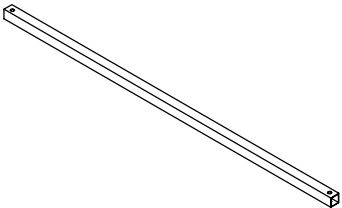
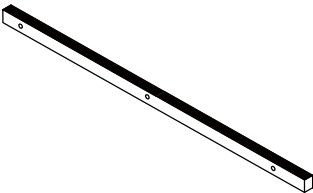


1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.












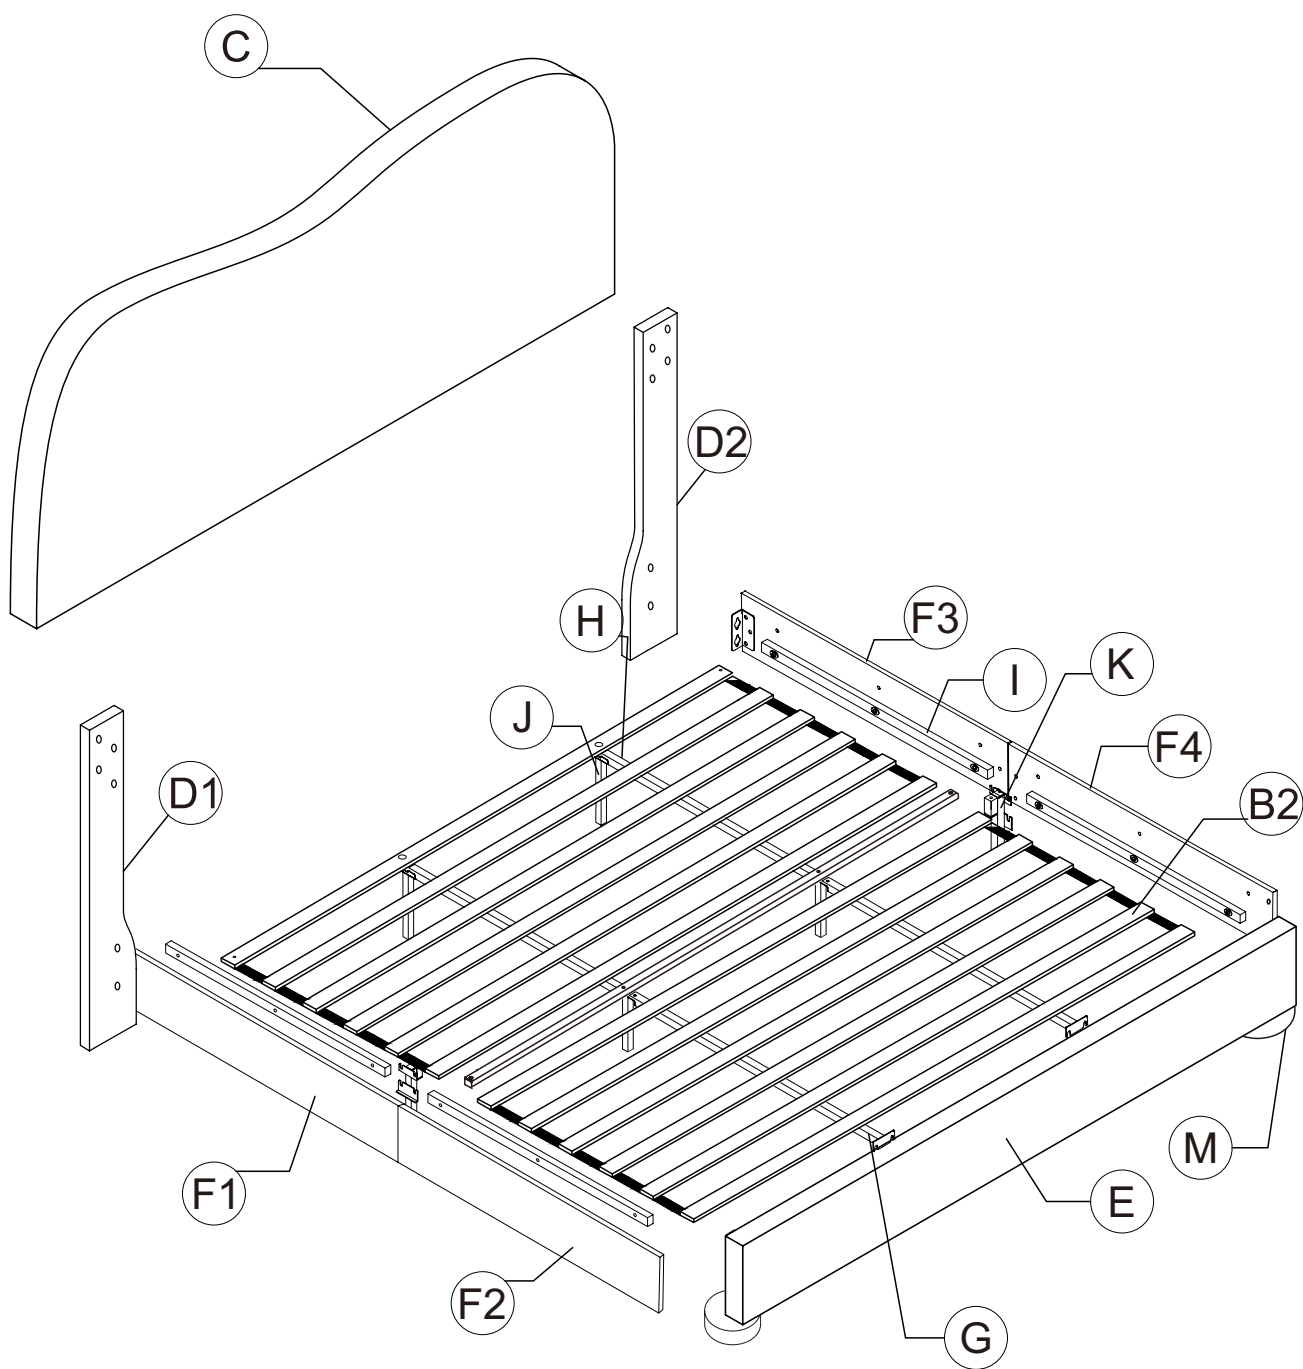



For easier and better assembly, **2** or more adults are required.

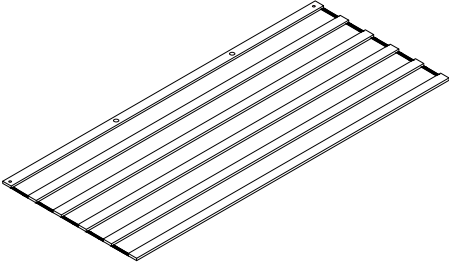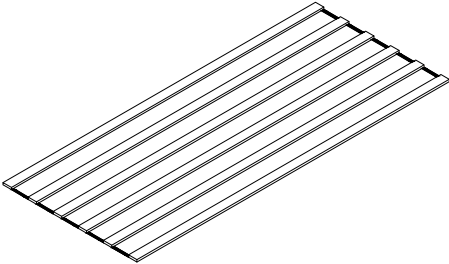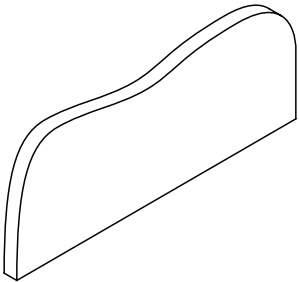

# BED FRAME PARTS LIST

B1	1PC	B2	1PC	C	1PC
					
Slat		Slat			
D1	1PC	D2	1PC	E	1PC
					
Left Leg		Right Leg		Footboard	
F1	1PC	F2	1PC	F3	1PC
					
side rail		side rail		side bar	
F4	1PC	G	2PCS	H	2PCS
					
side bar		Middle behind support bar		Middle front support bar	
I	4PCS	J	4PCS	K	2PCS
					
Side bar		Middle support leg		Bed side support leg	
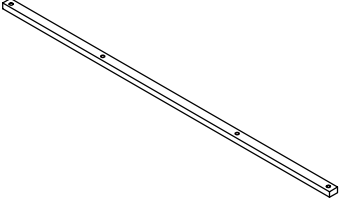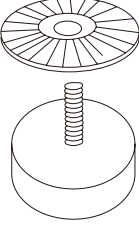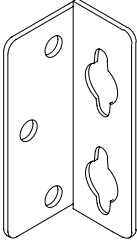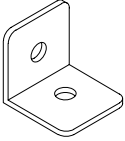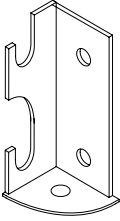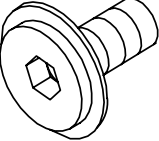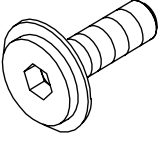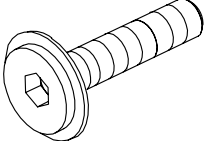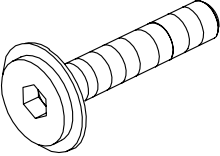
# FITTING PART LIST

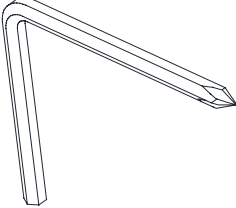L	1PC	M	2PCS	N	2PCS	O	2PCS
							
Cross bar		Foot		Connector-N		Connector-O	
P1	1PC	P2	1PC				
							
a	30PCS	b	4PCS	c	20PCS	d	10PCS
							
M8*18		M8*25		M8*35		M8*55	
e	2PCS	f	2PCS	g	1PC		
							
M4*35							

## step1


d



M8\*55

8PCS

As shown in the figure, the headboard height can be adjusted by locking the support legs to different holes on the headboard for a 2-inch height adjustment.

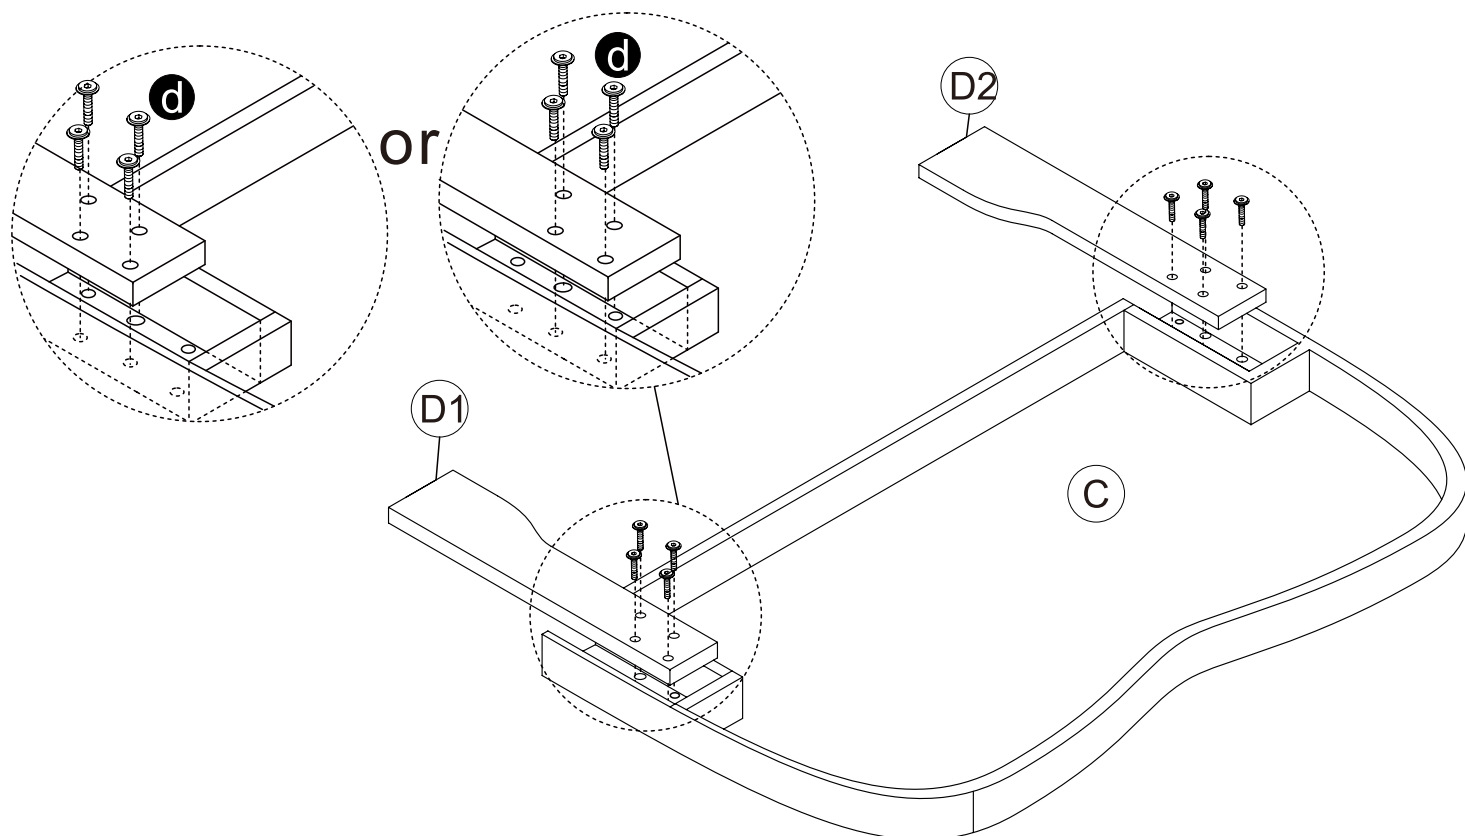


## step2

b




M8\*25

4PCS

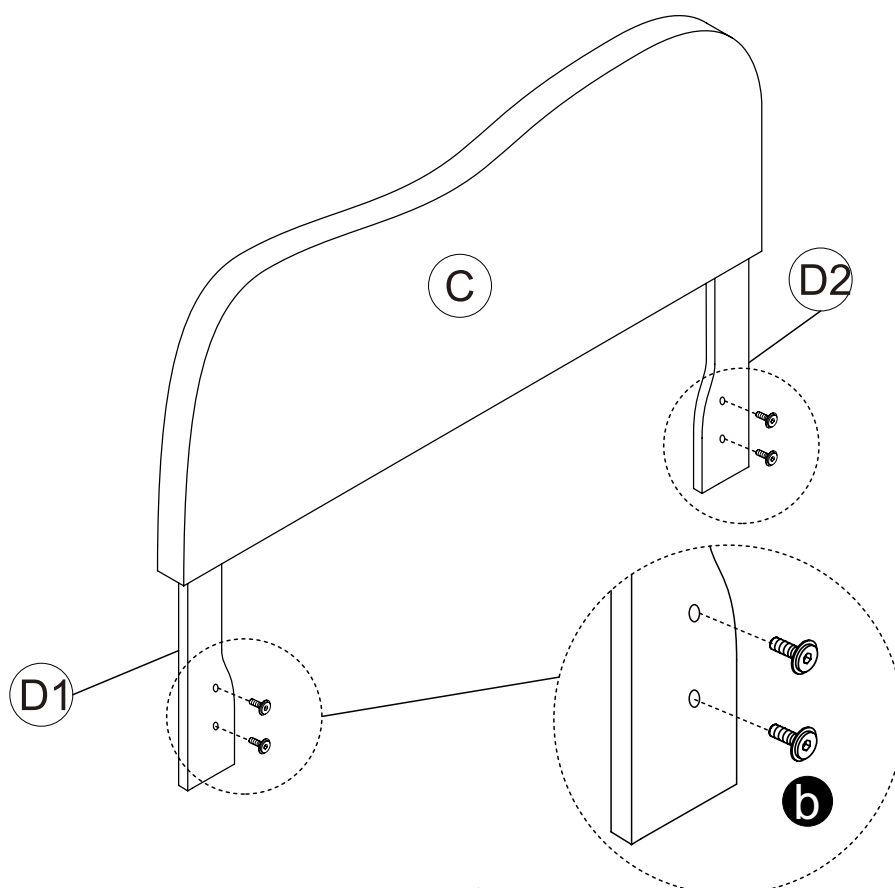


# step3

a	 M8*18	6PCS
---	--	------

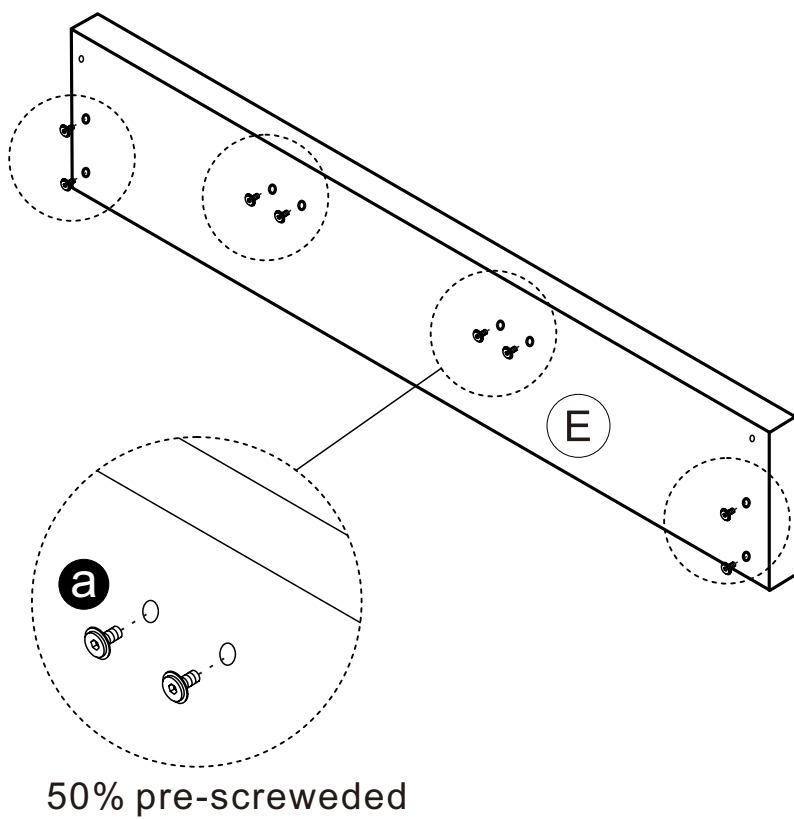


# step4

a	 M8*18	6PCS
---	--	------

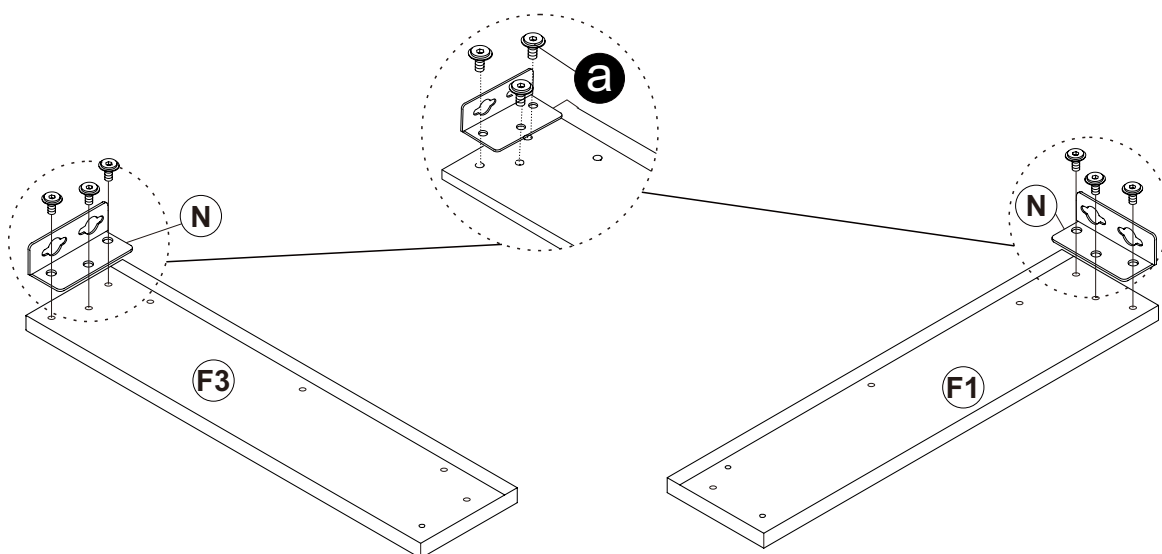


# step5

a	 M8*18	4PCS
---	--	------

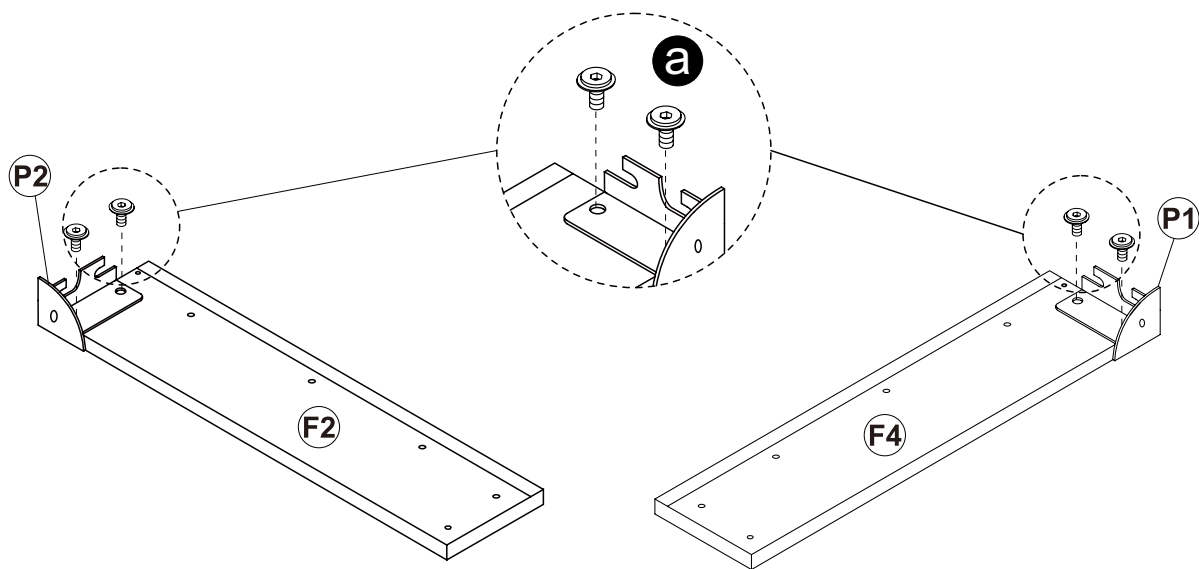

# step6


a	 M8*18	8PCS
---	--	------

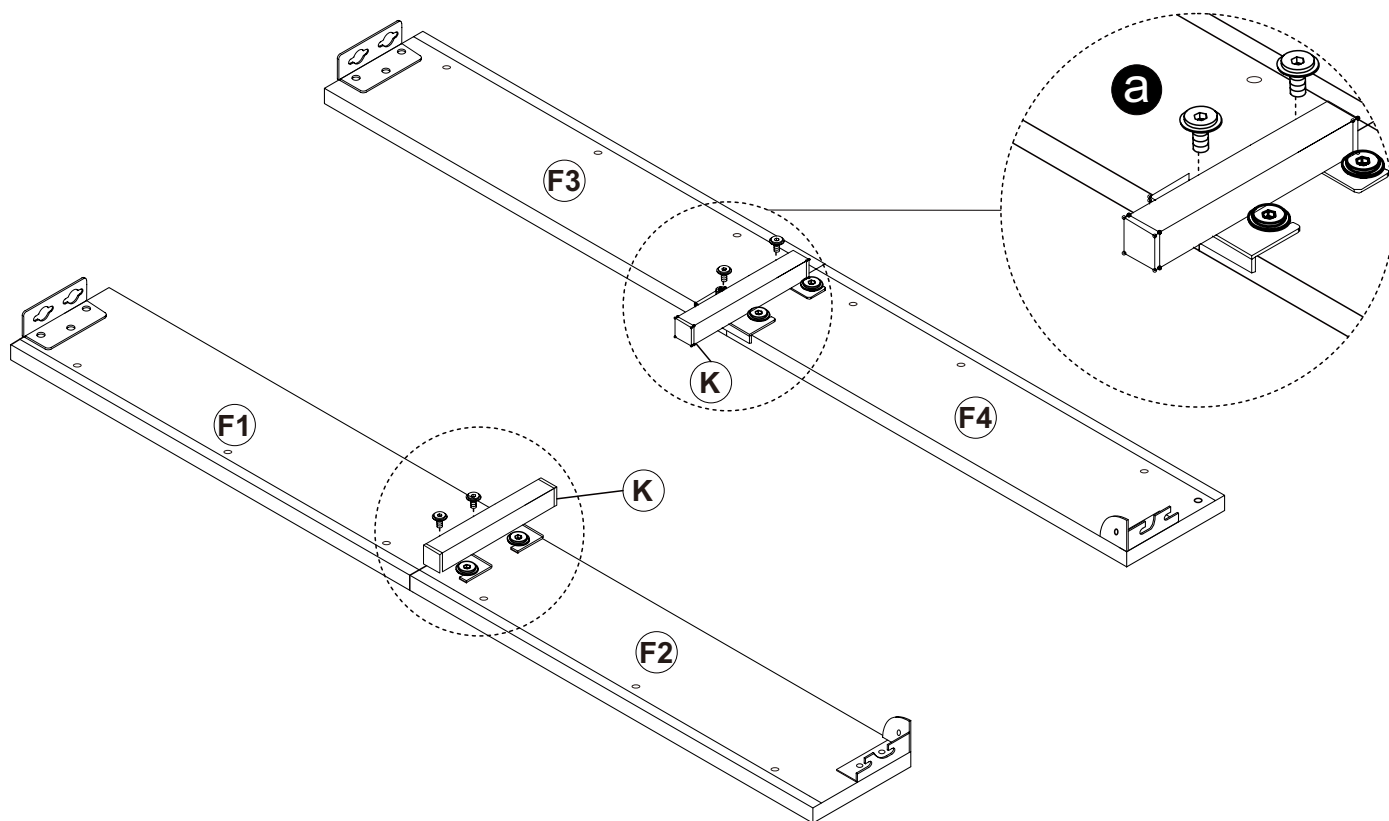




## step7

Please first use the pre-installed screw a on the footboard to attach it to the connectors P1 and P2 on the side panel, and then tighten the screw a.

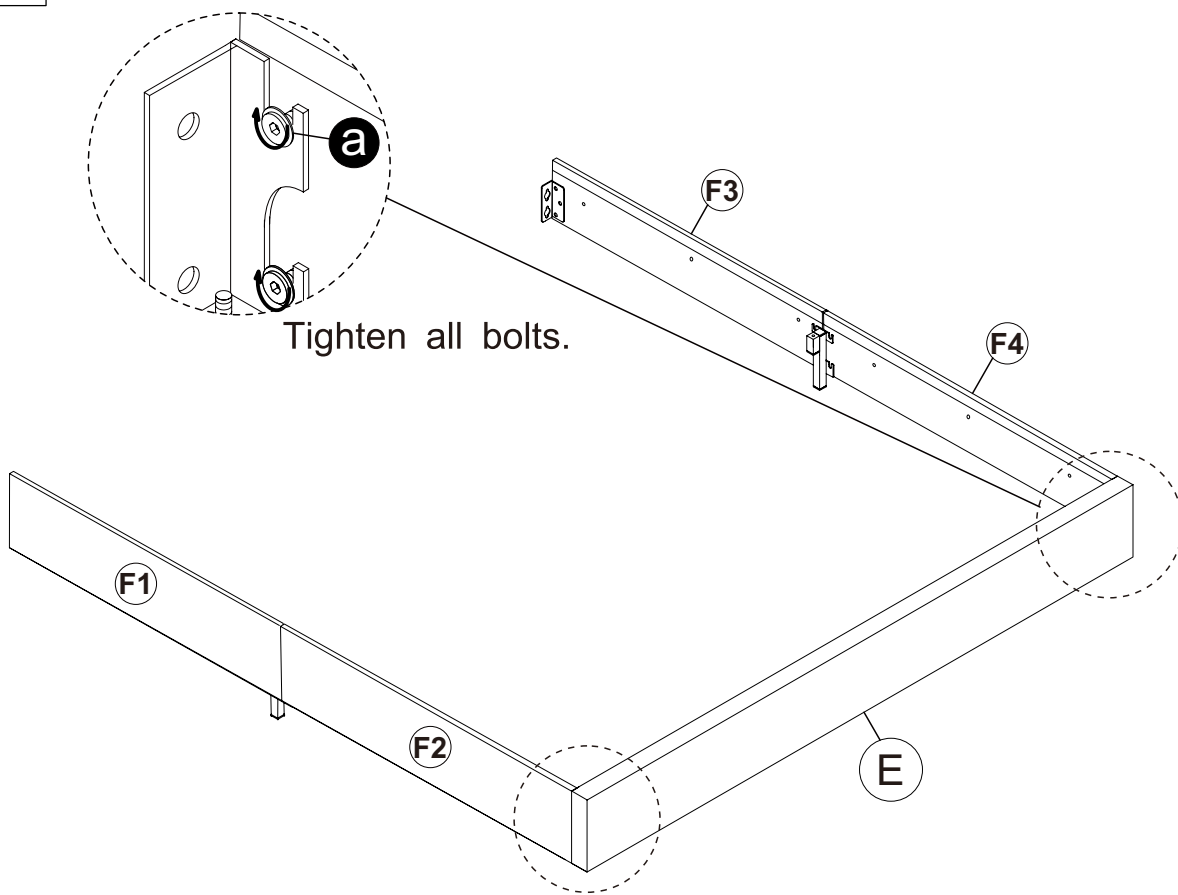


## step8

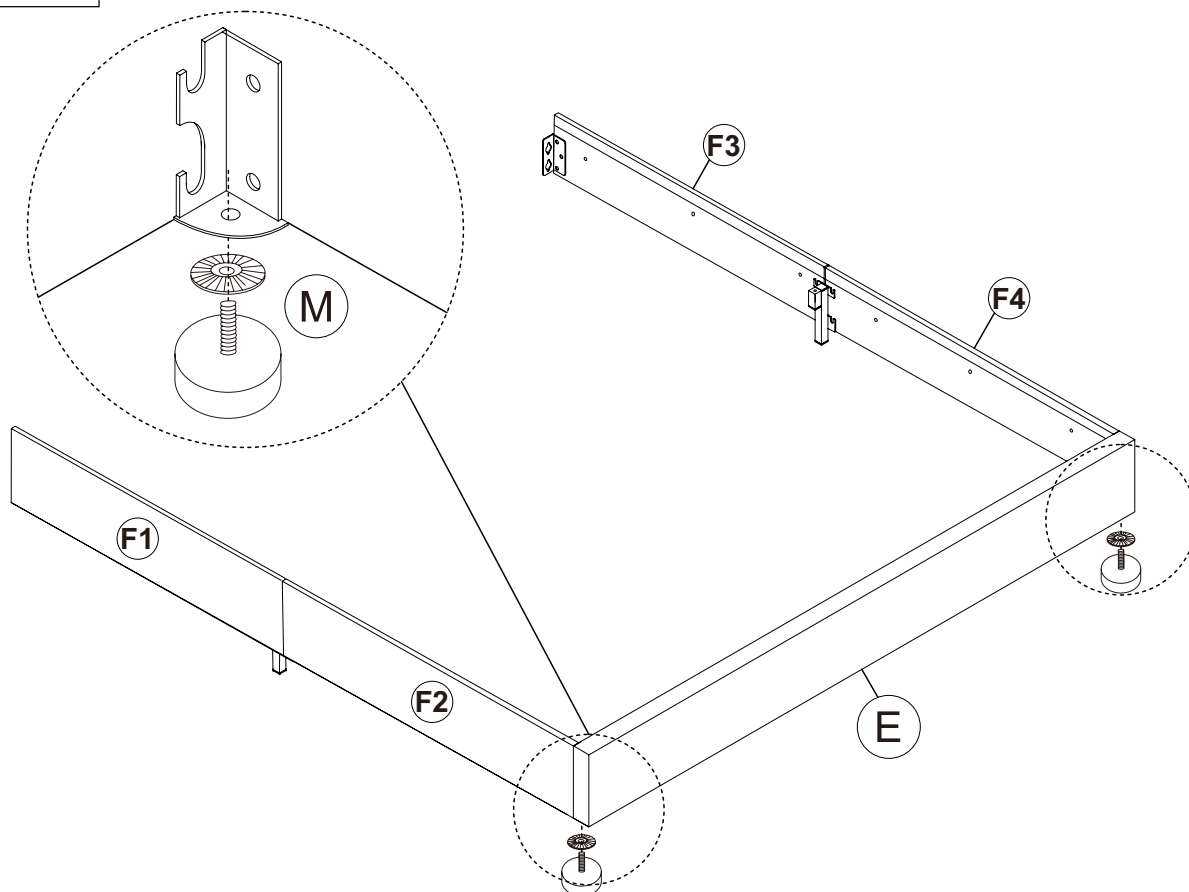

## step9

Please first attach the side panel to the pre-installed screw b on the head support leg using connector N, and then tighten screw b.

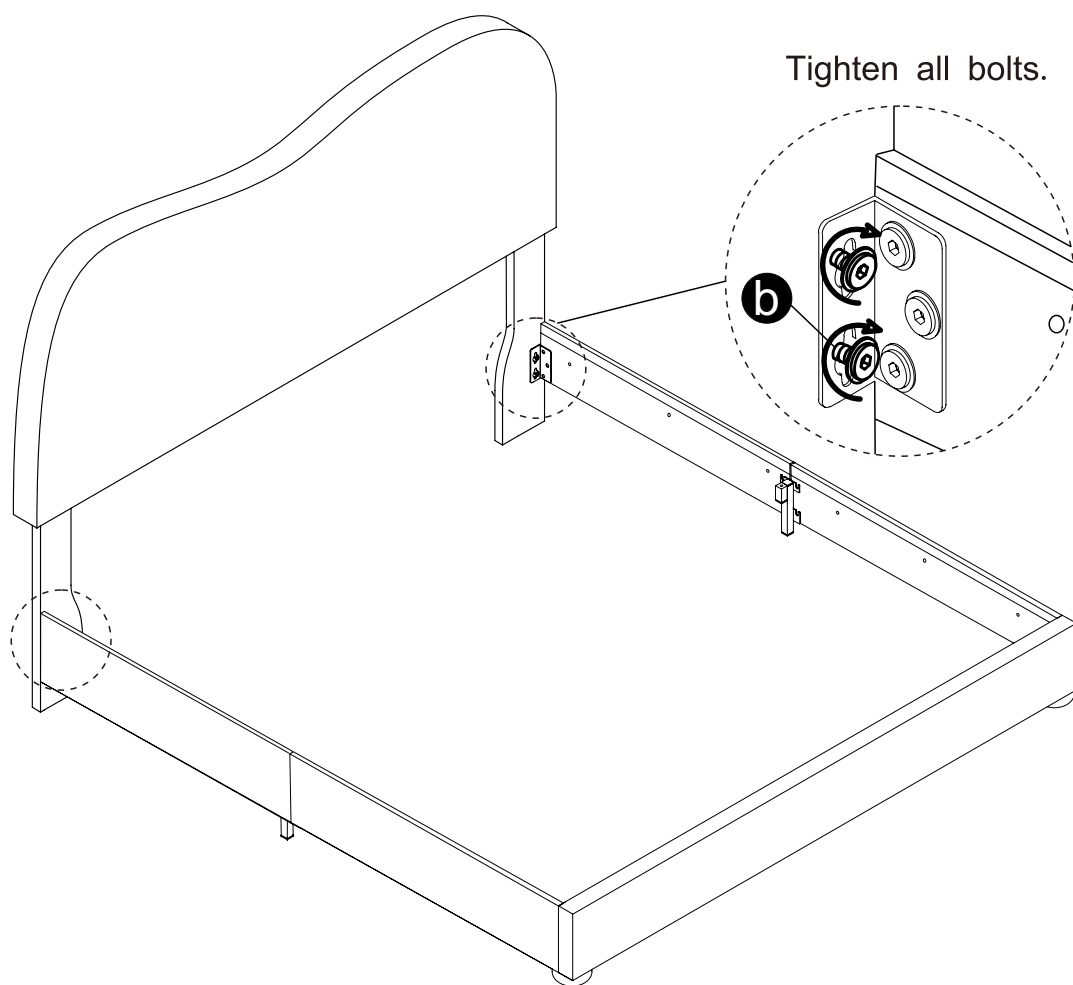


## step10

a

M8\*18

4PCS

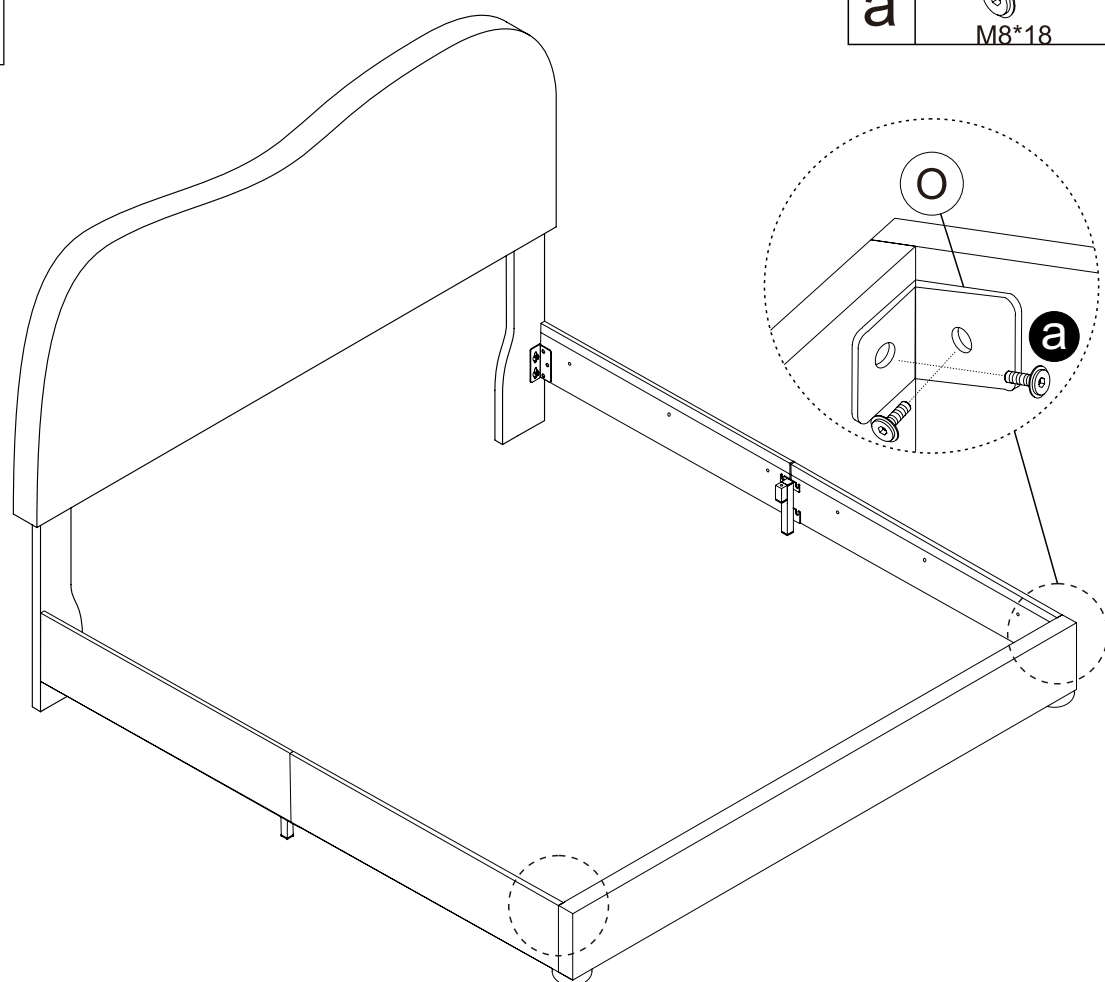


# step11

C

M8\*35

12PCS

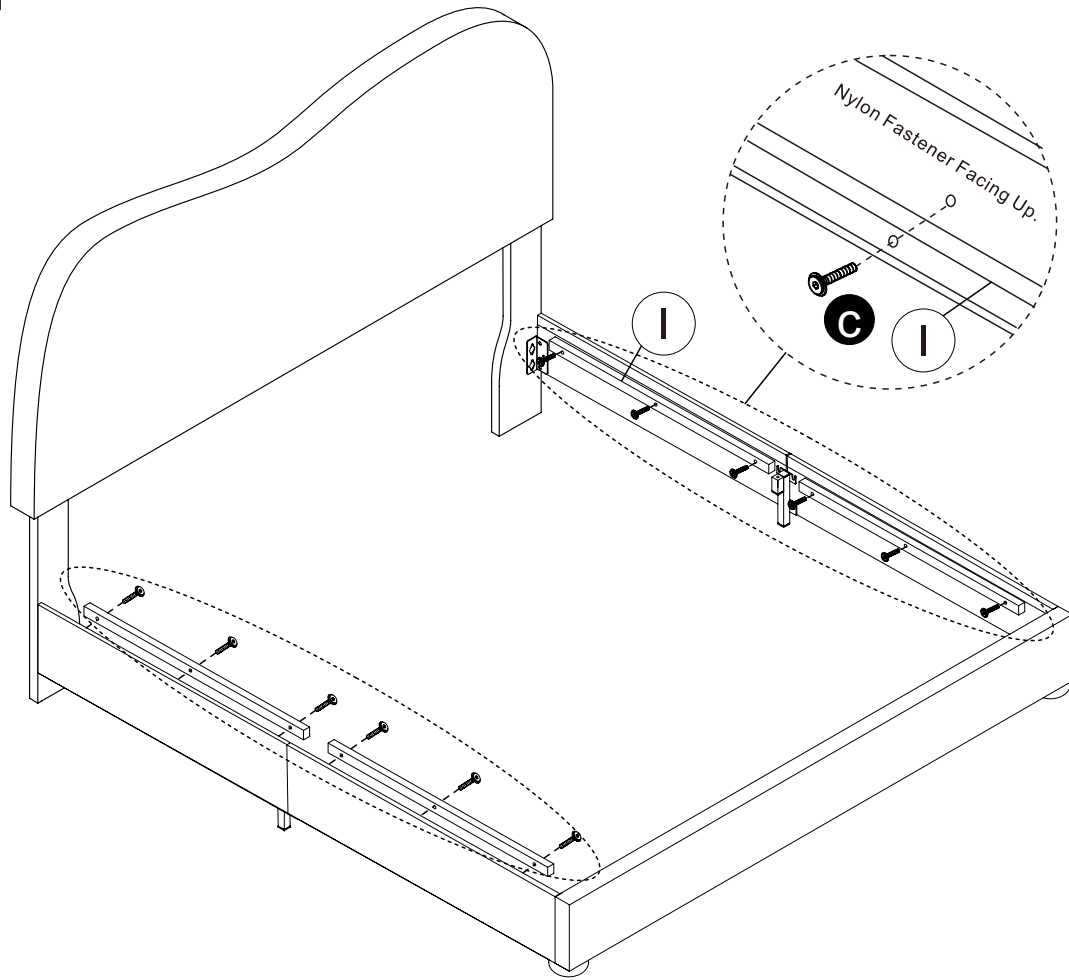


# step12

C


M8\*35

4PCS

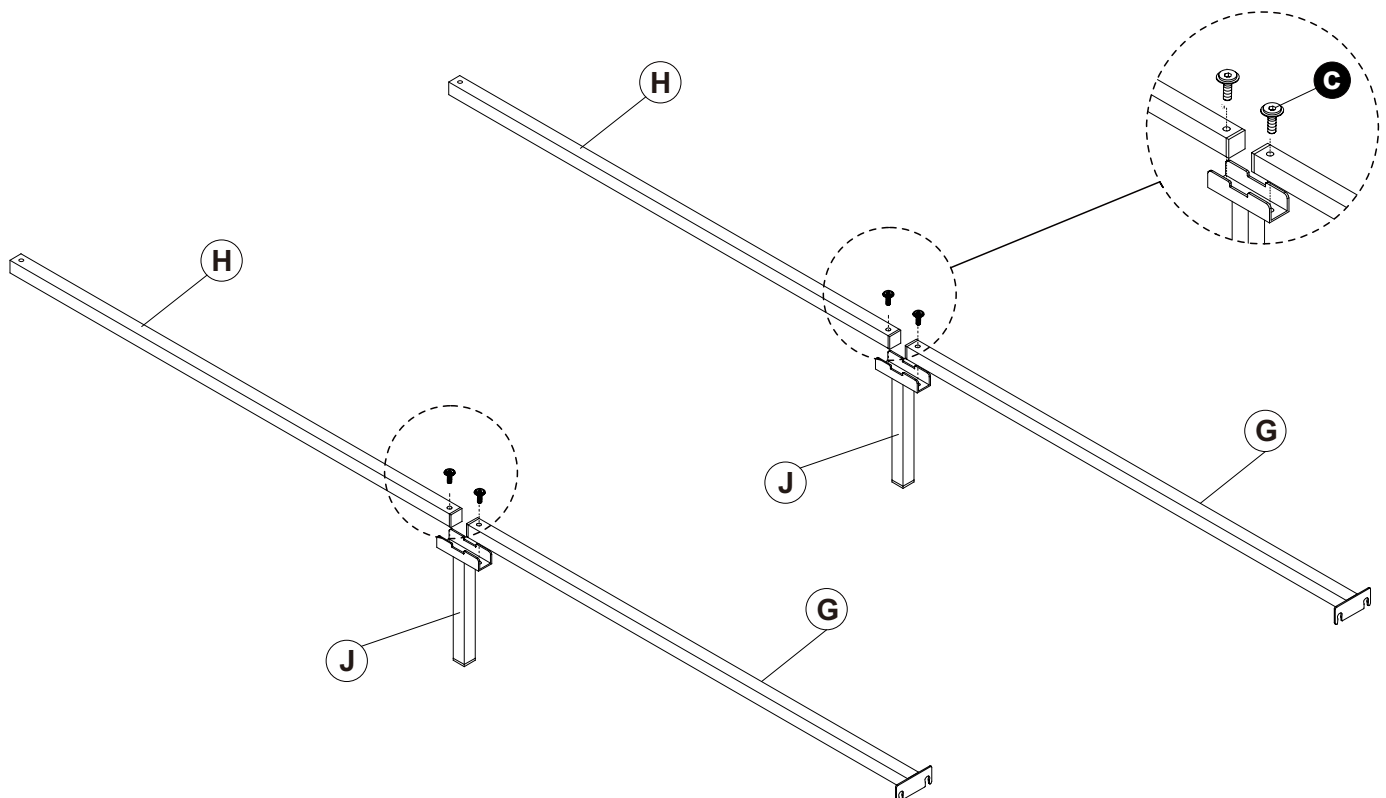


## step13


Please first hang bracket G onto screw a pre-installed on the footboard, and then tighten screw a.

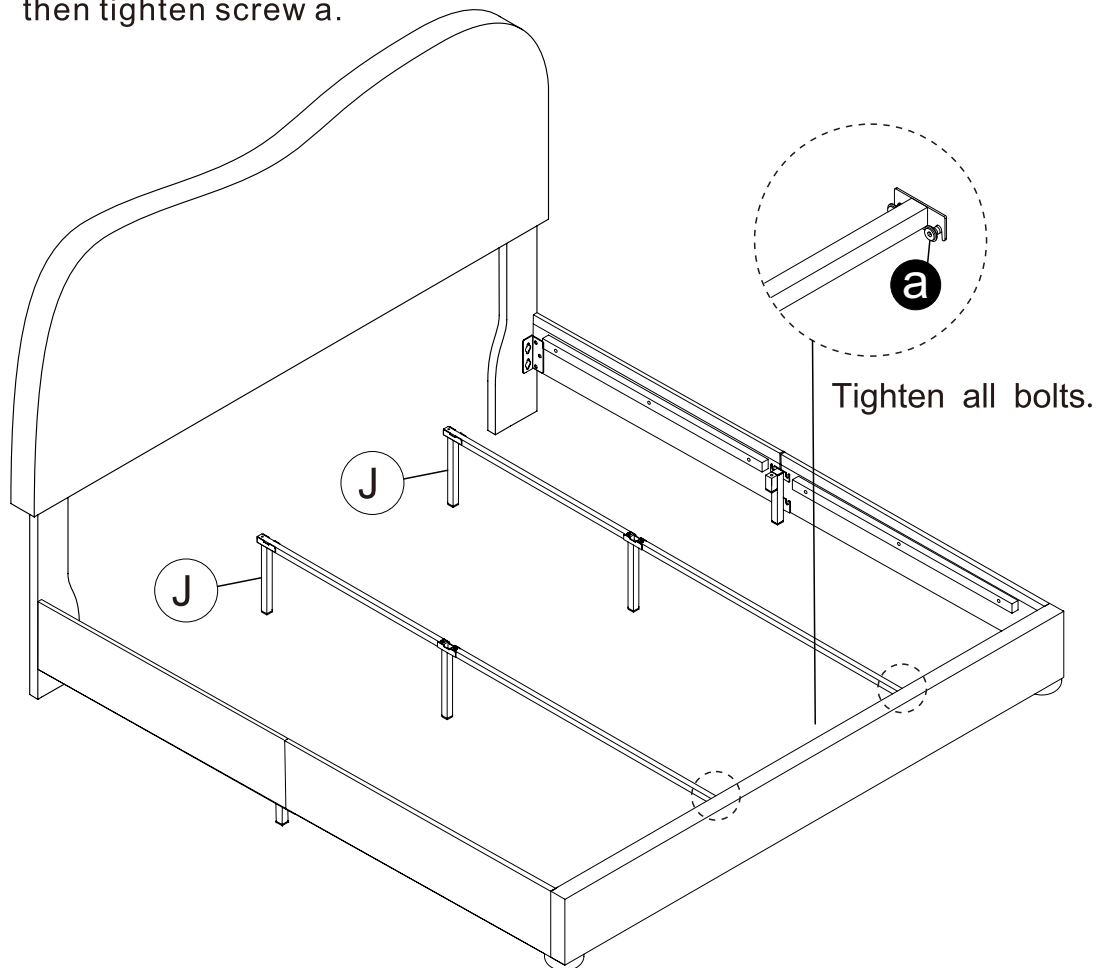

## step14

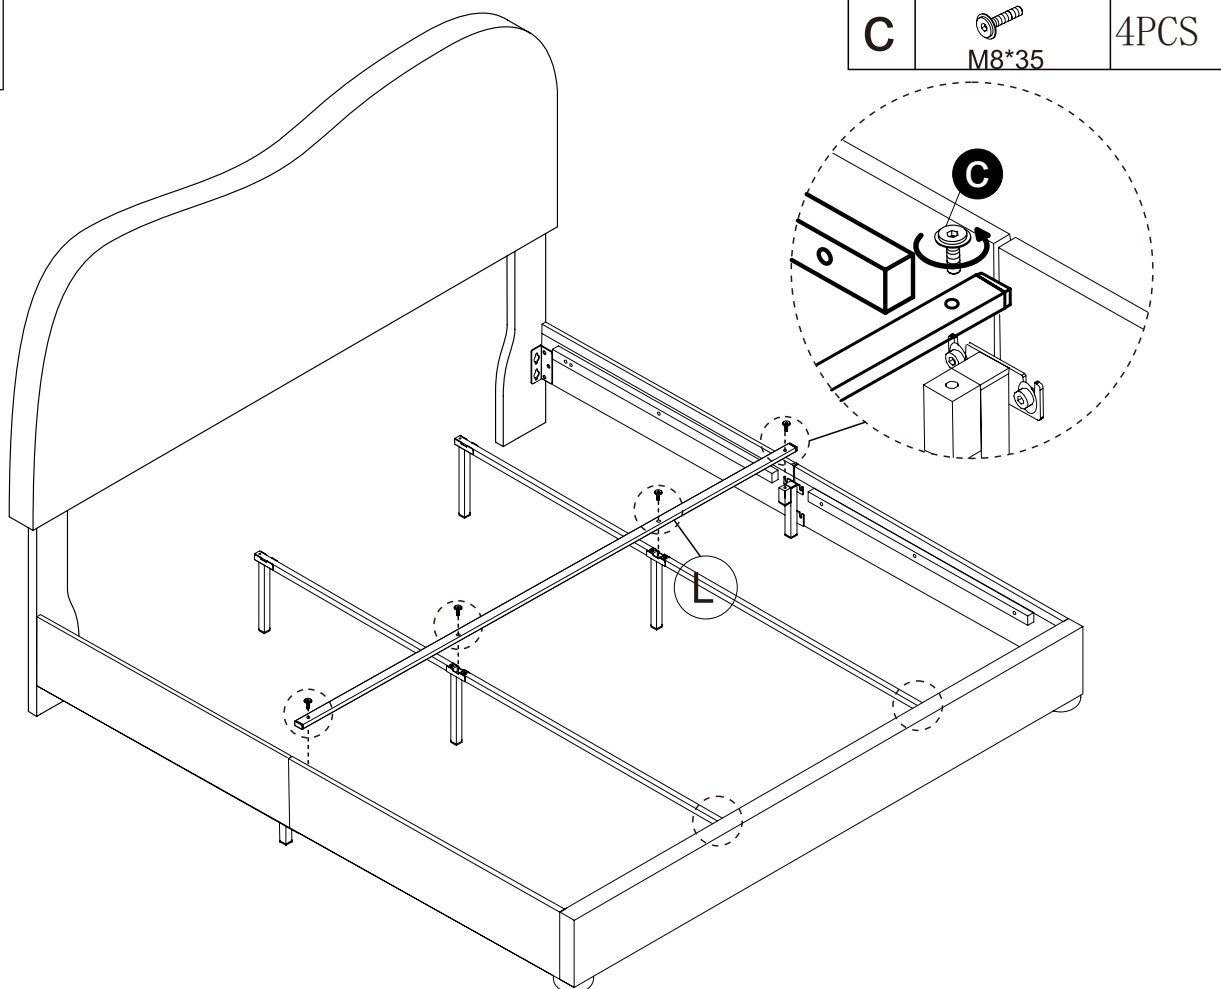

## step15


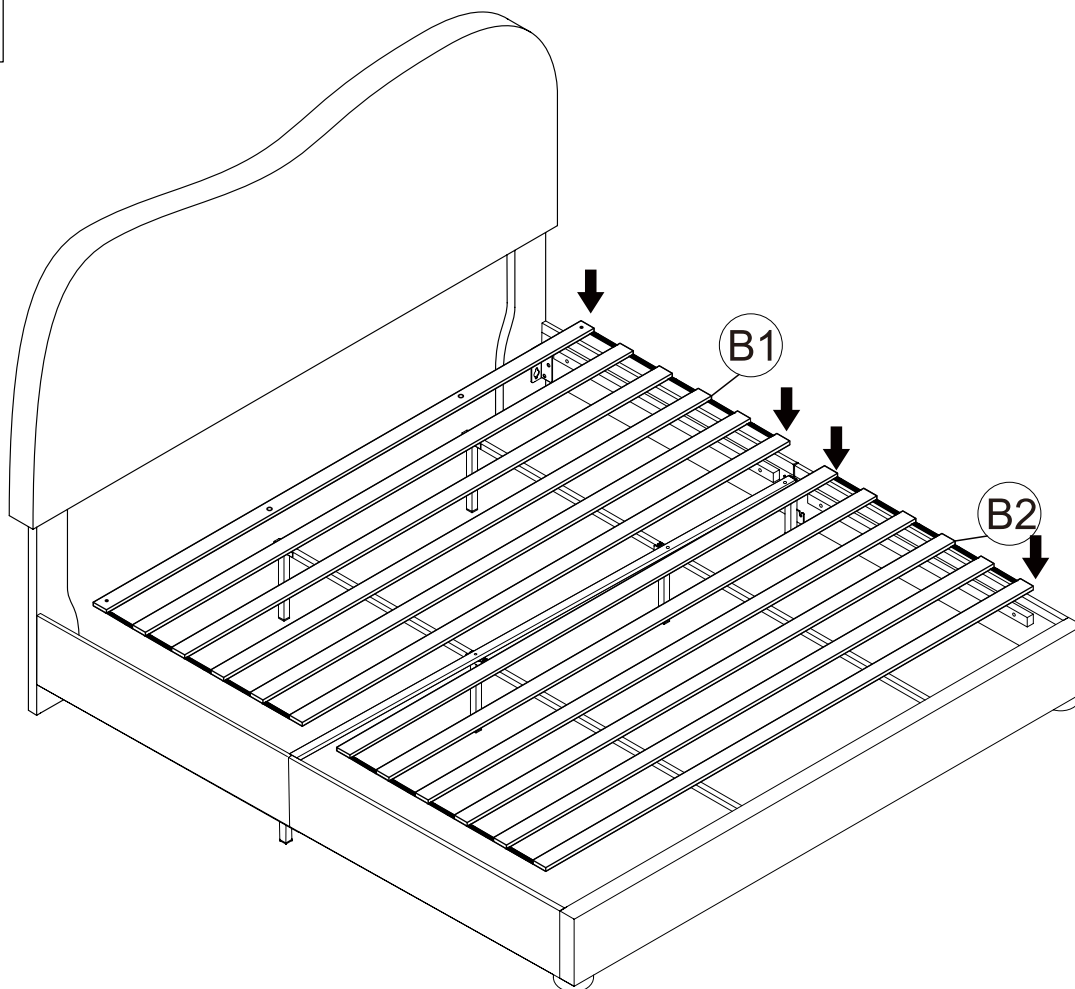


## step16



d

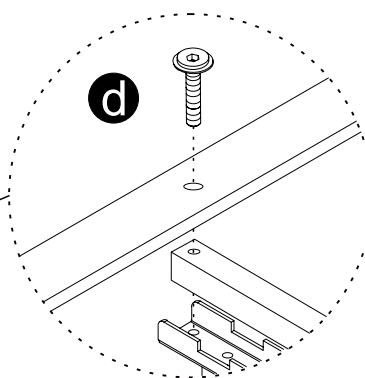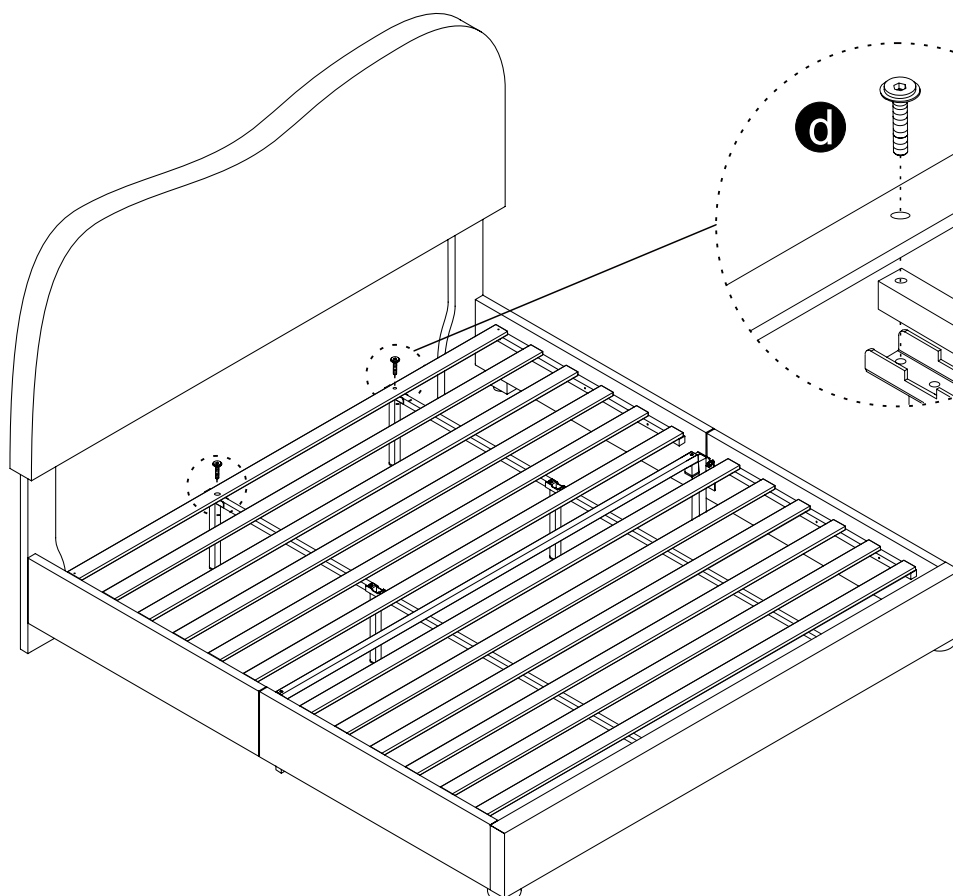

2PCS



# step17

e	 M4*35	2PCS
f		2PCS

