

# 1" DRAPERY ROD INSTALLATION INSTRUCTIONS - 72-144" ROD SET


## BE SURE TO READ ALL INSTRUCTIONS BEFORE STARTING INSTALLATION

Care Instructions: Clean with a soft cloth. Do not use abrasive cleaning agents, solvents, or polishes as they may damage the finish.


Estimated Assembly Time: Approximately 30 minutes

Tools Needed (not included): Drill with 3/16 in drill bit, Phillips screwdriver, Level (recommended), Hammer


### PARTS LIST:

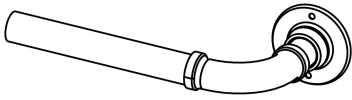


(2x) End bracket

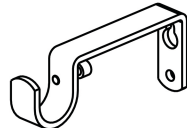

(1x) Center Bracket

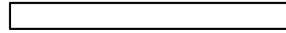

2 Pcs Telescopic Rod  
7/8" Diameter

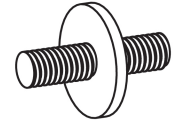

(1x) Connector screw


### End Bracket Installation (Diagram 1):

1. Using end bracket as a guide, locate desired position and mark location on wall for mounting screws.
2. Remove bracket from wall. Drill pilot hole with 3/16" drill bit and use hammer to insert wall anchors (wall anchors may not be necessary for all applications).
3. Attach bracket to wall using screws provided.
4. Repeat steps 1, 2, and 3 for additional end bracket. Use level if necessary.

### Drapery Rod Installation for windows 72 to 99 inches wide:

Use 1 telescopic rod section, (one rod will not be used).


1. Nest smaller diameter rod inside one larger diameter corner rod (diagram 2a).
2. Place drapery panels (not included) onto drapery rod. Gather panels to side nested into end bracket. Extend rod to nest into other end bracket.
3. Separate panels one to each end.

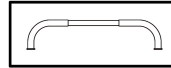

### Drapery Rod Installation for windows 99 to 144 inches wide:

Use 2 telescopic rod sections.

1. Thread connector screw into adaptors on smaller diameter telescopic rods (diagram 2b).
2. Nest smaller diameter rods (connected by threaded screw) inside one larger diameter corner rod and adjust as needed (diagram 2a).
3. Place drapery panels (not included) onto drapery rod. Gather panels to side nested into end bracket. Extend rod to nest into other end bracket.
4. Separate panels one to each end.

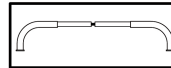

### Center Bracket Installation (Diagram 3):

1. Using center bracket as a guide, locate desired position and mark location on wall for mounting screws.
2. Remove bracket from wall. Drill pilot hole with 3/16" drill bit and use hammer to insert wall anchors (wall anchors may not be necessary for all applications). Use level if necessary.
3. Attach bracket to wall using screws provided.
4. Tighten set screw on center bracket to lock rod in place (diagram 4)

