

WARNING

STRANGULATION HAZARD.

NEVER PLACE BED NEAR WINDOWS WHERE CORDS
FROM BLINDS


OR DRAPES MAY STRANGLE A CHILD.

NEVER SUSPEND STRINGS OVER BED.

NEVER PLACE ITEMS WITH A STRING, CORD, OR
RIBBON,

SUCH AS HOOD STRINGS OR PACIFIER CORDS,
AROUND A CHILD'S NECK. THESE ITEMS MAY CATCH
ON BED PARTS.

ALWAYS FOLLOW ASSEMBLY INSTRUCTIONS.

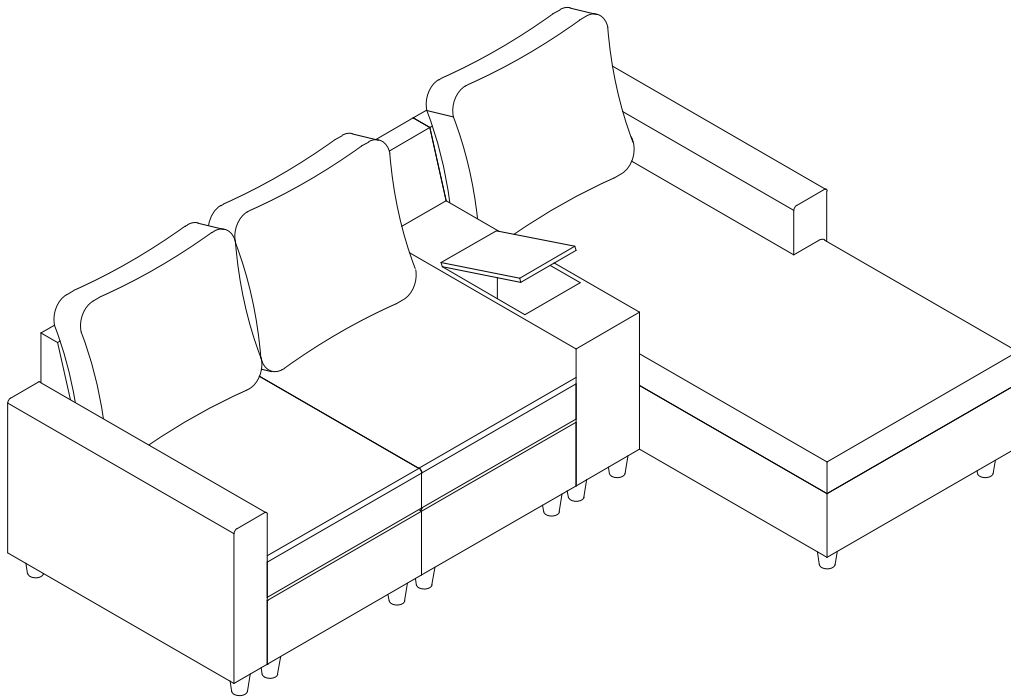






NOTE : THIS BED IS NOT A TOY.

KEEP YOUR CHILD/CHILDREN AT BAY DURING THE
ASSEMBLY PROCESS.









THE BED IS HEAVY.

TO PREVENT INJURY TO YOURSELF OR DAMAGE TO THE
PRODUCT A MININIUM OF TWO ADULTS ARE REQUIRED
WHENEVER MOVING OR LIFTING IT.


PART LIST : N719P458407

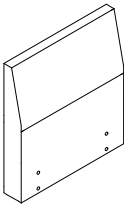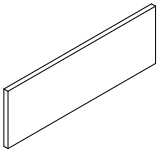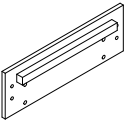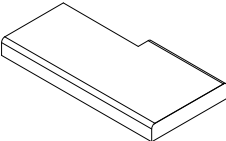 (C) : 3PCS	 (H) : 2 PCS	 (I) :2 PCS
 (G) : 1PCS	 (O) : 1PCS	


PART LIST : N719P458408

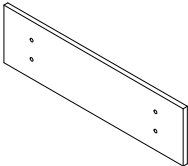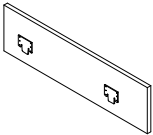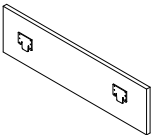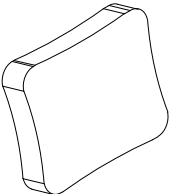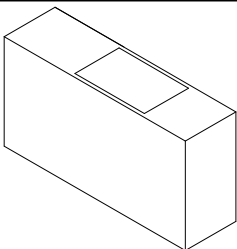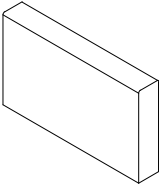 (K) : 1PC	 (L) : 2PCS	 (M) : 1PC
 (Q) : 3PCS	 (B) : 1PC	 (D) : 1PC
 (F) : 1PC	Hardware 	


PART LIST : N719P458409

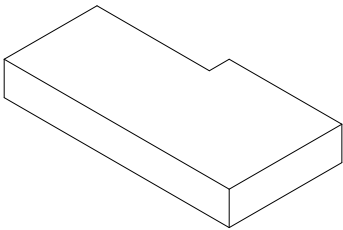


(A) : 1PC

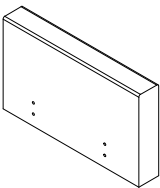


(E) : 1PC

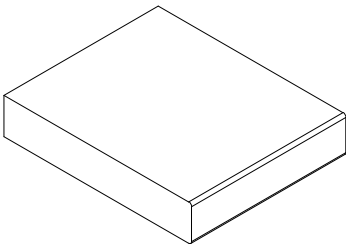

(P) : 2PCS




(G) : 1PCS



(Q) : 21PCS



Hardware

(PACKED IN A BOX N719P458408)


Label	Picture	DESCRIPTION	QTY
①		BOLT (5/16 X 30MM)	22
②		BOLT (5/16 X 15MM)	8
③		BOLT (1/4 X 15MM)	20
④		SCREW (M4X 15MM)	16
⑤		FLAT WASHER (5/16)	30
⑥		LOCK WASHER(5/16)	30
⑦		FLAT WASHER (1/4)	16
⑧		LOCK WASHER (1/4)	16
⑨		RIGHT LINK	2
⑩		LEFT LINK	2
⑪		ALLEN WRENCH	1
⑫		IRON CONNECTING PLATE	4

Assembly Steps

Overview

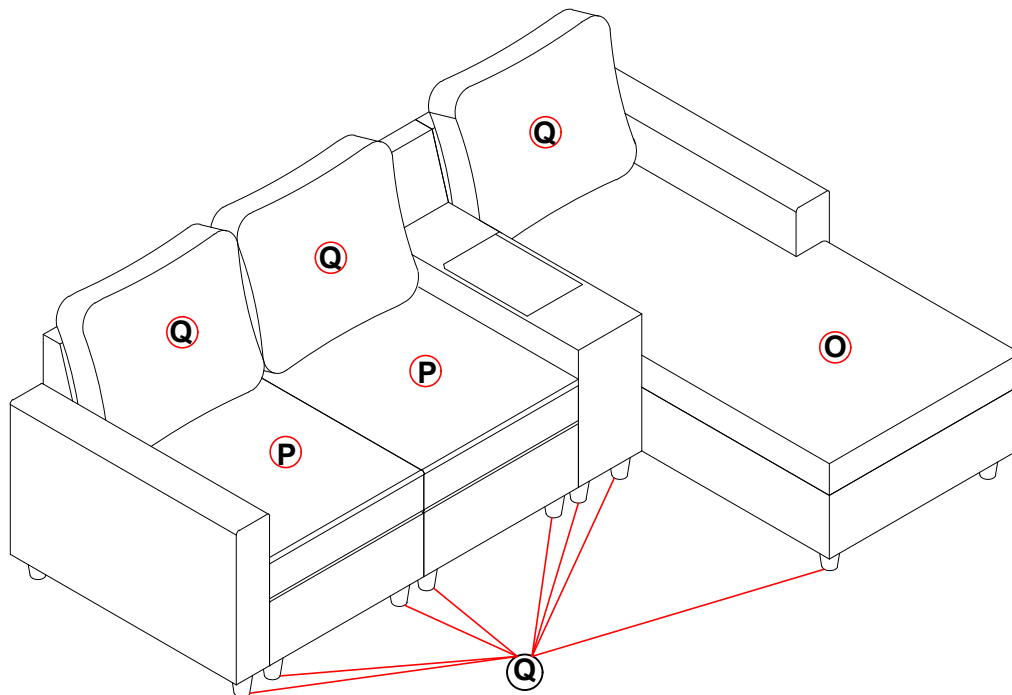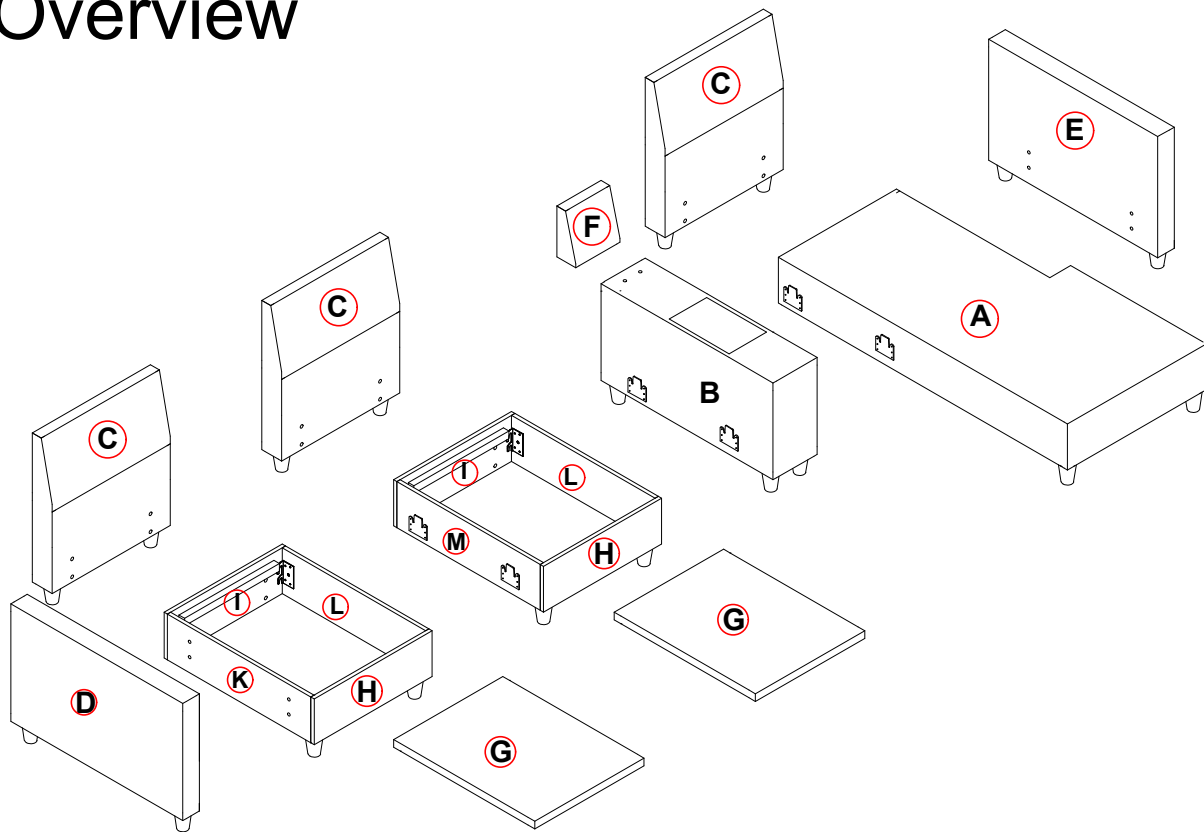


STEP 1

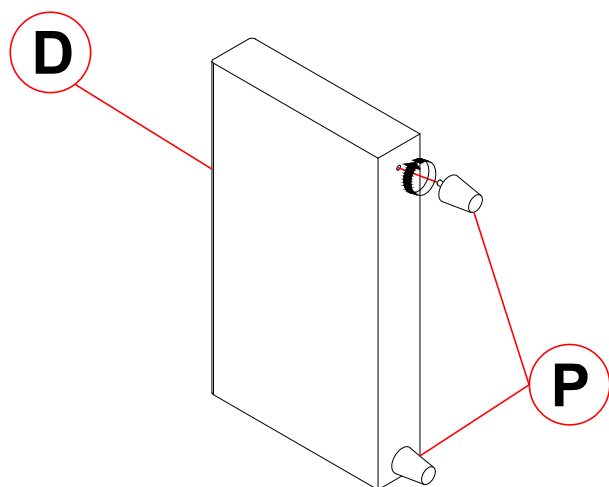

INSTALL THE WOODEN LEGS (P) UNDER THE LEFT (D) AND RIGHT (E) HANDRAILS
BY PLACING THEM IN POSITION
AND TIGHTEN THEM BY ROTATION THE BASE CLOCKWISE
AS ILLUSTRATED


STEP 2

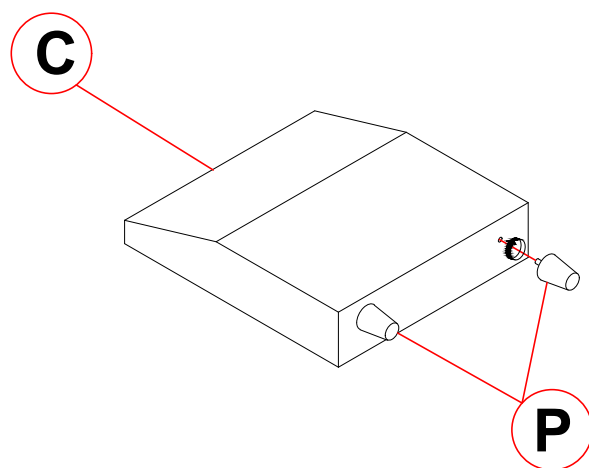

INSTALL THE WOODEN LEGS (P) UNDER THE BACKREST (C) AND BY PLACING THEM IN
POSITION
TIGHTEN BY ROTATING THE BASE CLOCKWISE
AS ILLUSTRATED
PERFORM THE SAME PROCEDURE WITH THE REMAINING PARTS (C)

STEP 3


③ x 4	⑨ x 2	⑩ x 2	④ x 16
			

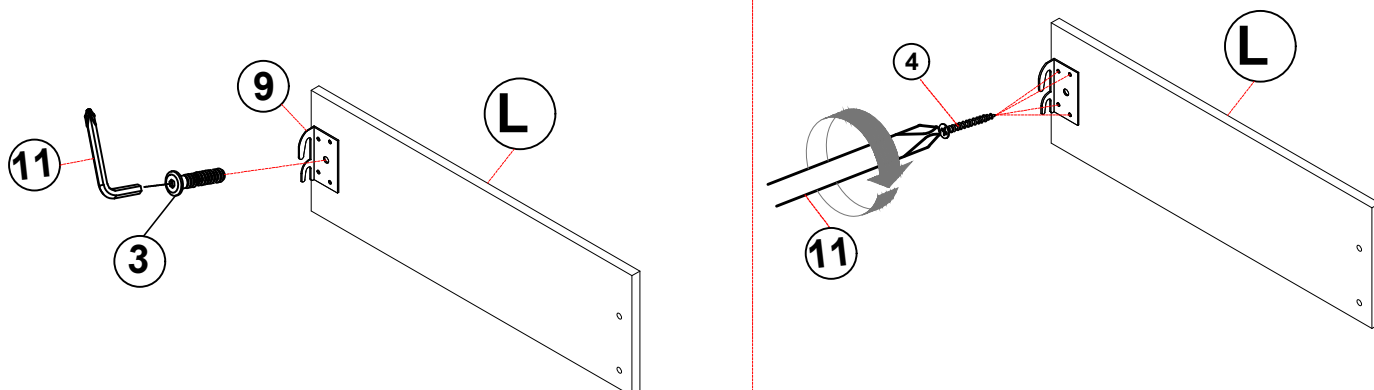

Place part (9) in the correct position on part (L). Secure it with bolt (3) together with lock (11), tighten. Then, use screw (4) to secure and further reinforce part (9) as illustrated. Repeat the same procedure for part (10) on parts (K) and (M).



STEP 4

③ x 8	⑦ x 8	⑧ x 8	⑫ x 4
			

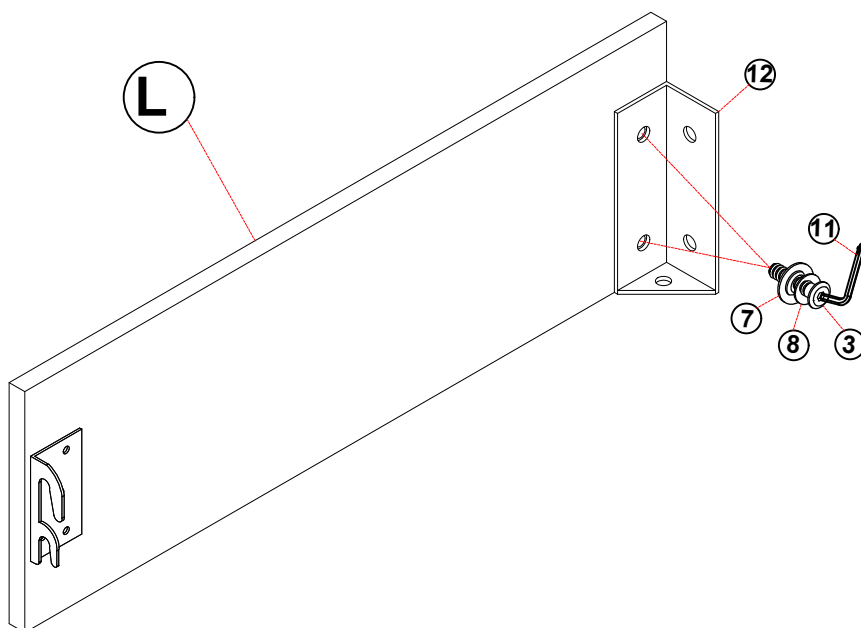



Attach part (12) to part (L). Secure it with bolt (3), together with washers (7) and (8), and lock with lock (12). Tighten as illustrated. Repeat the same procedure to attach part (12) to the remaining parts (L) AND (K) AND (M).

STEP 5

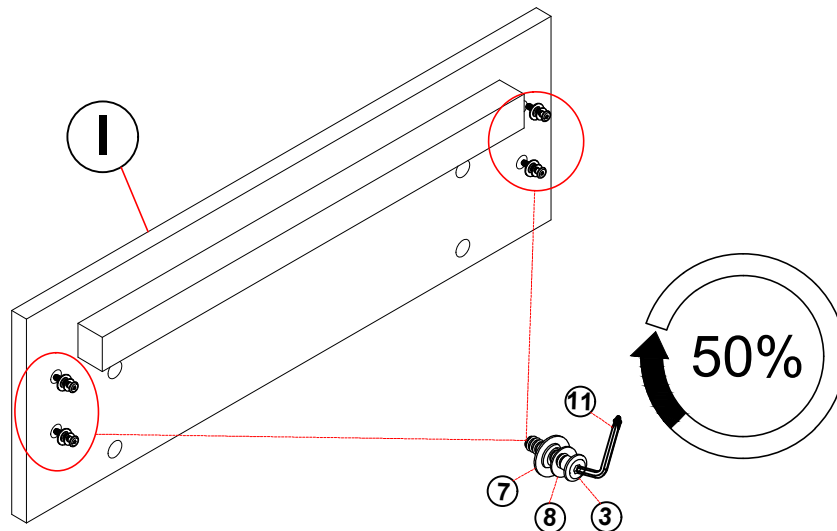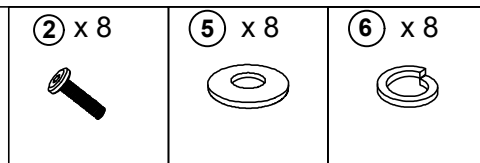


Bolt (2) is assembled with 50% of the components (I) as shown in the illustration.

STEP 6

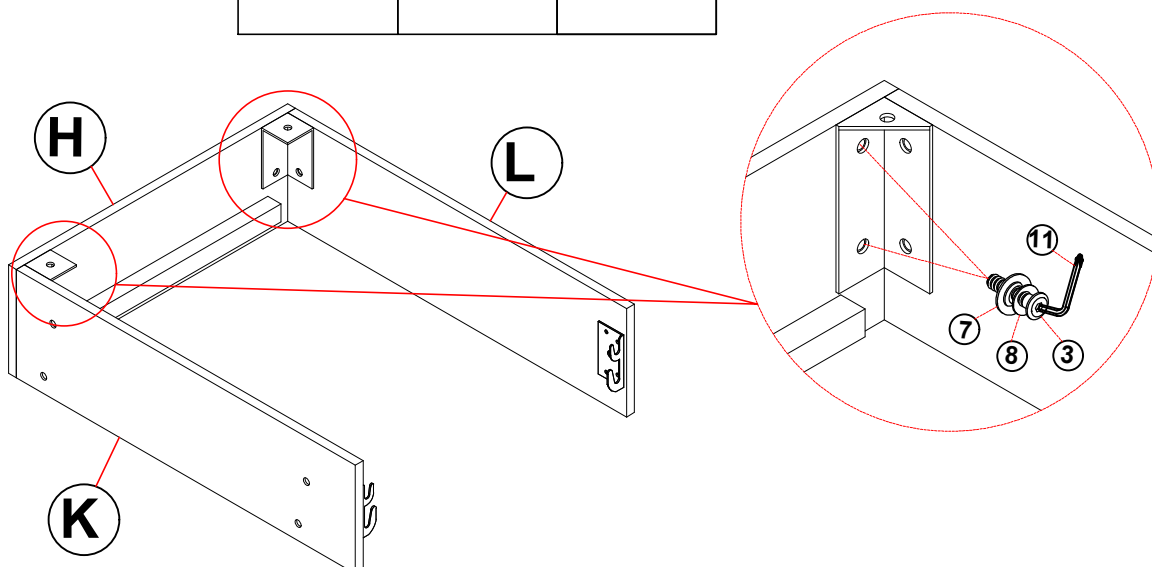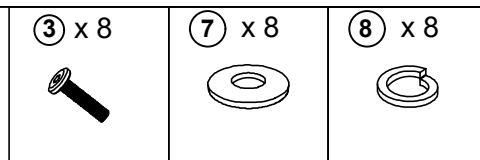


Attach the left rail (K) to the front rail (H) using bolts (3), spring washer (7), and flat washer (8). Tighten with a hex wrench (11) by turning clockwise until secure. Repeat the same procedure to attach the right rail (L) to rail (H). Tighten the bolts in sequence, as illustrated. Perform the same procedure with the remaining (H), (M), and (L) parts.

STEP 7

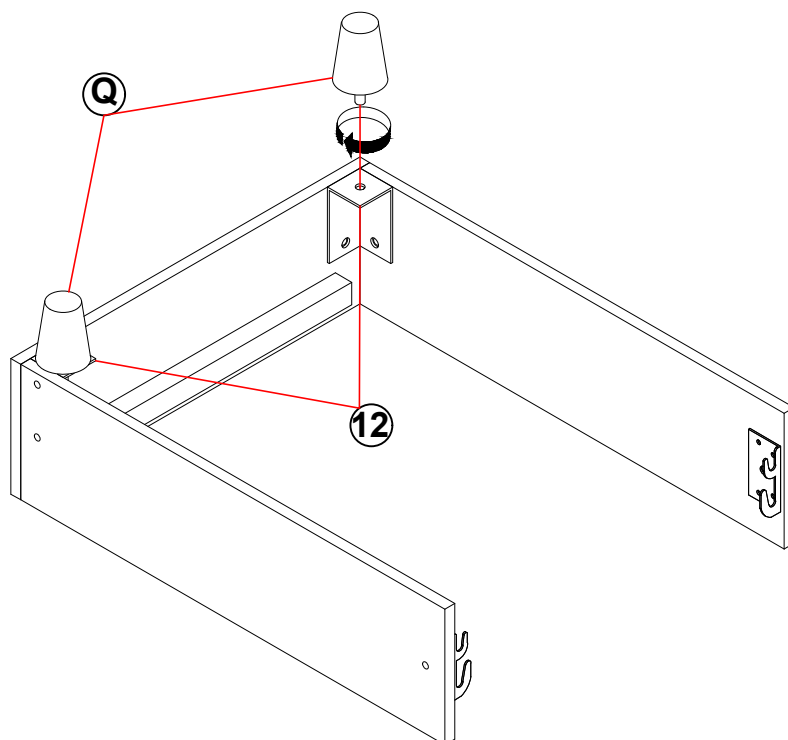



Attach the foot (Q) to PART (12). Tighten by rotating the base clockwise. As illustrated. DO THE SAME ON THE REMAINING PARTS (12).

STEP 8

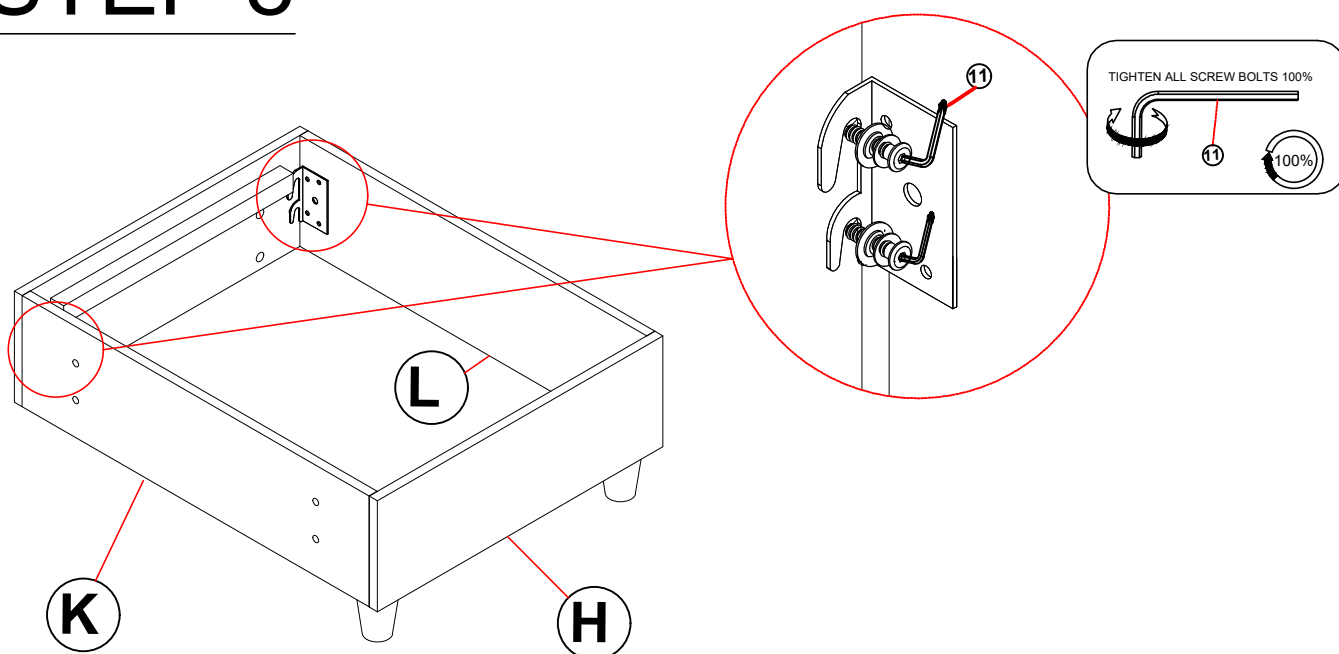


Align part (I) with parts (K) and (L). Tighten all bolts (2). All parts must be installed perpendicularly and on a flat surface. As illustrated, do the same with the remaining parts.

STEP 9

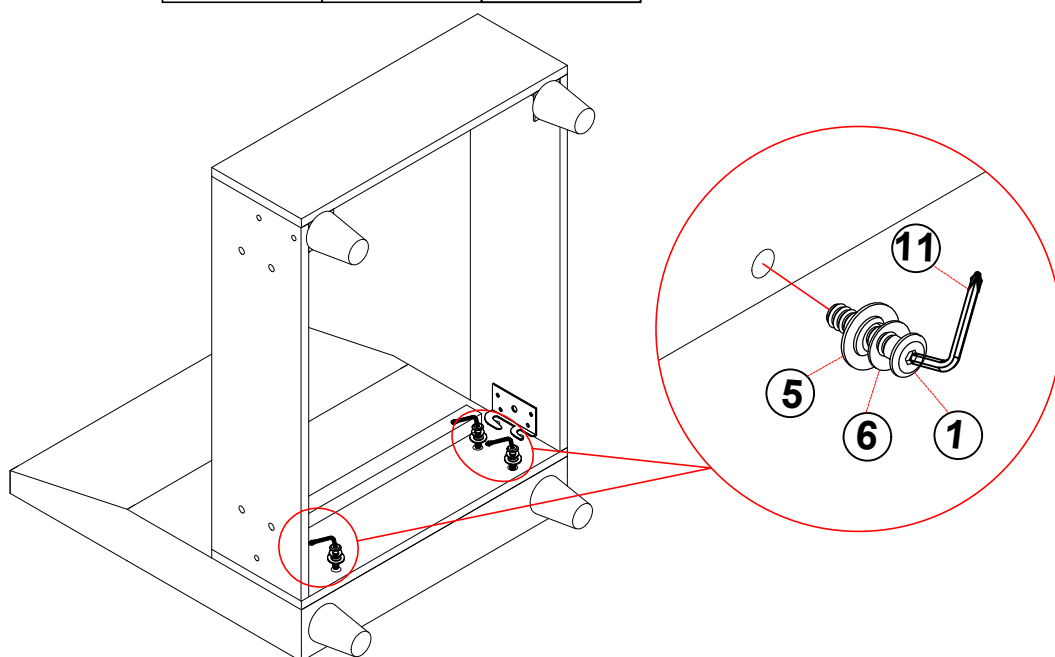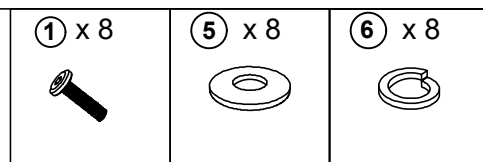

Place the backrest (C) on a flat surface. Install seat frame ONE.
Align the holes on part (I) with the corresponding holes on the backrest (C).
Secure using bolt (1), flat washer (5), and spring washer (6); tighten firmly.
Repeat the same steps for the remaining seat frame ONE.

STEP 10

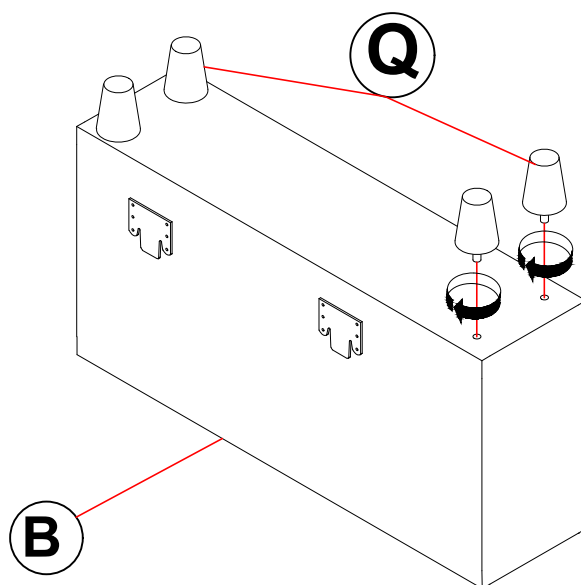

Attach the wooden leg (Q) to part (B).
Tighten by rotating clockwise.
As shown in the illustration.

STEP 11


① x 2



⑤ x 2




⑥ x 2

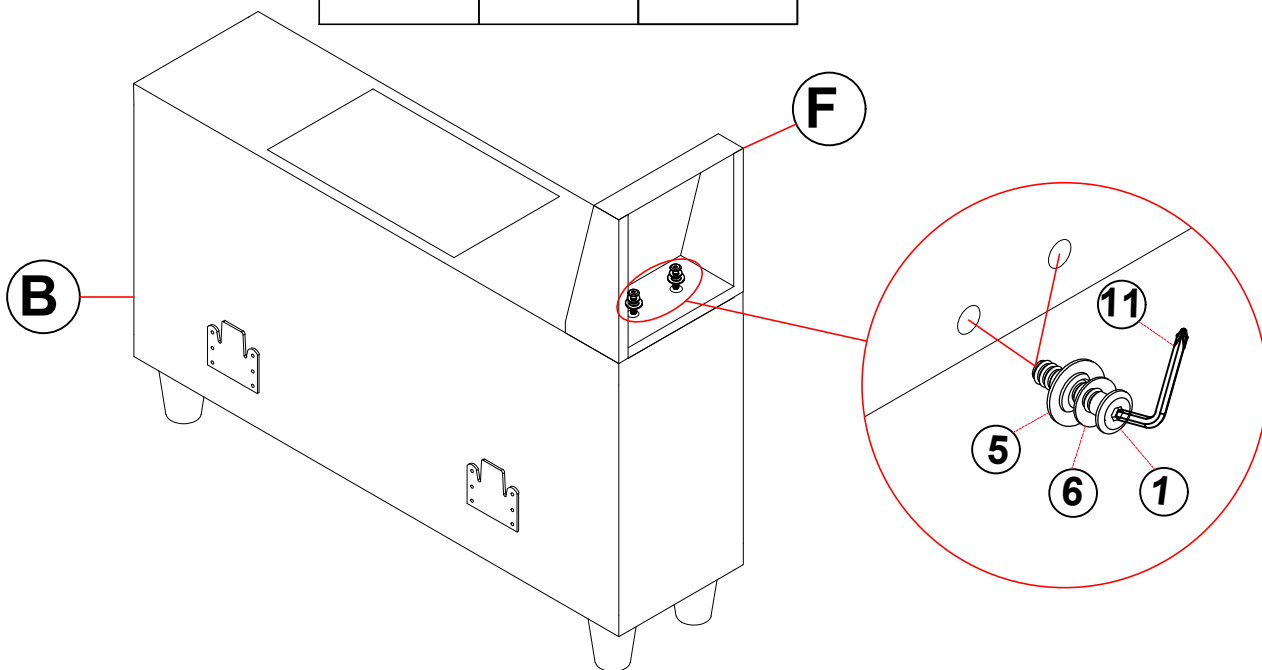

Place part (F) in the correct position on part (B).
Secure using bolt (1), flat washer (5), and spring washer (6).
Use an Allen key to (11) tighten firmly.

STEP 12

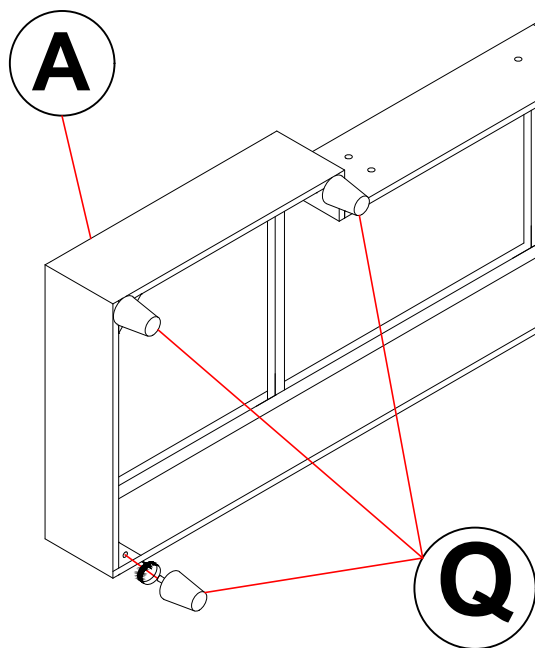

Place part (A) on a flat surface, as shown.
Attach the wooden leg (Q) to part (A) by rotating clockwise.

STEP 13


① x 4



⑤ x 4



⑥ x 4

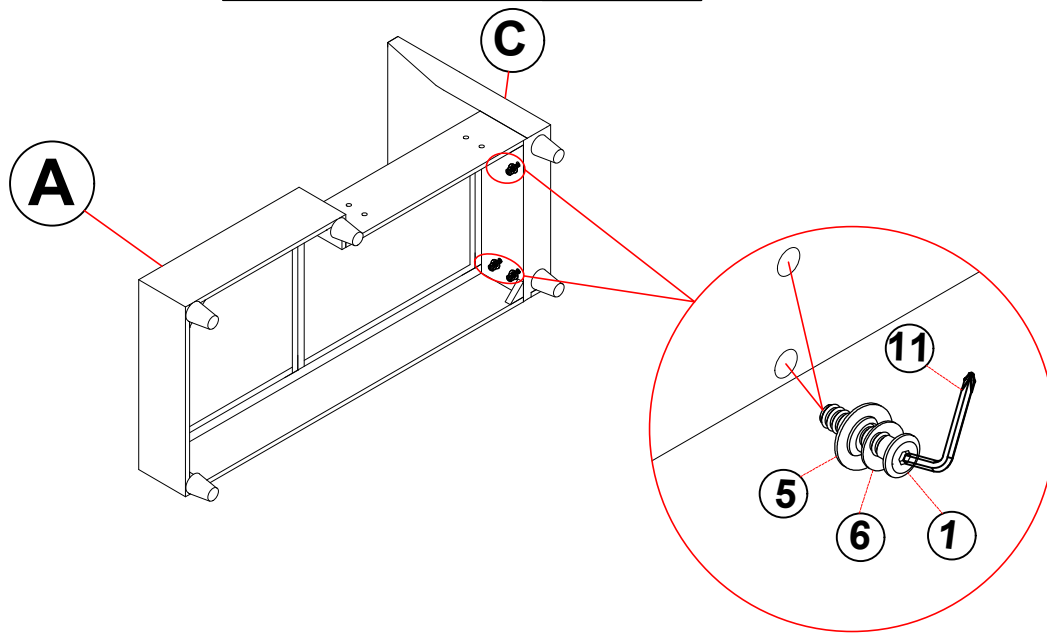

Place the backrest (C) against the chair frame (A).

Align the holes on part (A) with the corresponding holes on the backrest (C).

Secure using bolt (1), flat washer (5), and spring washer (6); tighten firmly, as shown in the illustration.

STEP 14


① x 2



⑤ x 2



⑥ x 2

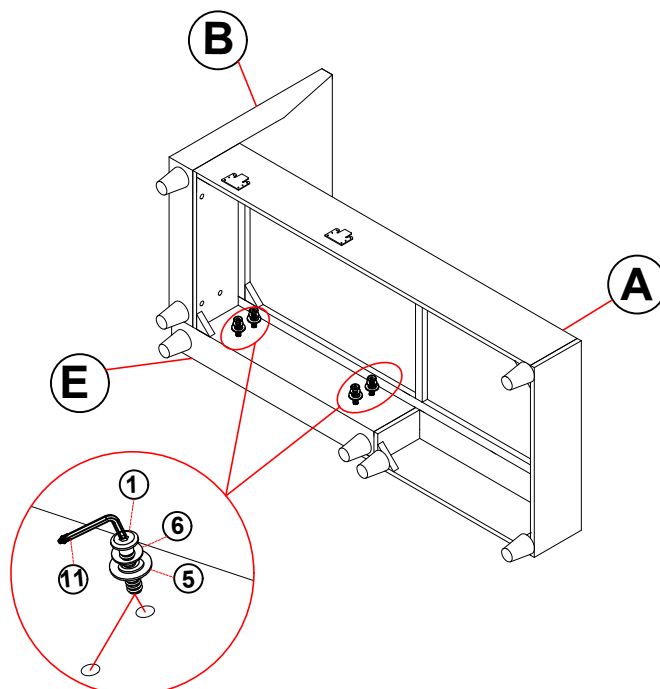

Place the chair frame (A) onto the armrest (E).

Align the holes on the armrest (E) with those on the chair frame (A).

Secure using bolt (1), flat washer (5), and spring washer (6).

Use an Allen wrench to tighten and fix the two parts together, as shown in the illustration.

STEP 15


① x 4



⑤ x 4



⑥ x 4

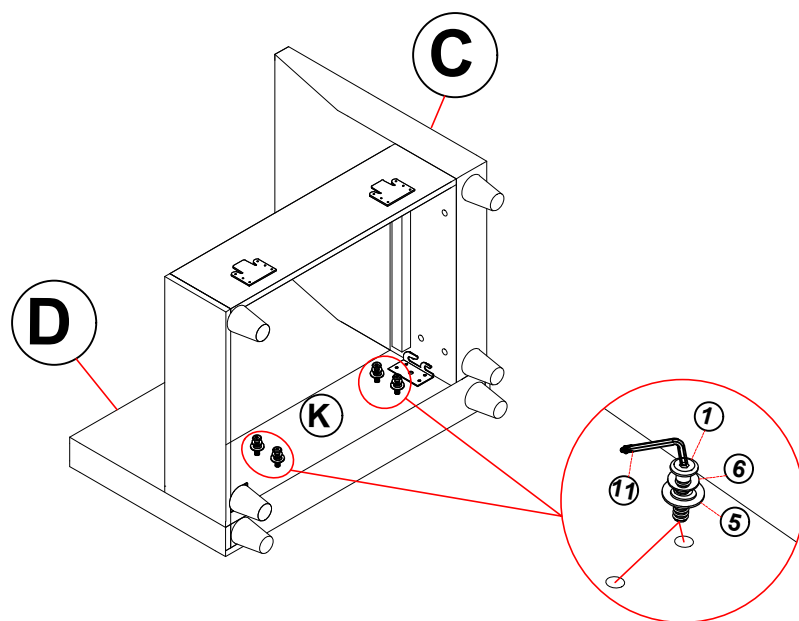

Place the seat frame next to the armrest (D).


Align the holes (K) on the seat frame with the holes on the armrest.

Insert the bolts (1) through the aligned holes.

Attach a flat washer (5) followed by a spring washer (6) to each bolt.

Use a hex wrench (11) to tighten the bolts and secure the two parts together, as shown in the illustration.

STEP 16

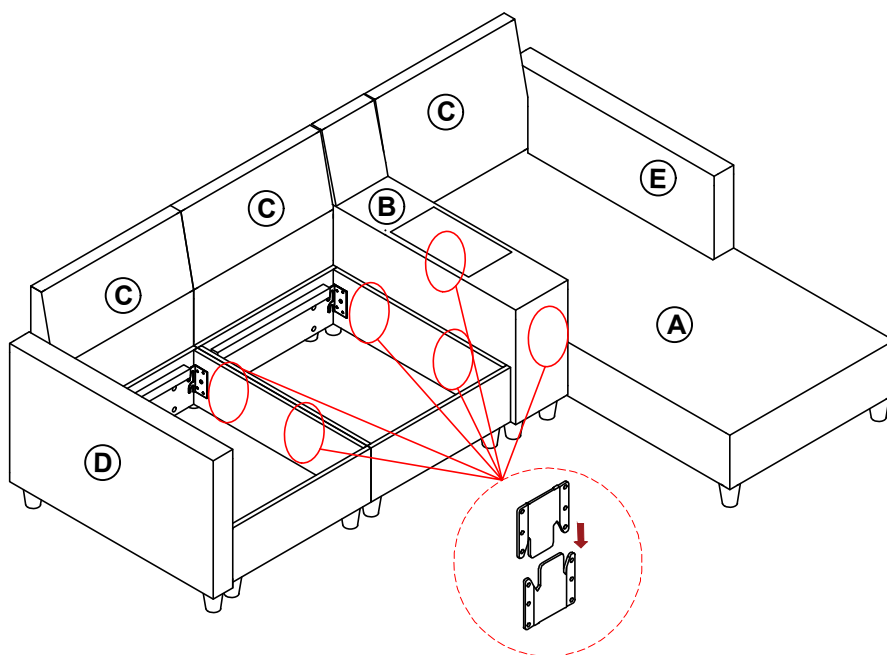


Bring all the wooden frame parts close together as shown in the illustration.

Continue connecting the parts by aligning them correctly with the metal connectors and pressing them down into place.


This process should be carried out from left to right and requires two adults to complete.

STEP 17

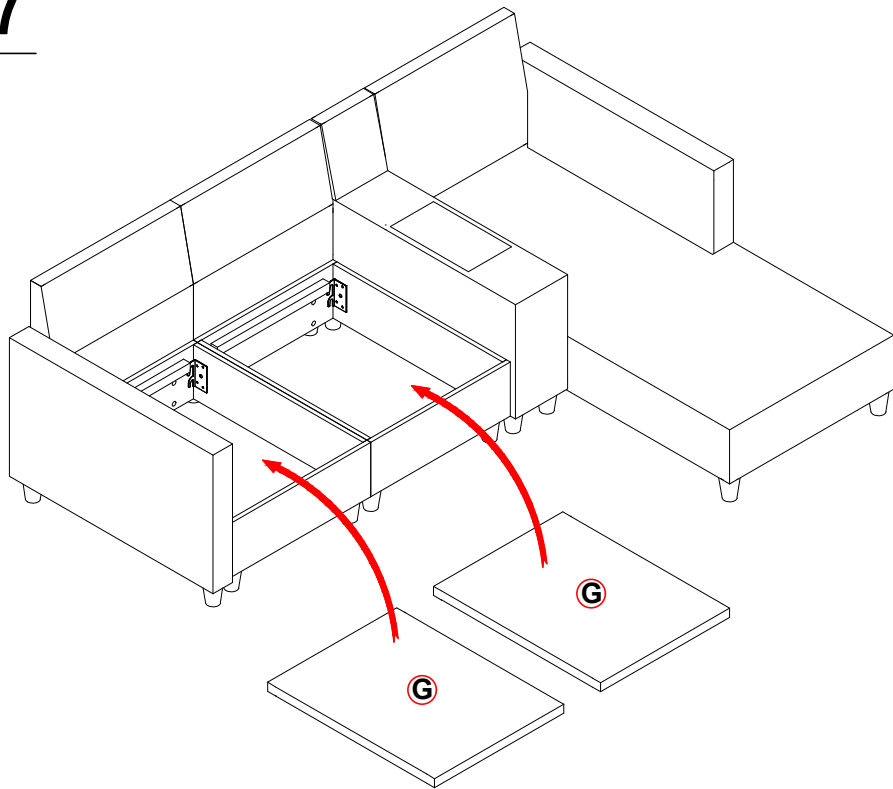


Proceed to place the seat support frame (G) into position on the chair frame as shown in the illustration.

STEP 18

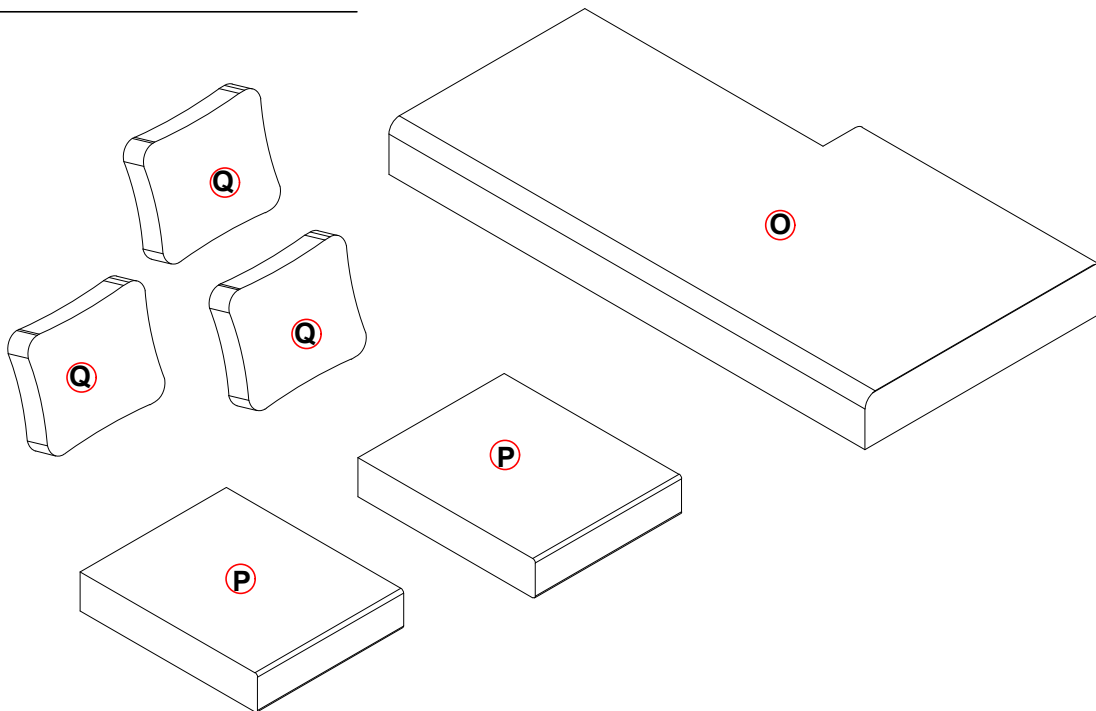


Cut open the packaging of the seat cushions (F), (Q), and (O), and take them out. It may take up to 72 hours for the seat cushion (F) to fully expand.

STEP 19

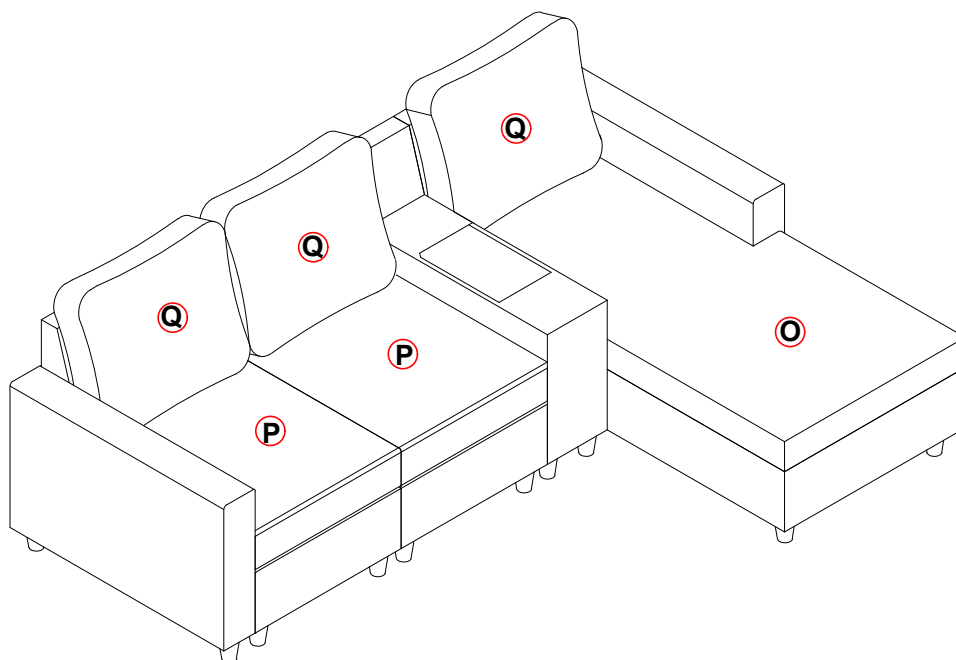

Place all cushions and pillows in their correct positions as shown in the illustration.

STEP 20

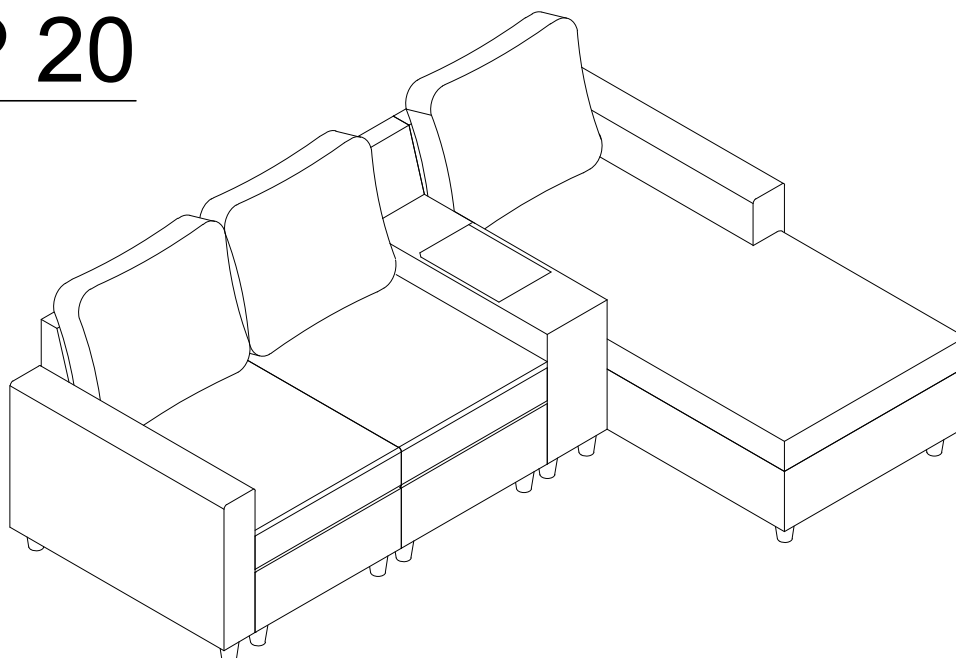

Place the sofa on a flat surface.

Check and ensure all parts are securely connected.

Do not press too hard; gently shake the bed.

This will help align all parts at the connection points.

Warning!! IF THE SOFA IS NOT STABLE, IT MAY DAMAGE THE PRODUCT.

ENSURE ALL SCREWS ARE TIGHTENED.

THE BED IS READY TO USE.

NOTE 2: THIS BED CAN ONLY BE USED ON A FLAT SURFACE.

Your SOFA is ready to use. This SOFA can only be used on a flat, level surface.