

---

# ASSEMBLY INSTRUCTIONS

## KITCHEN CART WITH GRA




**We are here to help!**

1

MADE IN CHINA

# PARTS IDENTIFICATION

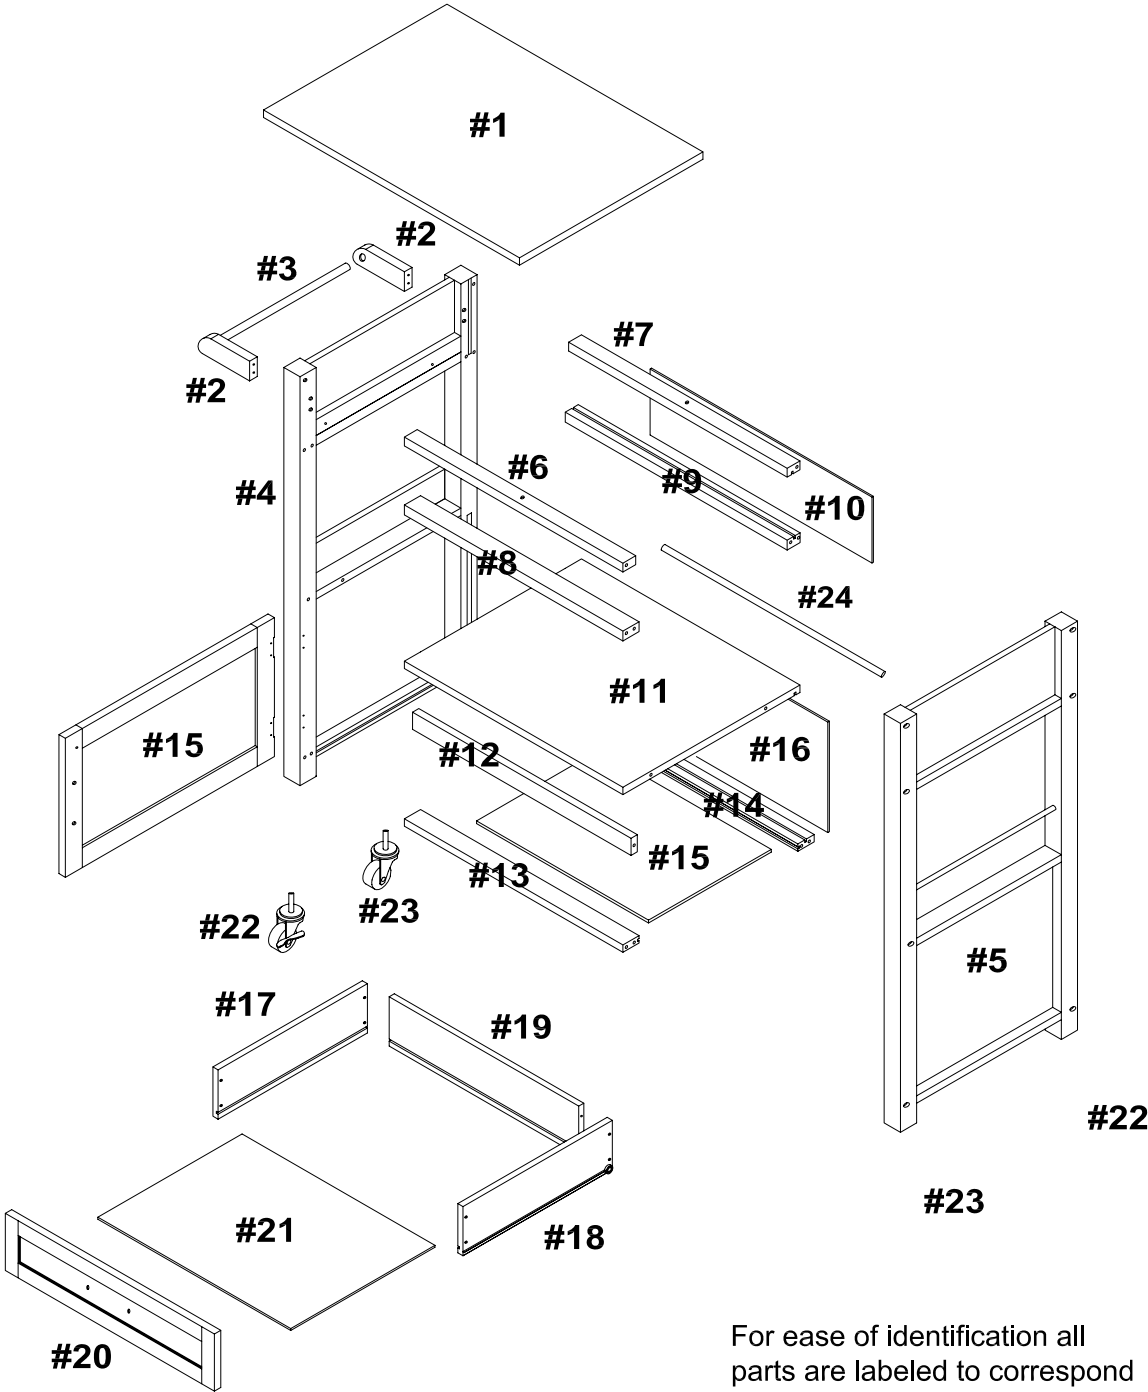






---

## PARTS IDENTIFICATION

| ITEM | DESCRIPTION       | QTY |
|------|-------------------|-----|
| #1   | TOP PANEL         | 01  |
| #2   | BLOCK             | 02  |
| #3   | BAR               | 01  |
| #4   | LEFT FRAME        | 01  |
| #5   | RIGHT FRAME       | 01  |
| #6   | FRONT RAIL        | 01  |
| #7   | BACK RAIL         | 01  |
| #8   | FRONT CROSS BAR   | 01  |
| #9   | BACK CROSS BAR    | 01  |
| #10  | BACK PANEL        | 01  |
| #11  | FIXED SHELF       | 01  |
| #12  | LOWER CROSS BAR   | 01  |
| #13  | BOTTOM RAIL       | 01  |
| #14  | BACK RAIL         | 01  |
| #15  | BOTTOM PANEL      | 01  |
| #16  | BACK PANEL        | 01  |
| #17  | LEFT DRAWER SIDE  | 01  |
| #18  | RIGHT DRAWER SIDE | 01  |
| #19  | DRAWER BACK       | 01  |
| #20  | DRAWER FRONT      | 01  |
| #21  | DRAWER BOTTOM     | 01  |
| #22  | TUBE              | 01  |



## HARDWARE IDENTIFICATION

Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.


| ITEM | PICTURE                                                                                                         | DESCRIPTION          | QTY |
|------|-----------------------------------------------------------------------------------------------------------------|----------------------|-----|
| A    |  (Ø5mm x 55mm)<br>Not to Scale | SCREW                | 18  |
| B    |  (Ø8mm x 30mm)<br>Full size    | WOODEN DOWEL         | 12  |
| C    |  (45mm)<br>Not to Scale        | MAGNET DOOR STOP     | 01  |
| D    |  (Ø3mm x 14mm)<br>Full size    | SCREW                | 02  |
| E    |  Not to Scale                | HINGE                | 02  |
| F    |  (Ø3mm x 12mm)<br>Full size  | SCREW                | 09  |
| G    |  Not to Scale                | METAL PLATE          | 01  |
| H    |  Not to Scale                | HANDLE               | 02  |
| I    |  (Ø4mm x 10mm)<br>Full size  | BOLT                 | 02  |
| J    |  Not to Scale                | CASTER WITHOUT BRAKE | 02  |
| K    |  Not to Scale                | CASTER WITH BRAKE    | 02  |

## HARDWARE IDENTIFICATION


Please line up the hardware with the correct full size image to make sure you are installing the hardware correctly.

| ITEM | PICTURE                                                                                                                                                                                            | DESCRIPTION          | QTY |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|-----|
| J    |   (Ø4mm x 30mm)<br>Full size     | SCREW                | 08  |
| K    |   (Ø3.5mm x 12mm)<br>Full size   | SCREW                | 04  |
| L    |  Not to Scale                                                                                                     | SLIDE                | 01  |
| M    |  Not to Scale                                                                                                     | SLIDE                | 01  |
| N    |  (Ø8mm x 20mm)<br>Full size                                                                                     | WOODEN DOWEL         | 02  |
| O    |  Not to Scale                                                                                                   | ALLEN WRENCH         | 01  |
| P    |  Not to Scale                                                                                                   | CASTER WITHOUT BRAKE | 02  |
| Q    |  Not to Scale                                                                                                   | CASTER WITH BRAKE    | 02  |
| R    |   (Ø4mm x 16mm)<br>Full size | BOLT                 | 02  |
| S    |  Not to Scale                                                                                                   | WOODEN PLUS          | 14  |

## STEP 1.

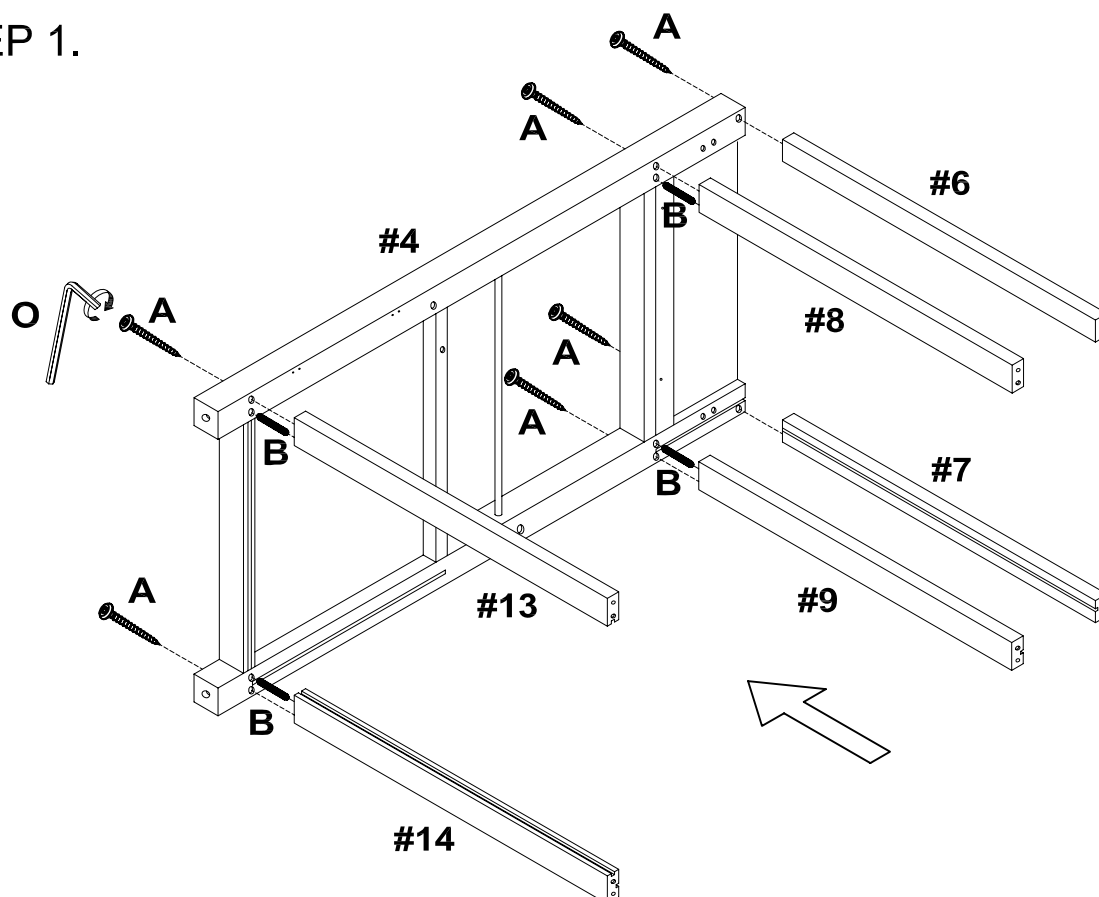


## STEP 2.

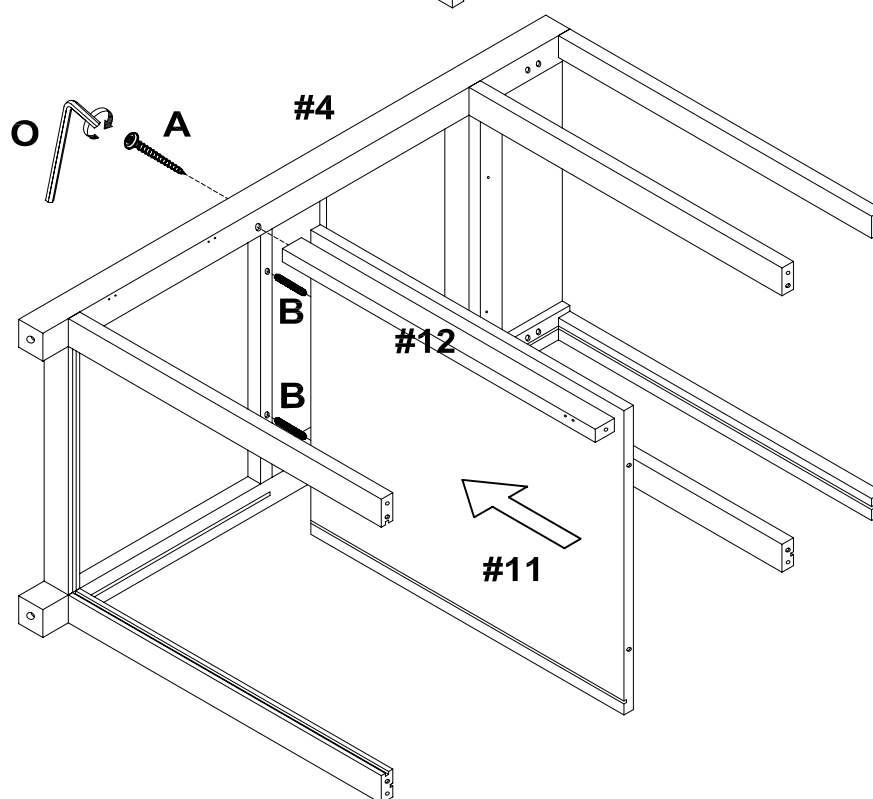
**IMPORTANT:**

1. DO NOT TIGHTEN BOLTS COMPLETELY UNTIL ALL BOLTS ARE COMPLETELY LINED UP AND INSERTED INTO HOLES / NUTS.
2. DO NOT OVER TIGHTEN SCREWS AND BOLTS TO AVOID STRIPPING.



STEP 3.

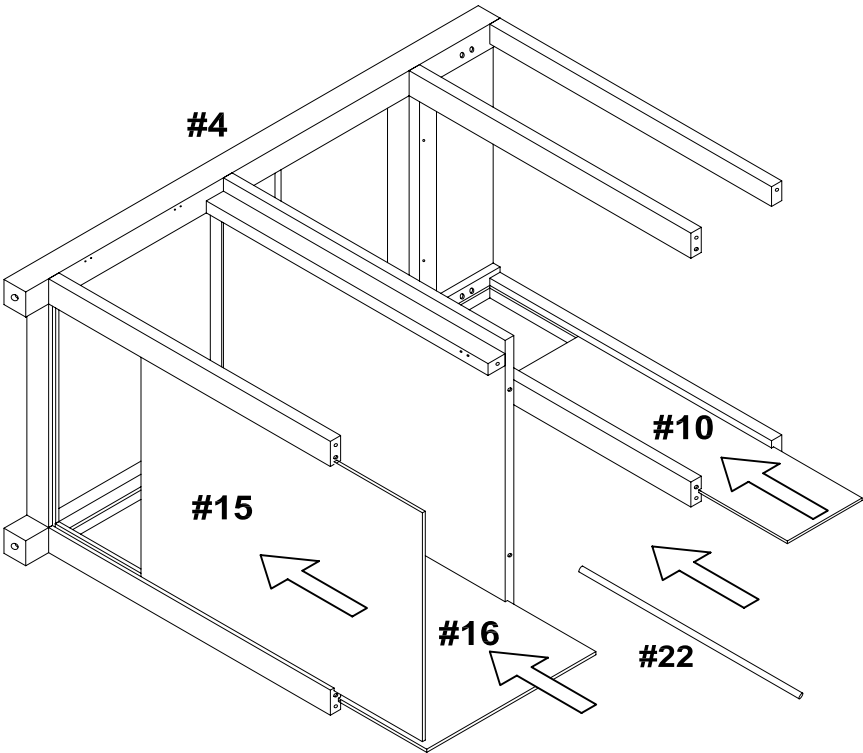


STEP 4.

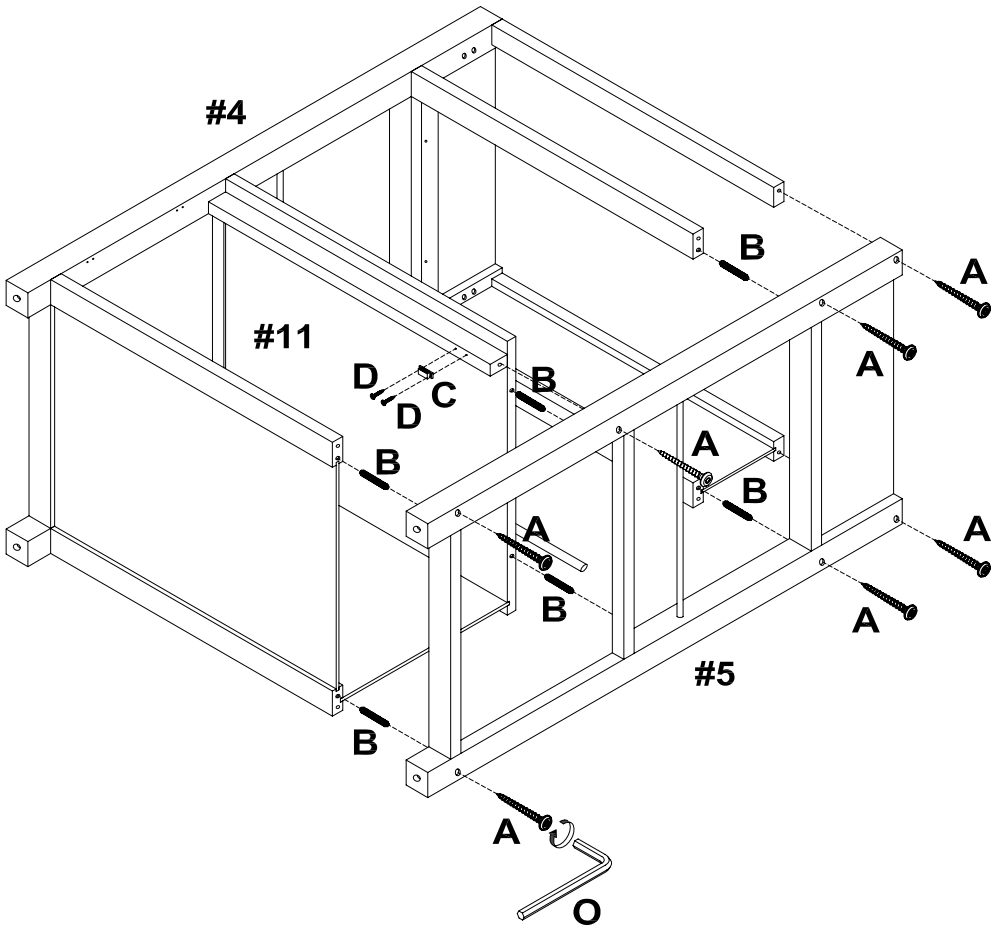


STEP 5.

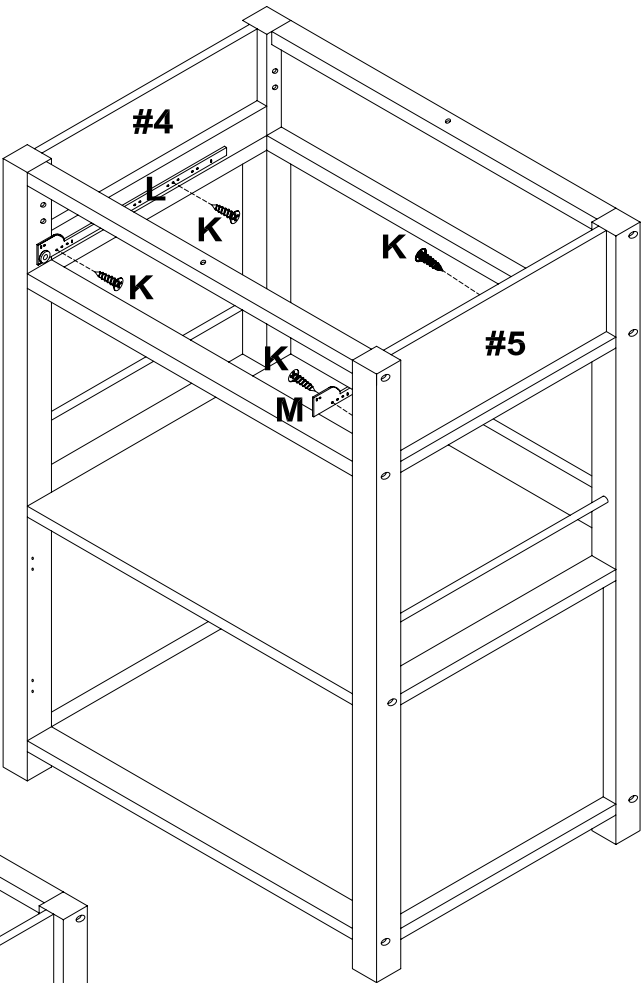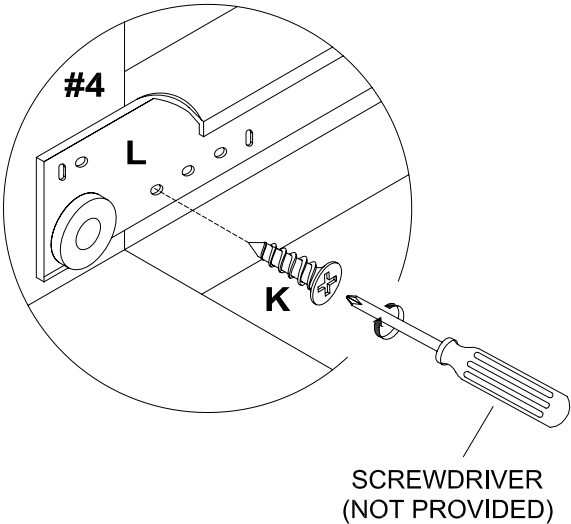


STEP 6.

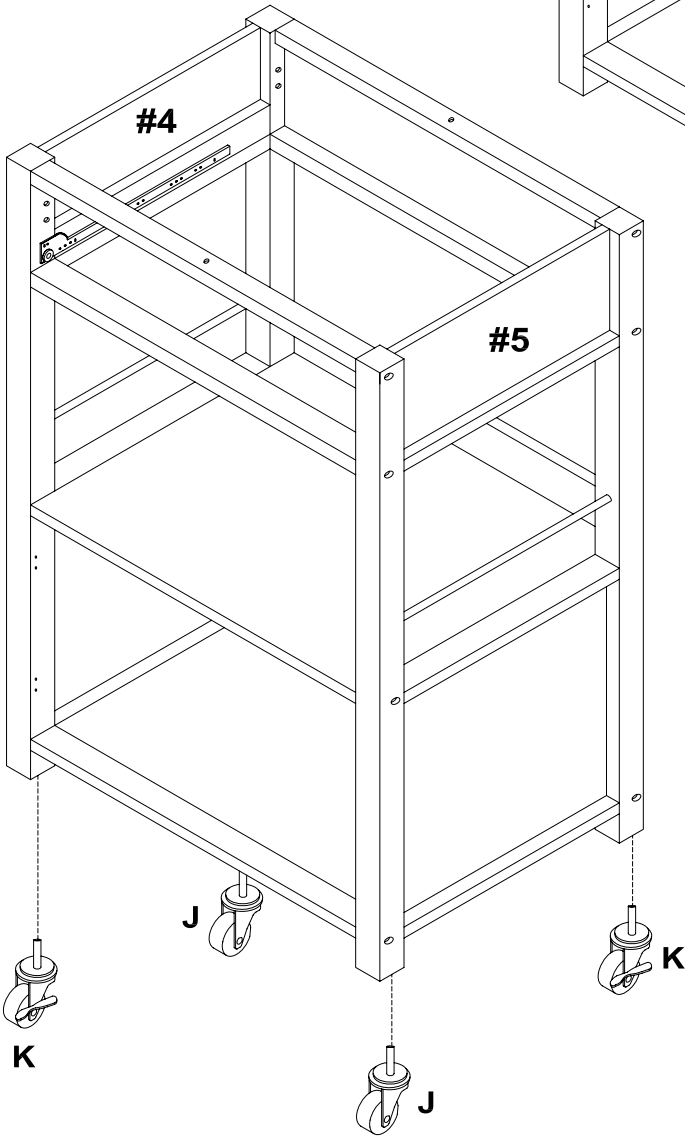


STEP 7.

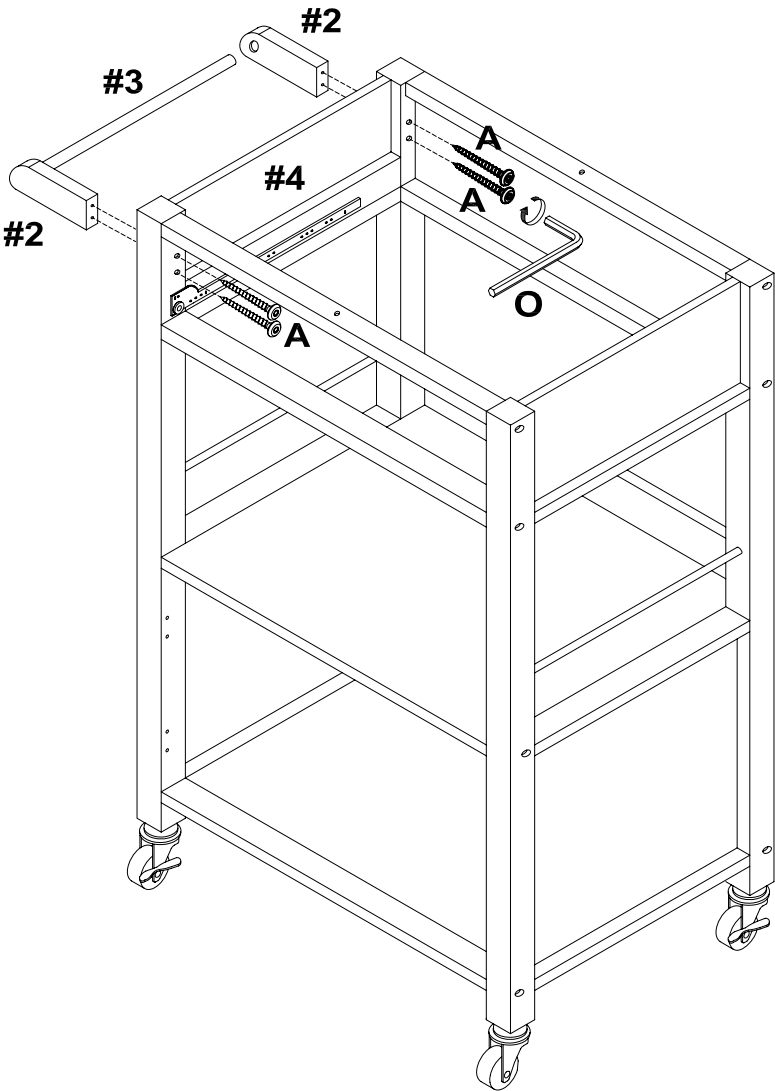


STEP 8.

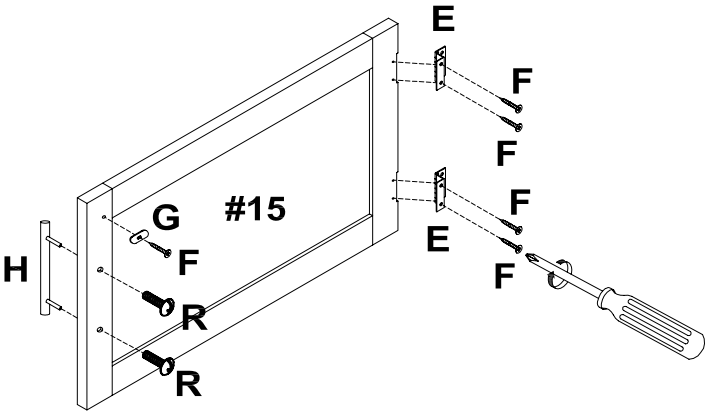


STEP 9.

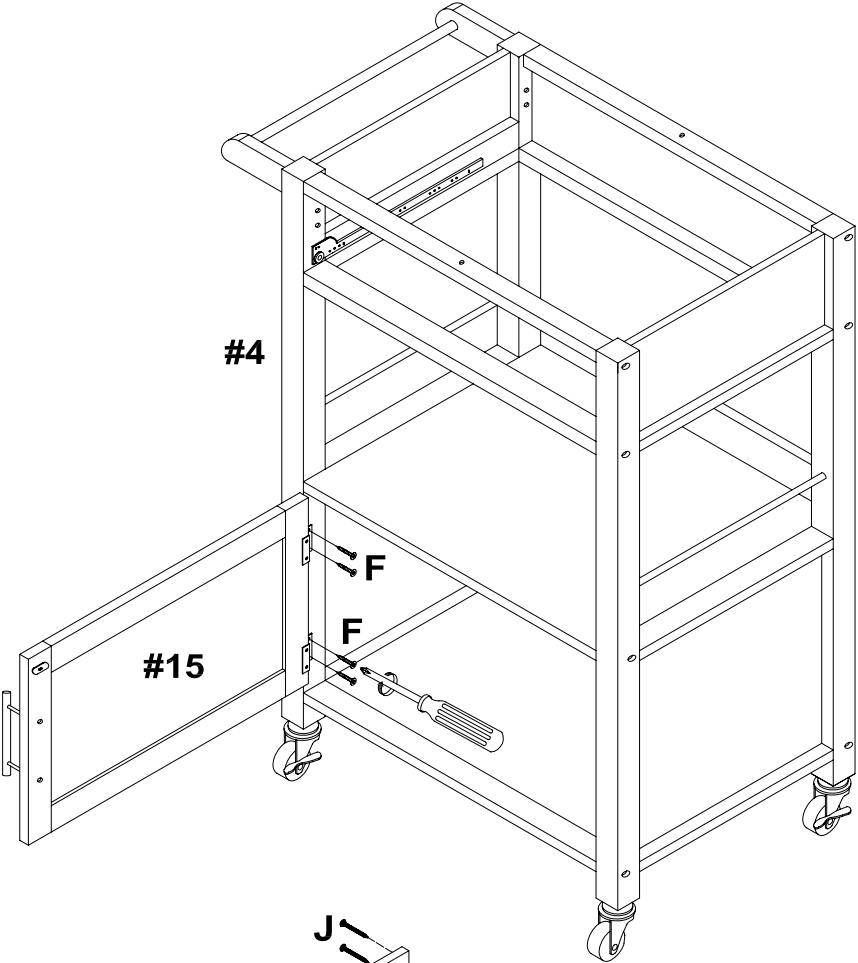


STEP 10.

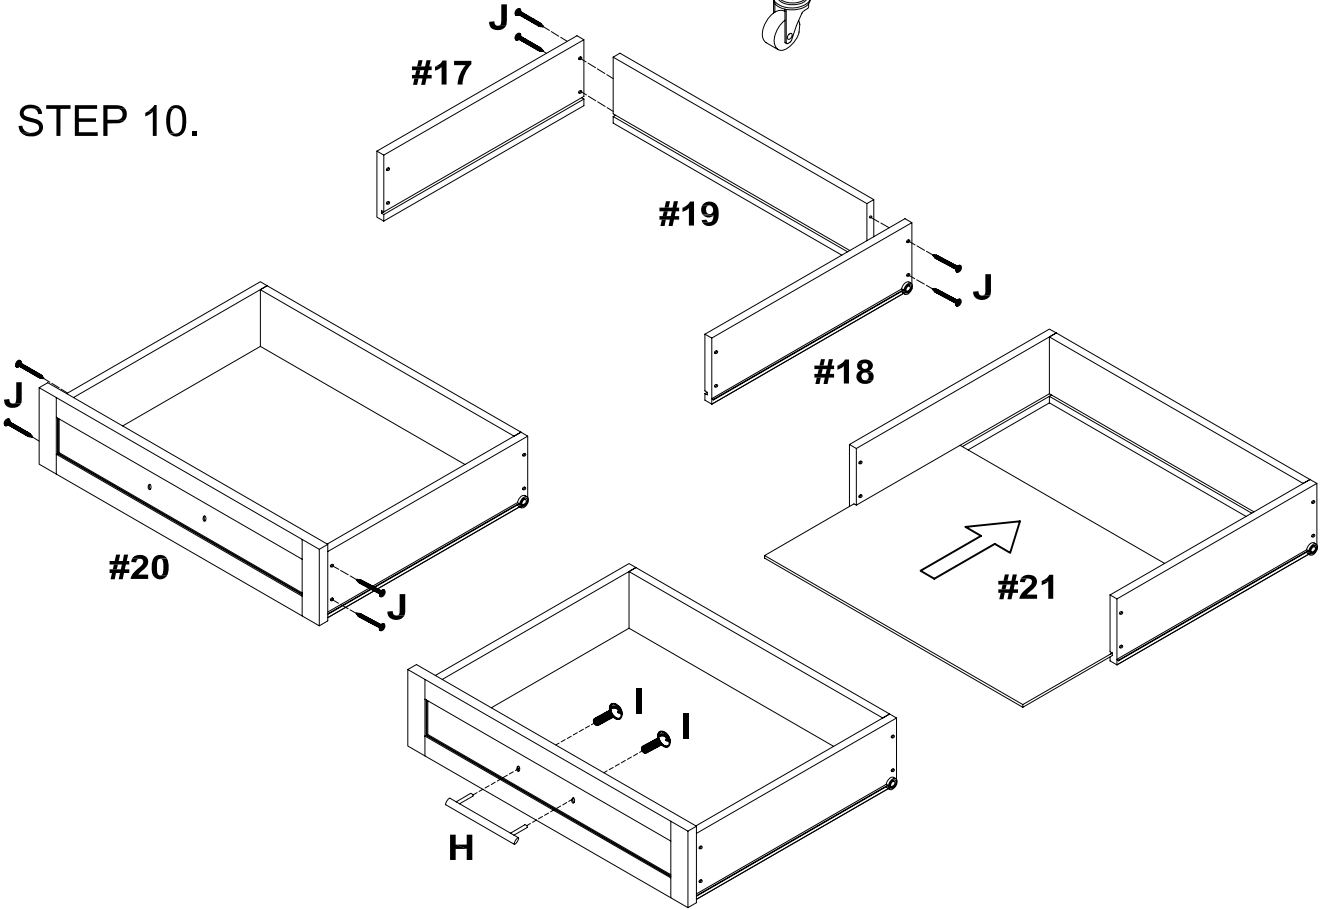


STEP 11.

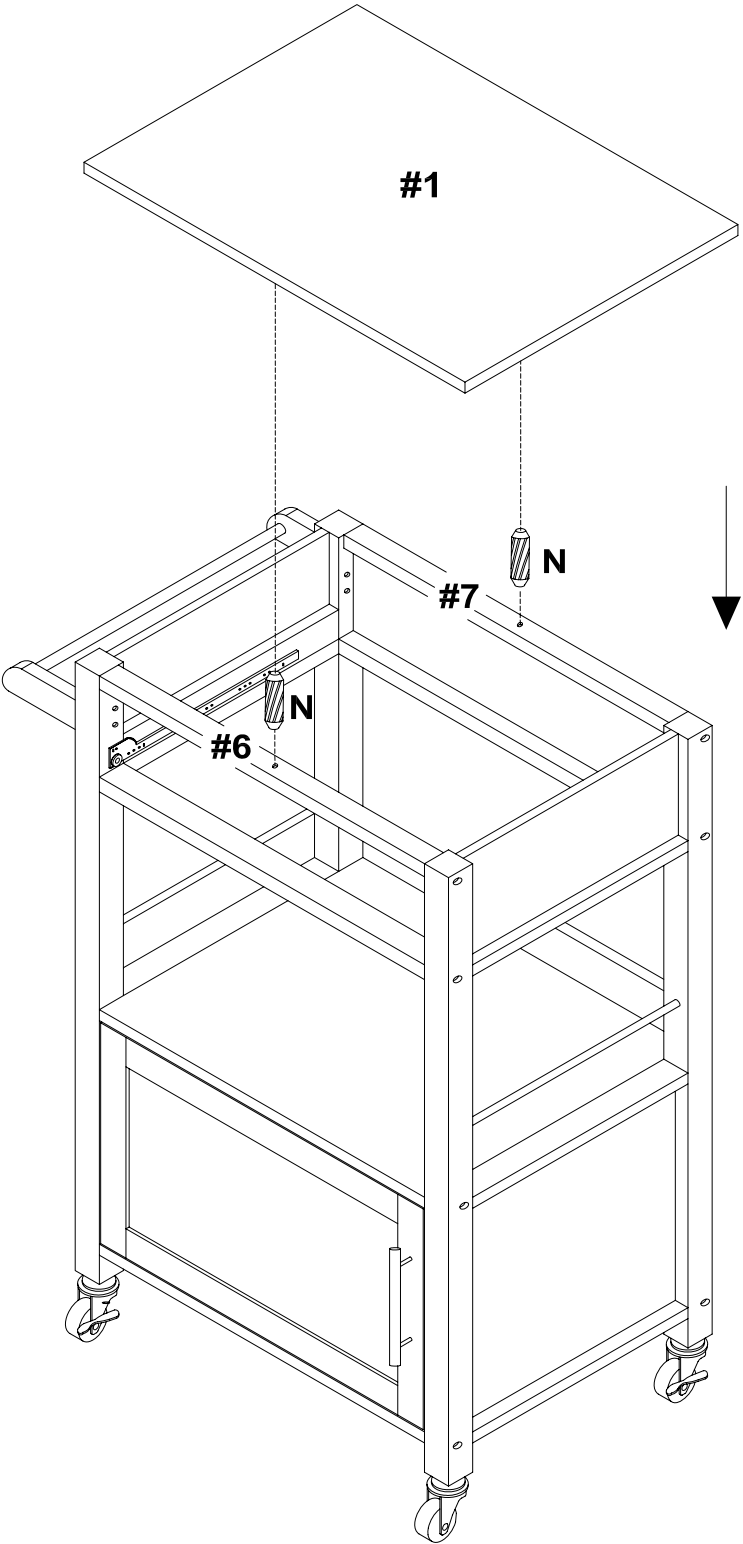

STEP 12.

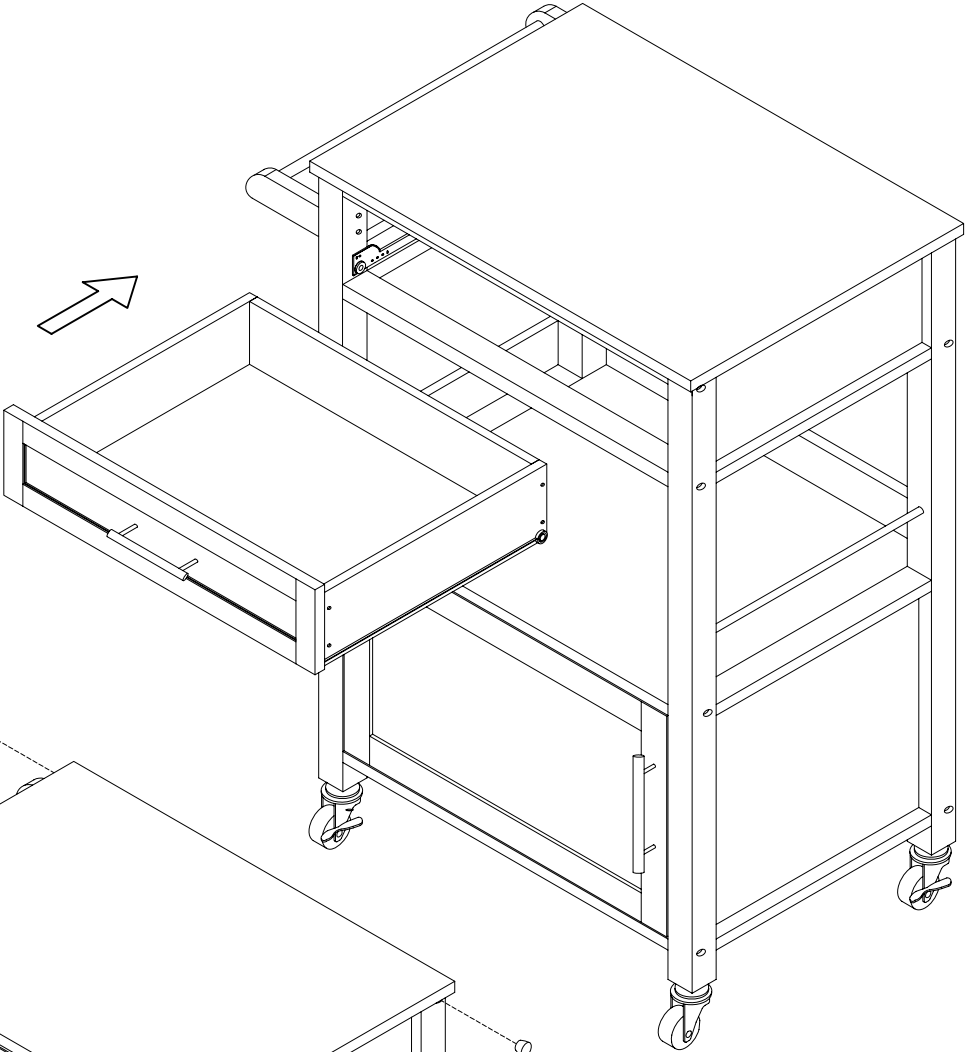

STEP 13.

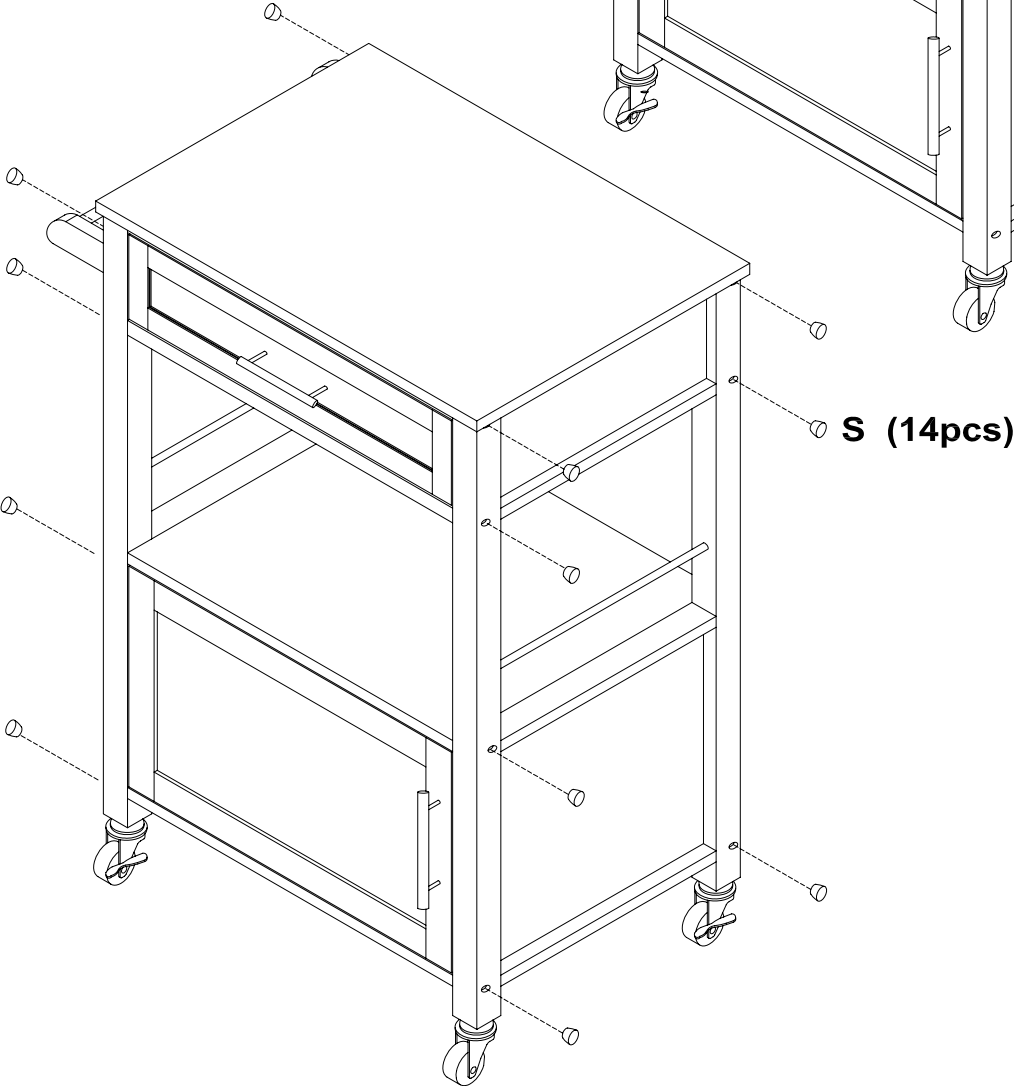

## **LIMITED WARRANTY**

### **WHAT IS COVERED**

### **WHAT IS NOT COVERED**