


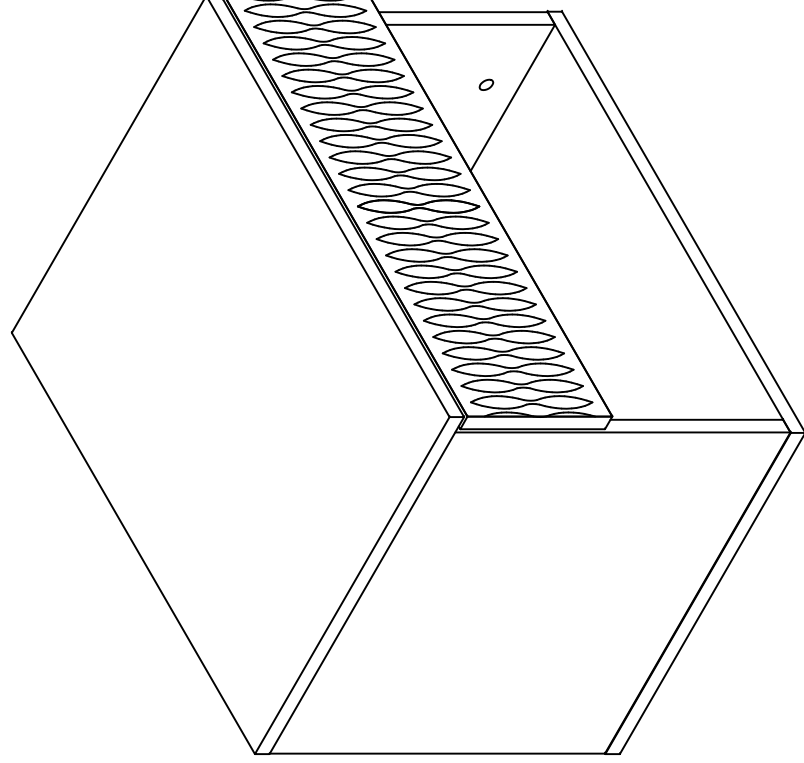
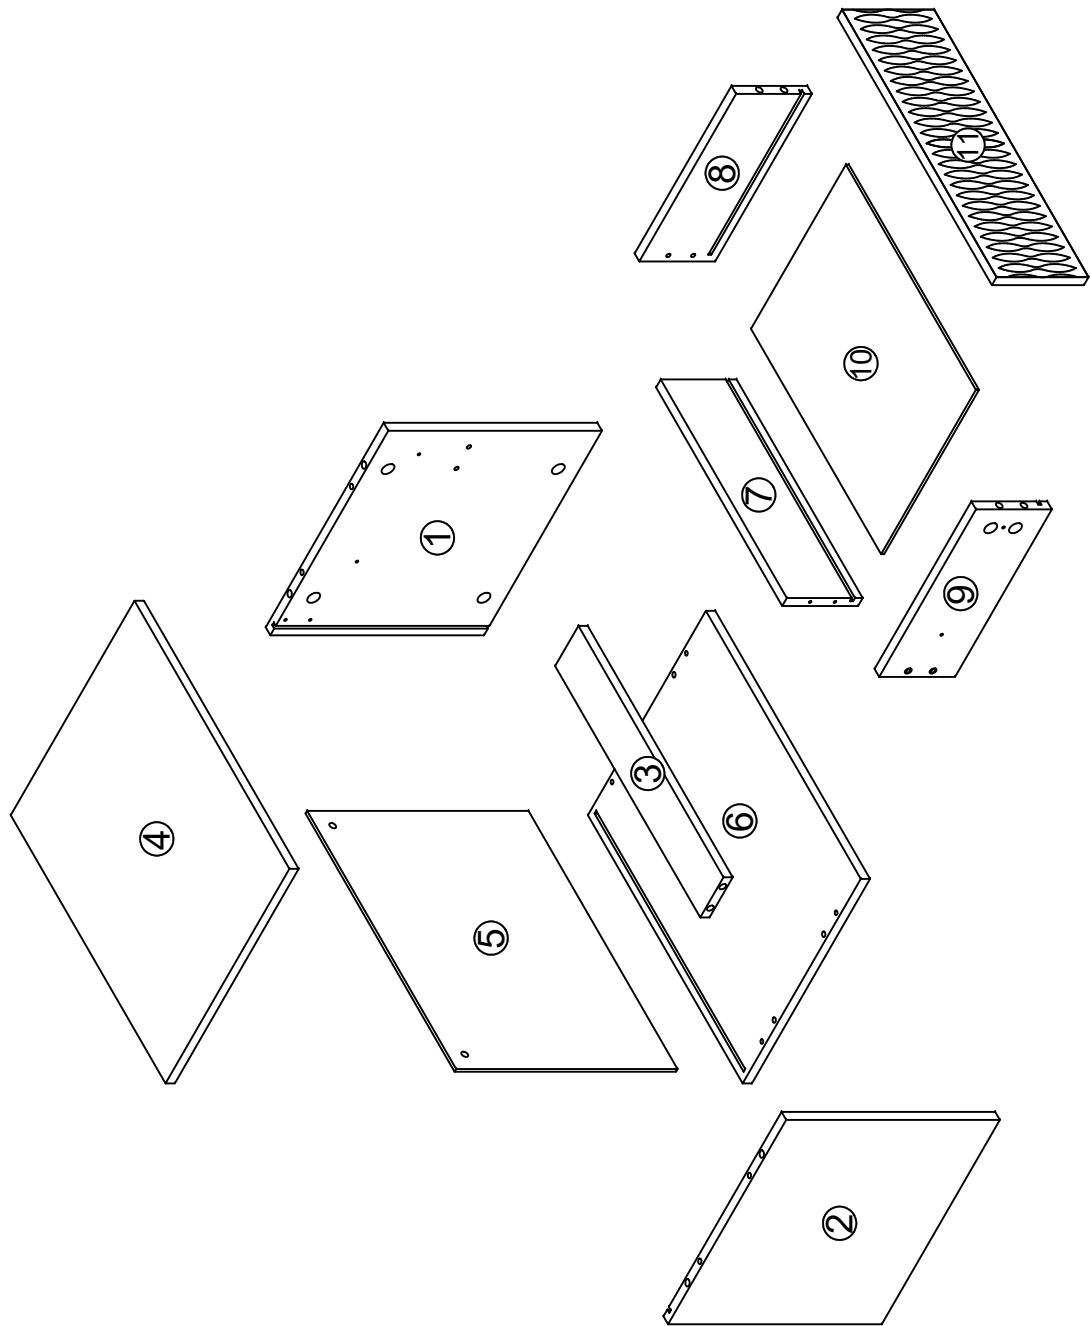




XFG2-01/XFG2-02

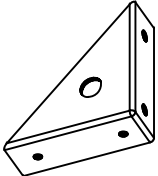





A  16+2PCS	B  16+2PCS	C  8+2PCS	 M3.5X12M 16+2PCS
E  M3.5X30M 4+1PCS	F  2PCS	G  LX250mm 2PCS	H  (3.5*16mm) 4+1PCS
I  M4X45M 2PCS	J  2PCS	K  2PCS	

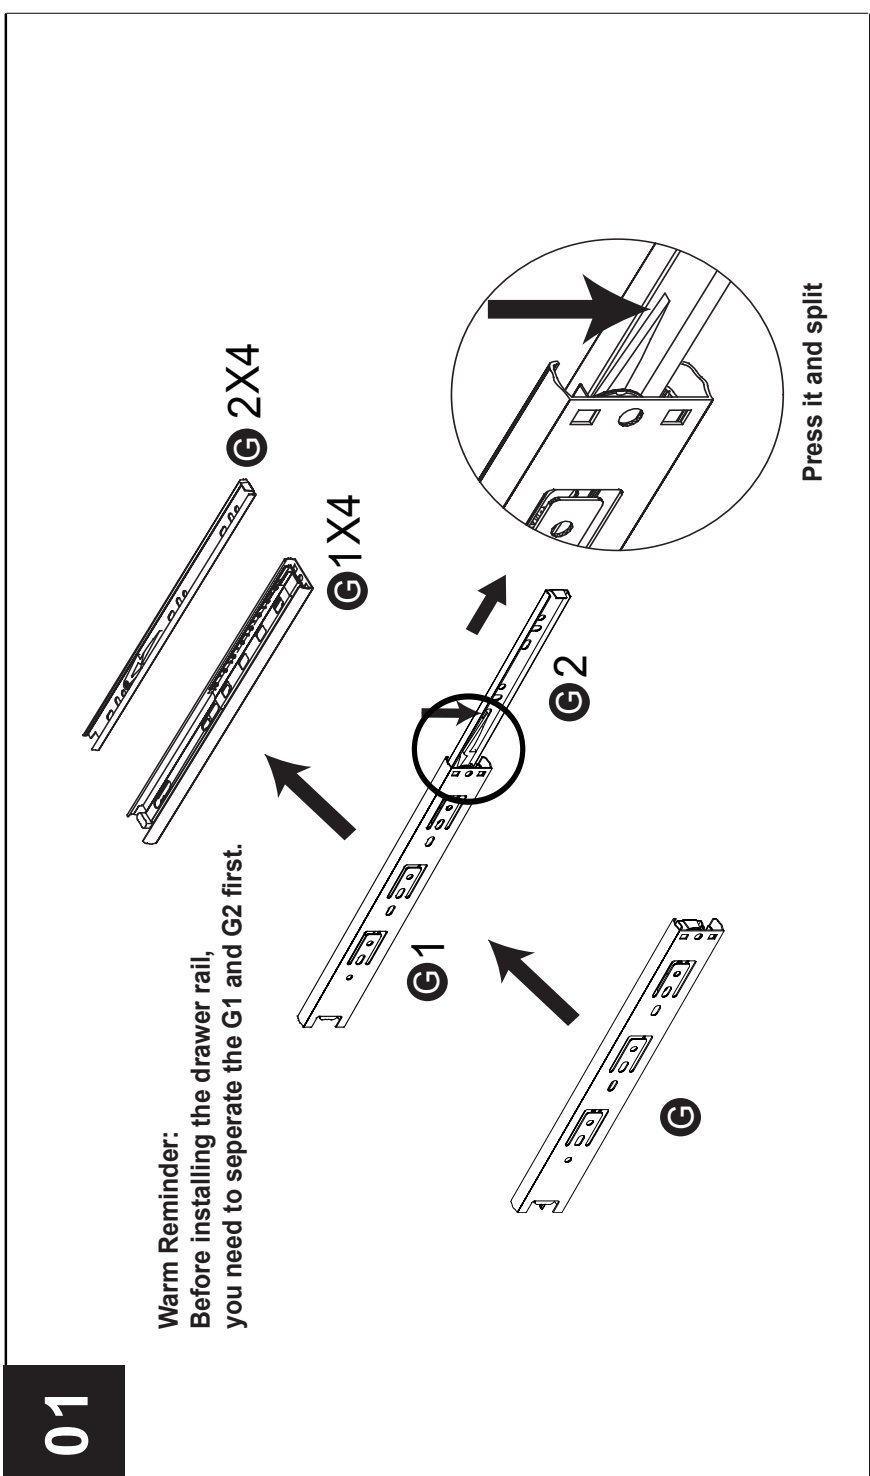

02

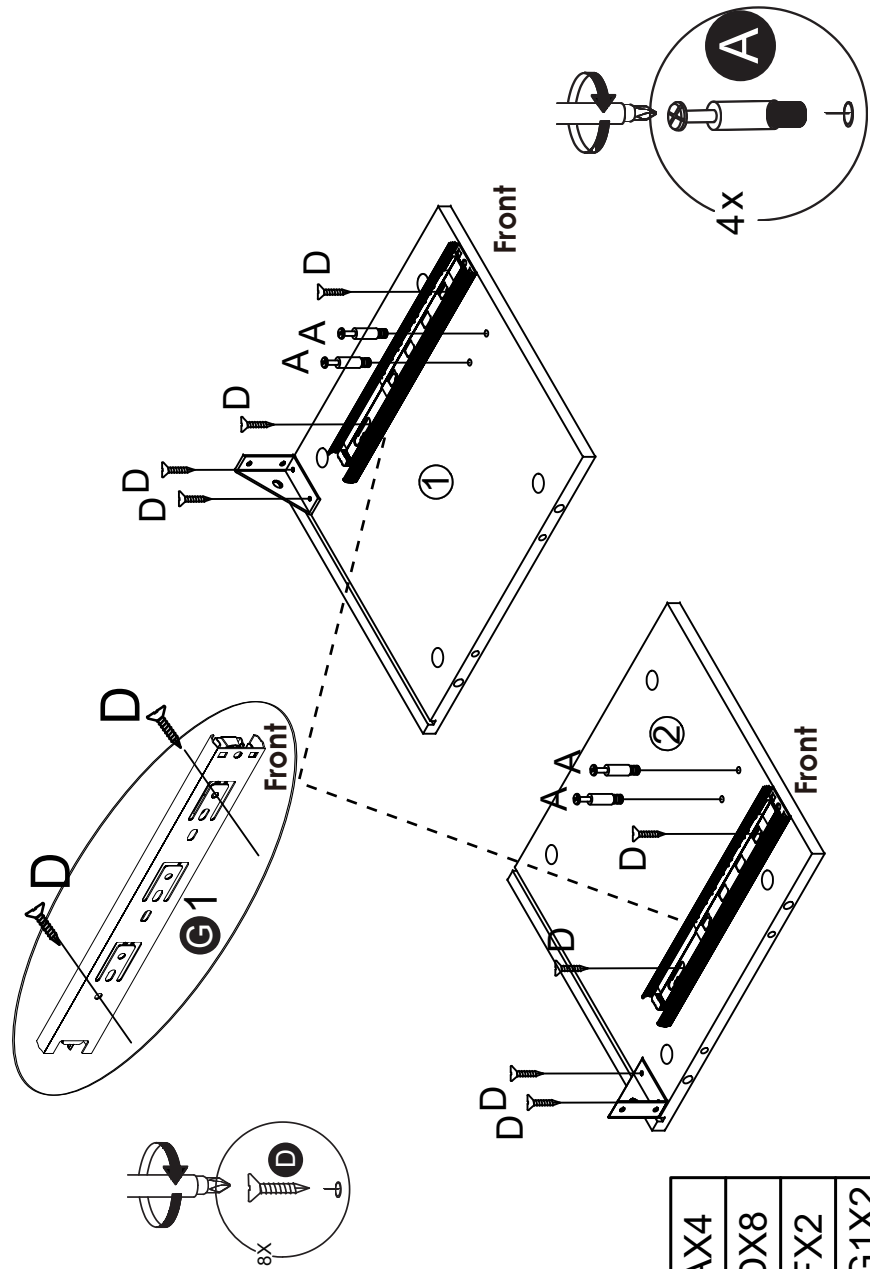


03

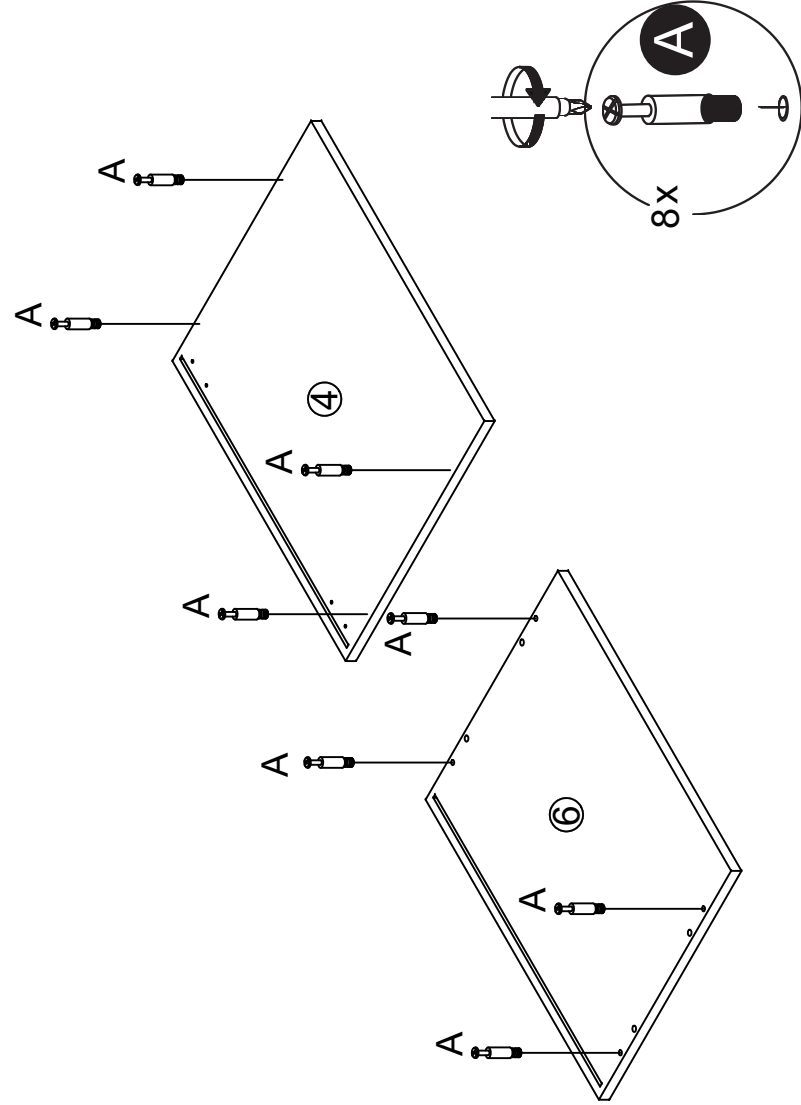



	AX8
--	-----

04

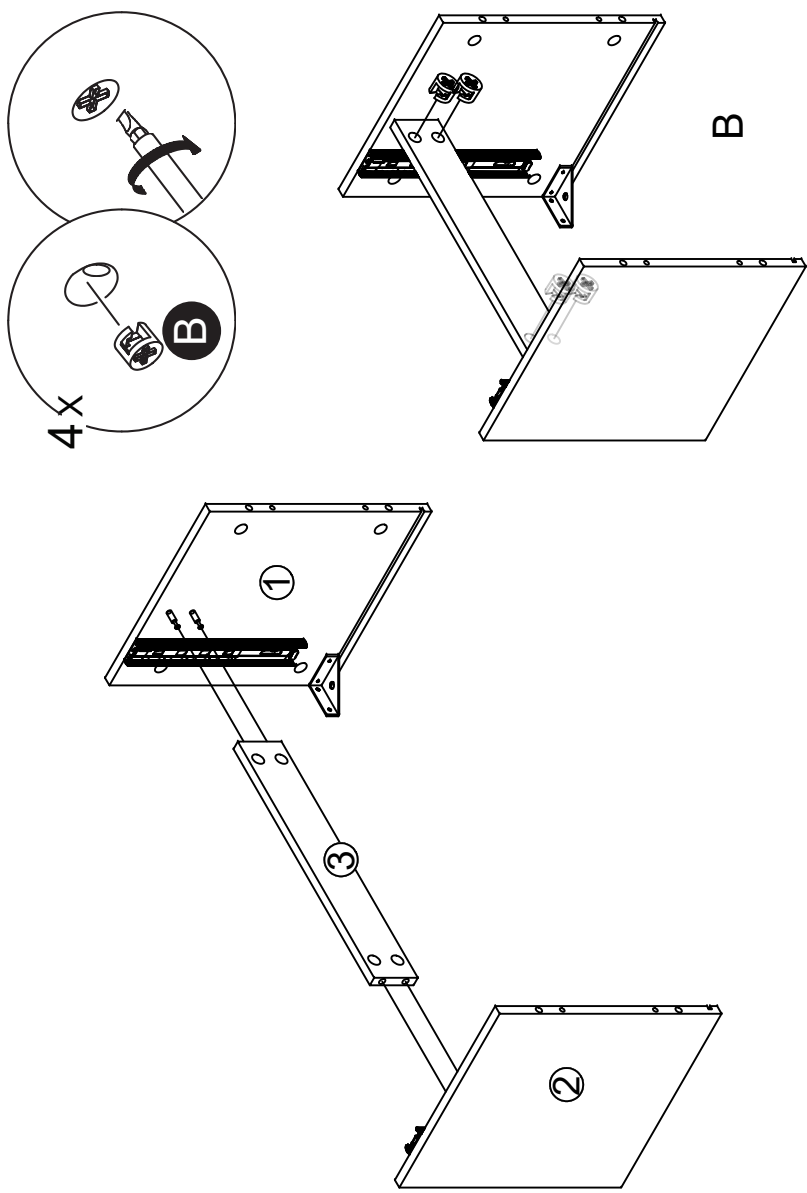


 BX4

05

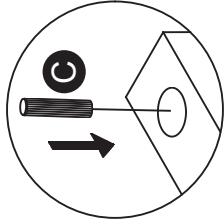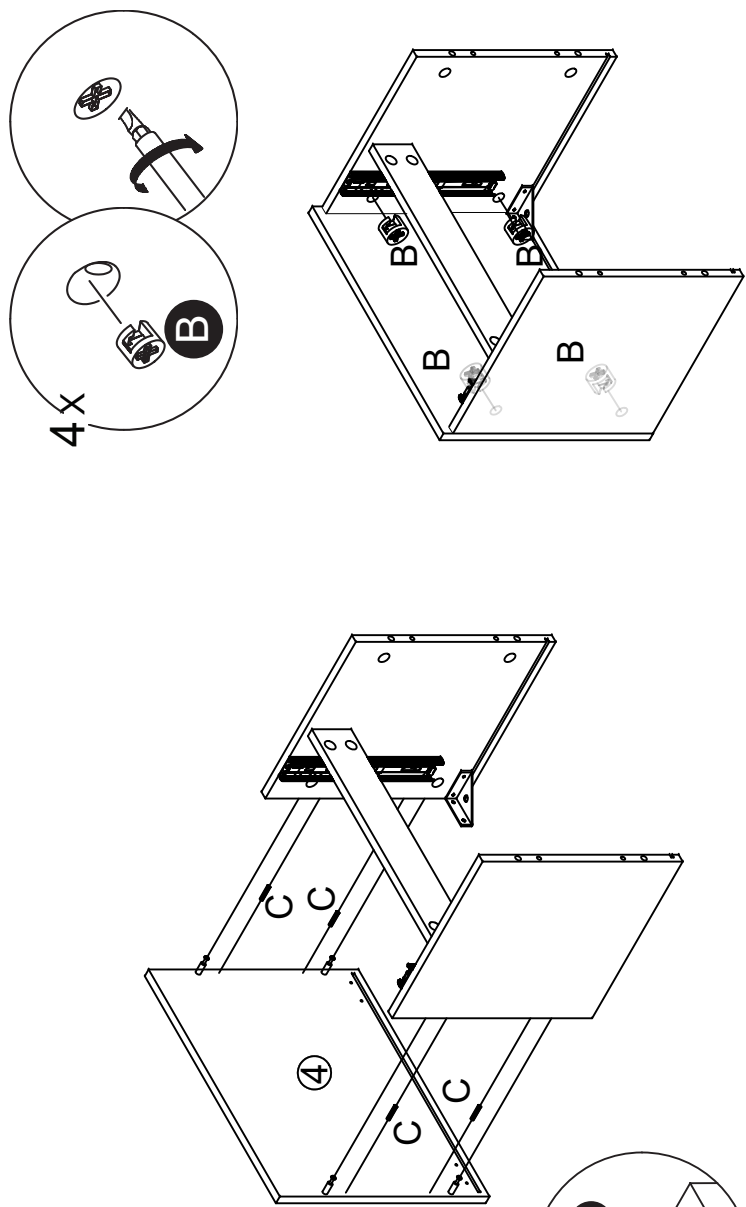



 BX4
— CX4

06




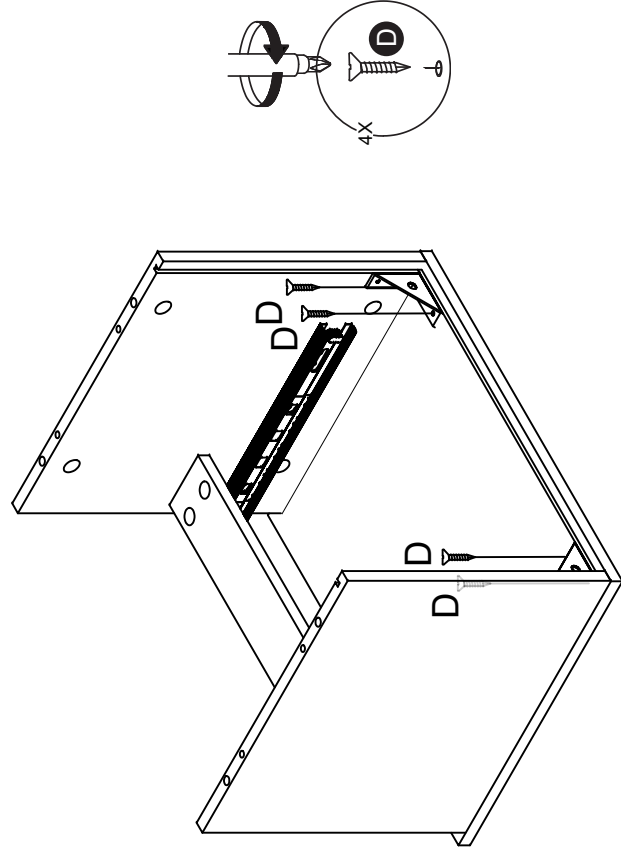


 DX4

07

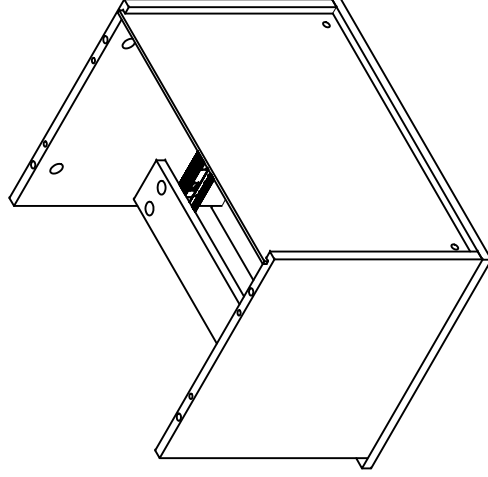
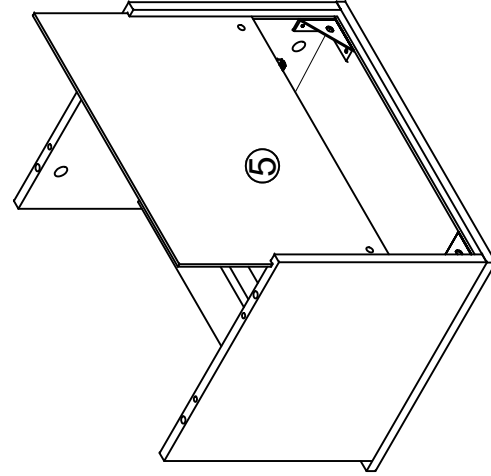


08

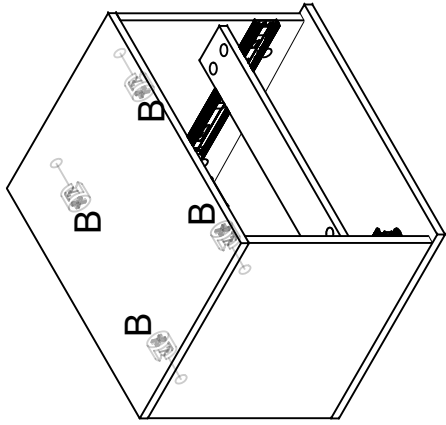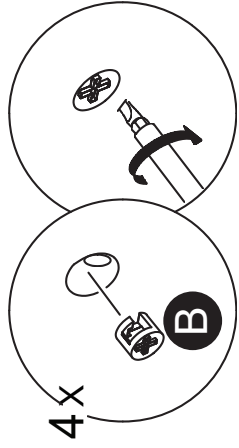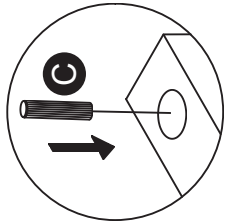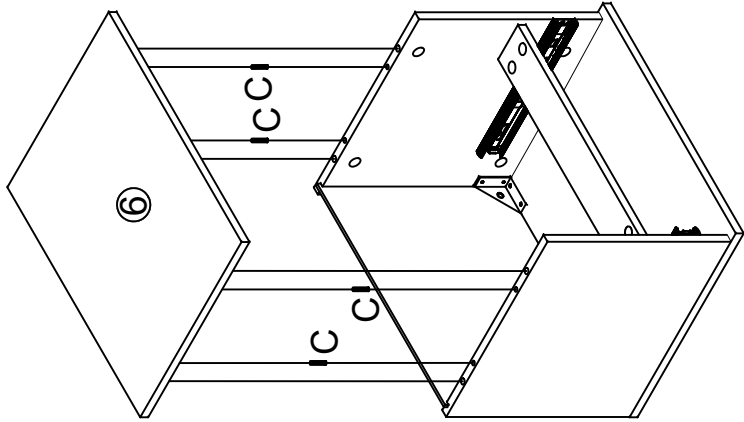

	BX4
	CX4

09

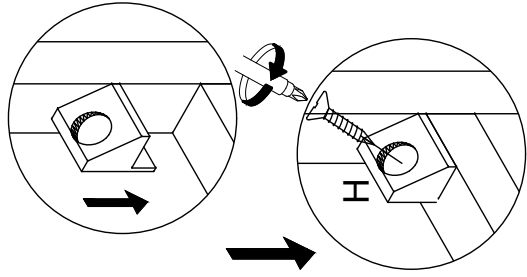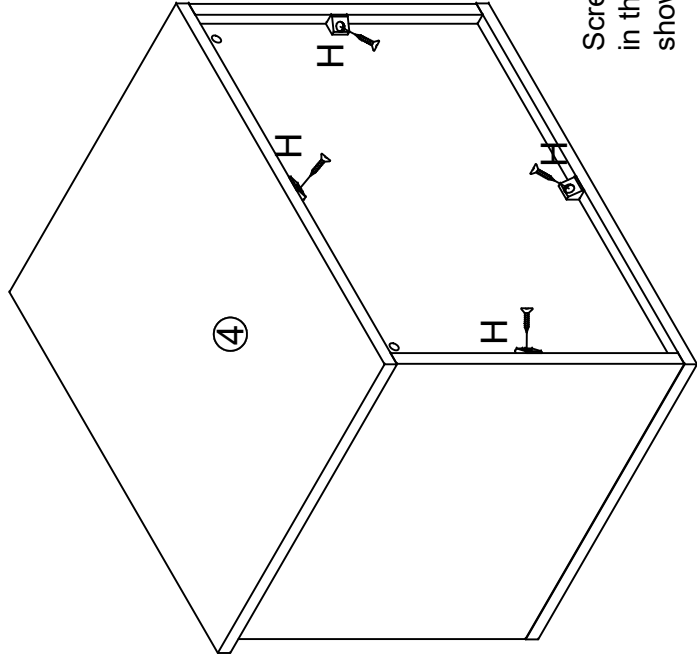


Screw type I can be installed
in the approximate location
shown in the diagram.



	HX4
---	-----

10


Drill 2 holes on the wall at the required position for anti-falling device installation.

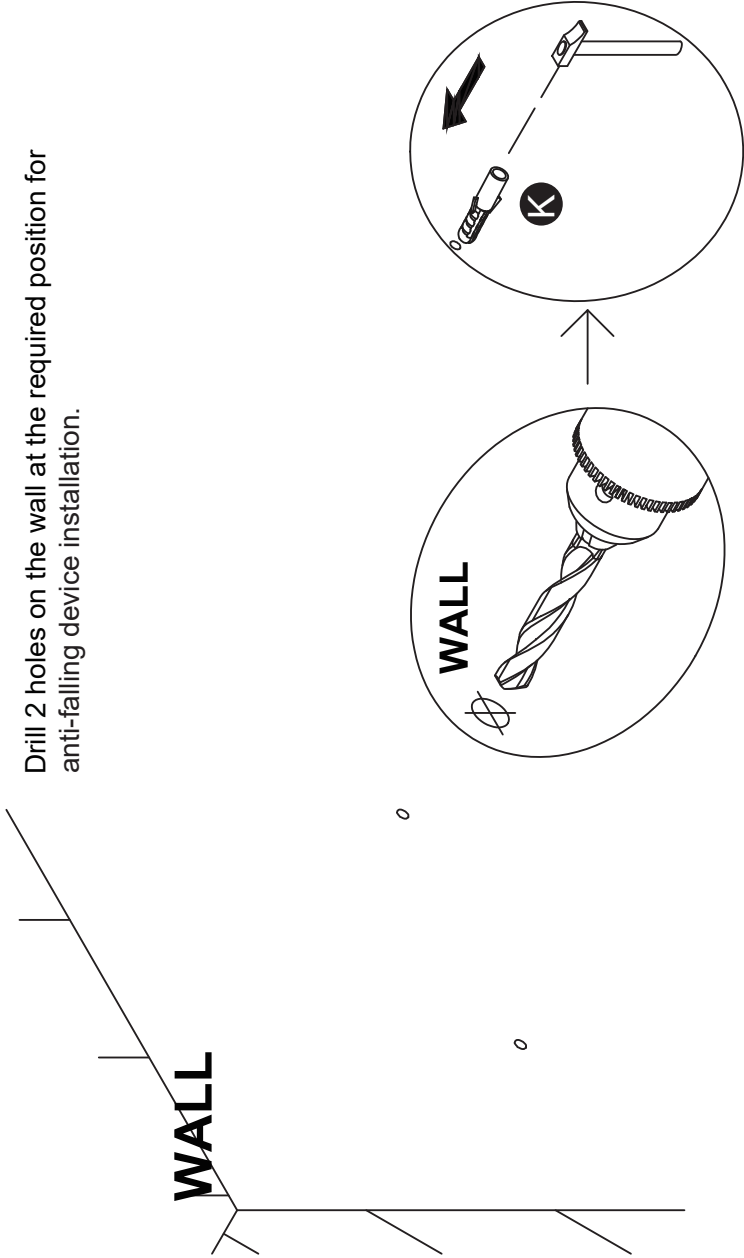

11

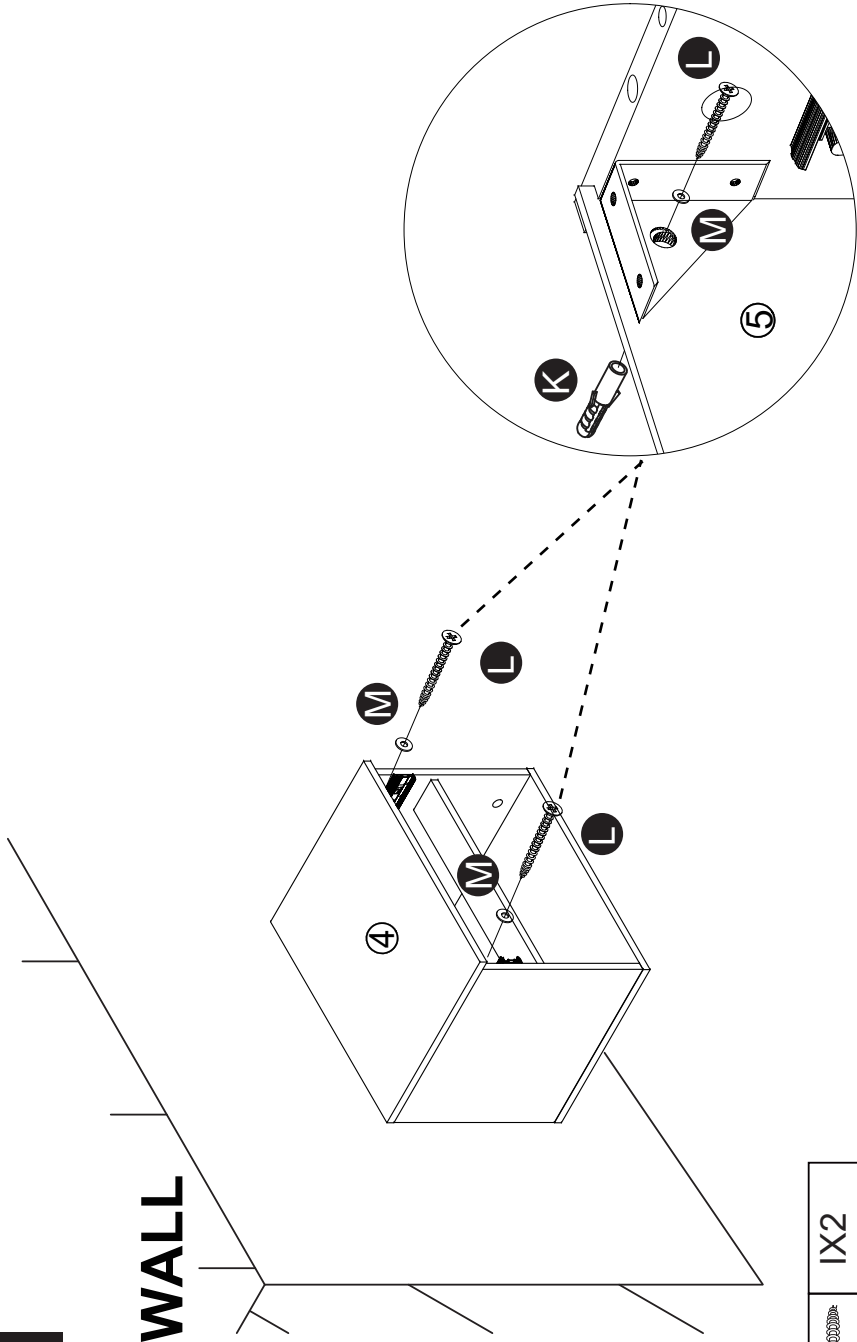


12

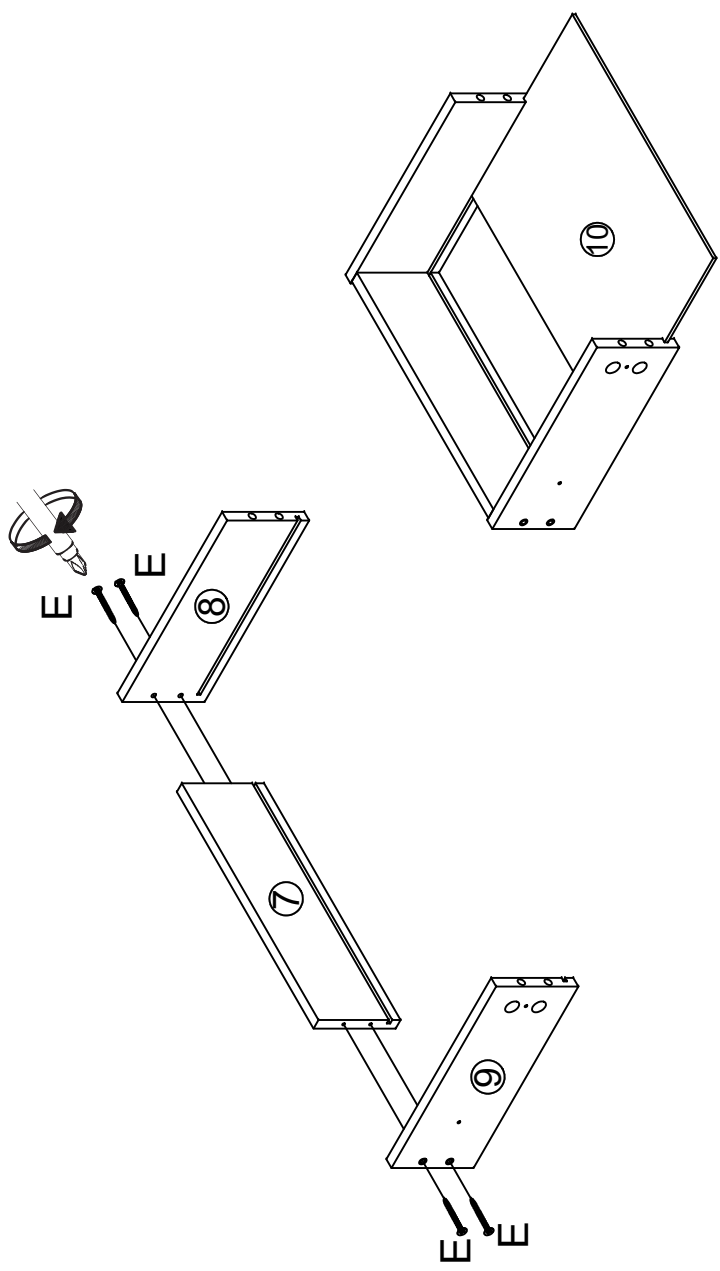

 EX4

13

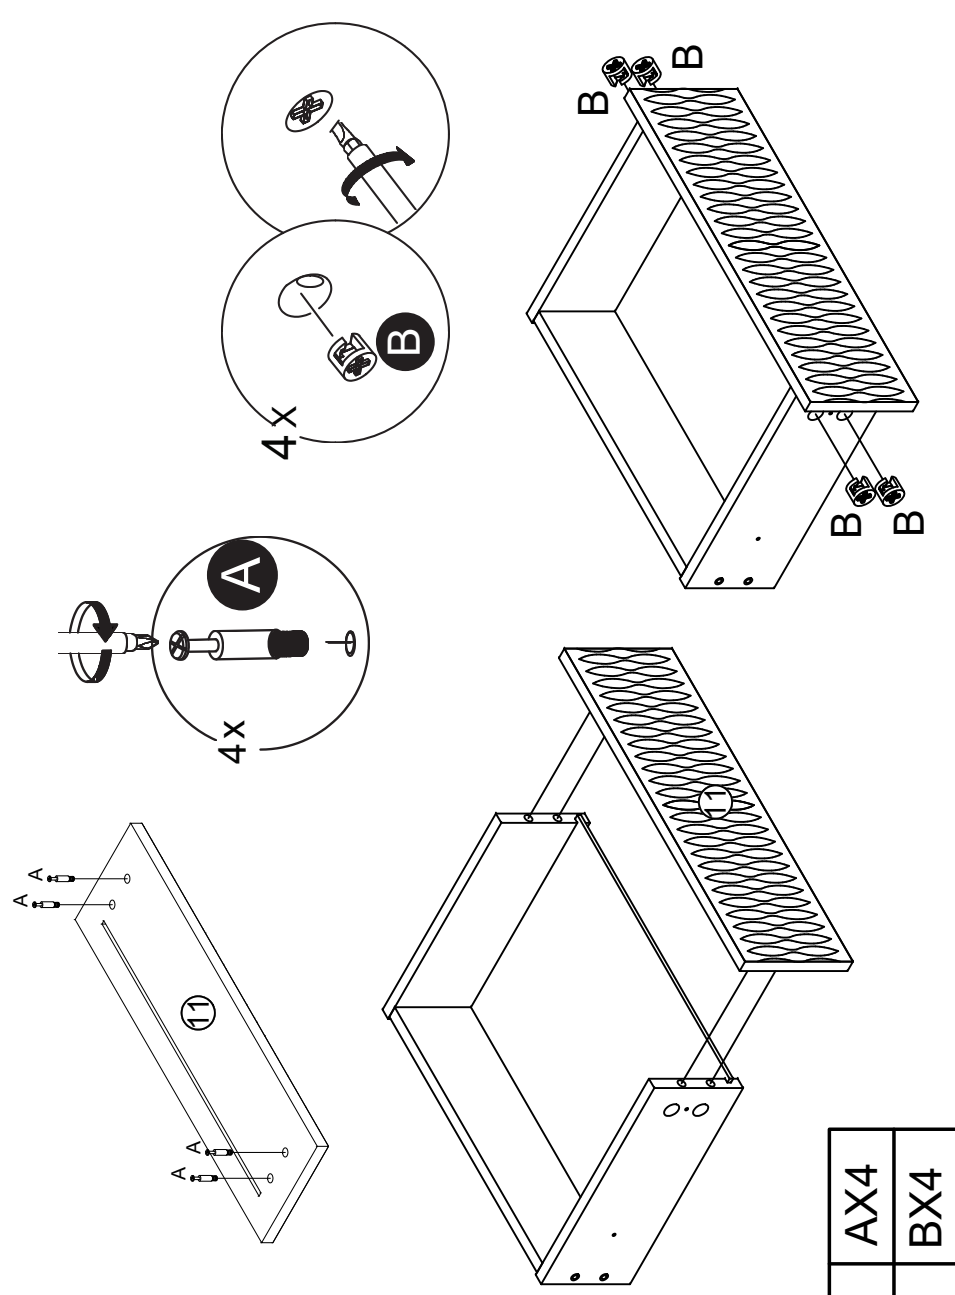

	AX4
	BX4

