drawer

Product ID. QUEMU

Scan for Support




Distributed by























GARVEE.com

support@garvee.com

BOARD IDENTIFICATION

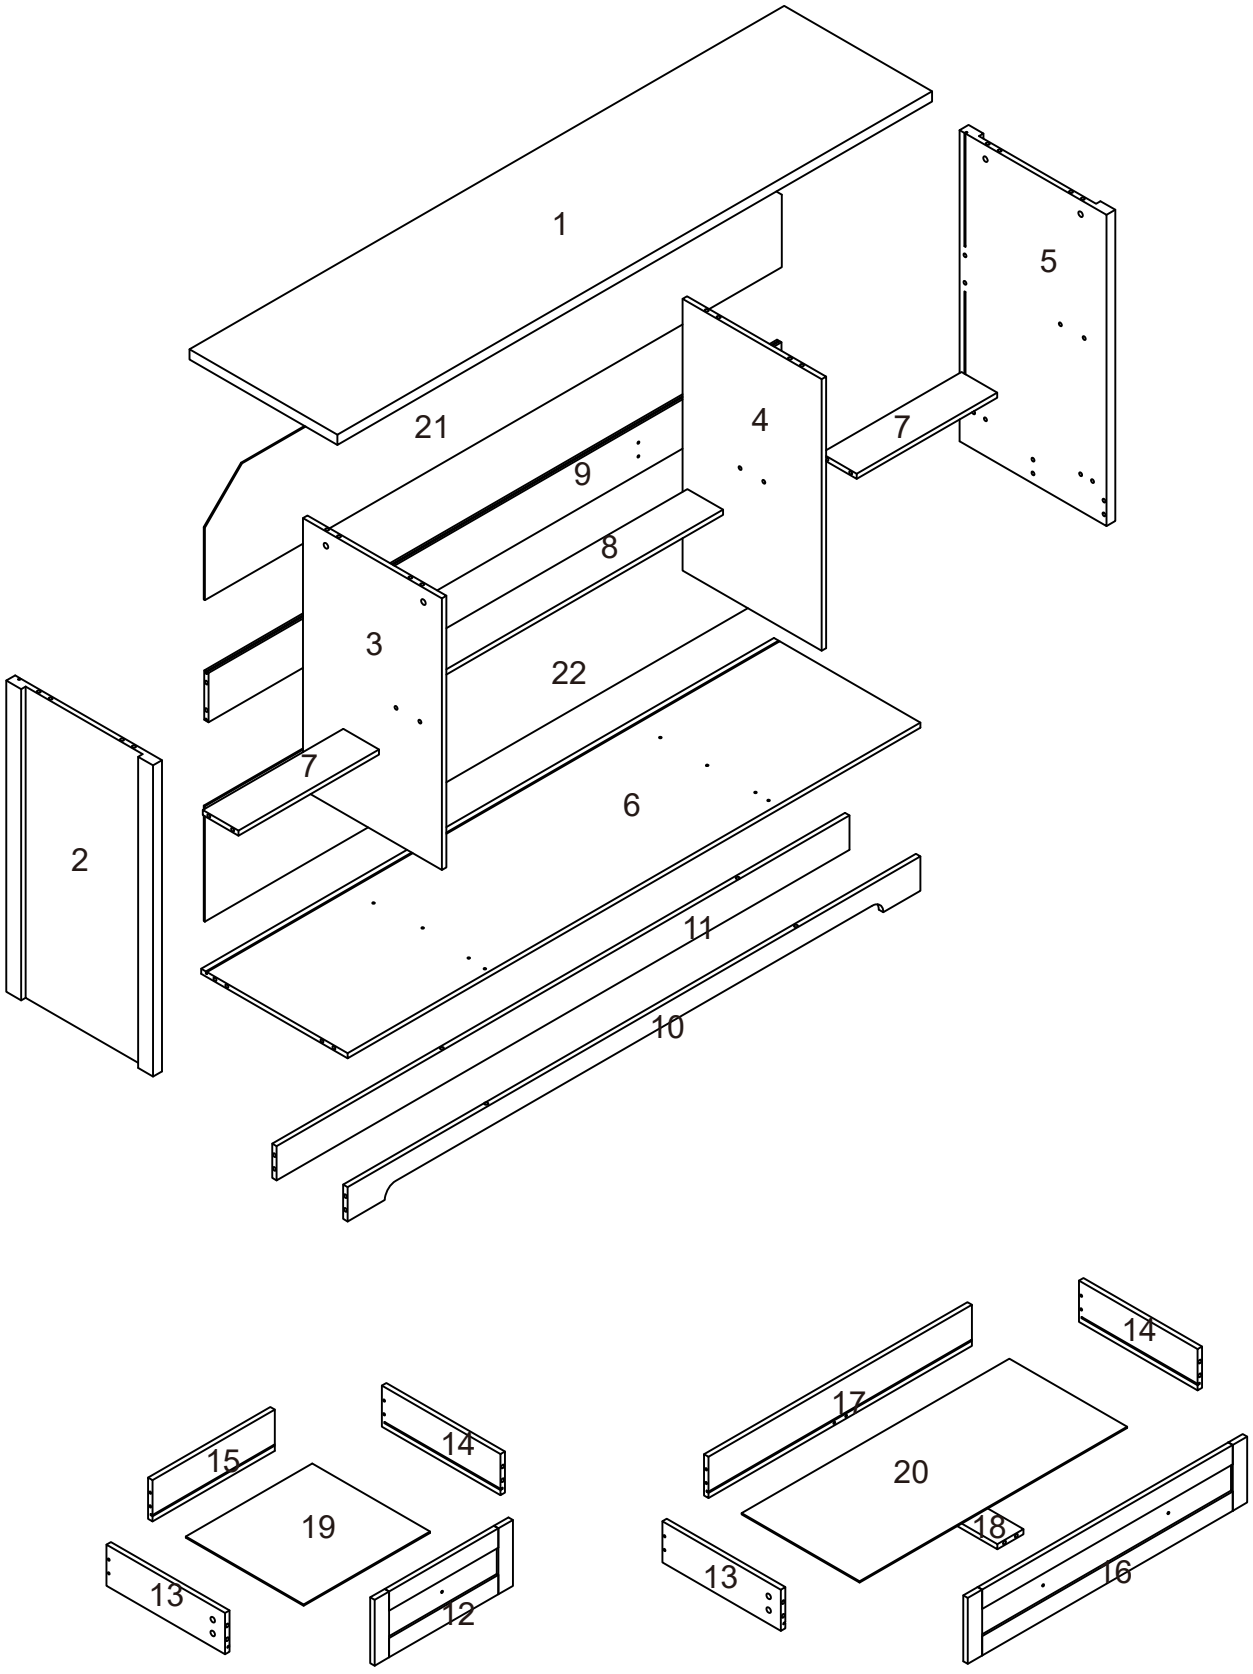


BOARD IDENTIFICATION

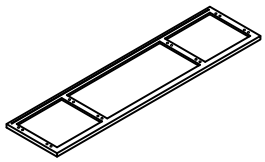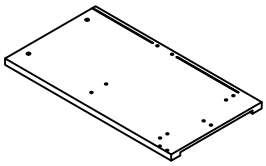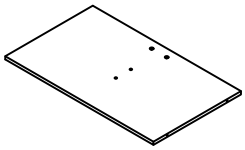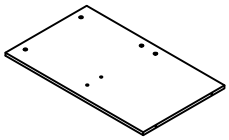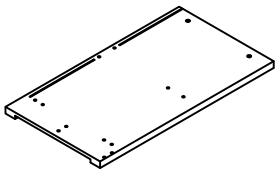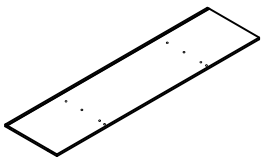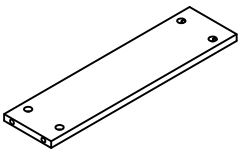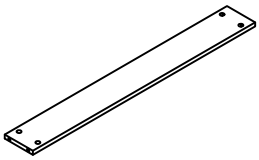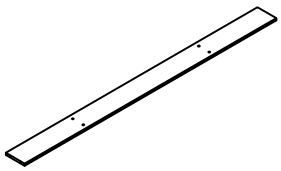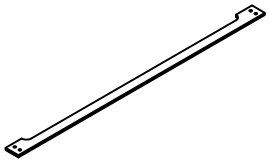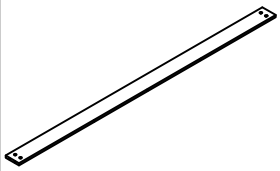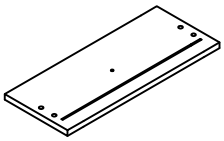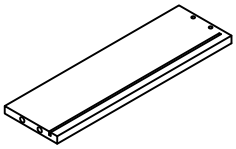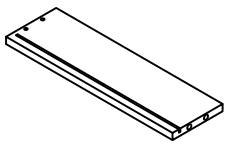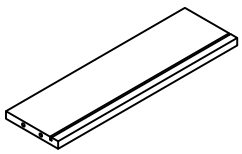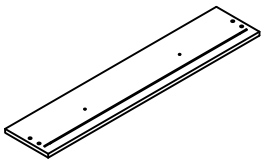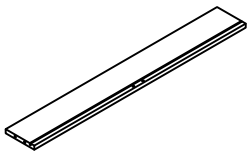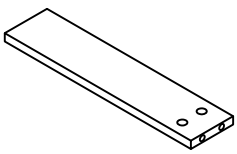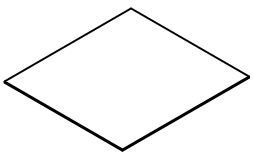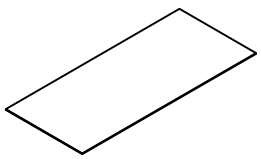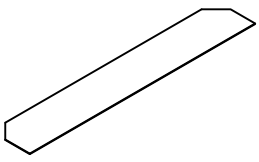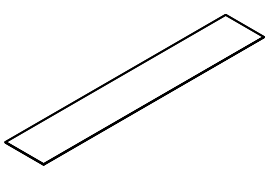				
1X1	2X1	3X1	4X1	5X1
				
6X1	7X2	8X1	9X1	10X1
				
11X1	12X8	13X12	14X12	15X8
				
16X4	17X4	18X4	19X8	20X4
				
21X1	22X1			

BOARD IDENTIFICATION


Installation of Eccentric Wheel Nut Set

1

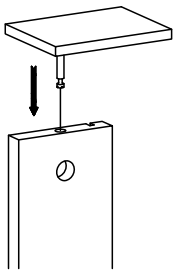


Screw the end of cambolt on the board,find the corresponding board and insert the other end.

2

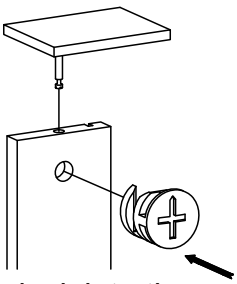






Stuff the camlock into the round hole.
The arrowpoints to the cambolt.

3

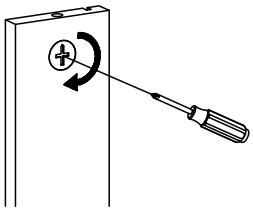


Turn clockwise about 180° to lock the plate.


				
A X92	B X92	M6X30 C X12	M4X35 D X68	M3.5X12 E X96
Cam bolt	**Cam lock**	**Wood dowl**	**Screws**	**Screws**

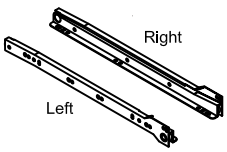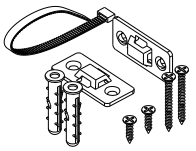				
F X16	G X12	H X16	I X2	X1
				Screwdriver

INSTALLATION STEPS


STEP1:

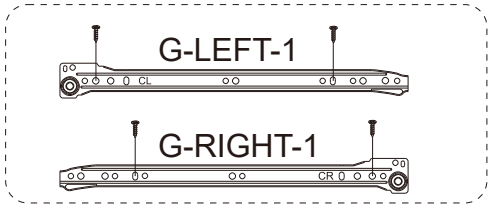

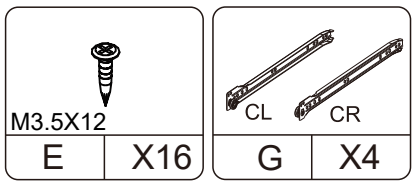



G-LEFT-1:
Install the screws from the second hole from the left and the fifth hole from the right.

G-RIGHT-1:
Install the screws from the fifth hole from the left and the second hole from the right.

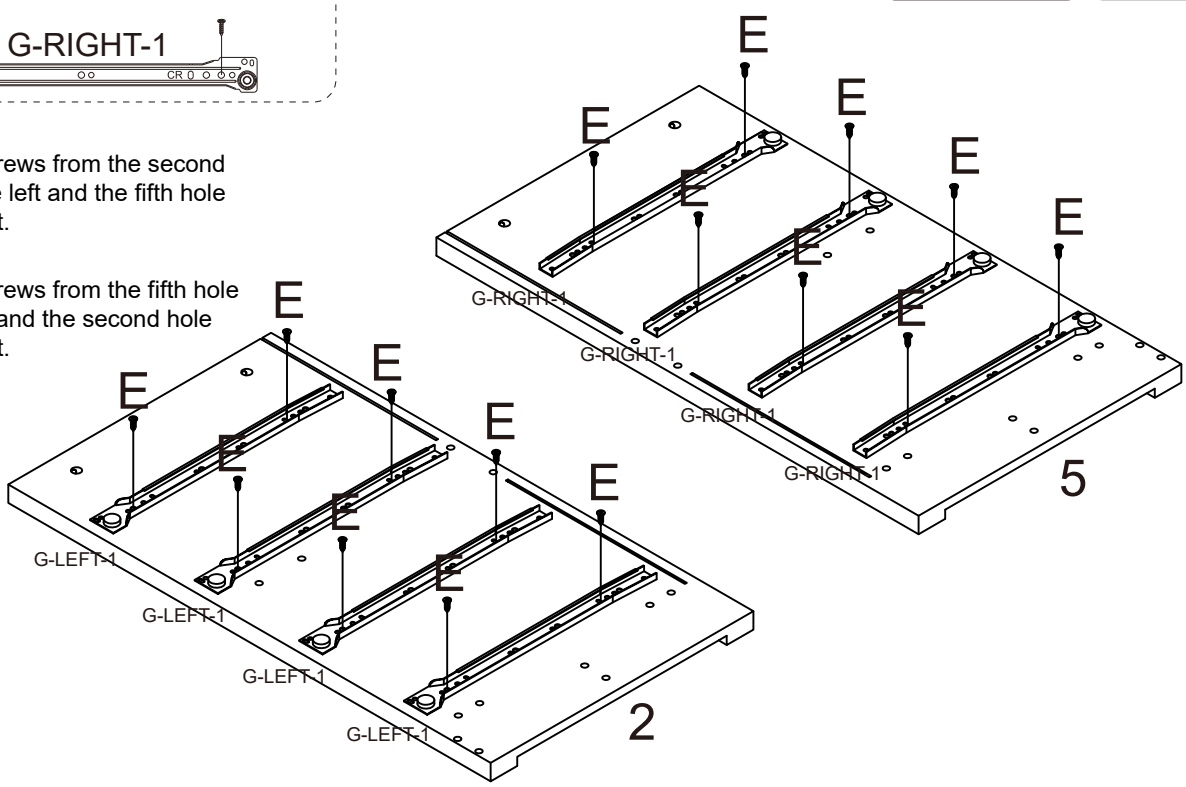


STEP2:

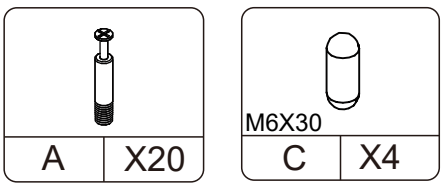


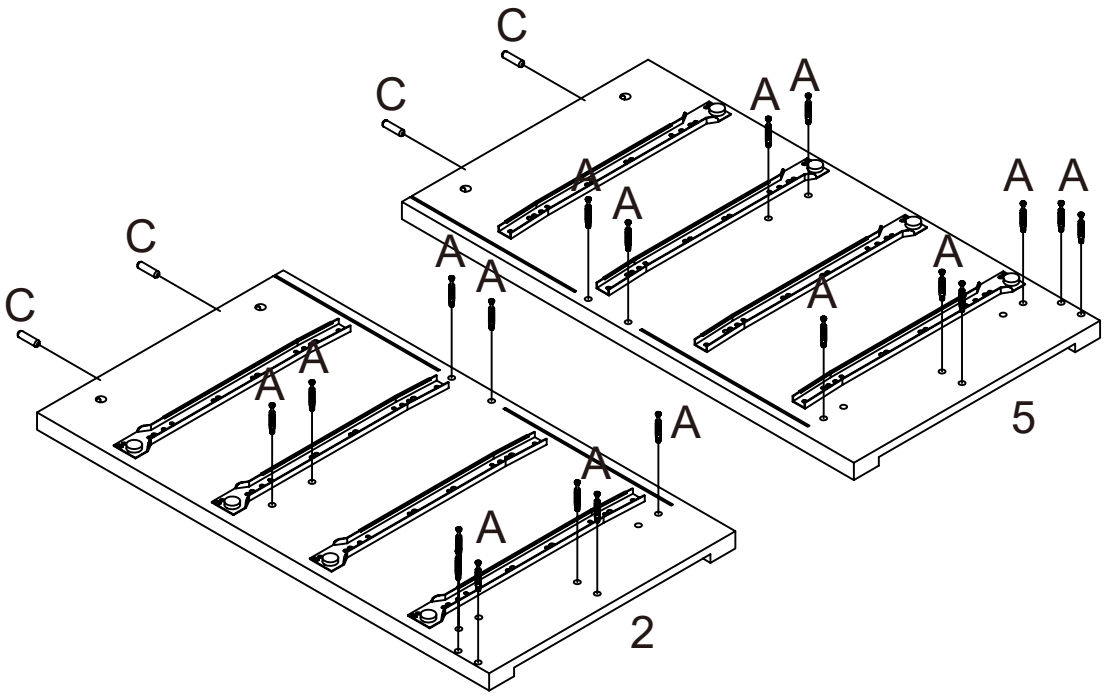

INSTALLATION STEPS


STEP3:

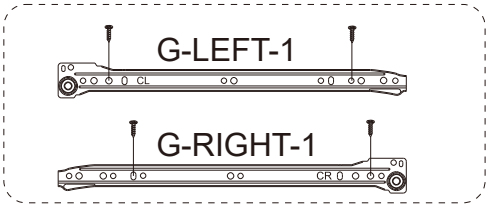

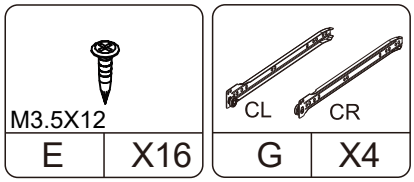



G-LEFT-1:
Install the screws from the third hole from the left and the fourth hole from the right.

G-RIGHT-1:
Install the screws from the fifth hole from the left and the second hole from the right.

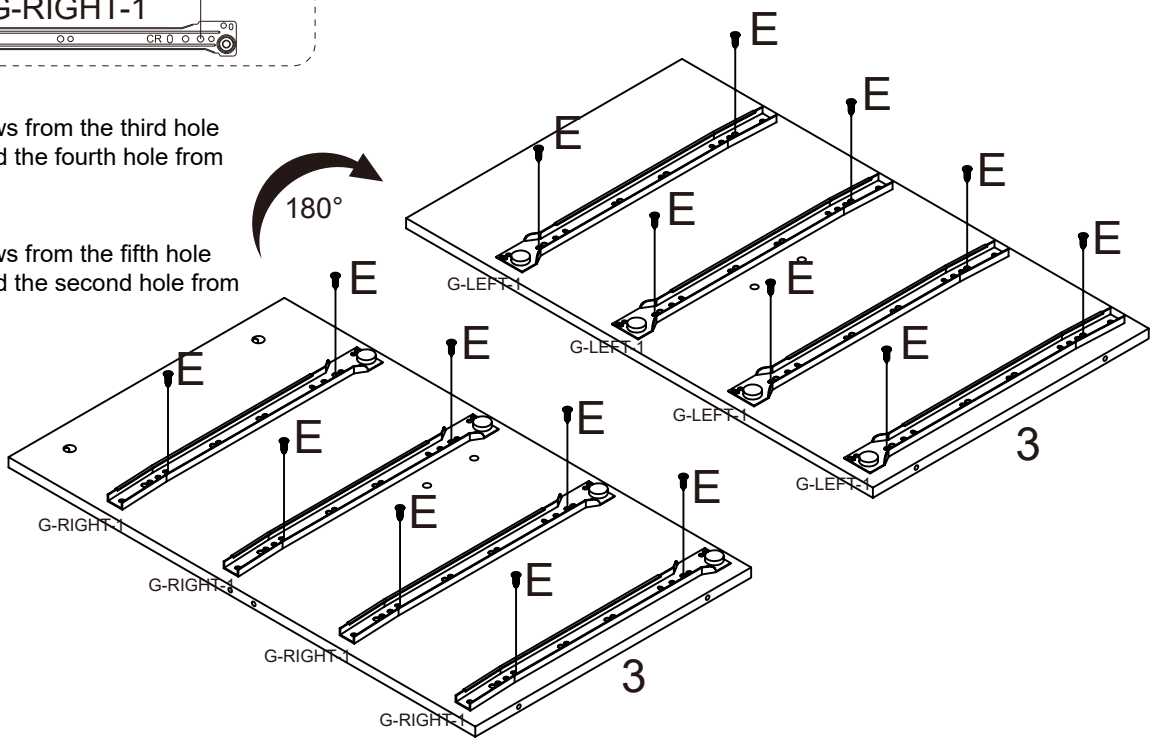


STEP4:

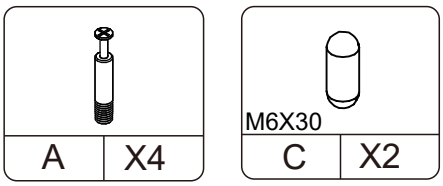

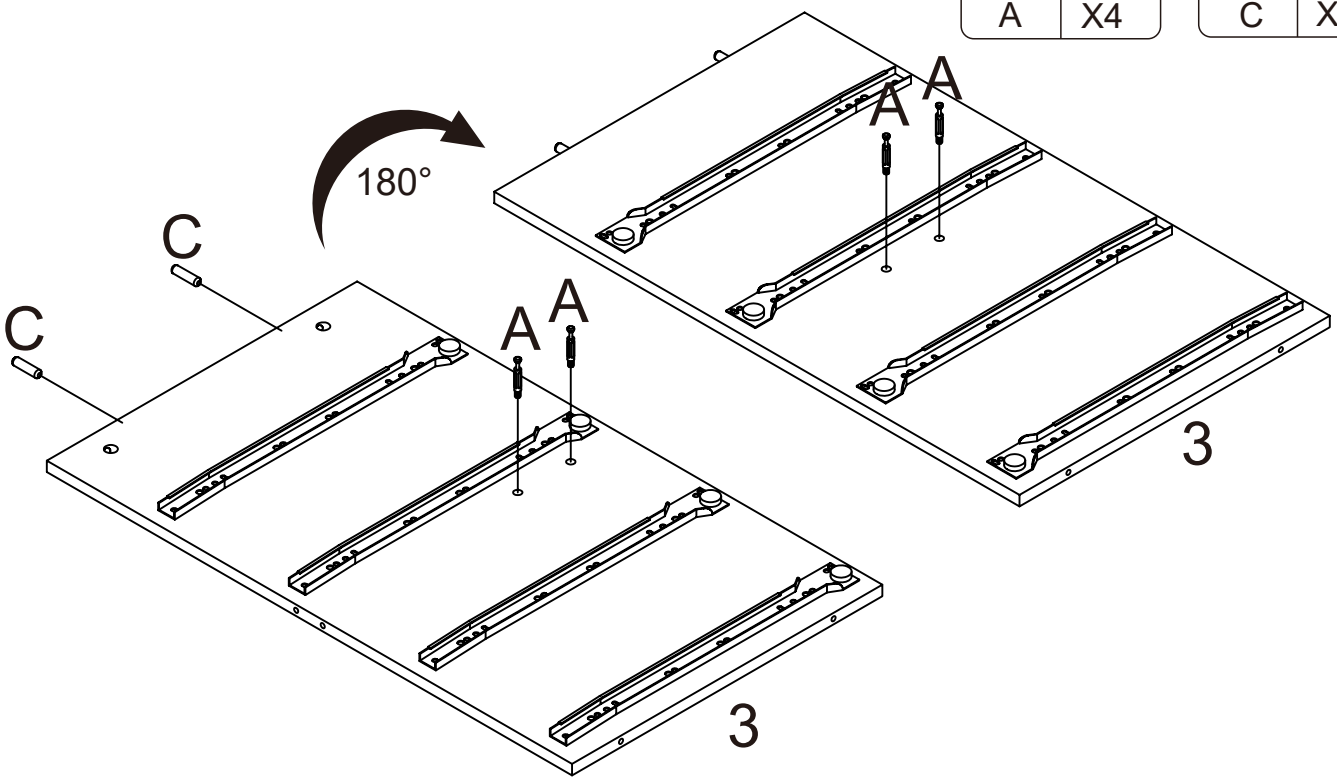



INSTALLATION STEPS

STEP5:

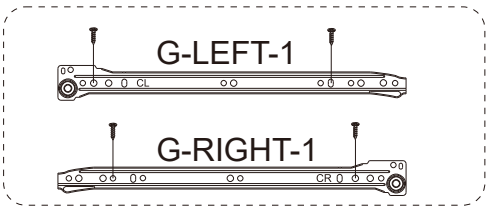



G-LEFT-1:
Install the screws from the second hole from the left and the fifth hole from the right.
G-RIGHT-1:
Install the screws from the fourth hole from the left and the third hole from the right.

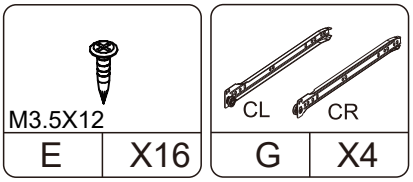

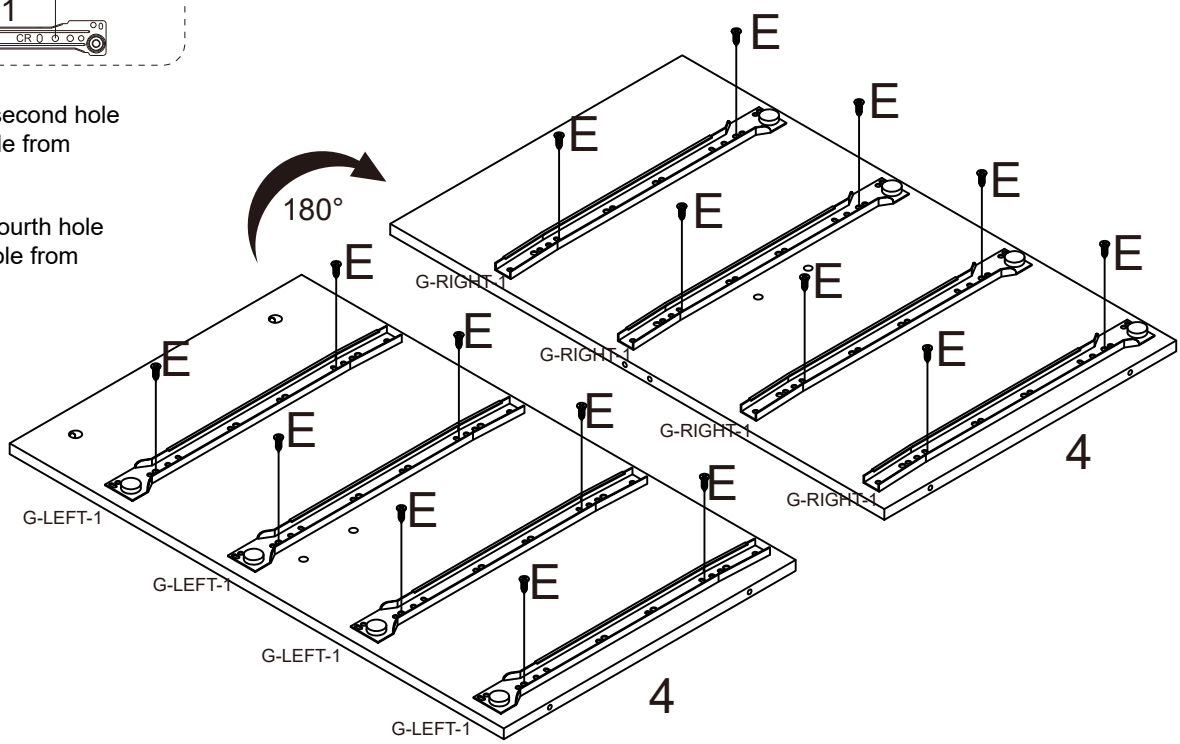


STEP6:

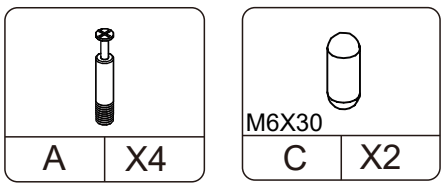


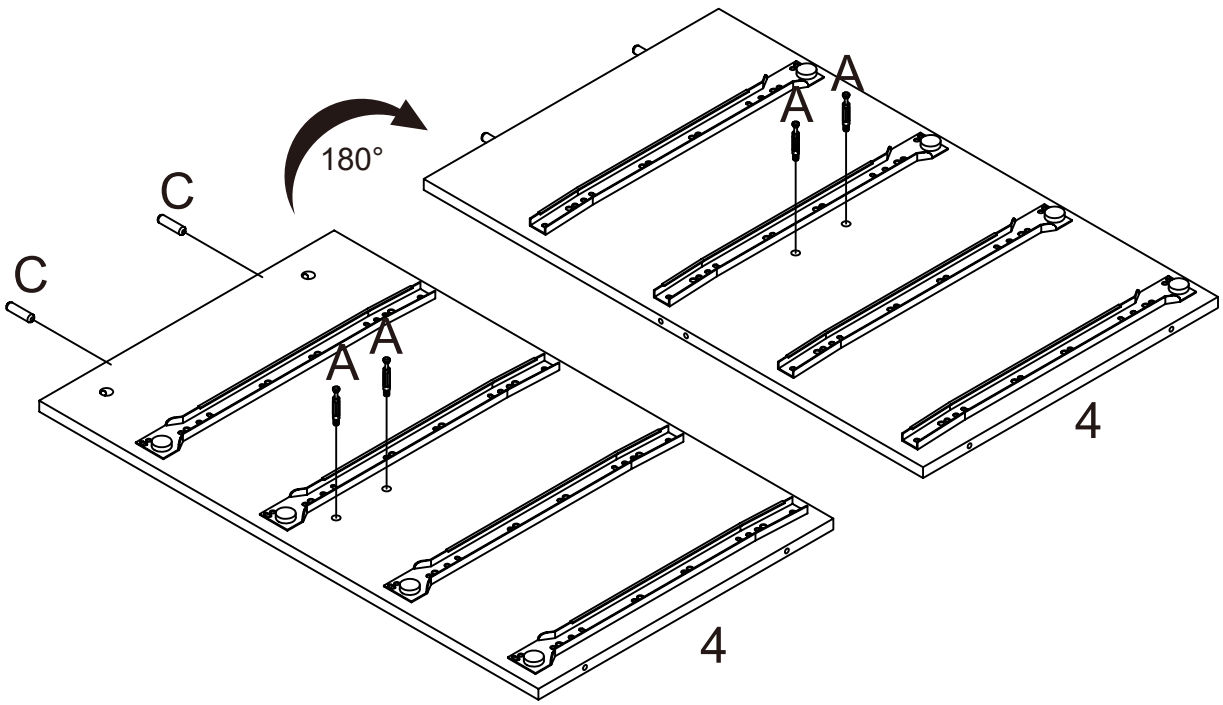


INSTALLATION STEPS


STEP7:

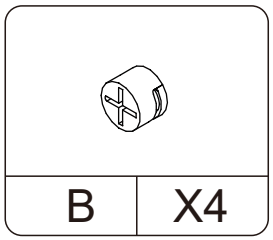

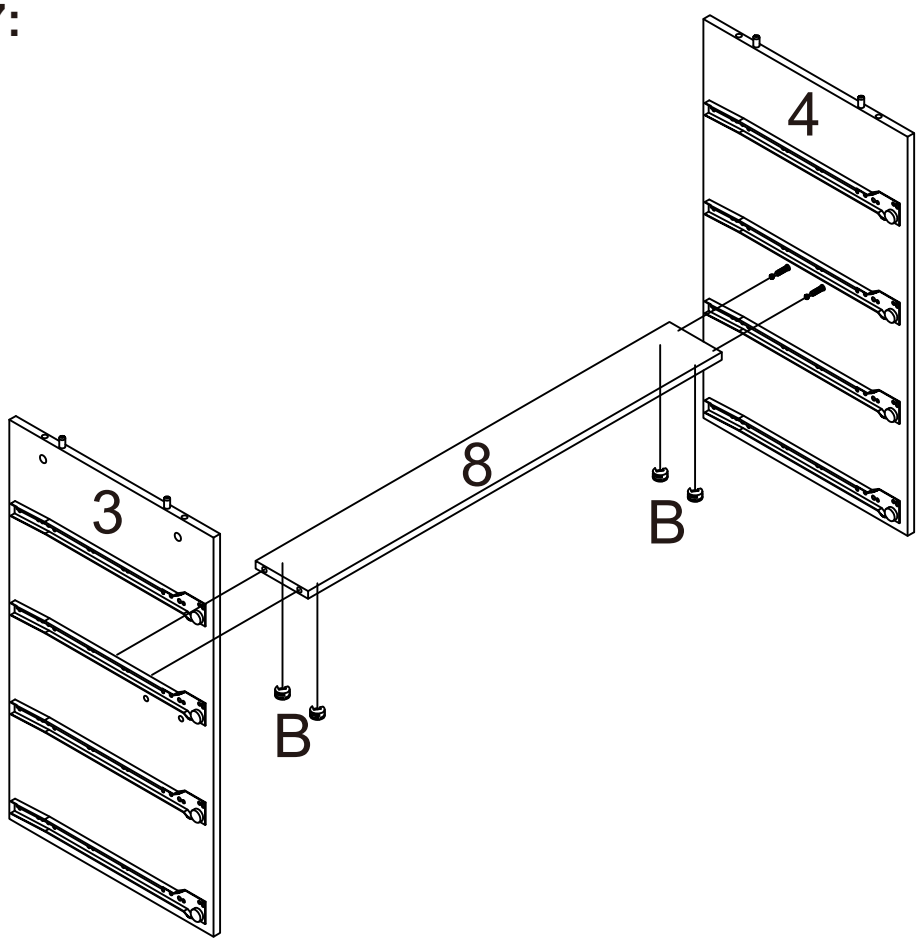


STEP8:

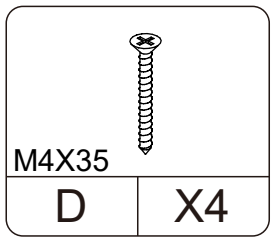


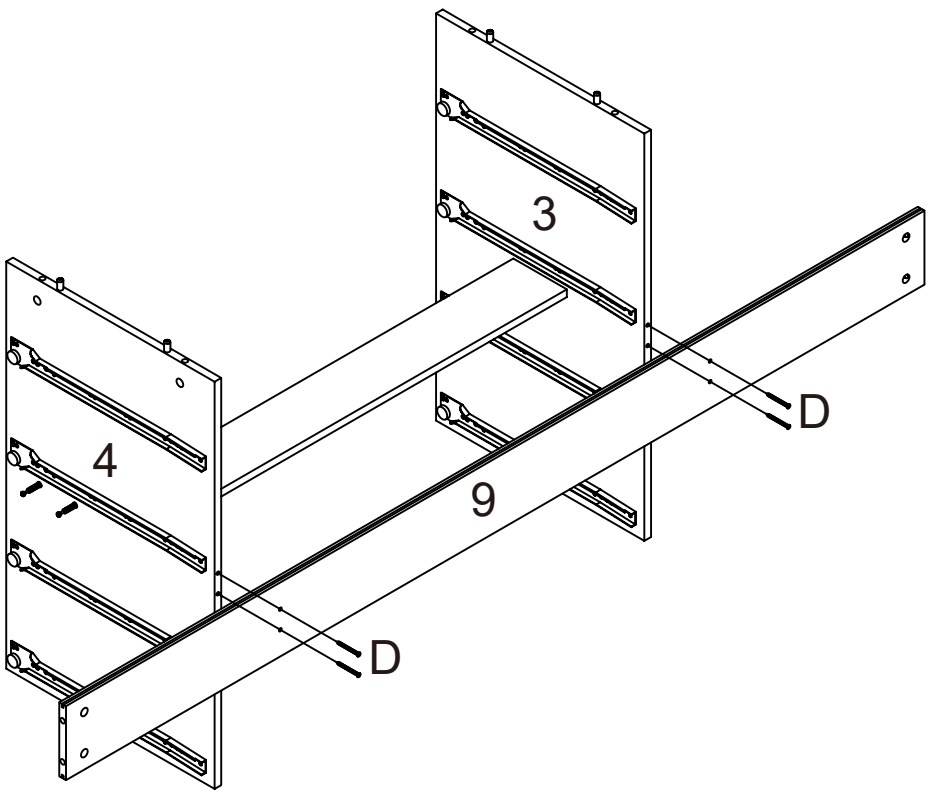


INSTALLATION STEPS


STEP9:

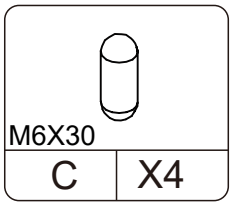

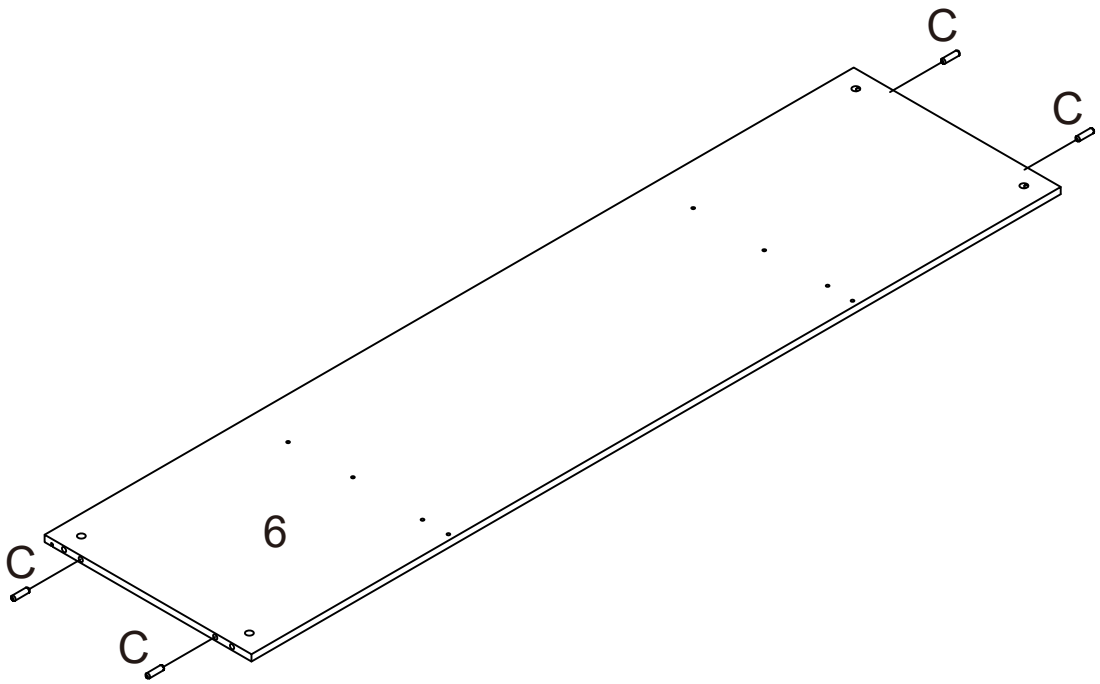


STEP10:

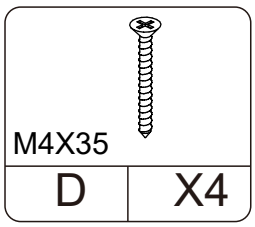


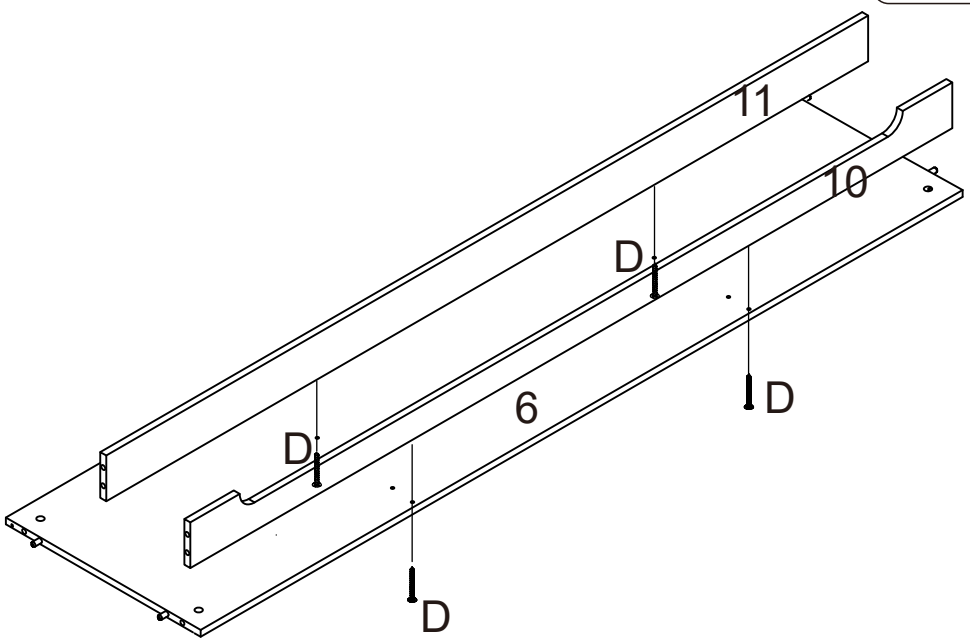


INSTALLATION STEPS


STEP11:

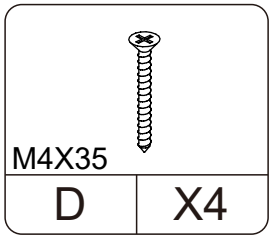

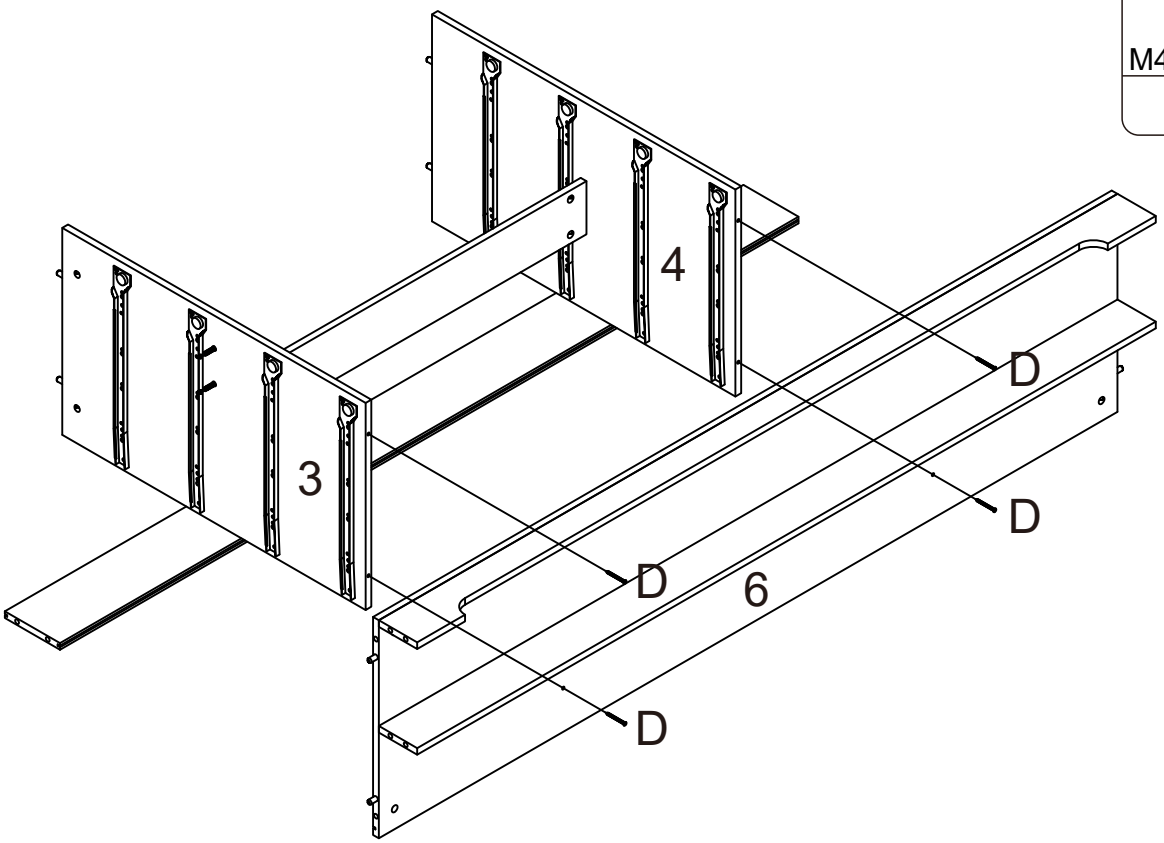


STEP12:

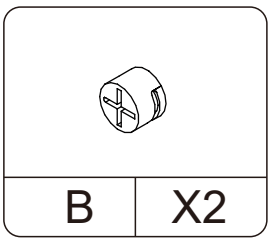


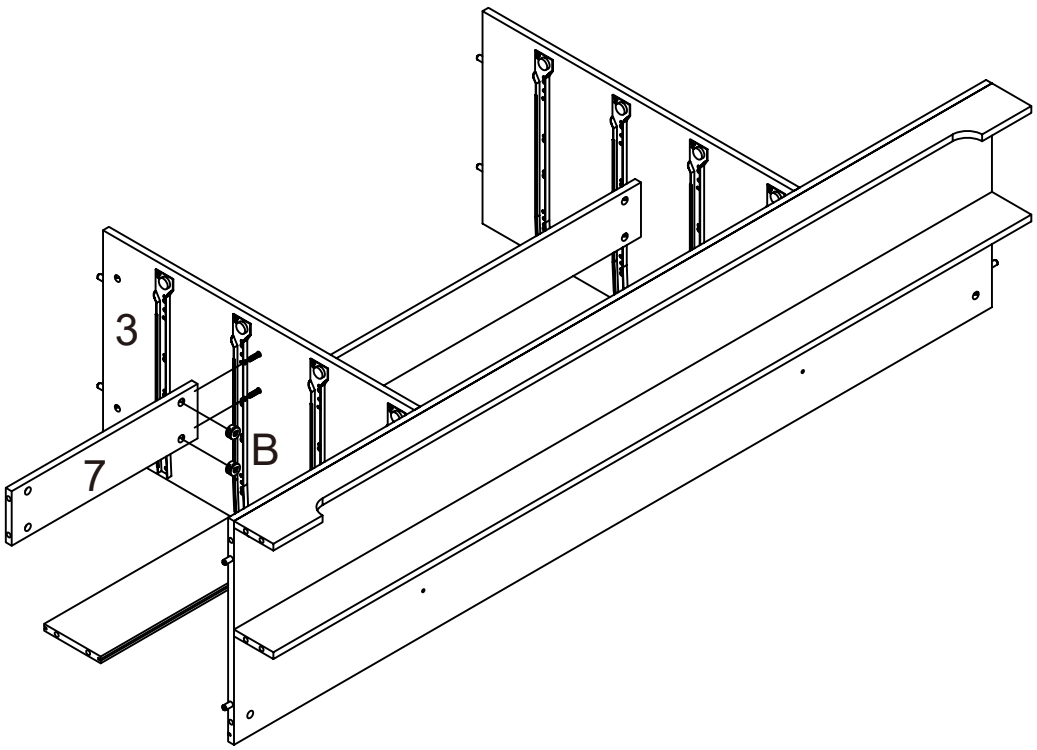


INSTALLATION STEPS

STEP13:

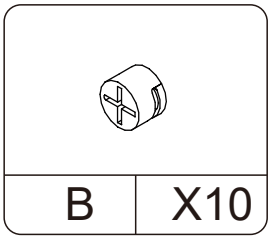

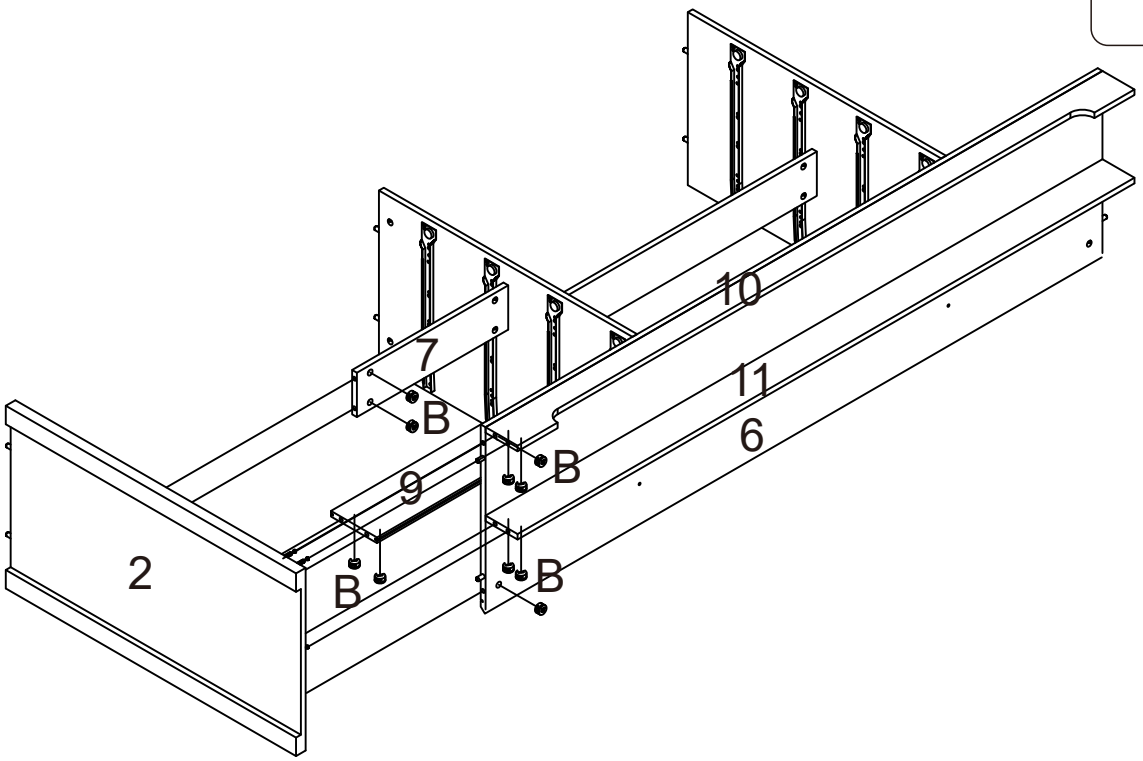



STEP14:

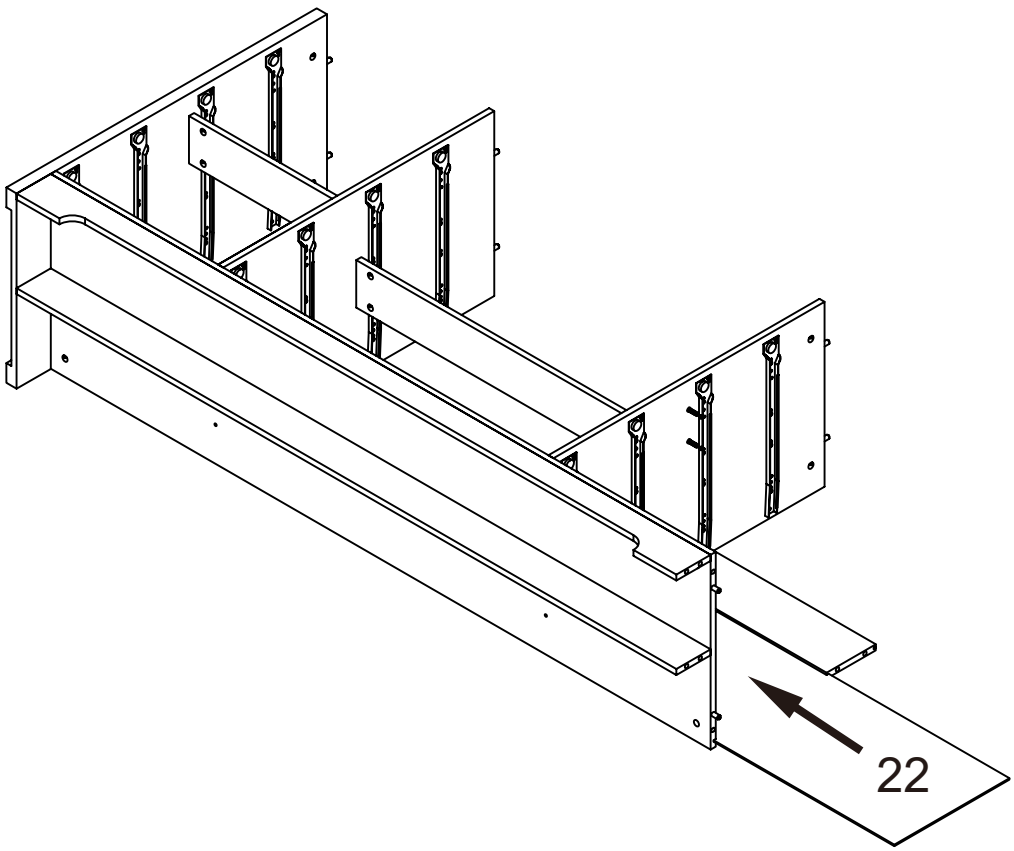


INSTALLATION STEPS

STEP15:

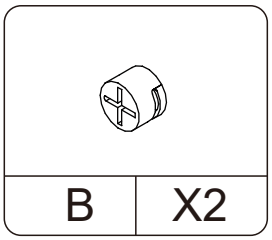

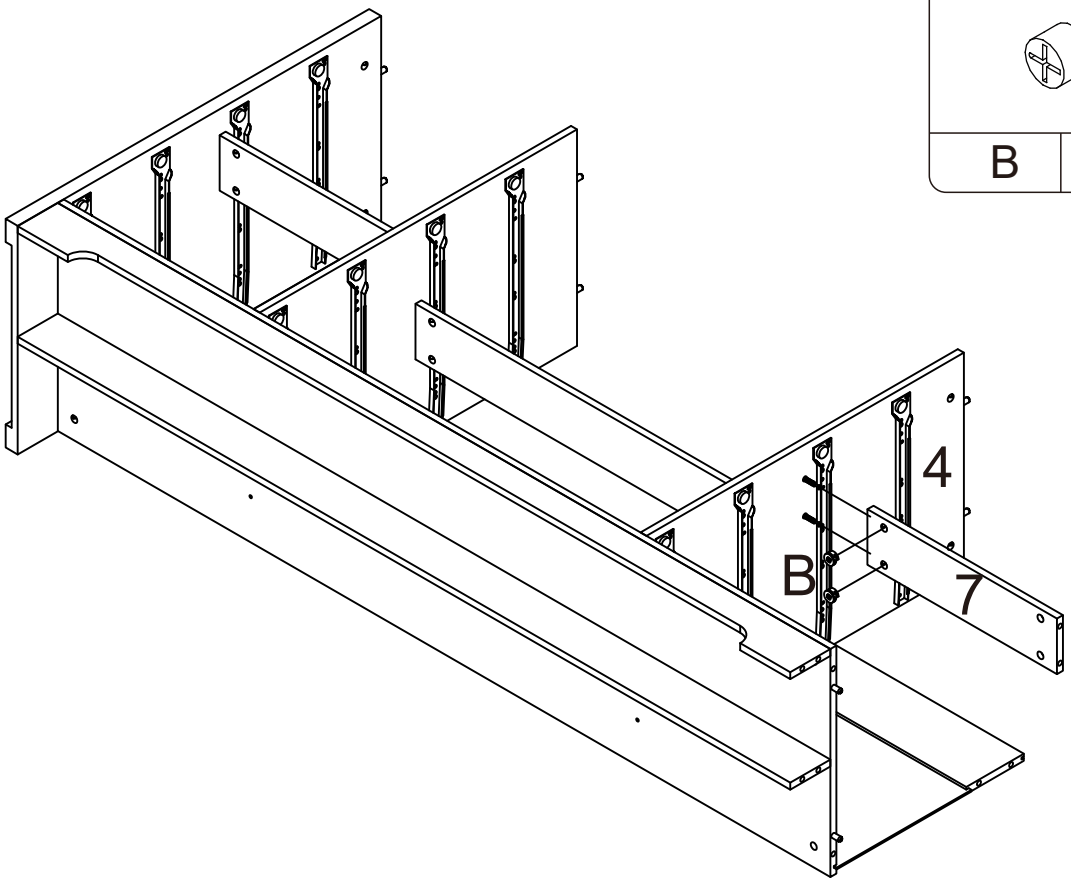


STEP16:

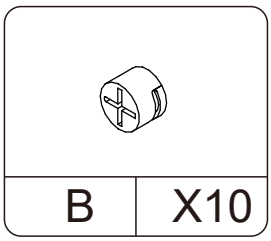



INSTALLATION STEPS

STEP17:

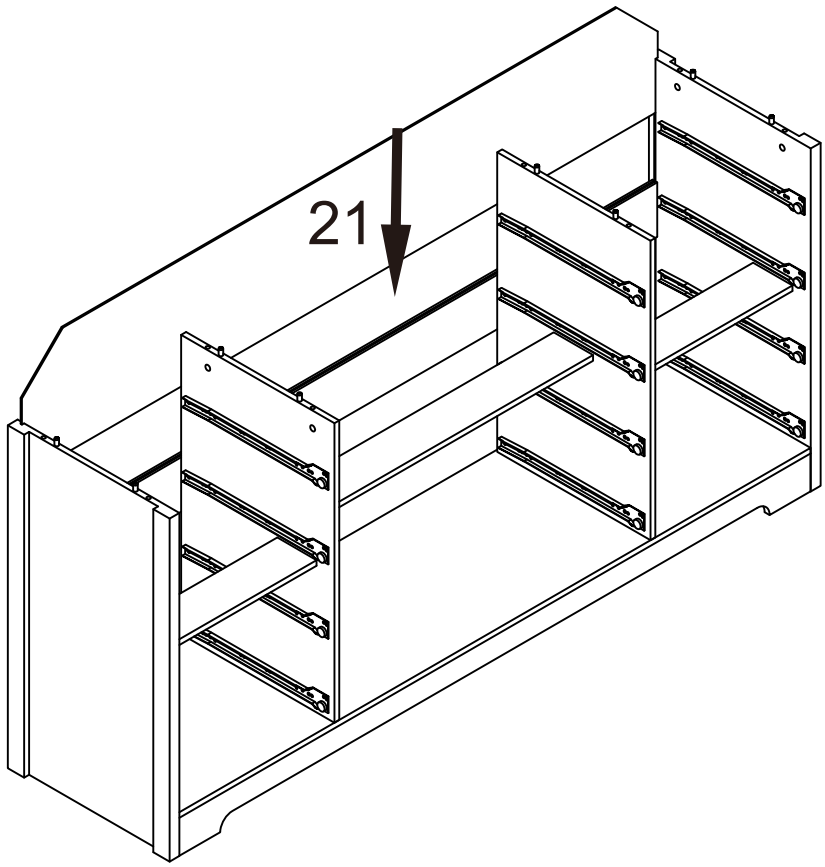


STEP18:

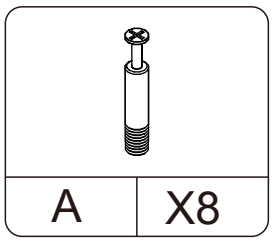


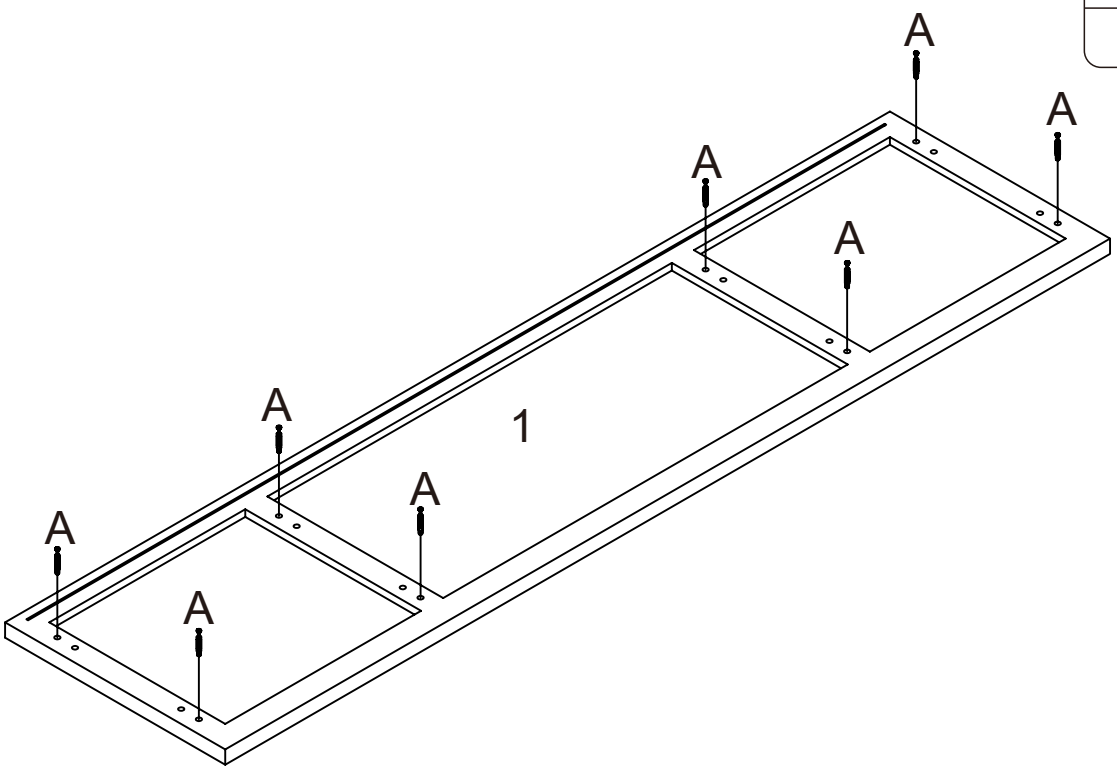


INSTALLATION STEPS


STEP19:

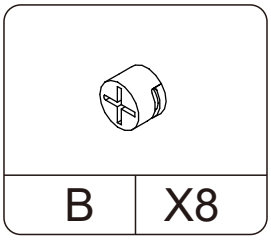

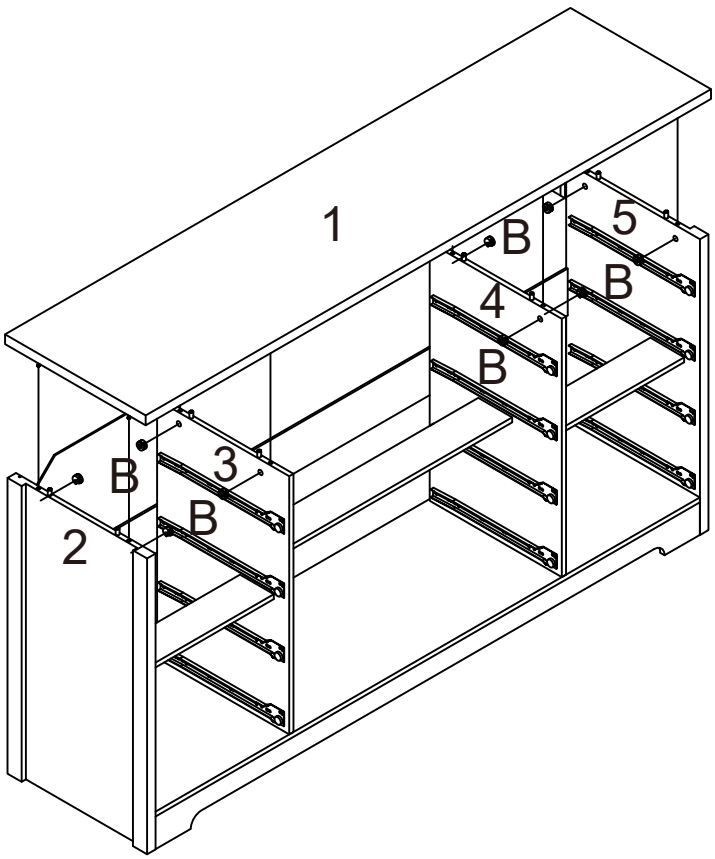


STEP20:

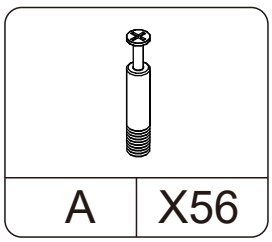


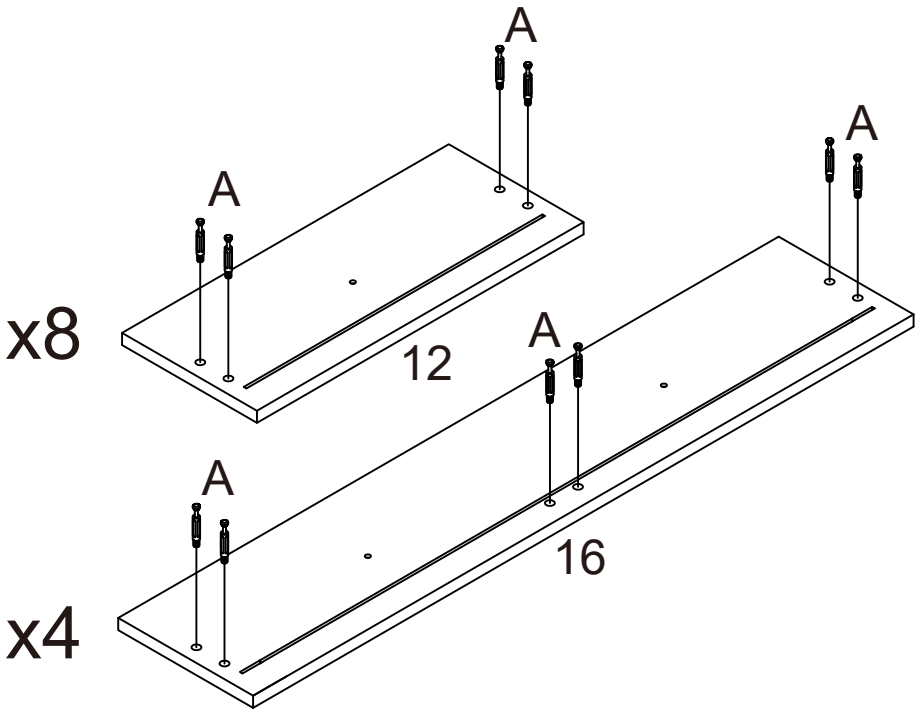


INSTALLATION STEPS

STEP21:

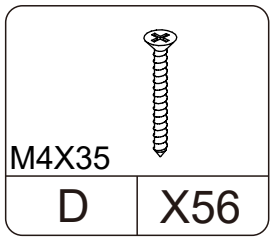

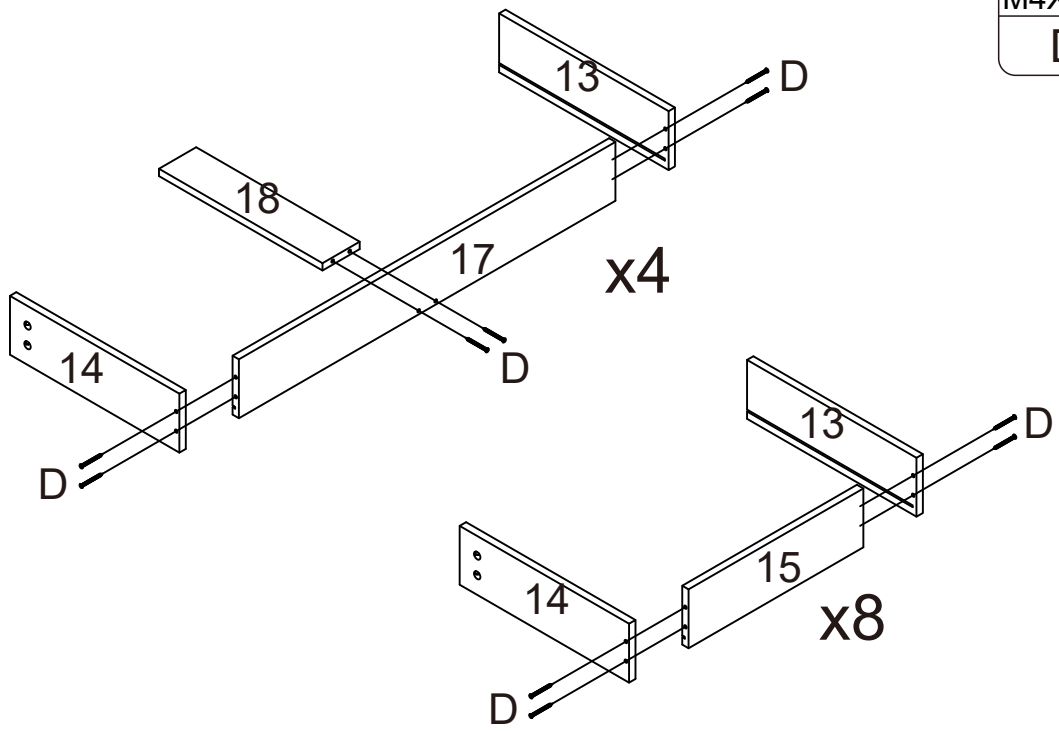


STEP22:

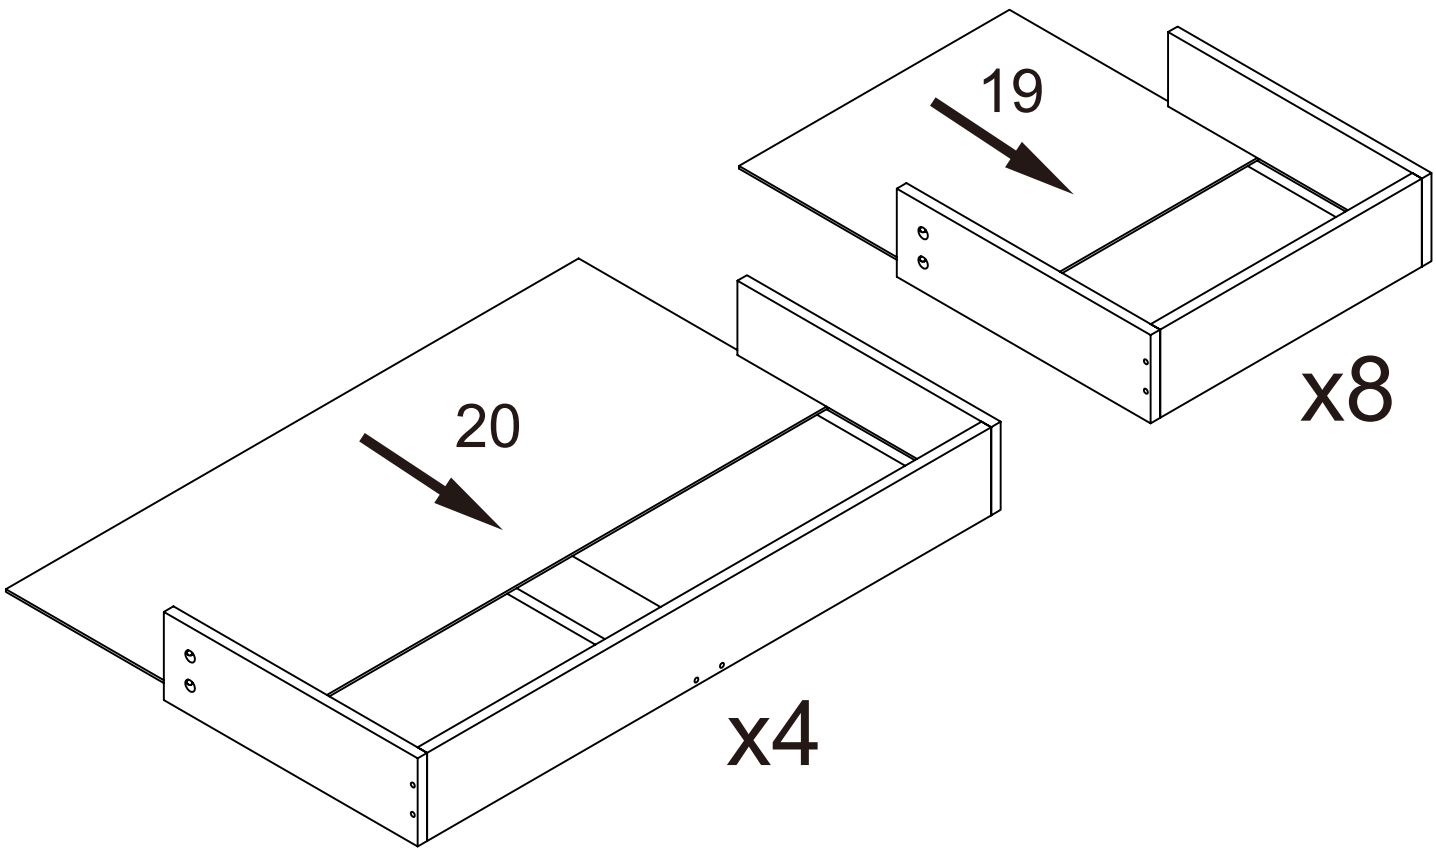


INSTALLATION STEPS


STEP23:

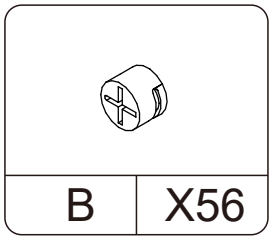


B	X56

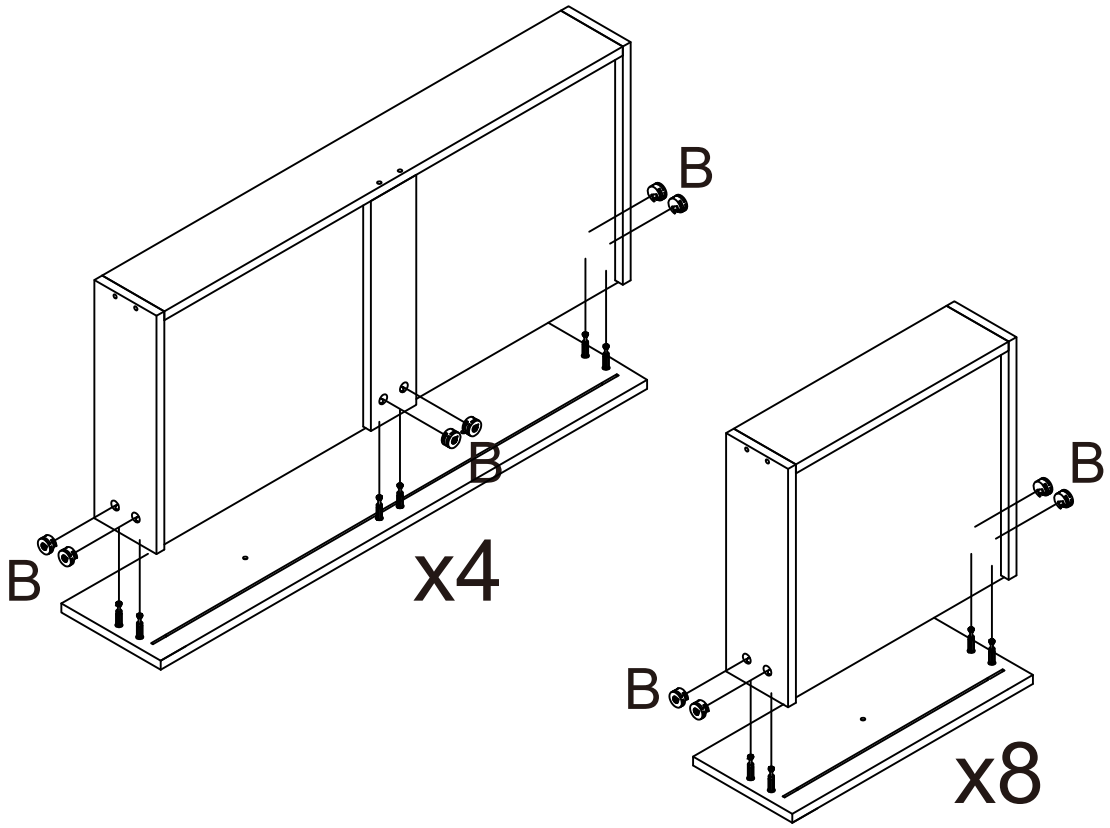

STEP24:

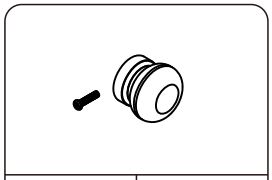



F	X16

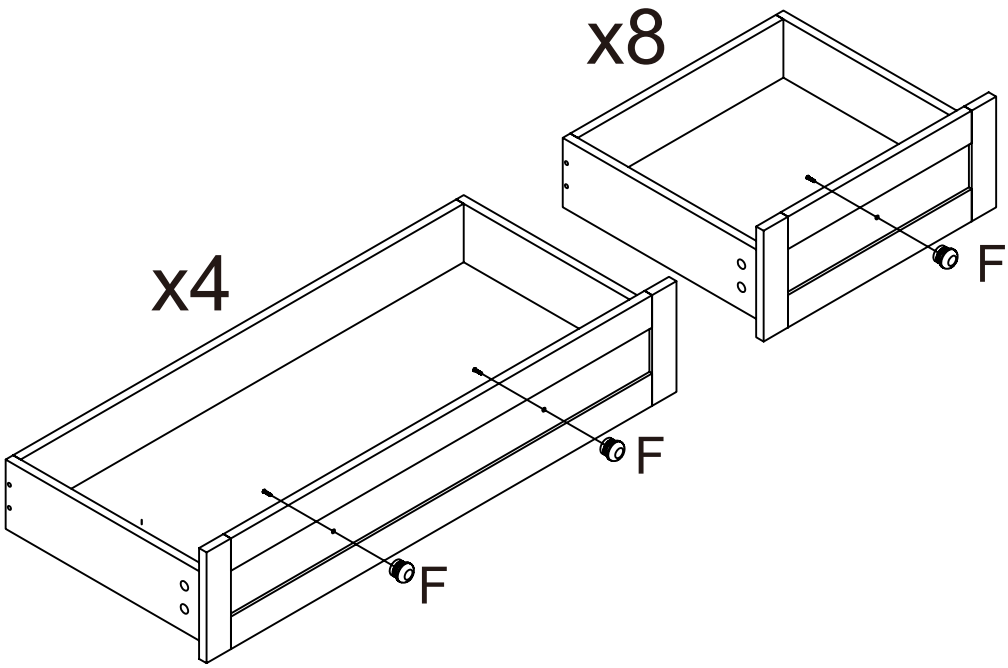


INSTALLATION STEPS

STEP25:

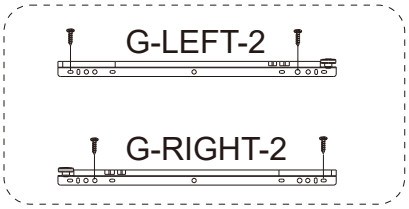


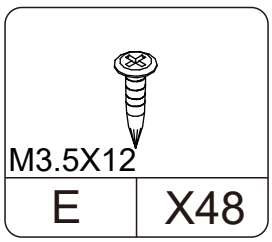


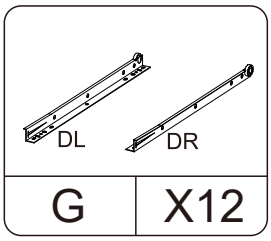


G-LEFT-2:
Install the screws from the first hole from the left and the fourth hole from the right.

G-RIGHT-2:
Install the screws from the fourth hole from the left and the first hole from the right.

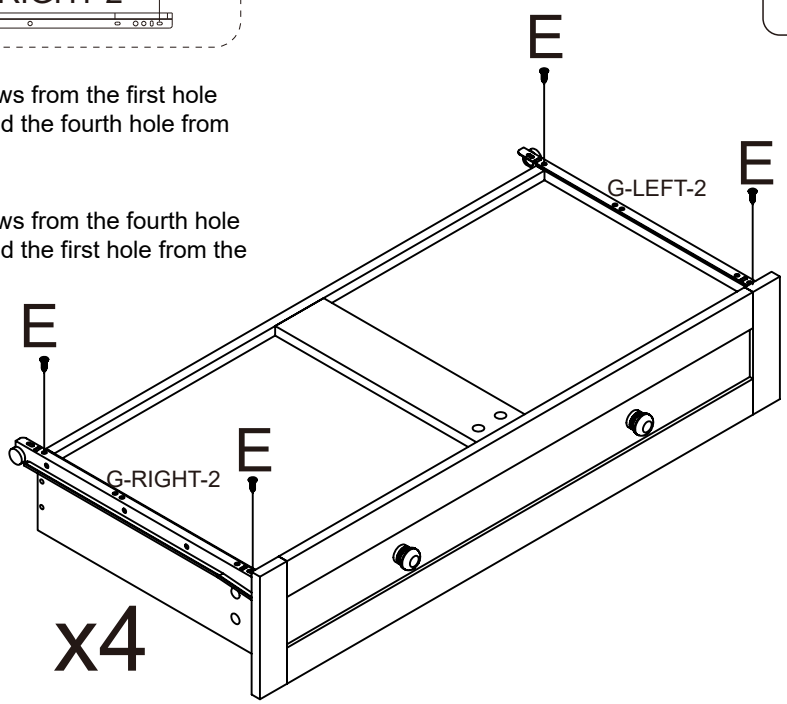

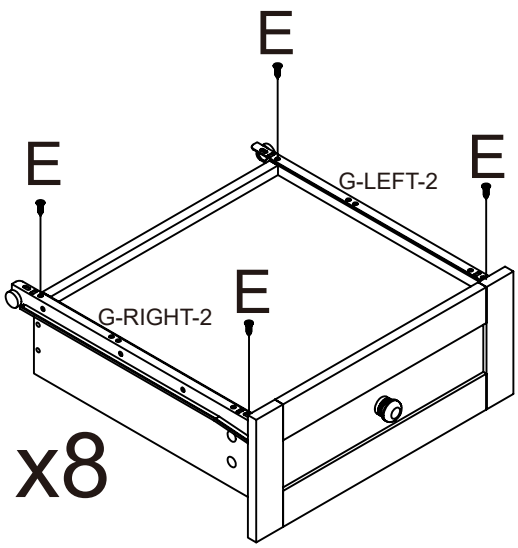


STEP26:

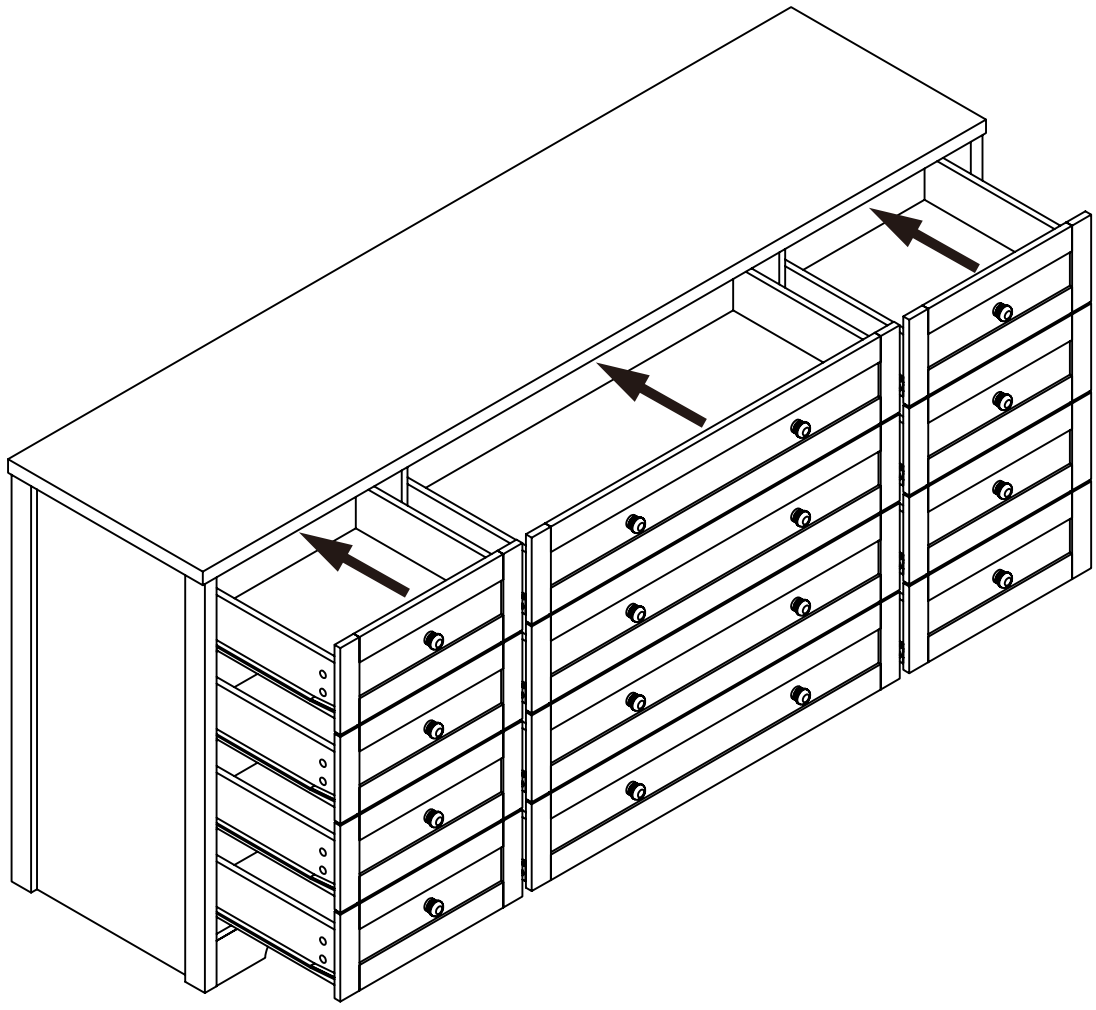


INSTALLATION STEPS


STEP27:

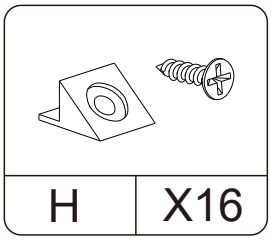

H	X16

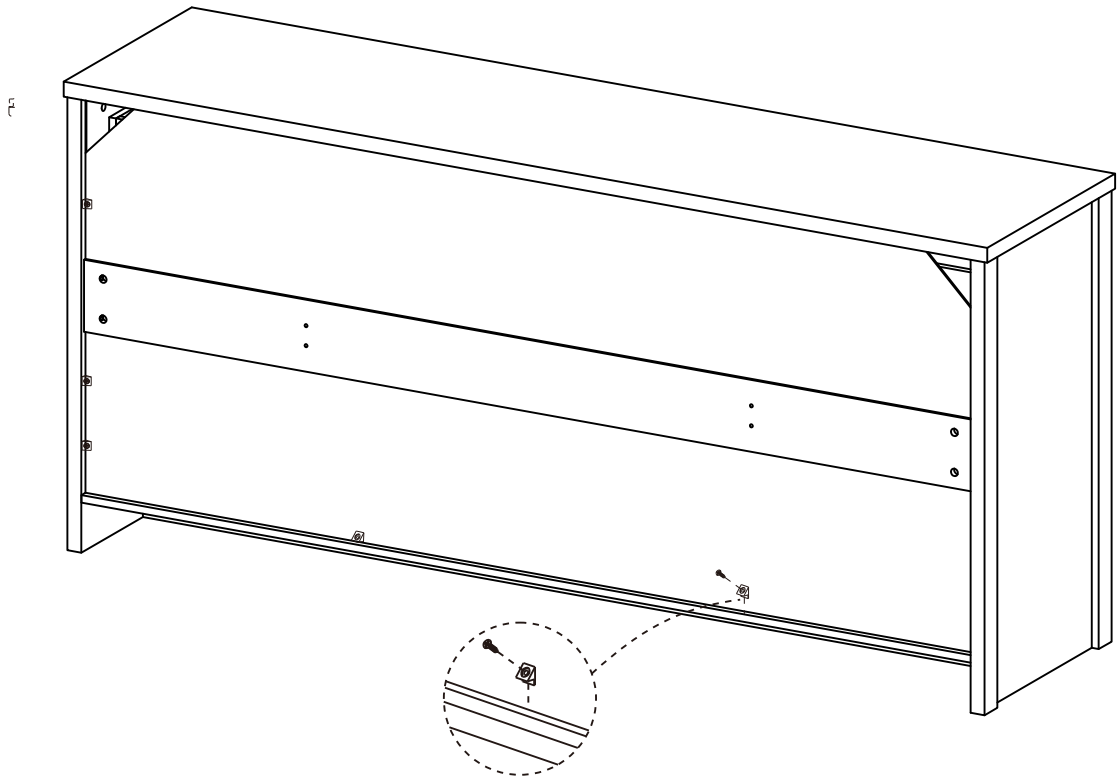

STEP28:

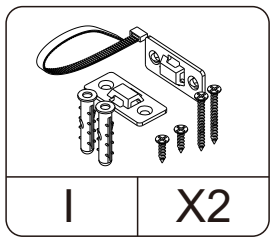

I	X2

