
Installation Instructions

Parts Description


		
frame A	frame B	bottom shelf
		
large shelf*3	small shelf*2	leg*3
				
Copper trim panel*3	Screws *30	Washer *30	Full-thread Stud*3	Hex Key*1

Installation steps

Step 1: Identify the top of the framework

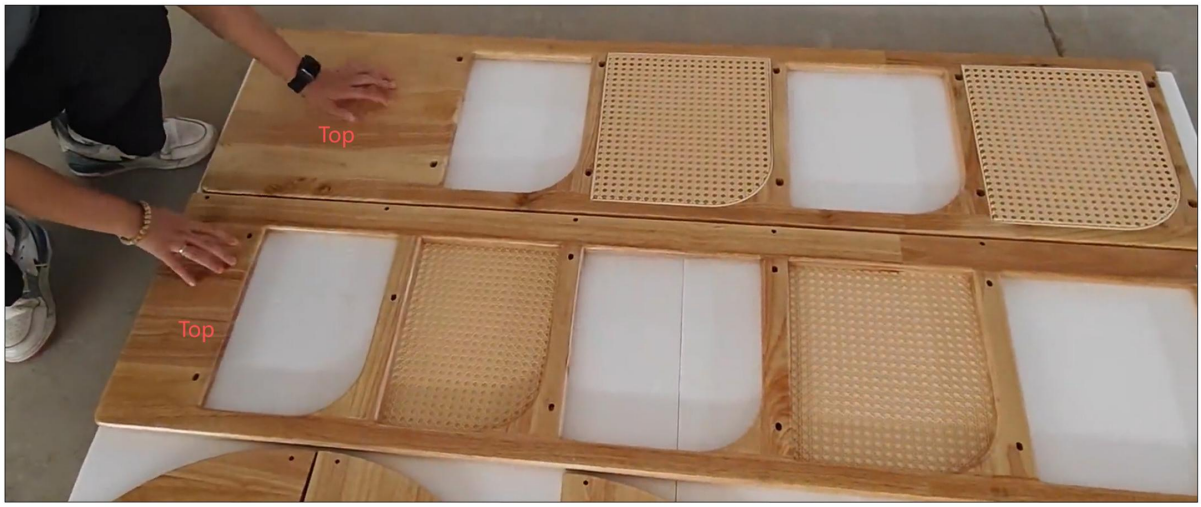

Step 2: Identify the front and back sides of the frame. The small hole is the front, and the large hole is the back.

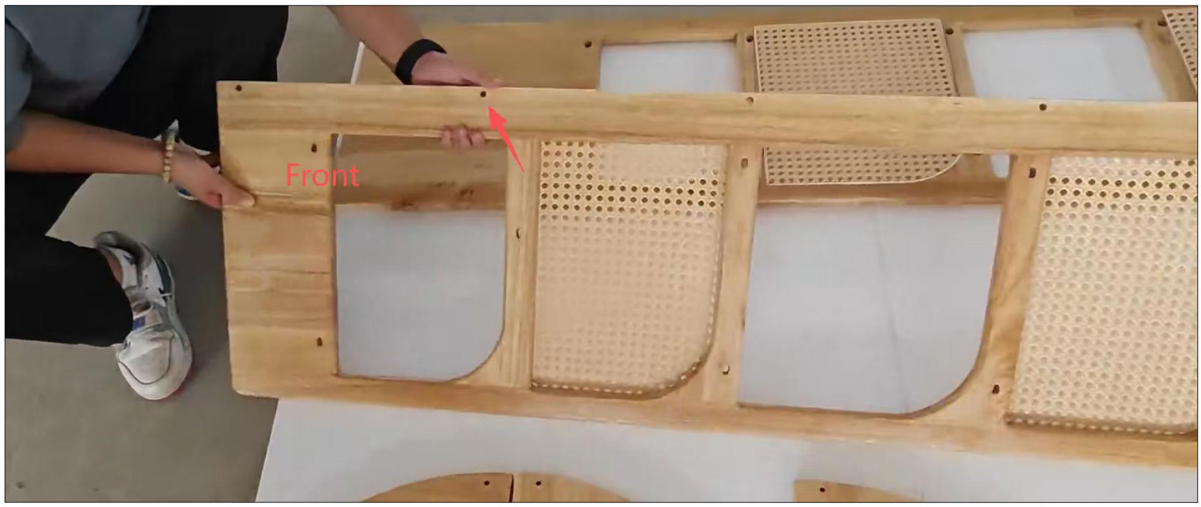

Step 3: After frames A and B are erected, align them at a 90-degree angle.



Step 4: Put washers on all the screws




Step 5: Use the Hex Key to screw the screws onto the back of the frame (First, screw all the screws in, but do not tighten them yet. This allows for future adjustments. Once you are sure the installation is correct, tighten all the screws).



Step 6: Install the top two small layers of boards



Step 7: Install the large layer board (with the side with the installation holes facing upwards)

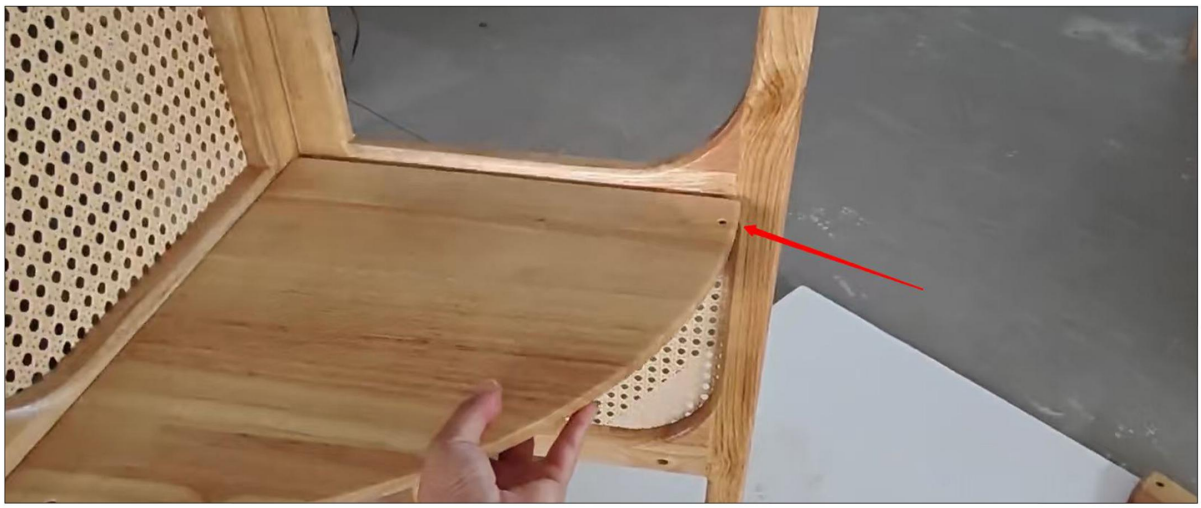

Step 8: Install the base plate (with the side bearing holes facing downwards). After installation is complete, place the cabinet flat on a carpet or a soft and flat surface.



Step 9: Install the leg onto the cabinet using the Full-thread Stud.



Step 10: Install the copper decorative pieces on the large layer board

