
G30077-09-LD

MANUAL INSTRUCTIONS

7 BOXES

COURTYARD GAZEBO

HARDTOP GAZEBO WITH NETTING
14*24FT

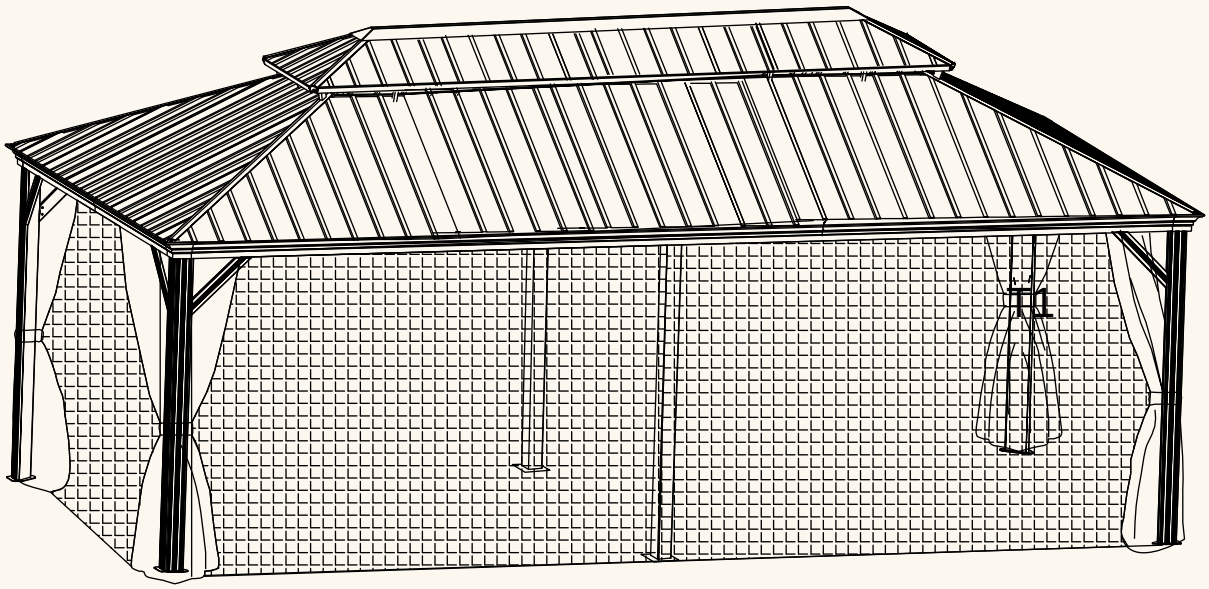

CONTACT US:24H,Mon~Sun.

service@kmcgloble-us.com

(USA) +1 213-816-4788

CUSTOMER SUPPORT

Dear customer
Thank you for your purchase.

This product is a non-permanent outdoor structure designed and manufactured for personal use rather than commercial use.
Please confirm whether the installation is permitted in your states firstly.

1. When you receive the product, please make sure that all the boxes have arrived,and all the parts are intact.
2. Please browse the entire installation manual before assembling, retain this instruction manual for future reference.
3. If any problem occurs unsatisfactorily as follows:
    - Lack of boxes, or some boxes are not arrived.
    - The outer box is damaged.
    - The product is damaged / bent / cracked while you open the box.
    - The parts / accessories / assembly tools are missing.
    - The product is hard to assemble.
    - The instructions are not clear, or hoping for assistance with installation.
    - The product has functional problems.
    - The product did not meet your expectations.
    - Other aspects that you are not satisfied with.

Please feel free to contact us for help firstly. If there is any damage, please send us clear photos. We will check and do our best to provide the best solution for you. The missing or damaged parts will be delivered to you within 5 days.

DO NOT RETURN YOUR UNIT TO THE STORE
CONTACT US FIRST

service@kmcgloble-us.com
(USA) +1 213-816-4788

ATTENTION

PREPARATION:

The gazebo needs to be installed in cooperation with **three people**.

Estimated Assembly Time: **3 Hours**.

Site preparation suggestion: Level the ground surface,construct a wooden or concrete base as a foundation.

The following installation tools will be used.



2 m Adjustable Ladder



Tape Measure



Screw Driver



Pistol Drill



gradienter



Hammer





gloves




3 people


Minimum foundation size:

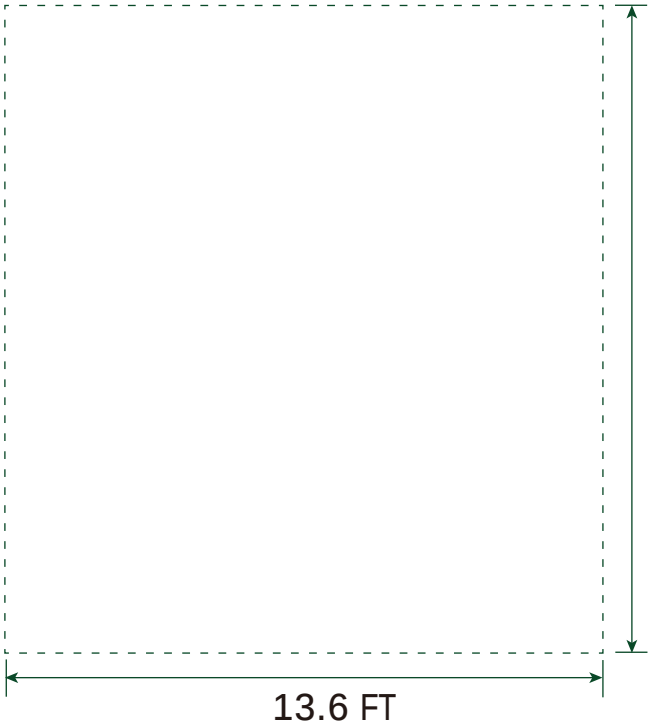


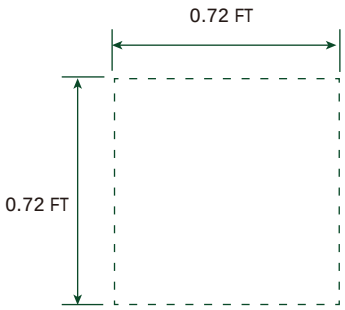

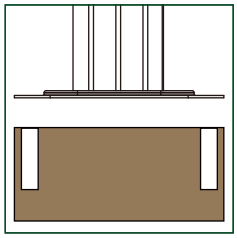

If your foundation is made of hardwood or concrete, Use an 10 mm diameter drill bit to drill holes in the foundation, with the depth exceeding 40 mm.

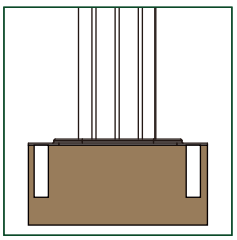

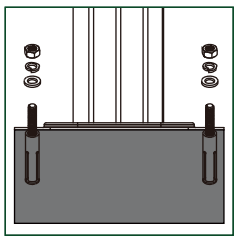

Use the expansion bolts that are pre-configured with the product to secure it in place.This installation methods will provide better wind resistance performance, extend the product's lifespan.

ATTENTION

CAUTION:

1. Tighten each bolt firmly and properly. Do not completely tighten the screws until all screws are started.
2. Some parts may contain sharp edges. Wear protective gloves in the box as necessary.
3. Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product.
4. It is strongly recommended to hire a professional installation team.

WARNING:

1. Children under the age of 10 should be supervised by a competent adult while using this furniture.
2. Please keep children out of the assembly area during assembly.
3. Never use this product as a support. Do not shake, lean, or climb on the product any time.
4. Please take appropriate measures to deal with the bad weather. Heavy rain, wind and snow may be damage the gazebo. If necessary please dis-assemble and store for later use.
5. In snowy weather, please ensure that the thickness of snow on the roof does not exceed 5 inches, If it does, please remove the snow as soon as possible to ensure safety.
6. When the wind force reaches scale 8, please take corresponding measures to reinforce the gazebo to prevent it from being damaged by the wind, and be cautious of safety issues during strong wind conditions.
7. It is necessary to use anchor bolts, expansion bolts and ropes to fix the gazebo to the foundation for Long-term stability.
8. We offer a one-year warranty, excluding damages caused by improper installation, incorrect usage, failure to use the fixing accessories, unclean snow, or failure to take preventive measures.
9. Stay away from open flames.

PARTS LIST


1. Please ensure that all parts, accessories and installation tools are complete before starting the installation.
2. Due to the variety of accessories, some parts may be glued together, some parts may be trapped inside the larger ones, please check carefully.
3. In case you cannot find or lose some small parts or screws during installation, we have provided extra parts.
4. If any accessories are missing or damaged, please contact us immediately.

service@kmcgloble-us.com

CARTON:A



A X 4




E2 X 12




Eb X 4

Inside the part"A".



H X 4



H1 X 4



D X 12



17 X 4

CARTON:B




B4 X 2




B5 X 2



J X 4



P X 6



P1 X 2



E1 X 4



E3 X 4



E4 X 4



M6x15mm

1 X 300 (+20)



M6x28mm

2 X 168 (+20)



ST4.8x12mm

3 X 16 (+4)




M6x10mm

4 X 23 (+2)



M6x10mm

5 X 16 (+4)



M6x50mm

6 X 20



M5x12mm

7 X 16 (+4)

PARTS LIST

CARTON:B



8 X 5



9 X 1




10 X 1



11 X 20

M6x135mm

12 X 36 (+4)



M6x145mm

13 X 12 (+2)



S X 4



Sc X 4




Q1 X 4




Q2 X 4



Q9 X 4



Q10 X 4



J1 X 2

CARTON:C



B1 X 2



B2 X 2

G1 X 2

G2 X 2

G3 X 2

G4 X 2


G7 X 2



L X 1



M X 1




T X 1(4pcs)


CARTON:D



B X 2



B3 X 2




G5 X 2



G6 X 2

G8 X 2



L1 X 1

PARTS LIST

CARTON:D



M1 X 1



K1 X 8



W1 X 12



21 X 8



22 X 8



18 X 16



N X 8



N1 X 12



M3 X 8



U X 160 (+10)




Y X 160 (+10)



W X 4




23 X 4




T1 X 1(pcs)




V1 X 2




V2 X 2



V3 X 4



V4 X 4



V5 X 2

CARTON:E



A1 X 2

Ea X 4

F1 X 2

F2 X 2

F3 X 2

F4 X 2

F5 X 2

F6 X 2

F7 X 2

F8 X 2

F9 X 4



K X 4

PARTS LIST

CARTON:F




Sa X 2



Sb X 2



Q3 X 2



Q4 X 2




Q5 X 4



Q6 X 4



Q7 X 2



Q8 X 2



S3 X 6



R1 X 2

PARTS LIST

CARTON:G




Sa X 2



Sb X 2



Q3 X 2



Q4 X 2




Q5 X 4



Q6 X 4



Q7 X 2



Q8 X 2




S3 X 6





R1 X 2

Phase 1:Flooring Frame

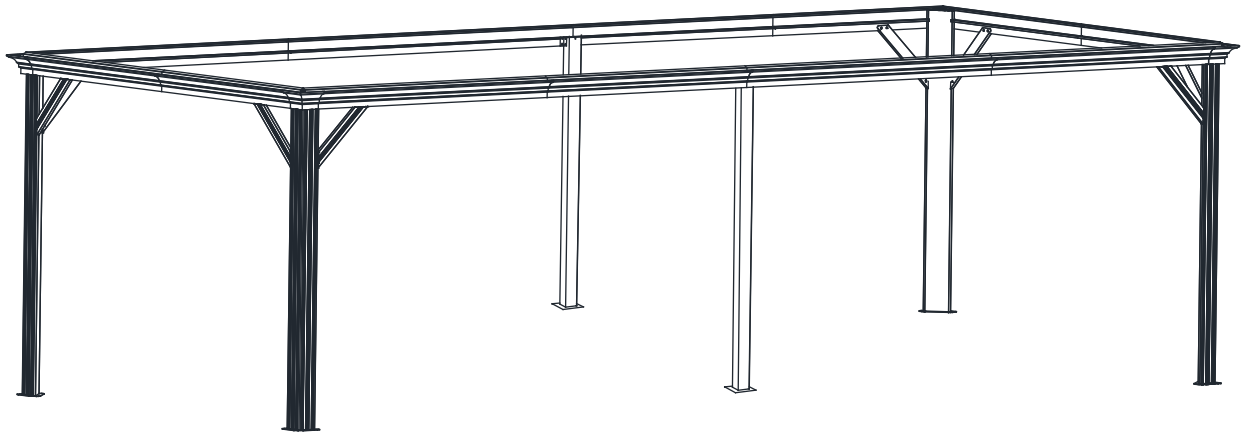

Before installation, please remove the plastic parts of the following components.

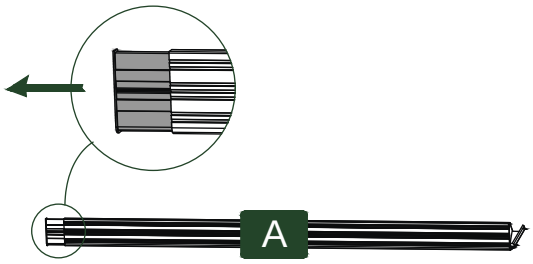

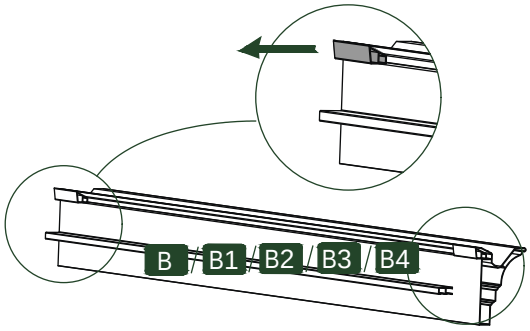


01 STEP

X4



A X 4




J X 4




22 X 8

21 X 8

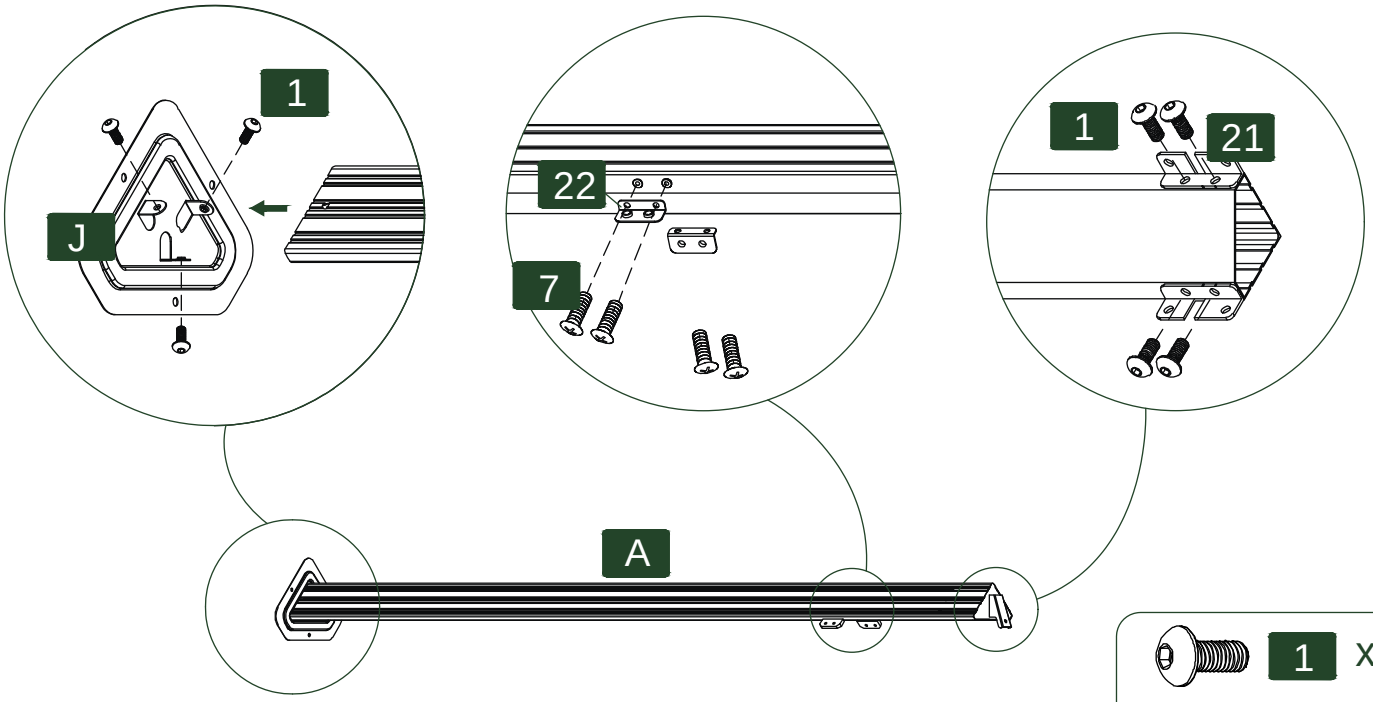


1 X 28



7 X 16

02
STEP
x2



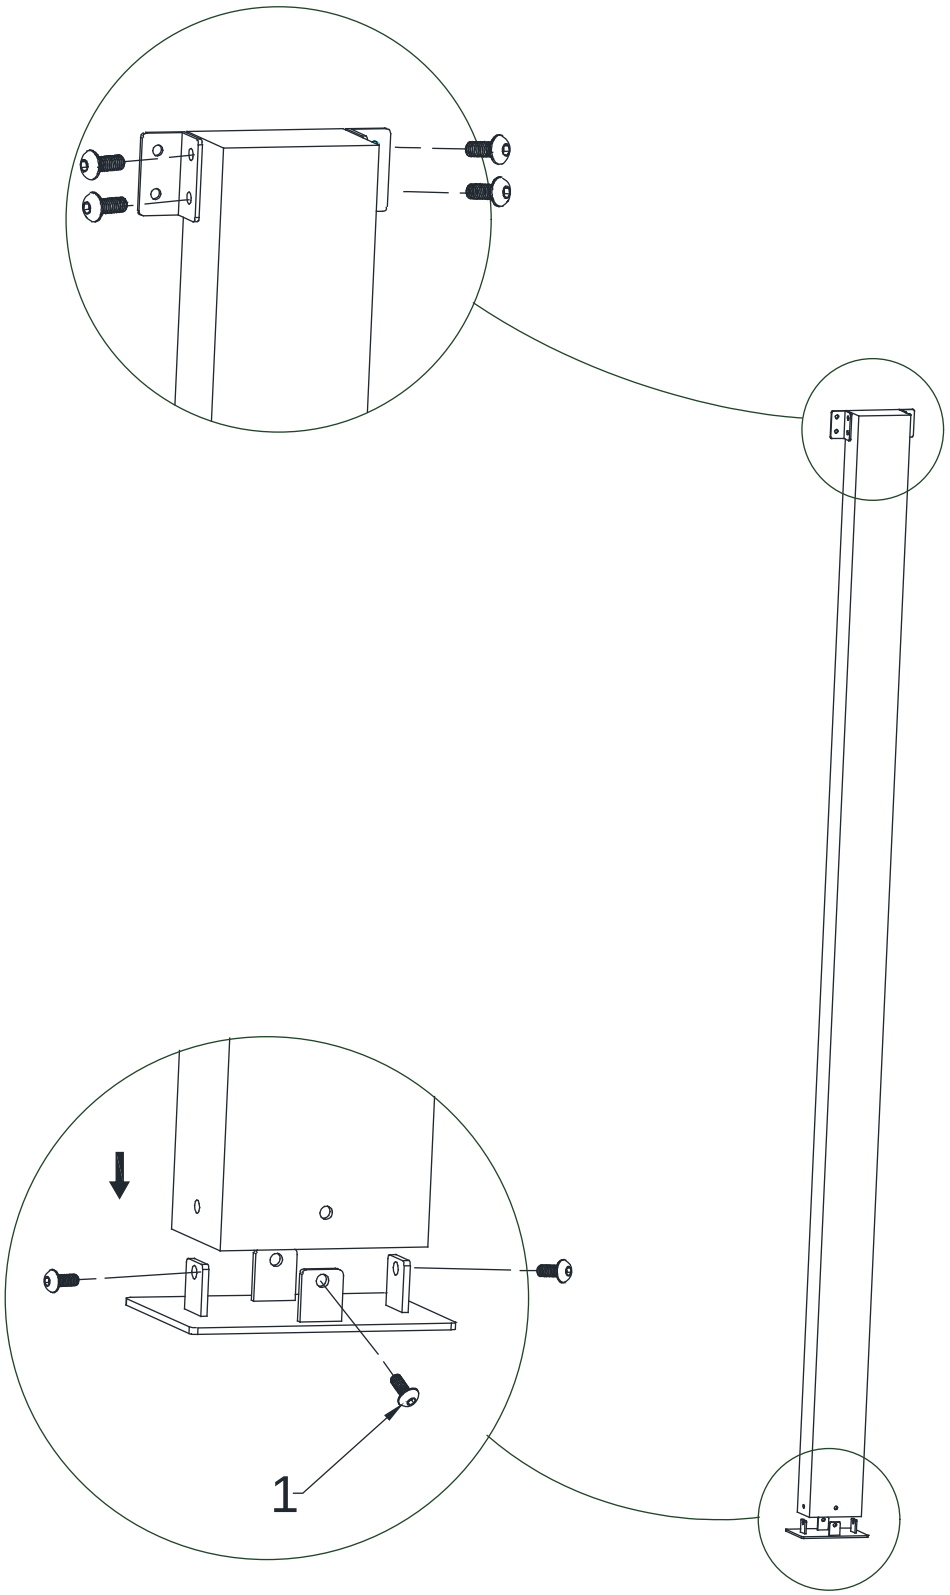



03
STEP
X2

B X 2 B1 X 2 P X 6


B2 X 2 B3 X 2

P1 X 2

B4 X 2 B5 X 2

These two holes are not locked.


Note that the P component should be placed with its porous side facing down.

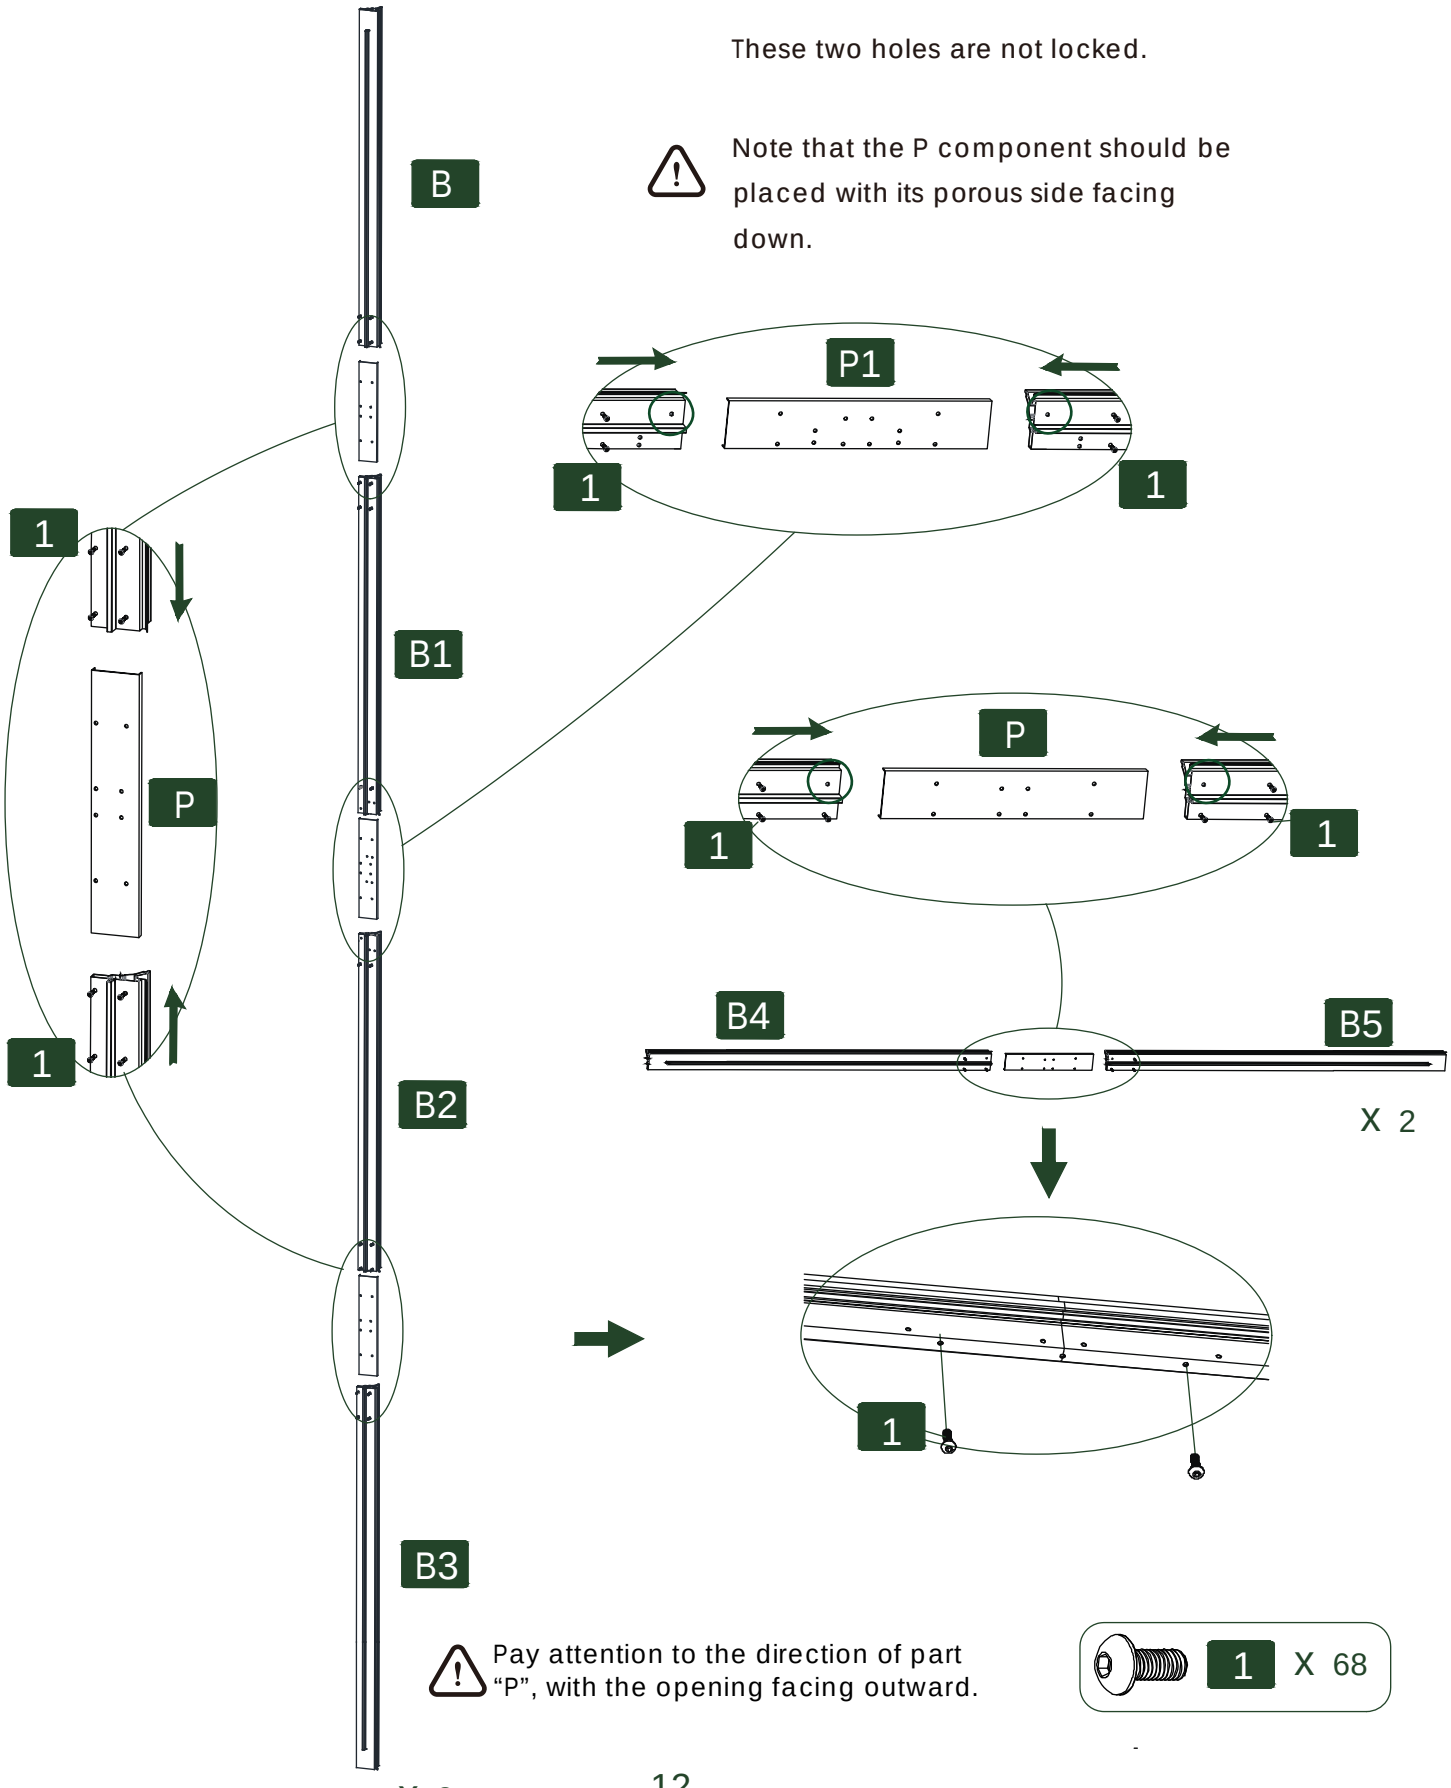


Pay attention to the direction of part "P", with the opening facing outward.


1 X 68

04
STEP
x2

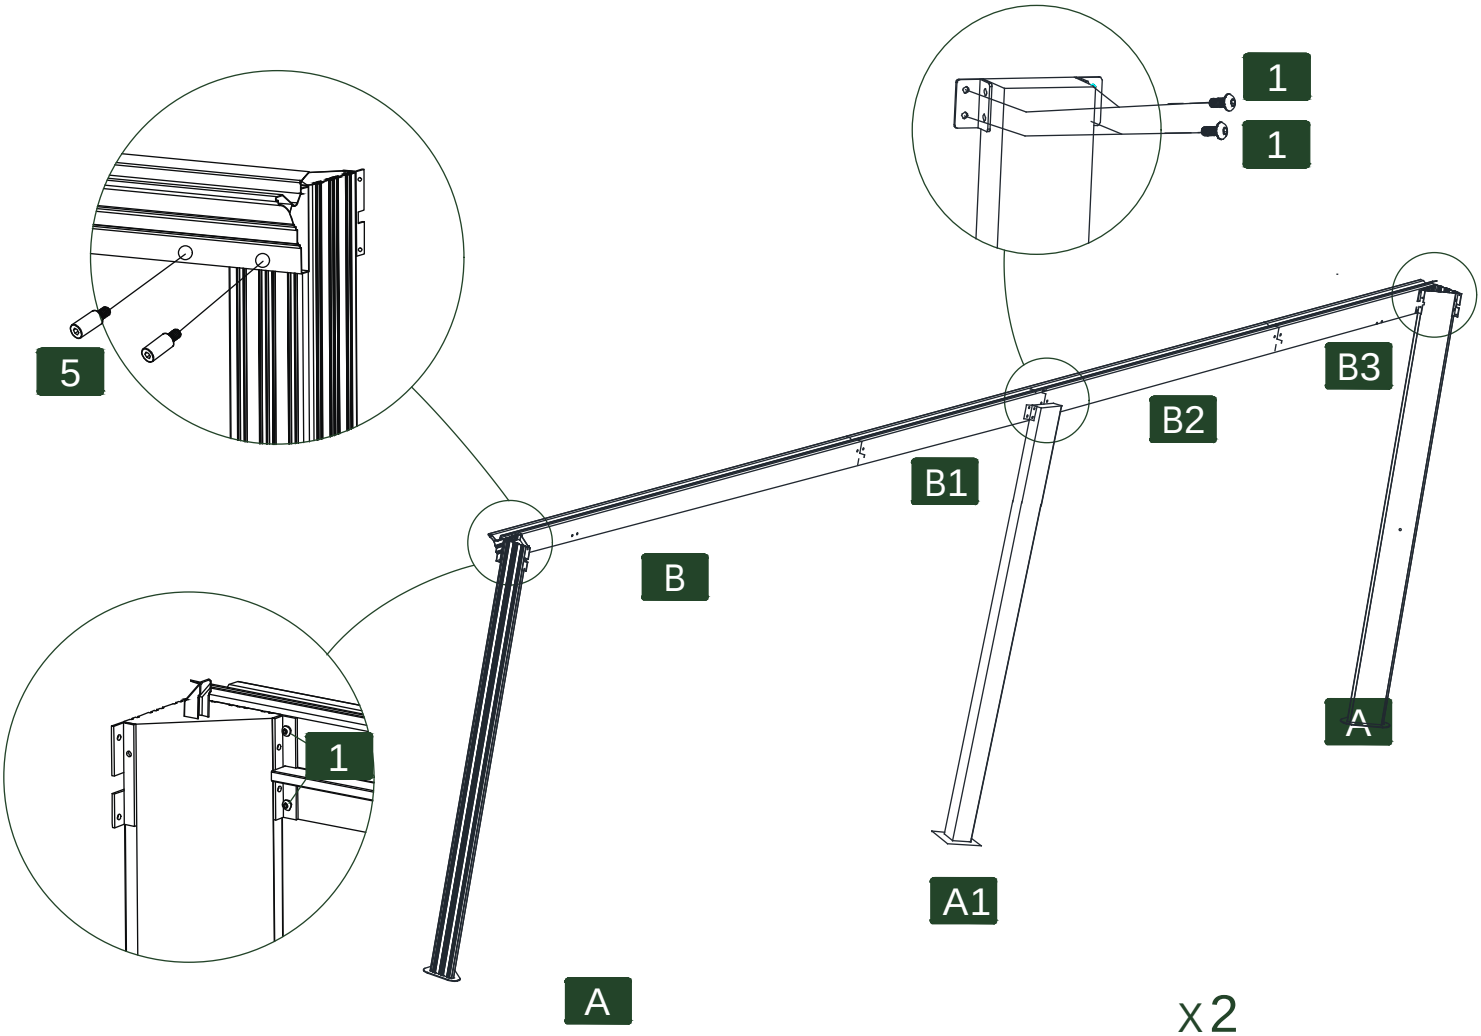


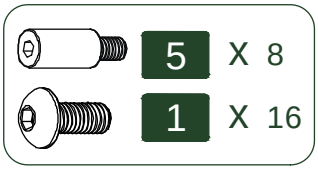


05 STEP

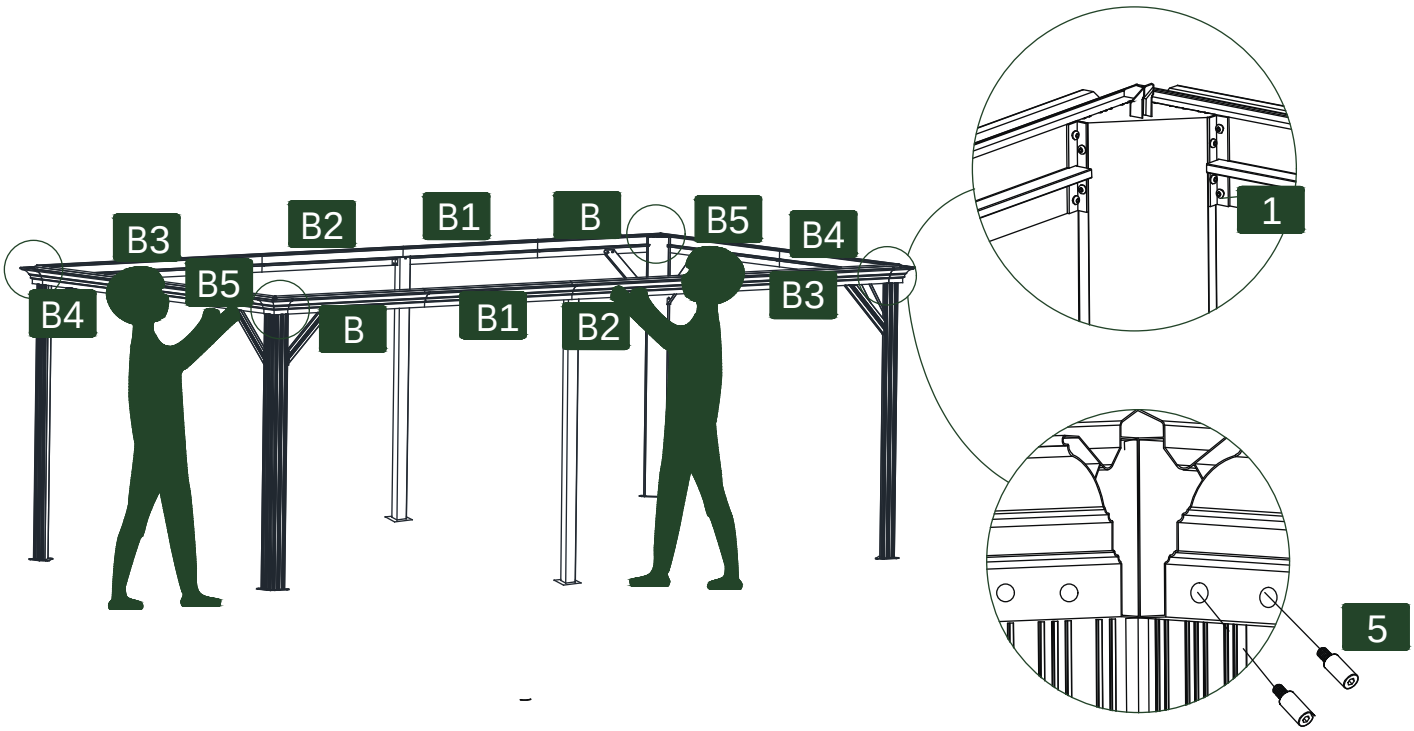


Check if the frames are aligned.
You can use a level gauge for this.

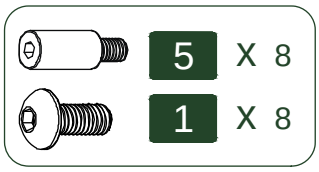


06 STEP

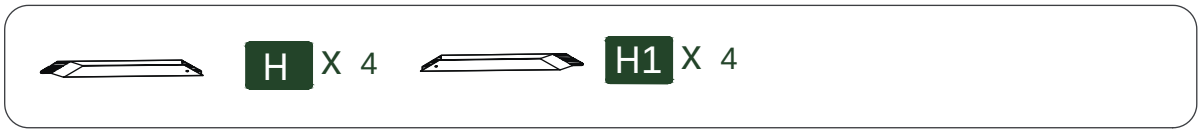

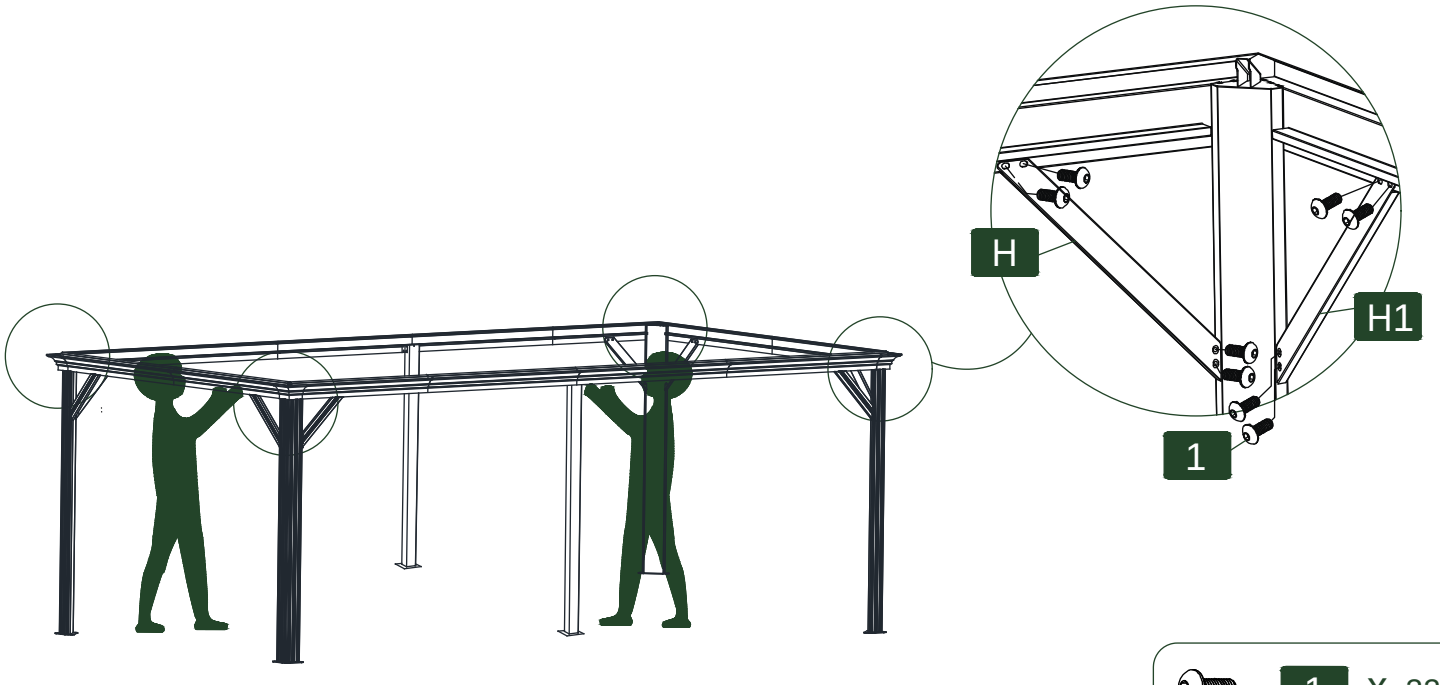




07
STEP



K X 4



K1 X 8


M3 X 8

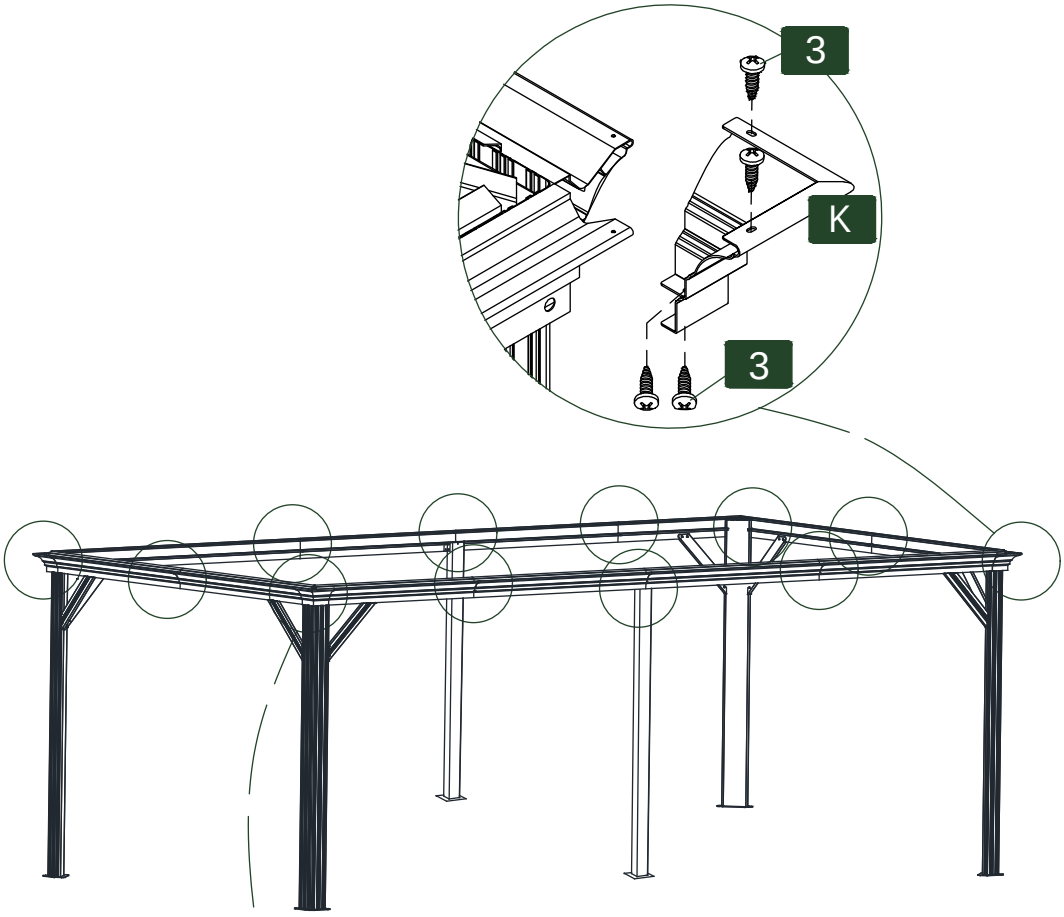

Please use the M3 waterproof sticker to cover the gaps in the sink.

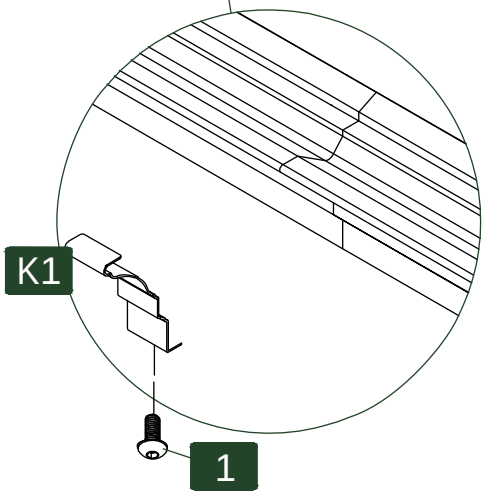

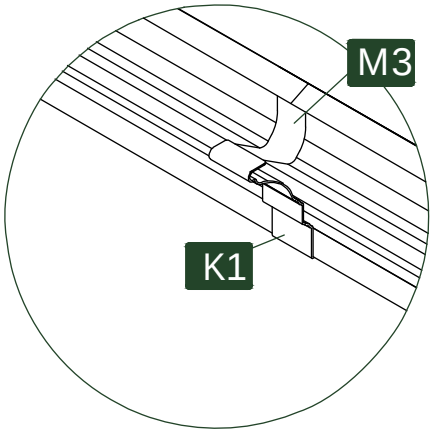




1 X 8
3 X 16


08
STEP
X2




U X 160

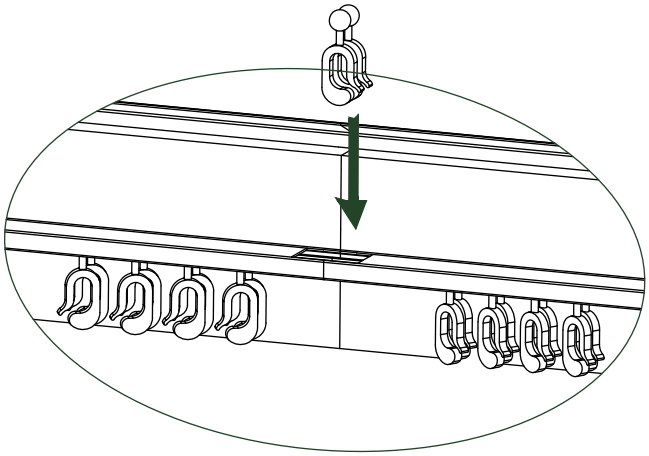


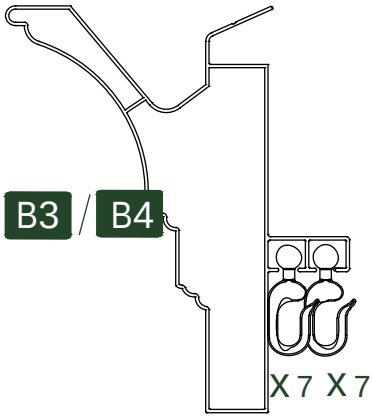


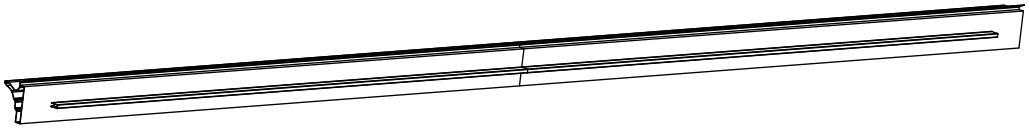

x2

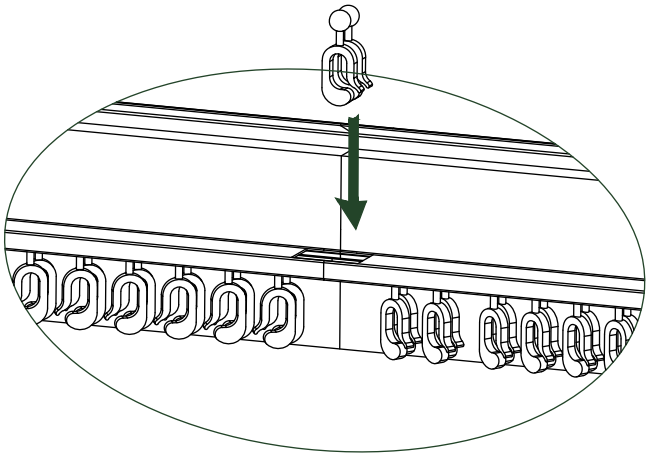


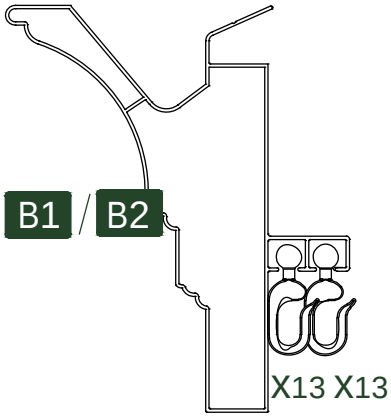

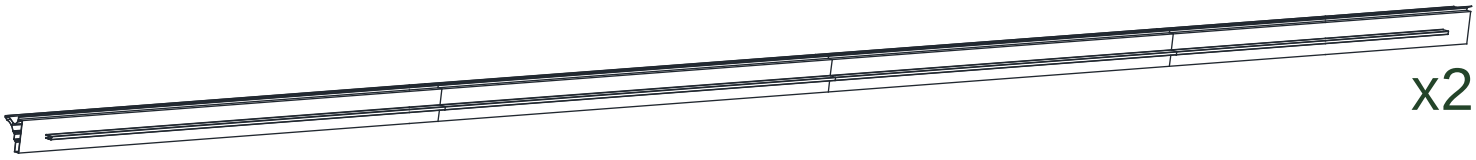

x2


Phase 2:Top Frame

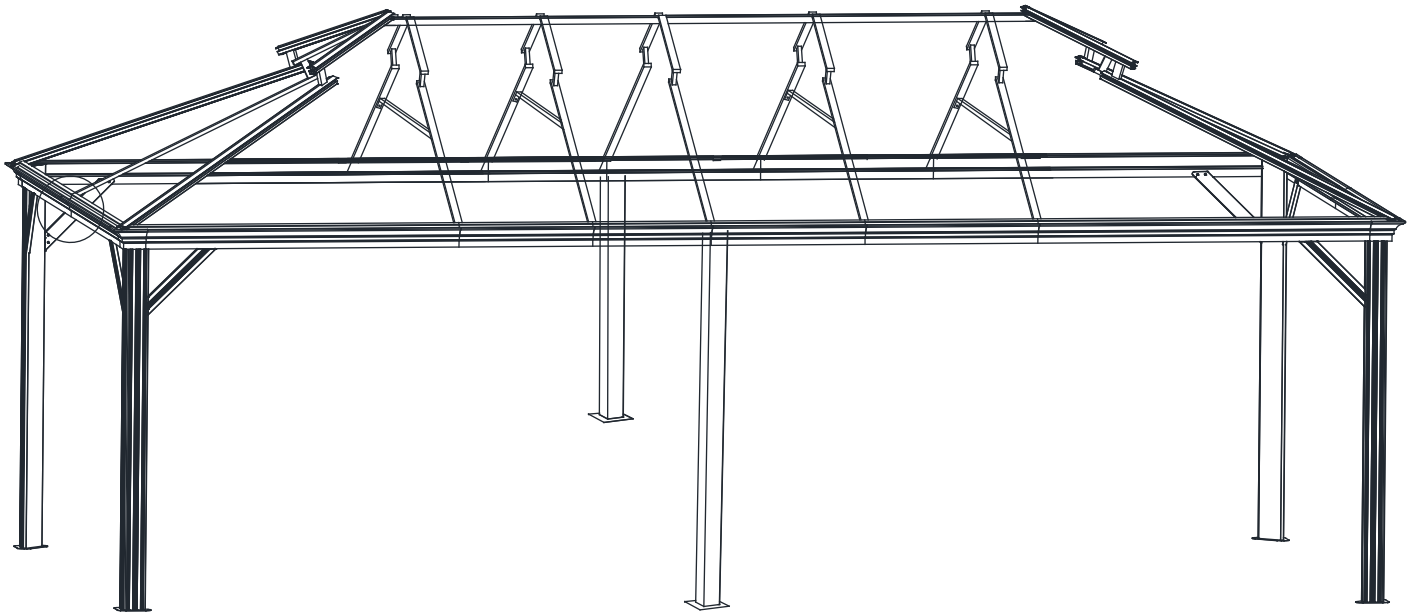


09
STEP
X4

Ea X 4 Eb X 4

17 X 4 18 X 4

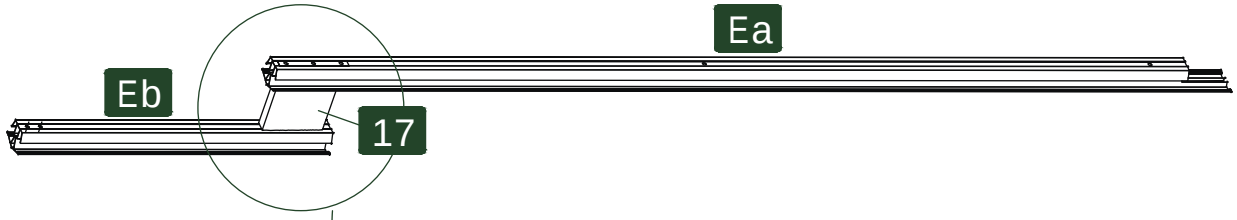

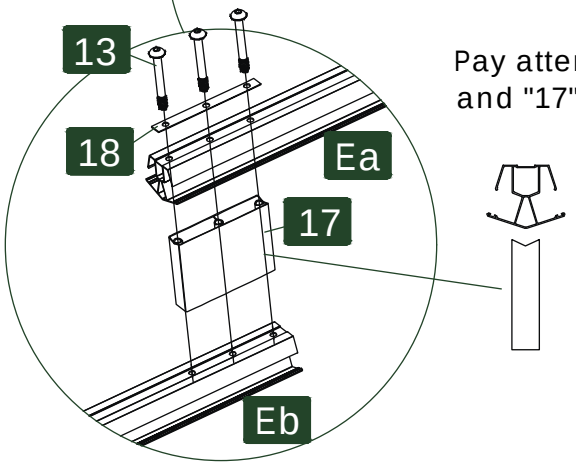


Pay attention to the shape of the parts "Ea" and "17",ensure that the shapes together.


13 X 12

10
STEP
X12

E1 X 4 E2 X 12 D X 12

E3 X 4 E4 X 4 18 X 12

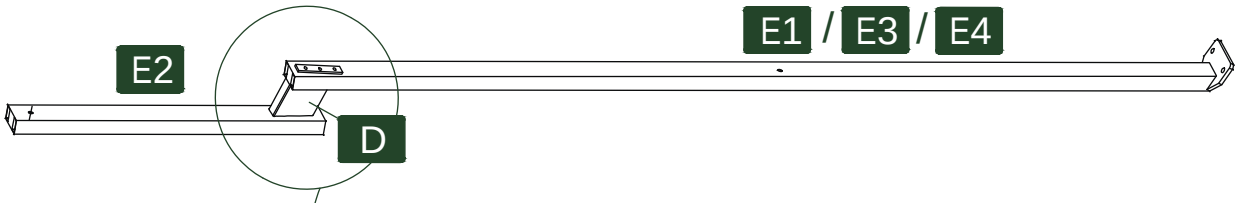

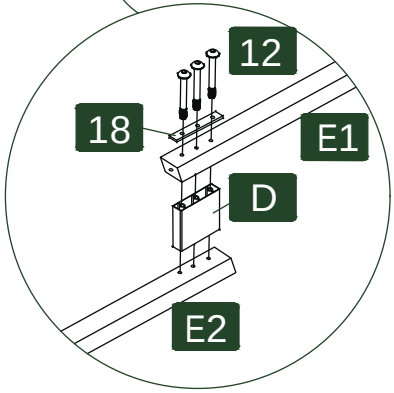

12 X 36


11 STEP




L X 1



L1 X 1

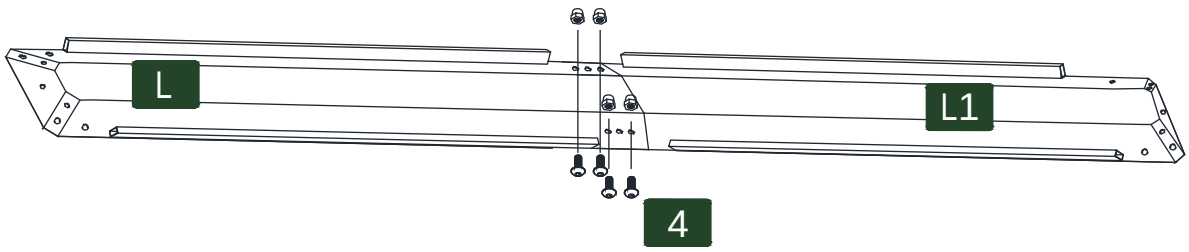



4 X 4


12 STEP




M X 1




M1 X 1

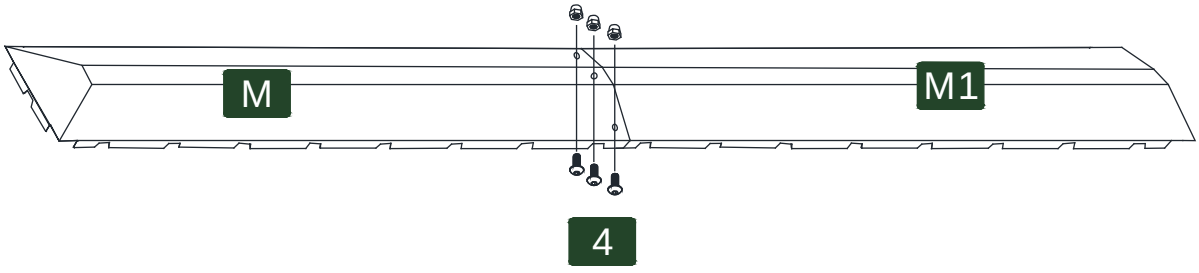




4 X 3

13 STEP

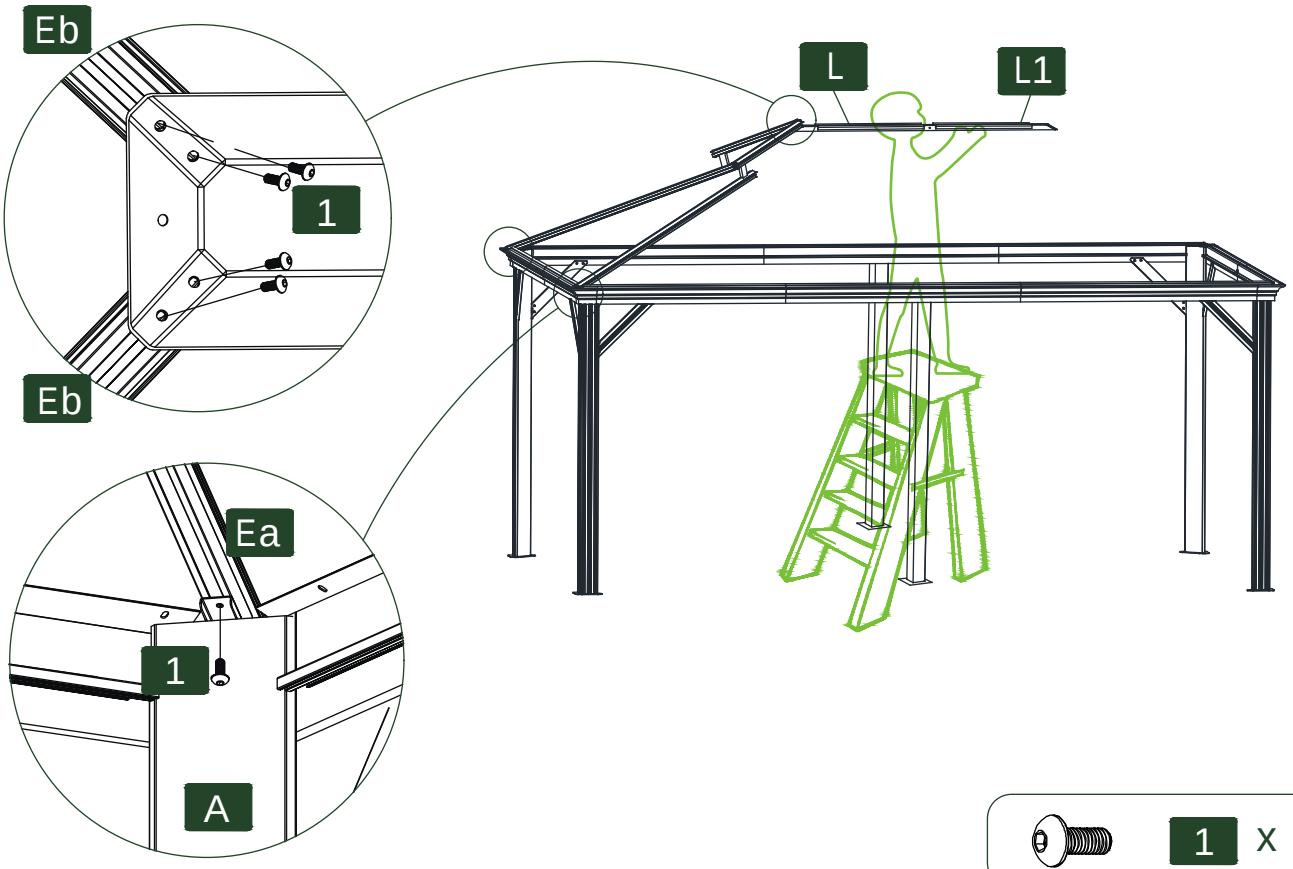


1 X 6

14 STEP

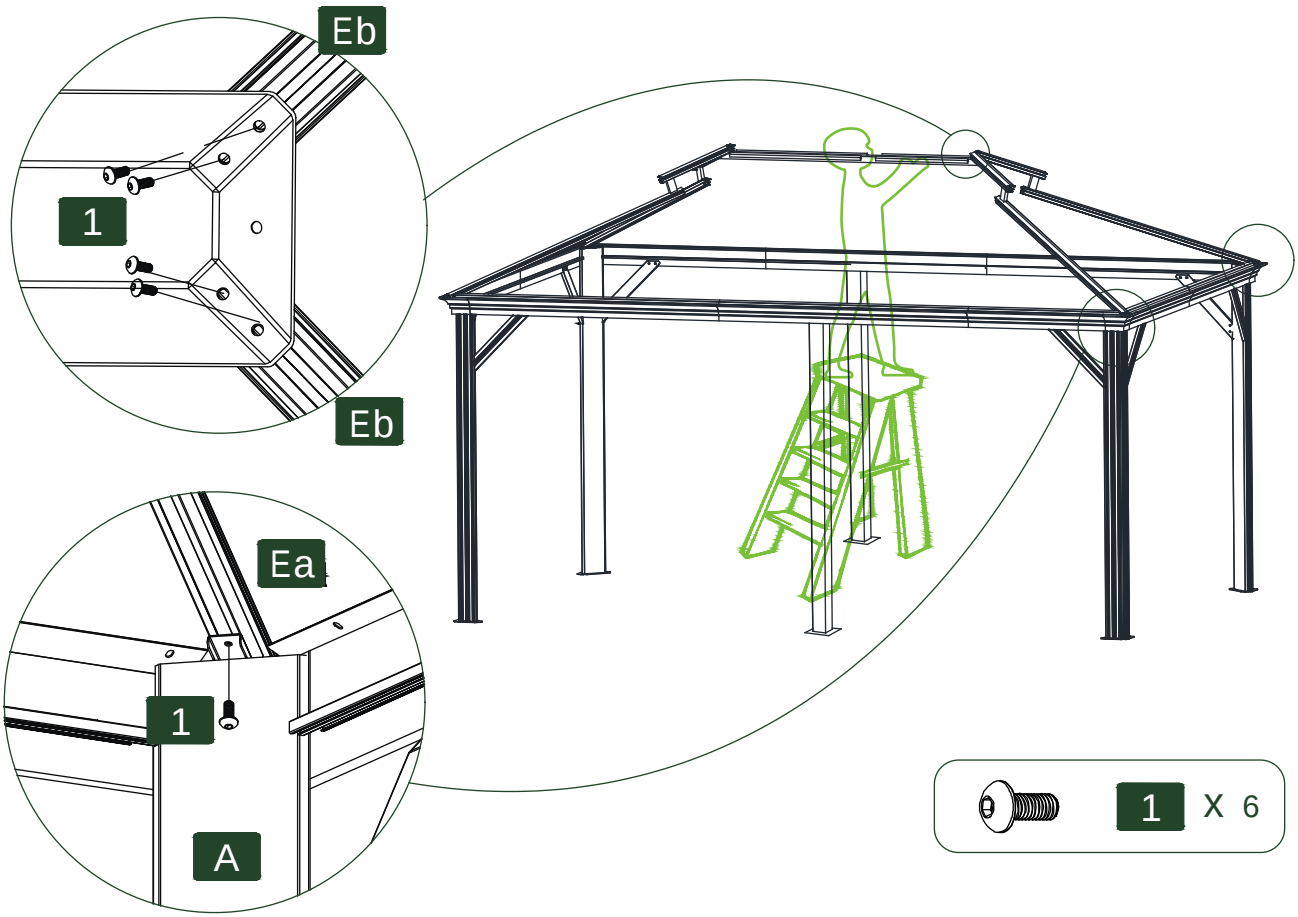

1 X 6


15
STEP

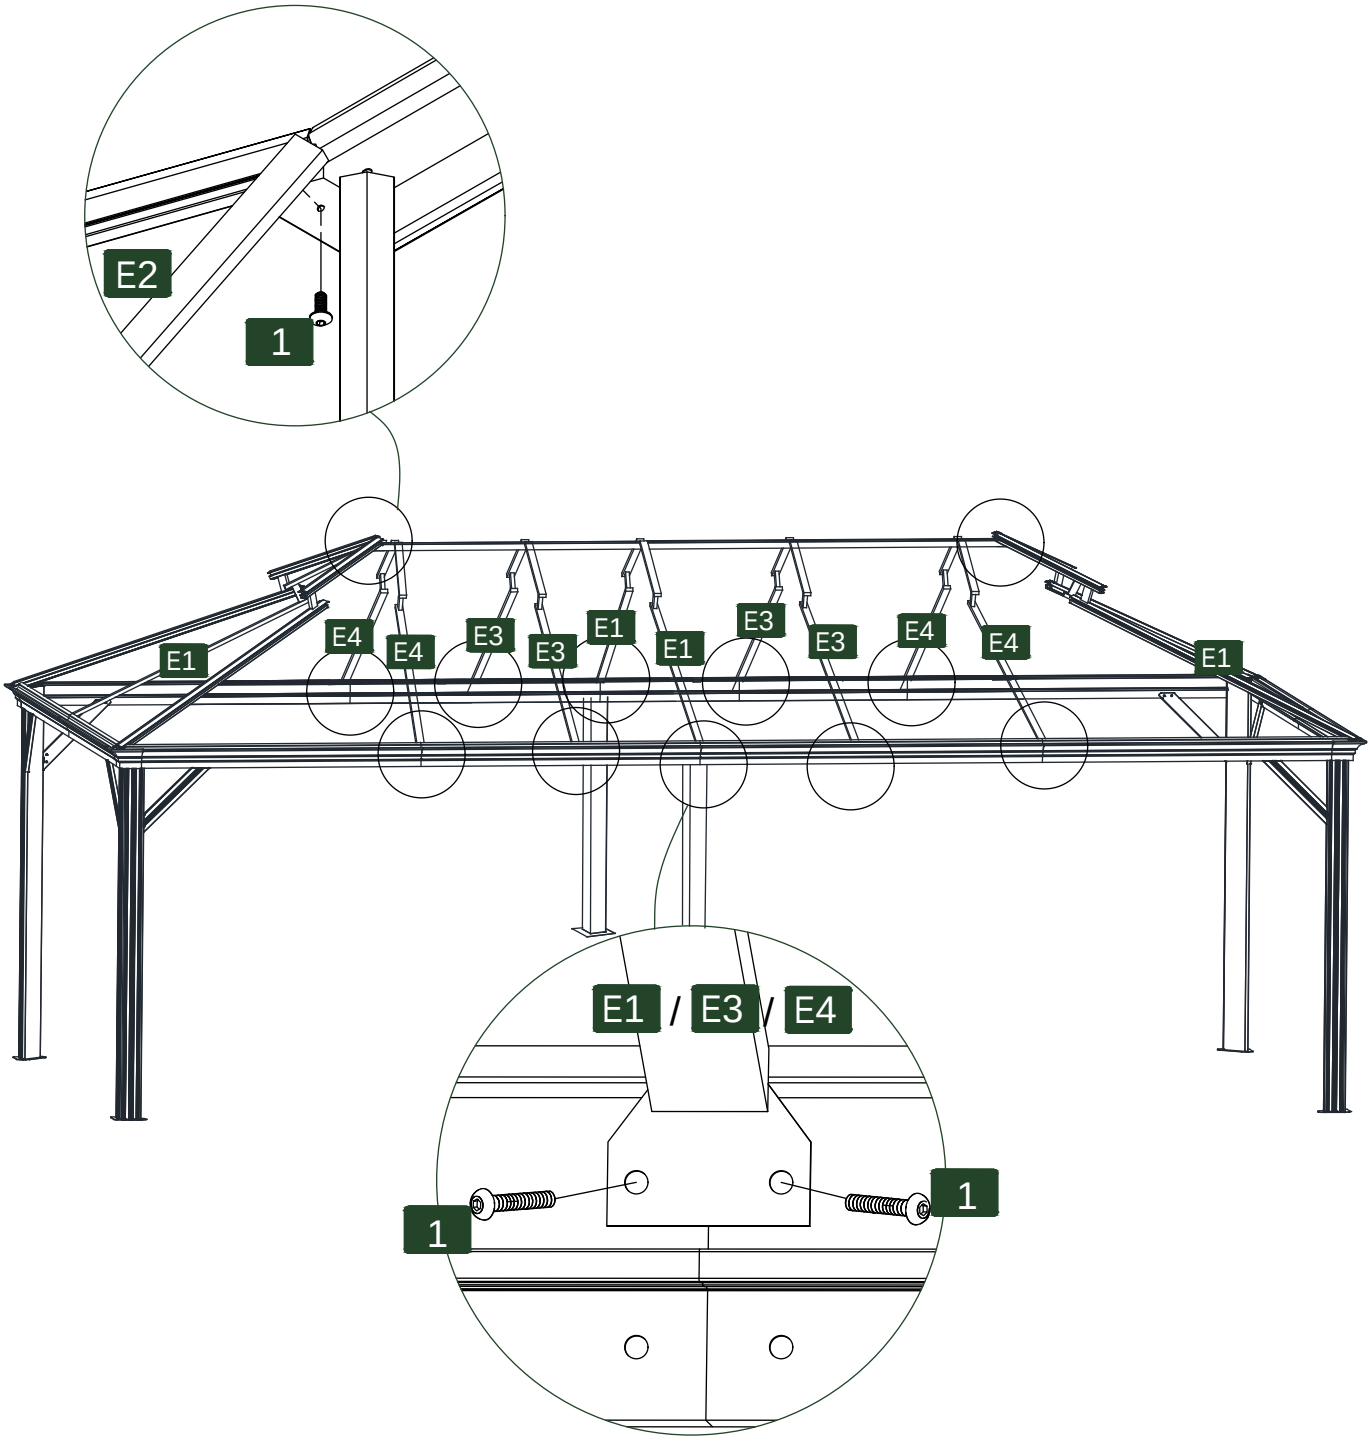



Check if the top frames are aligned.They should be symmetrical on both sides.


1 X 36


16
STEP

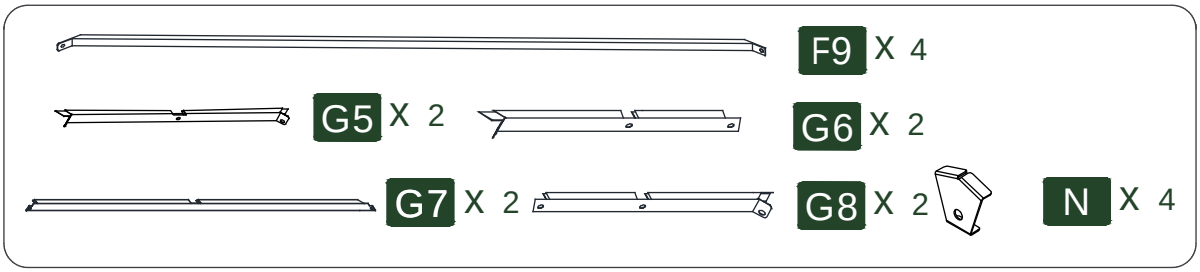
F9 X 4
G5 X 2
G6 X 2
G7 X 2
G8 X 2
N X 4

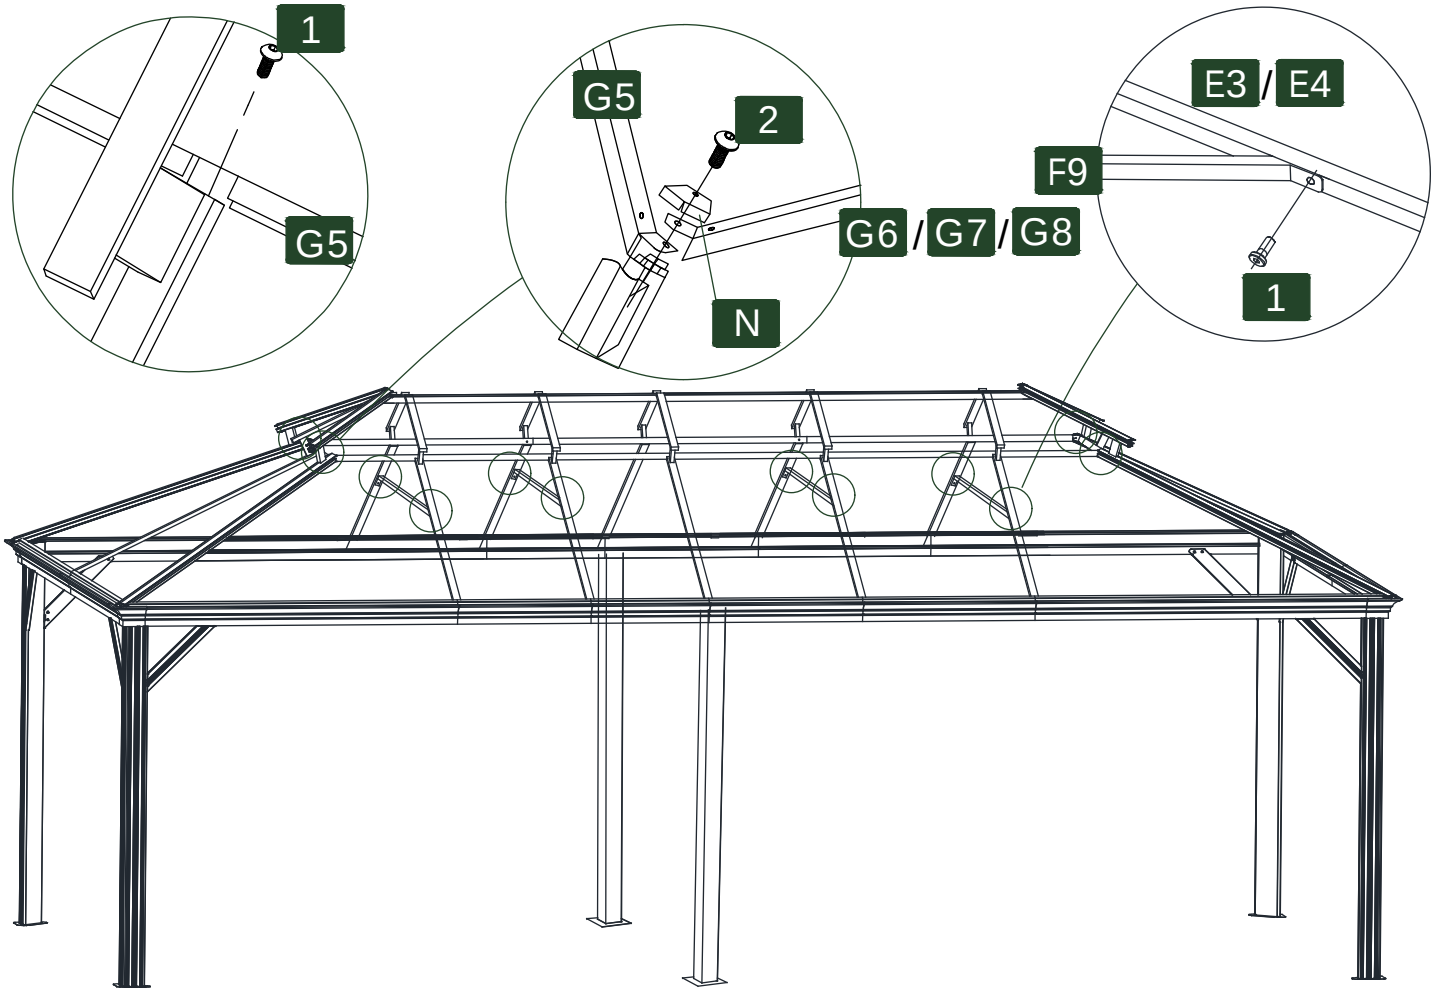

1
G5
G5
2
N
G6 / G7 / G8
E3 / E4
F9
1

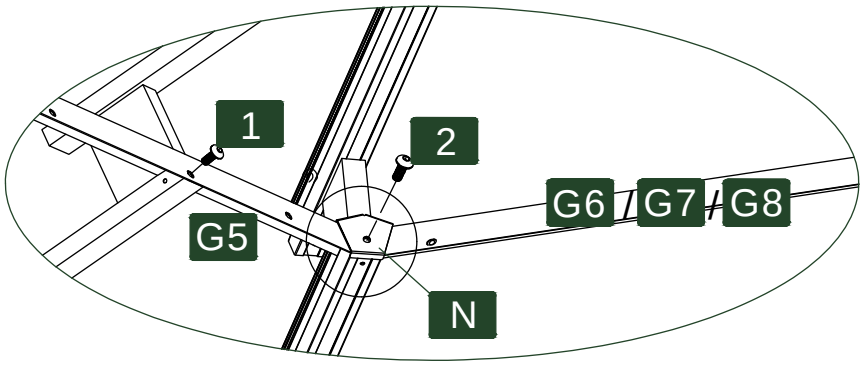
1
2
G5
G6 / G7 / G8
N

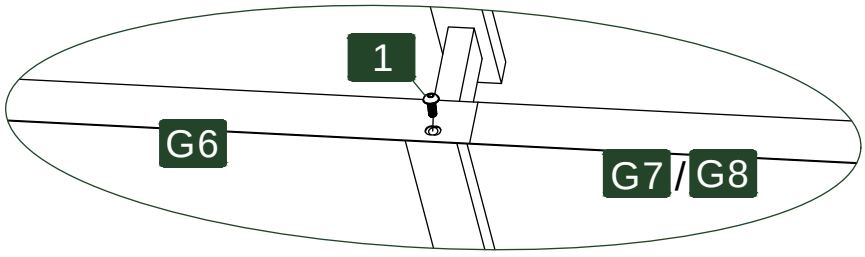

1
G6
G7 / G8

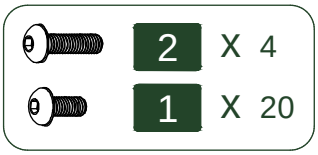
2 X 4
1 X 20

Phase 3:Top Material

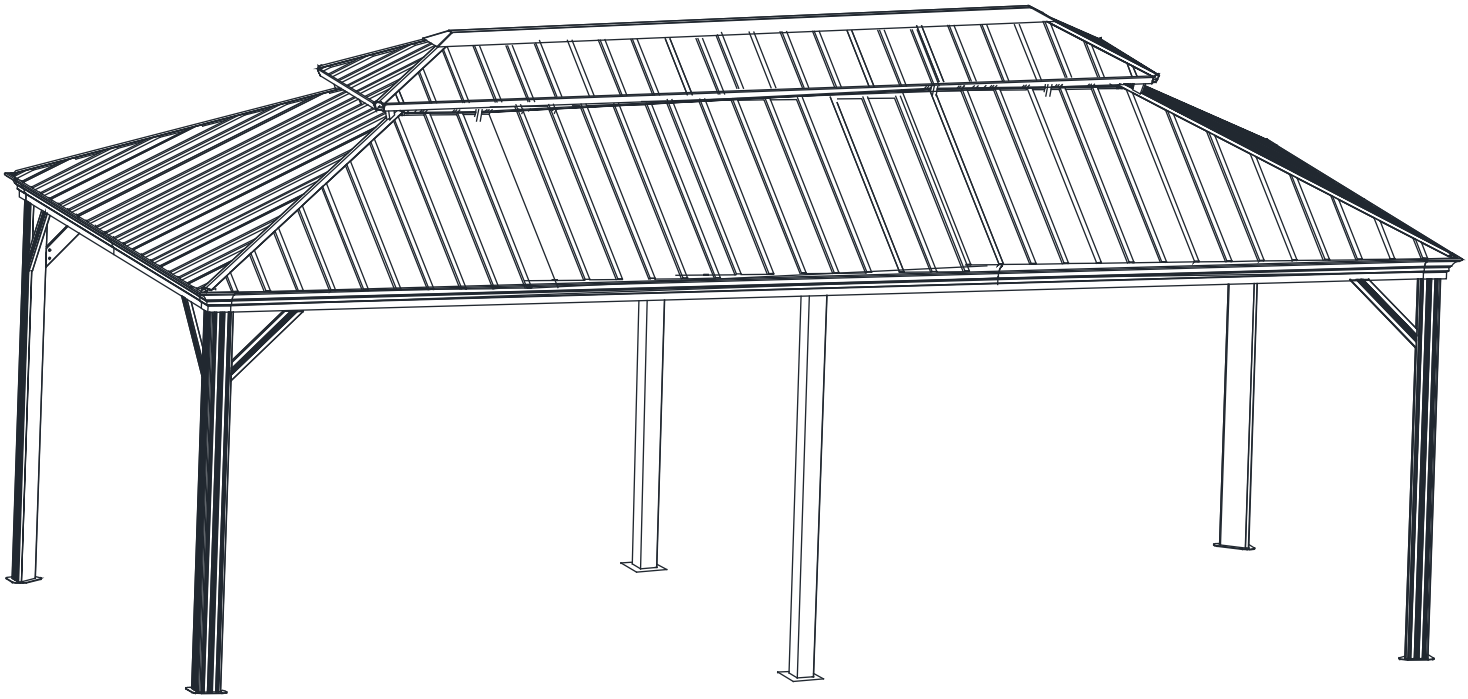

Please remove the protective film on the top material before installation.

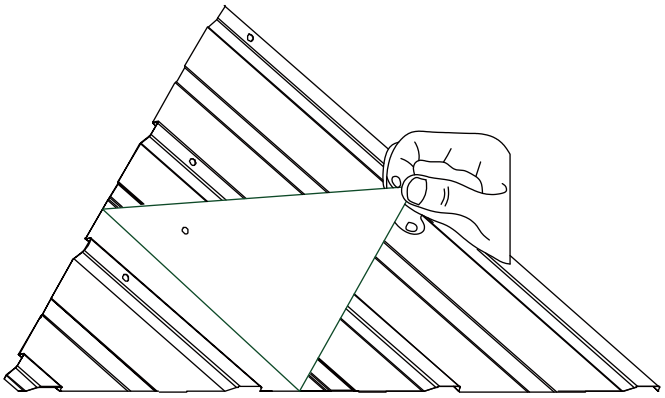



If you find any variant of the top material, you can reset it using your hands or a pair of pliers.

Please wear gloves when working.




17
STEP
X2

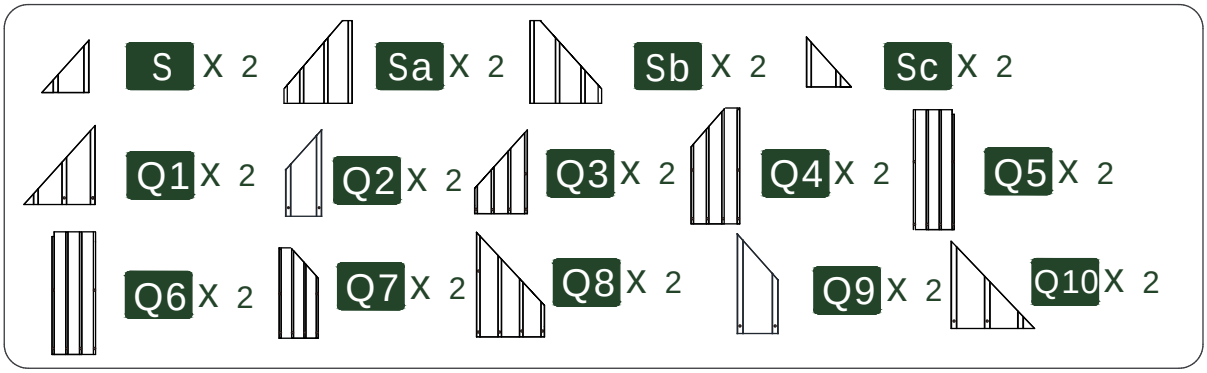
S X 2
Sa X 2
Sb X 2
Sc X 2
Q1 X 2
Q2 X 2
Q3 X 2
Q4 X 2
Q5 X 2
Q6 X 2
Q7 X 2
Q8 X 2
Q9 X 2
Q10 X 2

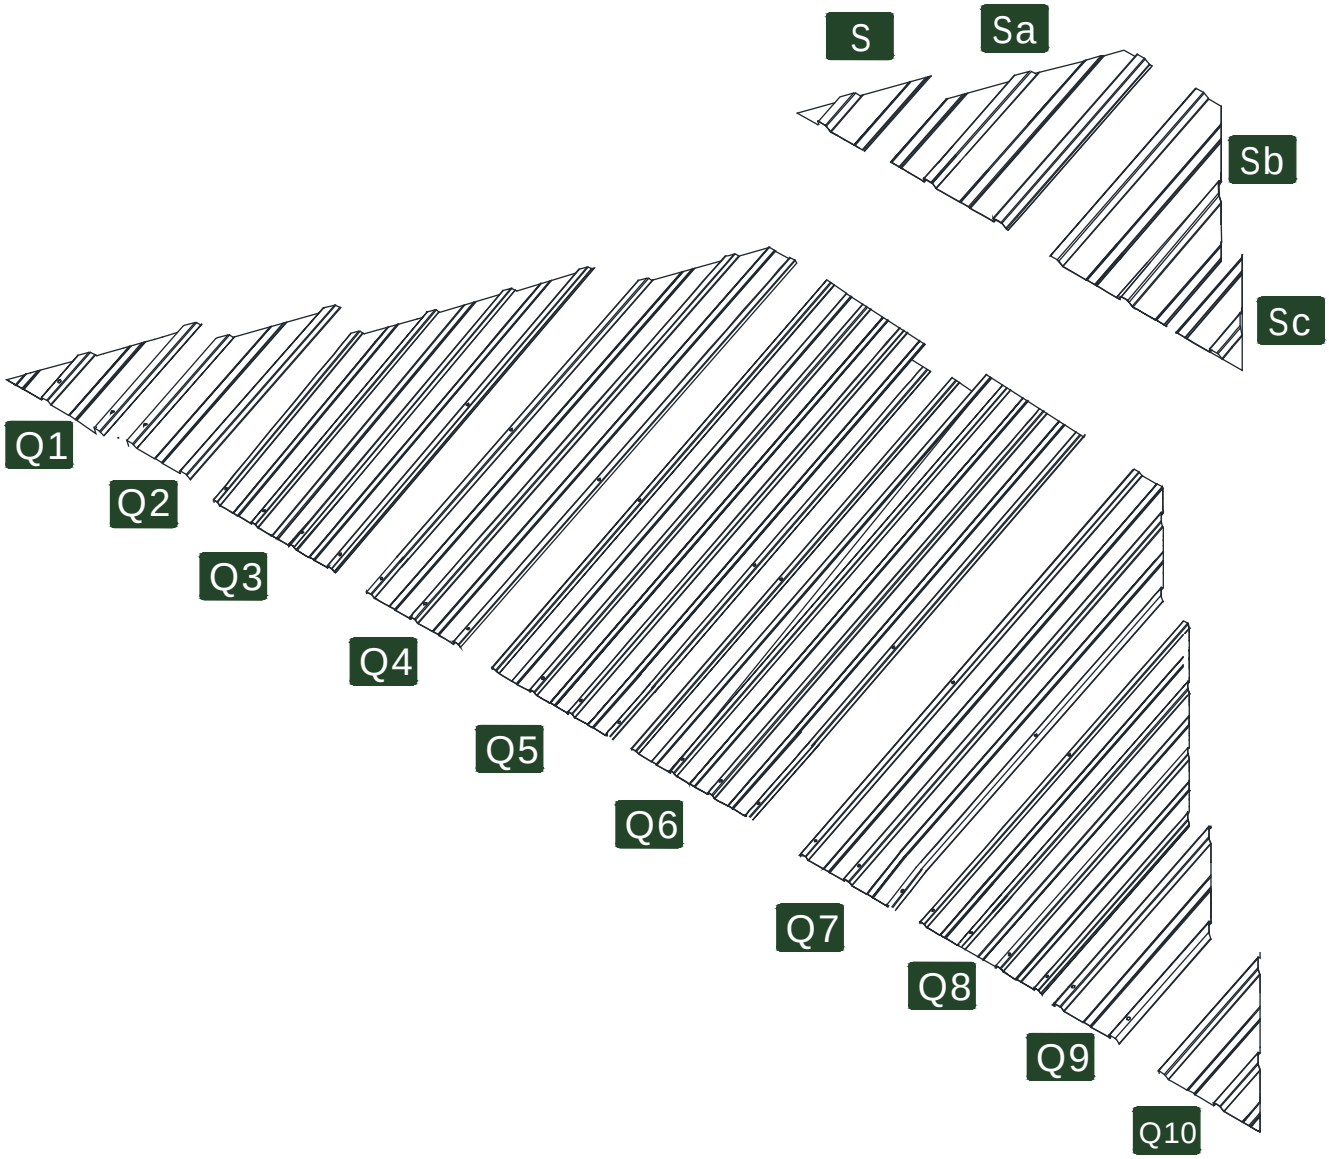
S
Sa
Sb
Sc
Q1
Q2
Q3
Q4
Q5
Q6
Q7
Q8
Q9
Q10


18
STEP
x2

S X 2
Sa X 2
S3 X 12
Sb X 2
Sc X 2
Q1 X 2
Q2 X 2
Q3 X 2
Q4 X 2
Q5 X 6
Q6 X 6
Q7 X 2
Q8 X 2
Q9 X 2
Q10 X 2
R1 X 4

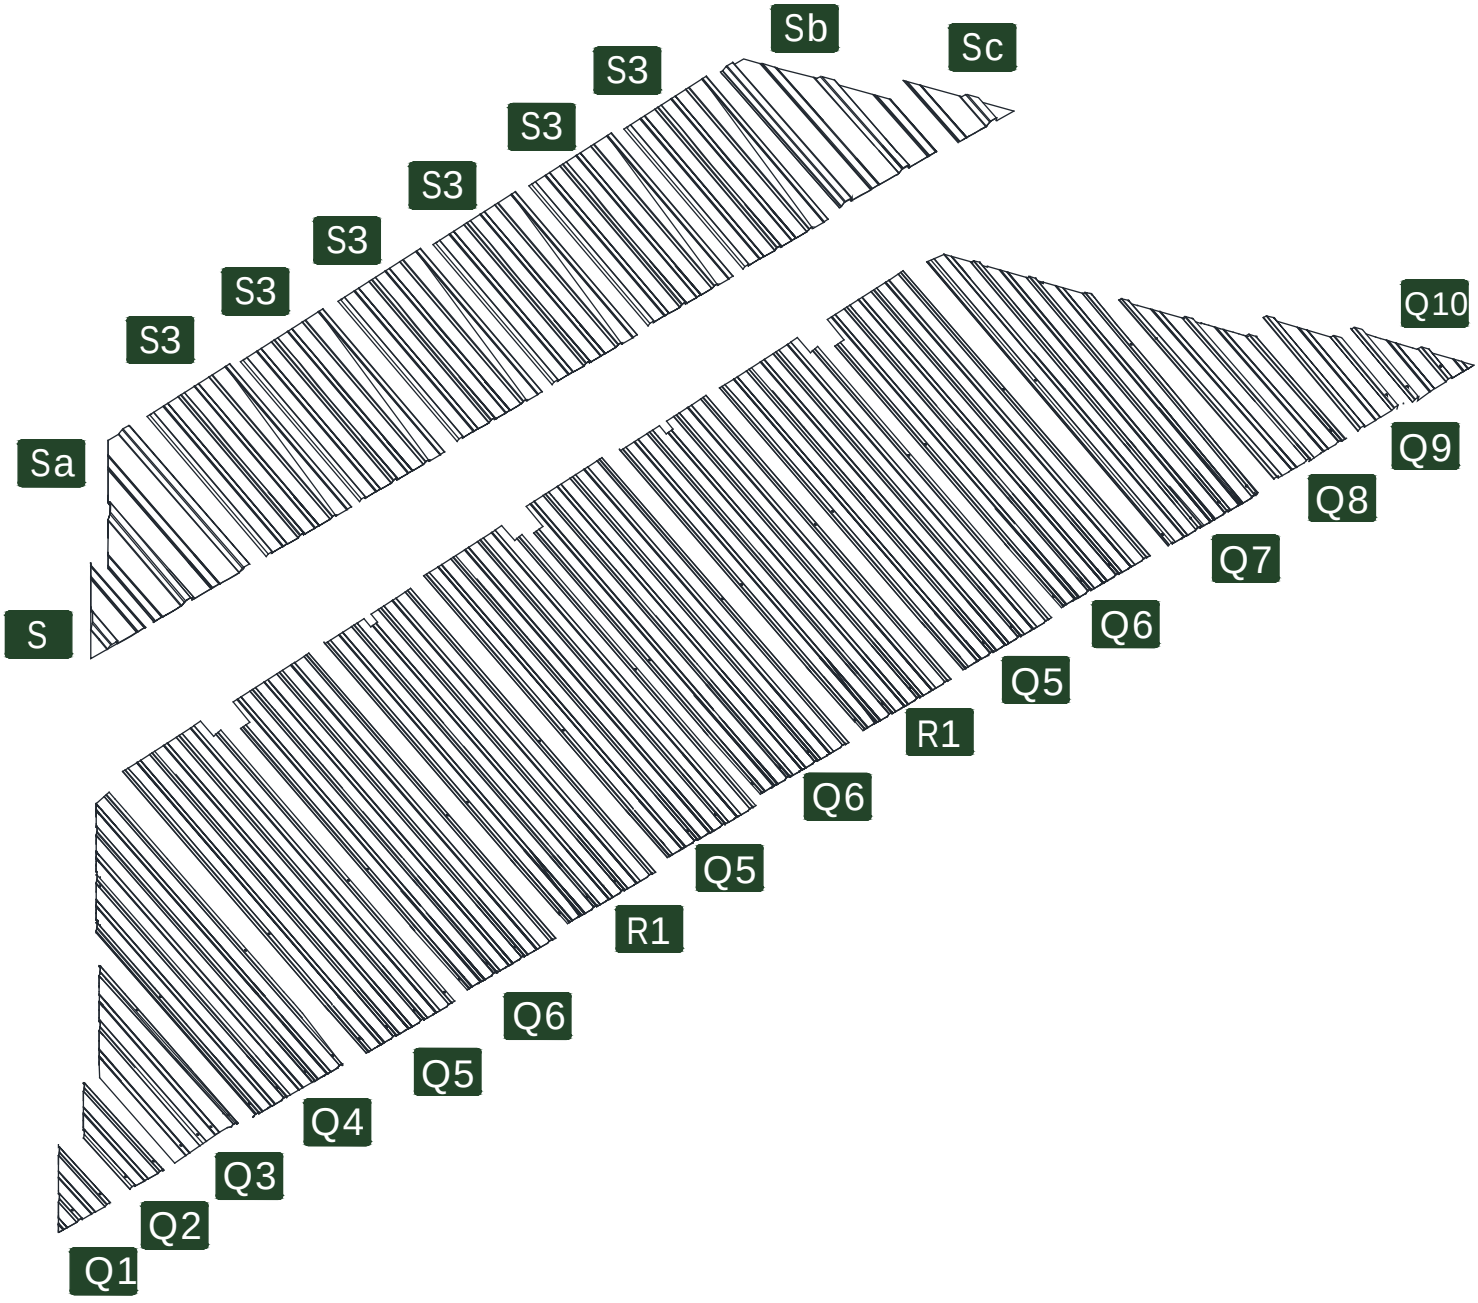


19
STEP




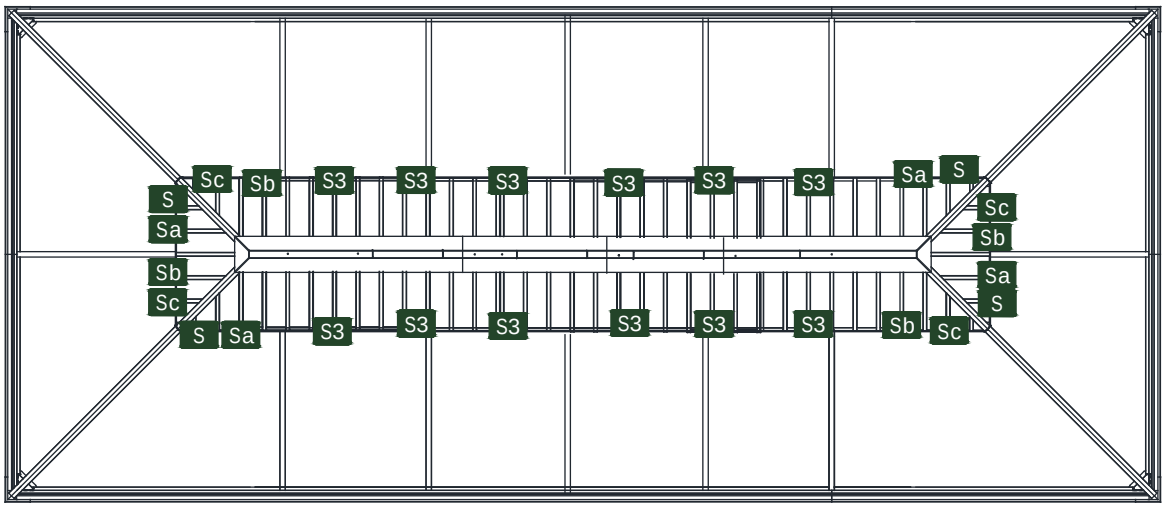


Make sure the corrugated-shaped fit of each top material.

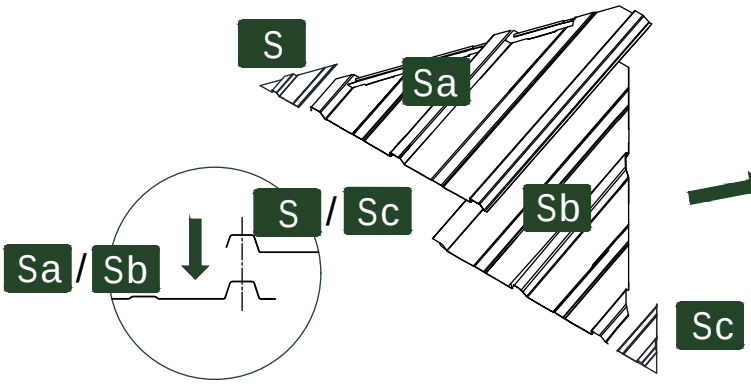


Make sure top material is inserted into the sliding track groove.

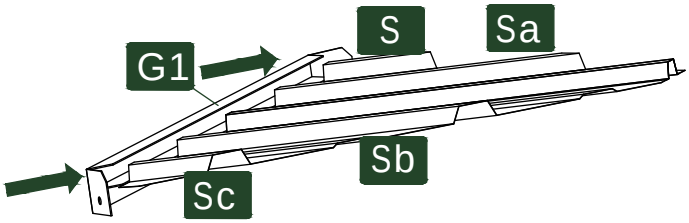



Make sure the top material is inserted into the top frame groove.

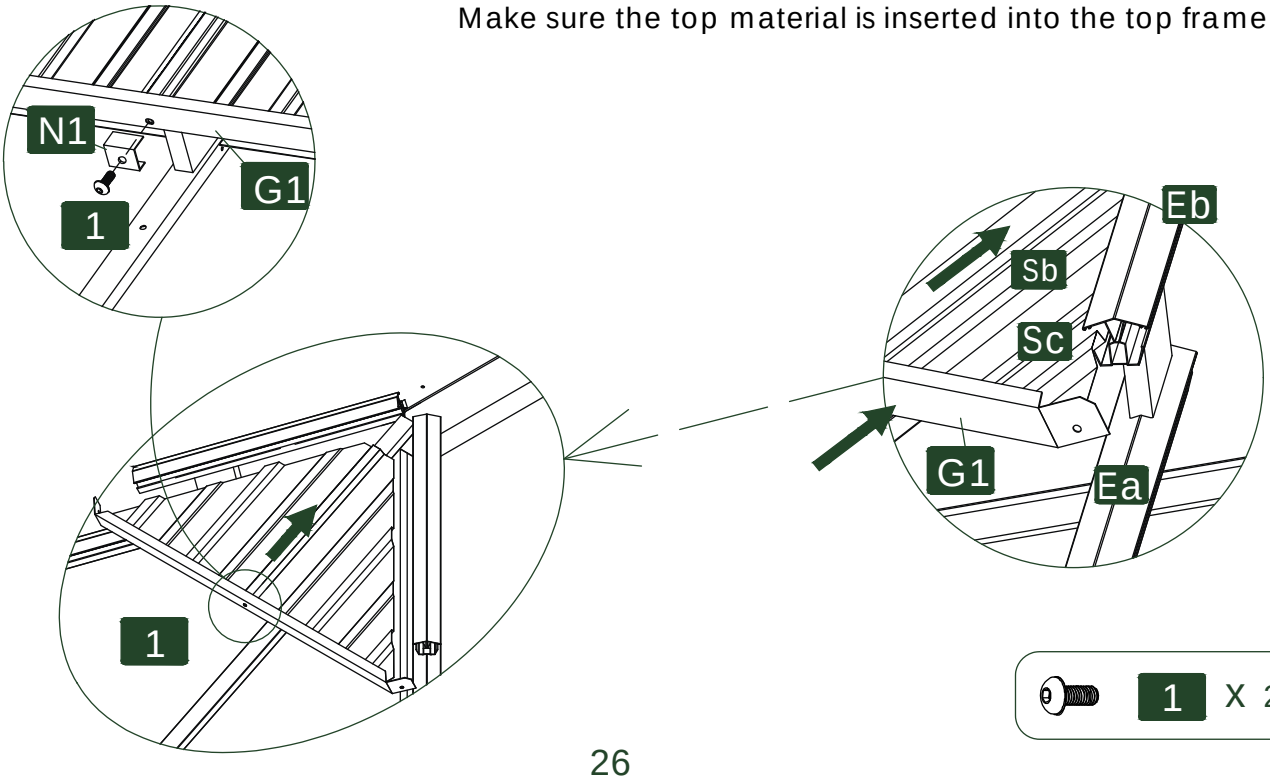

20
STEP

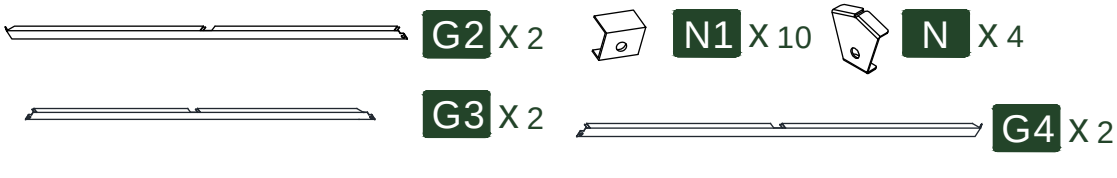

G2 X 2
N1 X 10
N X 4
G3 X 2
G4 X 2

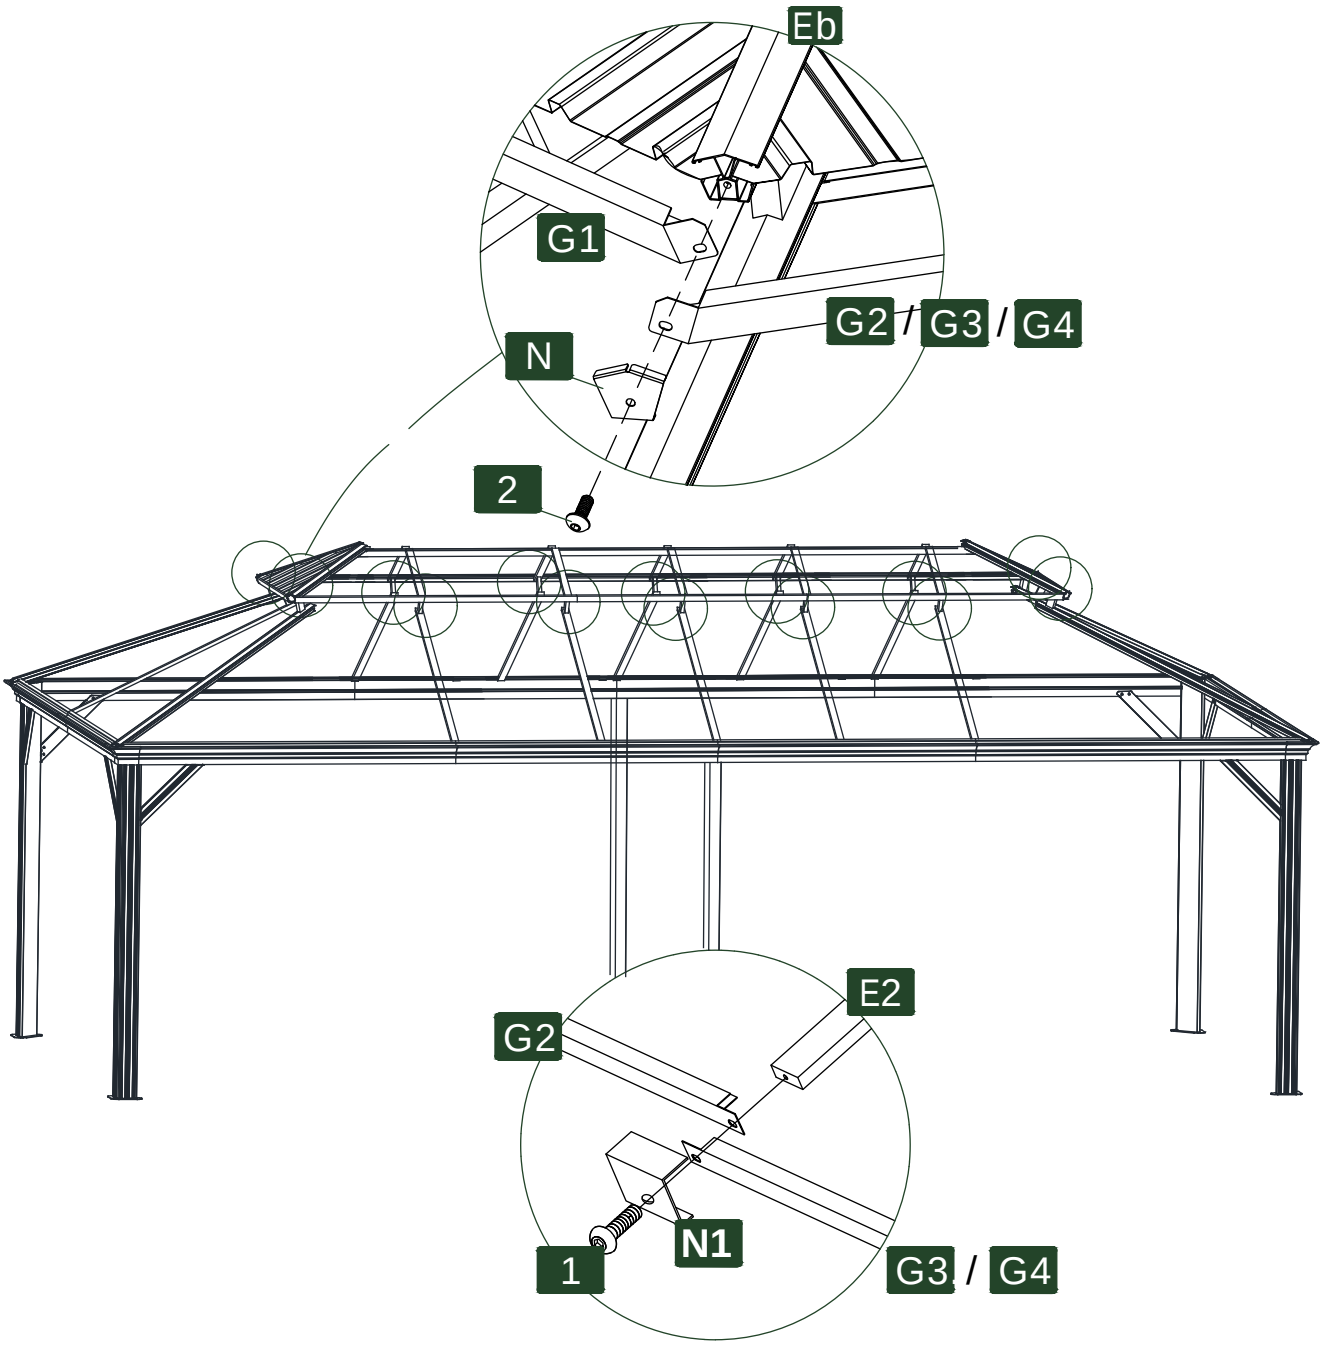

Eb
G1
G2 / G3 / G4
N
2
E2
G2
N1
1
G3 / G4

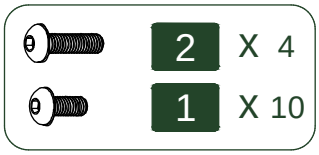
2 X 4
1 X 10


21 STEP


①

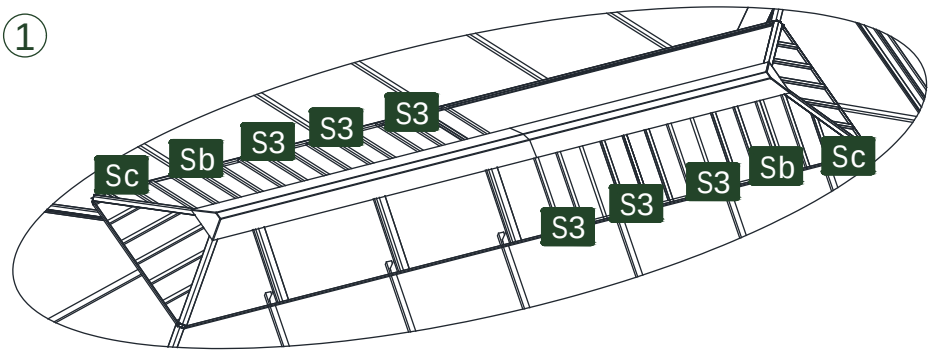

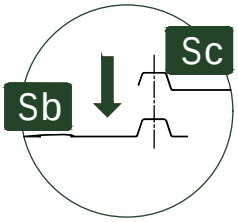



②

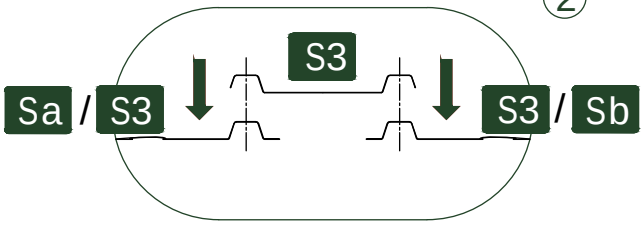

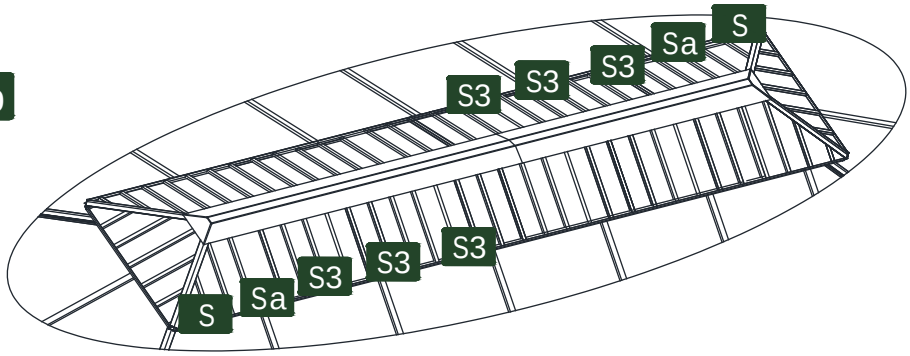



22 STEP



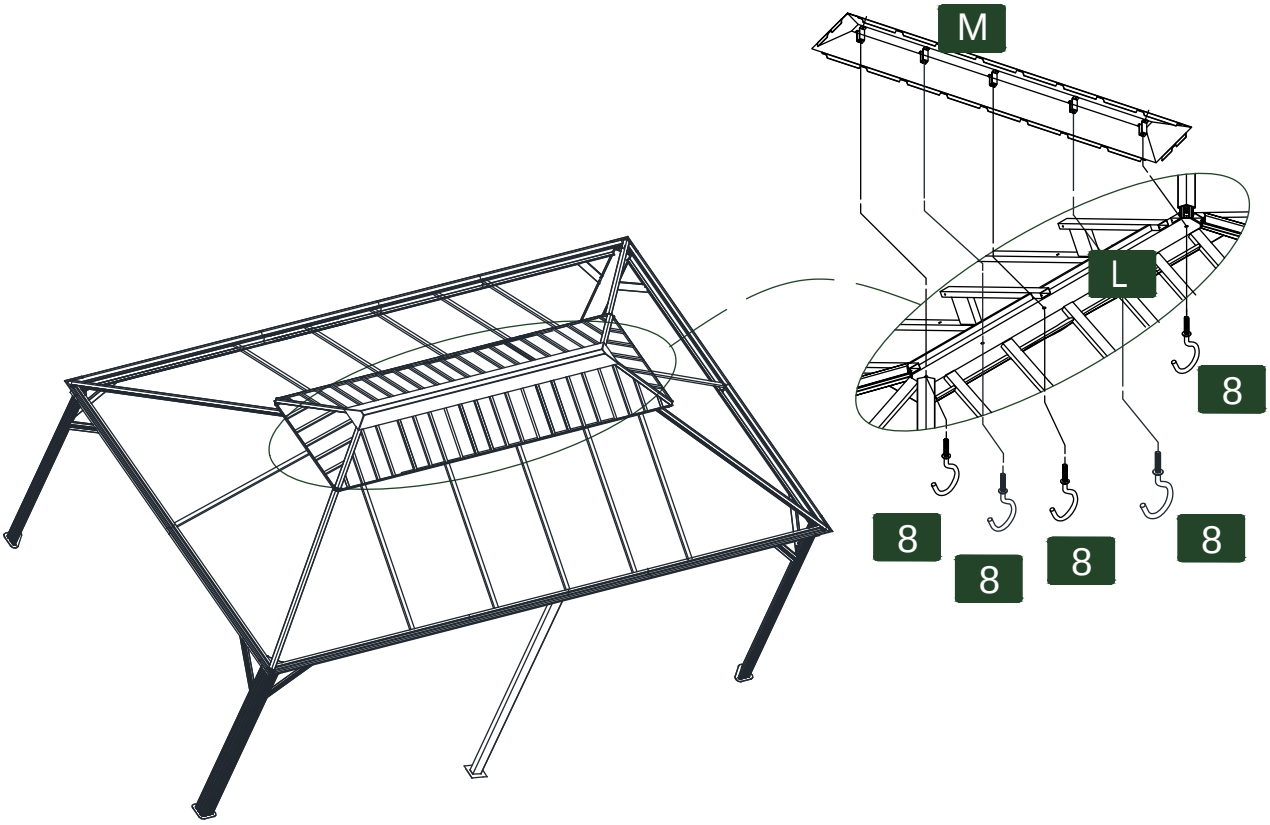


23 STEP

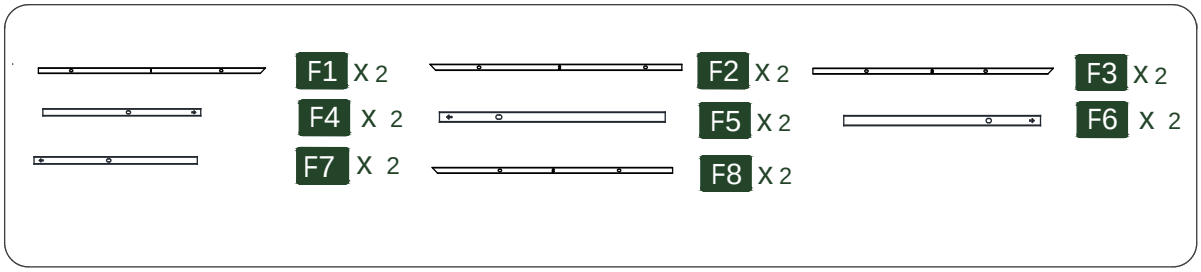

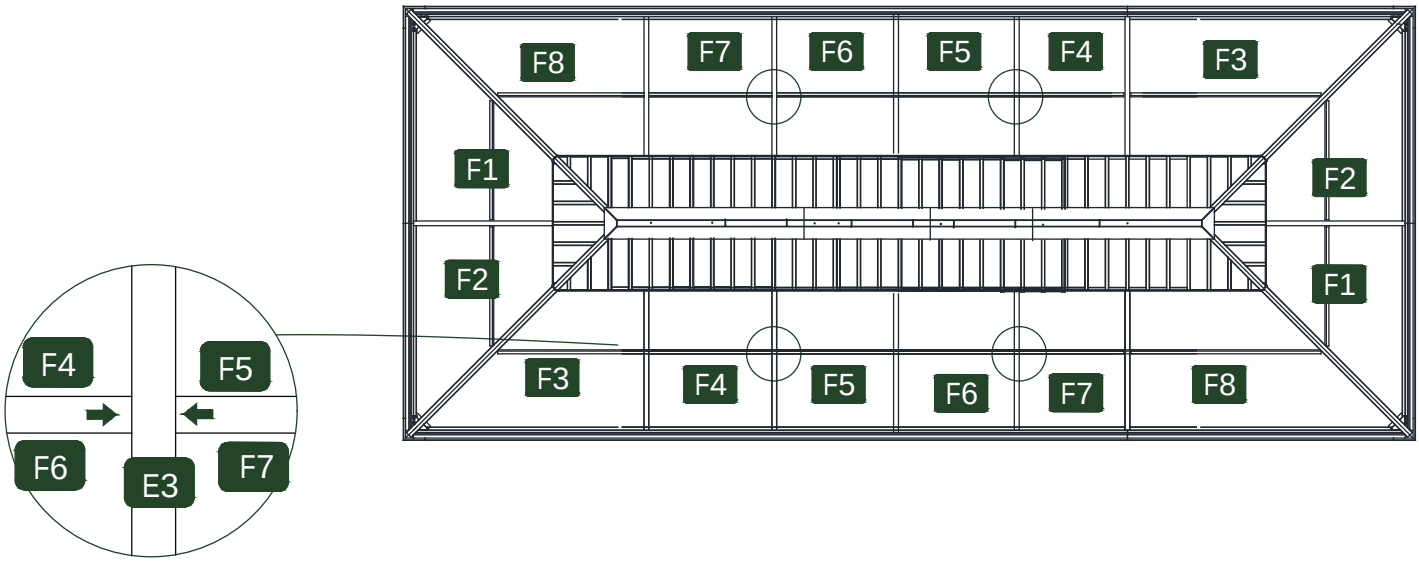

24 STEP




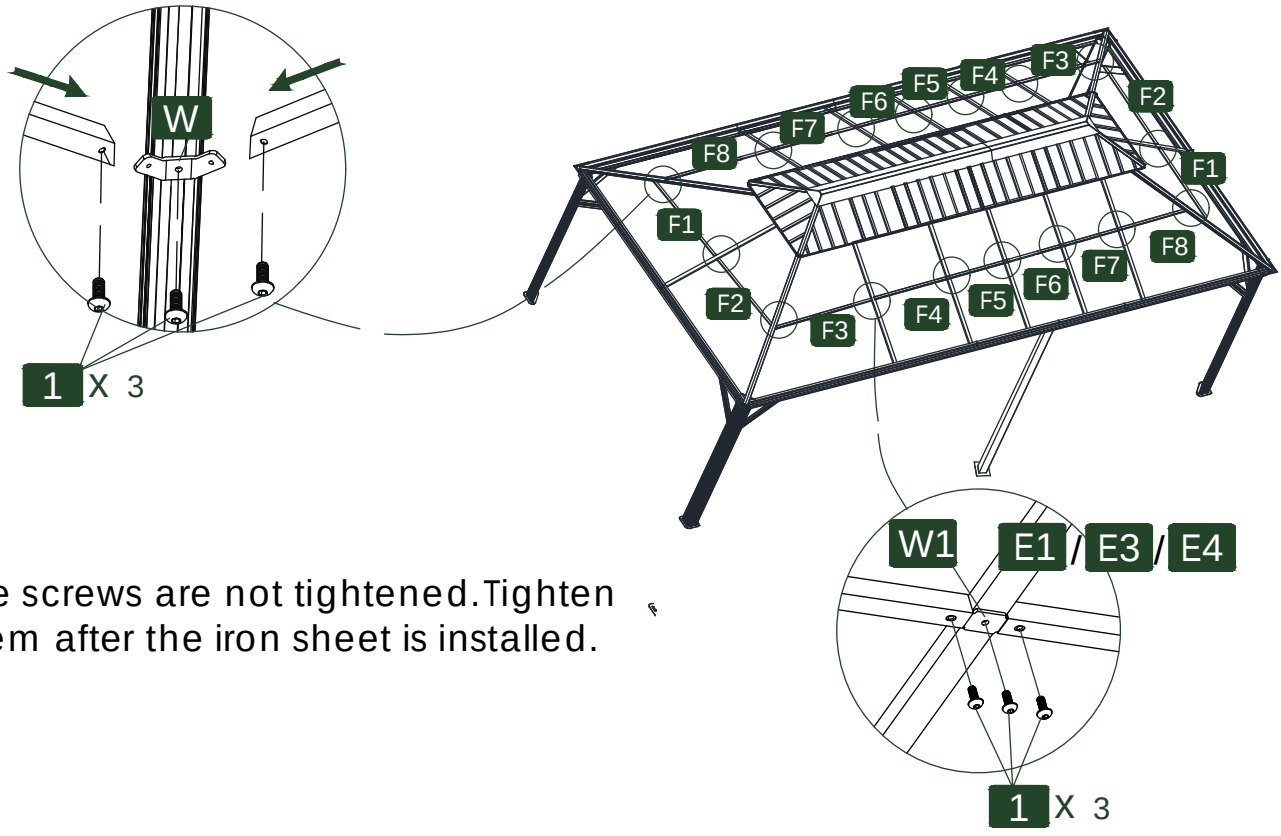


The screws are not tightened.Tighten them after the iron sheet is installed.




25
STEP
X2



Y X 56

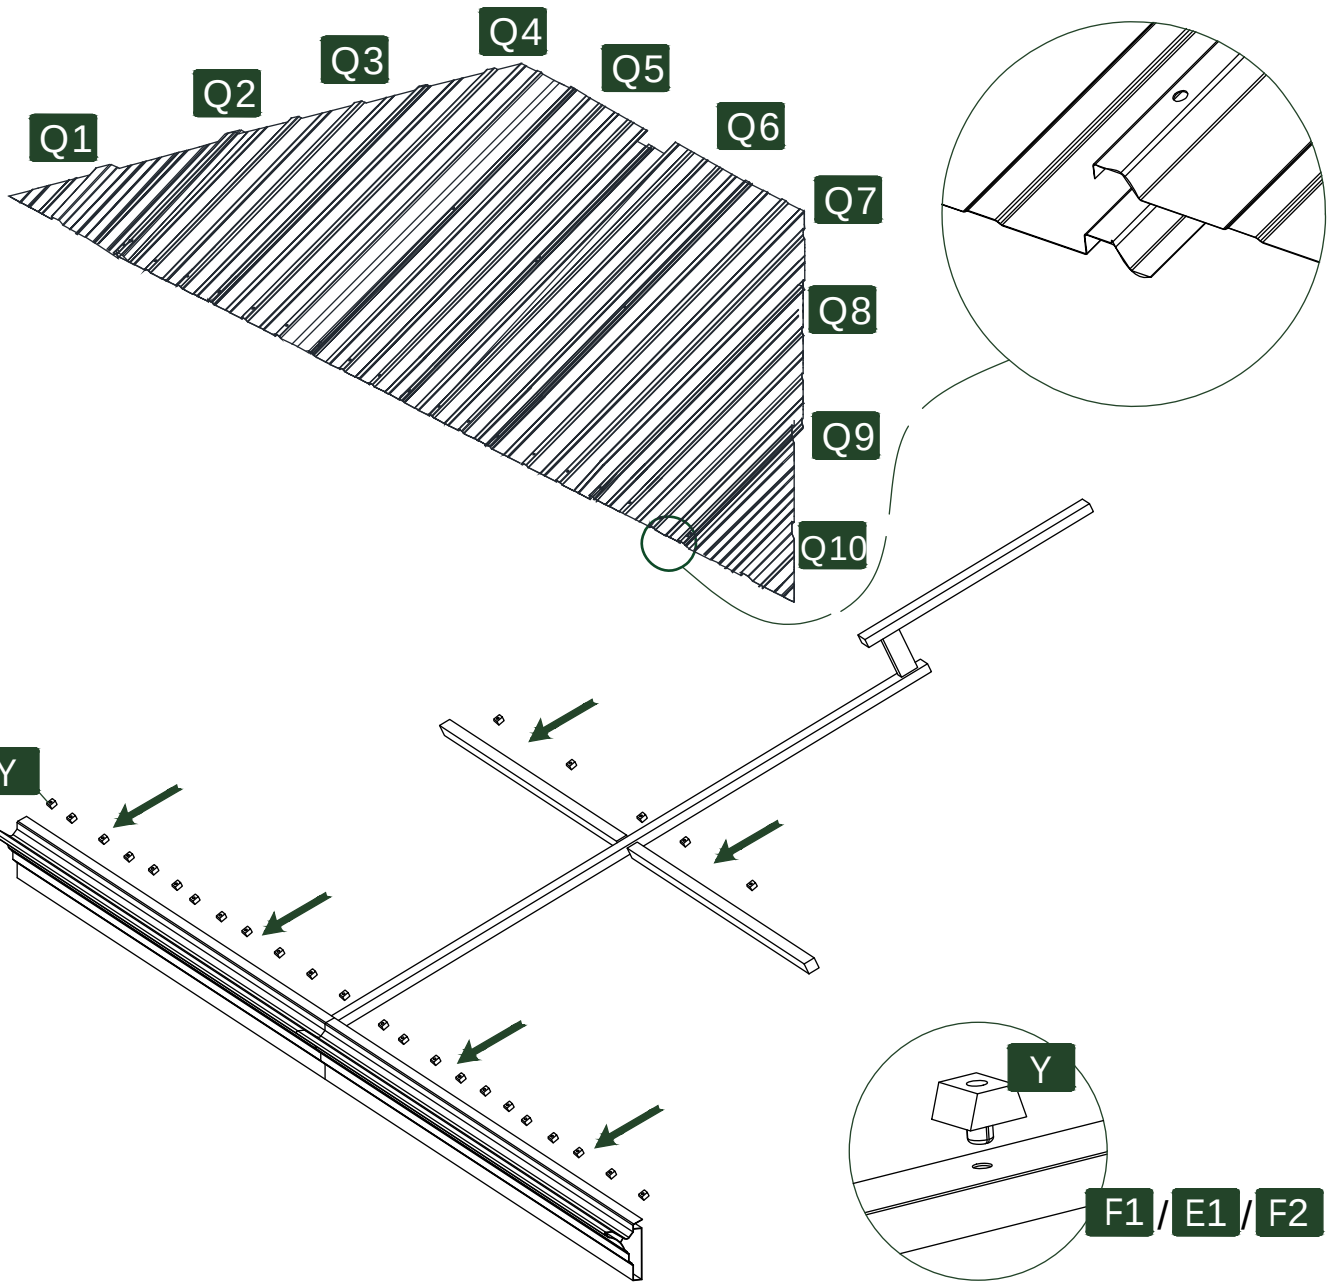


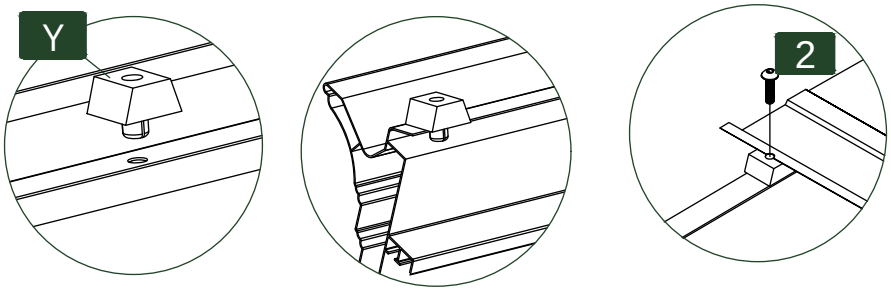





2 X 56

26
STEP
X2





Y X 104

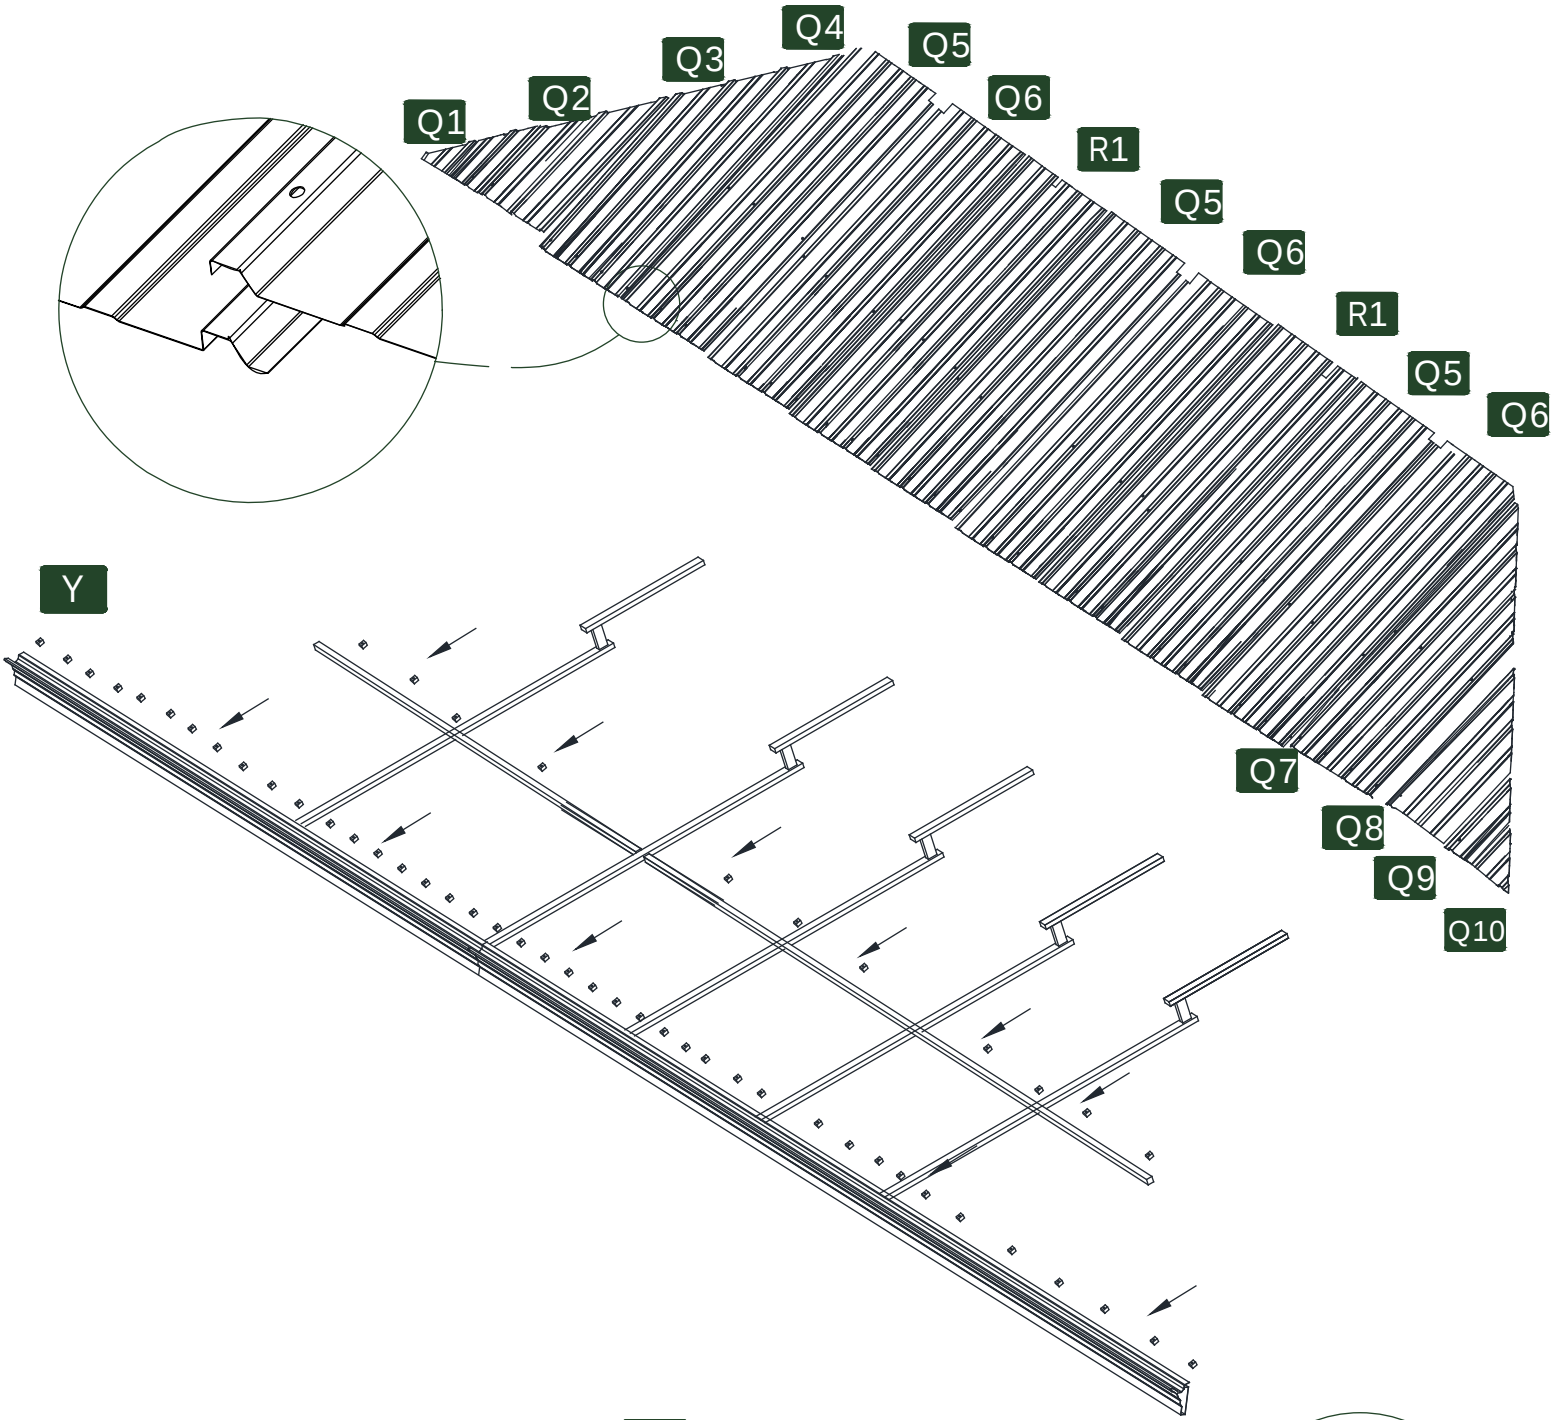


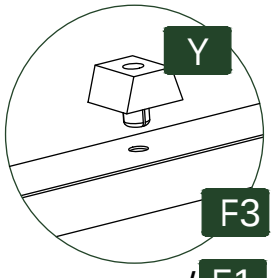

F3 / E4 / F4 / F5
/ E1 / F6 / F7 / F8

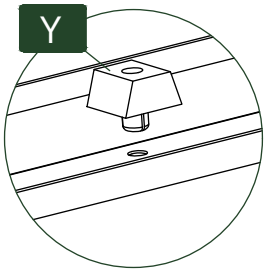

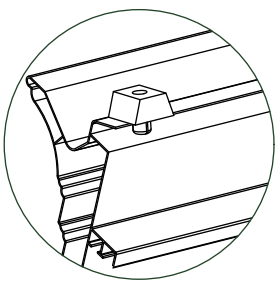

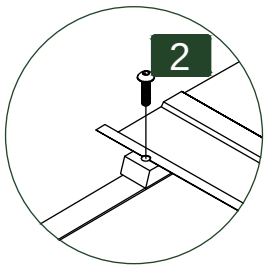




2 X 104

27
STEP


①



Q1
Q2
Q3
Q4
Q5
Q6
Q7
Q8
Q9
Q10

②

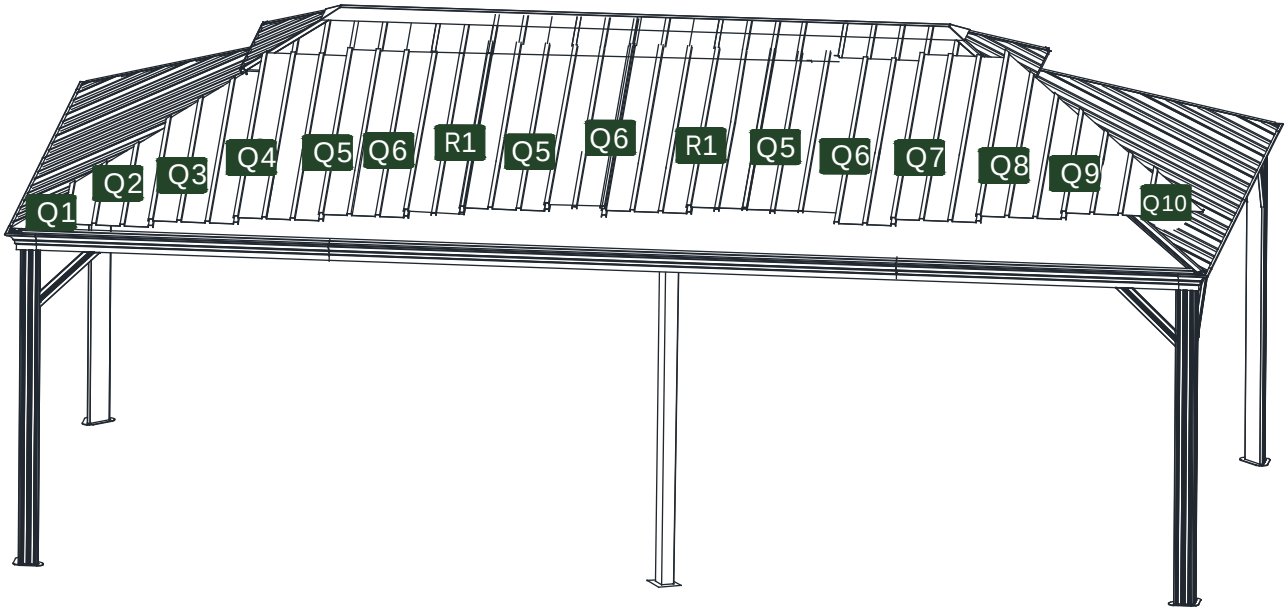

Q1
Q2
Q3
Q4
Q5
Q6
R1
Q5
Q6
R1
Q5
Q6
Q7
Q8
Q9
Q10


③

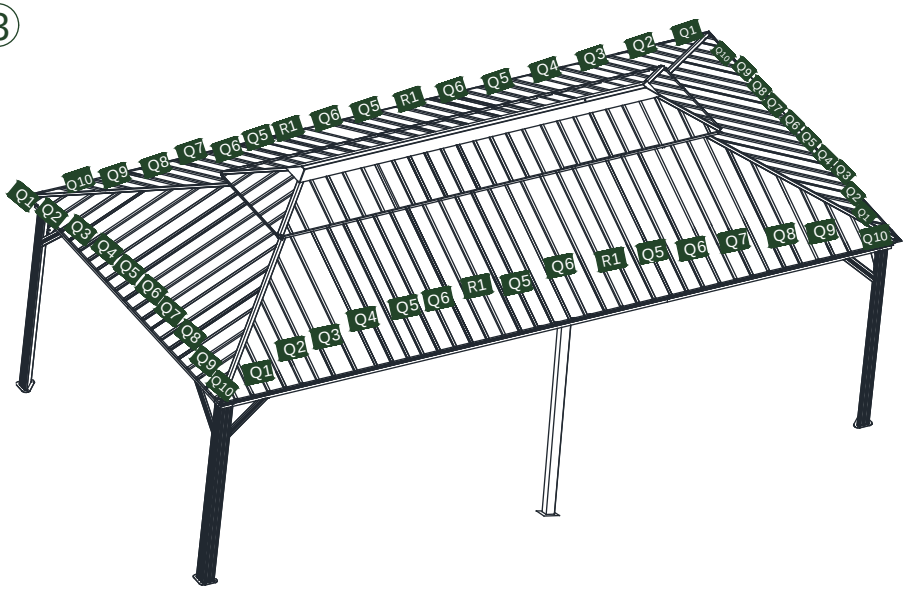


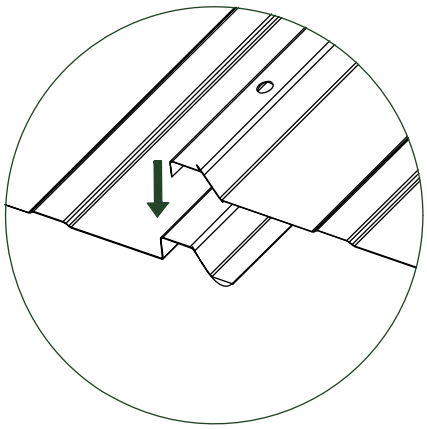

28
STEP

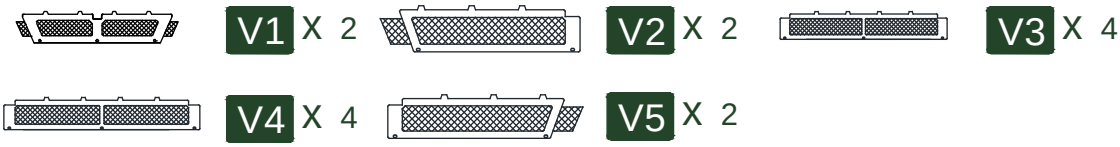

V1 X 2
V2 X 2
V3 X 4
V4 X 4
V5 X 2

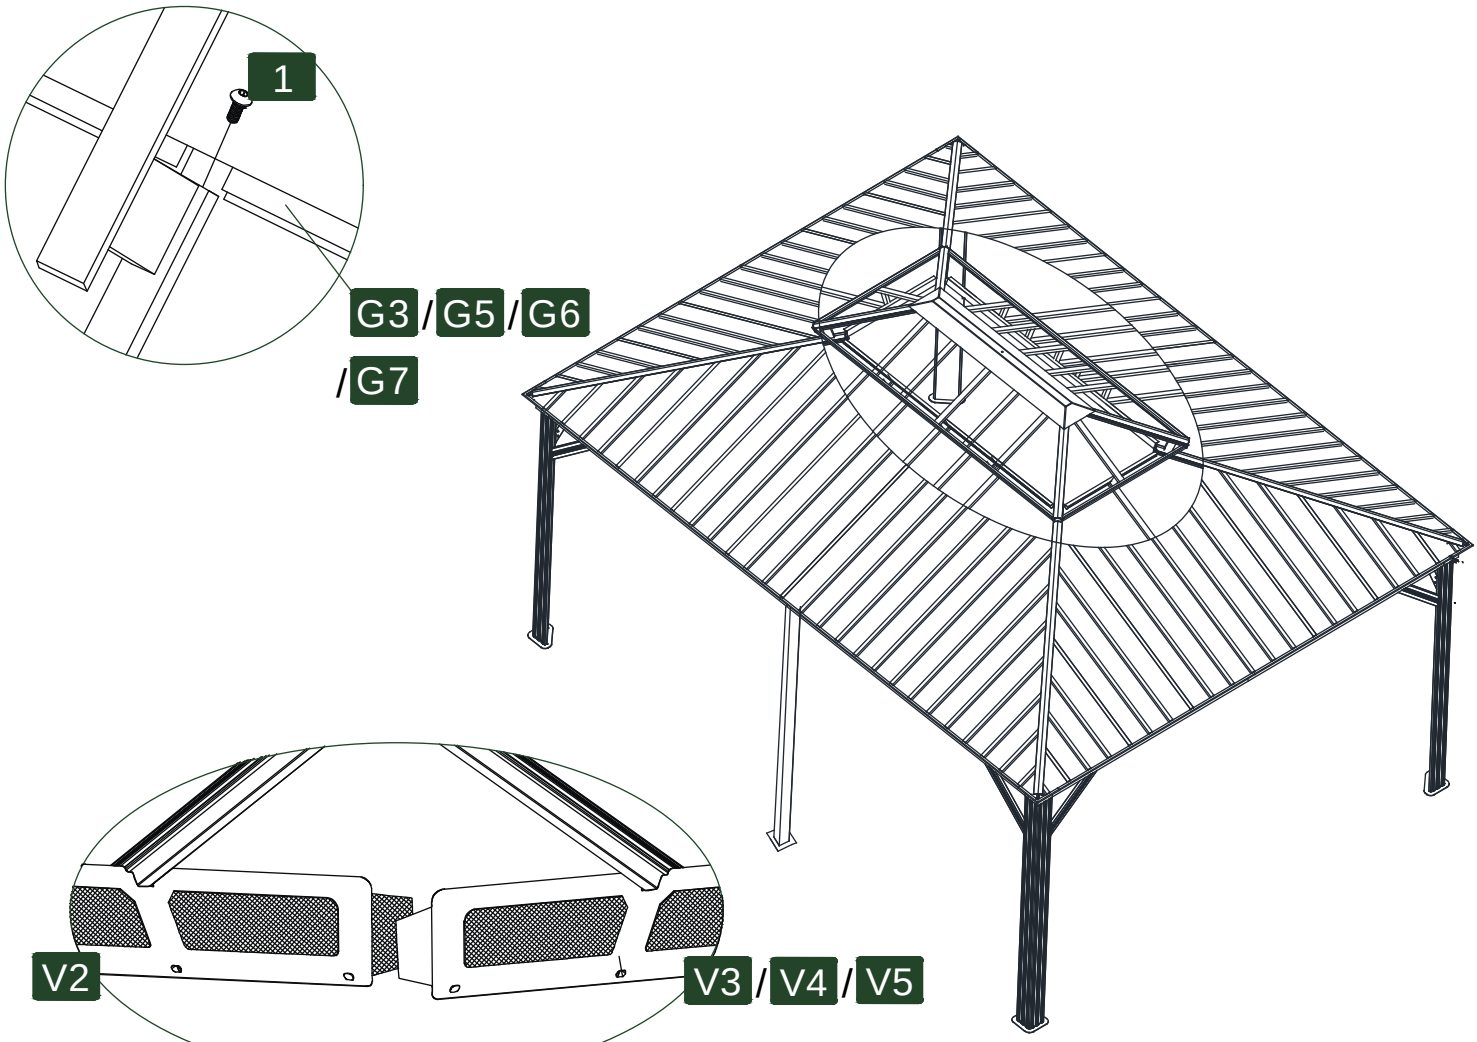
1
G3/G5/G6
/G7
V2
V3/V4/V5

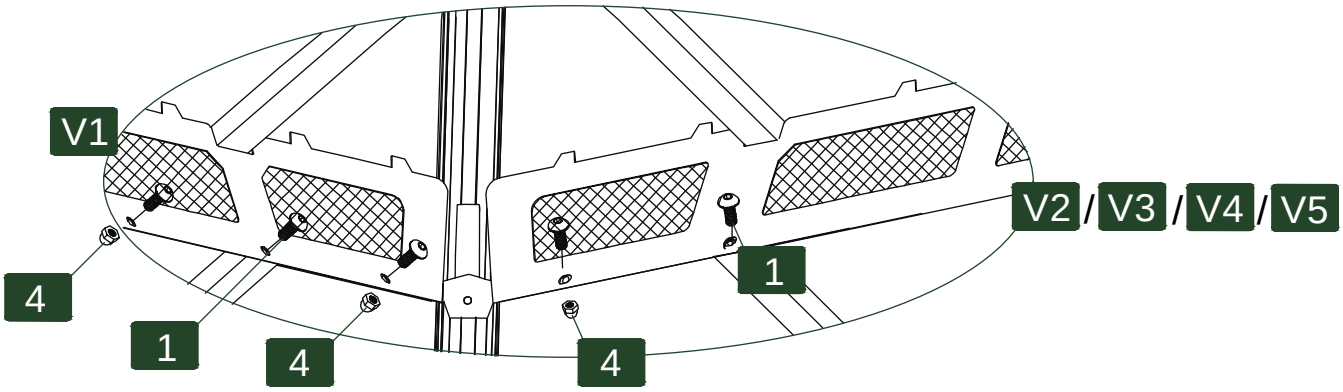

V1
V2/V3/V4/V5
4
1
4
1
4


4 X 16


Phase 4:Wall&Curtain&Netting

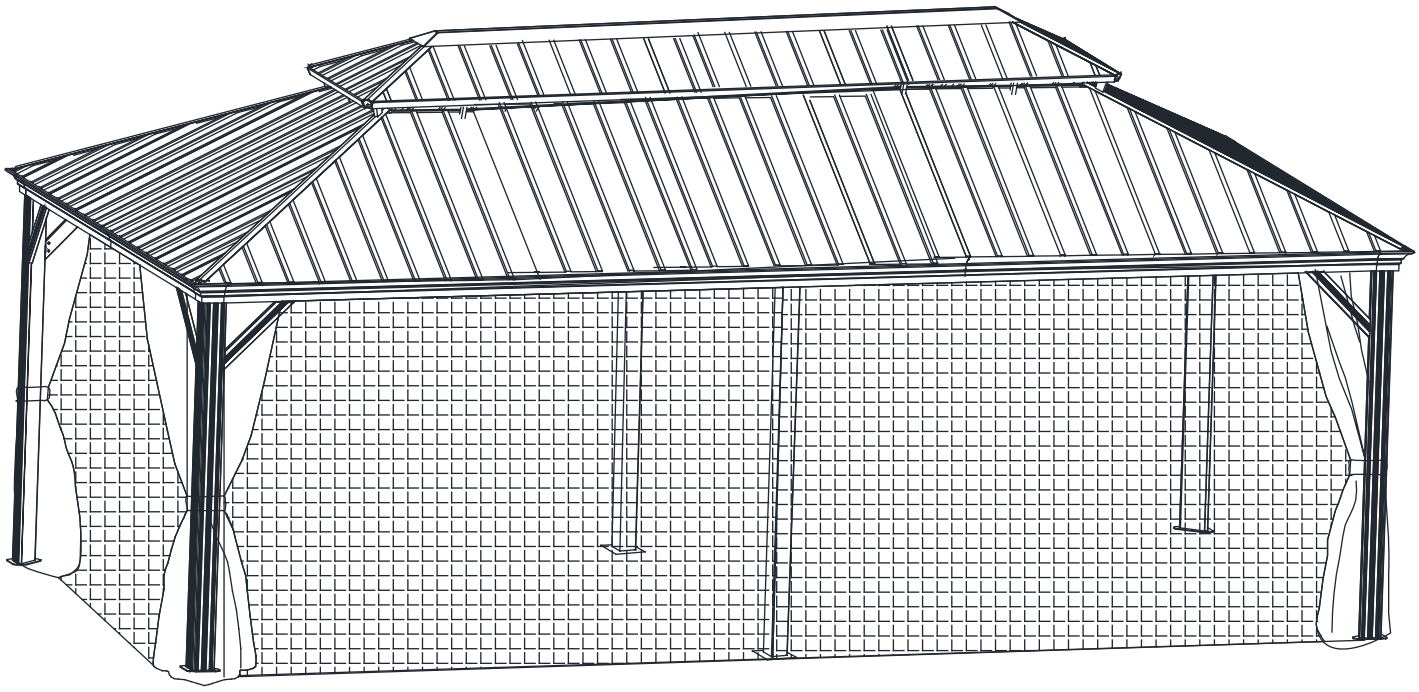

29 STEP



T X 1(4pcs)

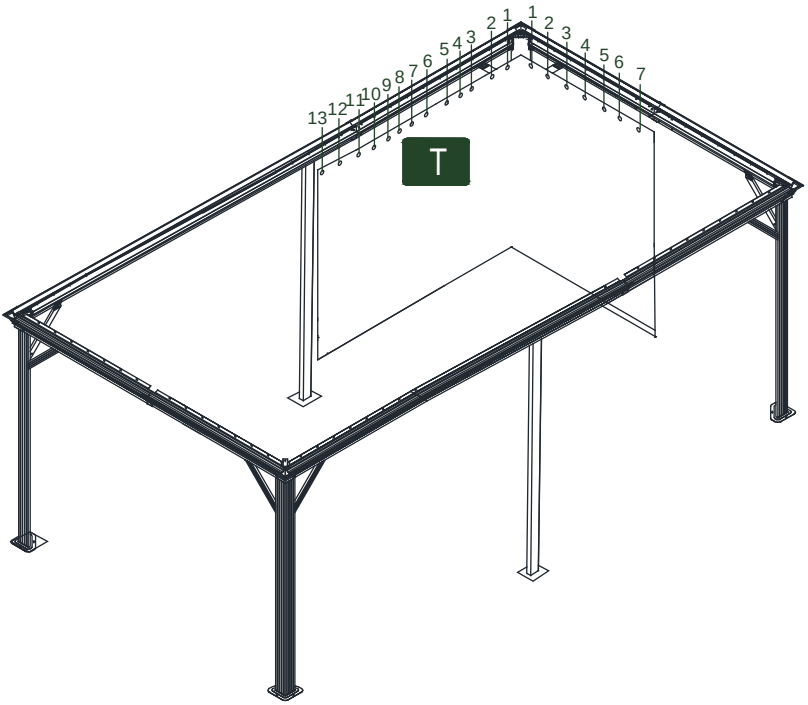

The other part has 6 holes hanging on Part B3.

The other part has 6 holes hanging on Part B2.

One part of the curtain has 4 holes hanging on Part B.


One part of the curtain has 4 holes hanging on Part B1.

One part of the curtain has 4 holes hanging on Part B.


The other part has 6 holes hanging on Part B2.

The other part has 6 holes hanging on Part B3.

30 STEP



T1 X 1(4pcs)

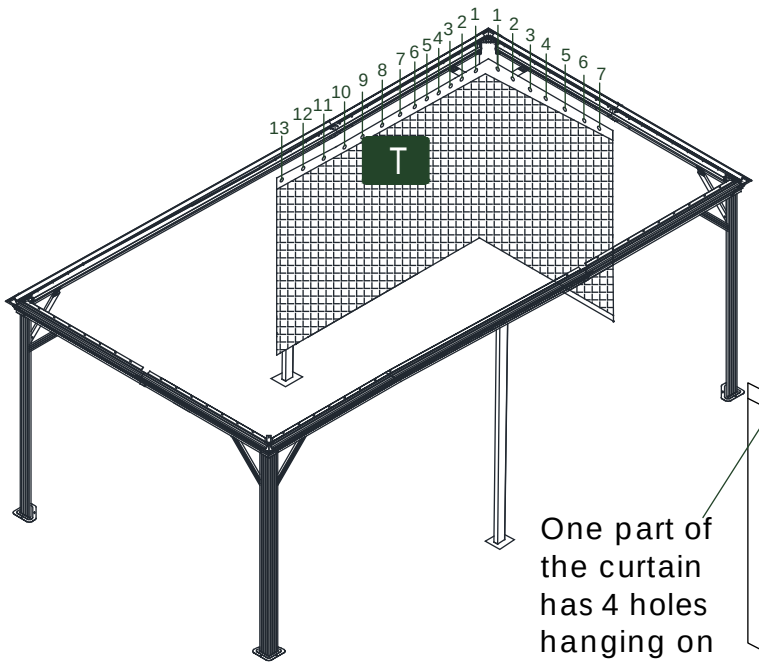

The other part has 6 holes hanging on Part B3.

The other part has 6 holes hanging on Part B2.

One part of the curtain has 4 holes hanging on Part B.


One part of the curtain has 4 holes hanging on Part B1.


One part of the curtain has 4 holes hanging on Part B.


The other part has 6 holes hanging on Part B2.

The other part has 6 holes hanging on Part B3.


31 STEP

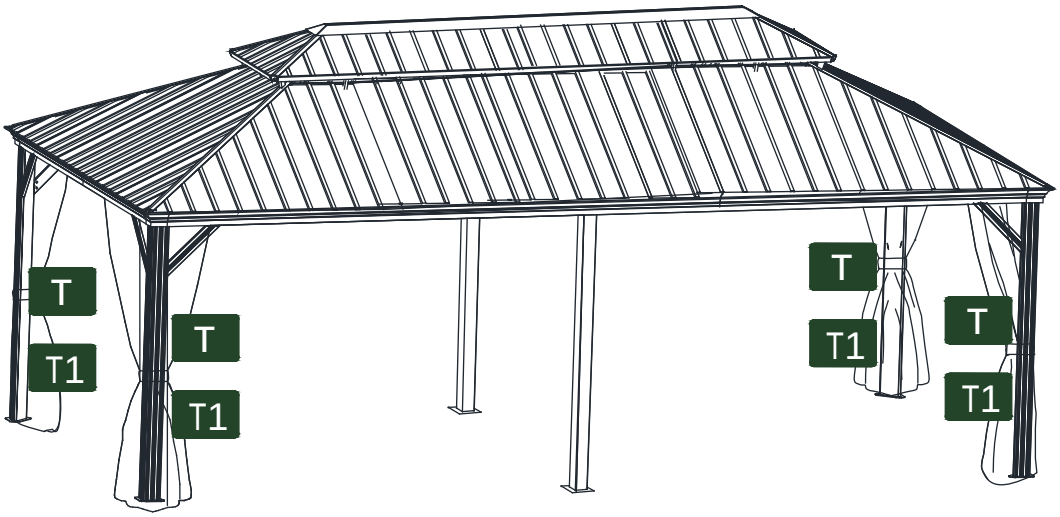


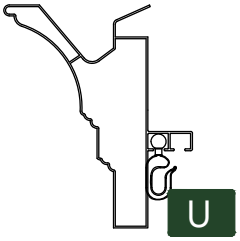


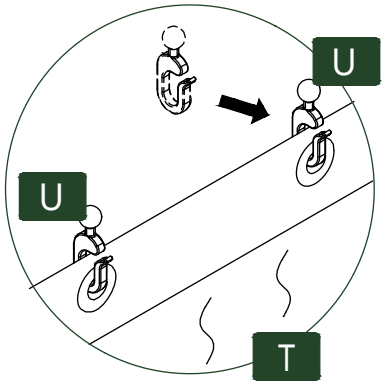



32 STEP

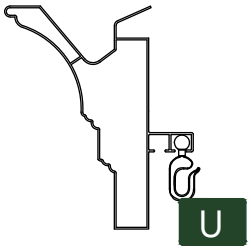

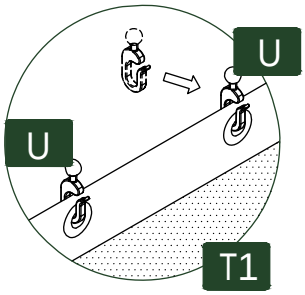


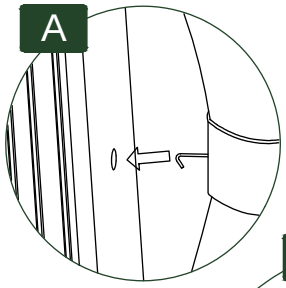


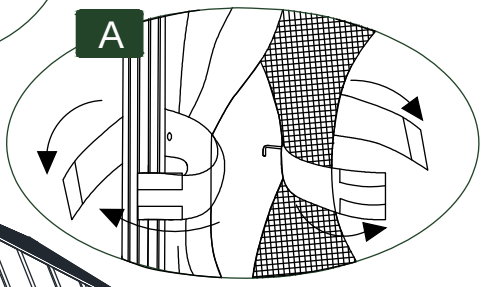

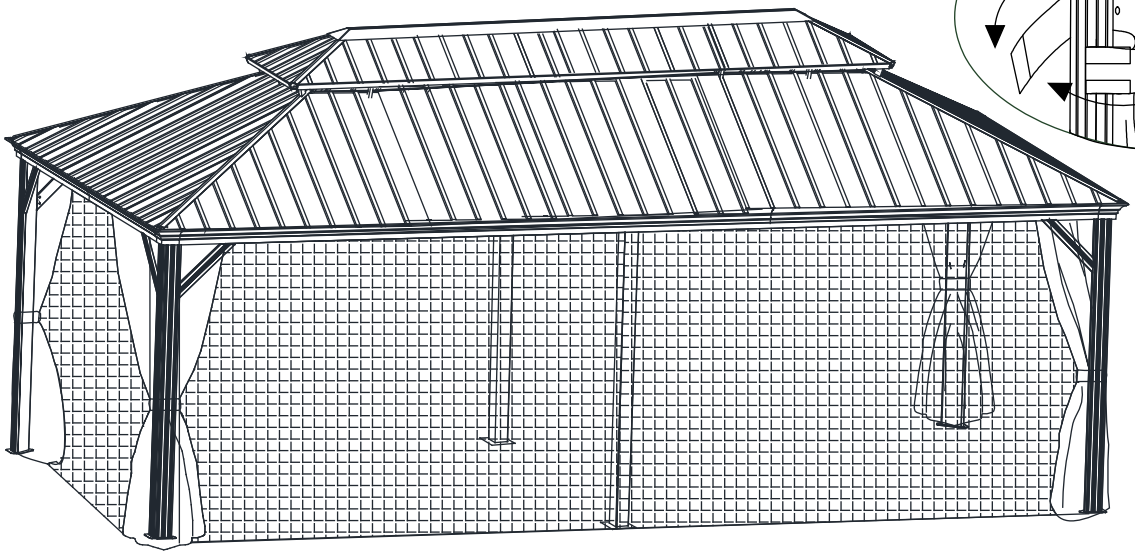


33
STEP

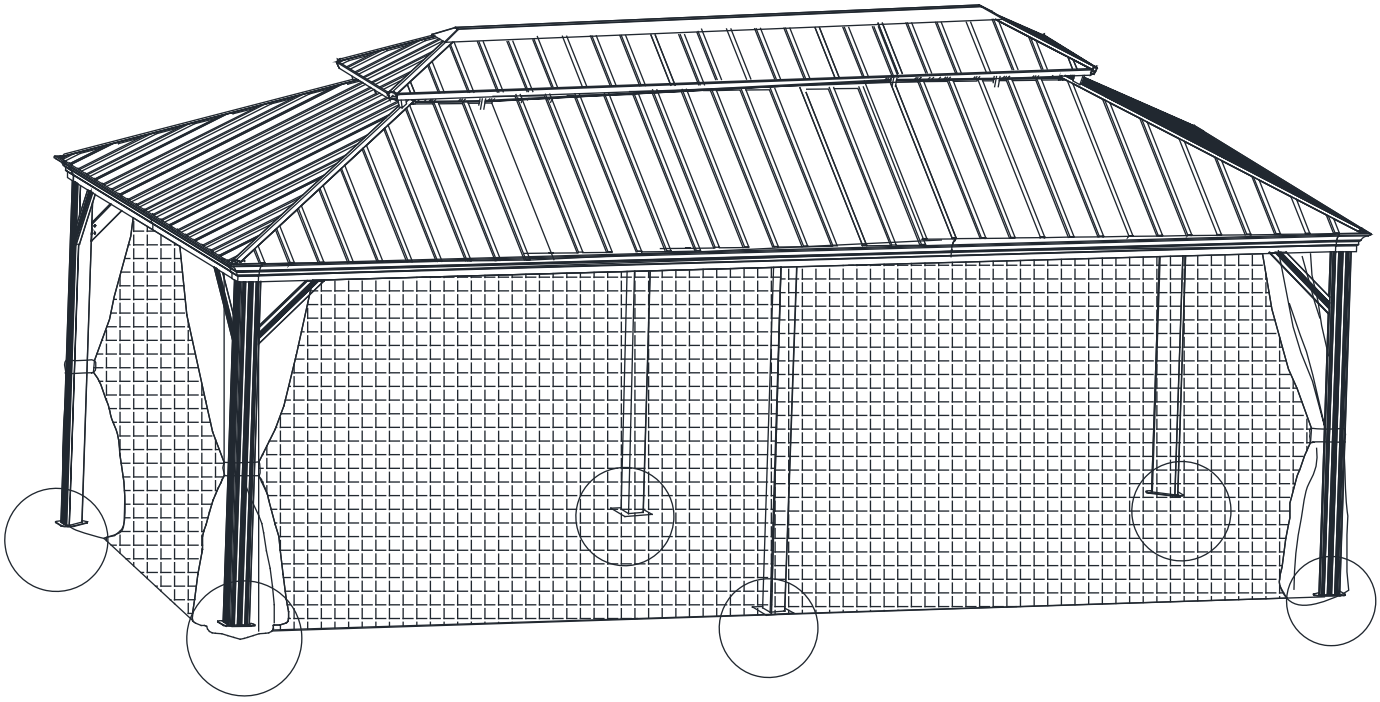

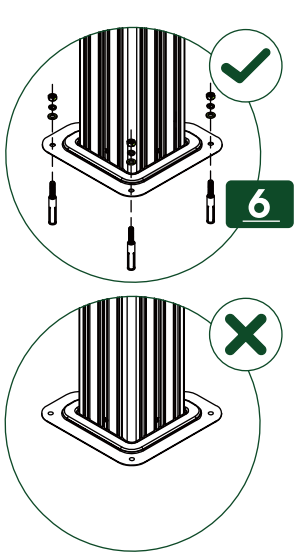


Hard foundation

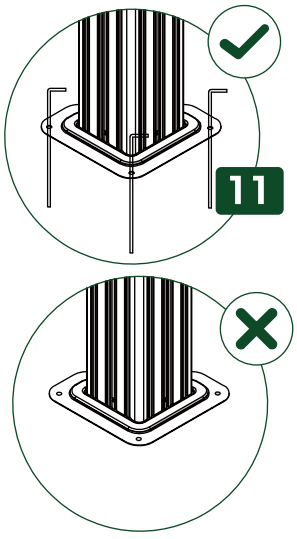

Soft foundation

Installation Completed

To improve wind resistance, **be sure to complete this installation step. If expansion screws or ground nails are not installed,strong winds may topple the gazebo.**Expansion srews are essential forstability on cement surfaces and ground nails are for grassy surfaces.All are included in the accessories package.

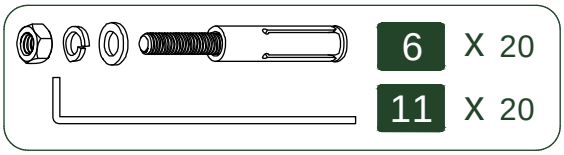

AFTER-SALE

AFTER-SALE SERVICE

If you have any suggestions or encounter quality issues with our products, please contact us first.

Our after-sales team will respond within 24 hours, and we will do our best to provide a solution until you are satisfied.

GUARANTEED CUSTOMER SERVICE

Your shopping experience is very important to us!

If you feel unsatisfied or have any questions,
just contact us!

If you want to share how wonderful our smart product makes your home, just contact us and share your pictures!

For further information,
just contact us!

service@kmcgloble-us.com
(USA) +1 213-816-4788