


# Hall Tree

Assembly Instructions - Please keep for future reference

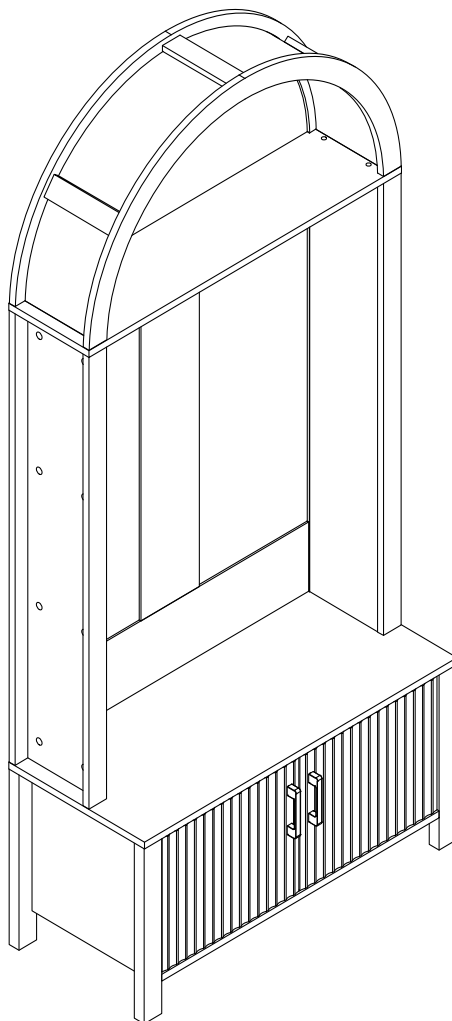

## Dimensions

Width- 31.50inch

Depth-13.58inch

Height-69.49inch



## WARNING



This product is NOT a Clothing Storage Unit (CSU).  
DO NOT use it for clothing storage.  
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



## Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

### Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

**WARNING**  
**In order to help prevent overturning –**  
**please follow these instructions**














To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)  
Do not allow children to climb or hang on the furniture  
Do not open more than one drawer at a time  
Do not place heavy items in the top drawers  
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.
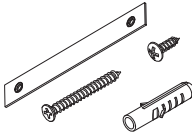
|                                                                                                                         |                                                                                                                          |                                                                                                                         |                                                                                                                       |
|-------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| <b>A</b><br><br>Cam Bolt ×52+2         | <b>B</b><br><br>Cam Bolt ×56+2          | <b>C</b><br><br>6*30mm Dowel ×32+2    | <b>D</b><br><br>Door Stopper ×1    |
| <b>E</b><br><br>5*40mm Screw ×8+1      | <b>F</b><br><br>4*18mm Bar Handle ×2set | <b>G</b><br><br>Coat Hook ×4           | <b>H</b><br><br>Door Hinge ×4      |
| <b>I</b><br><br>Felt Pad ×4            | <b>J</b><br><br>Anti-tip Device ×2set   | <b>K</b><br><br>Hole Cover ×20+2      | <b>L</b><br><br>Back Panel Clip ×4 |
| <b>M</b><br><br>3.5*14mm Screw ×30+2 | <b>N</b><br><br>4*30mm Screw ×4+1     | <b>O</b><br><br>Allen key ×1        | <b>P</b><br><br>Shelf Bracket ×4 |
| <b>Q</b><br><br>Nut ×4               | <b>R</b><br><br>Cam Bolt ×4           | <b>S</b><br><br>3.5*14mm Screw ×8+1 |                                                                                                                       |

**Tools required** Not Included



Phillips screwdriver  
(medium & large)

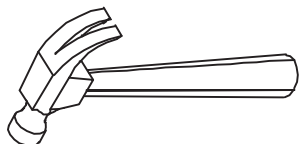


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

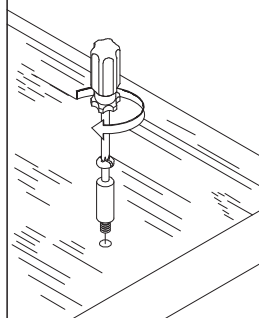

## Step 2

Push the male camlock into the entry hole.

2

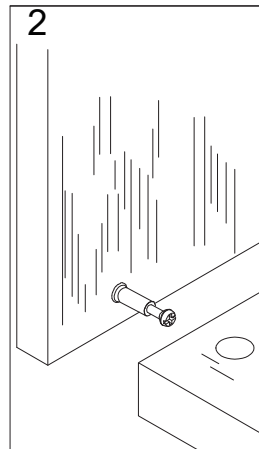


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

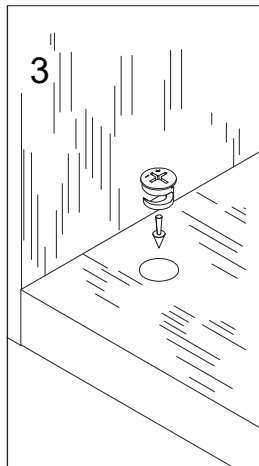


## Step 4

Turn the female camlock clockwise with a screwdriver.


You should feel a click when the camlock is locked in place.

The joint is now secure.

4









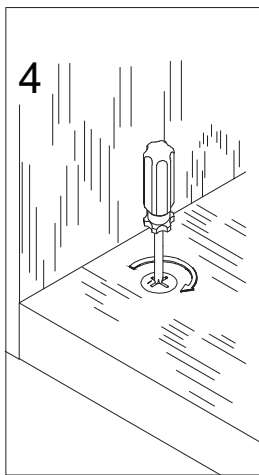


# Assembly Instructions

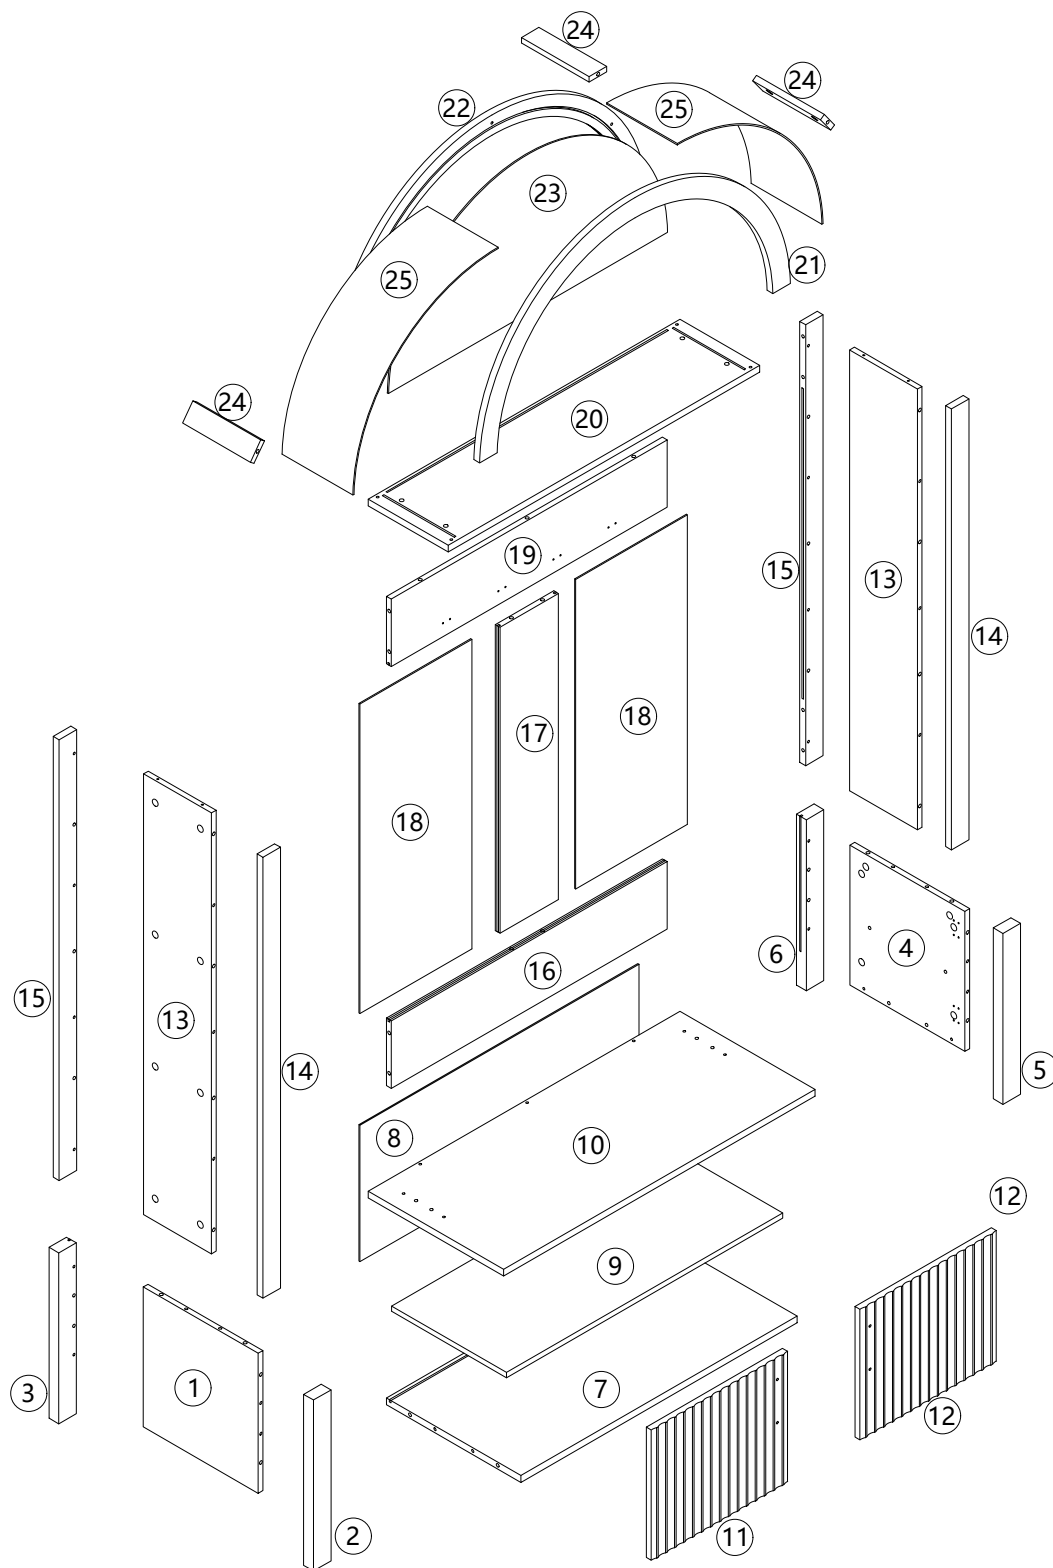







# PART LIST

This product comes in 1 box.
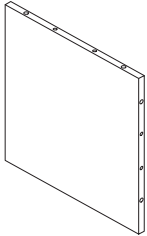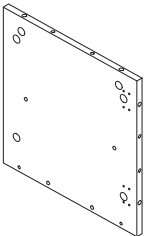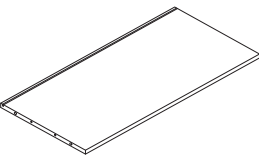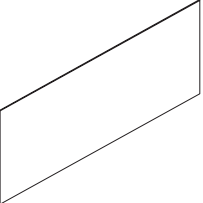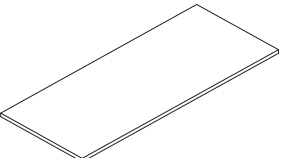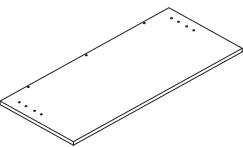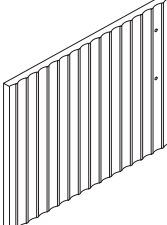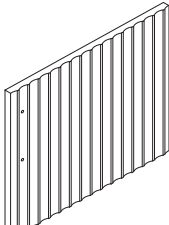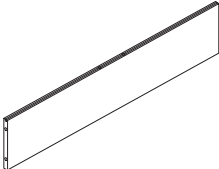
|                                                                                     |                                                                                     |                                                                                      |                                                                                       |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
|    |    |     |    |
| ①<br>×1<br>311×295×12                                                               | ②<br>×1<br>380×45×25                                                                | ③<br>×1<br>380×45×25                                                                 | ④<br>×1<br>311×295×12                                                                 |
|   |   |    |   |
| ⑤<br>×1<br>380×45×25                                                                | ⑥<br>×1<br>380×45×25                                                                | ⑦<br>×1<br>708×345×15                                                                | ⑧<br>×1<br>303×716×3                                                                  |
|  |  |  |  |
| ⑨<br>×1<br>706×295×12                                                               | ⑩<br>×1<br>800×347×15                                                               | ⑪<br>×1<br>290×350×15                                                                | ⑫<br>×1<br>290×350×15                                                                 |
|  |  |   |  |
| ⑬<br>×2<br>980×174×12                                                               | ⑭<br>×2<br>980×45×15                                                                | ⑮<br>×2<br>980×45×15                                                                 | ⑯<br>×1<br>708×150×12                                                                 |



# PART LIST

This product comes in 1 box.

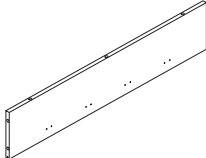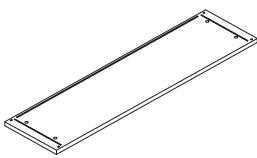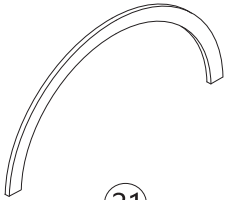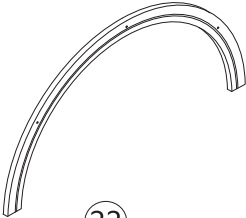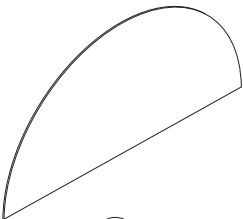
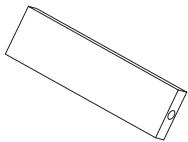
|                                                                                     |                                                                                    |                                                                                     |                                                                                      |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|    |   |   |   |
| (17)<br>x1<br>680×150×12                                                            | (18)<br>x2<br>688×287×3                                                            | (19)<br>x1<br>708×150×12                                                            | (20)<br>x1<br>800×205×15                                                             |
|   |  |  |  |
| (21)<br>x1<br>390×798×15                                                            | (22)<br>x1<br>390×798×15                                                           | (23)<br>x1<br>353×716×3                                                             | (24)<br>x3<br>174×45×15                                                              |
|  |                                                                                    |                                                                                     |                                                                                      |
| (25)<br>x2<br>182×582×3                                                             |                                                                                    |                                                                                     |                                                                                      |

# Assembly Instructions

## Step 1

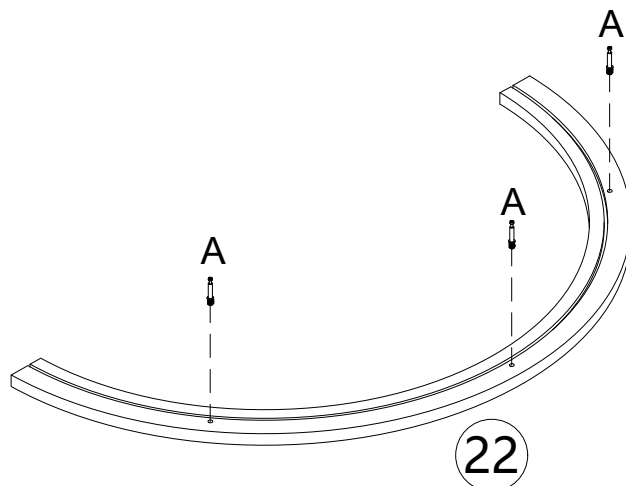
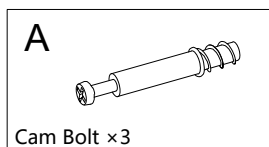


## Step 2

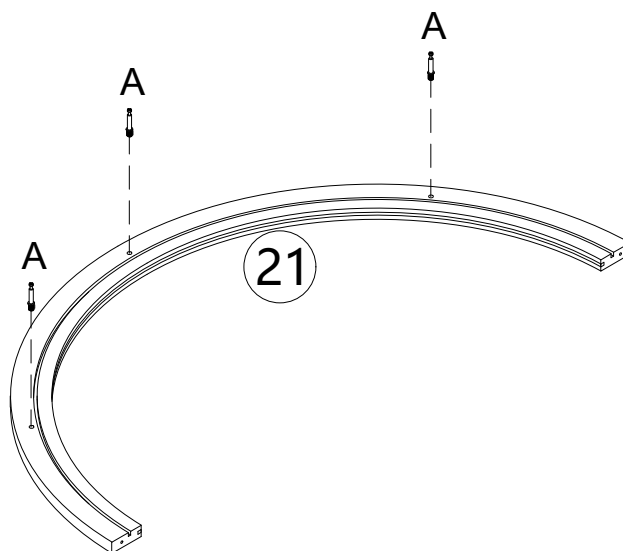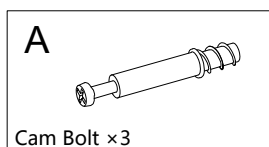


# Assembly Instructions

## Step 3

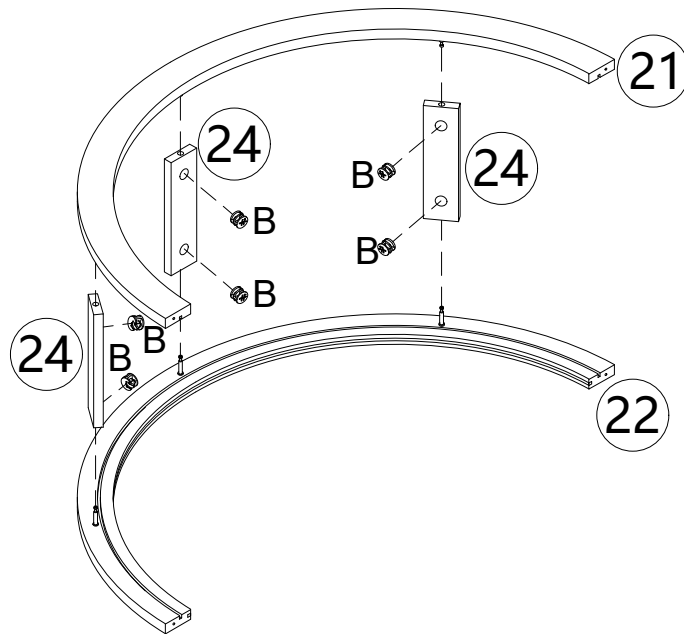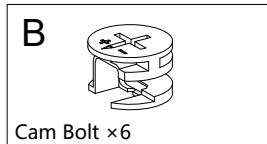


## Step 4

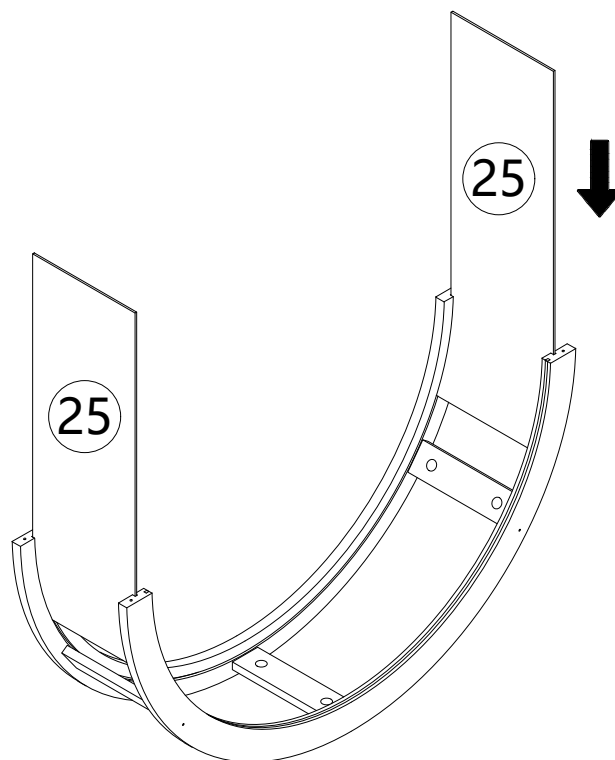


# Assembly Instructions


## Step 5

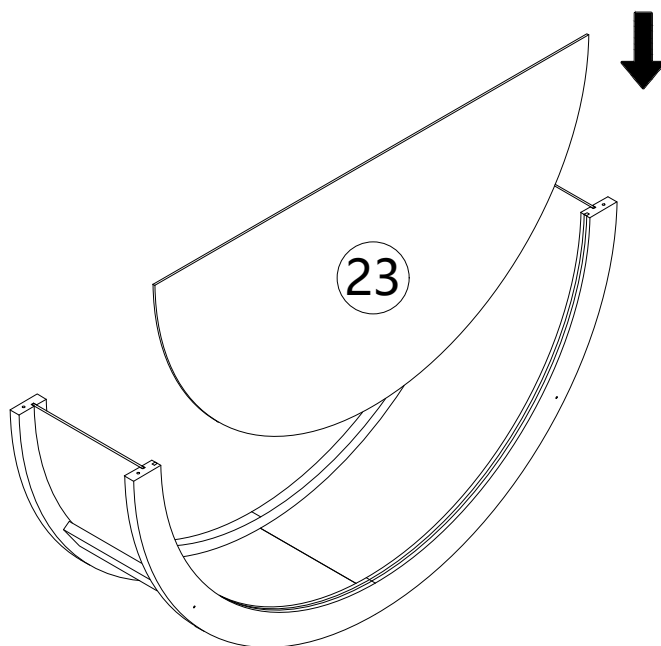

## Step 6

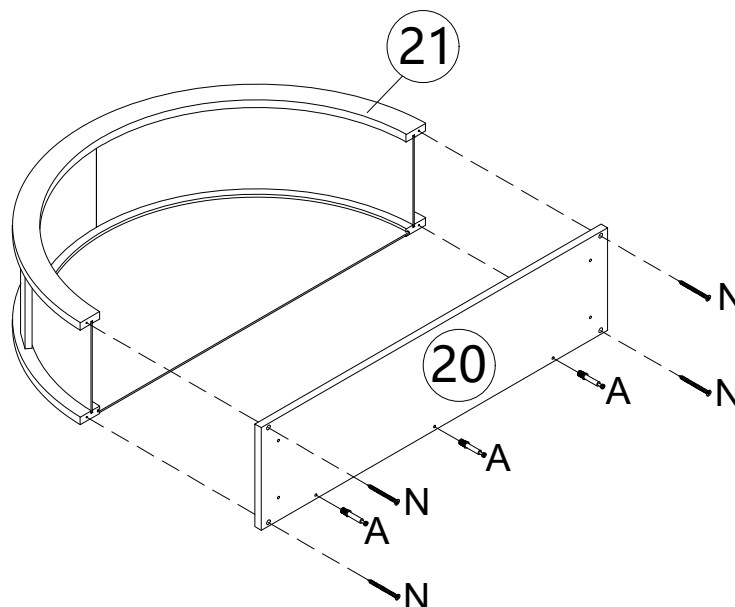

A



Cam Bolt ×3



N





4\*30mm Screw ×4

# Assembly Instructions

## Step 7

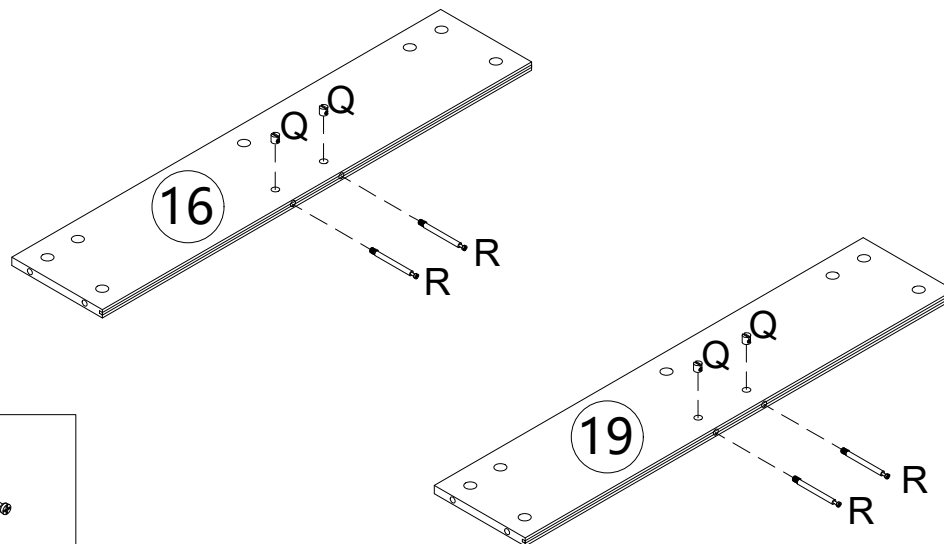
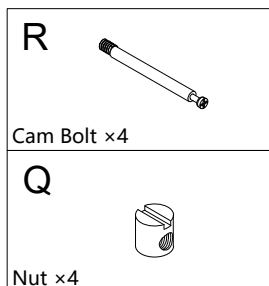


## Step 8

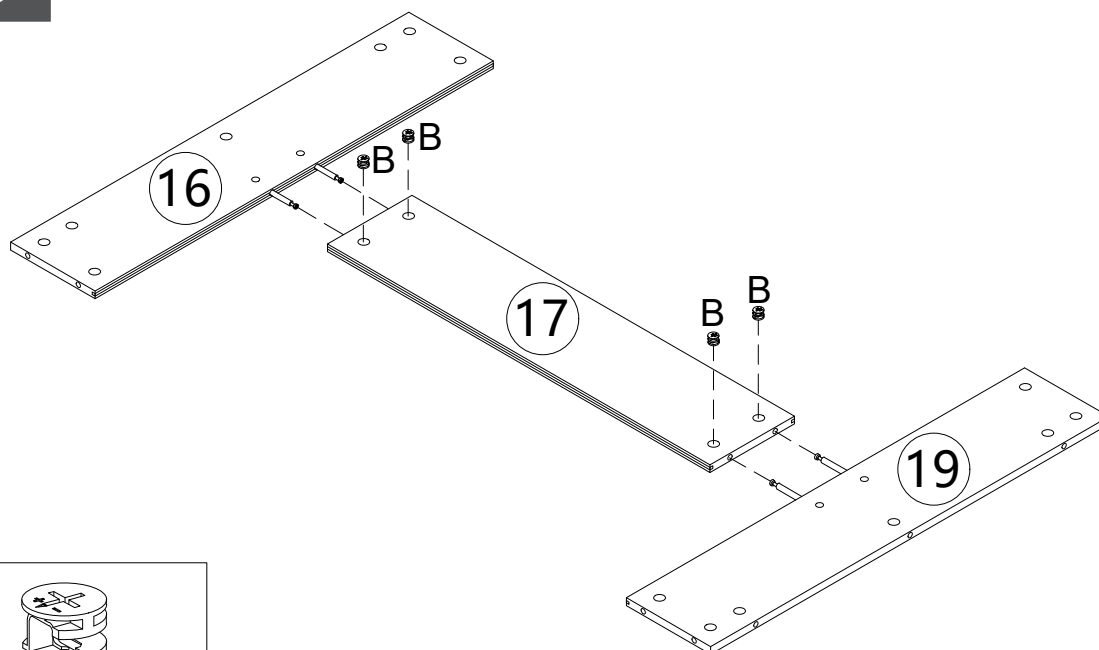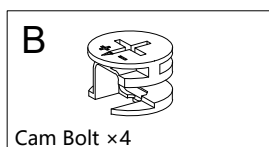


# Assembly Instructions

## Step 9

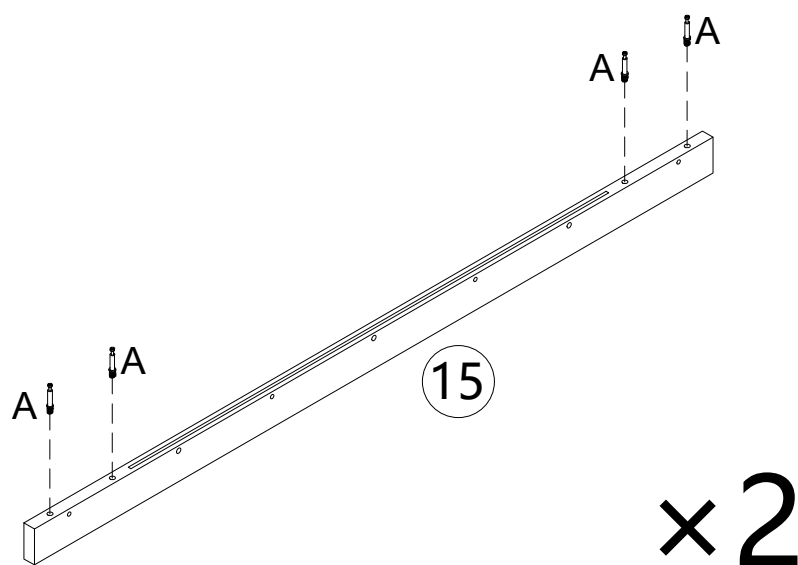
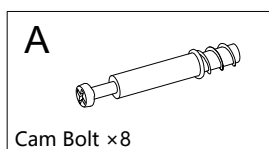


## Step 10

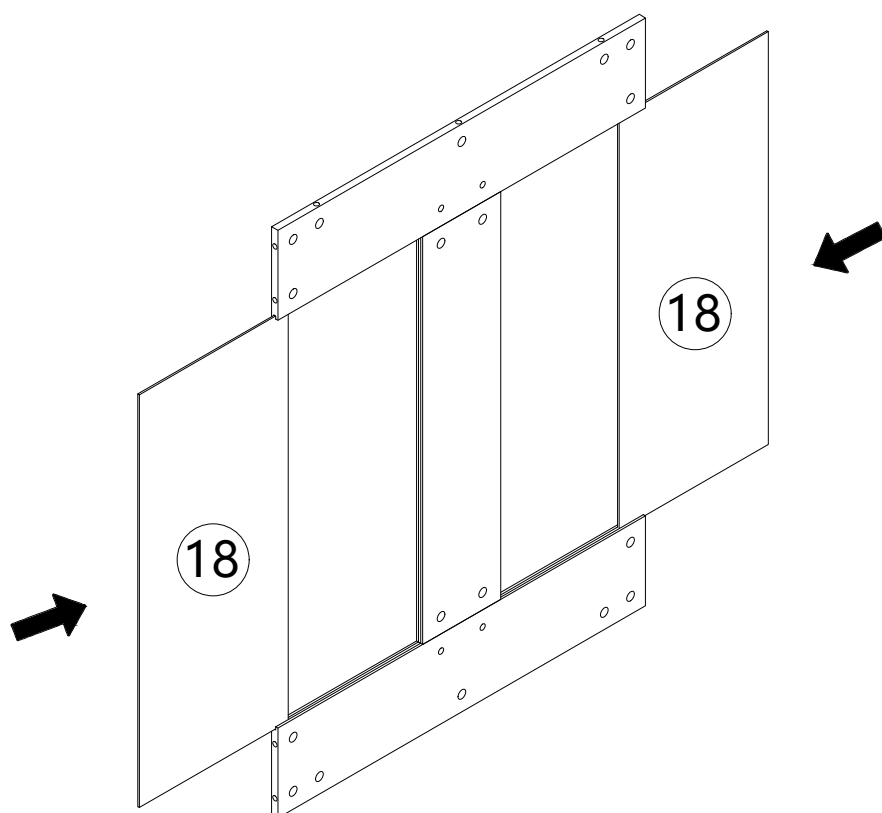



# Assembly Instructions

## Step 1 1

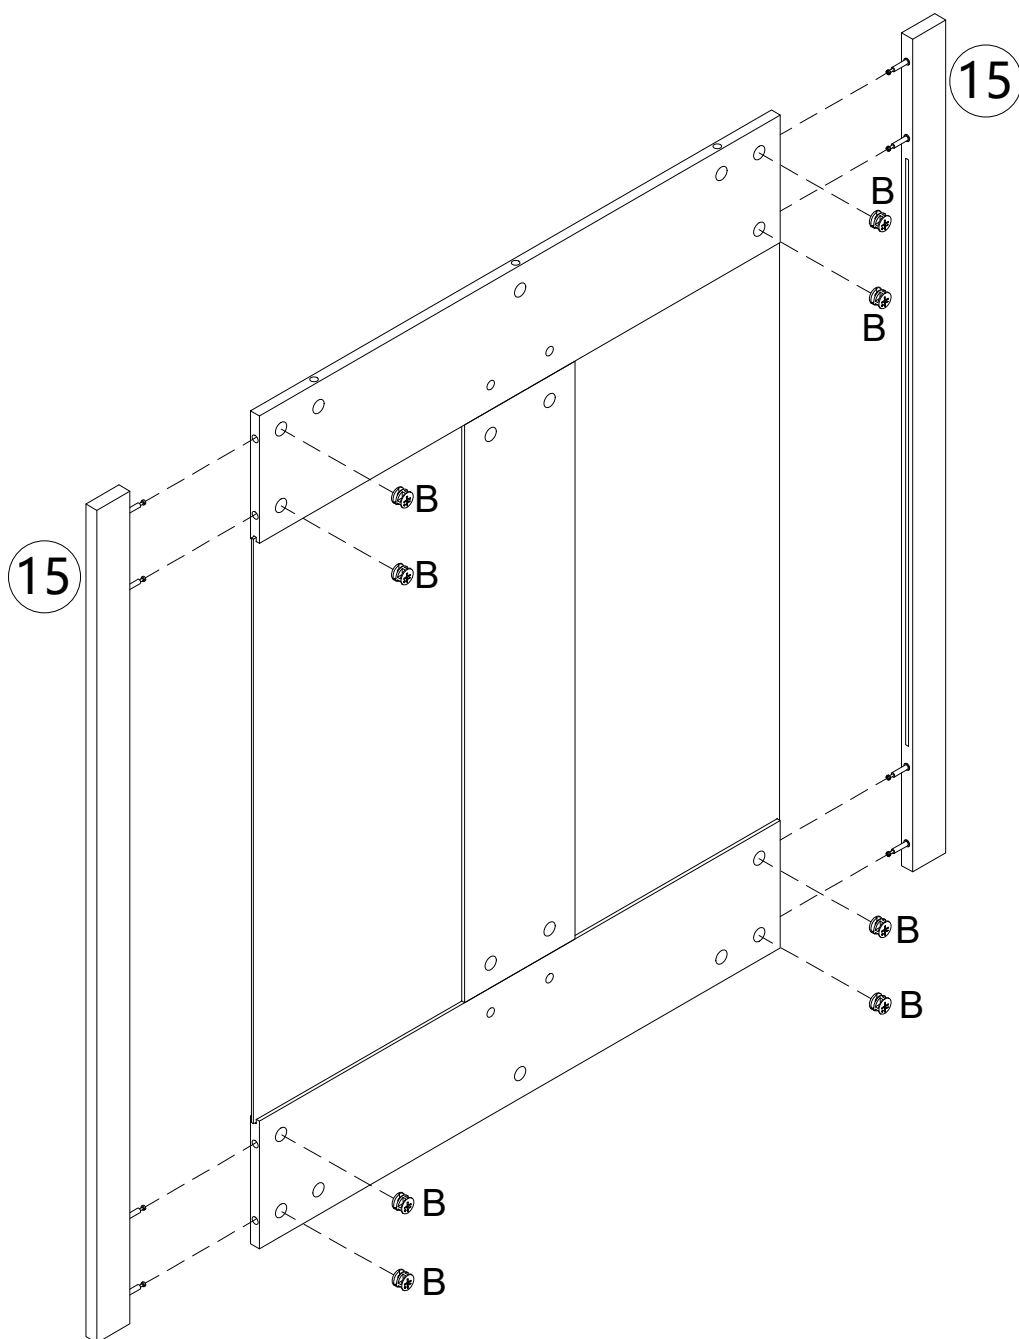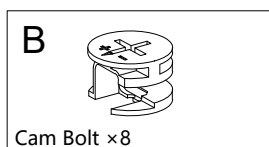



# Assembly Instructions

## Step 12

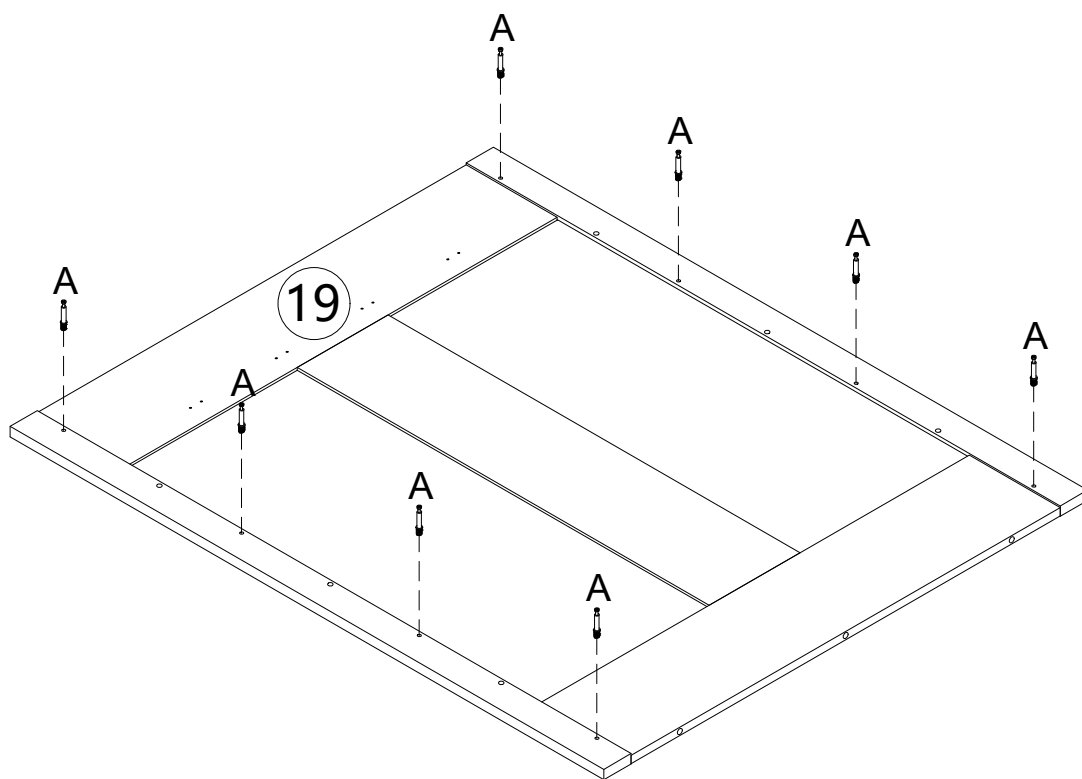
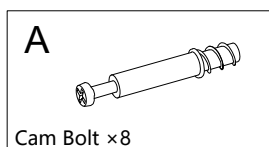


# Assembly Instructions

## Step 13

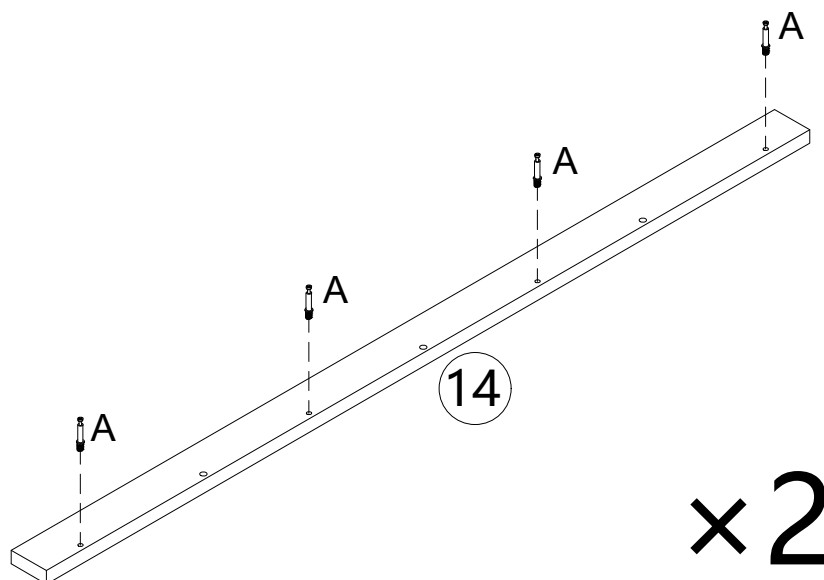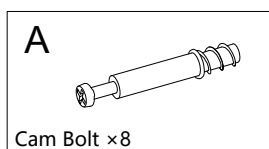


## Step 14

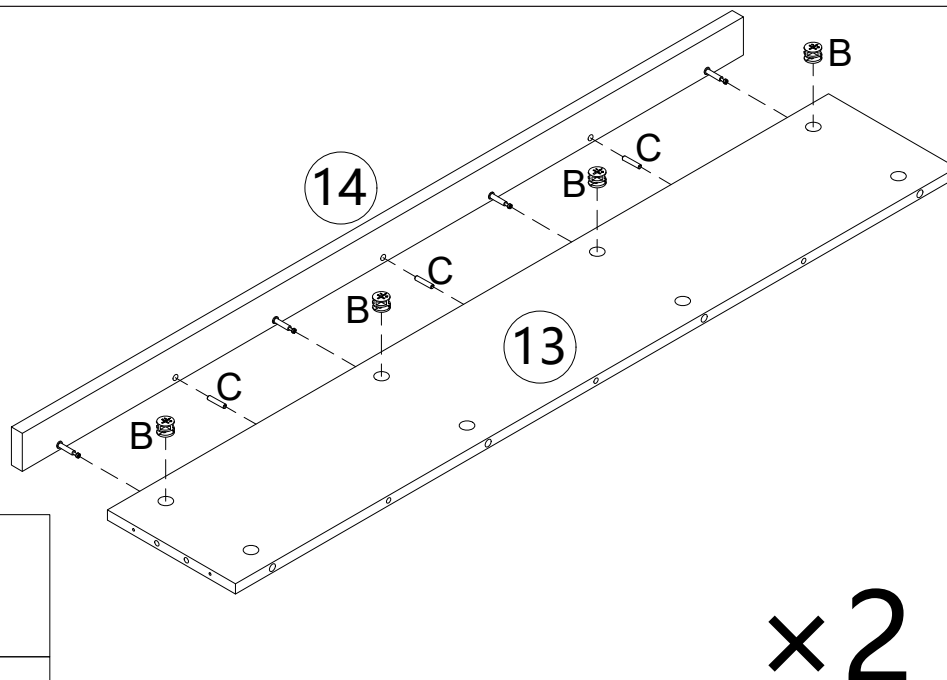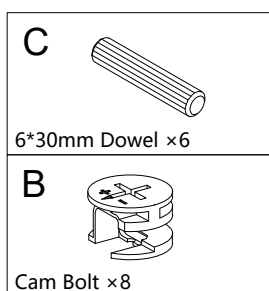


# Assembly Instructions

## Step 15

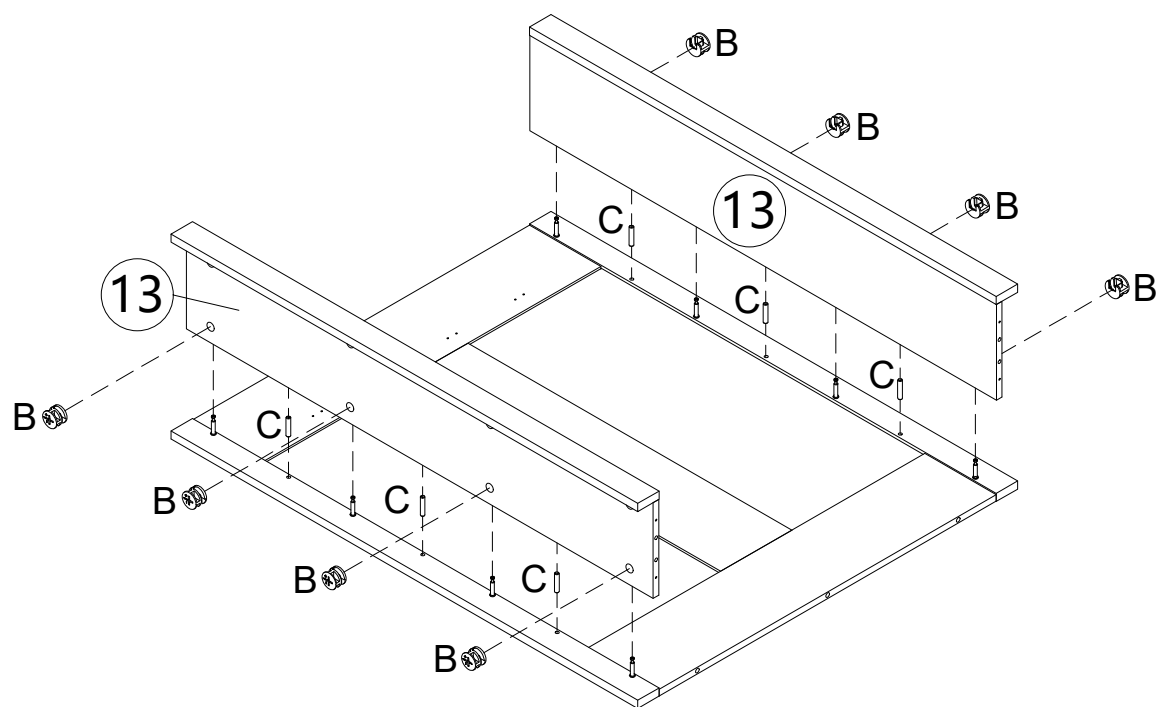

C



6\*30mm Dowel ×6


B



Cam Bolt ×8

# Assembly Instructions

## Step 16

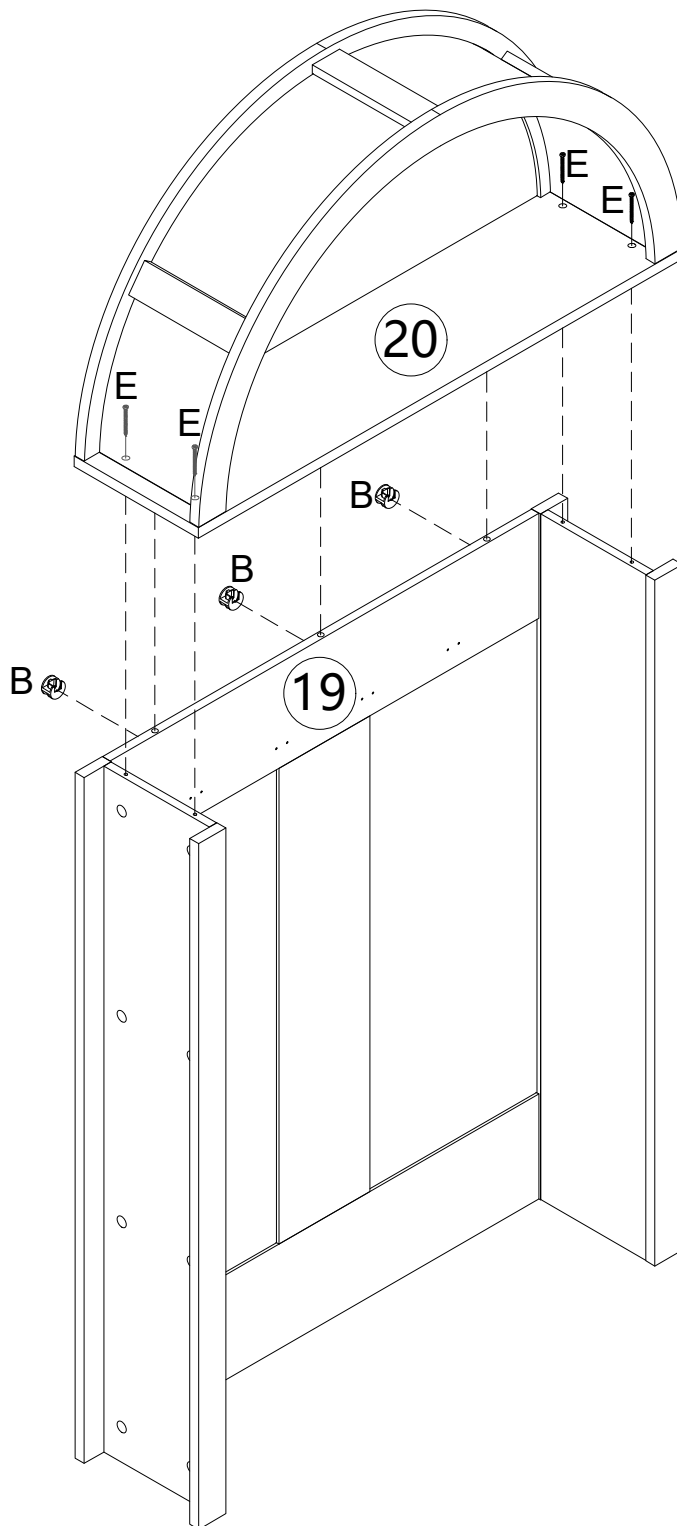

**B**



Cam Bolt ×3



**E**



5\*40mm Screw ×4


# Assembly Instructions

## Step 17

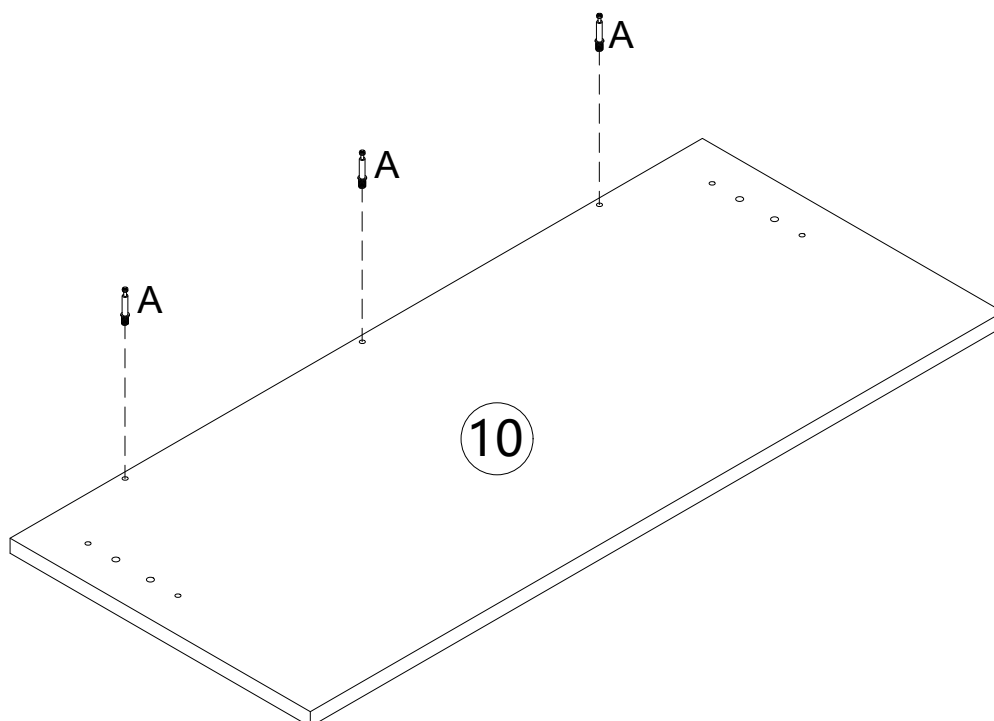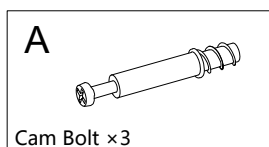


# Assembly Instructions

## Step 18

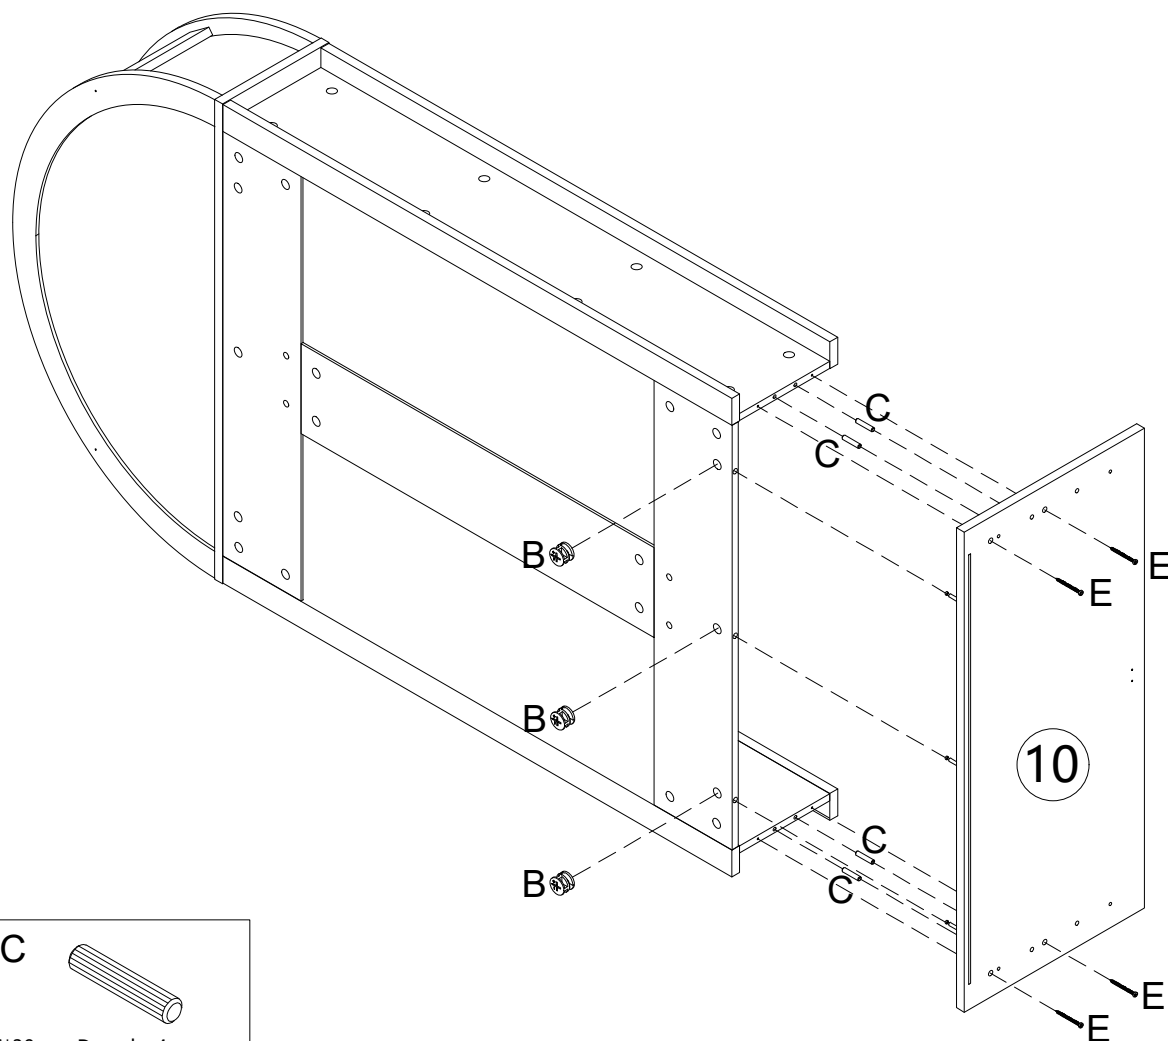

**C**



6\*30mm Dowel ×4

**B**



Cam Bolt ×3


**E**




5\*40mm Screw ×4

# Assembly Instructions

## Step 19

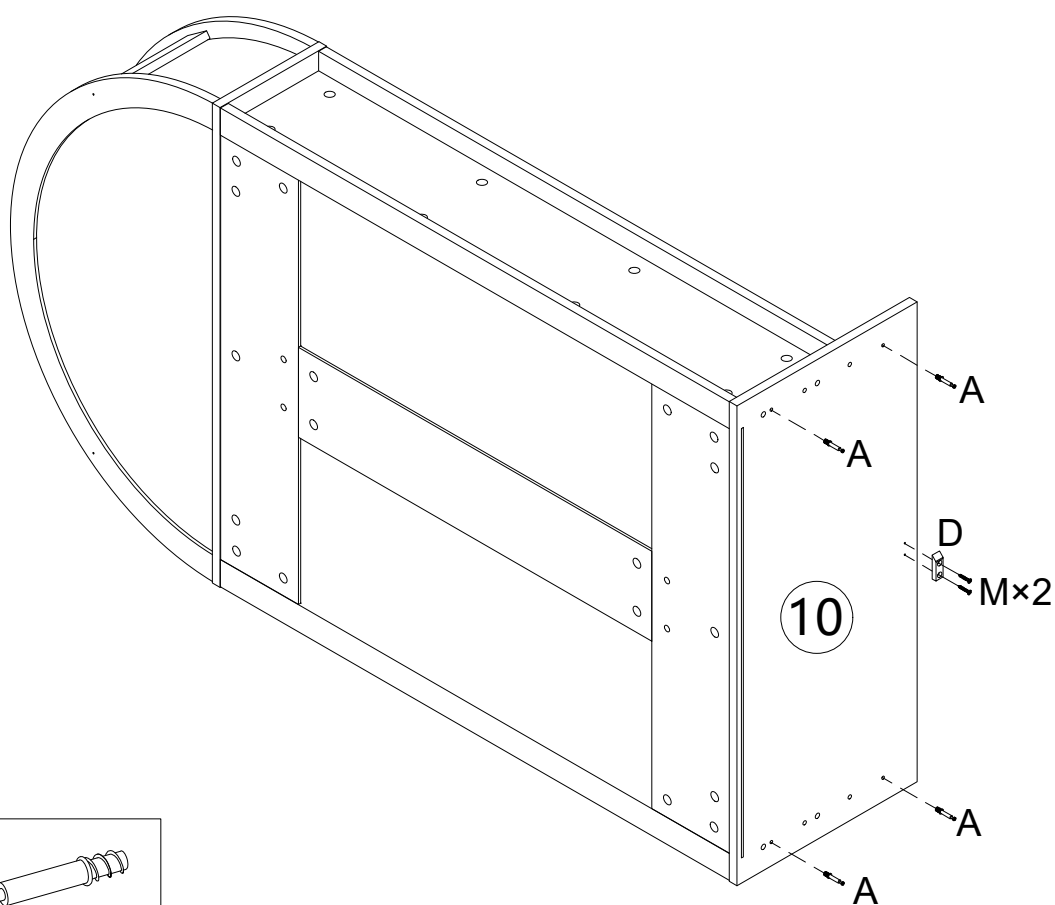

A



Cam Bolt ×4

M



3.5\*14mm Screw ×2



D





Door Stopper ×1

# Assembly Instructions

## Step 2 0

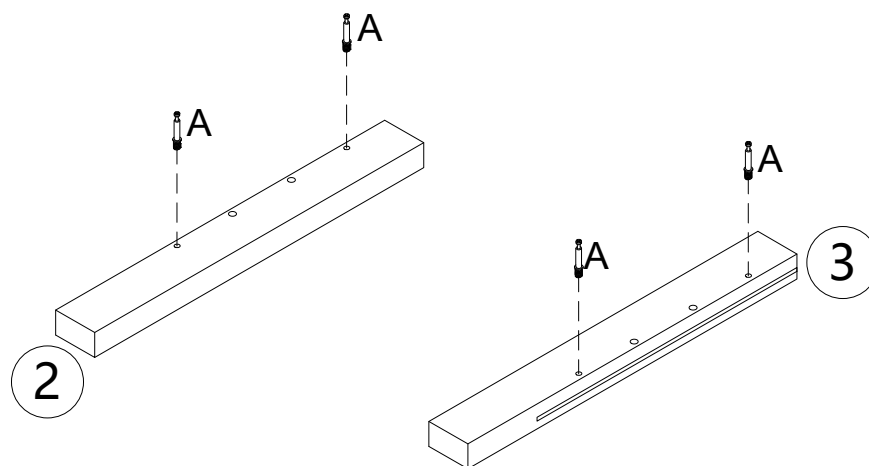
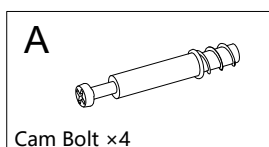


## Step 2 1

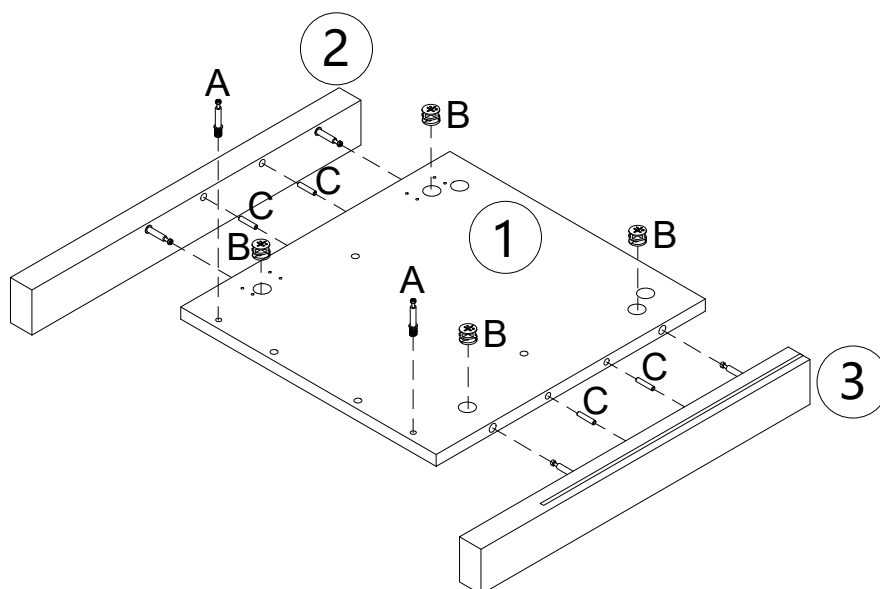
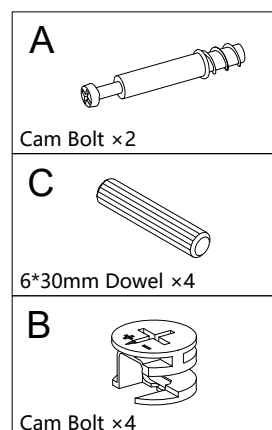


# Assembly Instructions

## Step 2 2

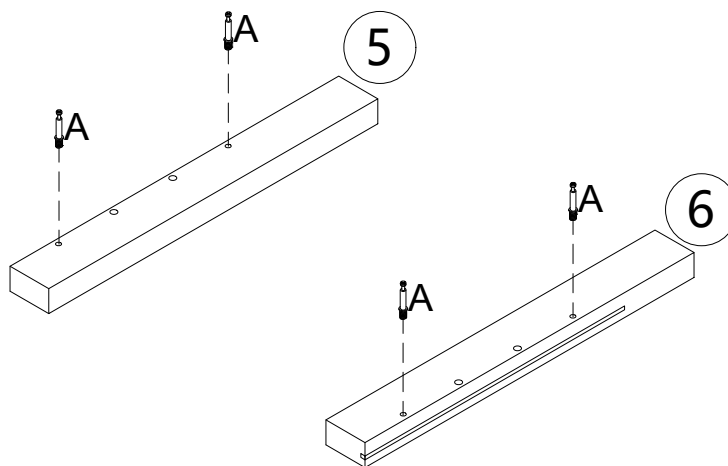
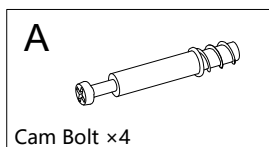


## Step 2 3

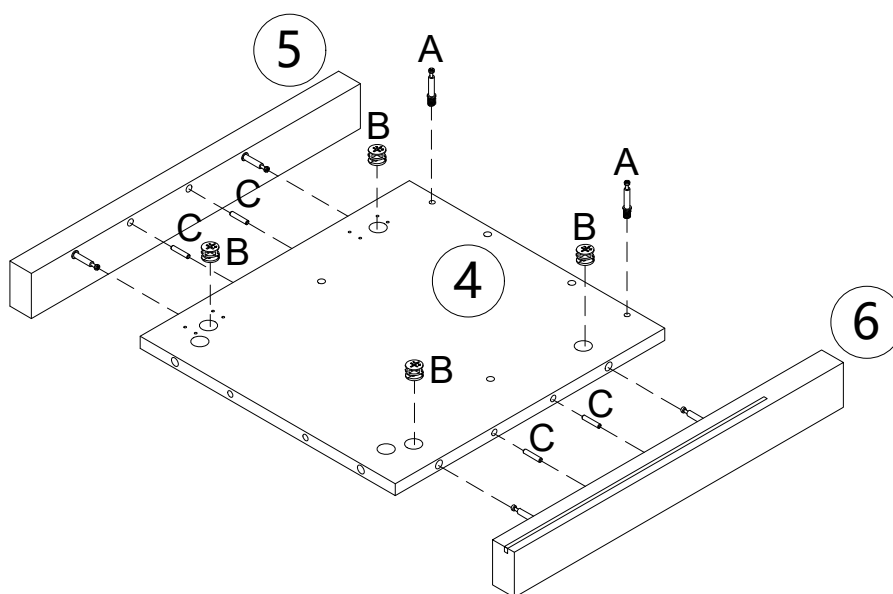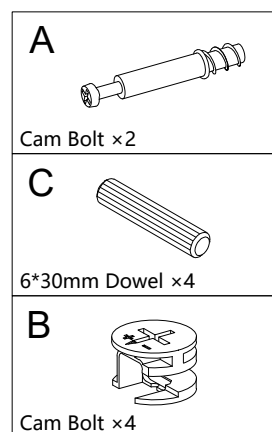


# Assembly Instructions

## Step 2 4

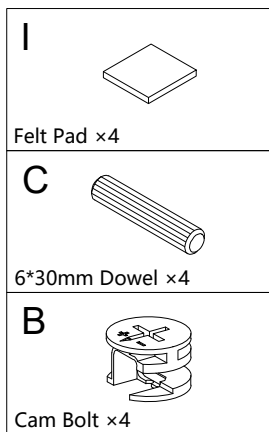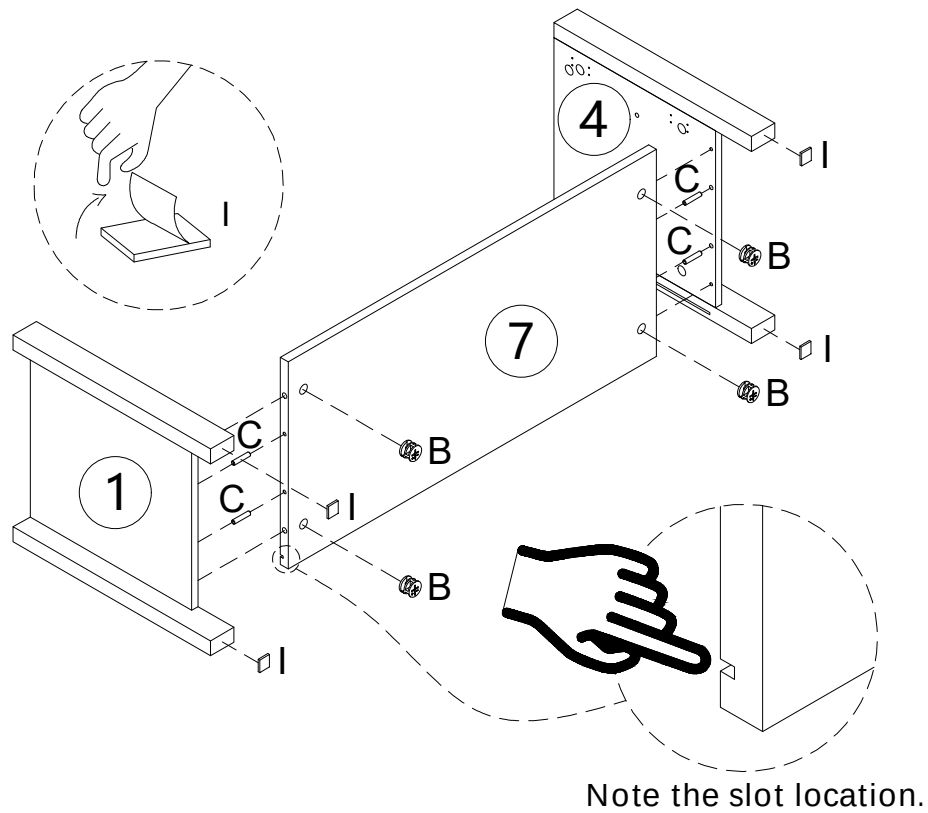


## Step 2 5

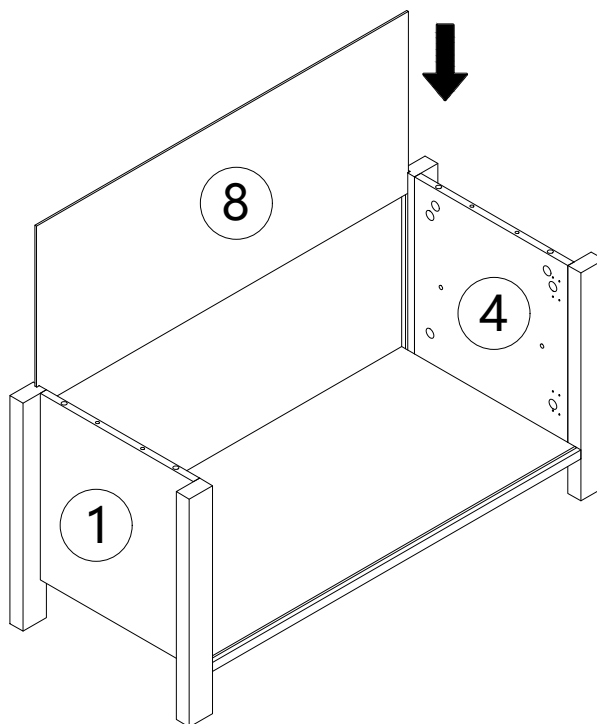


# Assembly Instructions

## Step 2 6

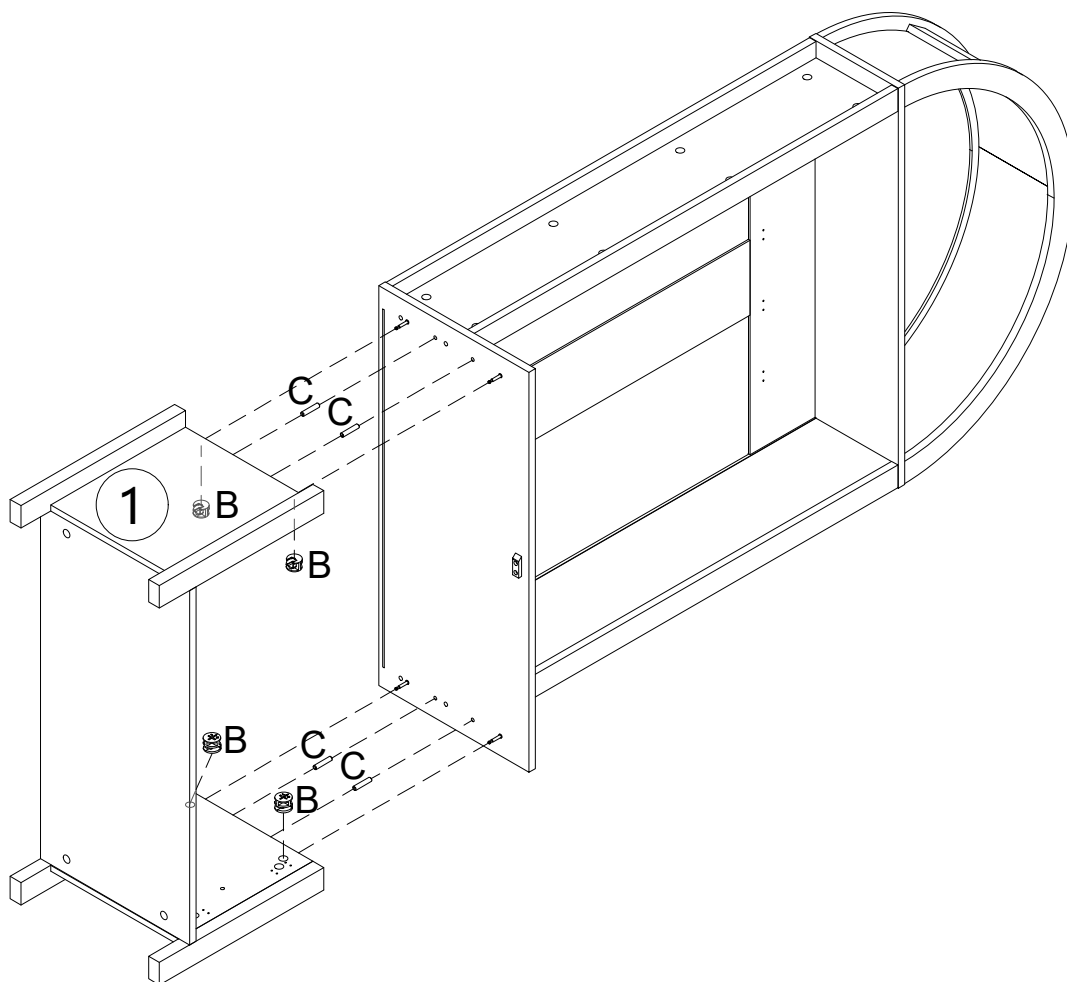

**C**



6\*30mm Dowel ×4


**B**



Cam Bolt ×4

# Assembly Instructions

## Step 27

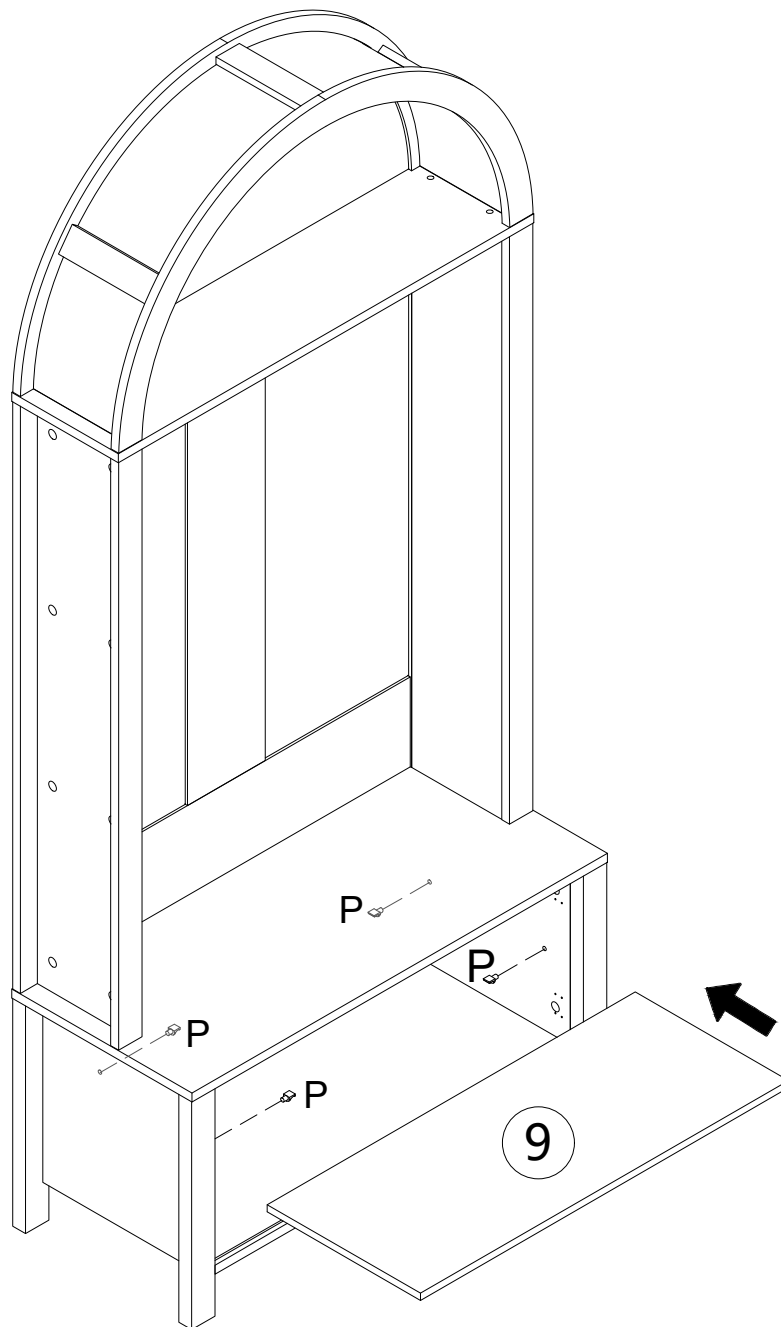



P





Shelf Bracket x4

# Assembly Instructions

## Step 2 8

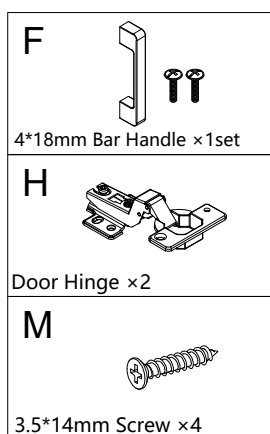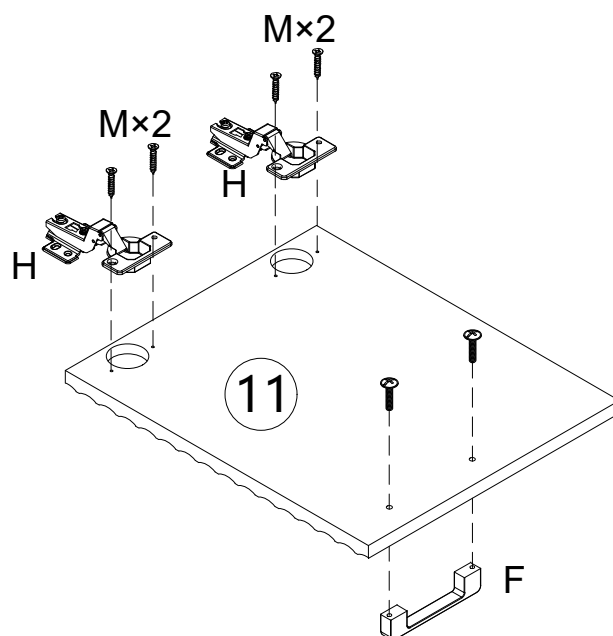


## Step 2 9

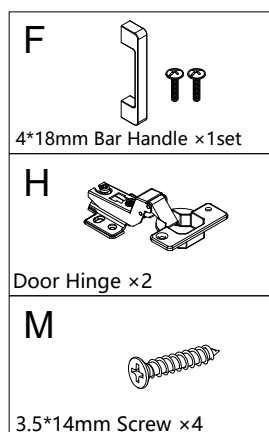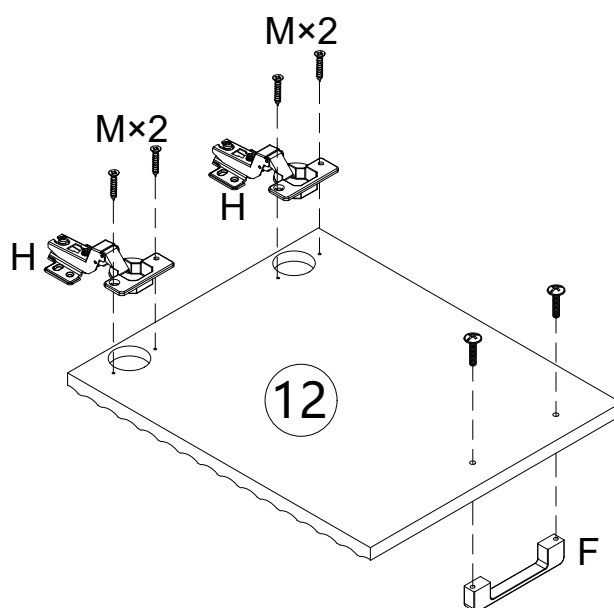


# Assembly Instructions


## Step 3 0

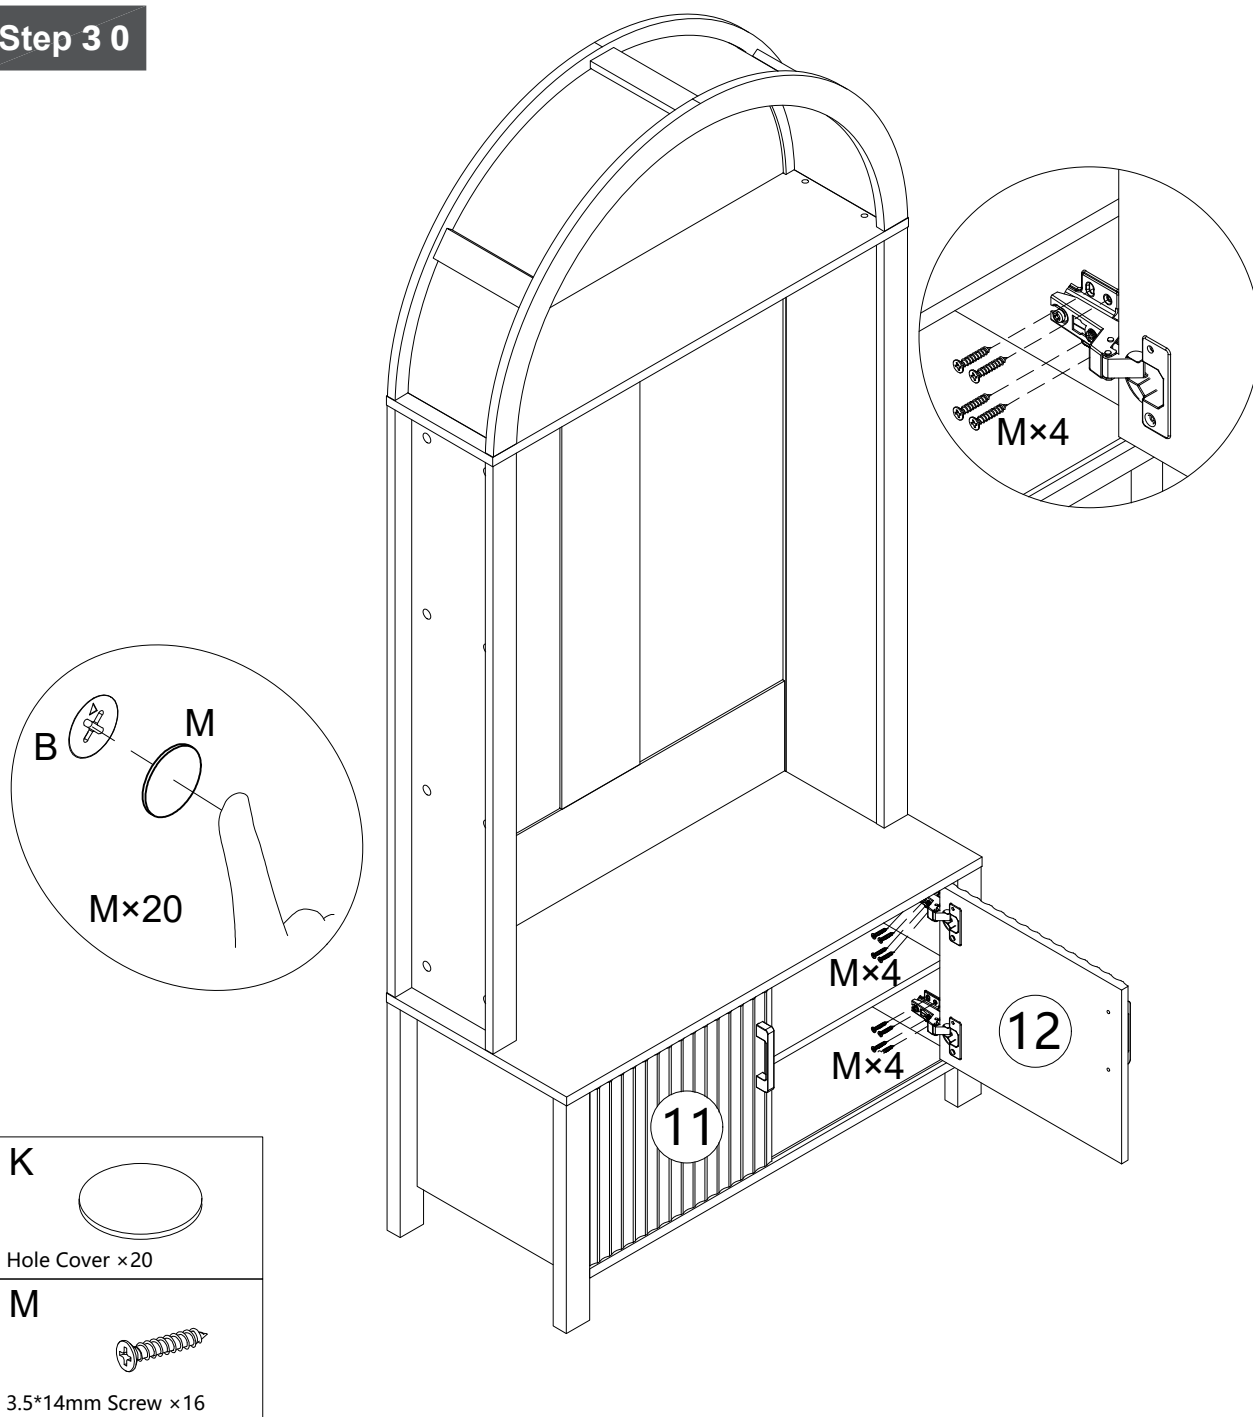


If the door can't close, please adjust the hinges as below.

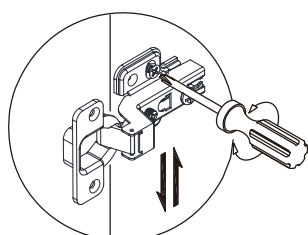

This is used to adjust the door panel in the up and down direction.

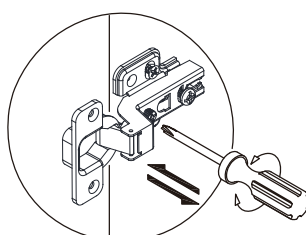


This is used to adjust the door panel in the left and right direction.

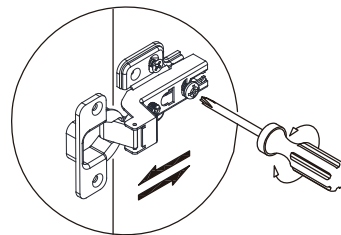

This is used to adjust the door panel in the front and rear.

# Assembly Instructions

## Step 3 1

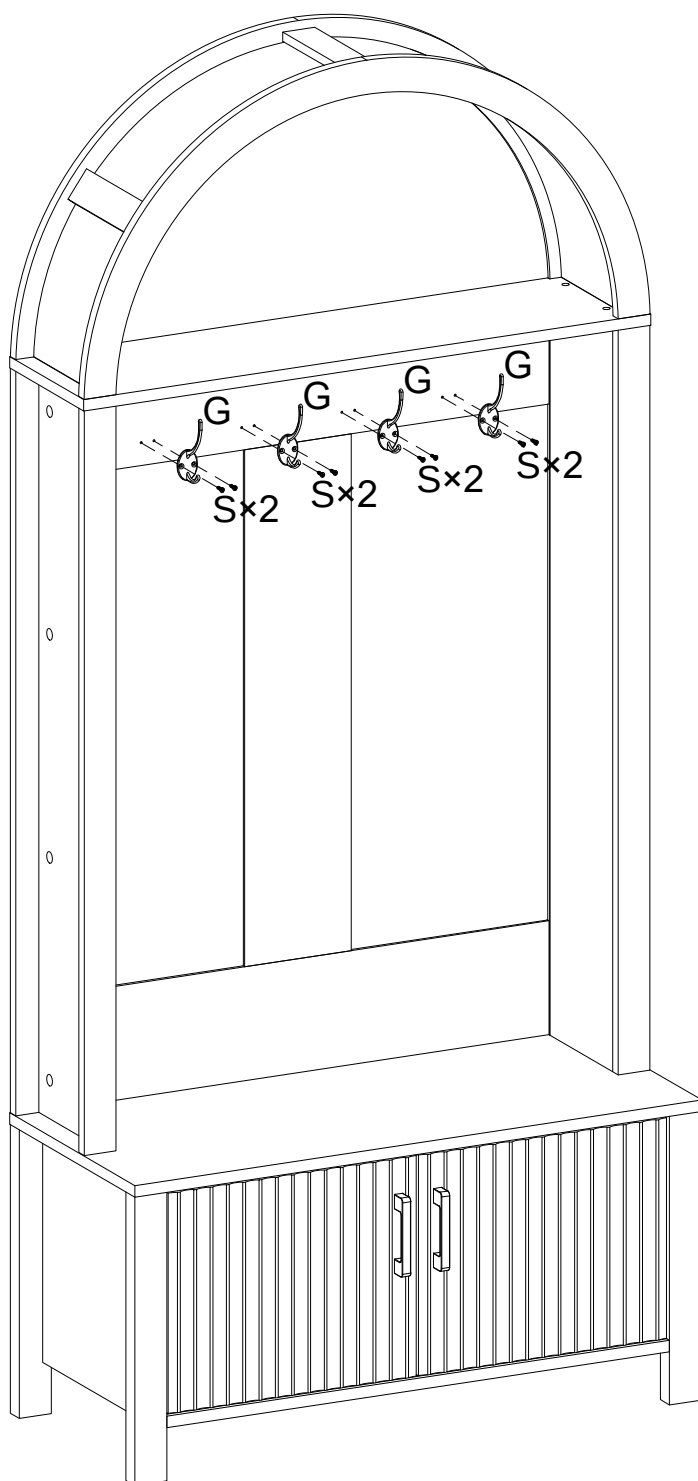

**G**



Coat Hook ×4


**S**





3.5\*14mm Screw ×8

# Assembly Instructions


## Step 3 2

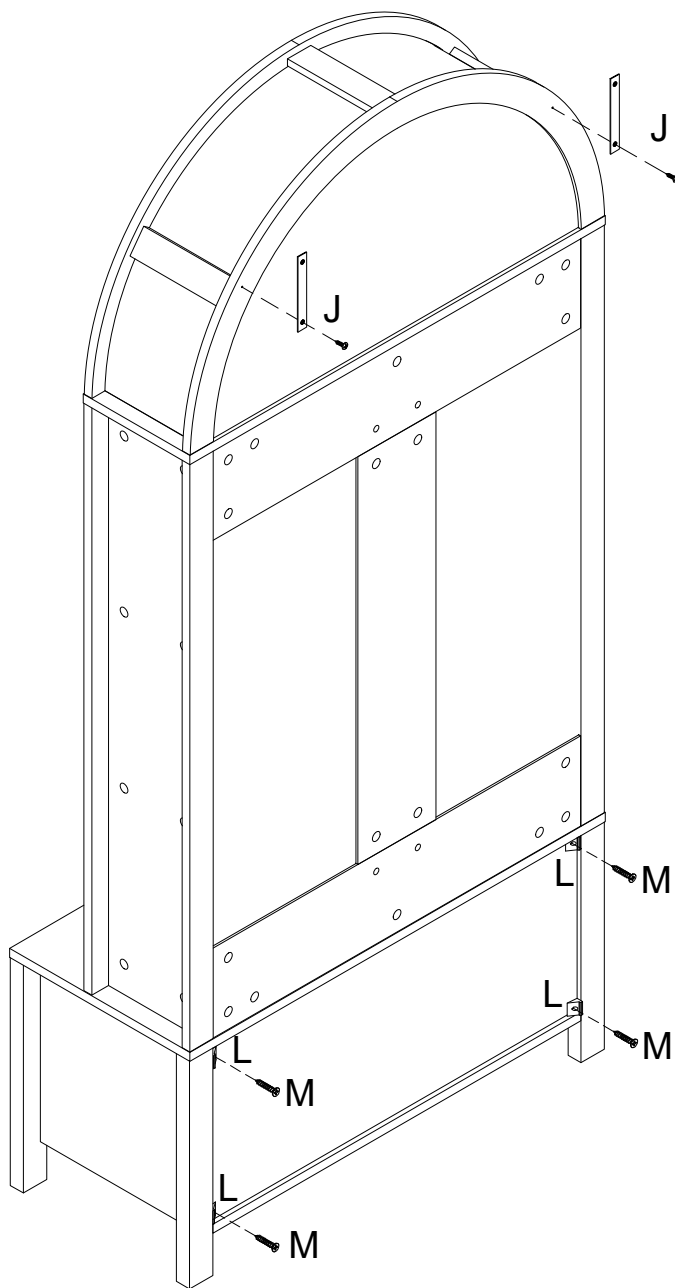

|                       |                                                                                     |
|-----------------------|-------------------------------------------------------------------------------------|
| J                     |  |
| Anti-tip Device ×2set |                                                                                     |
| L                     |  |
| Back Panel Clip ×4    |                                                                                     |
| M                     |  |
| 3.5*14mm Screw ×4     |                                                                                     |

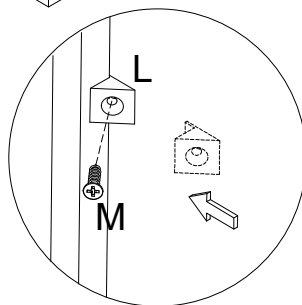

1

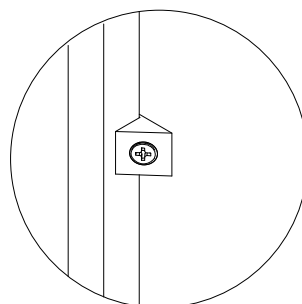

2

# Assembly Instructions

## Finish

