


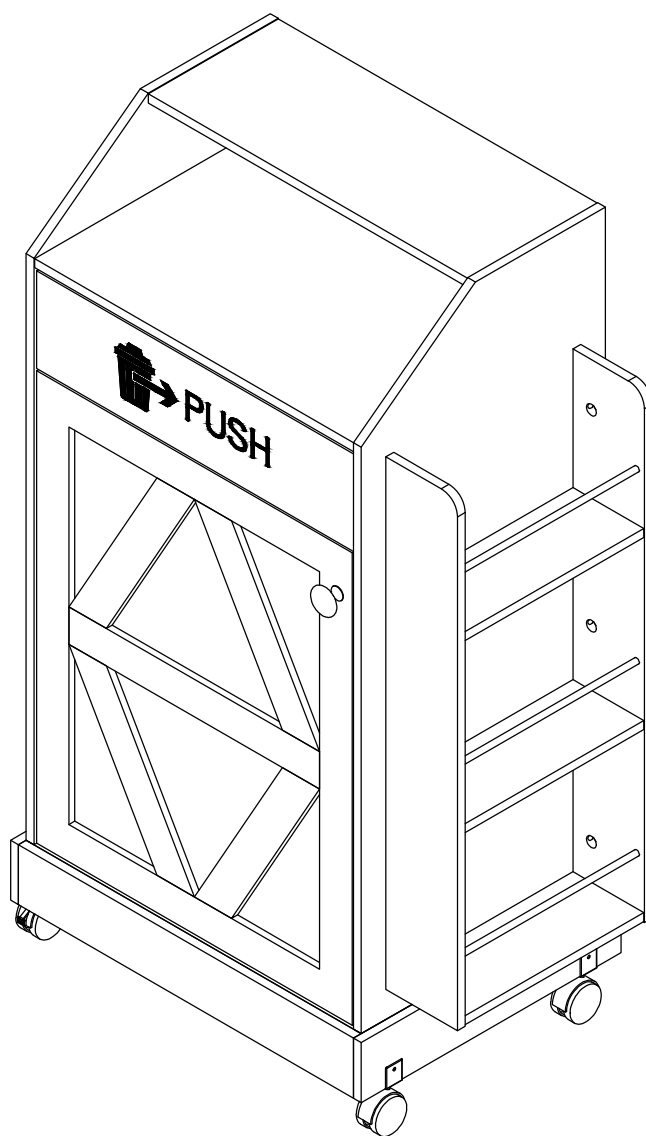



ASSEMBLY INSTRUCTIONS

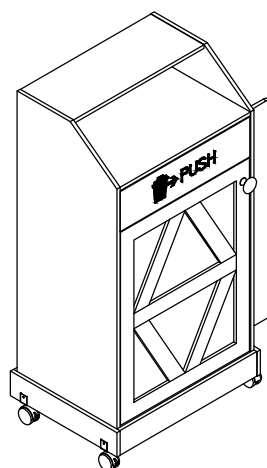

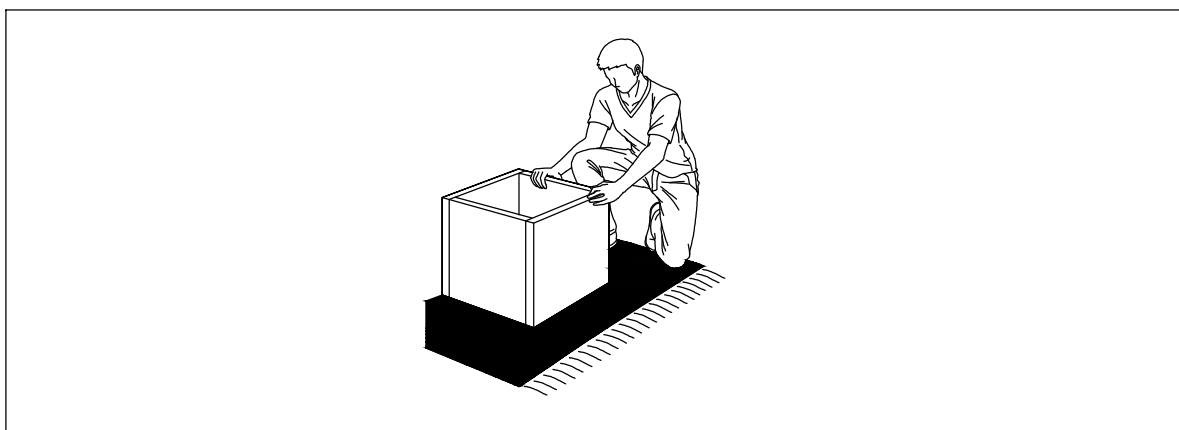

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

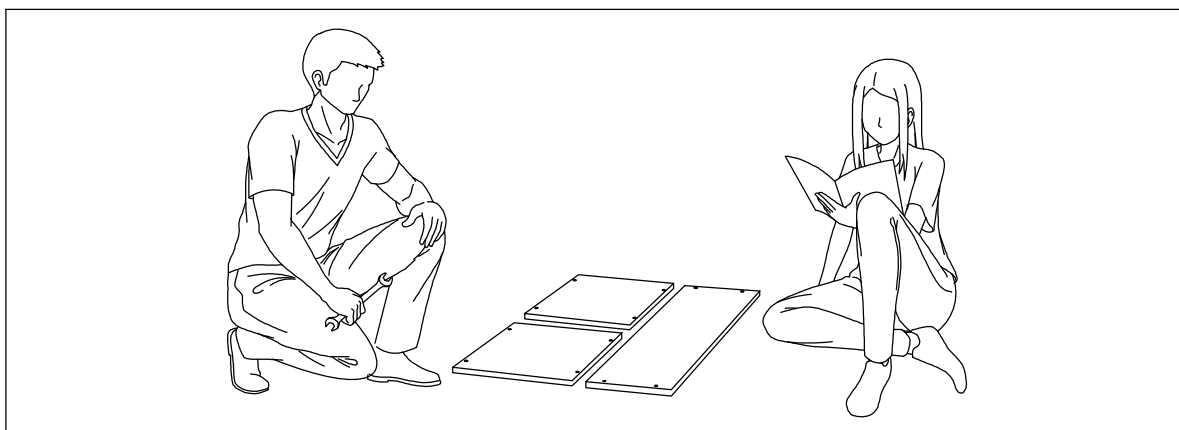


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

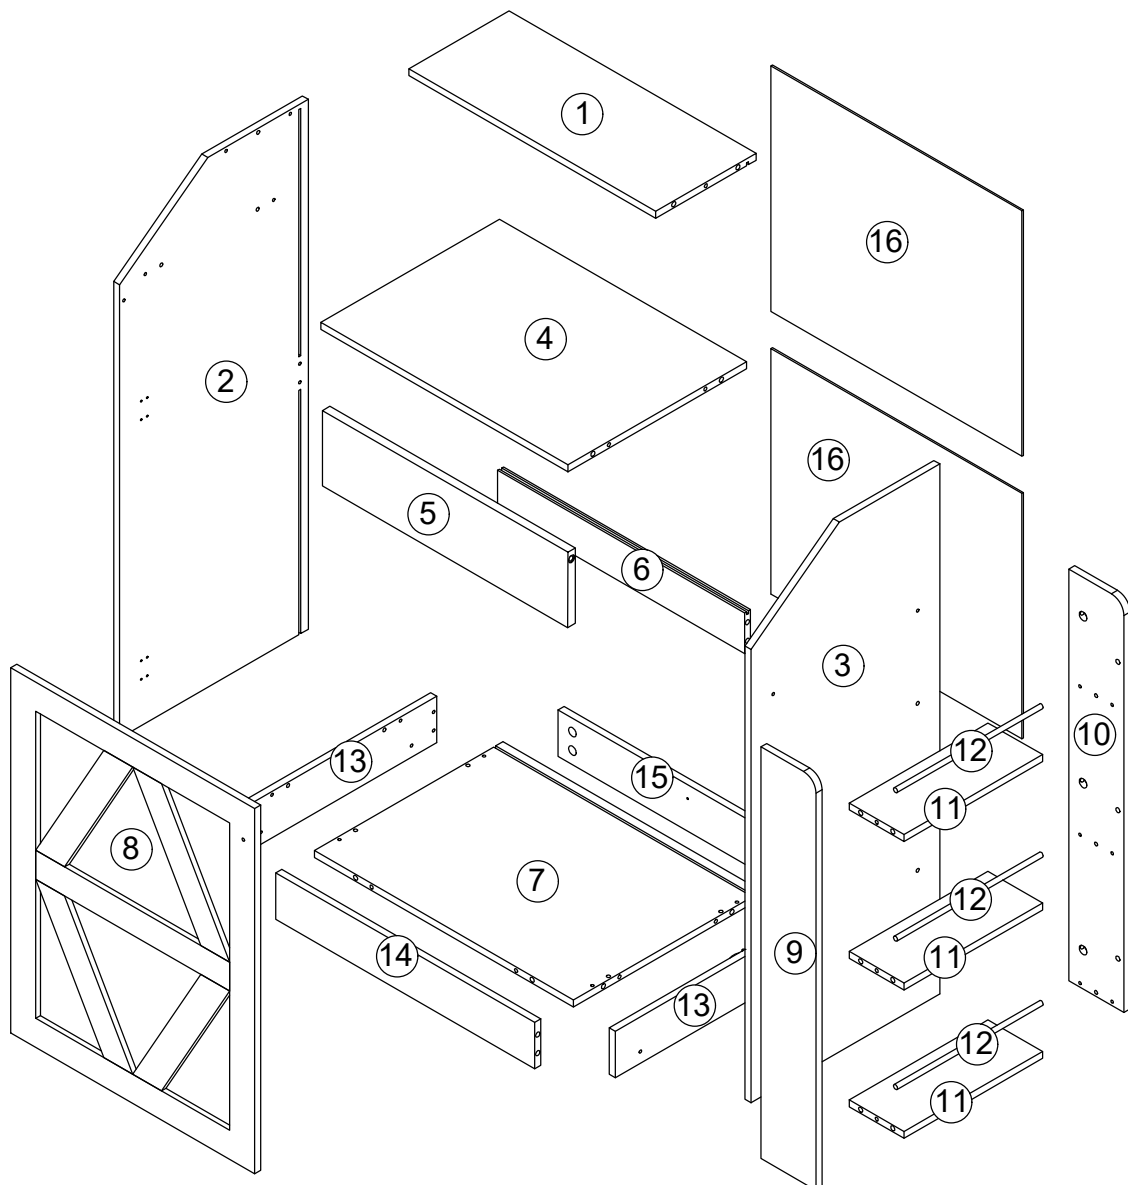


BOARD IDENTIFICATION


Not actual size

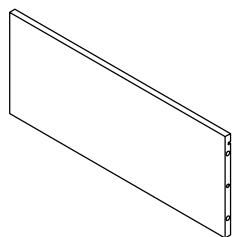


① x1




② x1




③ x1

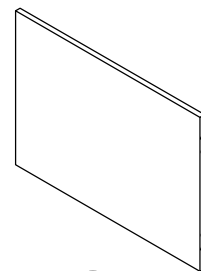


④ x1

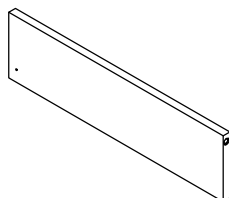


⑤ x1

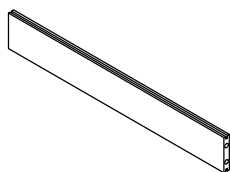

⑥ x1

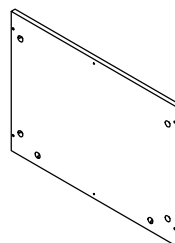

⑦ x1

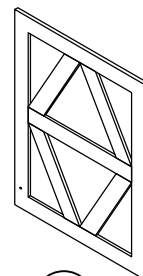


⑧ x1




⑨ x1




⑩ x1

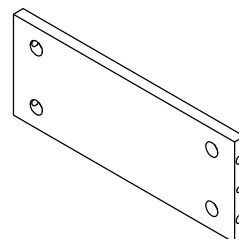


⑪ x3

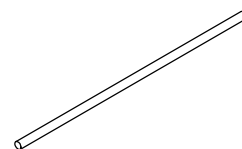


⑫ x3

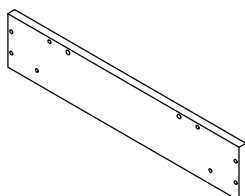


⑬ x2

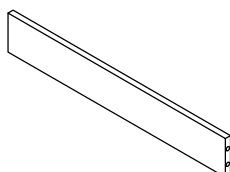

⑭ x1














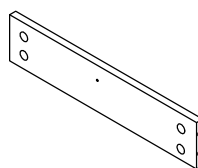


⑮ x1

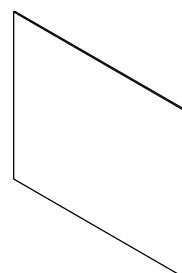


⑯ x2

HARDWARE LIST

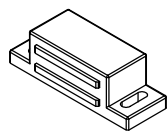
			
A	B	C	D
x44+2	x44+2	x26+2	x4+1
			
E	F	G	H
x18+2	x2	x6+1	x1
			
I	J	K	L
x1	x8+2	x1	x2
			
M	N	O	P
x2	x2	x2	x2
			
Q	R	S	T
x4+1	x4+1	x1	x1
			
U			
x1			

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

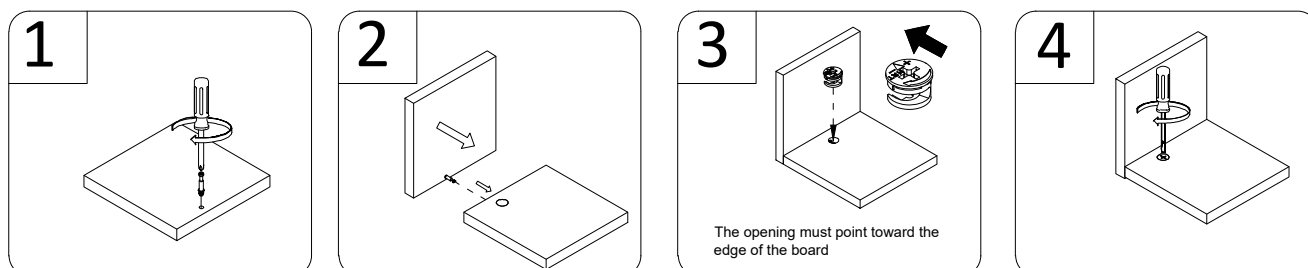


STEP 1

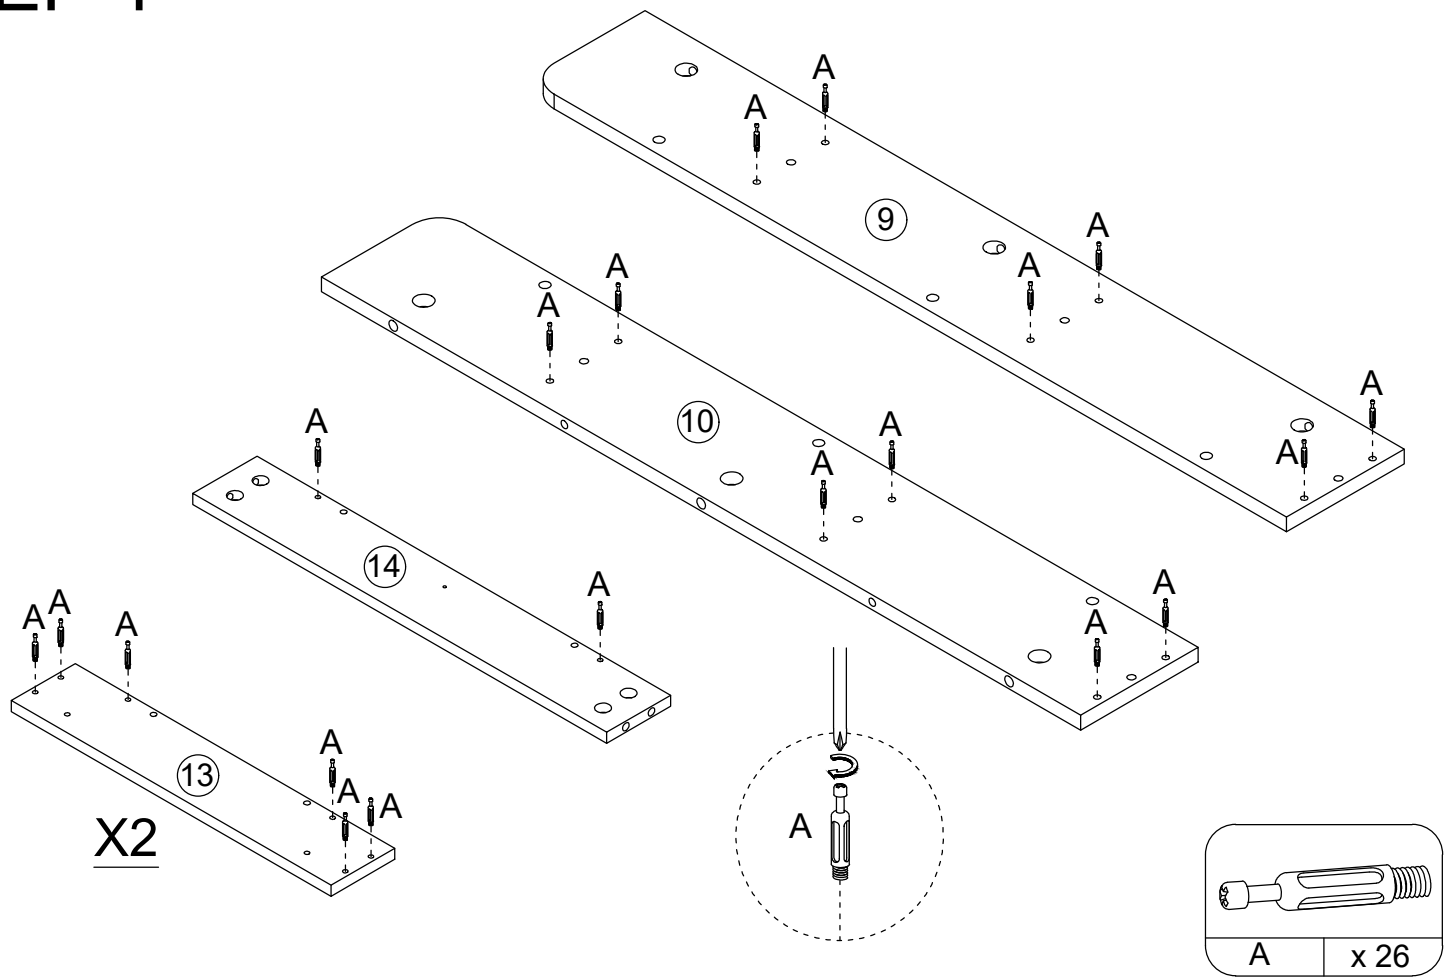


STEP 2

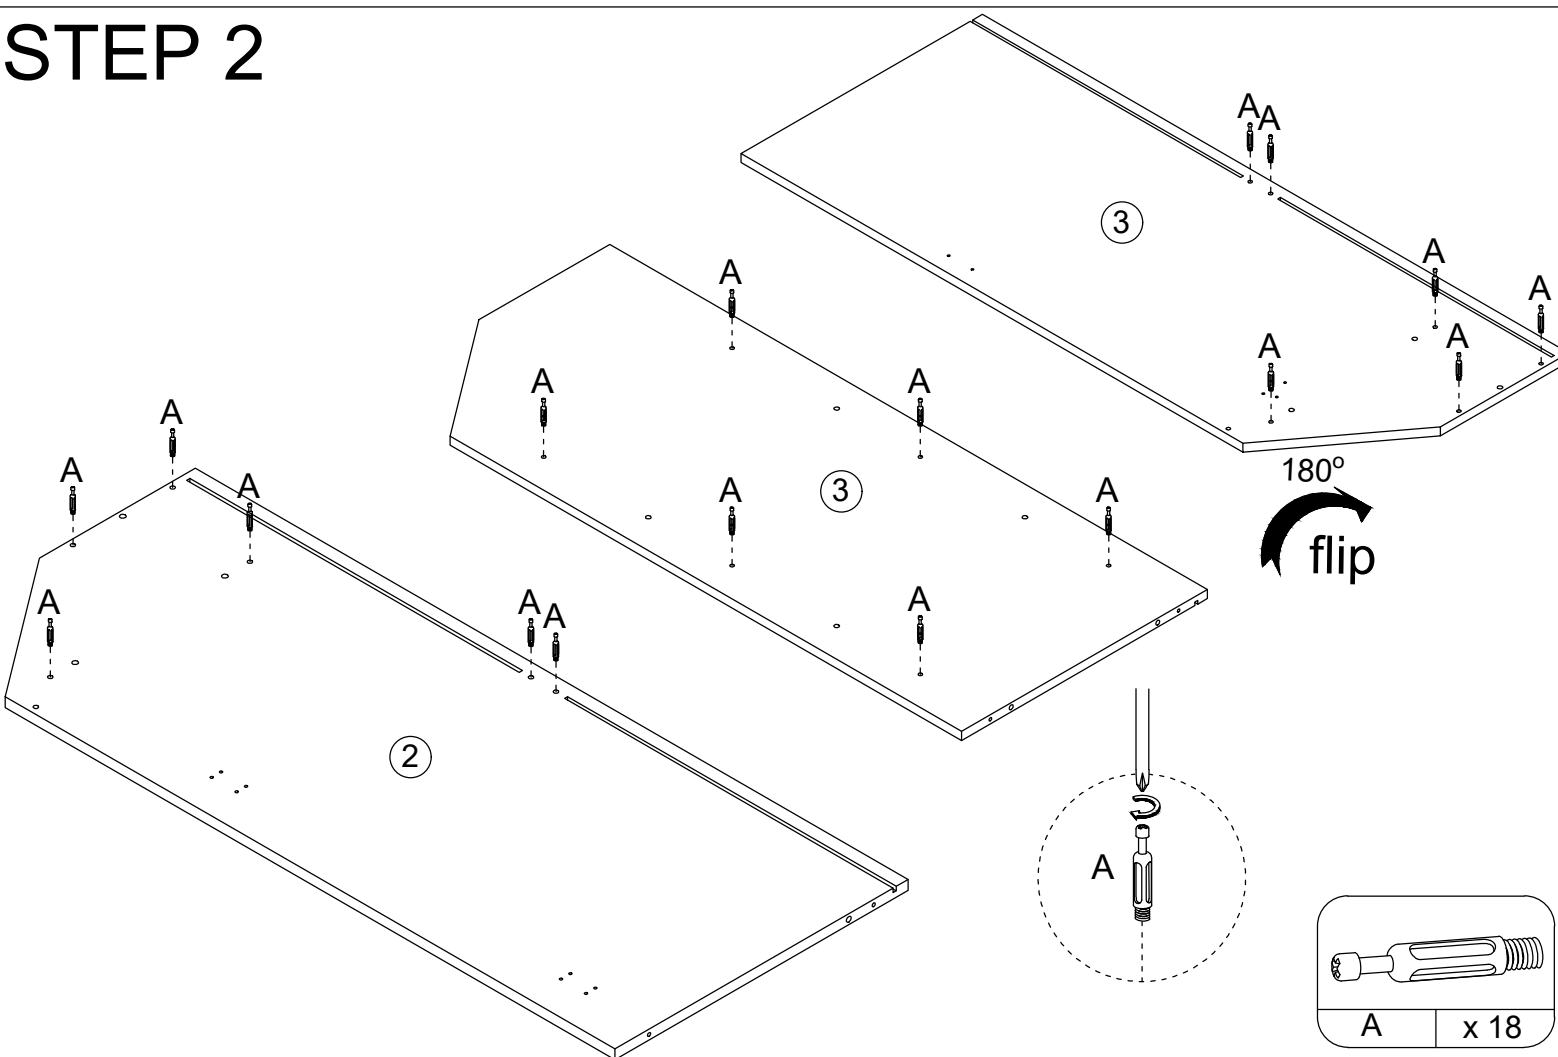


STEP 3

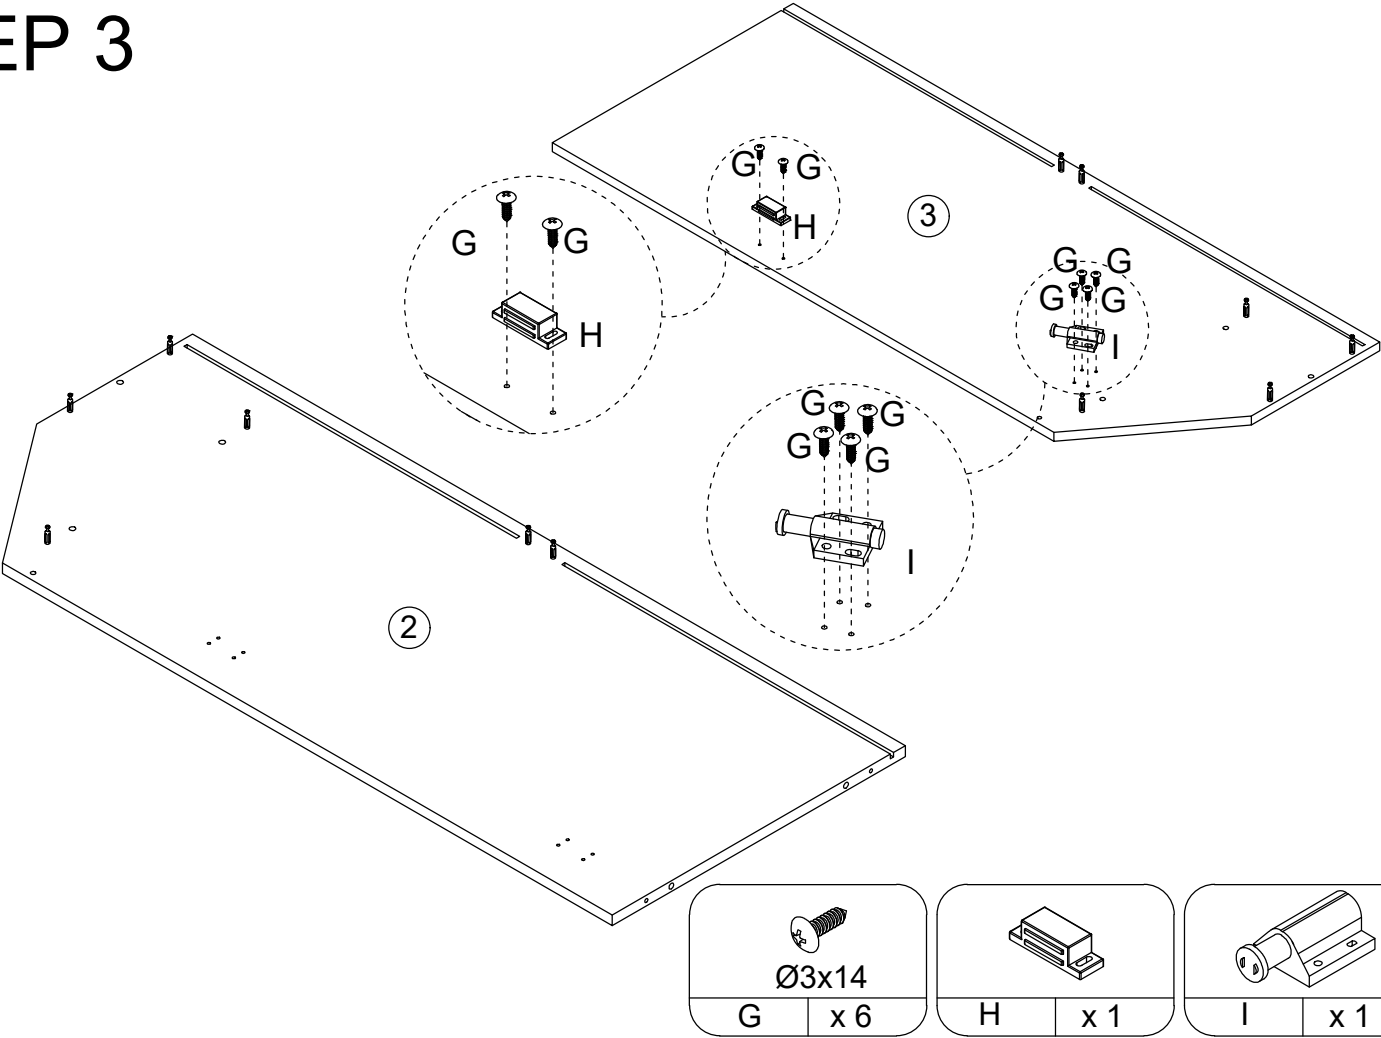


STEP 4

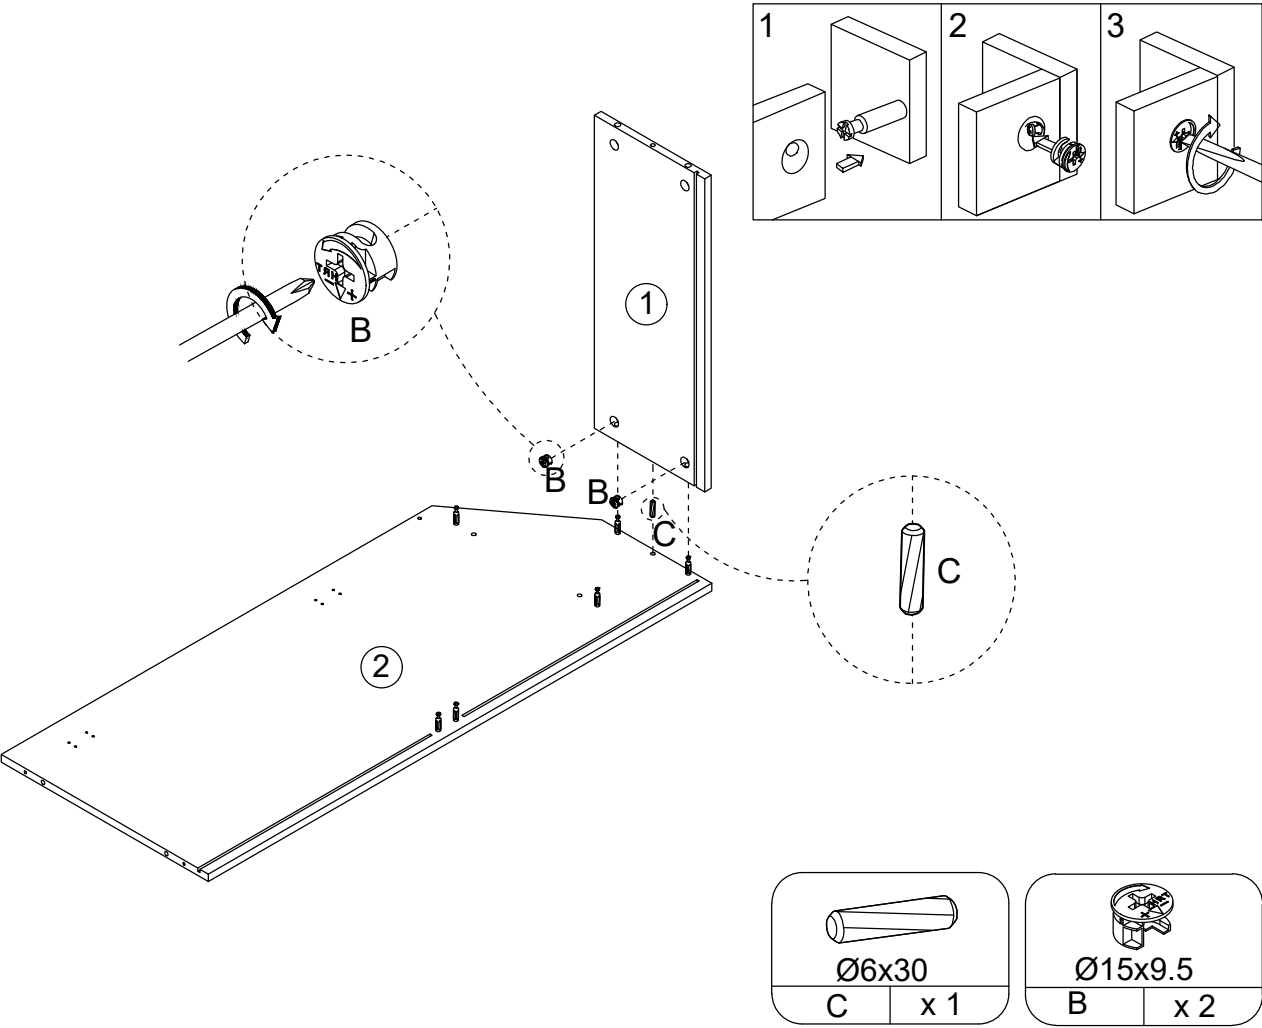


STEP 5

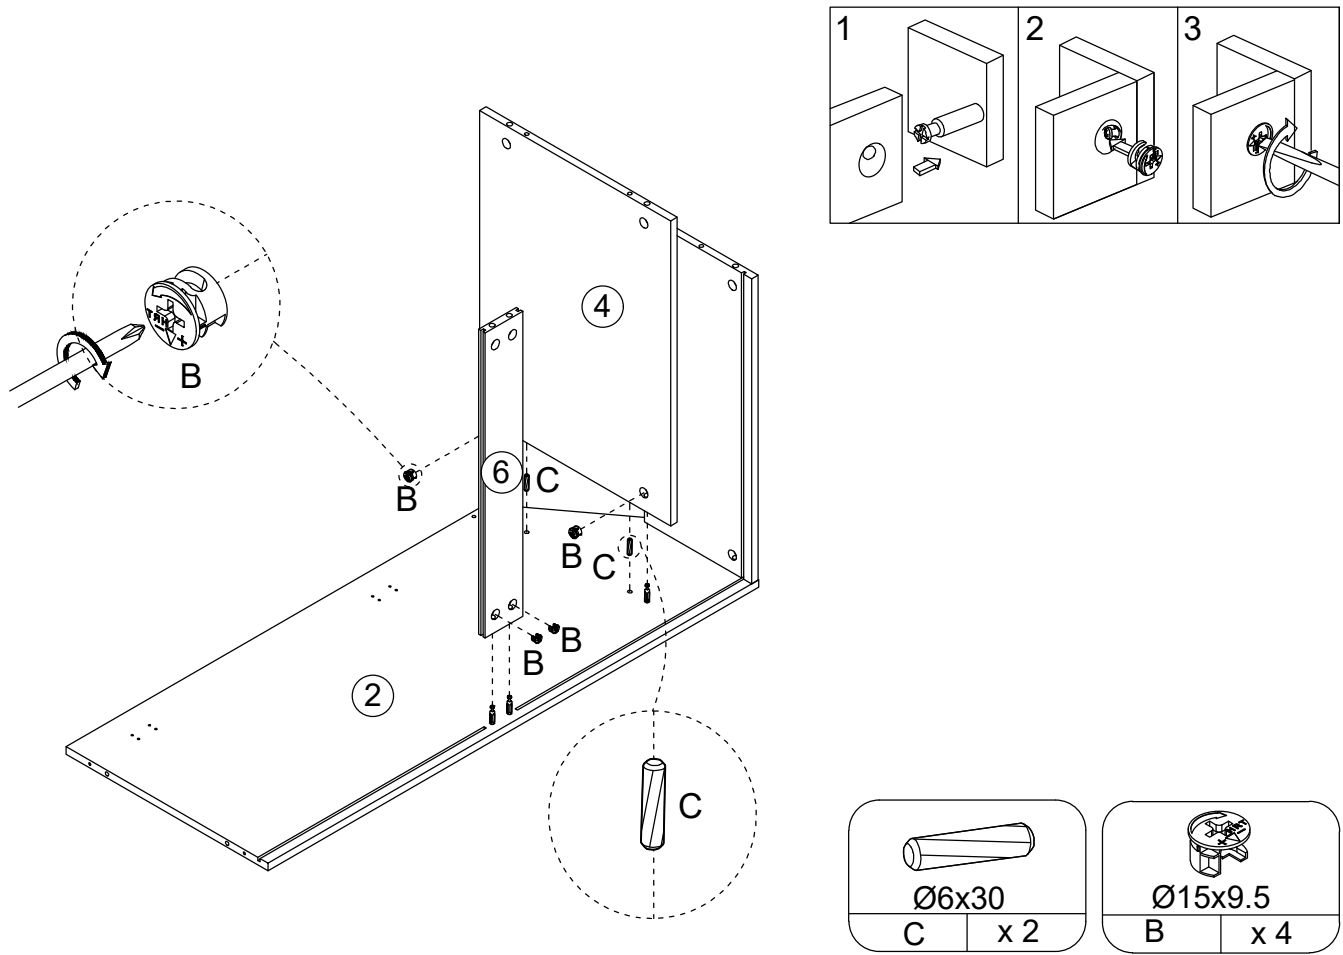


STEP 6

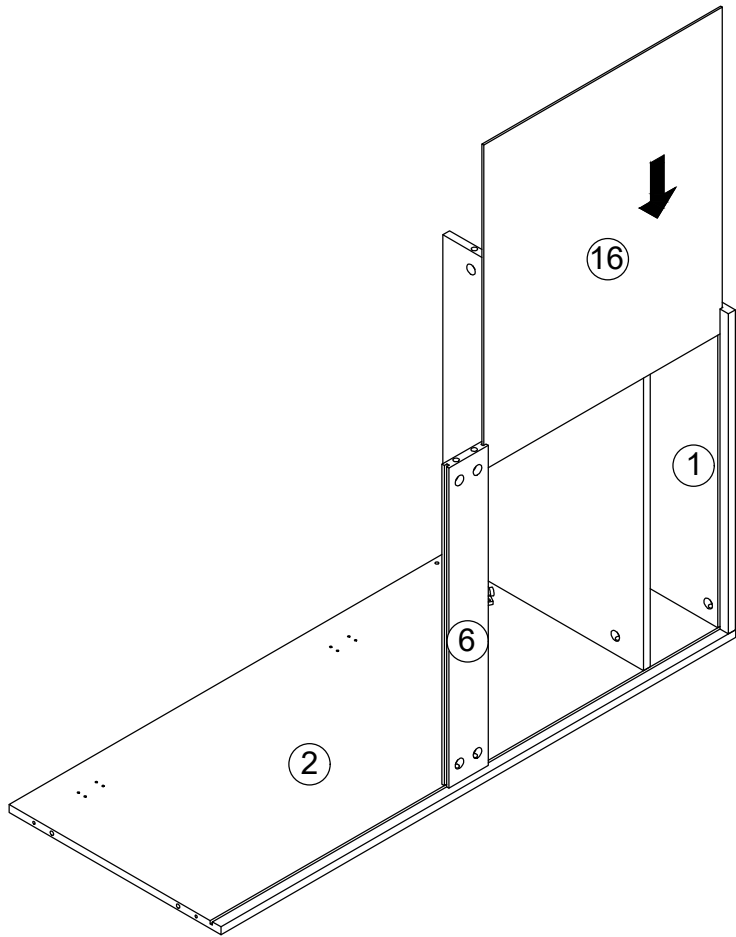


STEP 7

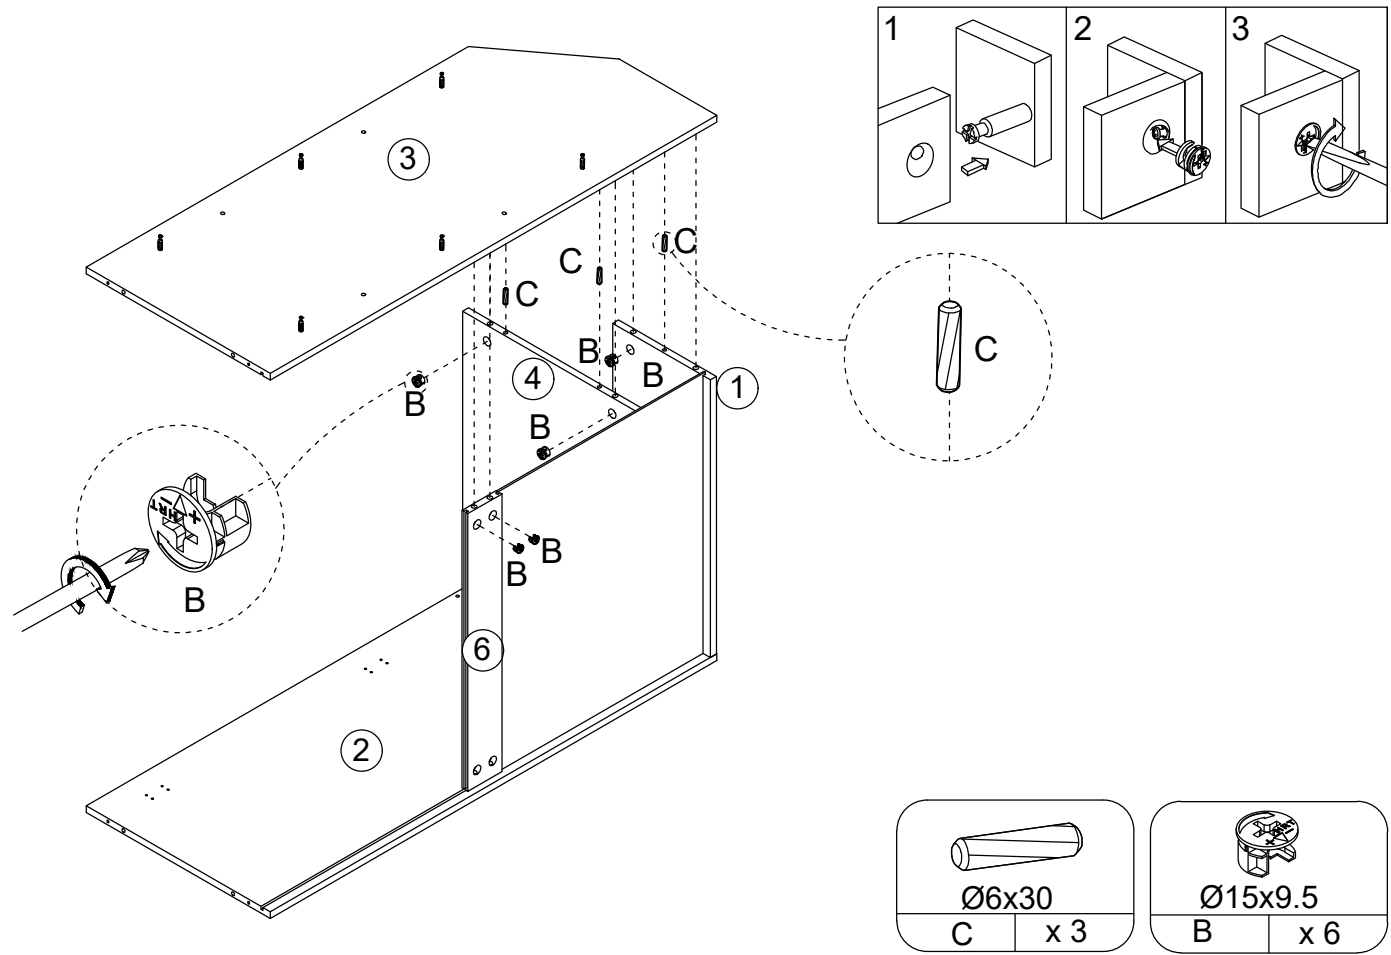


STEP 8

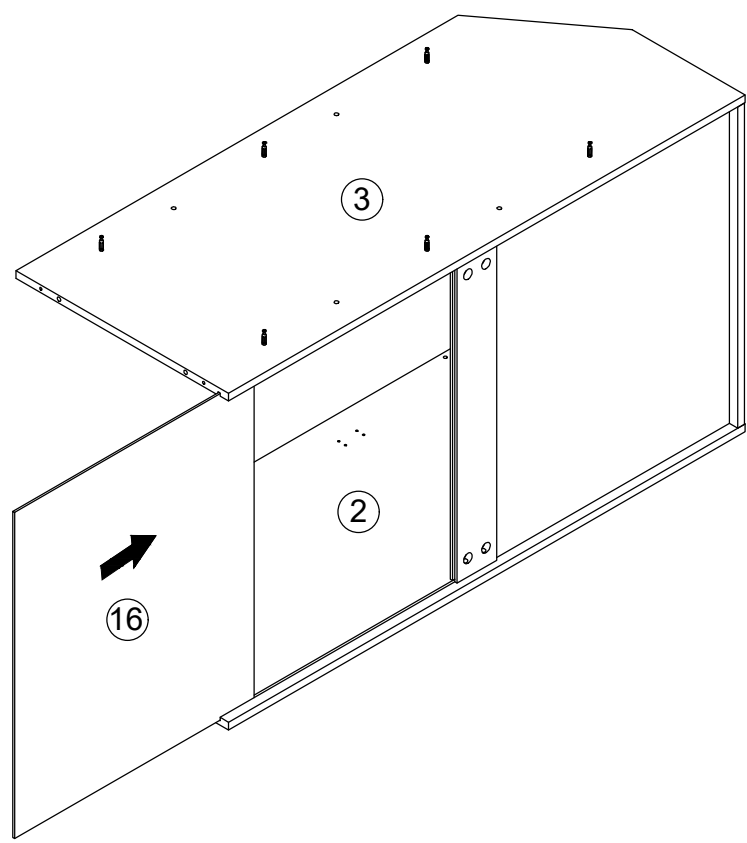


STEP 9

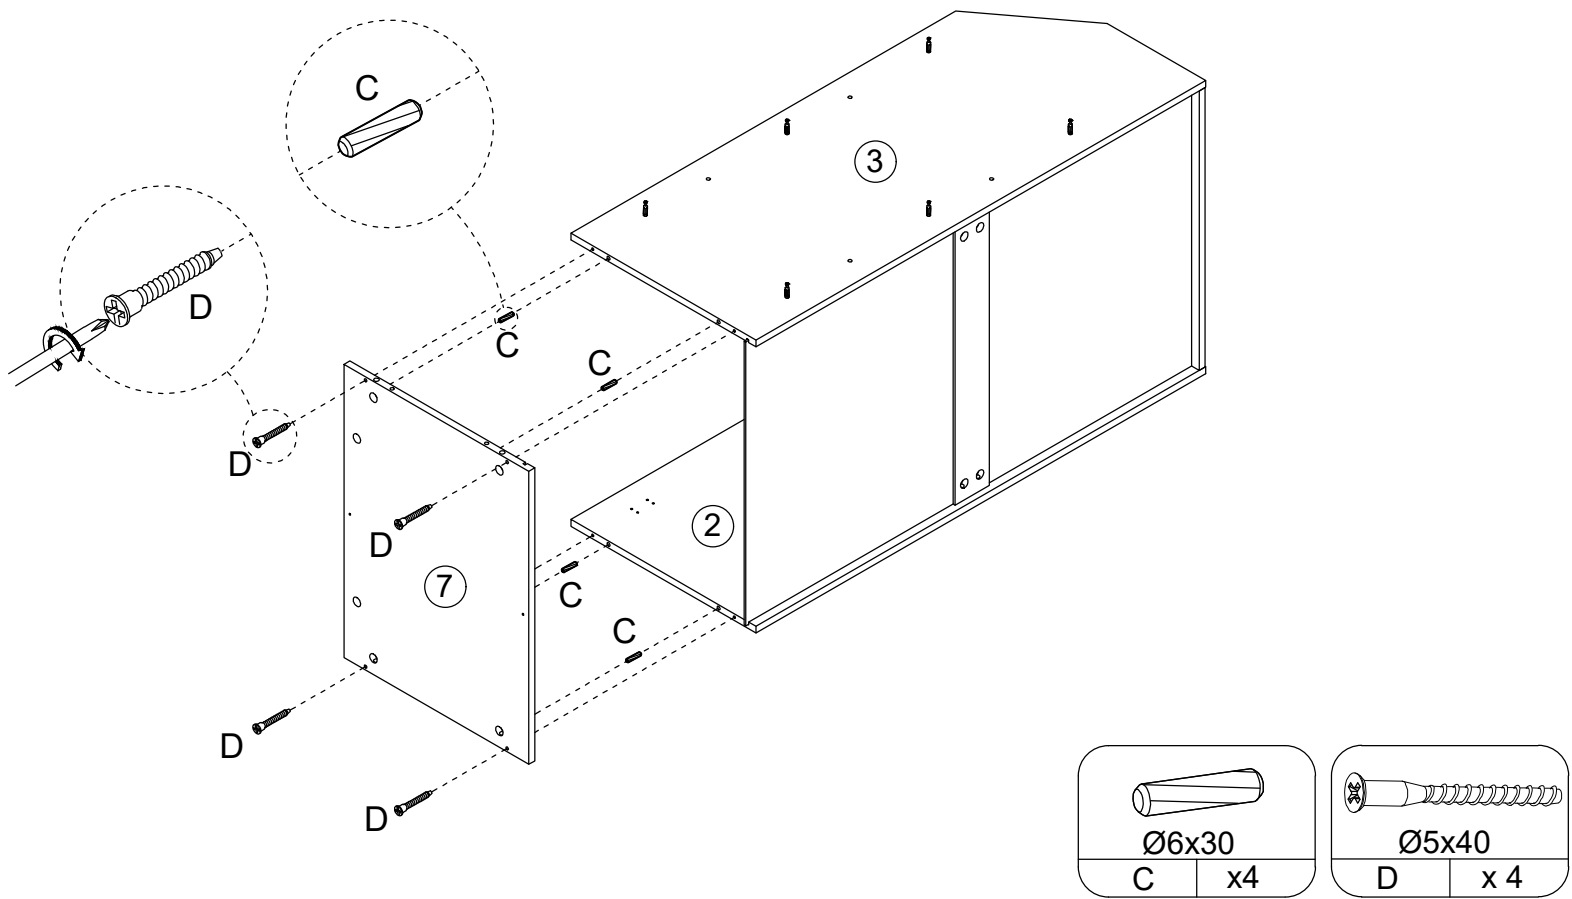


STEP 10

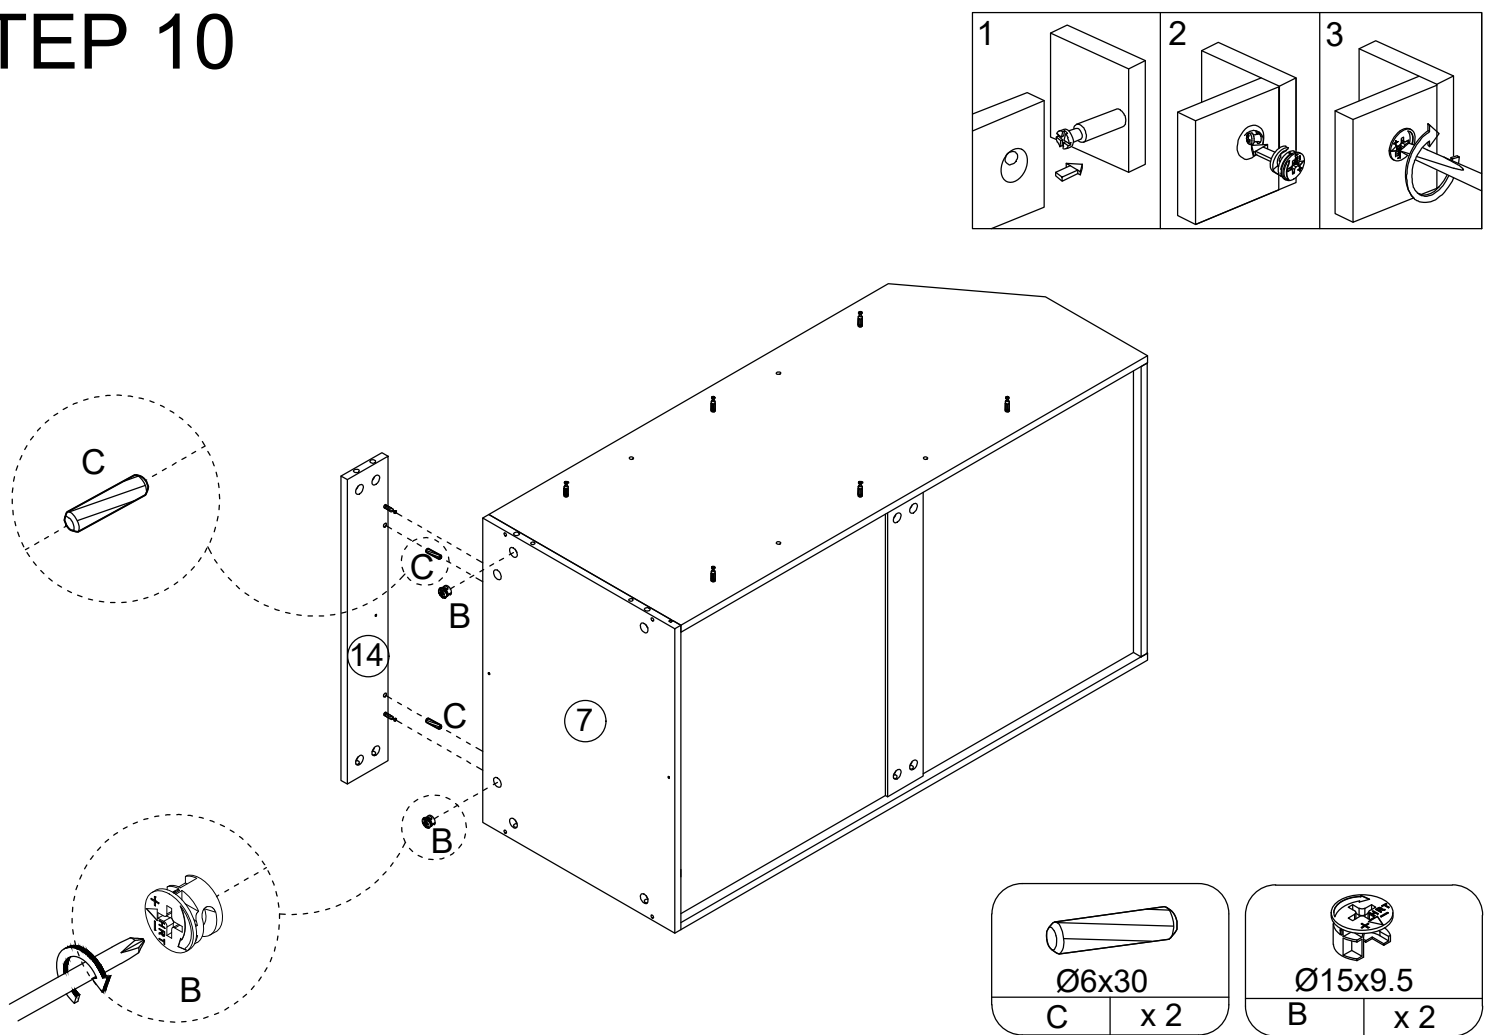


STEP 11

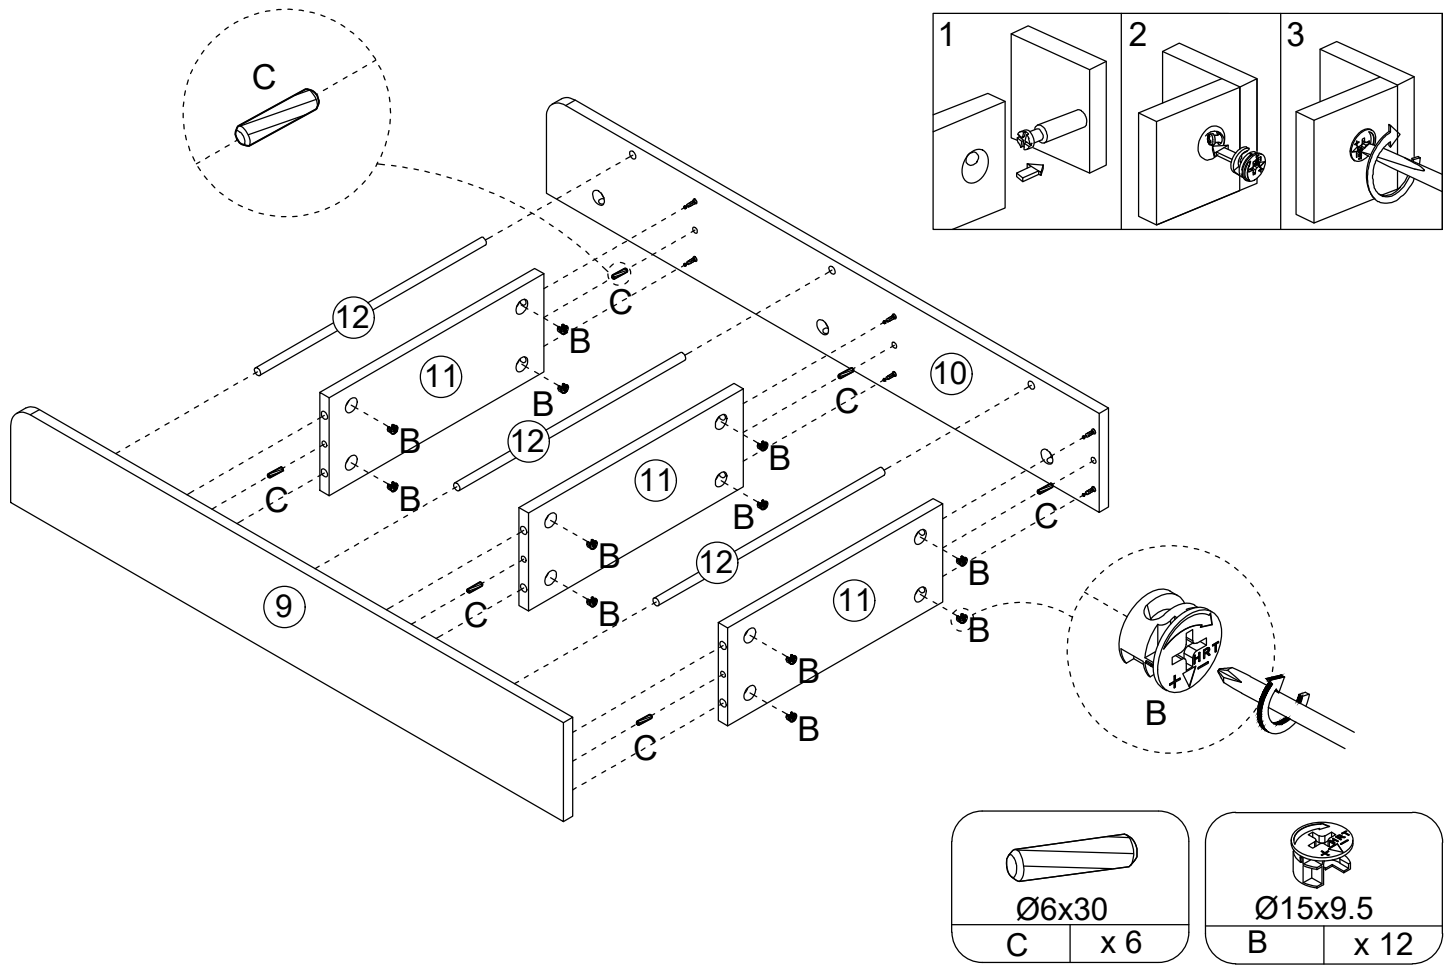


STEP 12

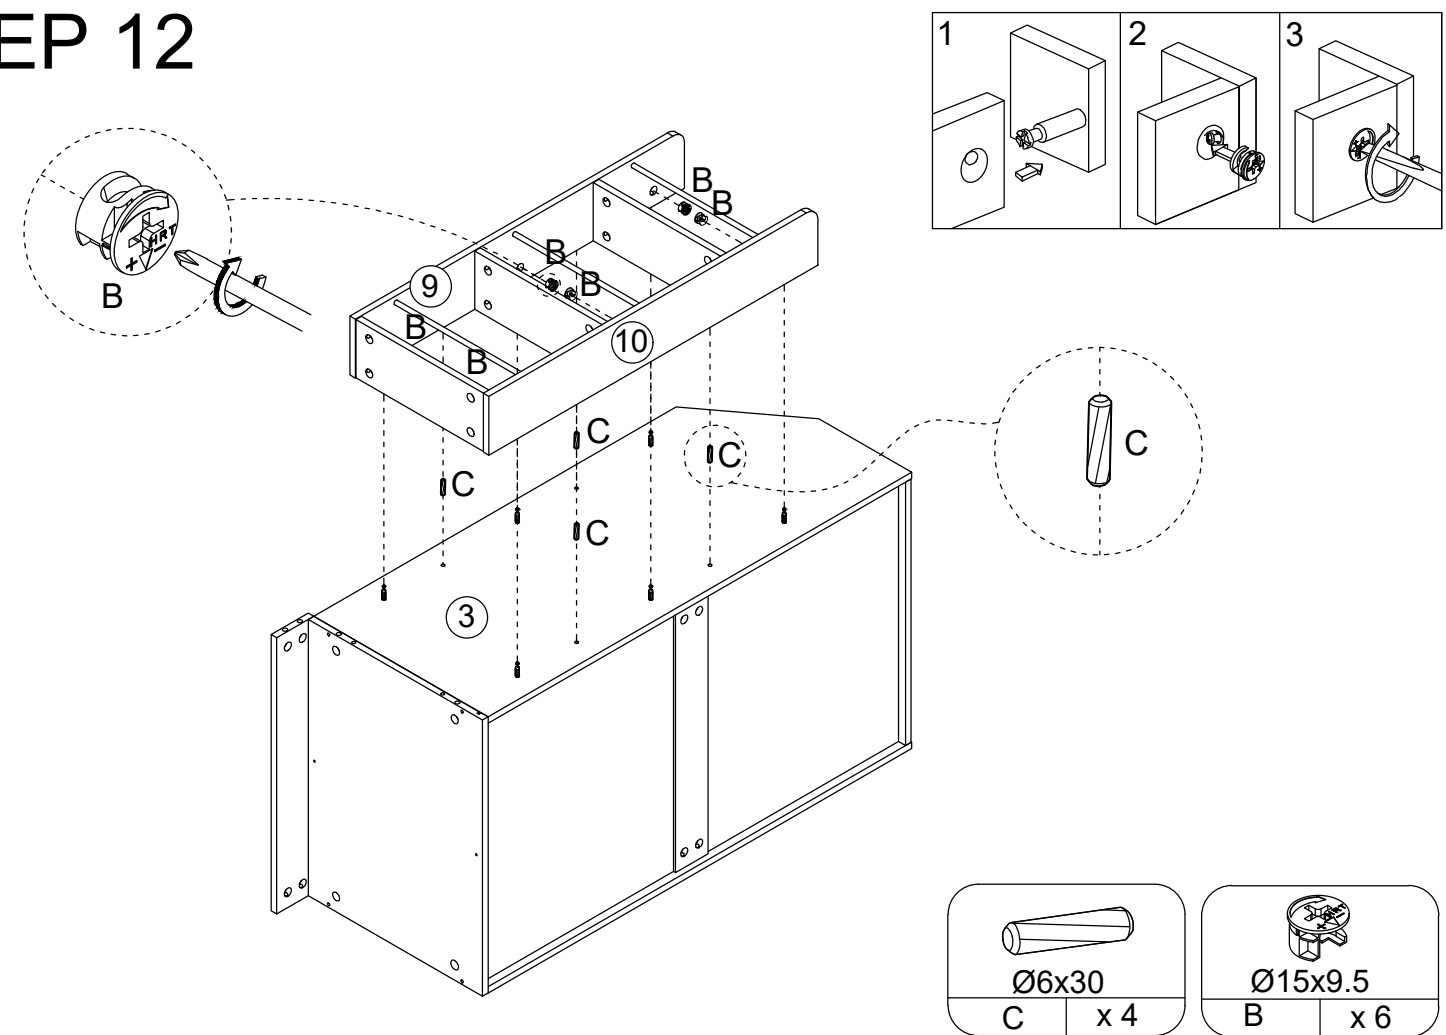




STEP 13

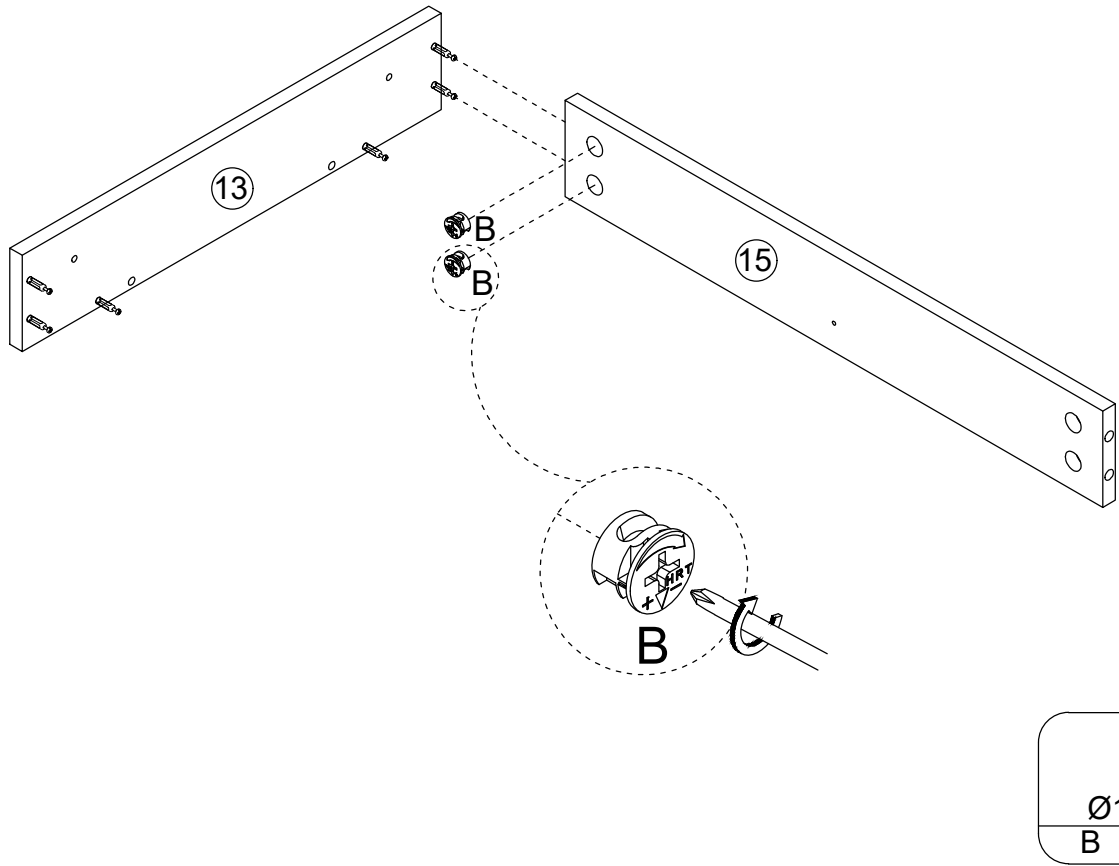





STEP 14

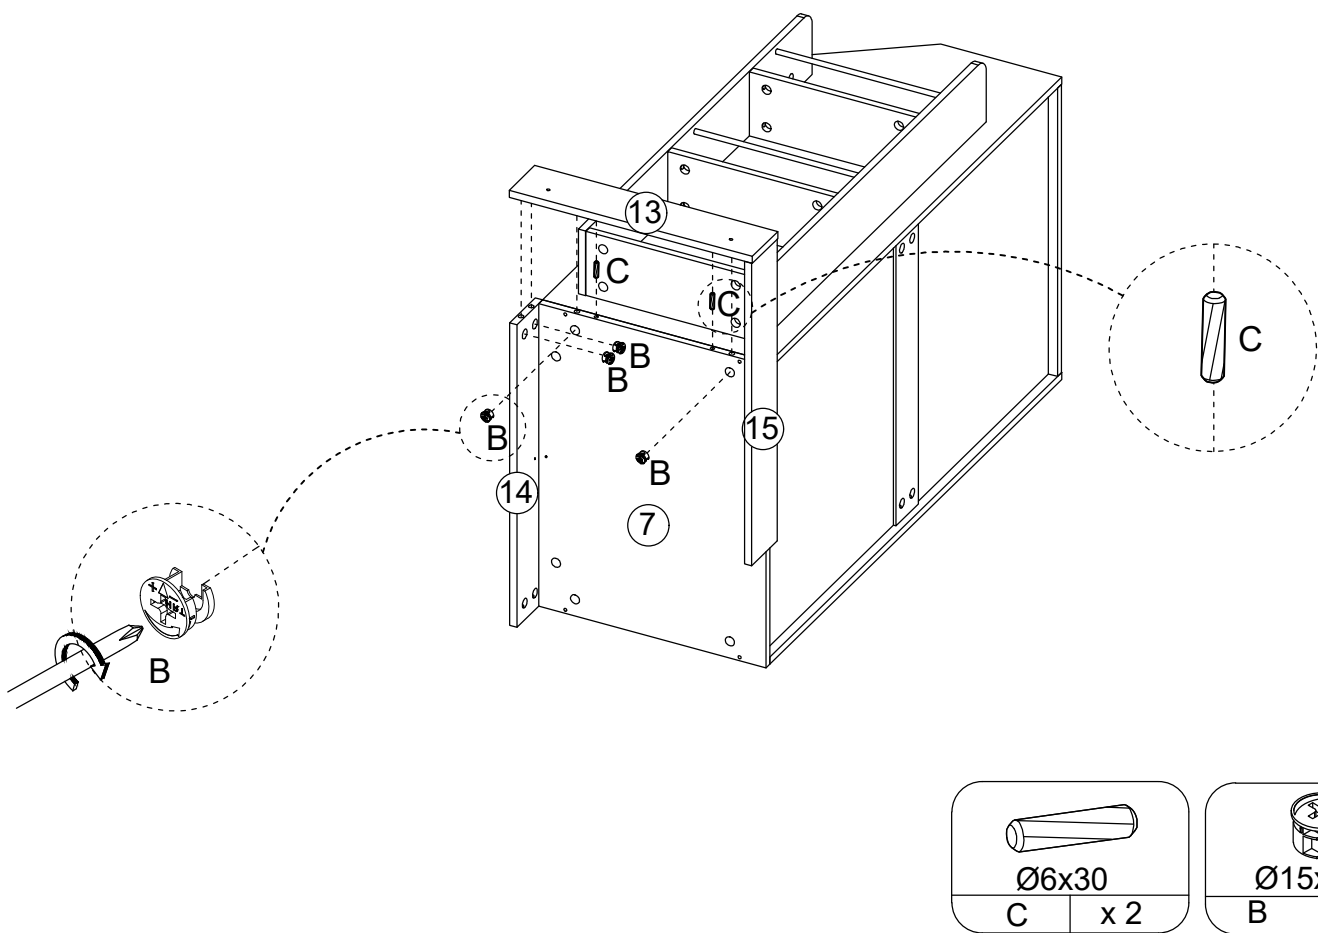


STEP 15

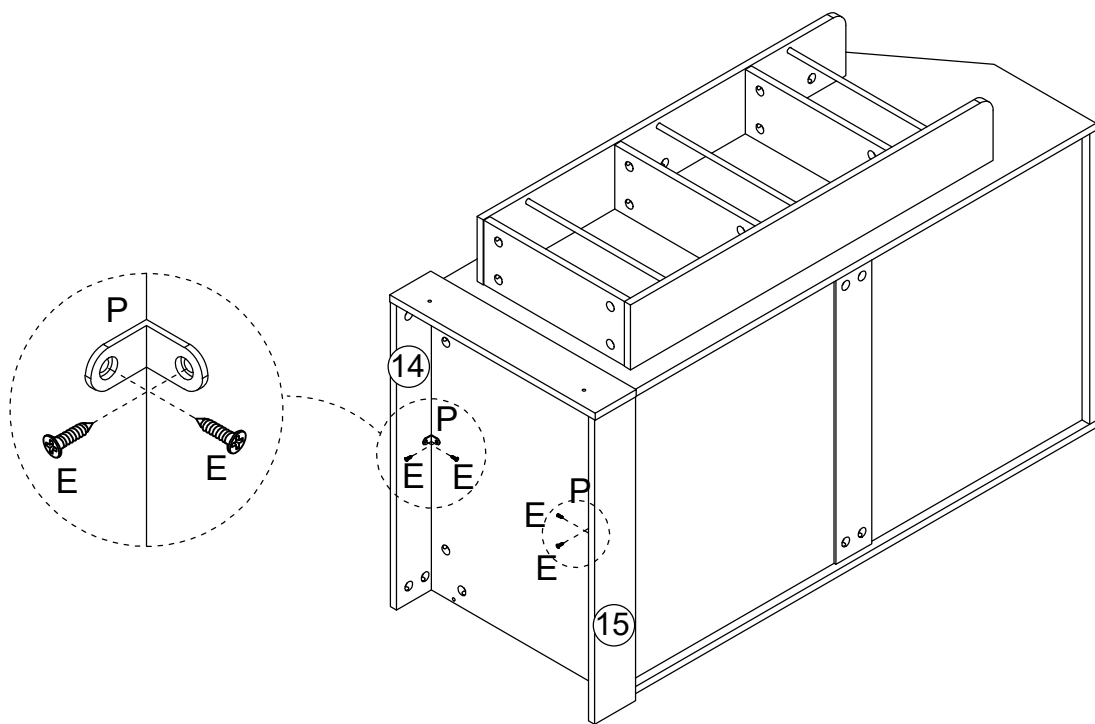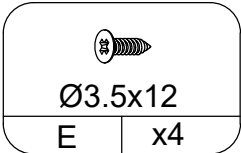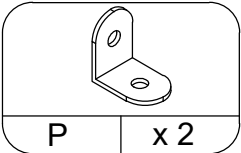


STEP 16

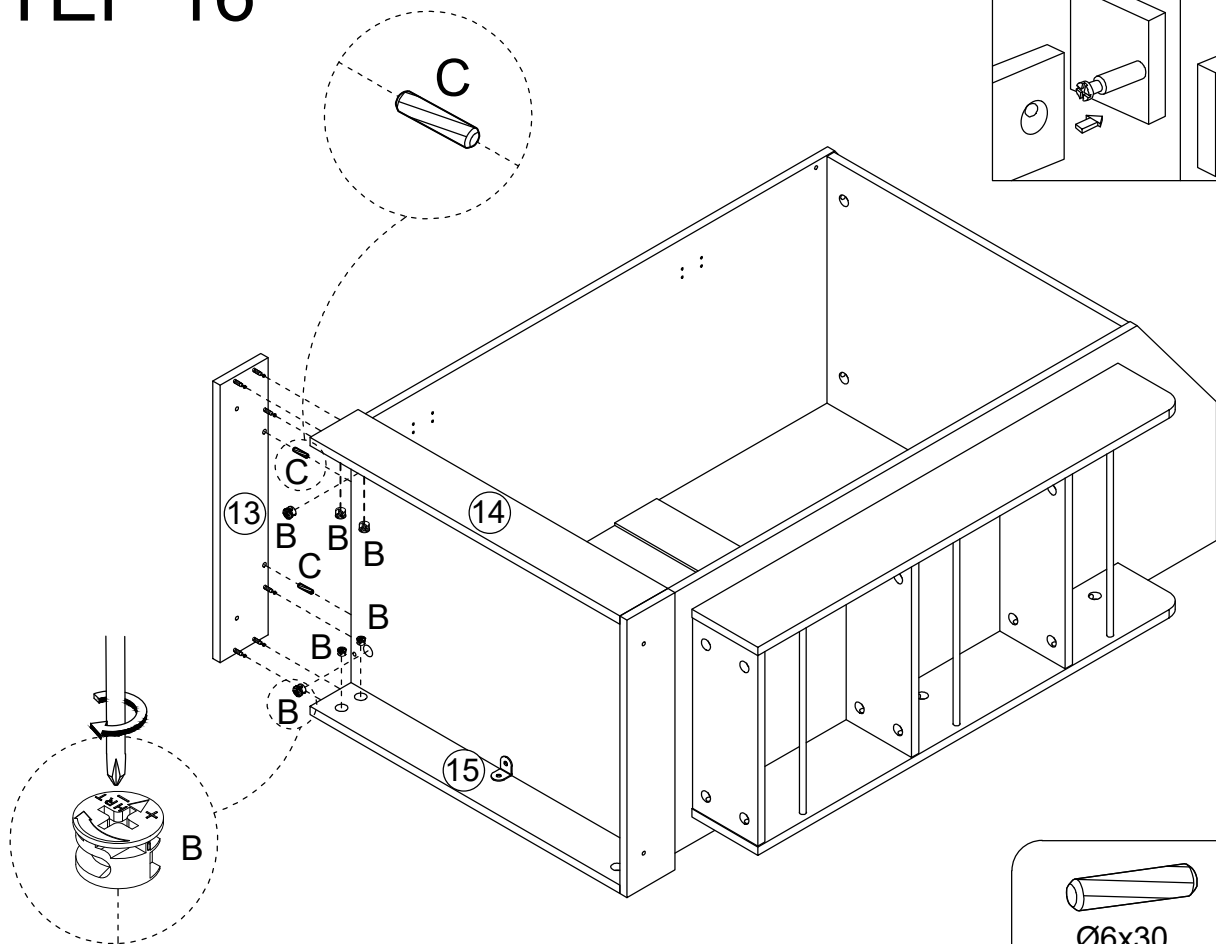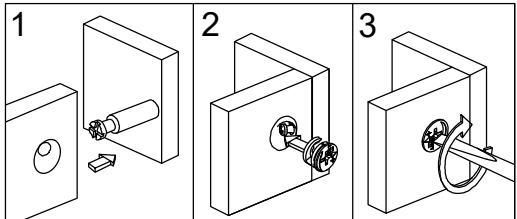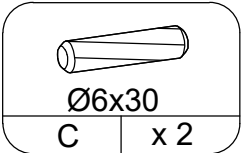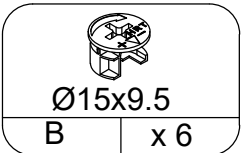



STEP 17

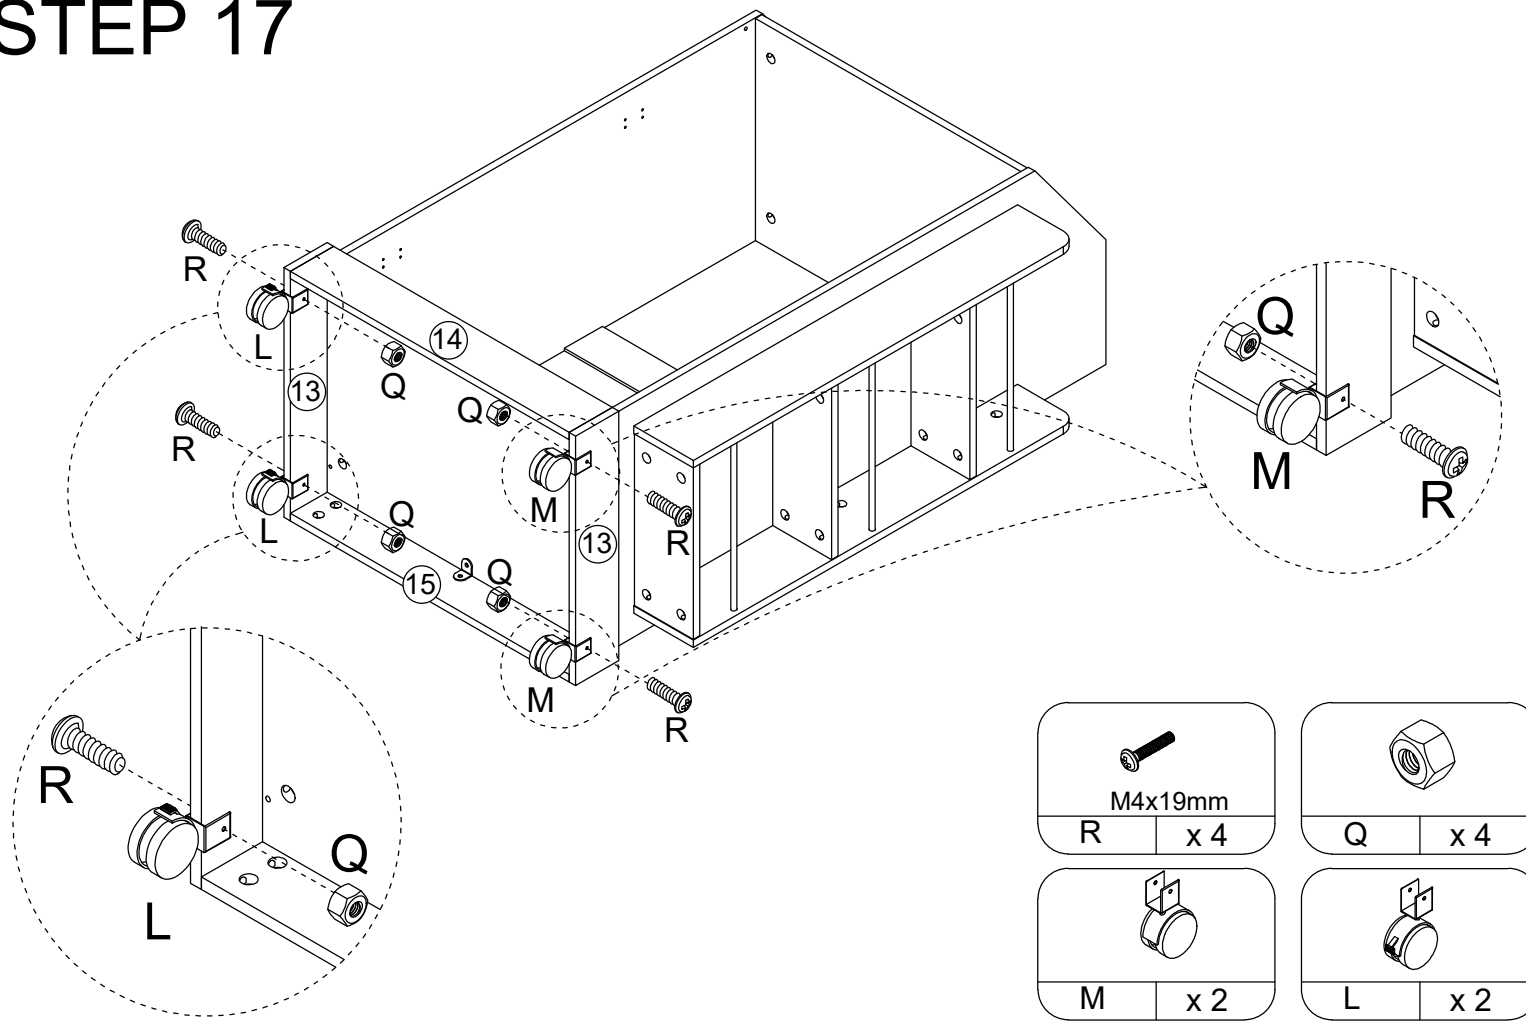


STEP 18

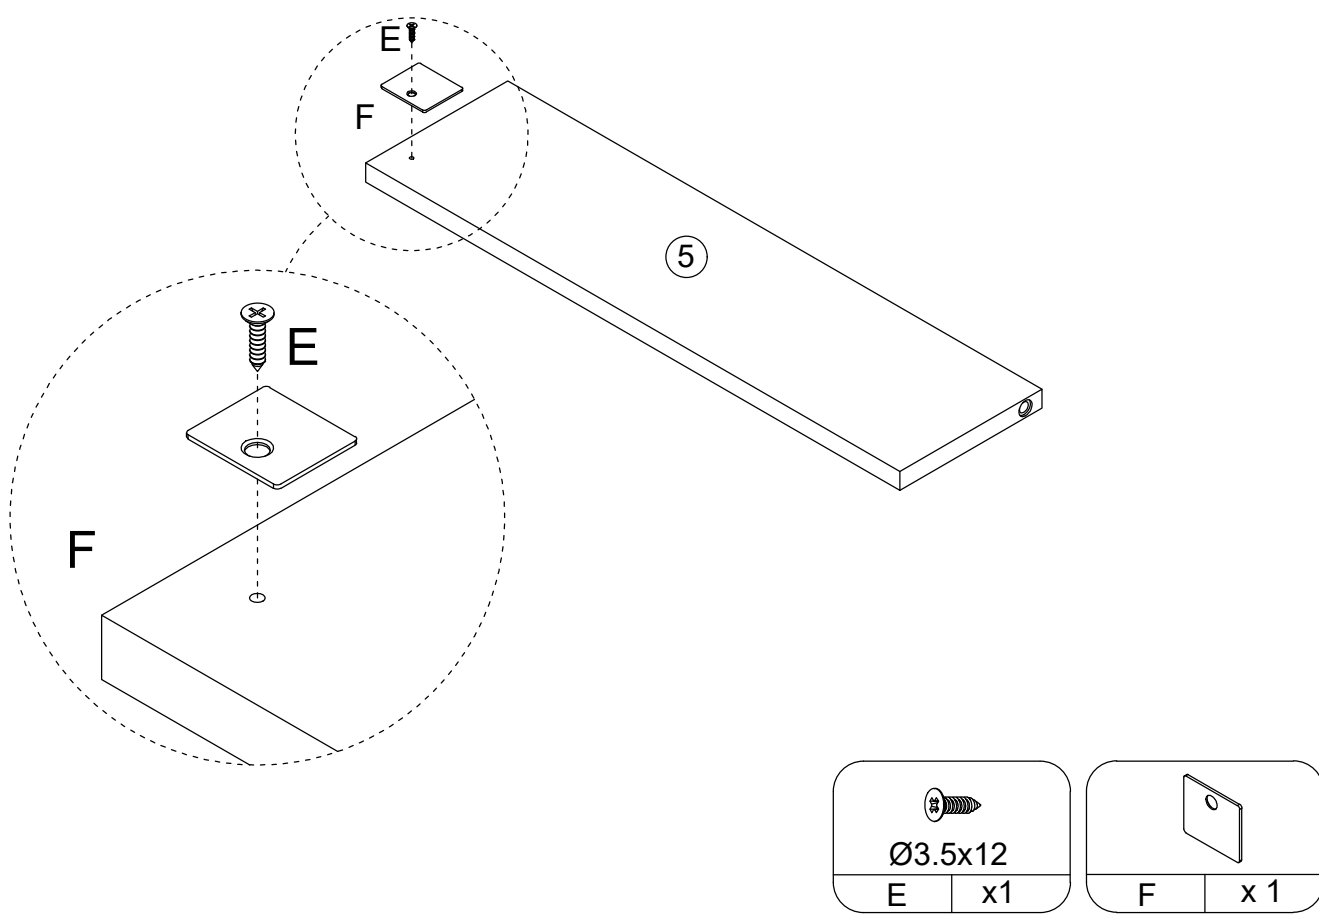


STEP 19

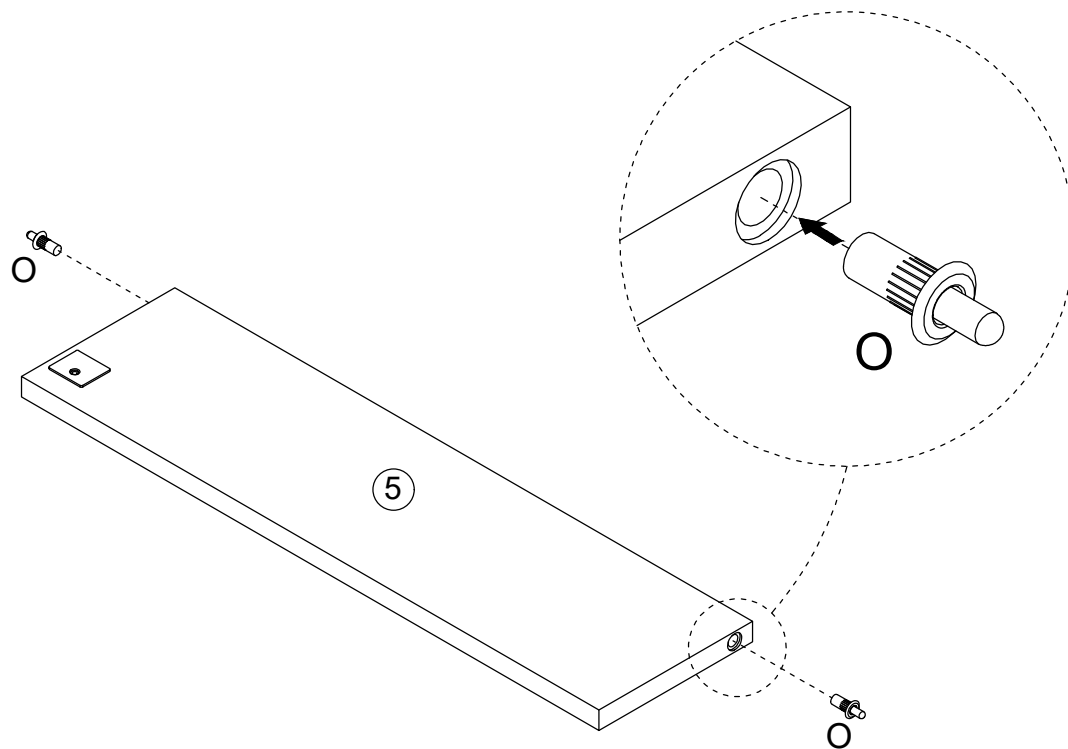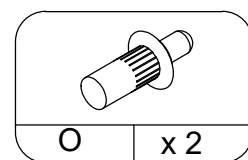


STEP 20

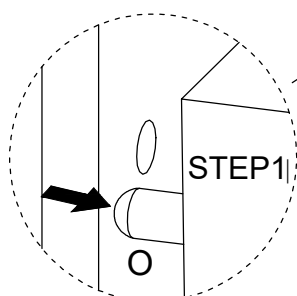


Press O downward to snap it into the slot.

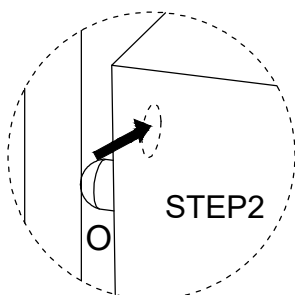


The spring door hinge O slides into the hole along the inner wall of the panel.

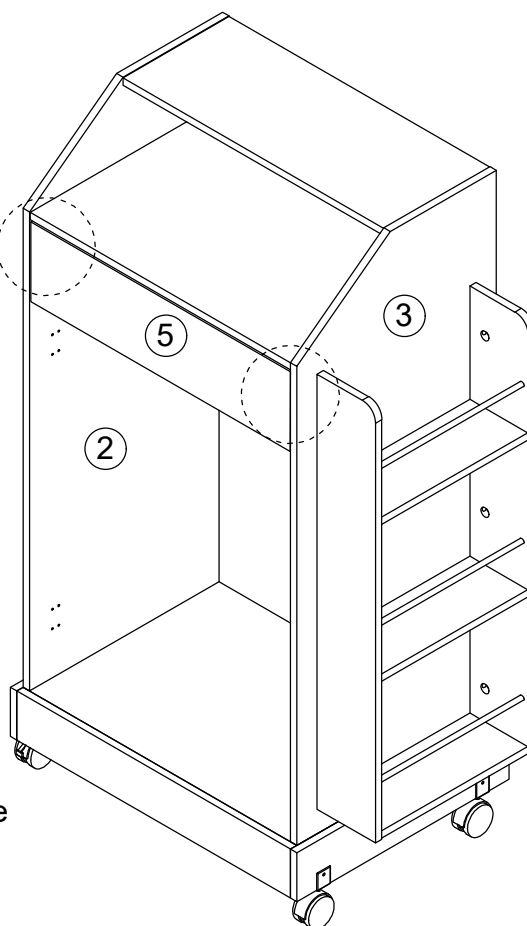



STEP 21

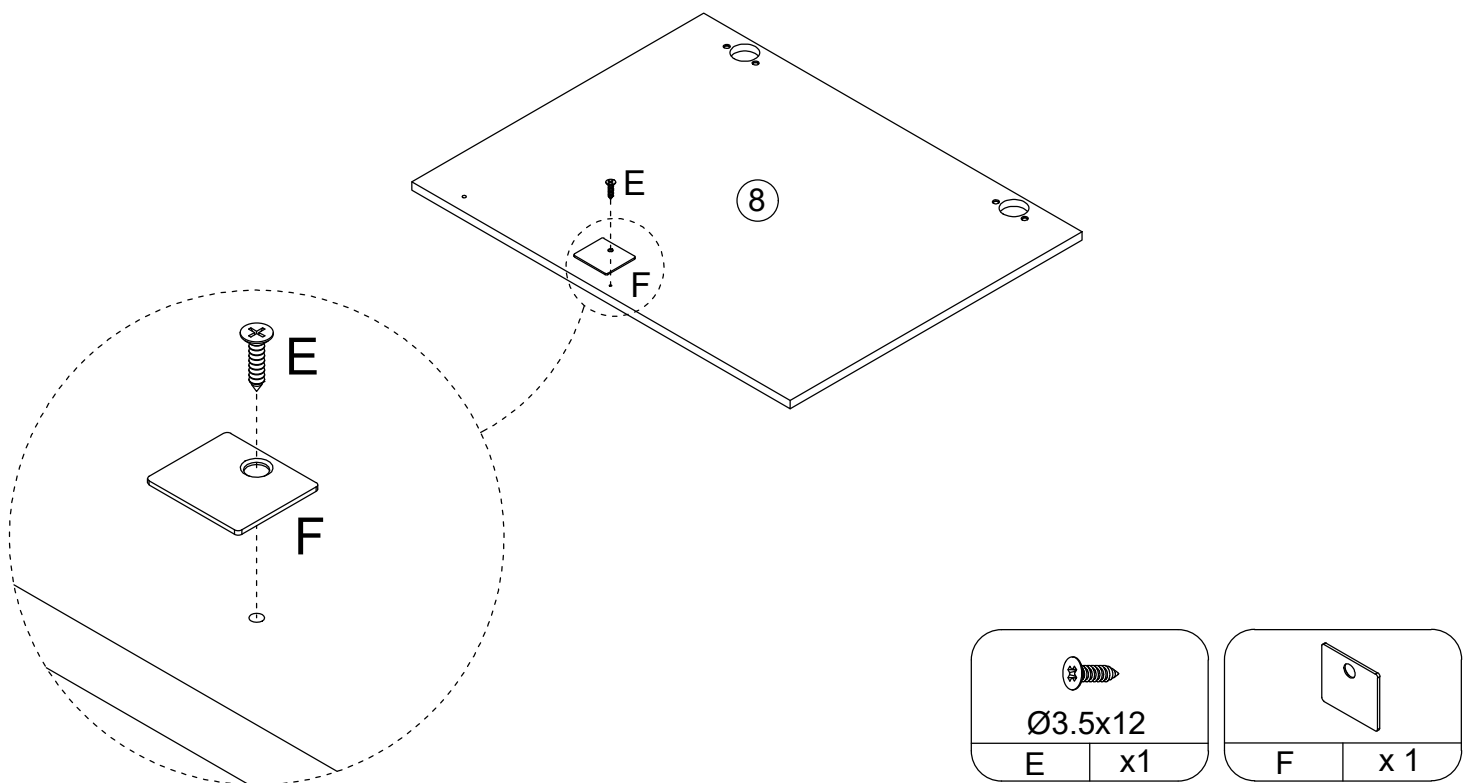



STEP 22

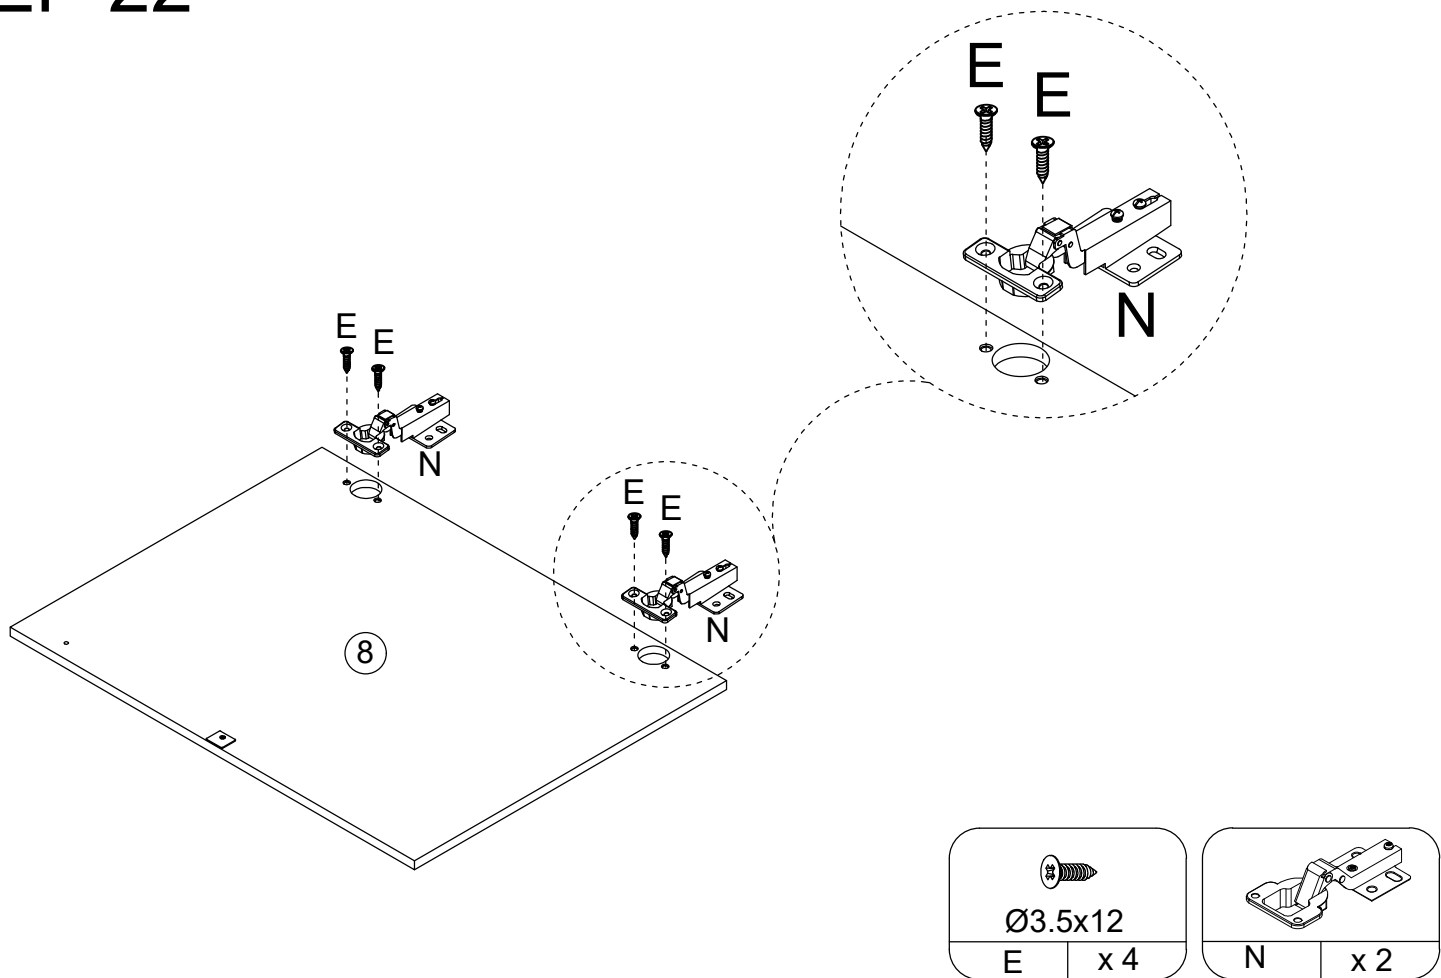

STEP 23

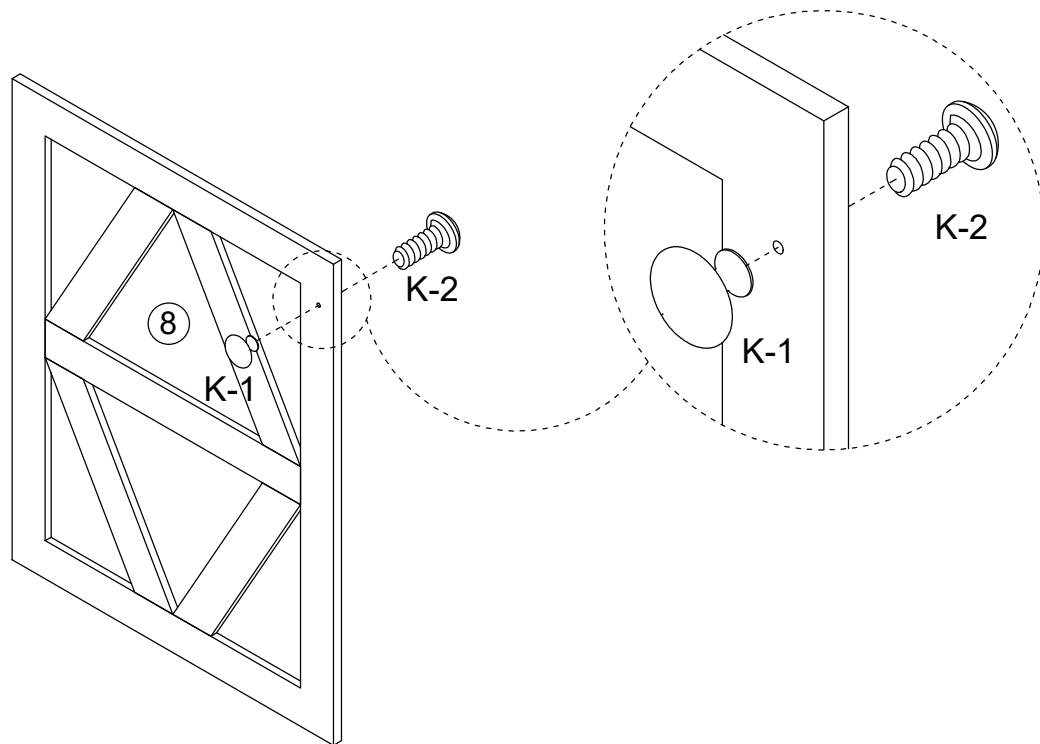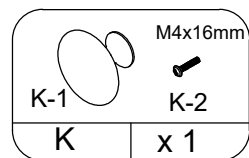



STEP 24

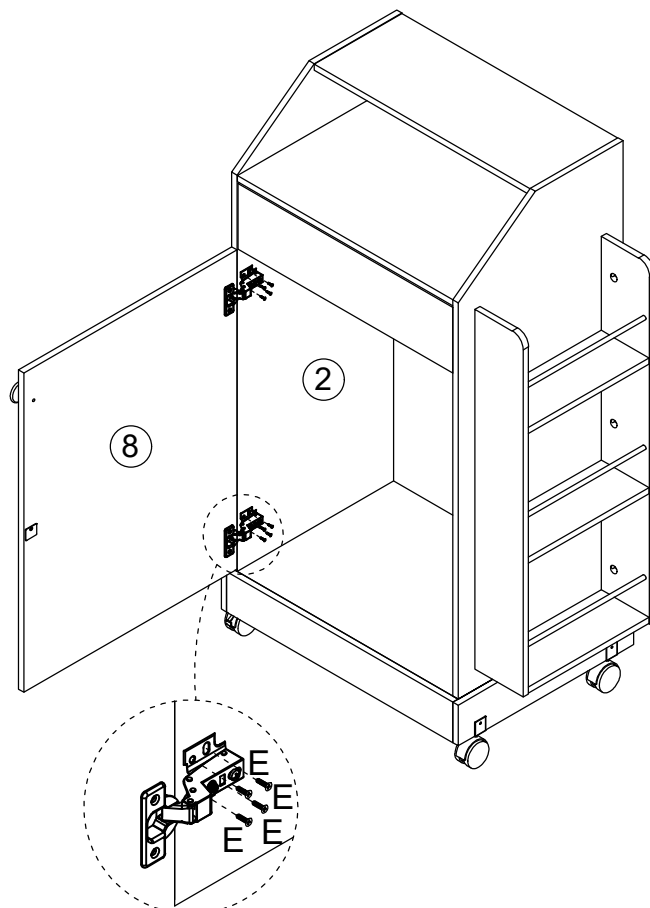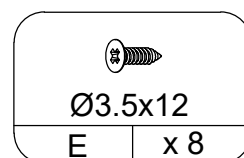


STEP 25

Attach part (S-1) to the eccentric wheel holes on the plates of the same color.

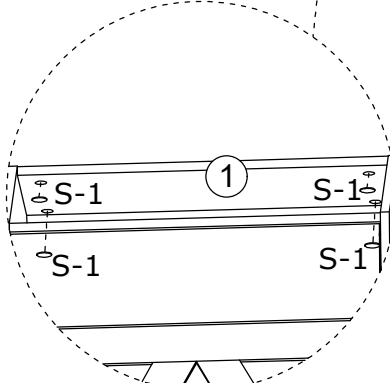

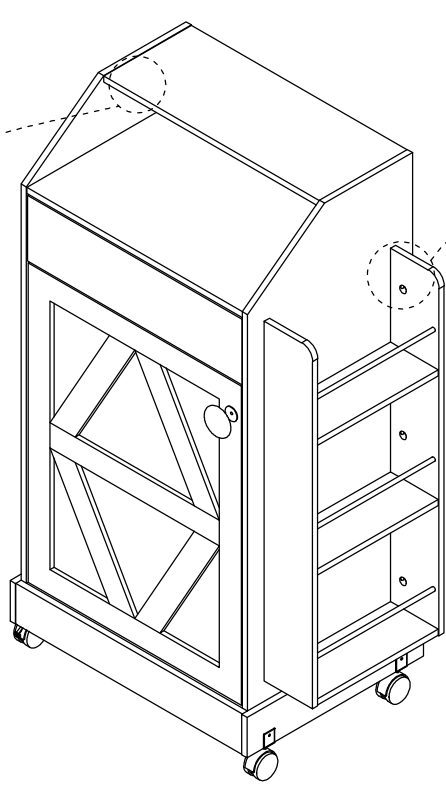


Attach part (S-2) to the eccentric wheel holes on the plates of the same color.

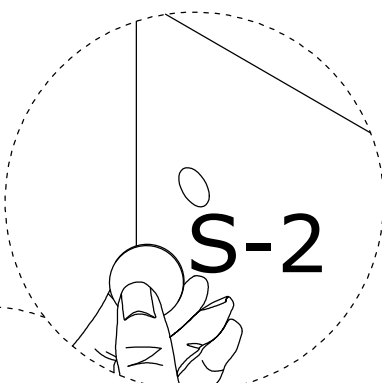


	
S-1x4	S-2x40
S	x 1

STEP 26

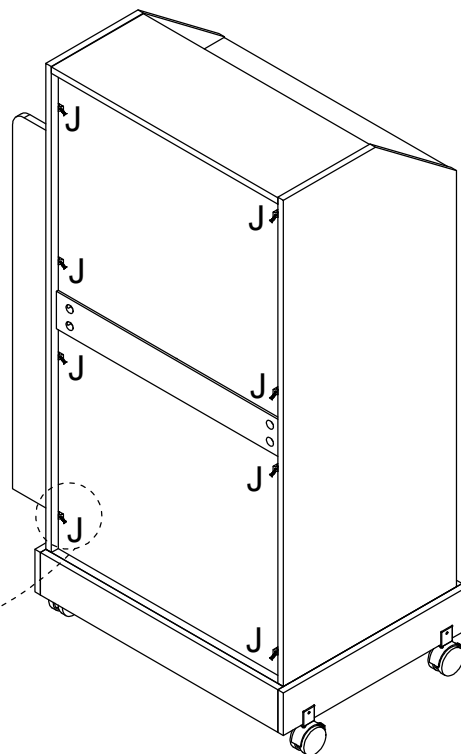


Attach part (J) to the side of the unit.

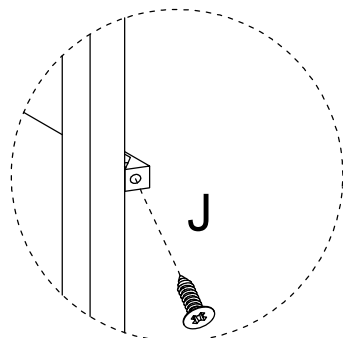


	
J	Ø3x14
J	x 8


STEP 27

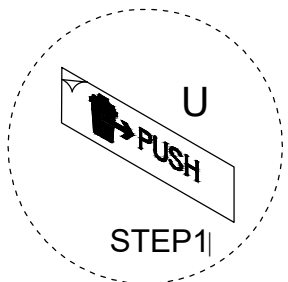

Peel off the backing adhesive of the "U".

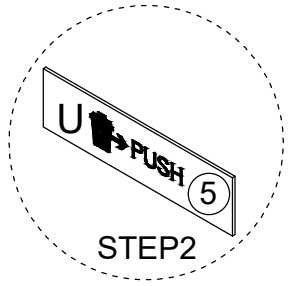

Paste the "U" in the center of plate 5 .

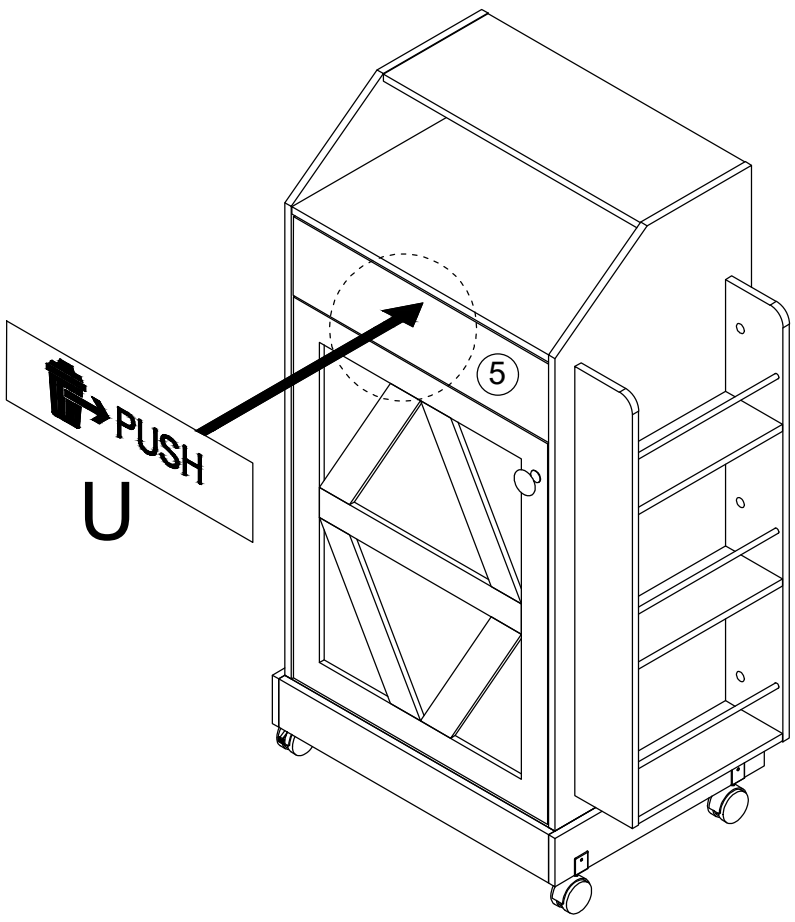

 → PUSH	
U	x 1

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning