
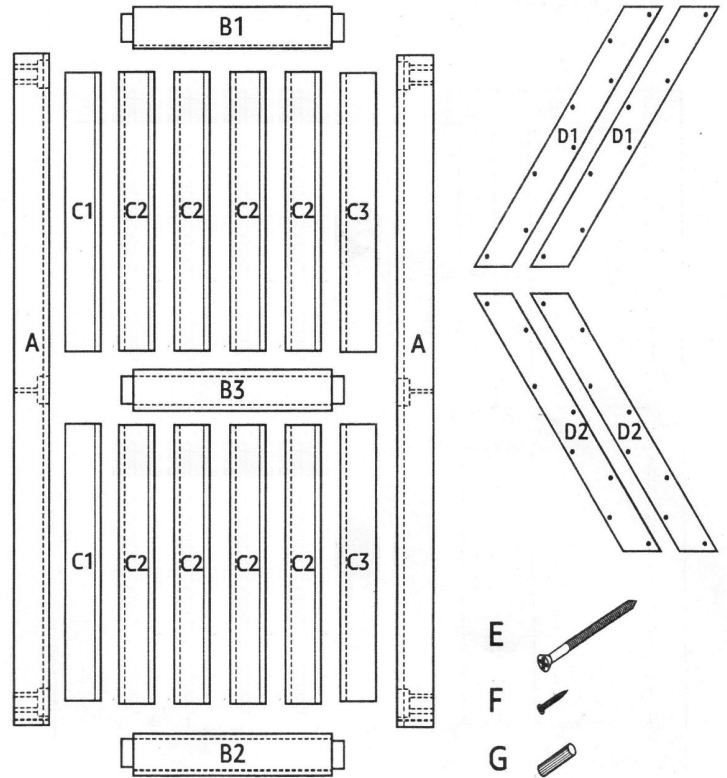








PARTS	QTY
A Side Stile	2
B1 Top Rail	1
B2 Bottom Rail	1
B3 Middle Rail	1
C1 Left Side Slat	2
C2 Middle Slats	8
C3 Right Side Slat	2
D1 Diagonal Overlay	2
D2 Diagonal Overlay	2
E 2.7in Lag Screws	
F 0.8in Lag Screws	
G Wood Plug	




A Stile	C1 Slat	C2 Slat	C3 Slat
			


Stile and Slat End Views

B1 Top Rail	B2 Bottom Rail	B3 Middle Rail
		

Rail Side Views

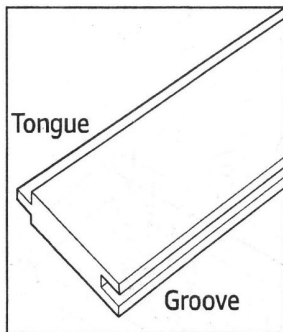

Tongue refers to the ridge extending beyond the mail portion of the slat or stile.
Groove refers to the slot cut into the other side of the slat or stile.

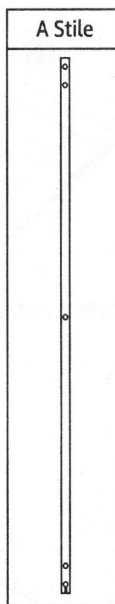

Stile Side Views

1. On a flat, clean surface, lay out one side stile (A) with the groove facing to the right.
Assemble top rail (B1), middle rail (B3) and bottom rail (B2) to A1 by fitting the tongue into the groove of A.

