


Assembly Instructions




Please visit our website for the most current instructions, assembly tips, report damage, or request parts.

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

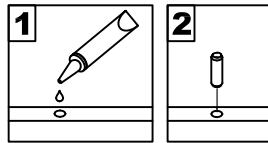


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

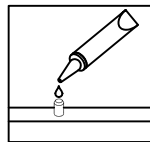

- VI. A Phillips head screwdriver is required for the assembly of this product.

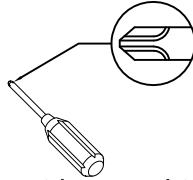


- VII. Power tools should not be used to assemble this product.

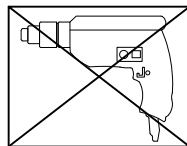


- VIII. Drill may be needed for securing product to wall.


- IX. Concealed hinges are three-way adjustable.

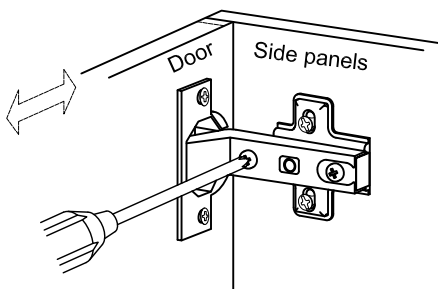

Horizontal
by screw adjustment

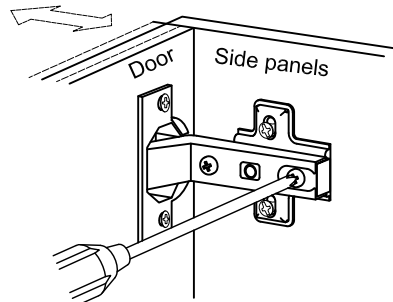


In-and-Out
by loosening the hinge-arm
mounting screw or via cam
adjustment




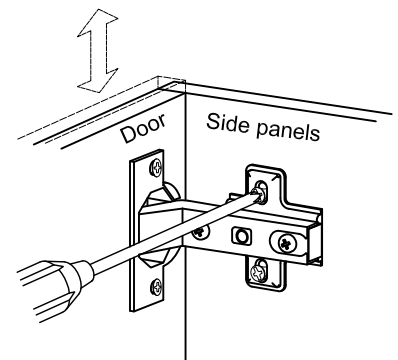



Vertical
Via slots in the mounting
plate or via cam adjustment

Parts List

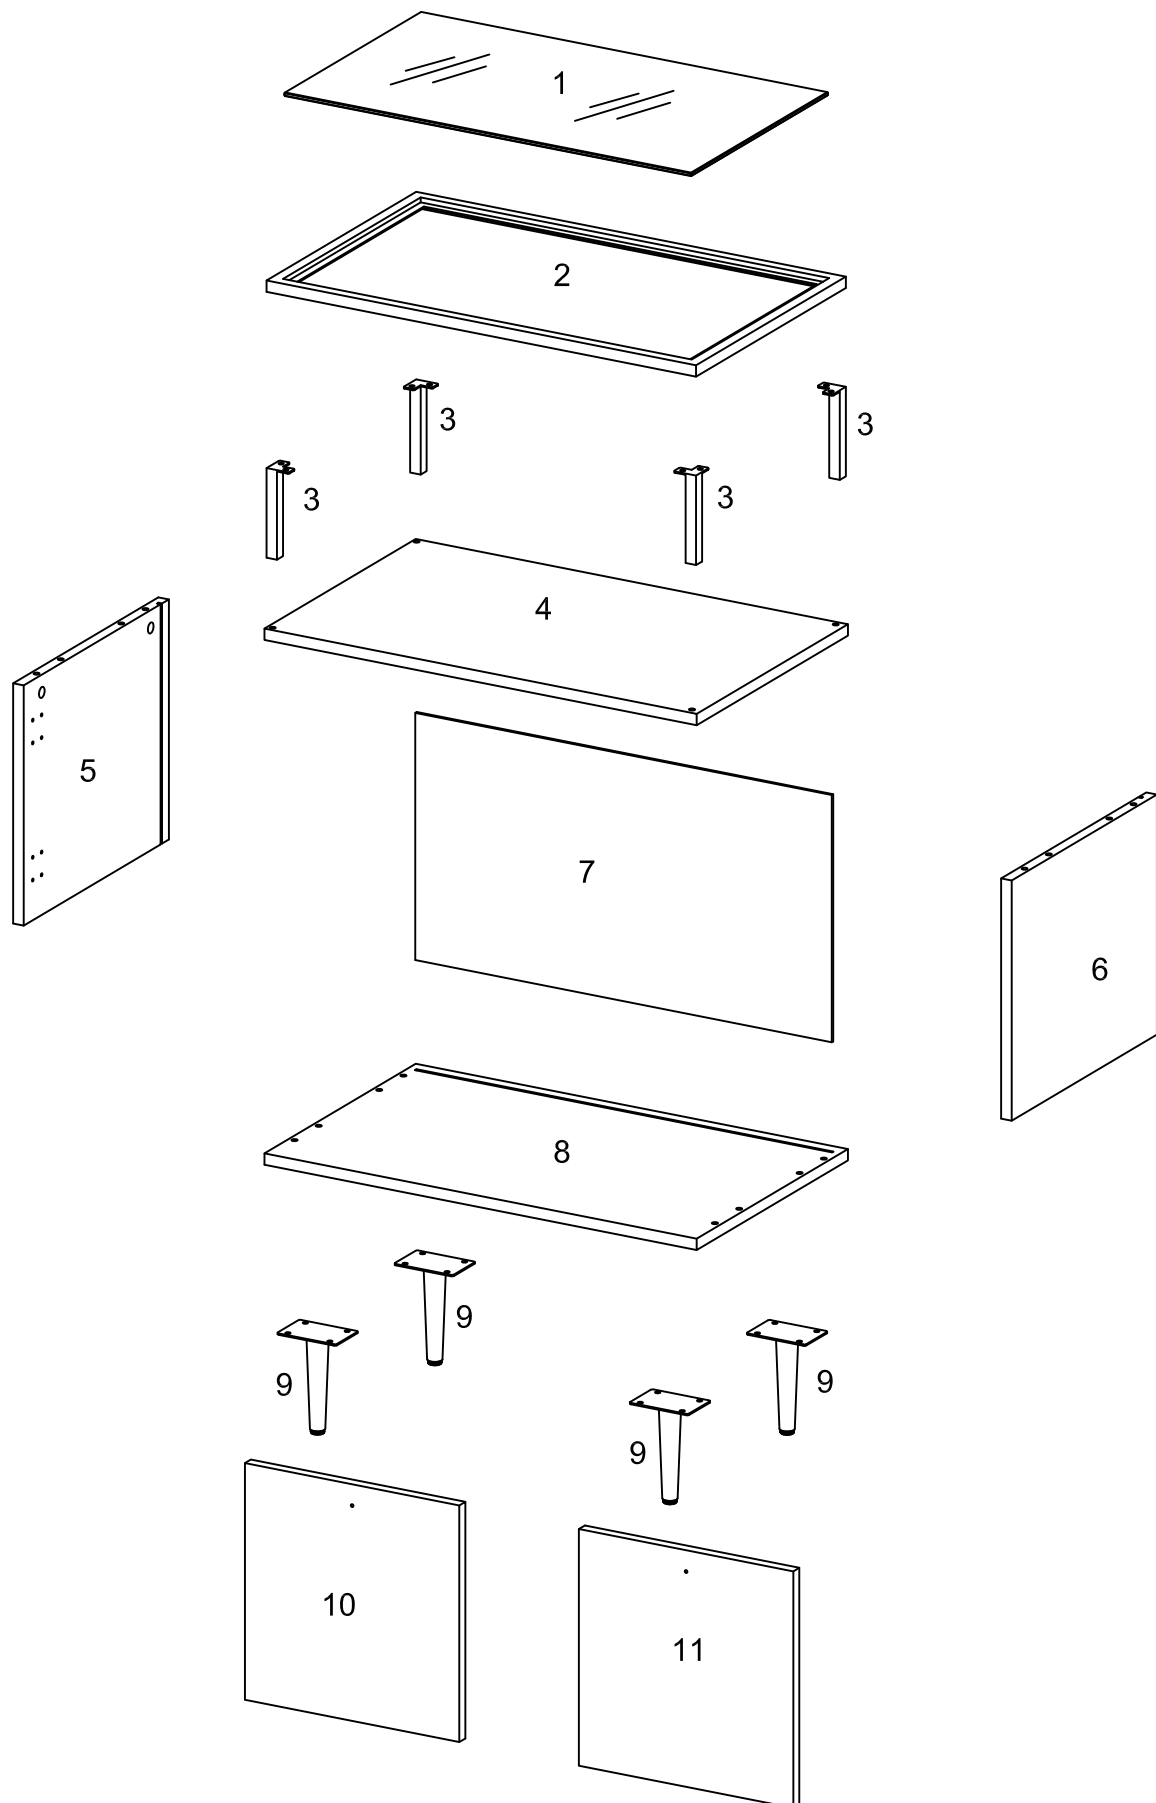

Hardware List


A		Ø8x30mm	Wooden dowel	8 pcs
B		Ø6x32mm	Cam bolt	4 pcs
C		Ø15x11mm	Cam lock	4 pcs
D		Ø6x12mm	Bolt	8 pcs
E		Ø6x25mm	Bolt	4 pcs
F		Ø6x12mm	Bolt	16 pcs
G			Plastic wedge	4 pcs
H		Ø3x17mm	Screw	4 pcs
J			Hinge	4 pcs
K		Ø3.5x14mm	Screw	26 pcs
L			Handle	2 pcs
M		Ø4x22mm	Bolt	2 pcs
N		30x10mm	Glass pads	6 pcs
P		M4	Hex key	1 pc
Q			Glue tube	1 pc
R			Door stopper	1 pc
S			Screw	4 pcs
T		Ø30mm	Sticker	4 pcs

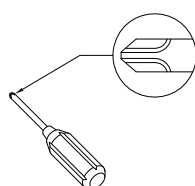

Philips head screwdriver required for assembly
(not included)


*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*

Step 1

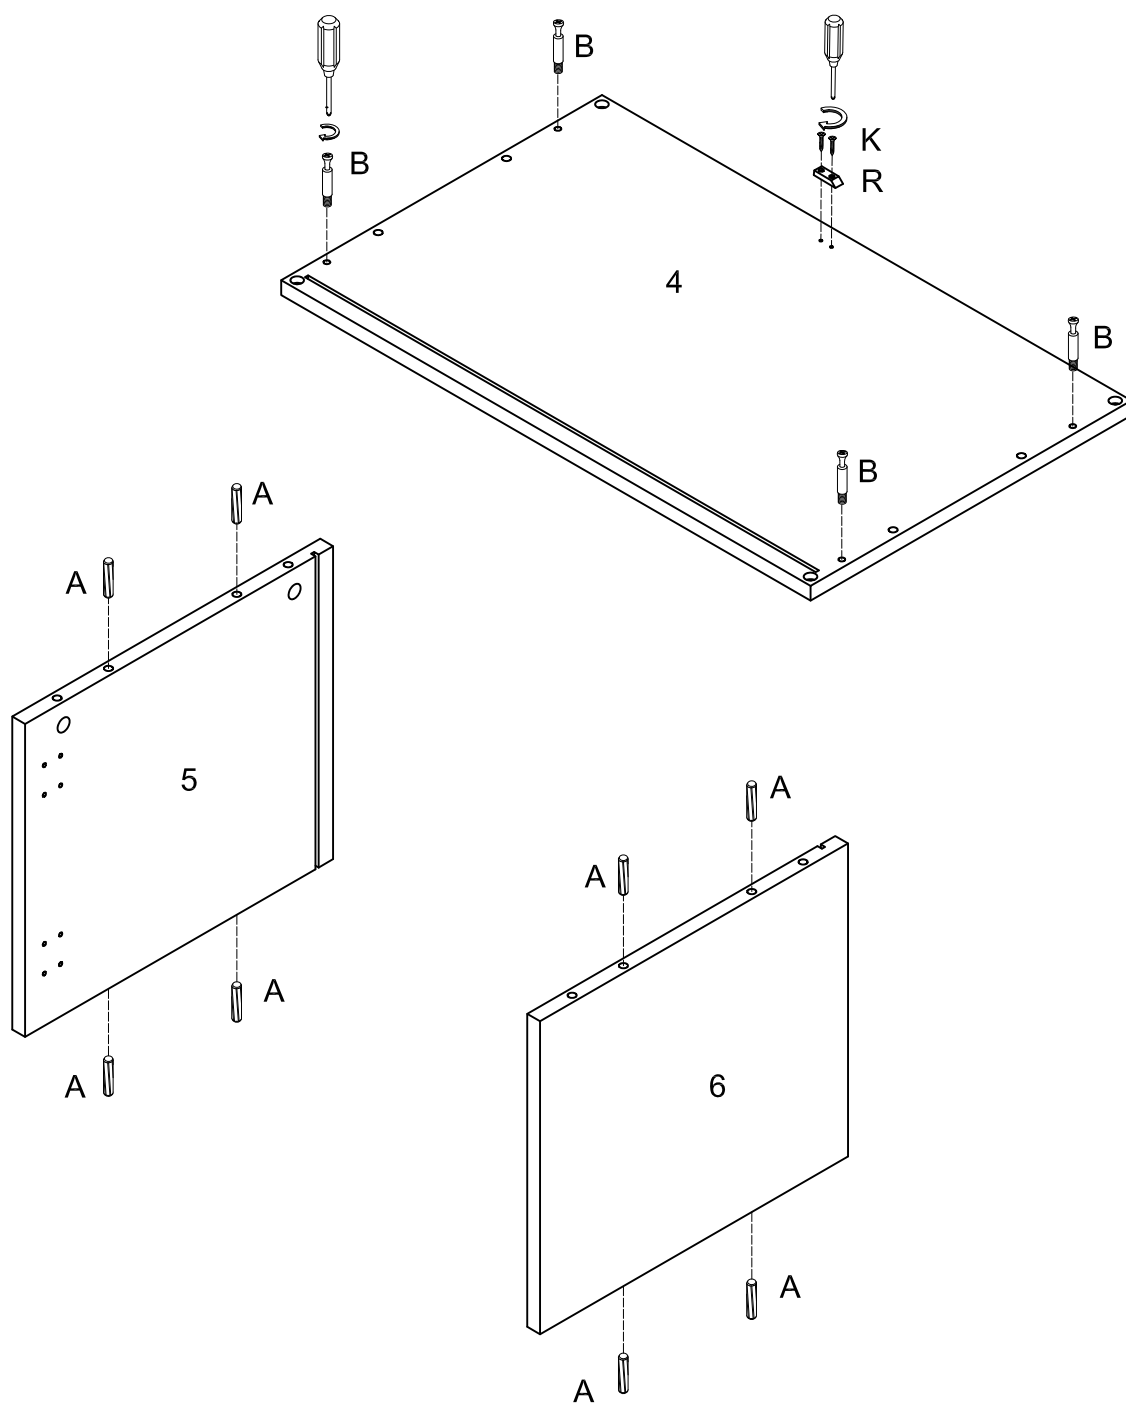



Insert wooden dowel (A) into parts (5,6), using cam bolt (B) secure part (4) with Philips head screwdriver as per diagram.

Step 2

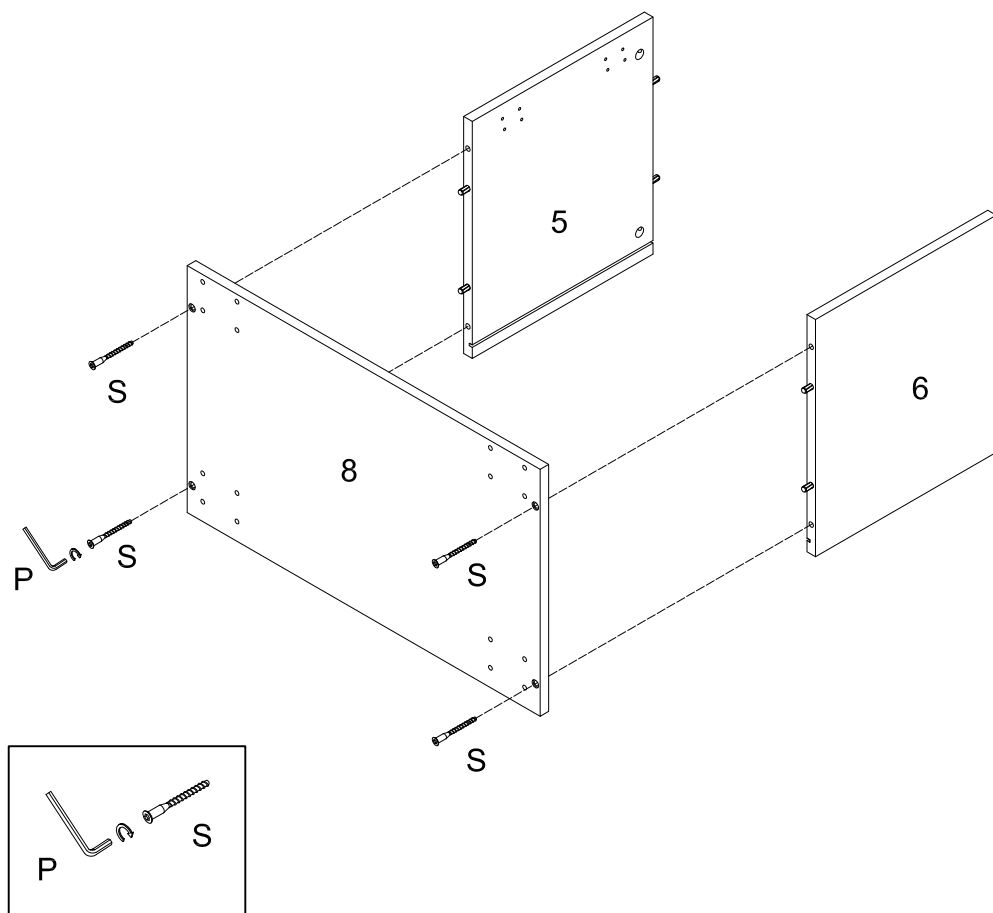


Using screw (S) secure part (8) into parts (5,6) with hex key (P) as per diagram.

Step 3

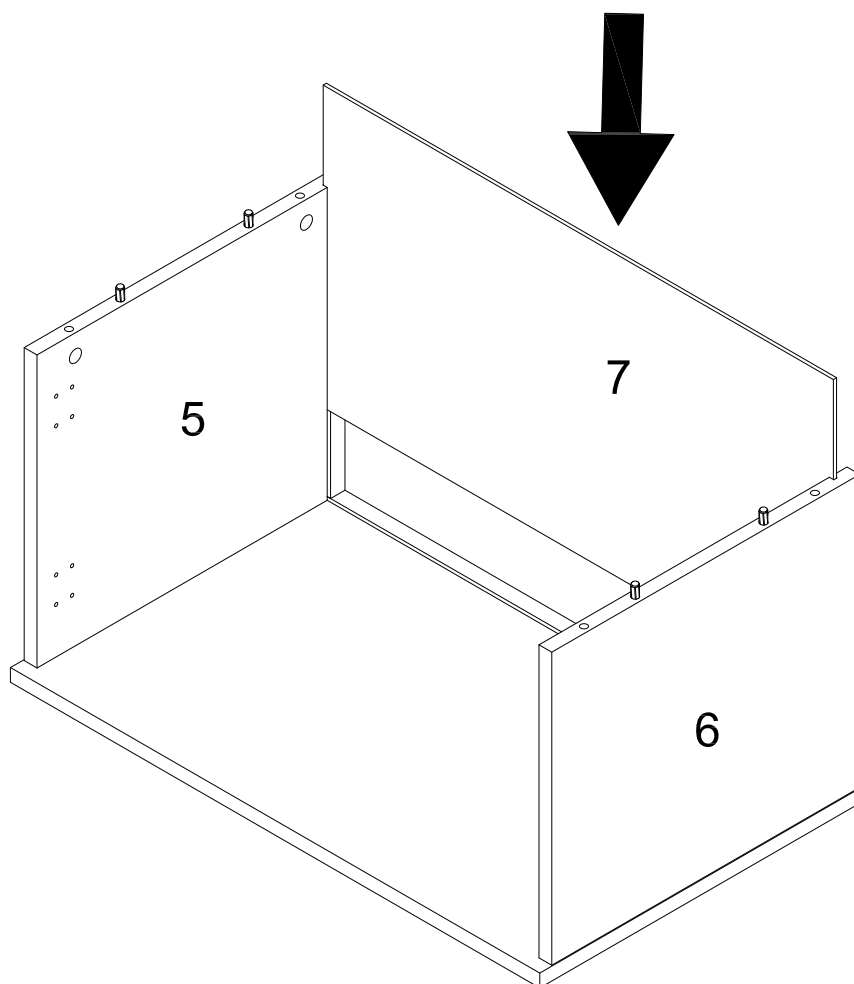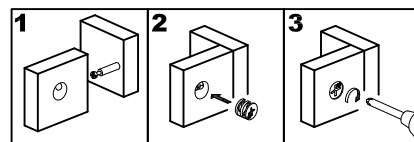



Put part (7) into parts (5,6) as per diagram.

Step 4

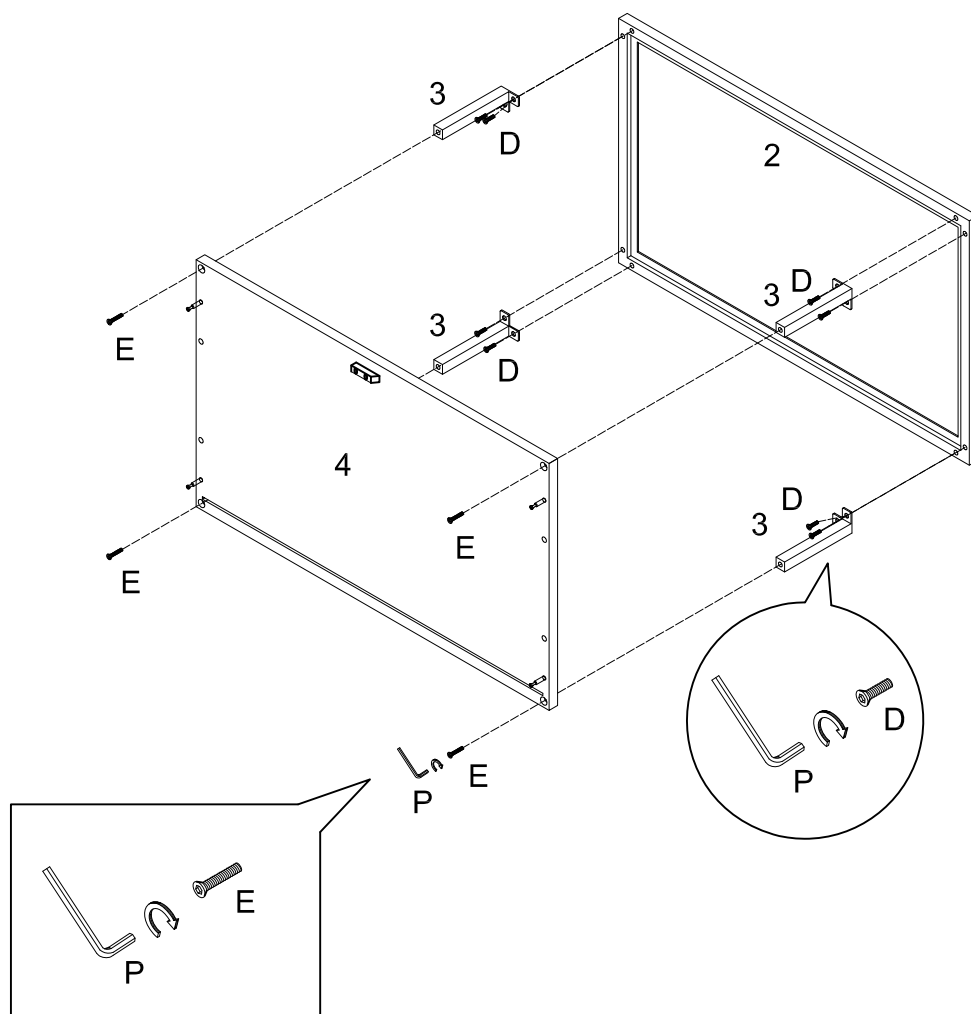


Using bolt (D) secure part (3) into part (2) ,then using bolt (E) secure part (4) into part (3) with hex key (P) as per diagram.

Step 5

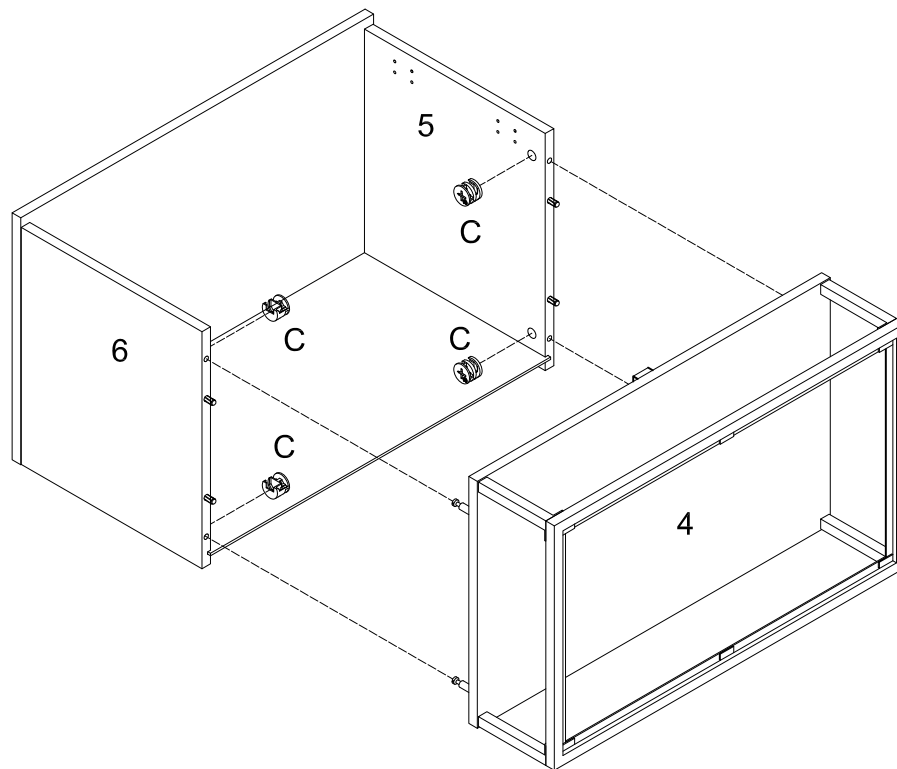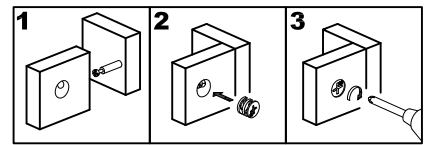


Using cam lock (C) secure part (4) into parts (5,6) with Philips head screwdriver as per diagram.

Step 6

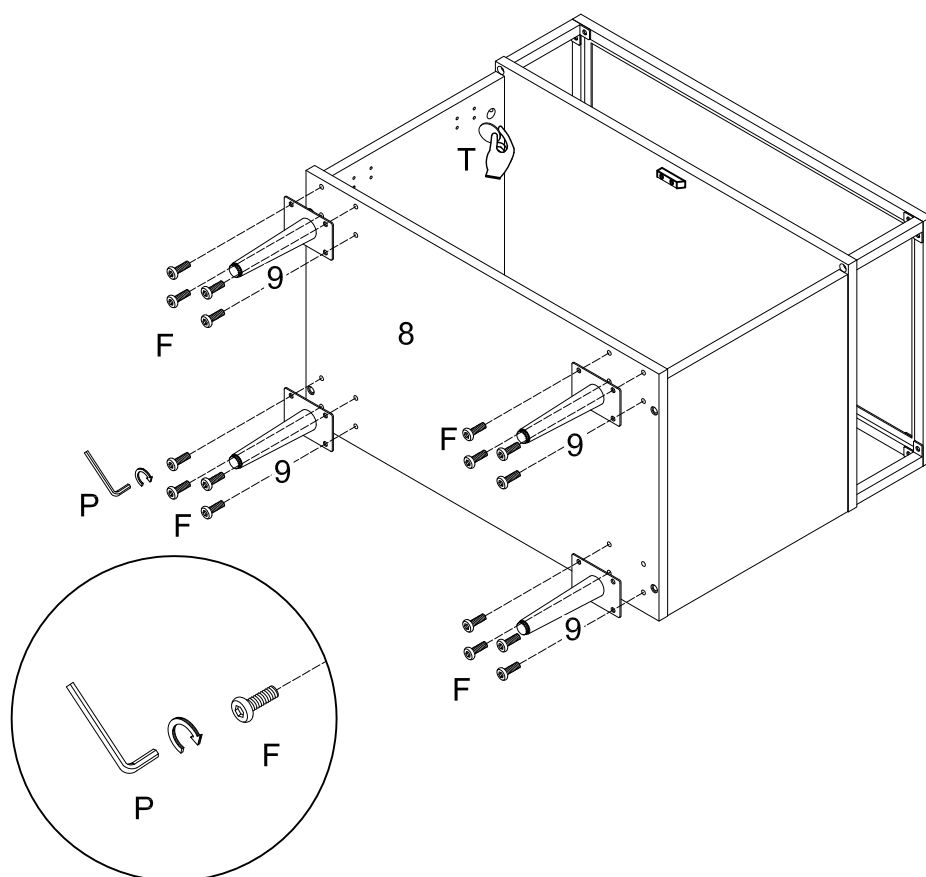


Using bolt (F) secure part (9) into part (8) with hex key (P) ,place sticker (T) cover the holes as per diagram.

Step 7

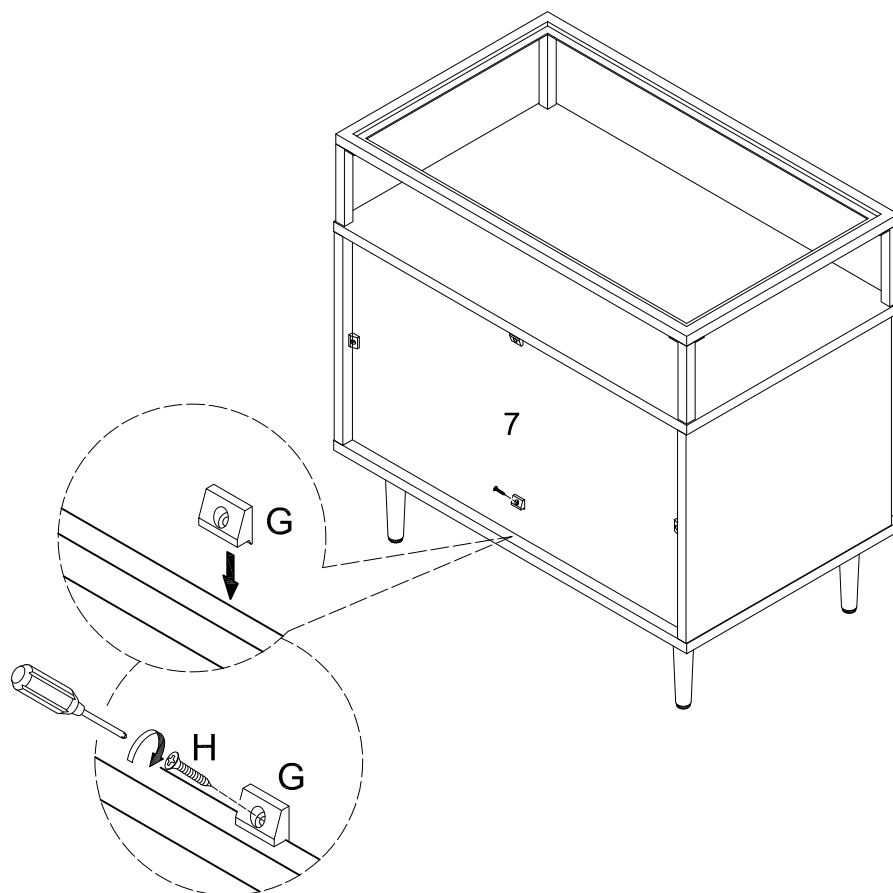


Using screw (H) into plastic wedge (G) to part (7) as per diagram.

Step 8

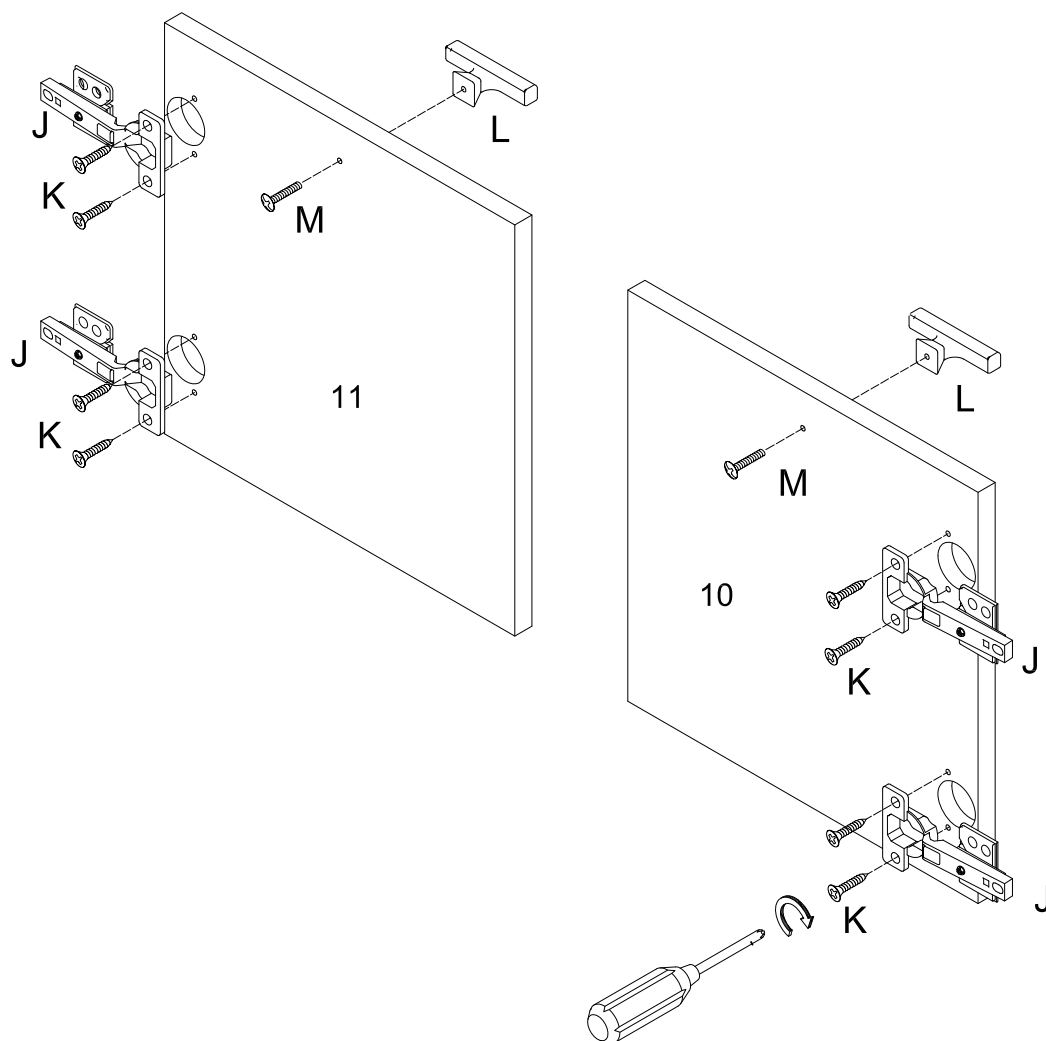



Using screw (K) secure hinge (J) into part (10,11) , and using screw (M) secure parts (10,11) into handle (L) with Philips head screwdriver as per diagram.

Step 9

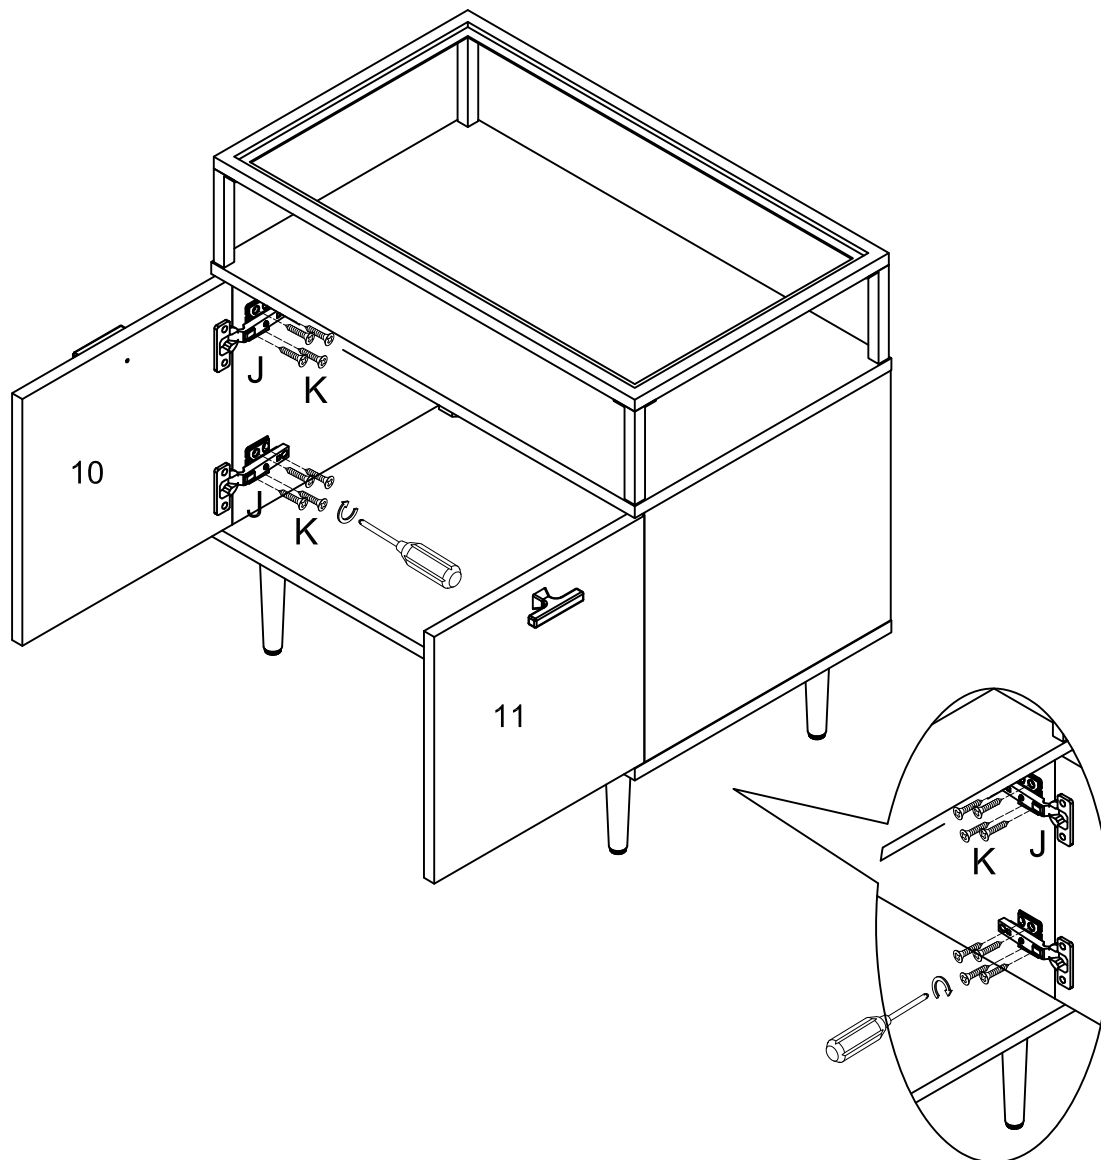


Using screw (K) secure hinge (J) into part (10,11) ,with Philips head screwdriver as per diagram.

Step 10

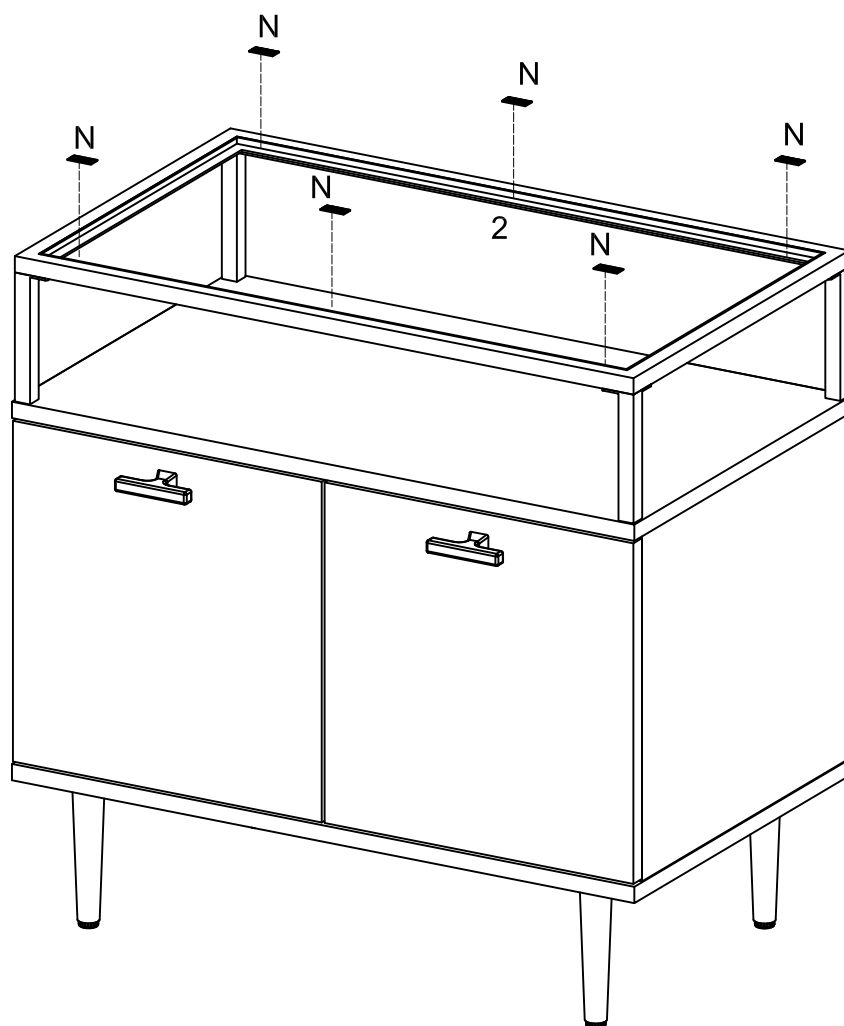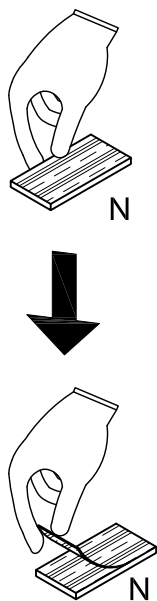

Tear off and put class pads (N) into part (2) as per diagram.

Step 11

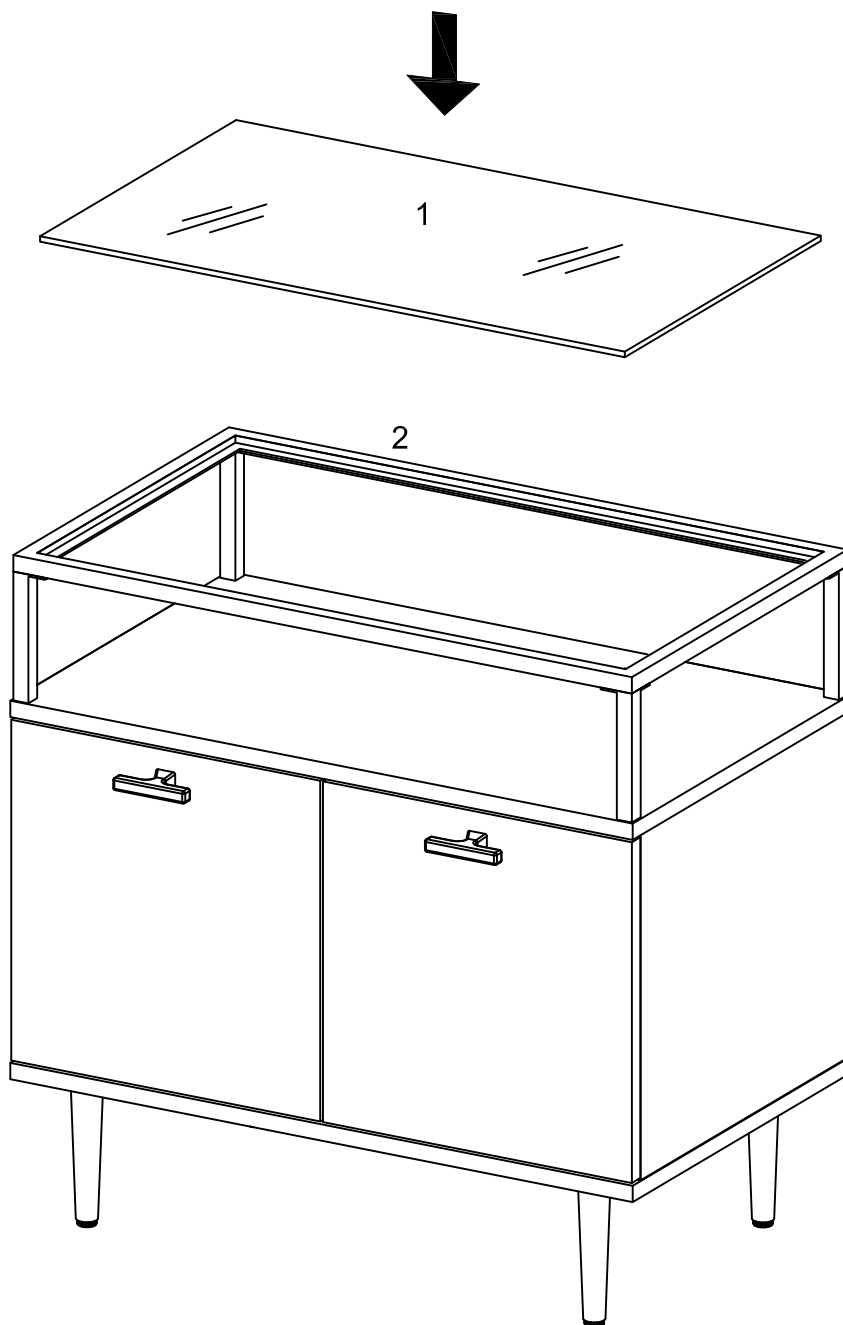

Put part (1) into part (2) as per diagram.

Step 12



Final Assembly