


ASSEMBLY INSTRUCTIONS








ARMCHAIR

1/3


HARDWARE LIST

NO.	PART	Q.TY
1	 Ø 5/16" x 60mm	3pcs
2	 Ø 1/4" x 50mm	10pcs
3	 Ø 5/16" x 13mm	3pcs
4	 Ø 5/16" x 19mm	3pcs
5	 Ø 10 x 30mm	6pcs
6	 M4 x 45mm	4pcs
7	 4mm	1pc

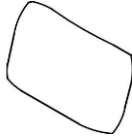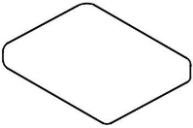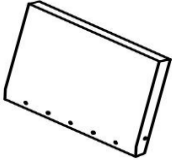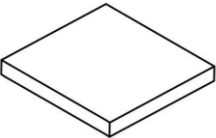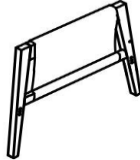
PART LIST

NO.	PART	Q.TY
A	 Back Cushion	1pc
B	 Seat Cushion	1pc
C	 Back Frame	1pc
D	 Seat Frame	1pc
E	 Left Armrest	1pc
F	 Right Armrest	1pc
G	 Front Stretcher	1pc
H	 Back Stretcher	1pc

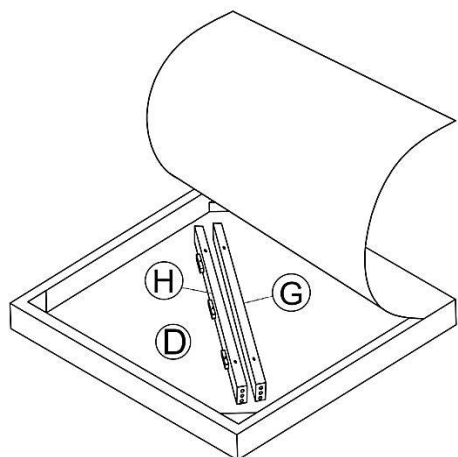STEP 1.




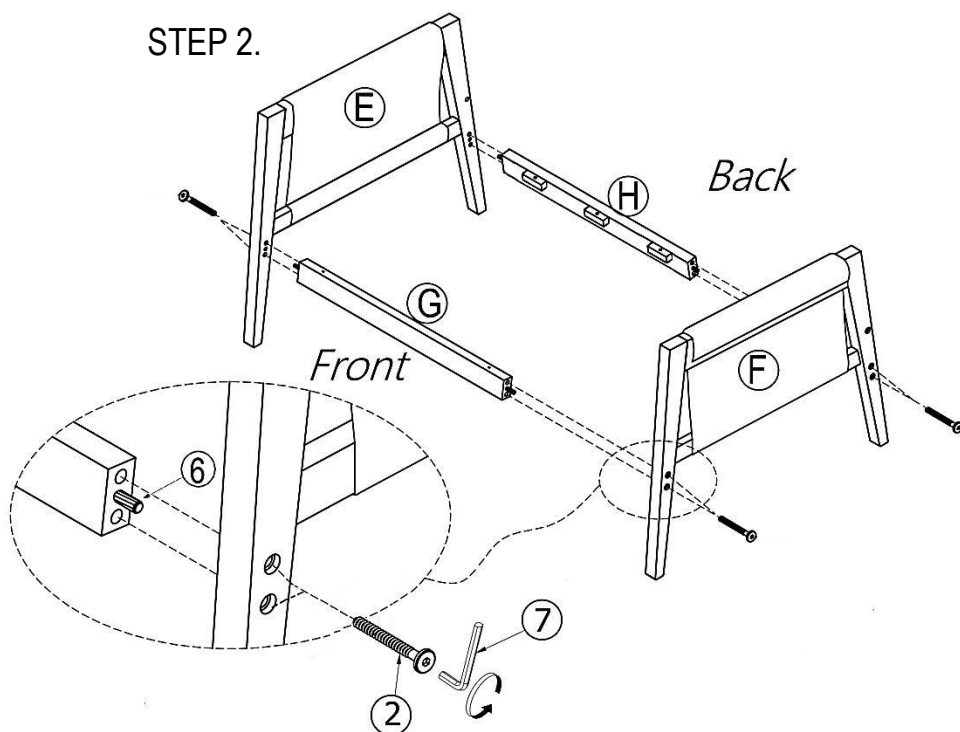STEP 2.




Note: Please watch and follow up label "UP" on the stretchers. This side need toward up.

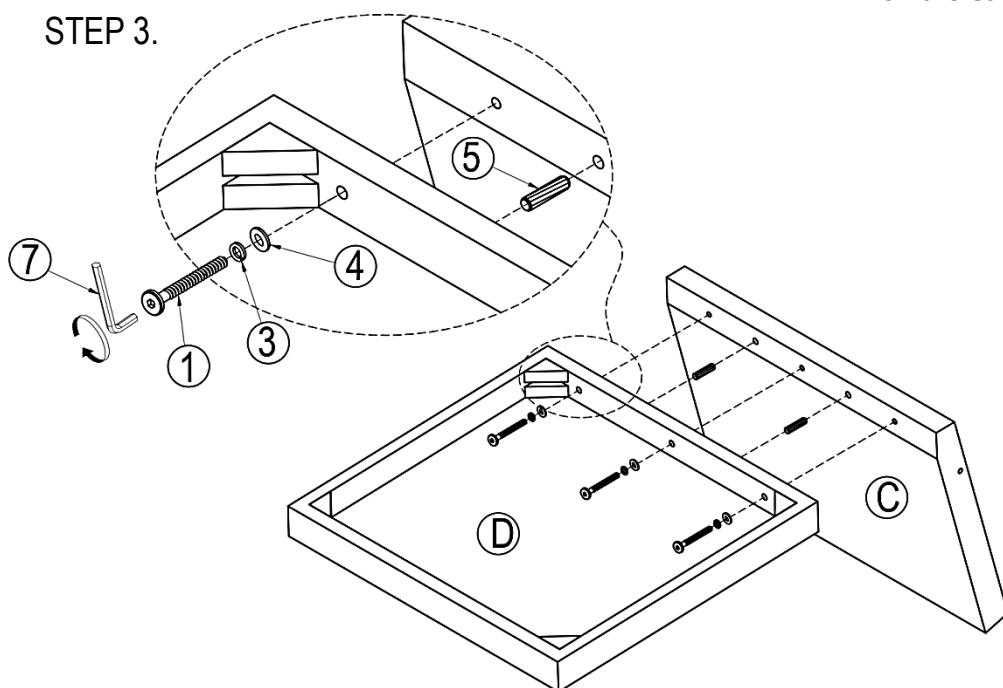STEP 3.





Do not fully tighten screws/ bolts until completely assembled

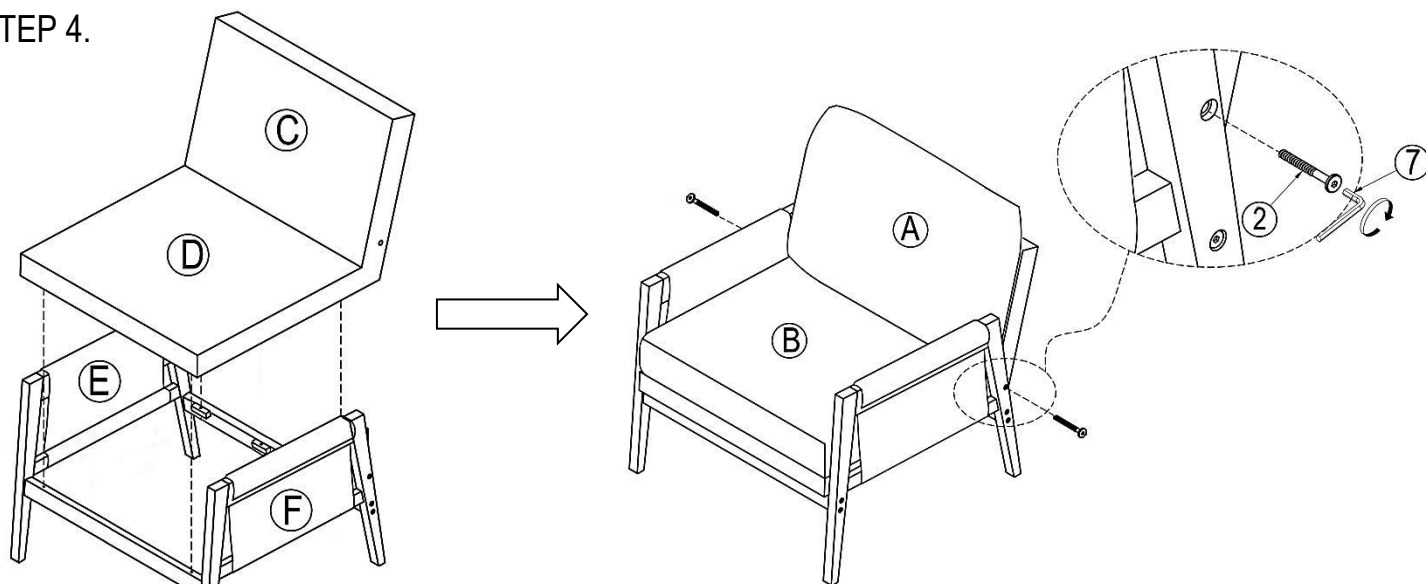STEP 4.



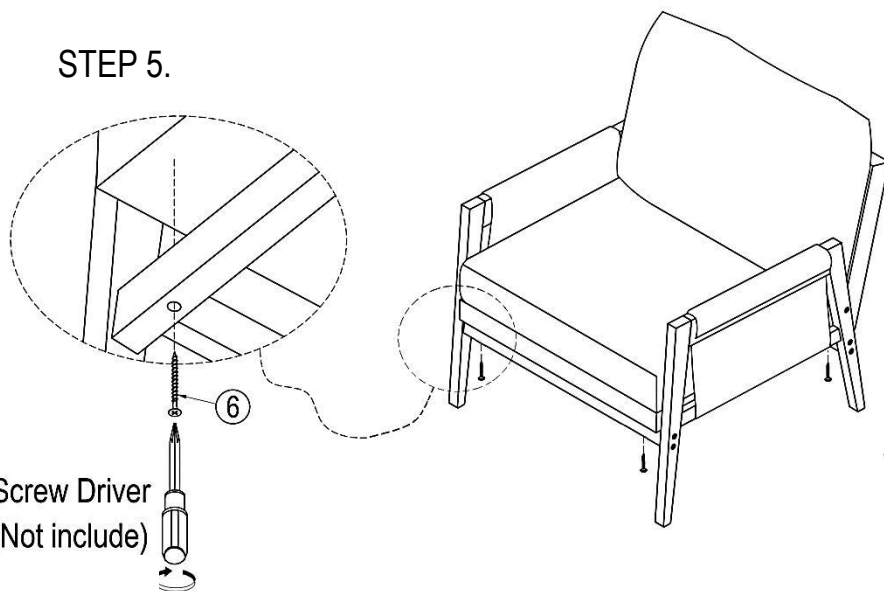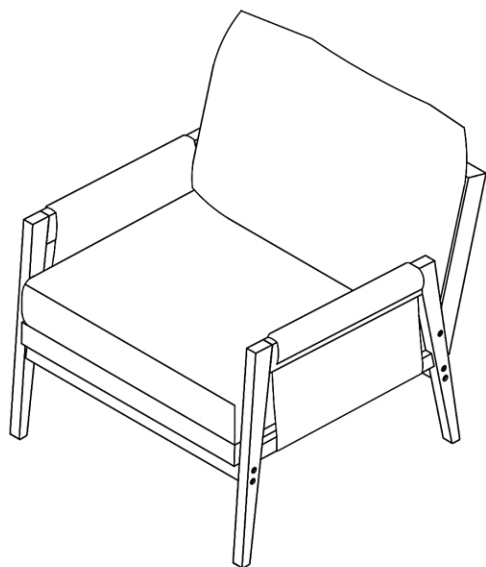STEP 5.

**COMPLETED**

Do not fully tighten screws/ bolts
until completely assembled